



STORAGE CABINET

Assembly Instructions -Please keep for future reference

SKU: N729P272001K
N729P272001B

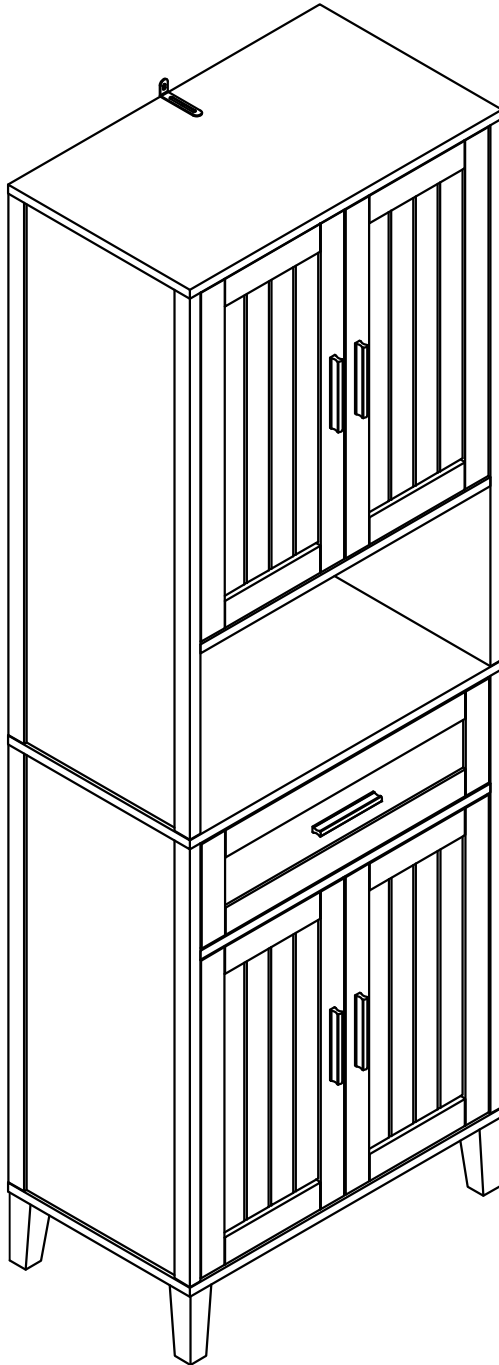

2 PERS.

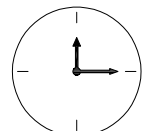

60 MIN

Important- Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

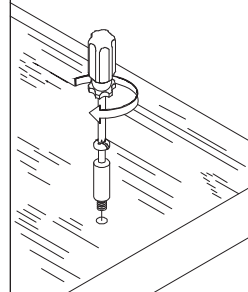

Step 2

Push the male camlock into the entry hole.

2

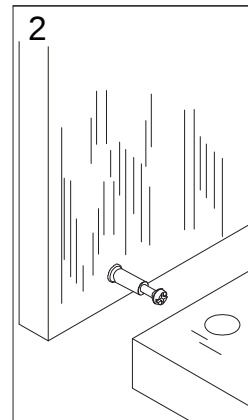


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

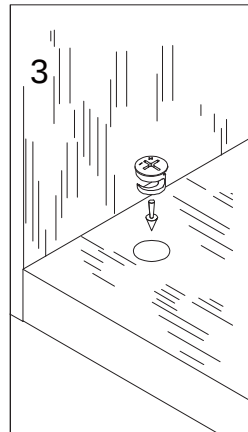


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.













4

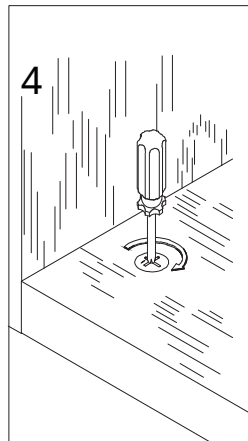


Components-Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than required.
















A x 24  $\Phi 6 \times 35 \text{mm}$	B x 24  $\Phi 15 \times 9 \text{mm}$	C x 26  $\Phi 8 \times 30 \text{mm}$	D x 60  $\Phi 3.5 \times 14$	E x 12  $\Phi 4 \times 35 \text{mm}$
F x 8 	G x 8  $M4 \times 16 \text{mm}$	H x 5 	I x 1 $\Phi 4 \times 35 \text{mm}$ $\Phi 4 \times 12 \text{mm}$ 	J x 24 $\Phi 3 \times 14 \text{mm}$ 
K x 8 	L x 4 	M x 2  $M4 \times 8 \text{mm}$	N x 4 	O x 8  $\text{Ø} 7 \times 45 \text{mm}$
P x 1 	Q x 2  $\Phi 6 \times 30 \text{mm}$	CL x 1 	CR x 1 	DL x 1 
DR x 1 				

Assembly Instructions

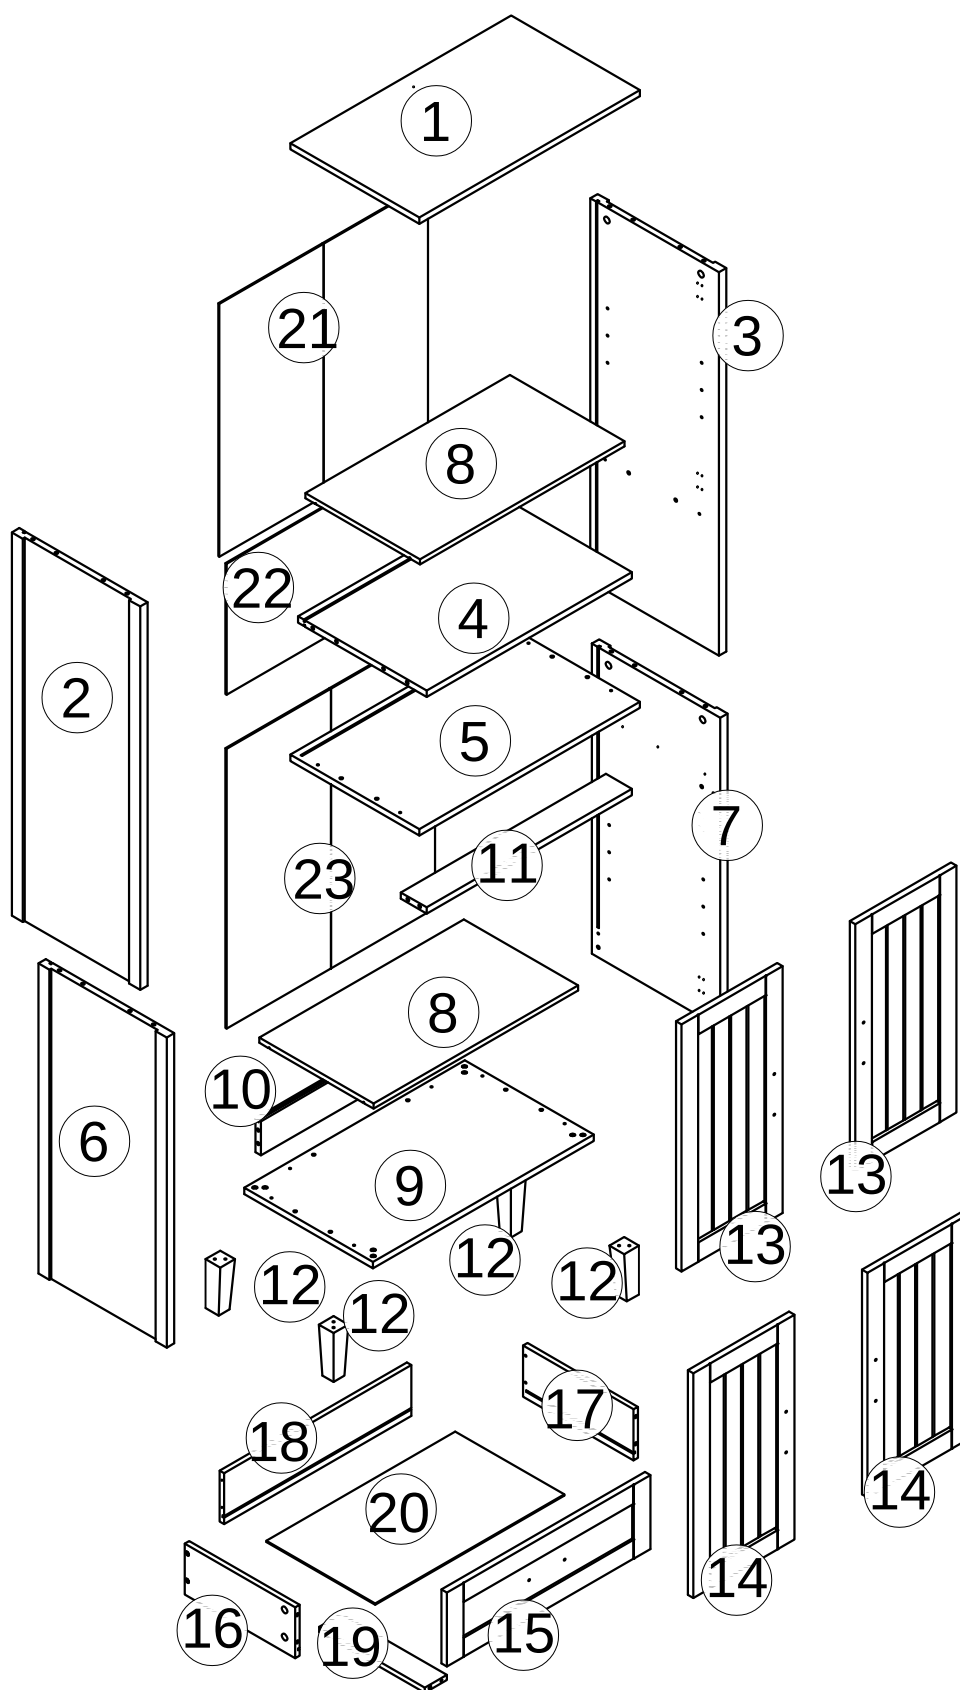


Assembly Instructions




Step 1

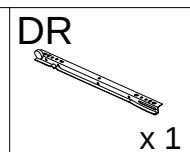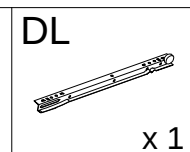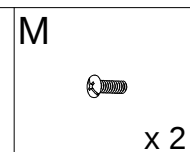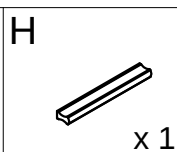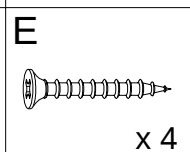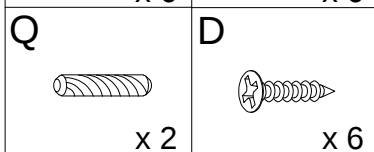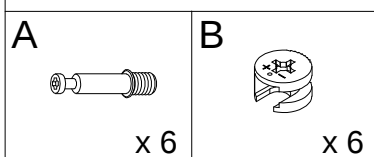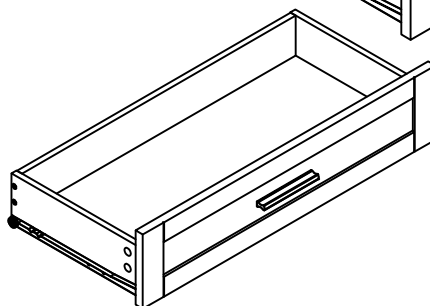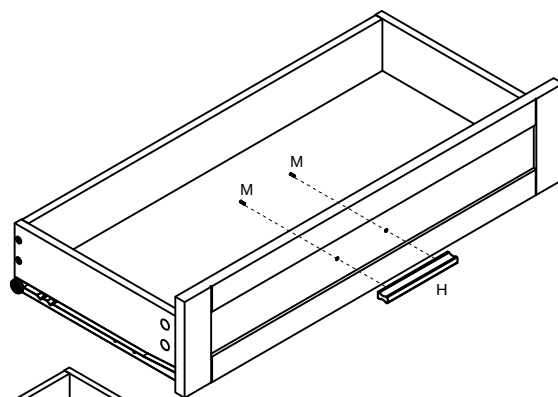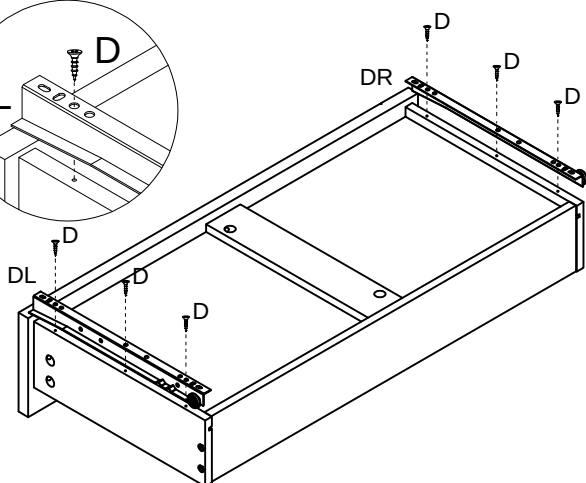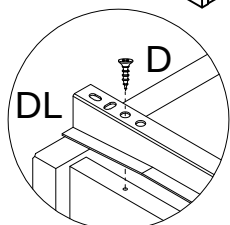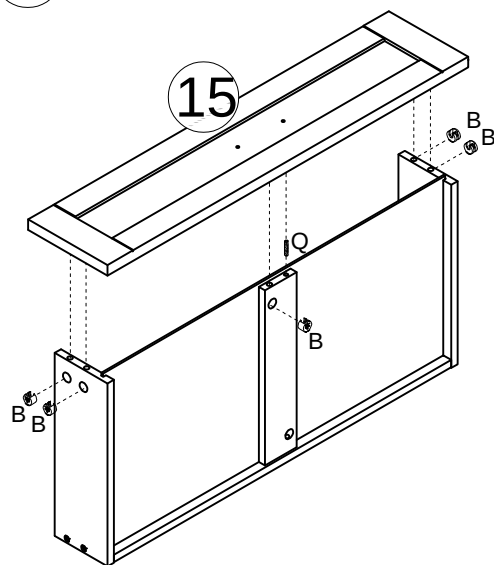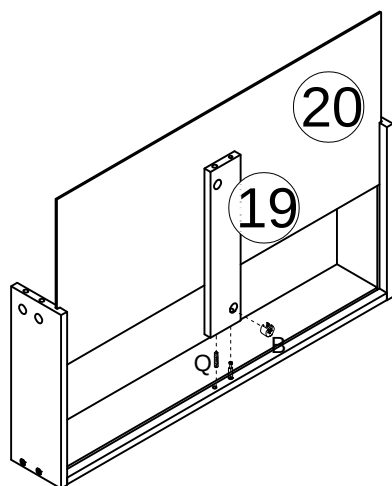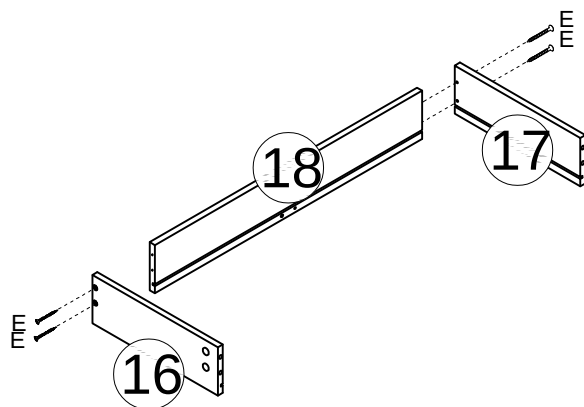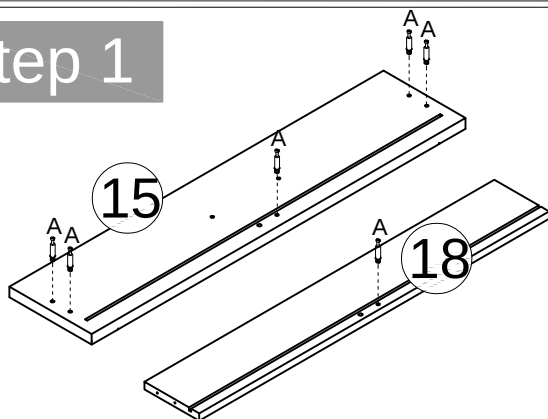


Assembly Instructions

Step 2

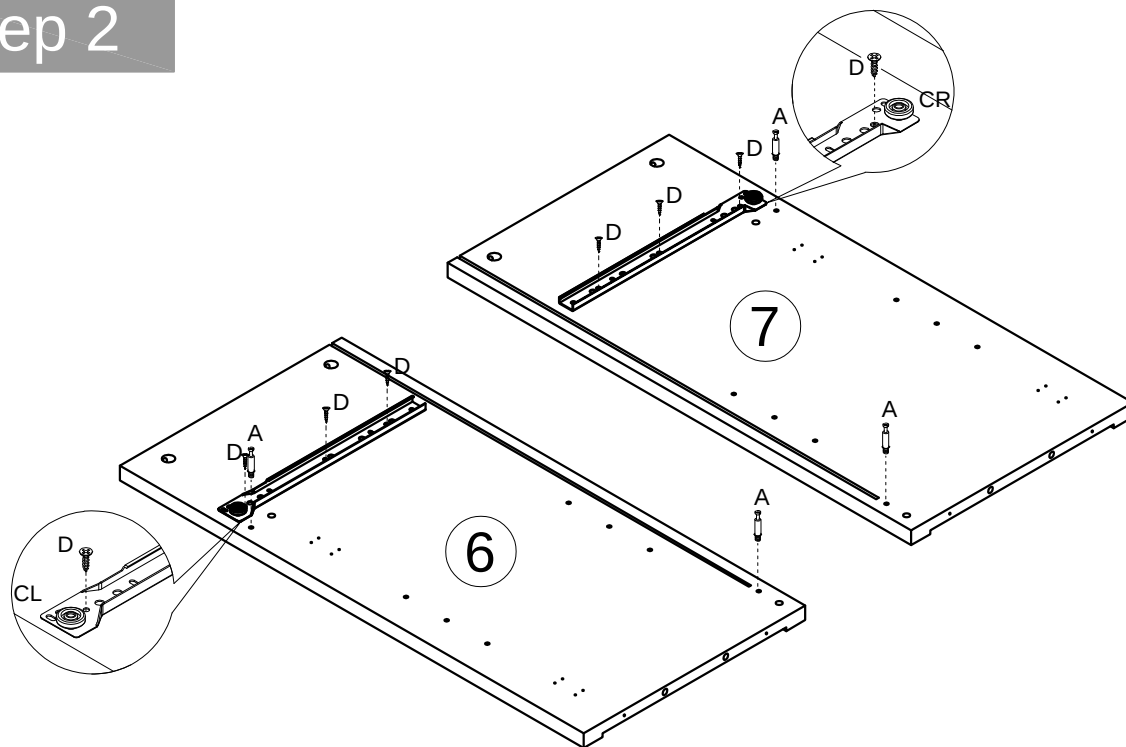


A  x 4	D  x 6	CL  x 1	CR  x 1
--	--	--	--

Step 3


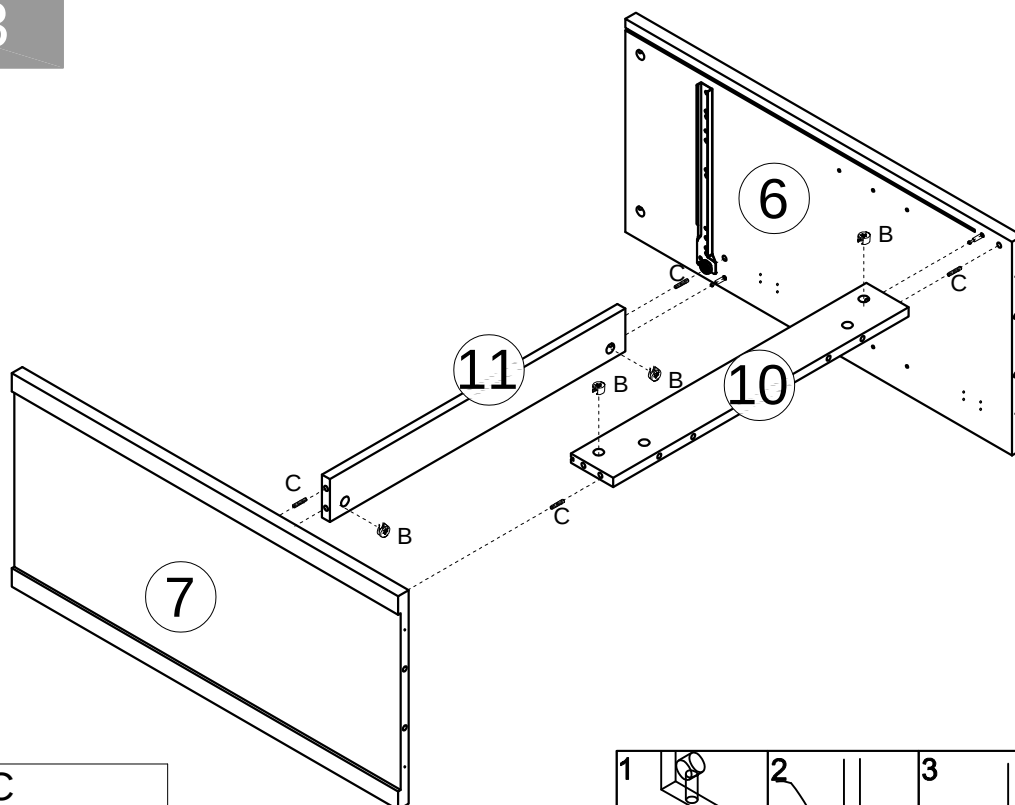


B  x 4	C  x 4
--	--


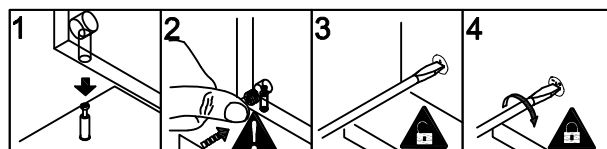


Assembly Instructions

Step 4


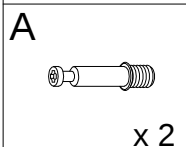
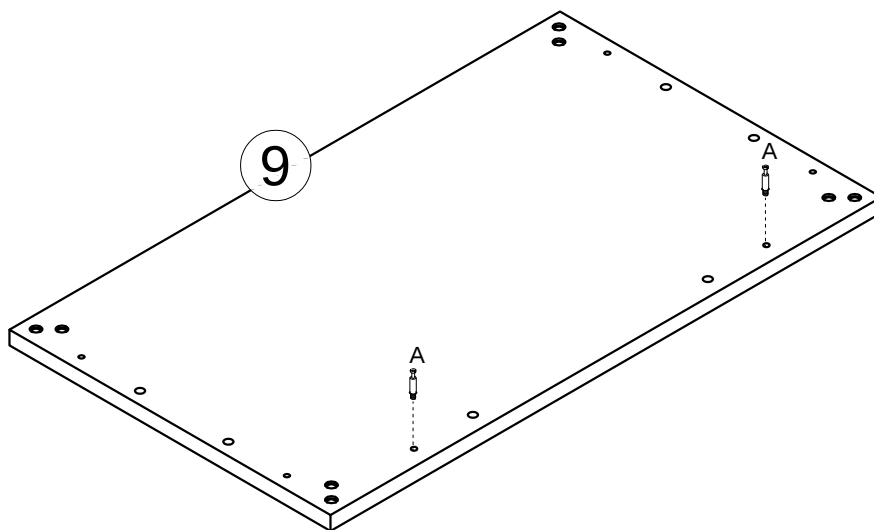


Step 5

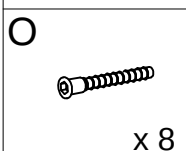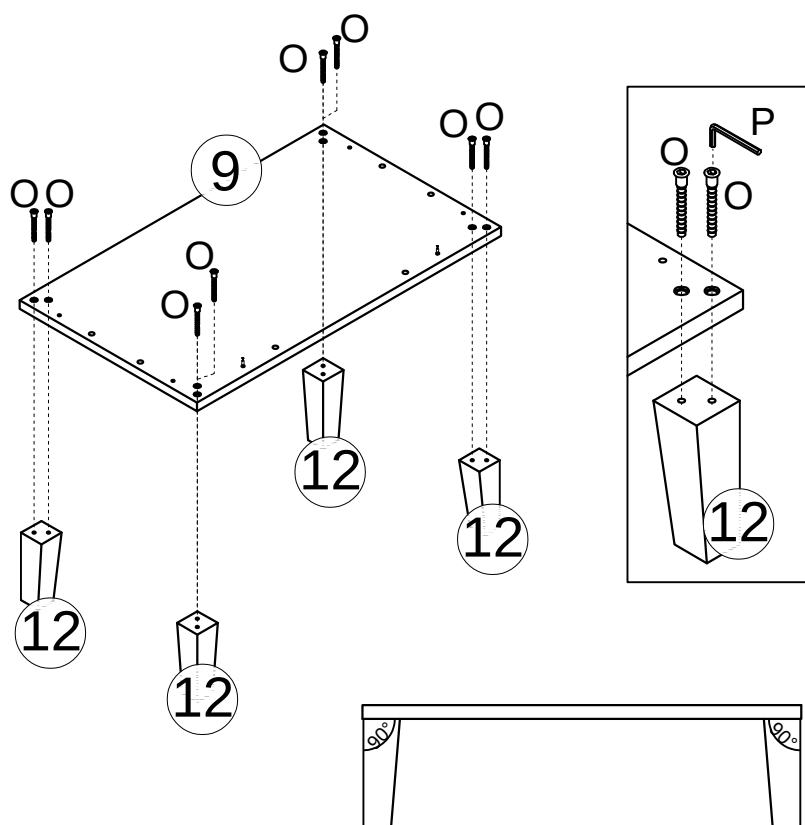


Assembly Instructions

Step 6

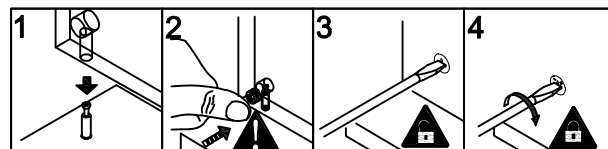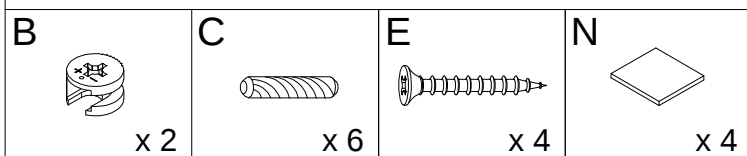
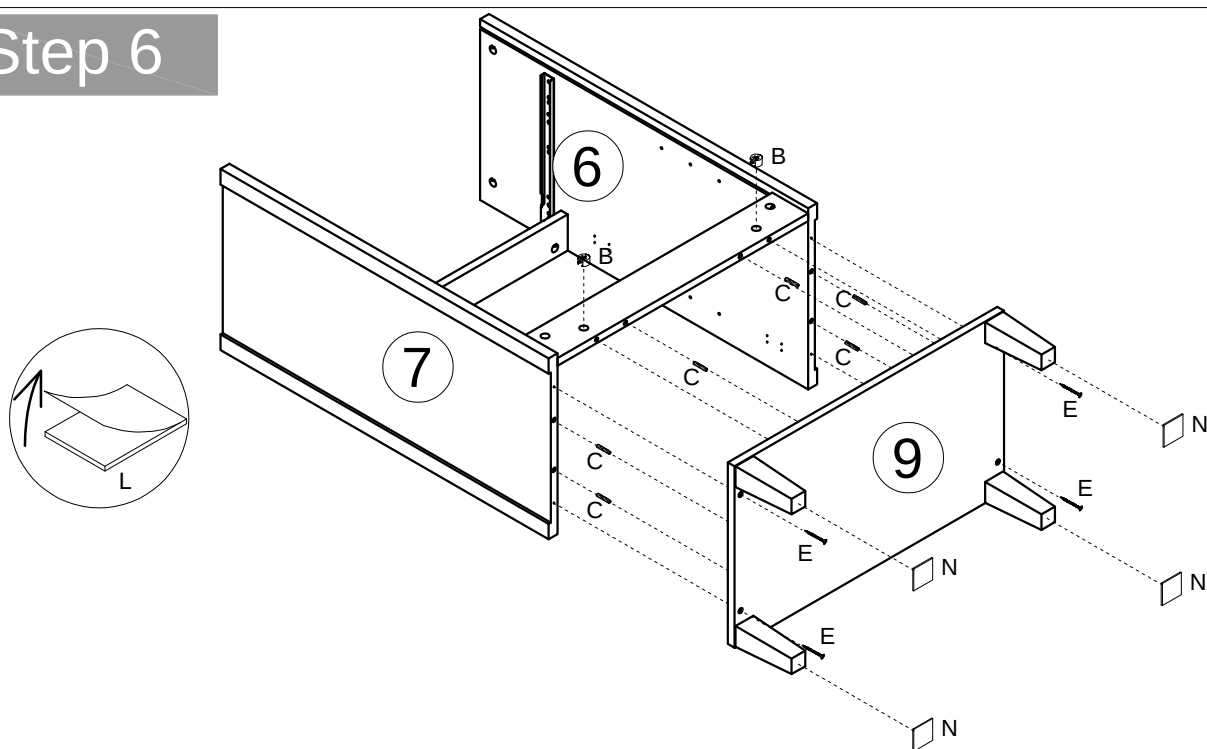


Step 7



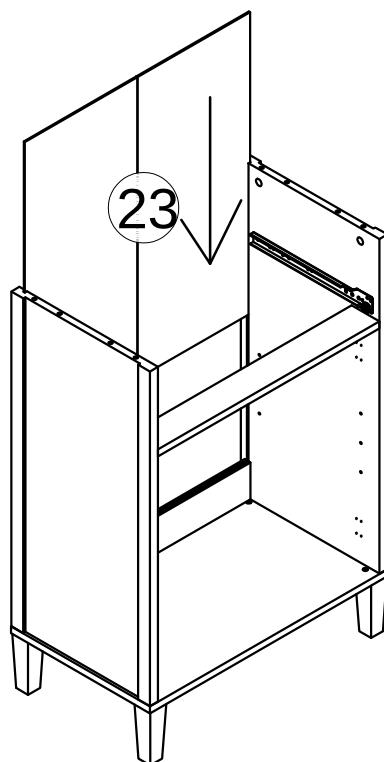


Assembly Instructions

Step 8

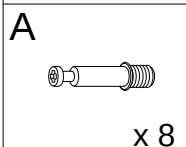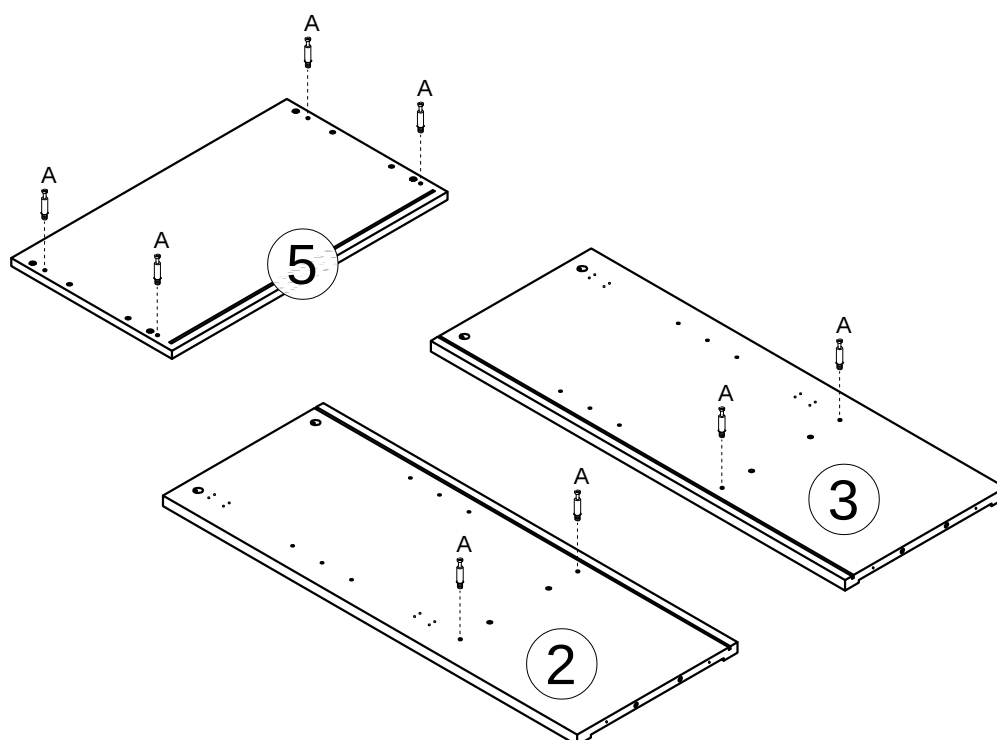


Step 9

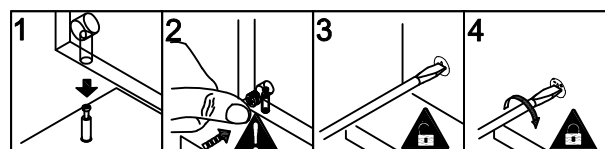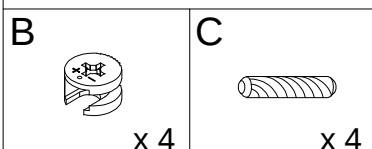
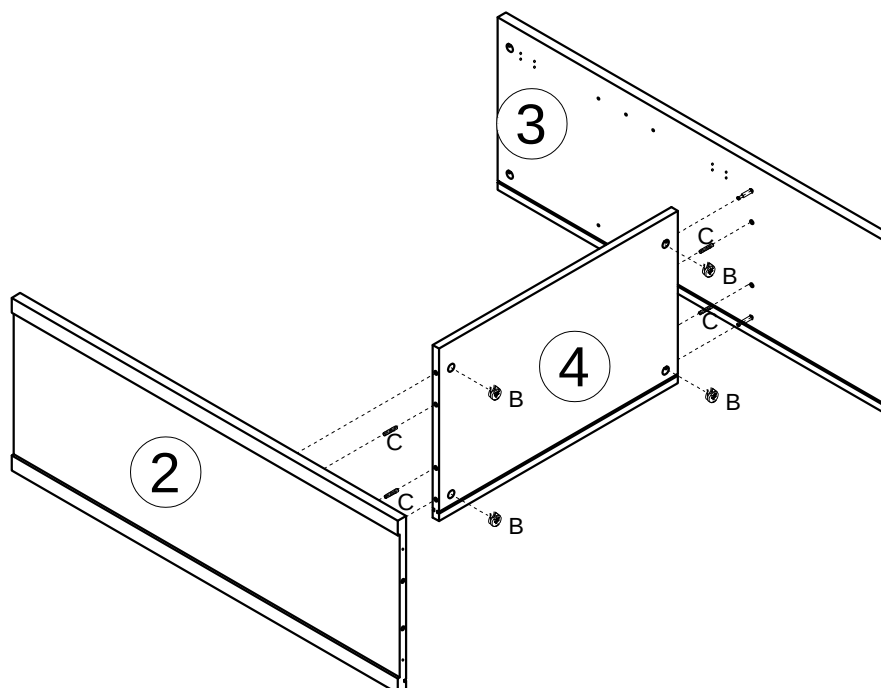


Assembly Instructions

Step 10

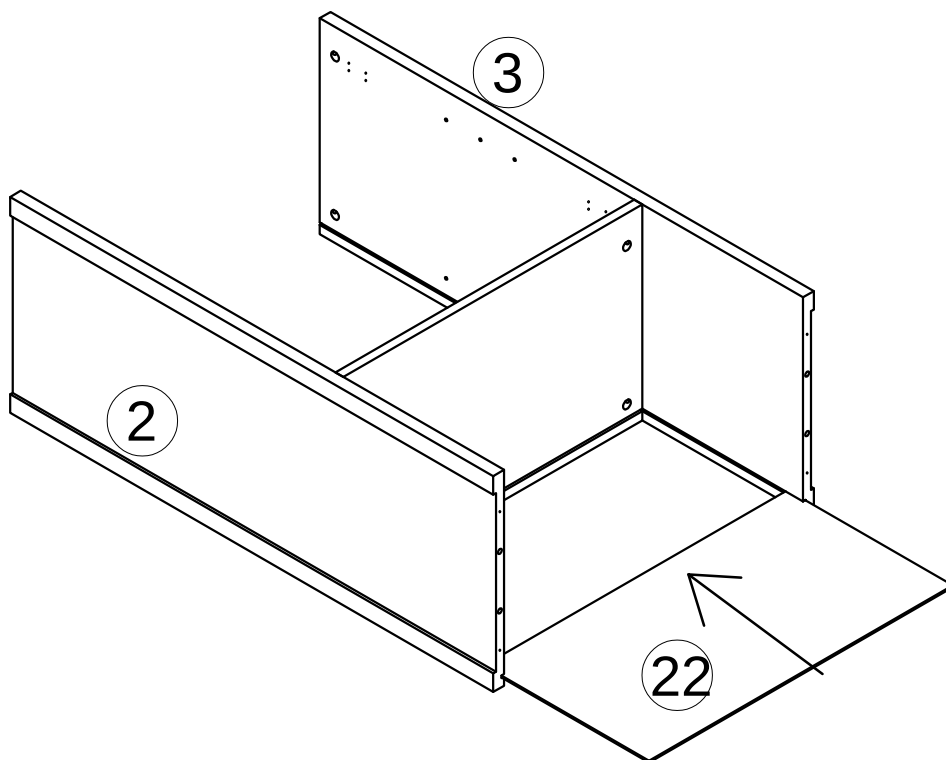


Step 11

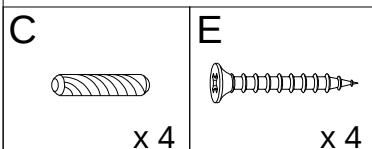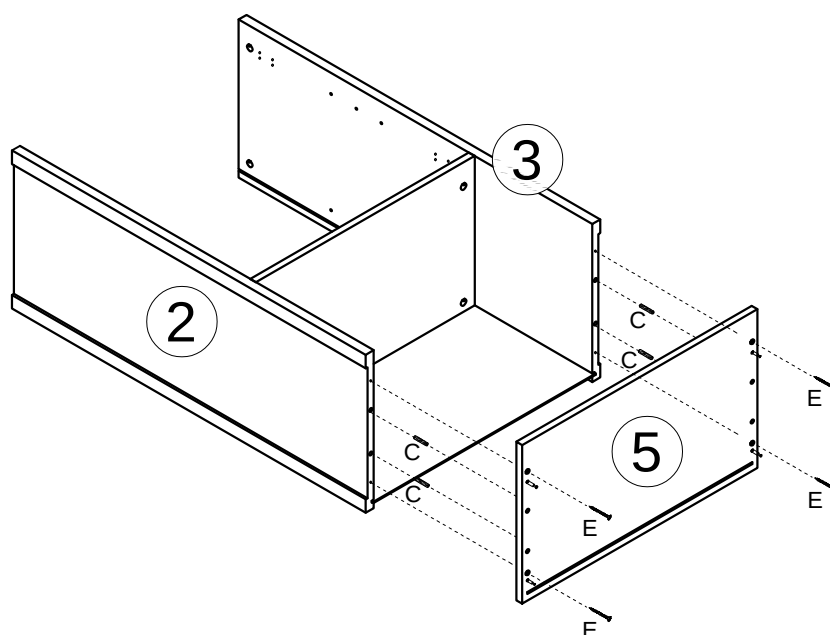


Assembly Instructions


Step 12

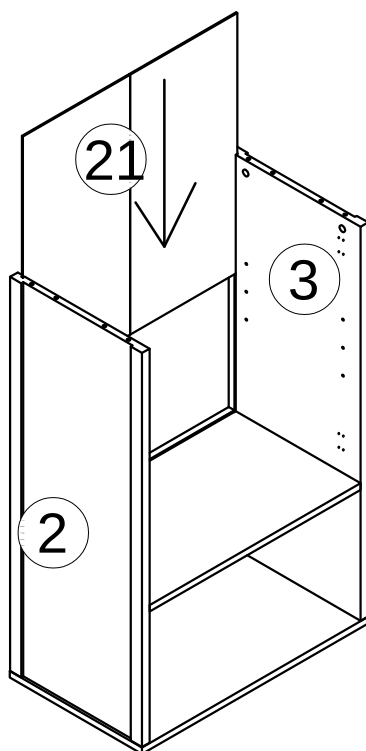

Step 13

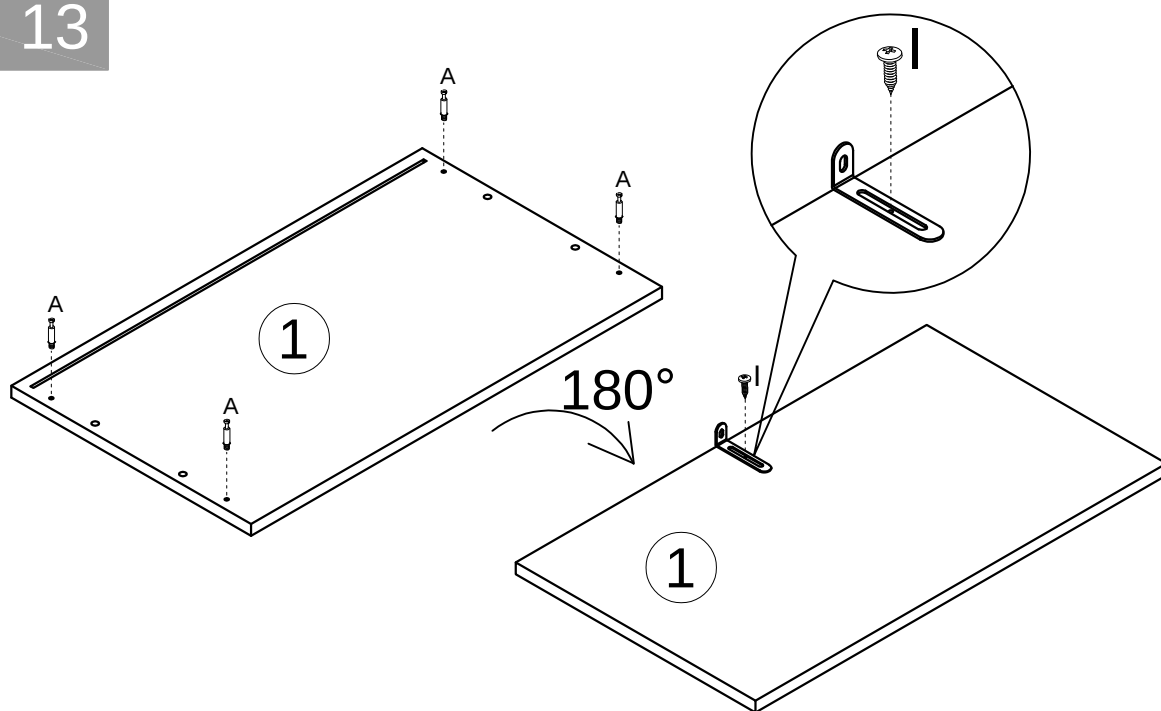

A



x 4




I






x 1

Assembly Instructions

Step 14

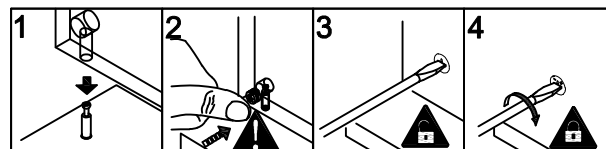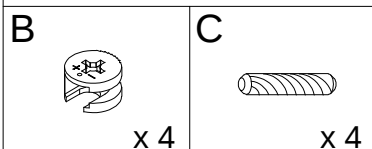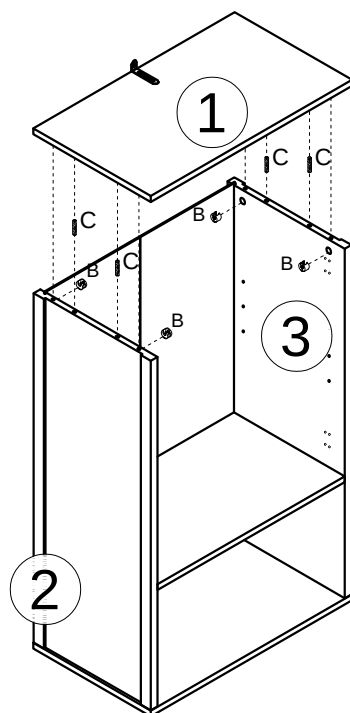


Step 15

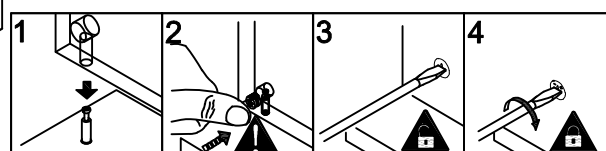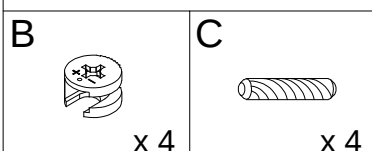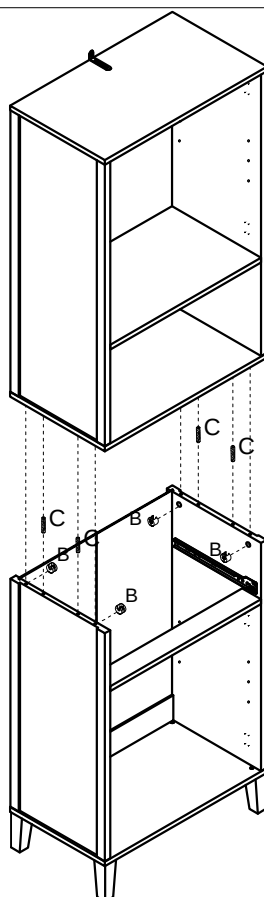

Assembly Instructions

Step 16

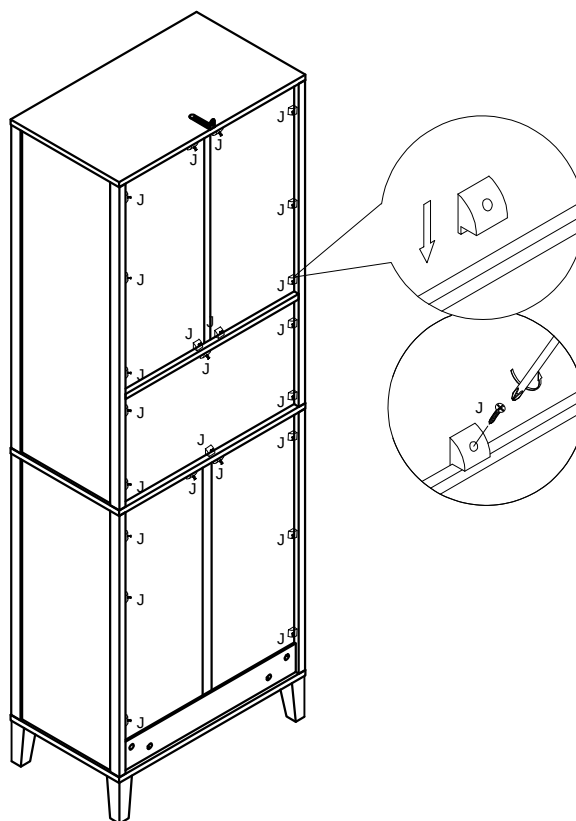


J



x 24

Step 17

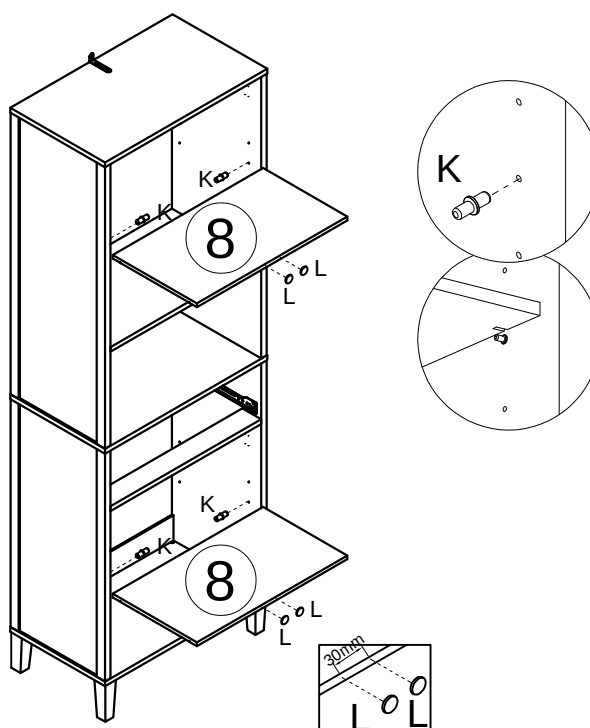

K



x 8


L





x 4


Assembly Instructions

Step 18

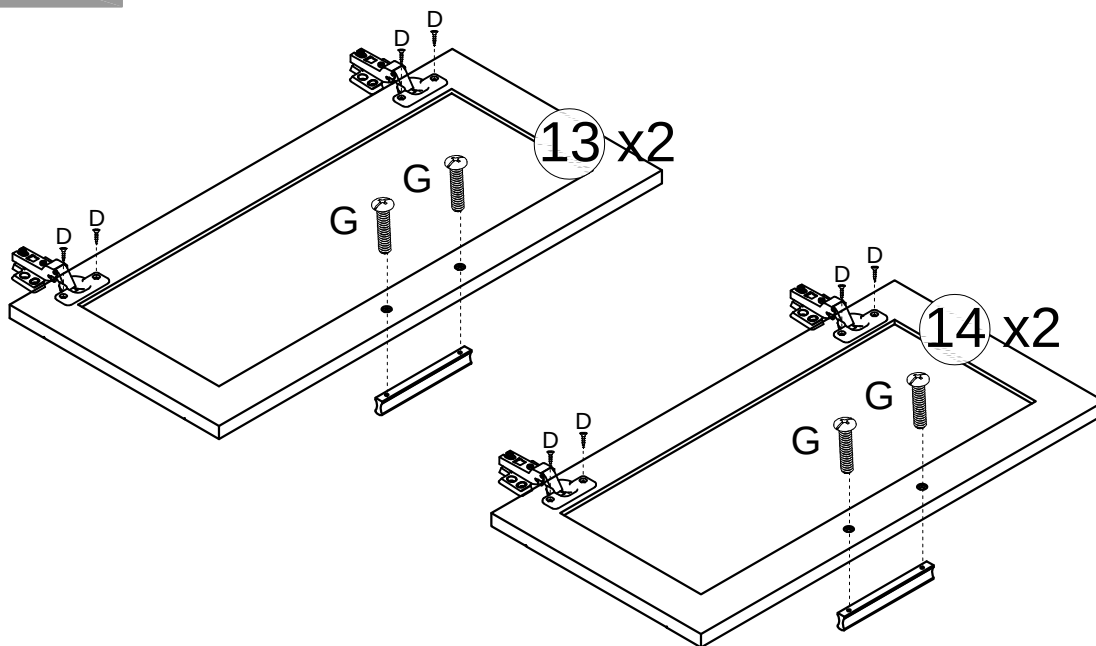

D  x 16	F  x 8	G  x 8	H  x 4
---	---	--	---


Step 19

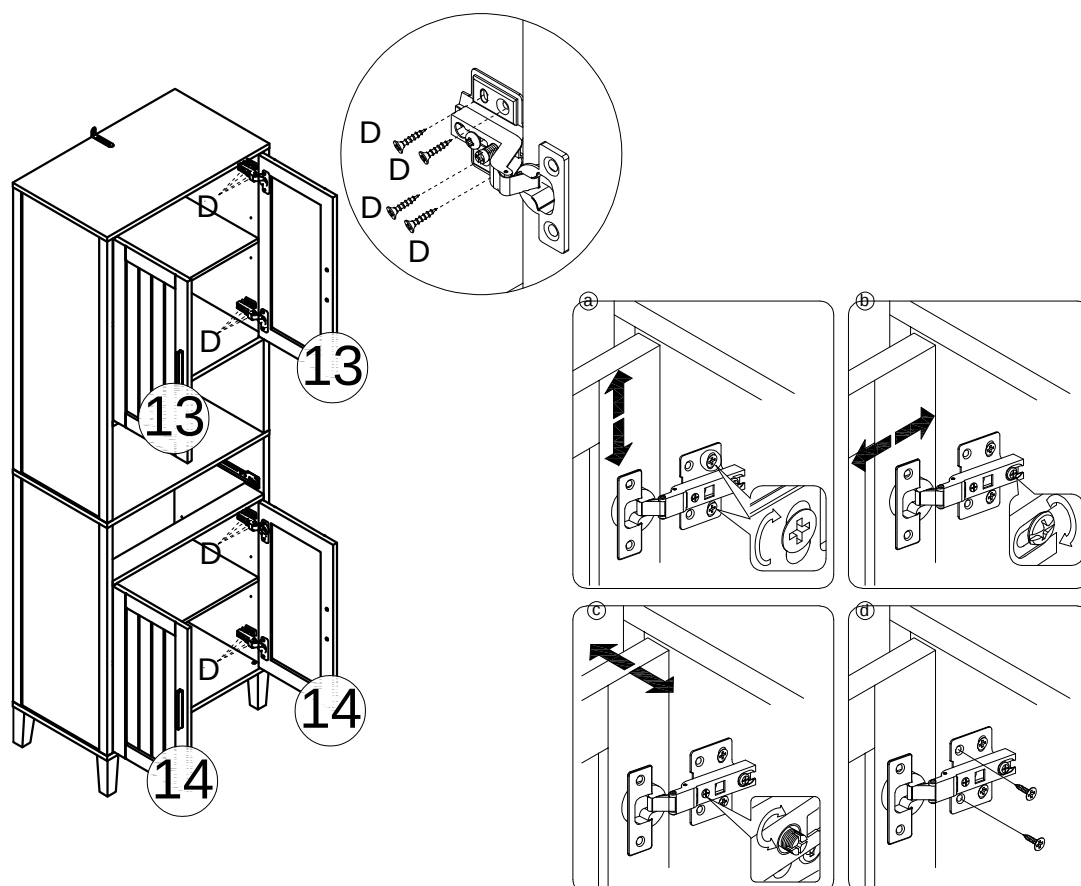



D  x 32

Assembly Instructions

Step 20

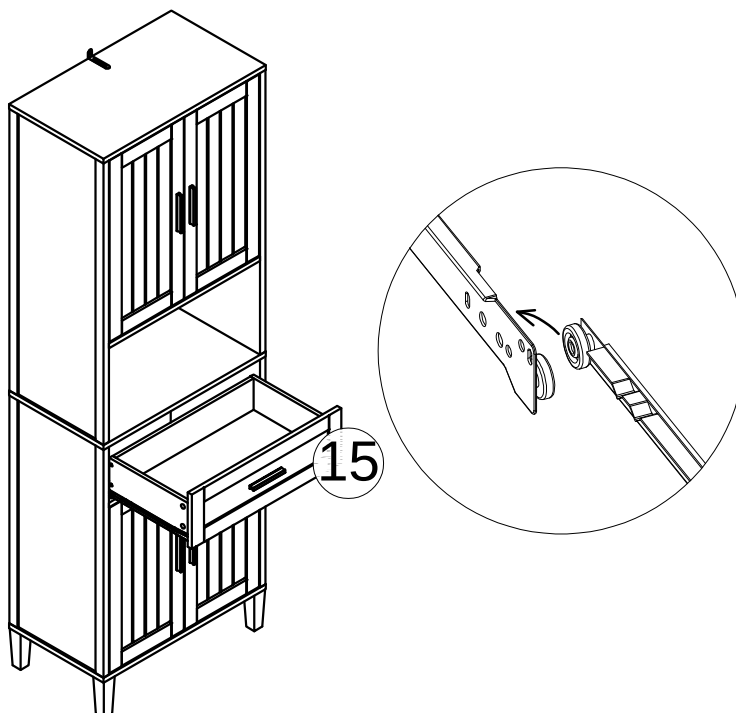

Step 21

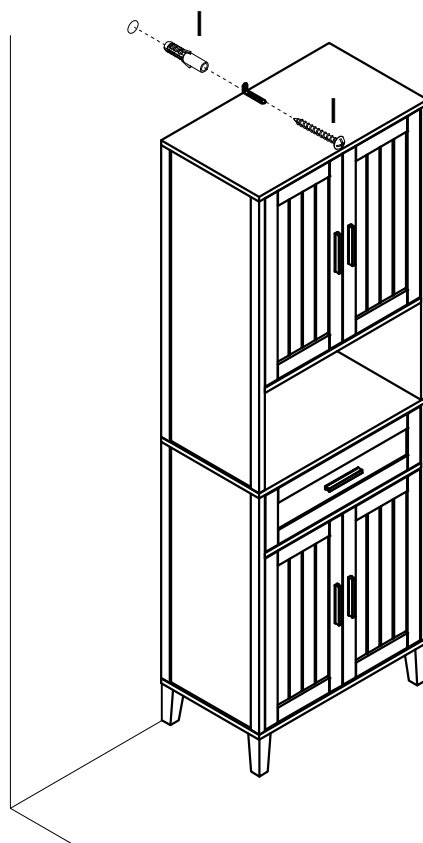

x 1