

**Tools Needed:**  
Implementos  
necesarios:



For warranty info visit  
[mdbuildingproducts.com](http://mdbuildingproducts.com)


Para obtener información sobre la garantía,  
visite [mdbuildingproducts.com](http://mdbuildingproducts.com)

## DOOR ALIGNER

1. Remove old door aligners.
2. Replace with new door aligners using existing screw holes.

### For new installation:

1. Using aligners as template, place aligners 12" up from bottom of bi-fold guide panel.
2. Tabs on aligners must point toward the inside of the doors.
3. Secure aligners to guide panel.

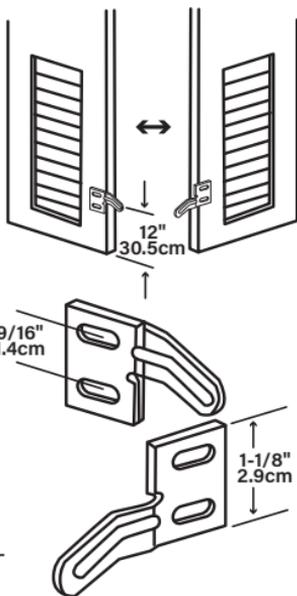

### ALINEADOR DE PUERTA

1. Retire los alineadores de puerta viejos.
2. Reemplácelos con alineadores de puerta nuevos, utilice los agujeros para tornillos existentes.

### Para una instalación nueva:

1. Usando los alineadores como plantilla, colóquelos a 12" hacia arriba desde la parte inferior del panel guía plegable.
2. Las pestañas de los alineadores deben apuntar hacia el interior de las puertas.
3. Asegure los alineadores para guiar el panel.

Made in China. Hecho en China.  
M-D Building Products, Inc.  
Oklahoma City, OK 73118  
Rev 07/24 [mdteam.com](http://mdteam.com)

**⚠WARNING: Cancer and Reproductive Harm**  
- [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**ADVERTENCIA: Cáncer y Daño Reproductivo**  
- [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).



QUESTIONS? | PREGUNTAS?  
800.654.8454  
[MDBUILDINGPRODUCTS.COM](http://MDBUILDINGPRODUCTS.COM)

