

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly: Phillips Head Screwdriver & Allen Key (Included)

CARE AND MAINTENANCE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

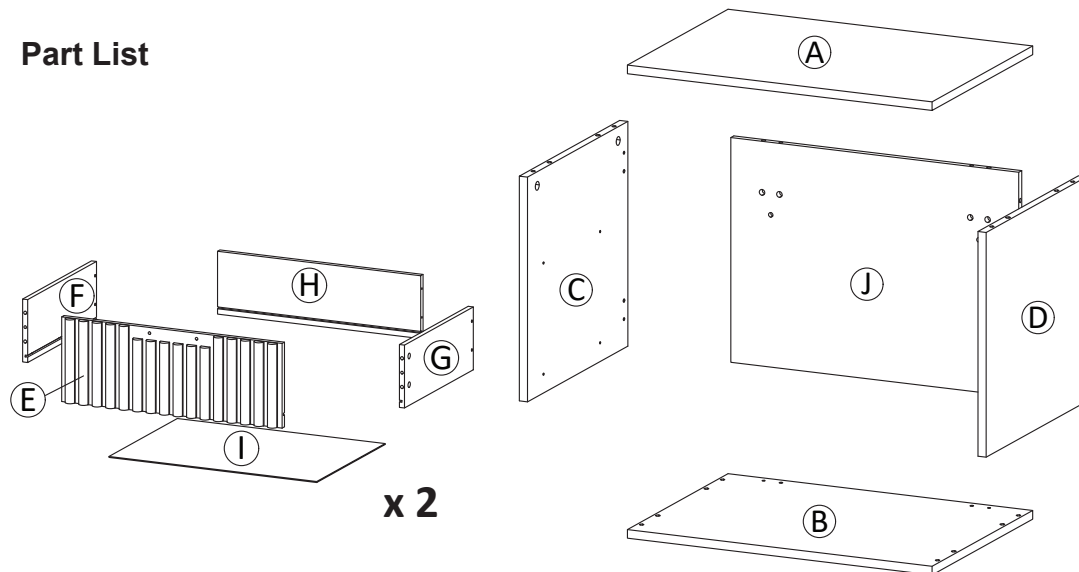

 **SAFAVIEH**
FURNITURE

Model# NST9615

Product Dimensions: 22.13"Wx15.67"Dx16.50"H

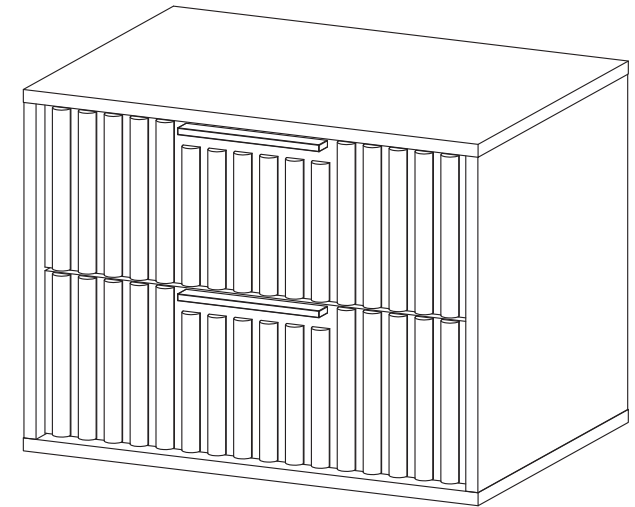

WARNING :










WEIGHT CAPACITY: 33 LBS.

DRAWER LOAD CAPACITY: 22 LBS.

Warning : Do not stand on chest.

Warning : Do not over torque bolts.

Hardware List

HW1x20  $\varnothing 6 \times 35 \text{ mm}$	HW2x4  $\varnothing 15 \text{ mm}$	HW3x8  $\varnothing 8 \times 30 \text{ mm}$	HW4x12  $\varnothing 6 \times 30 \text{ mm}$	HW5x4  $M 7 \times 50 \text{ mm}$	HW6x2 
HW7x16  $\varnothing 12 \text{ mm}$	HW8x8  $M 8 \times 39 \text{ mm}$	HW9x6  $5.5 \times 45 \text{ mm}$	HW10x8  $M 6 \times 10.5 \text{ mm}$	HW11x12  $M 3.5 \times 13 \text{ mm}$	HW12x2 
HW13x4  $M 4 \times 22 \text{ mm}$	HW14x8 	HW15x8  $M 3.5 \times 15.5 \text{ mm}$	HW16x6 	HW17x4 	HW18x4  $M 6 \times 10 \text{ mm}$
HW19x2 	HW RM30Ax2 	HW PA05x2 	HW PA49x1 		

Part List & HW For Multi-Box Items

Piece	Description	Qty
A	Top Board	1
B	Bottom Board	1
C	Side Board Left	1
D	Side Board Right	1
E	Front Drawer	2
F	Side Drawer Left	2
G	Side Drawer Right	2
H	Back Drawer	2
I	Bottom Drawer	2
J	Back Board	1

Piece	Description	Qty
HW1	Cambolt	20
HW2	CamLock Big	4
HW3	Dowel Big	8
HW4	Dowel Small	12
HW5	Screw M 7 x 50 mm	4
HW6	Allen Key	2
HW7	CamLock Small	16
HW8	Screw M 8 x 39 mm	8
HW9	Screw 5.5 x 45 mm	6
HW10	Screw M 6 x 10.5 mm	8
HW11	Screw M 3.5 x 13 mm	12
HW12	Handle	2
HW13	Screw M 4 x 22 mm	4
HW14	Wedge	8
HW15	Screw M 3.5 x 15.5 mm	8
HW16	Wall Plug	6
HW17	JCN Nut	4
HW18	Screw M 6 x 10 mm	4
HW19	Wall Mounted Bolt	2
HW RM30A	Drawer Runner	2
HW PA05	Short Bracket	2
HW PA49	Long Bracket	1

PREPARATION



*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly: Phillips Head Screwdriver & Allen Key (Included)

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

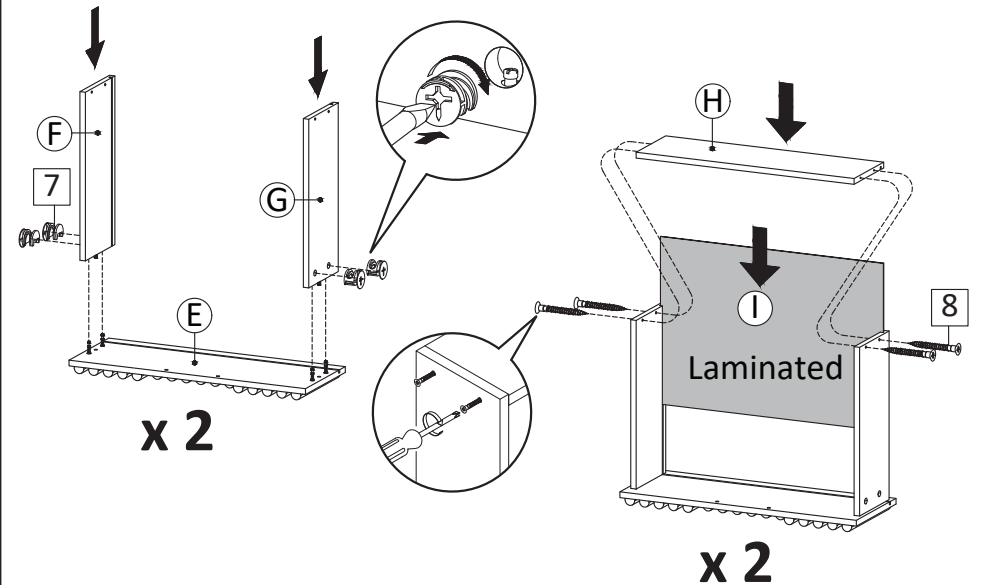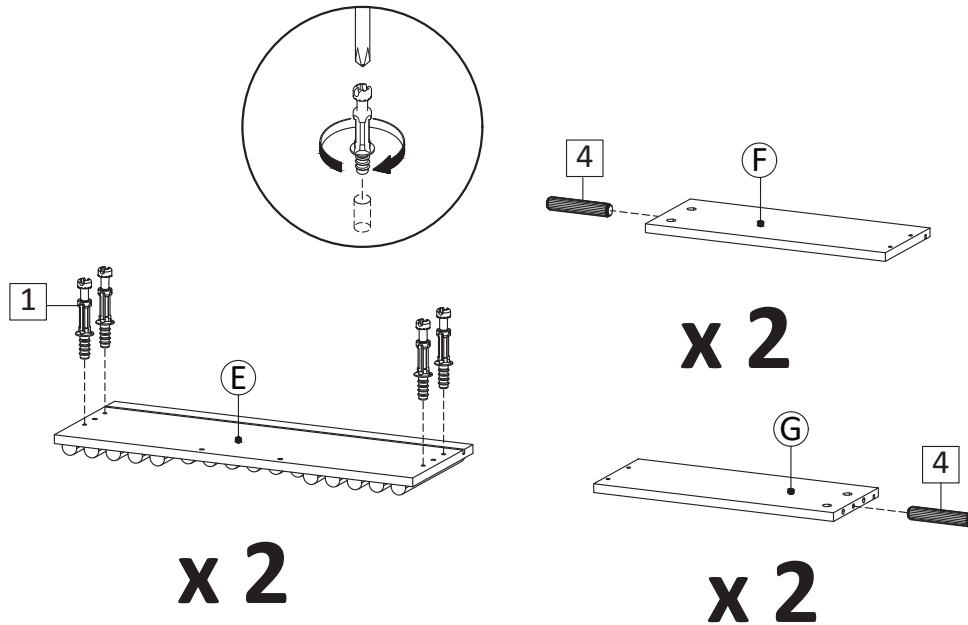

STEP1: Insert Cambolt (HW1) into Front Drawer (E). Insert Dowel Small (HW4) into Side Drawers (F&G).

STEP2: Combine Side Drawers (F&G) into Front Drawer (E) then tighten camlock small (HW7) using screwdriver. Insert Bottom Drawer (I), then put Back Drawer (H) with laminated face facing upward then secure with Screw M8x39mm (HW8).

PREPARATION




*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly: Phillips Head Screwdriver & Allen Key (Included)

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

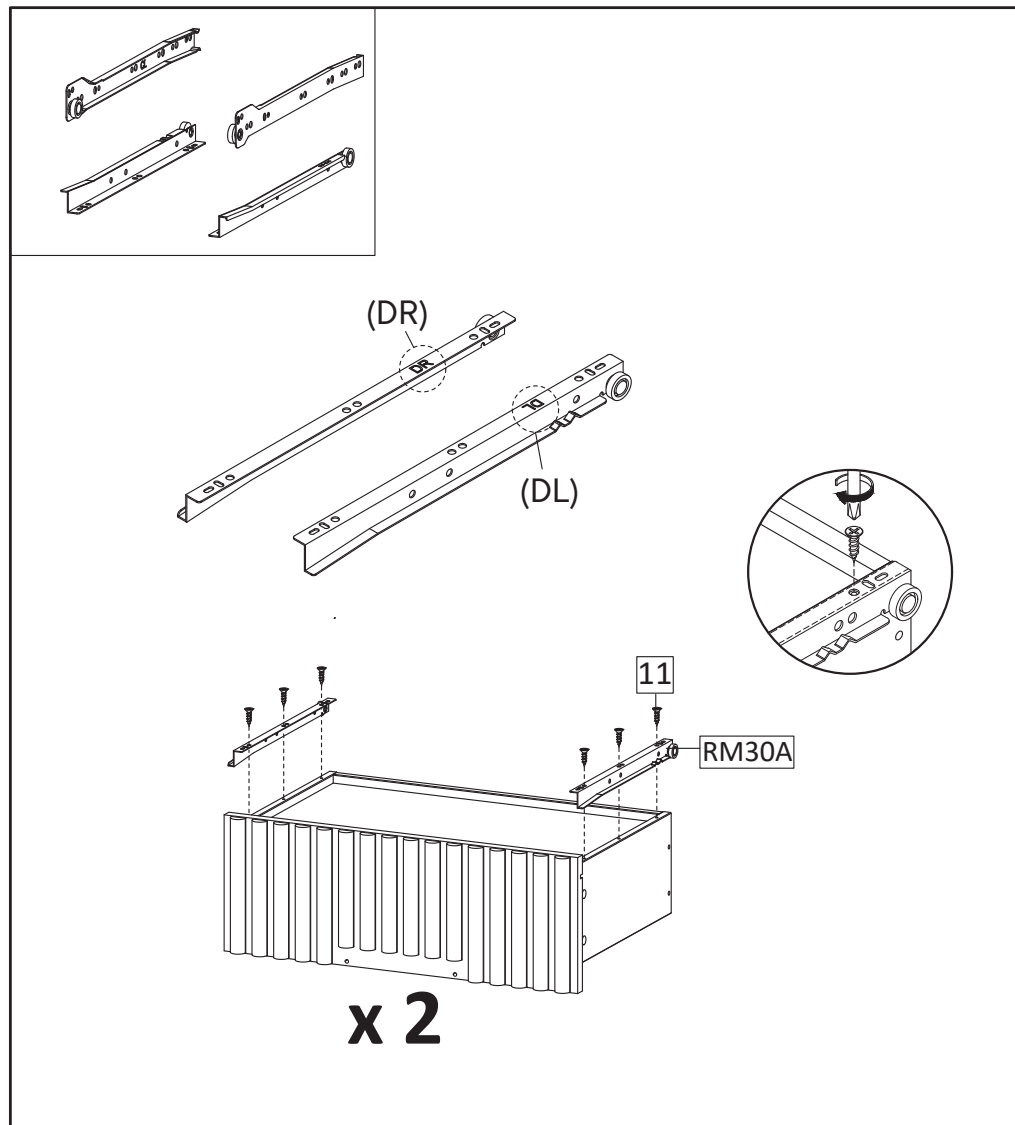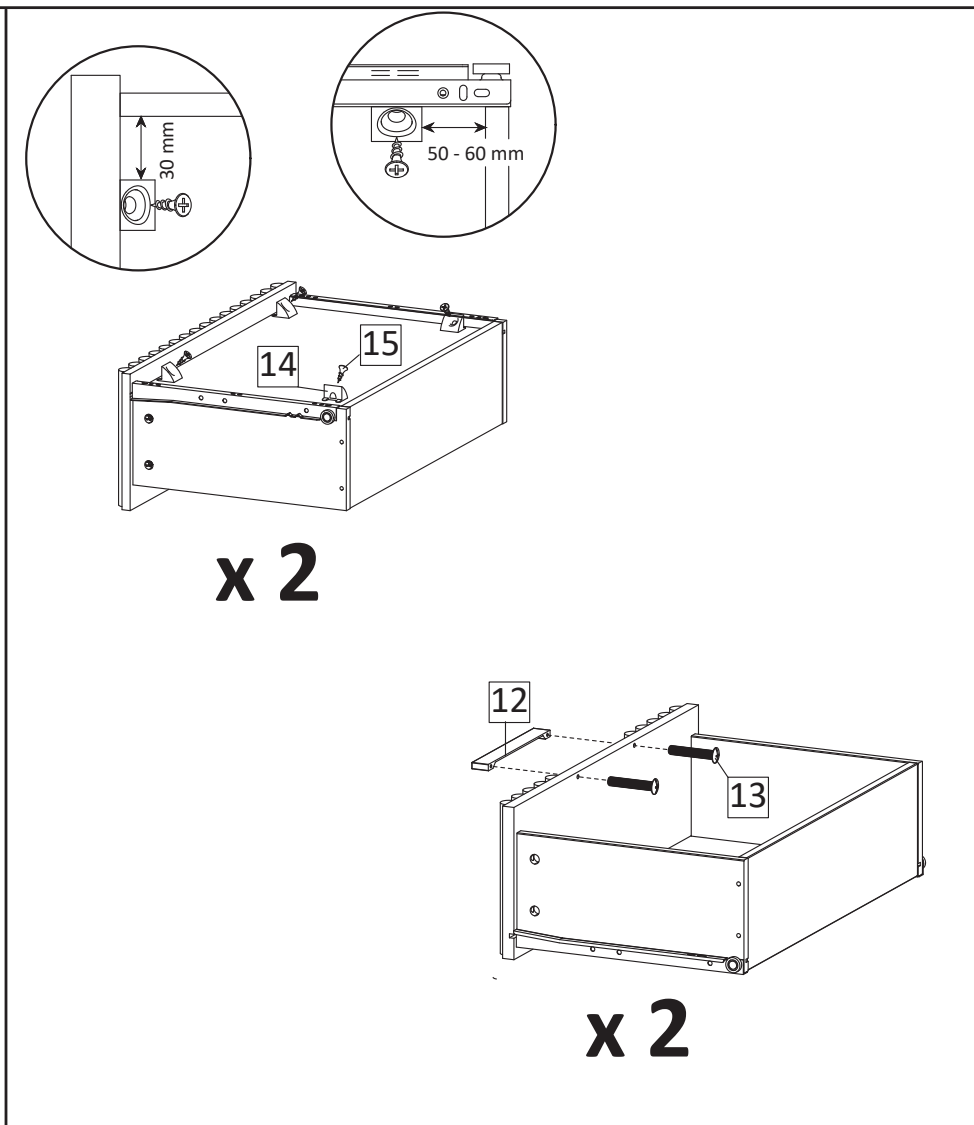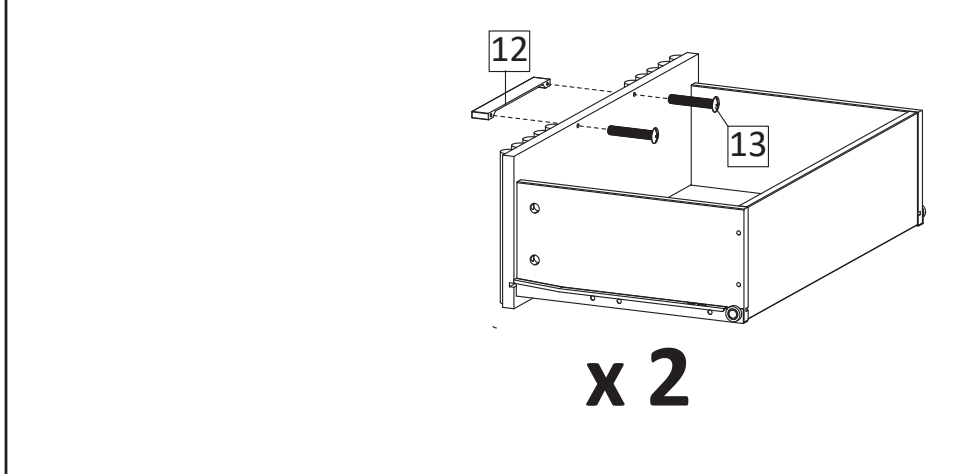 (DR) (DL) 11 RM30A x 2	 14 15 x 2  12 13 x 2
STEP3: Install the Drawer Runner (HW RM30A) into position as shown in picture. Secure with screws M3.5x13mm (HW11).	STEP4: Insert the Screw M3.5x15.5mm (HW15) and wedge (HW14) into the bottom of the drawer according to the picture. Use Screw M4x22mm (HW13) to attach Handle (HW12) to the Front Drawer.

PREPARATION



*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly: Phillips Head Screwdriver & Allen Key (Included)

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

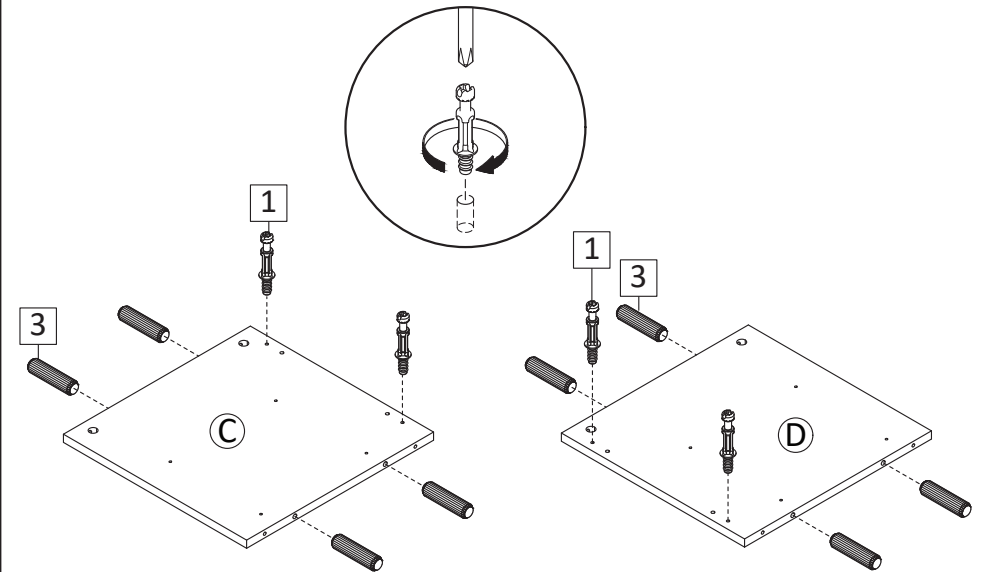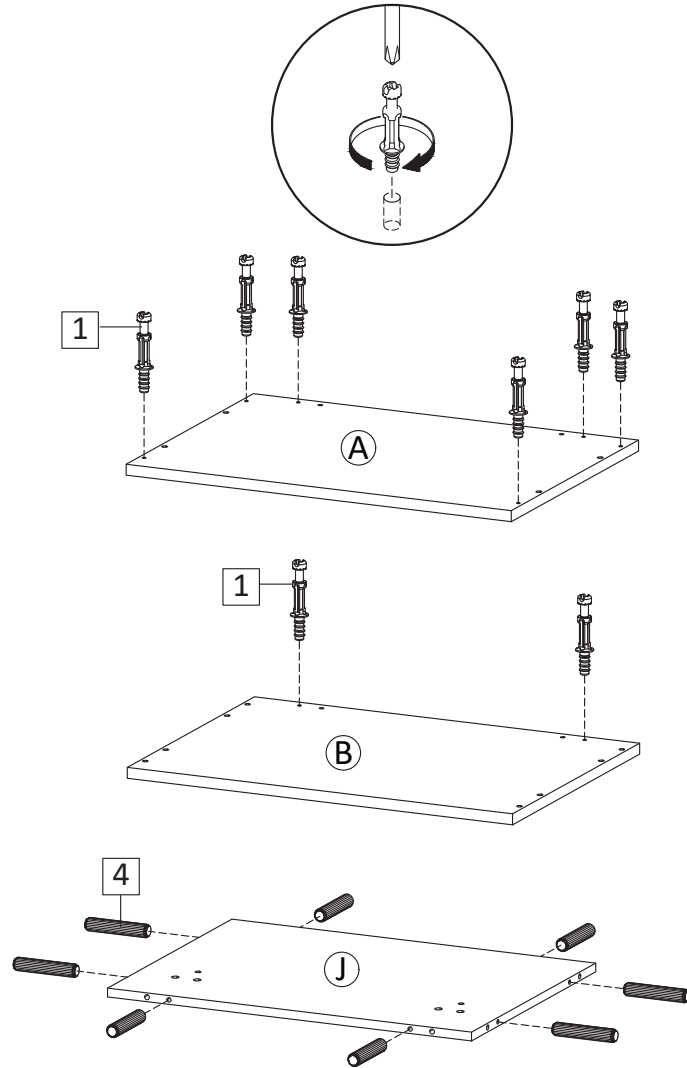

STEP5: Insert Cambolt (HW1) into Top Board (A) and Bottom Board (B). Insert Dowel Small (HW4) into Back Board (J).

STEP6: Insert Cambolt (HW1) and Dowel Big (HW3) into Side Board Left (C) and Side Board Right (D).

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly: Phillips Head Screwdriver & Allen Key (Included)

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

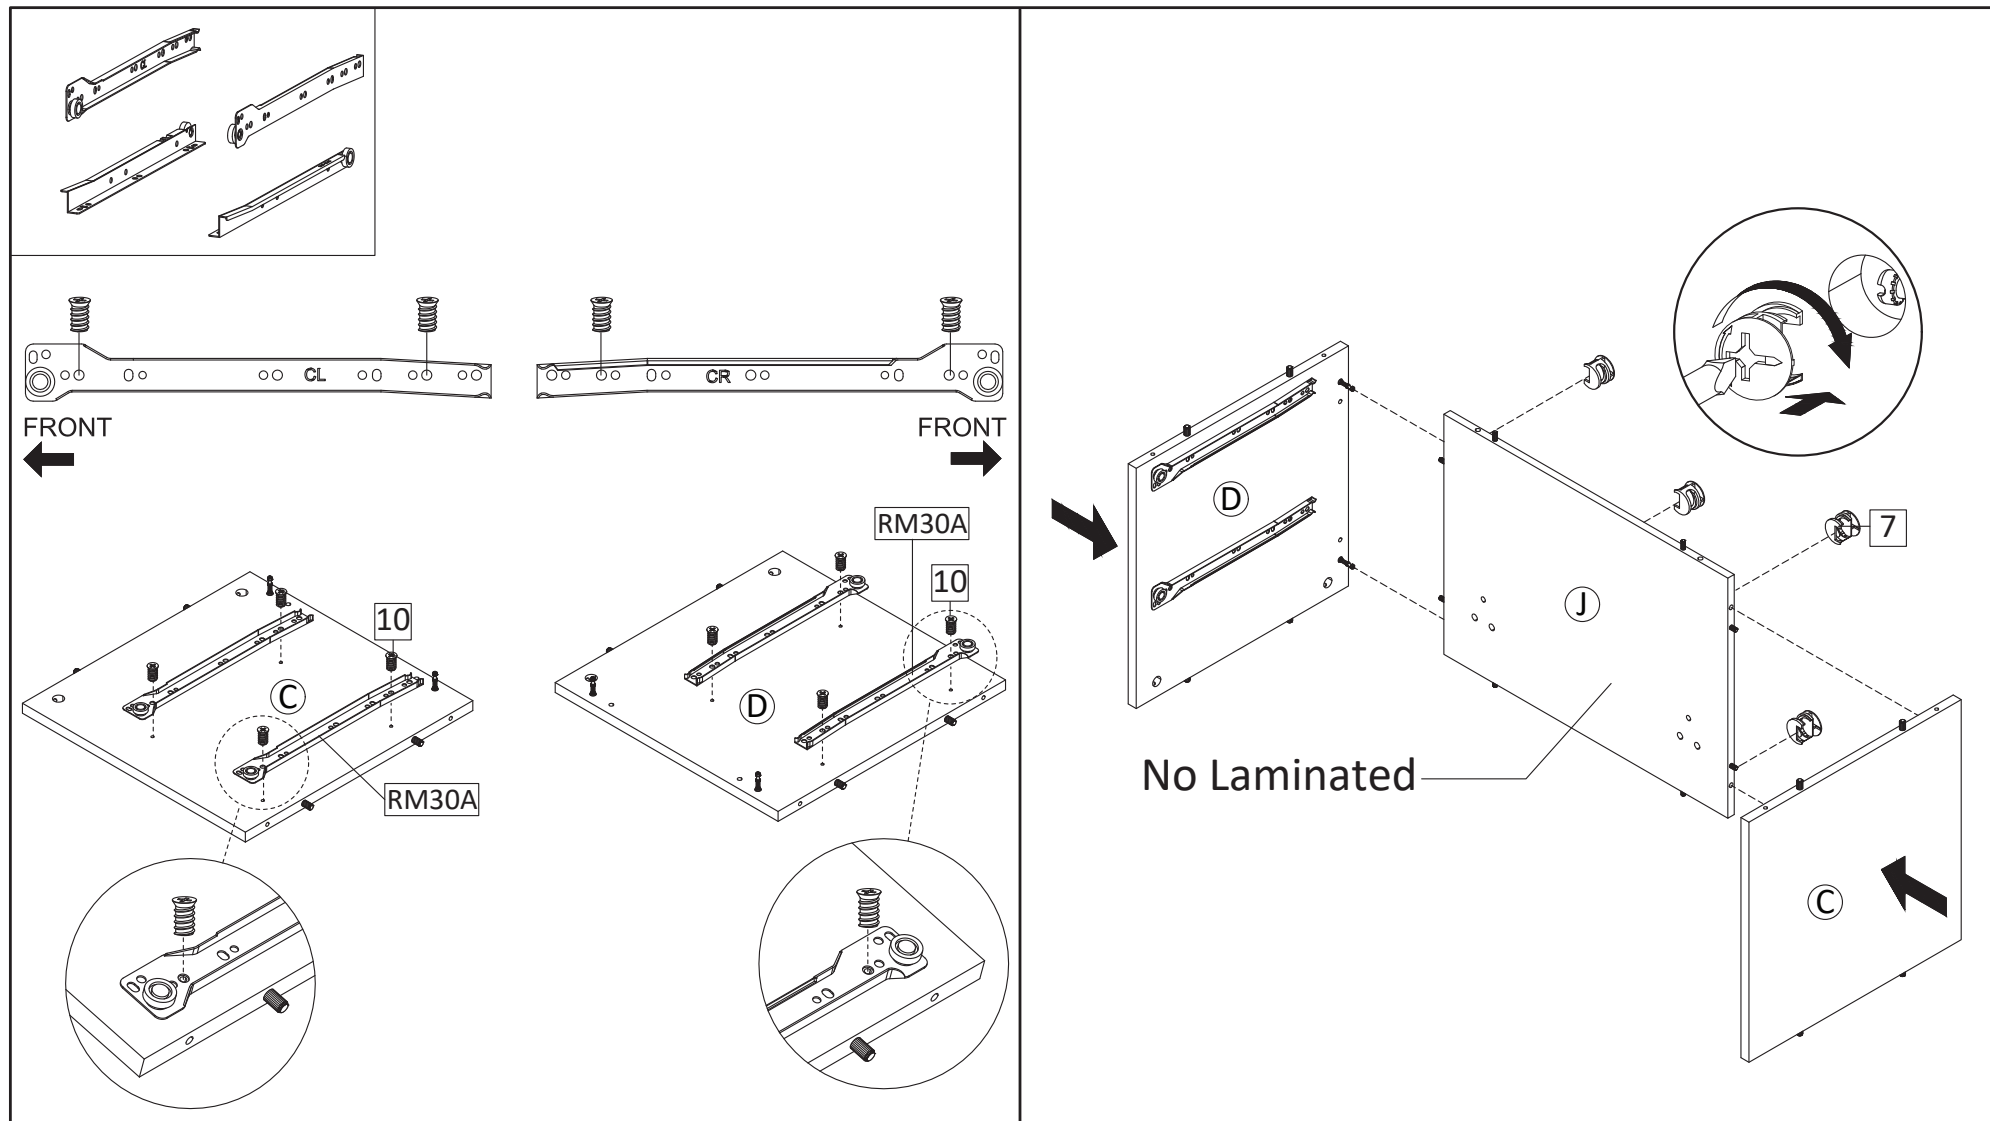


STEP7: Securing part of the Drawer Runner (HW RM30A) into Side Board Left (C) and Side Board Right (D) into position as the above image, using screw M6x10.5mm (HW10).


STEP8: Combine Side Board Left (C), Side Board Right (D), and Back Board (J) components and secure with Camlock Small (HW7) then tighten using screwdriver. Into position as shown in picture.

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly: Phillips Head Screwdriver & Allen Key (Included)
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

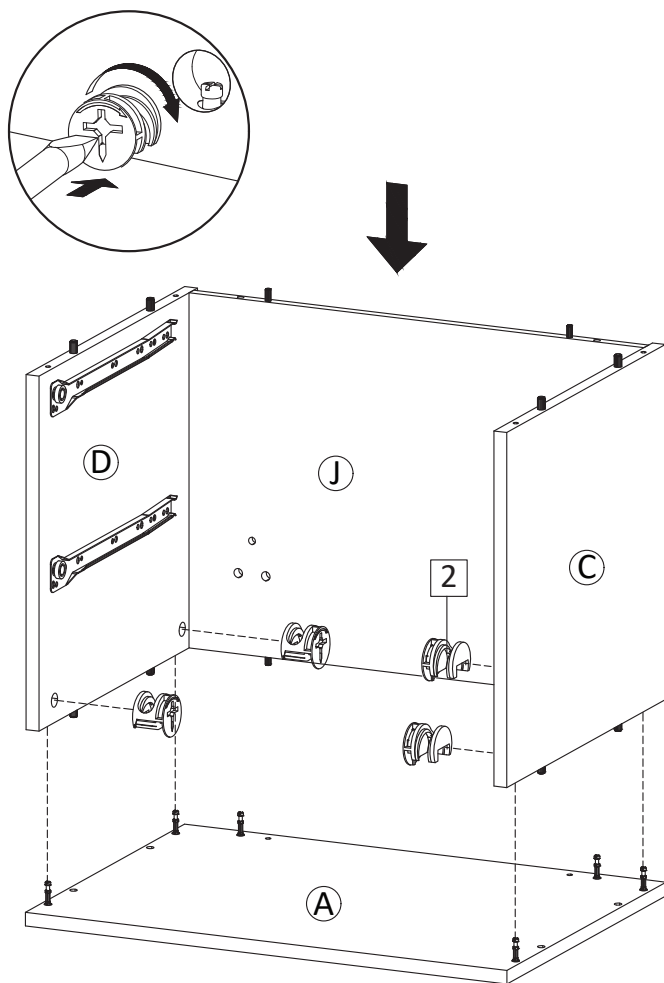


STEP9: Insert the previously assembled components into the Top board (A), secure with Camlock Big (HW2) then tighten using screwdriver. Into position as shown in picture.

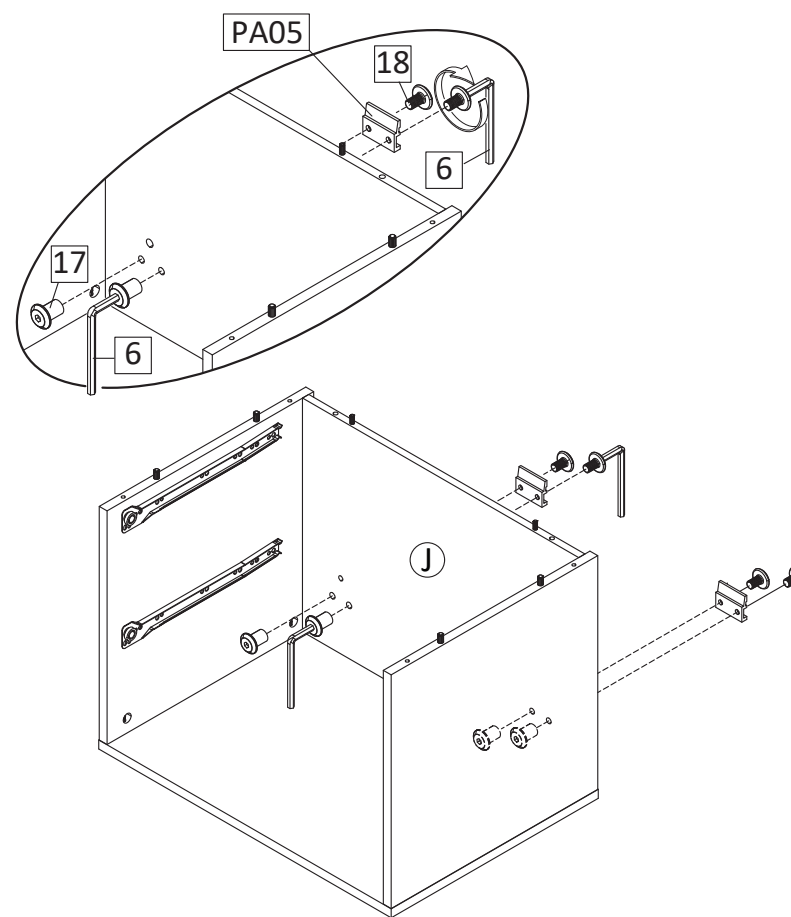


STEP10: Make sure that the Short Bracket (HW PA05) is facing the correct direction. Tighten the Short Bracket (HW PA05) with Screw M6x10mm (HW18) and JCN Nut (HW17) using Allen Key (HW6). Into position as shown in picture.

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly: Phillips Head Screwdriver & Allen Key (Included)
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

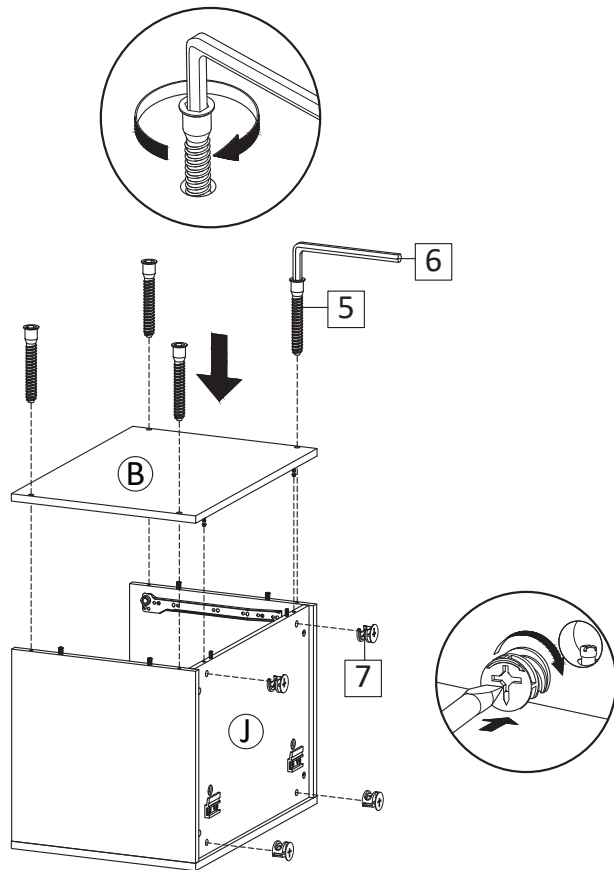

Determine your desired (Y) height, then subtract by 137 mm. This is the drill holes height from the floor (Z).

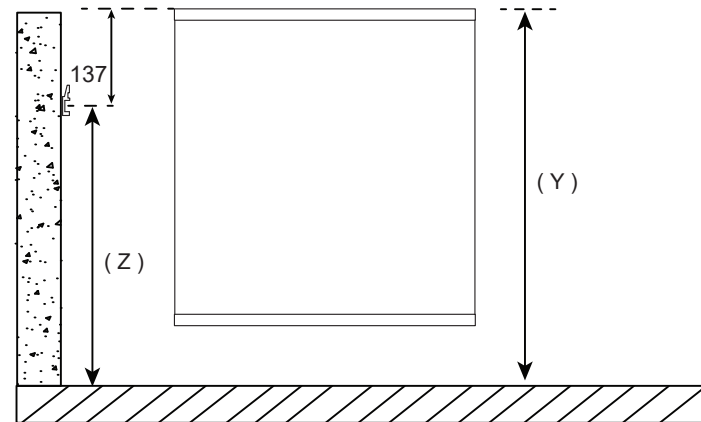

Wall mounting devices

To prevent injury or property damage from the unexpected tipping of furniture, we highly recommend to seek professional advice if unsure of wall constructions.

Properly affixing furniture to your wall will depend on the wall material: concrete, drywall, masonry, or wood will require the appropriate hardware.

Wall Plug (HW16) and screw 5.5x45mm (HW9) provided is suitable for concrete wall only.



please source the right wall anchor and wall screw according to the wall type. Please consult with your local hardware store to ensure you are using the correct hardware for your wall type.

STEP11: Insert Bottom Board (B) then tighten camlock small (HW7) using screwdriver, secure with Screw M7x50mm (HW5), tighten screws using Allen Key (HW6).

STEP12: Please decide on your desired height of the top surface away from the floor (Y). Reduce (Y) by 137mm and you will get the drilling hole height from the floor (Z). Use (Z) to determine the screw positions from the floor on the step 12.

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly: Phillips Head Screwdriver & Allen Key (Included)
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

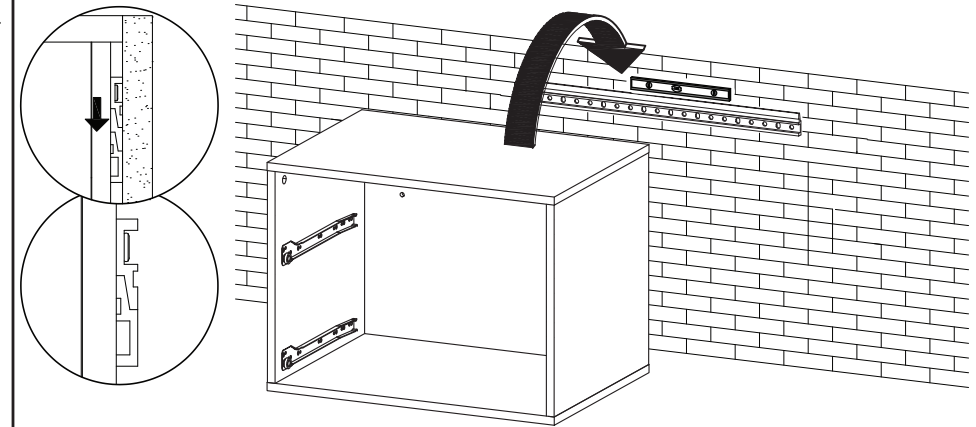
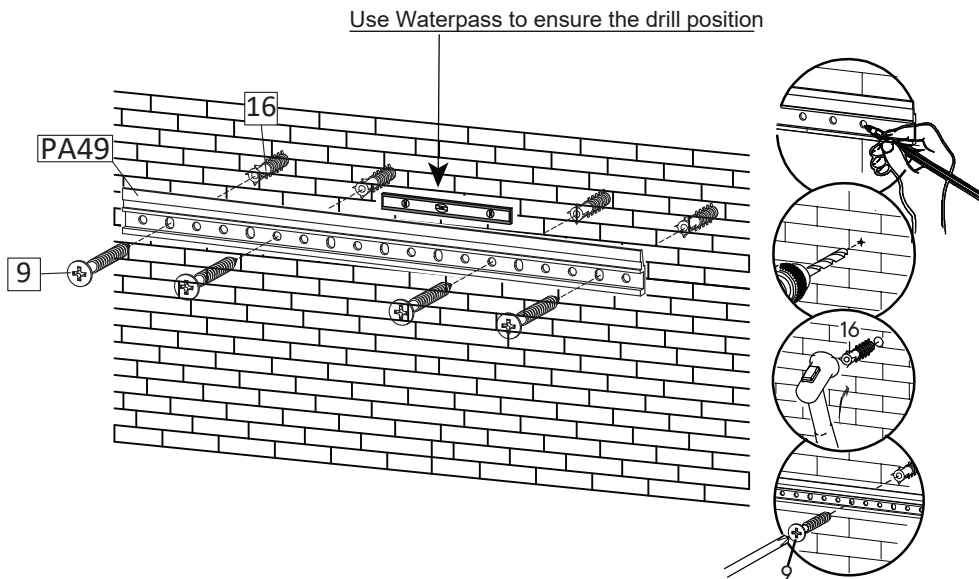


STEP13: Ensure that the Long Bracket (HW PA49) bar is leveled, use water pass if necessary. Using a pencil, mark the hole on the wall and drill. Insert the suitable wall plug (HW16). Ensure that screw 5.5x45mm (HW9) has been tighten fully before hanging the Nightstand onto it.


STEP14: Load the cabinet onto the metal hanging bar. Ensure that it is properly attached and secured to the wall.

PREPARATION


- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly: Phillips Head Screwdriver & Allen Key (Included)
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

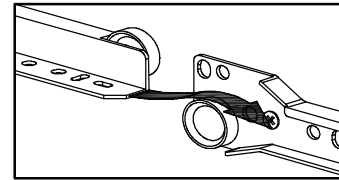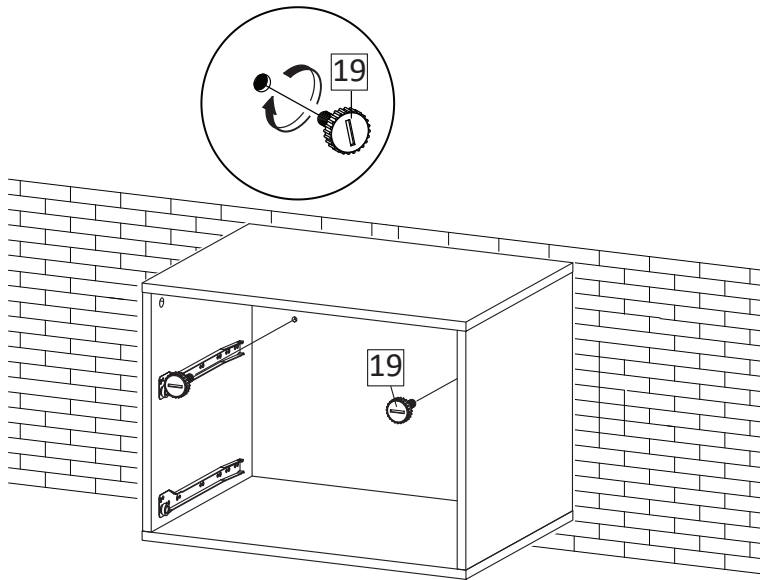

Sticker Warning Position

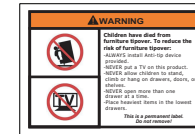

Name Plate Position

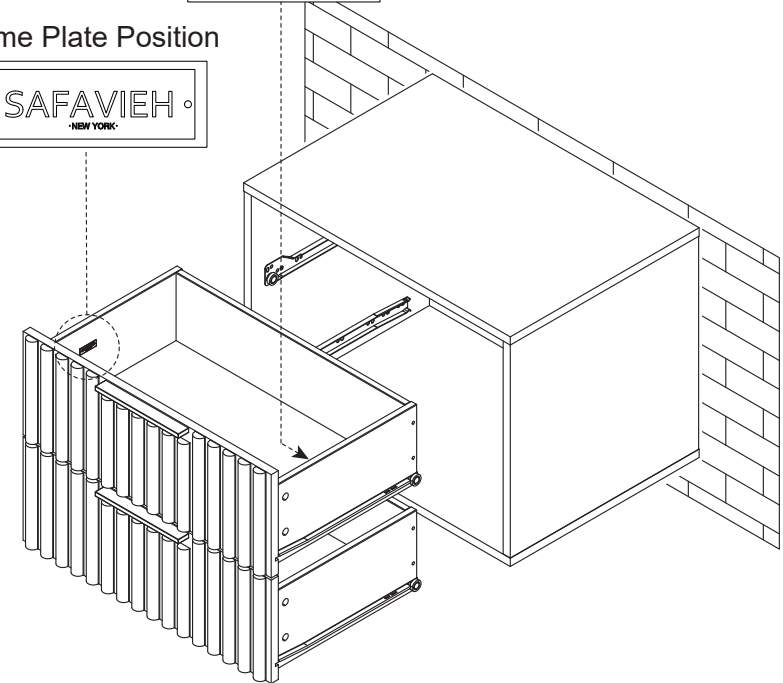


STEP15: Tighten and secure using lock with Wall Mounted Bolt (HW19).

STEP16: Hold the sides of drawer, position the wheel of rail at drawer back and the wheel of rail at side boards, according to the image. Slide in the drawers one by one into the night stand.

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly: Phillips Head Screwdriver & Allen Key (Included)
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

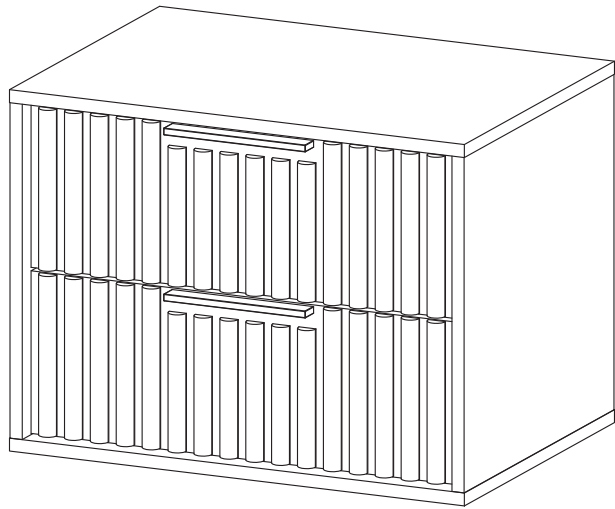

STEP17: Assembly is Complete.