


SIDEBOARD

Assembly Instructions

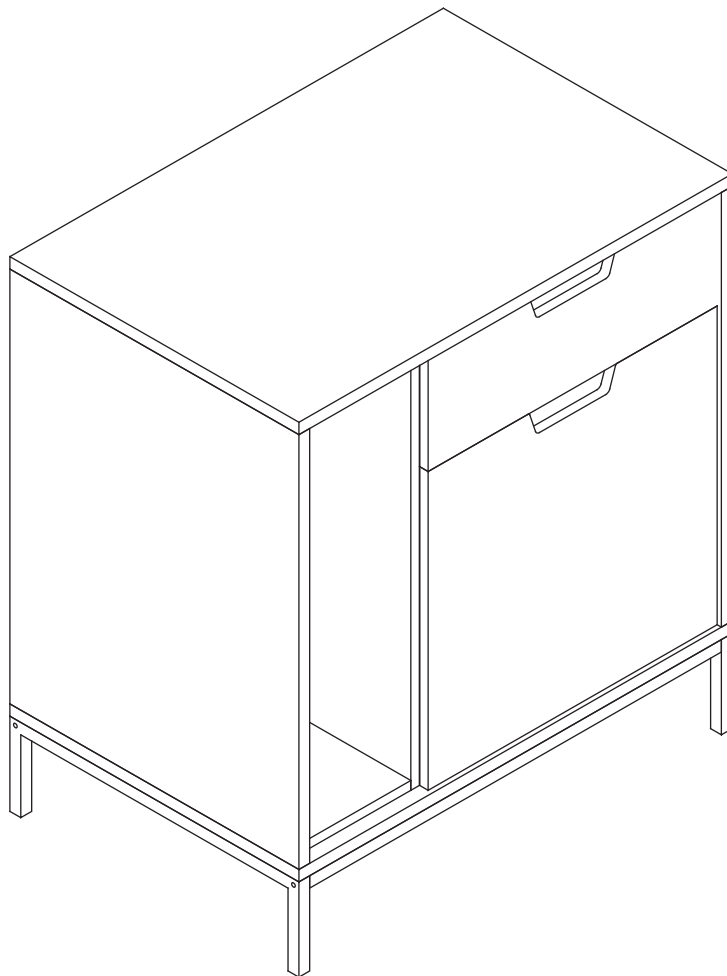


Product Refs-HM-SB001-001

Imported By: Forward Industries, 33401. U.S.A


Issue 1 -14/12/20

Safety and Care Advice

1. The maximum weight that can be placed on this product is 110lbs.
2. This product must not be used as a seat.
3. Check carefully to ensure correct and complete assembly before using.
4. Don't allow children to play near the product as their behaviour is unpredictable. The manufacturer is not responsible for loss, injury, or damage due to improper actions or use.
5. Do not use corrosive or abrasive materials near the product. Please ensure that the cleaner used will not pollute the environment.
6. Cleaning should not be attempted by children without supervision.
7. Please make sure there are no hazard sources in your operating environment. e.g., do not leave tools around. Always be careful to dispose of the packaging materials in order to avoid any possible danger, e.g. plastic bags may lead to choking hazard to children.
8. We recommend you keep the original packaging of the item in case of the need for return or future transportation.
9. Do not use outdoors. **SAVE THESE INSTRUCTIONS.** For Household use only.

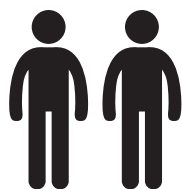


2 PERSON ASSEMBLY

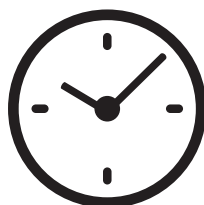


**APPROXIMATE 1 HOUR
ASSEMBLY TIME**

Main Components


Please check you have all the parts listed below

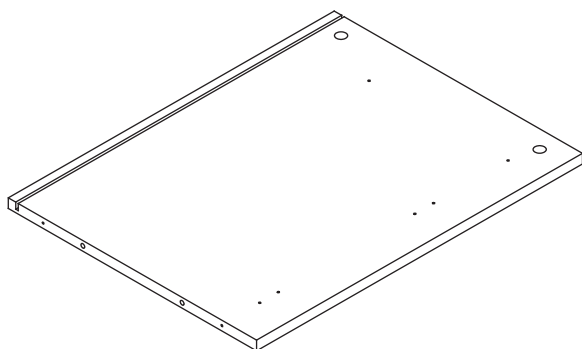


1 Side Panel (Right) Qty 1
(20.62×15.74×0.59")

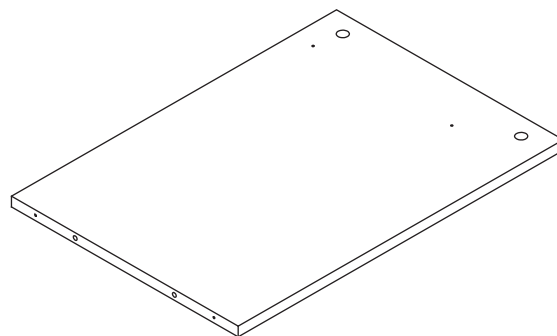


2 Divider Qty 1
(20.62×14.4×0.59")

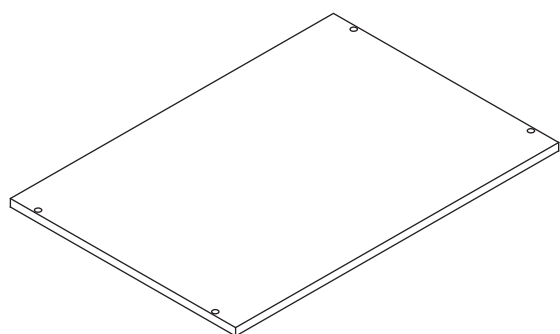


3 Storage Cabinet Side Panel Qty 2
(20.62×14.4×0.47")

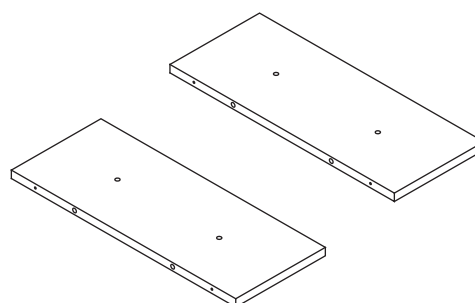

4 Storage Cabinet Base/Top Qty 2
(5.7×14.4×0.47")

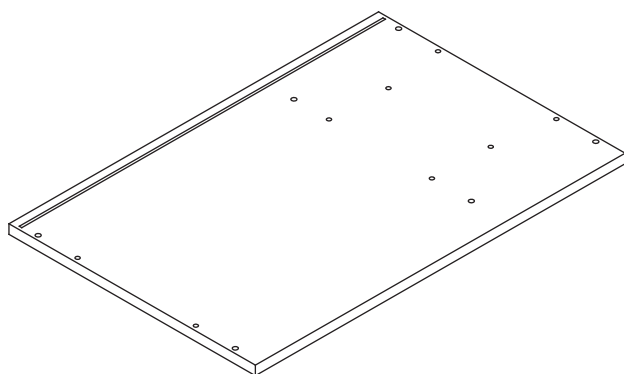


5 Top Panel Qty 1
(23.62×15.74×0.59")

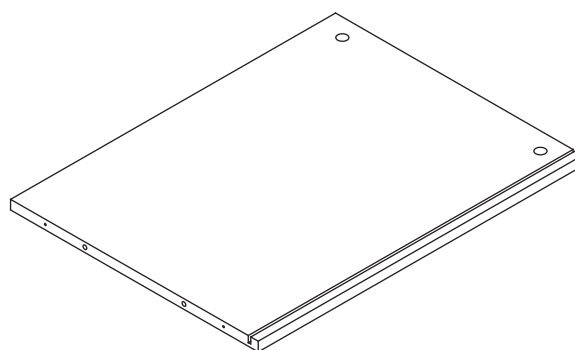


6 Side Panel (Left) Qty 1
(20.62×15.74×0.59")

Main Components


Please check you have all the parts listed below

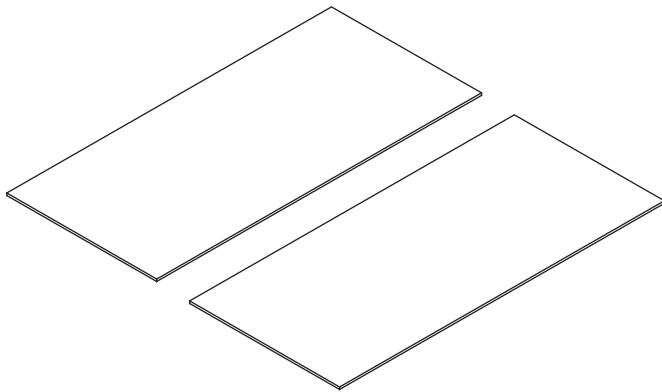


7 Back Panel Qty 2
(22.44×10.43×0.11")

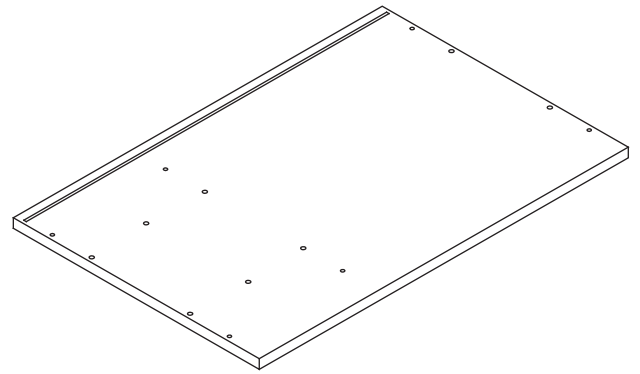


8 Base Panel Qty 1
(23.62×15.74×0.59")

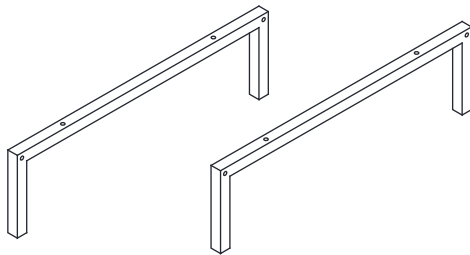


9 Base Frame Legs Qty 2
(15.55×3.93×0.78")

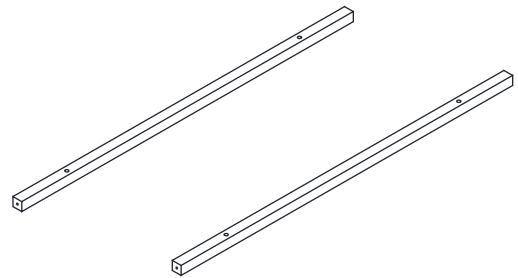

10 Base Frame Stretcher Qty 2
(21.85×0.78×0.78")

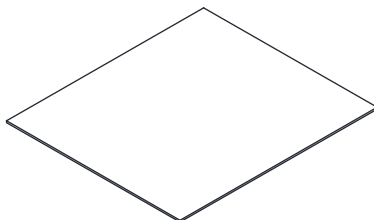


11 Drawer Base Qty 1
(14.17×11.73×0.11")

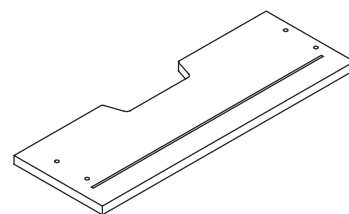


12 Drawer Front Qty 1
(15.55×5.51×0.59")

Main Components


Please check you have all the parts listed below

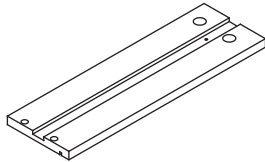


13 Drawer Side (Left) Qty 1
(11.81x3.93x0.47")

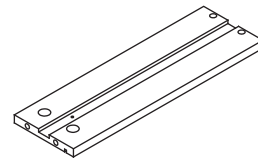


14 Drawer Side (Right) Qty 1
(11.81x3.93x0.47")

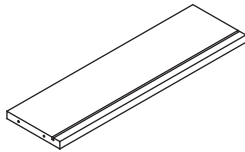

15 Drawer Back Panel Qty 1
(13.77x3.93x0.47")

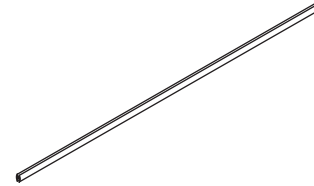

16 Sealing Strip Qty 1
(22.16x0.39")


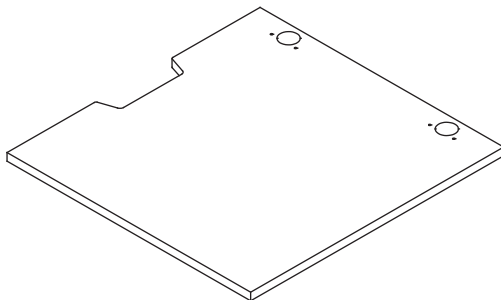

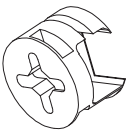

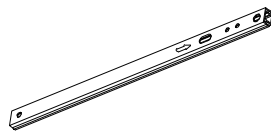


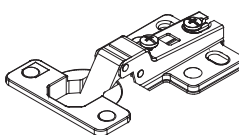

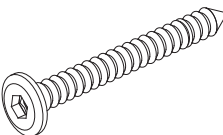
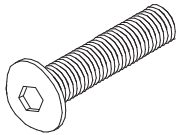


17 Door Qty 1
(15.55x14.76x0.59")

Fixings, Fittings And Tools

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<p>A</p>  <p>Large Wooden Dowel Qty 20 (M6×1.18")</p>	<p>B</p>  <p>Cam Dowel Qty 10 (M5×1.37")</p>	<p>C</p>  <p>Large Cam Nut Qty 6 (M15×0.47")</p>
<p>D</p>  <p>Small Cam Nut Qty 4 (M15×0.37")</p>	<p>E</p>  <p>Small Wooden Dowel Qty 4 (M6×0.59")</p>	<p>F</p>  <p>Drawer Runner Qty 2 (11.81")</p>
<p>G</p>  <p>Screw Qty 4 (M3×0.39")</p>	<p>H</p>  <p>Screw Qty 2 (M4×0.39")</p>	<p>I</p>  <p>Hinge Qty 2 (2.5")</p>
<p>J</p>  <p>Screw Qty 12 (M3.5×0.55")</p>	<p>K</p>  <p>Screw Qty 6 (M5×1.57")</p>	<p>L</p>  <p>Screw Qty 4 (M6×1.37")</p>





If you have questions regarding the operation of your purchase, or in the unlikely event you need to return the unit because it is faulty or is no longer wanted, please contact our product returns department at customerservice@forwardindustries.com, or 561-465-0030, Option 0.

Address: Forward Industries, 105 South Narcissus Avenue Suite 412, West Palm Beach, FL 33401

Fixings, Fittings And Tools

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

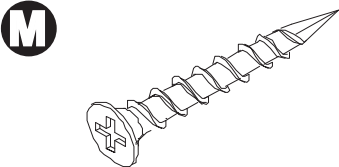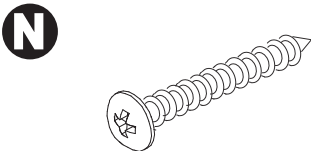
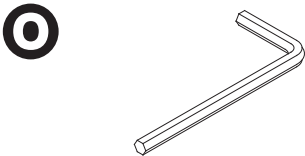
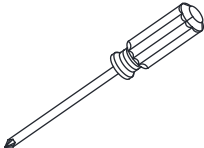
<div><p>Wood Screw Qty 12 (M4×1.18")</p></div>	<div><p>Screw Qty 8 (M4×1.18")</p></div>	<div><p>Allen Key Qty 1 (0.15×0.9×2.79")</p></div>
<div><p>Screwdriver (Not supplied)</p></div>		

If you have questions regarding the operation of your purchase, or in the unlikely event you need to return the unit because it is faulty or is no longer wanted, please contact our product returns department at customerservice@forwardindustries.com, or 561-465-0030, Option 0.
Address: Forward Industries, 105 South Narcissus Avenue Suite 412, West Palm Beach, FL 33401


Assembly Steps

STEP 1

Assemble drawer runners **F** to right side panel **1** using fixings **G**.

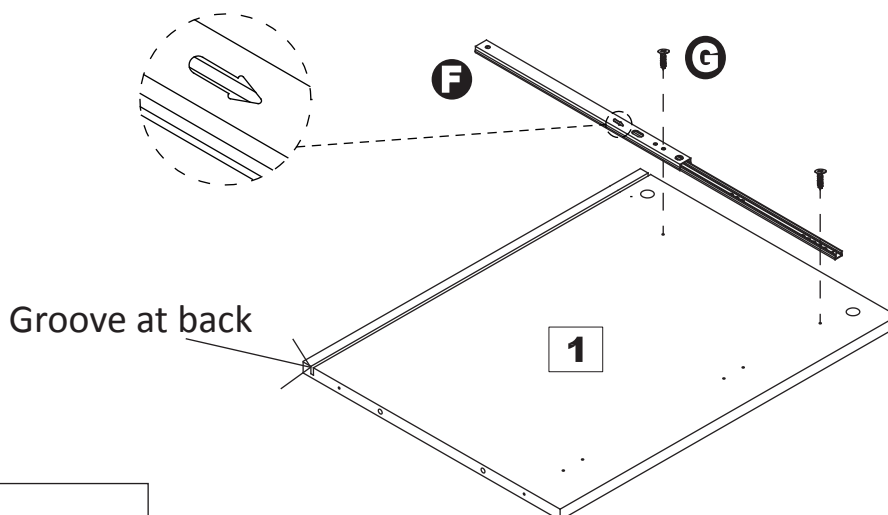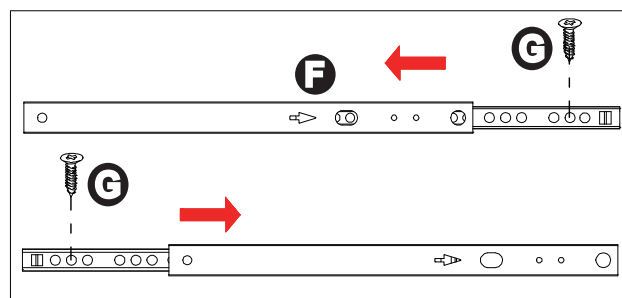




Drawer Runner Qty 1




Screw Qty 2

STEP 2

Assemble drawer runners **F** to divider **2** using fixings **G**.

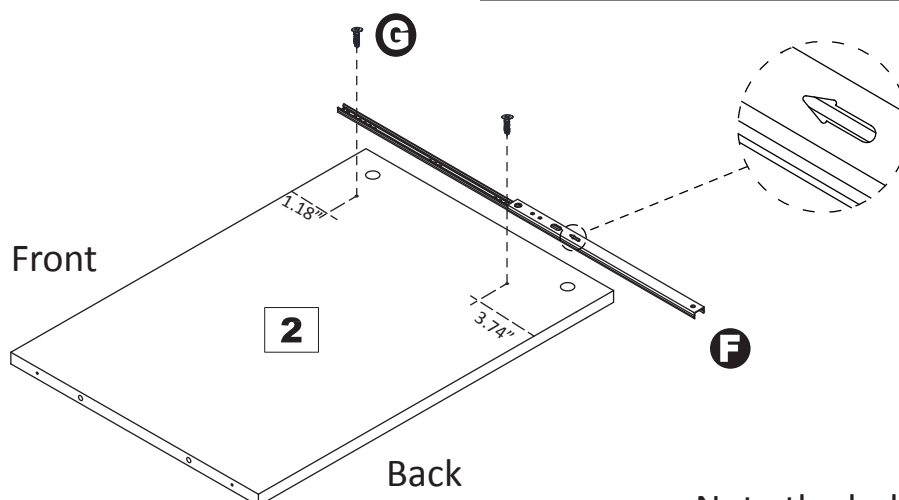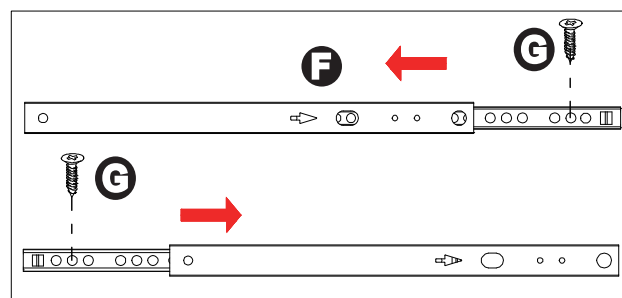

Drawer Runner Qty 1



Screw Qty 2



Note the hole positions marked on the drawing to identify front and back of Divider Ref **2**.

Assembly Steps

STEP 3

Screw cam dowels **B** into the underside of top panel **5** and the inside of drawer fronts **12**.



Fit wood dowels **A** and **E** as shown.

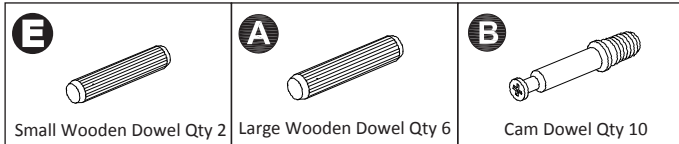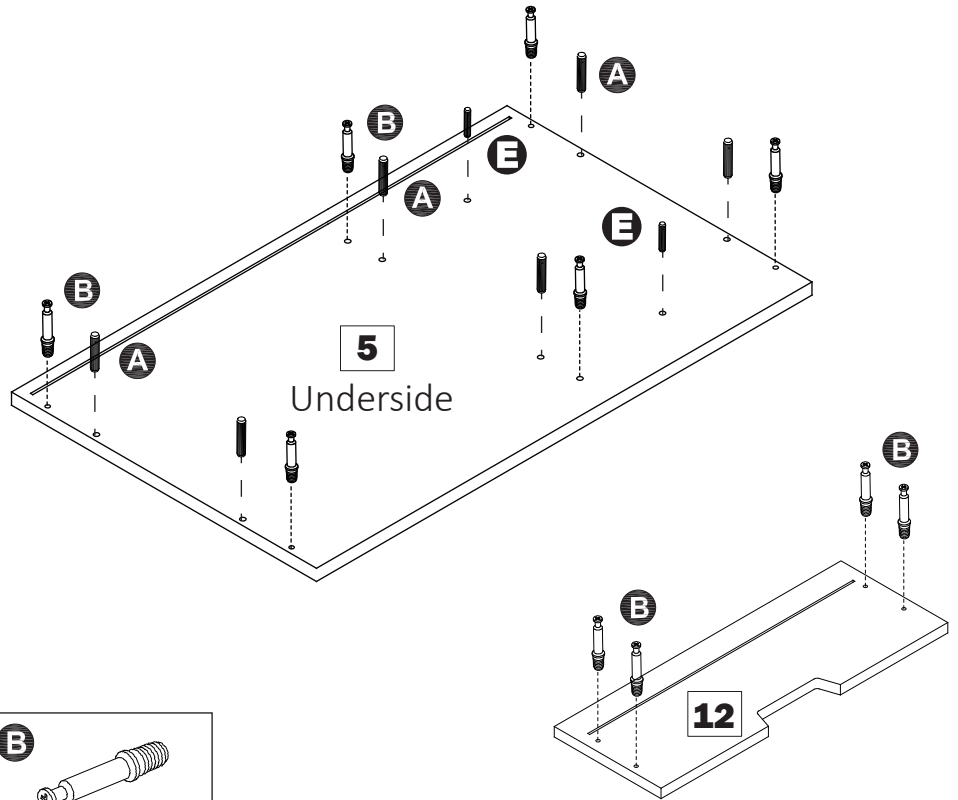

STEP 4

With help, assemble storage cabinet panels **3** and **4** together using wood dowels **A** and screws **M** as shown.

Two people required

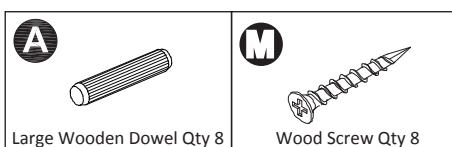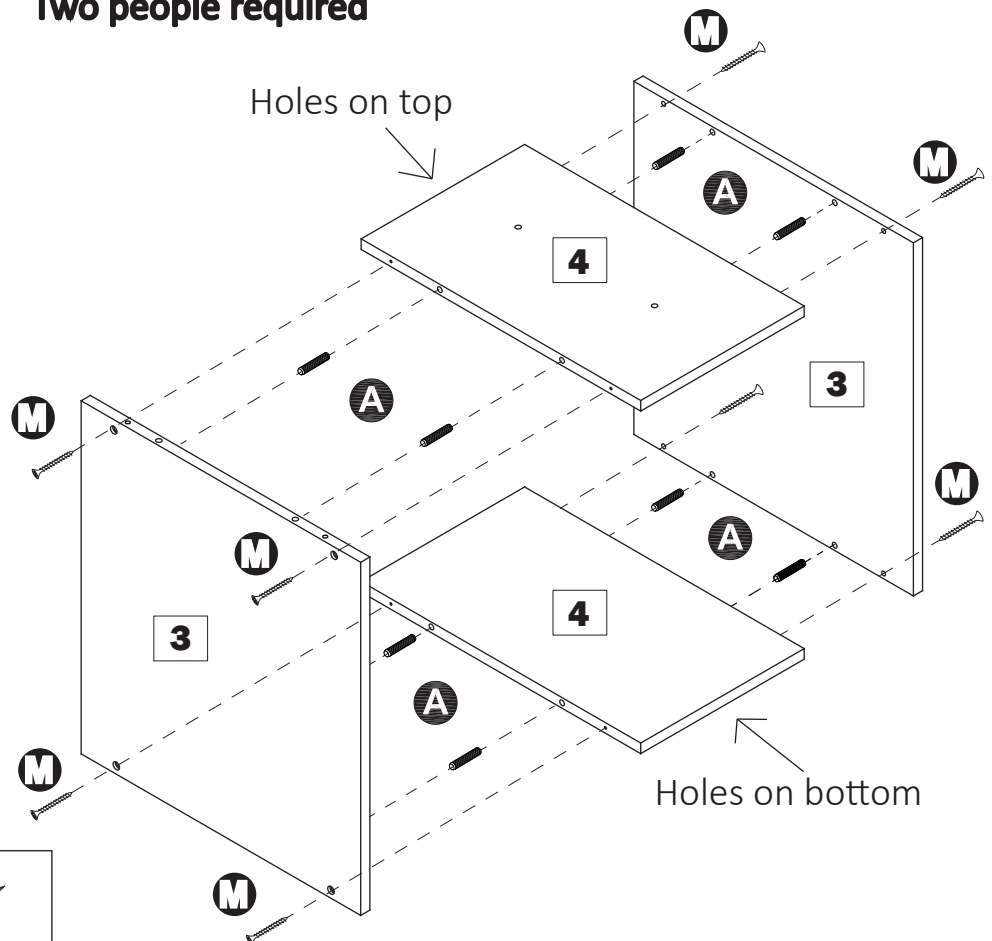


Assembly Steps

STEP 5

Locate right and left side panels **1** and **6**, plus divider **2** onto the underside of top **5**.

Secure using large cam nuts **G**.

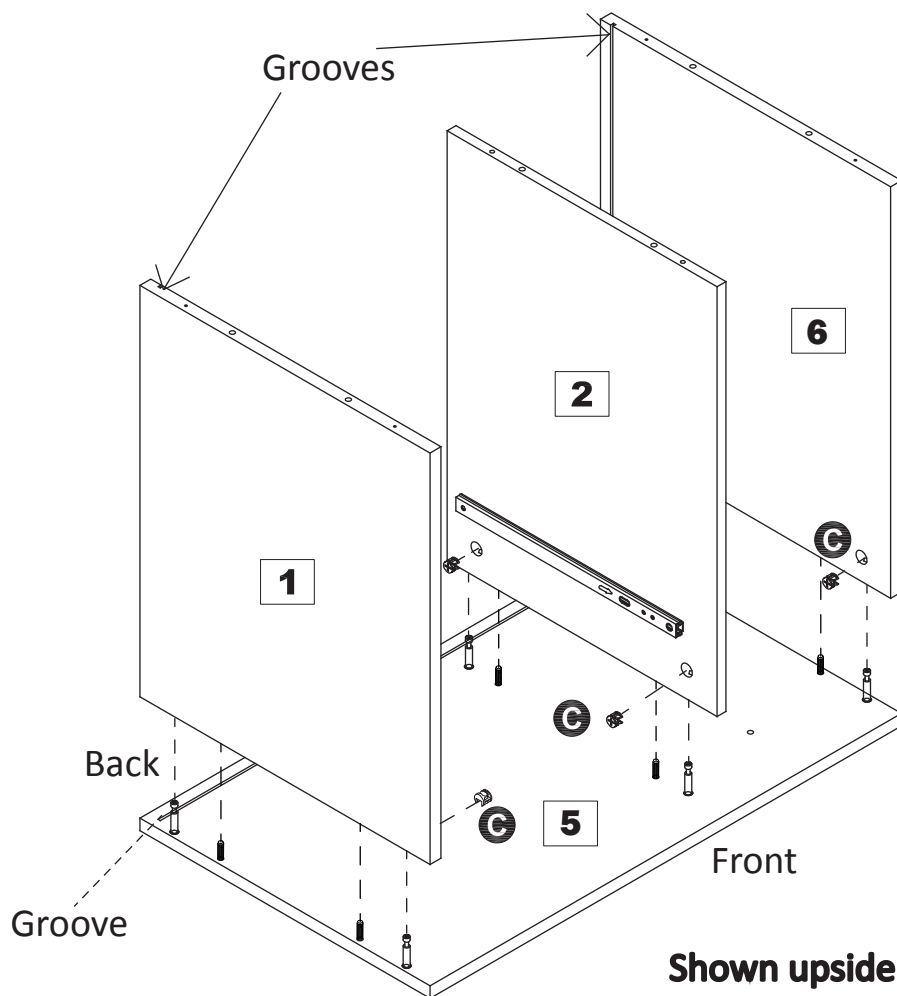


Large Cam Nut Qty 6

STEP 6

With help, carefully slide storage cabinet into position and ensure wood dowels are correctly aligned to engage.

Two people required

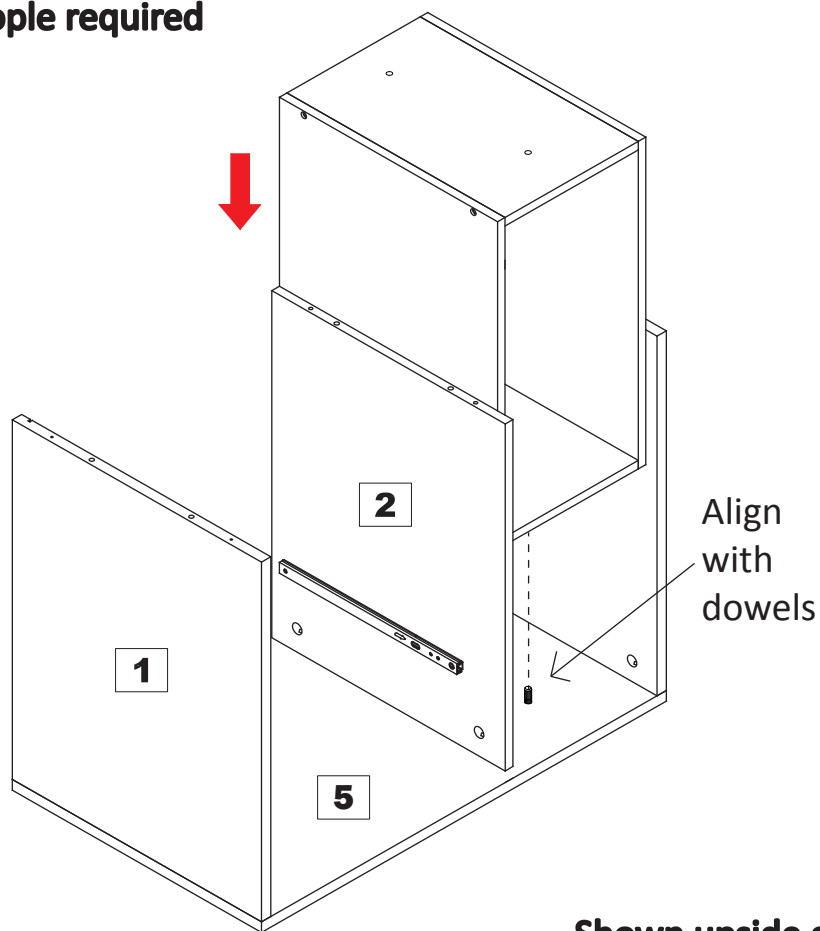


Assembly Steps

STEP 7

Slide back panels **7** into the grooves at the back of the unit.


Ensure sealing strip **16** is located in between the back panels.

Fit wood dowels **A** and **E** as shown.

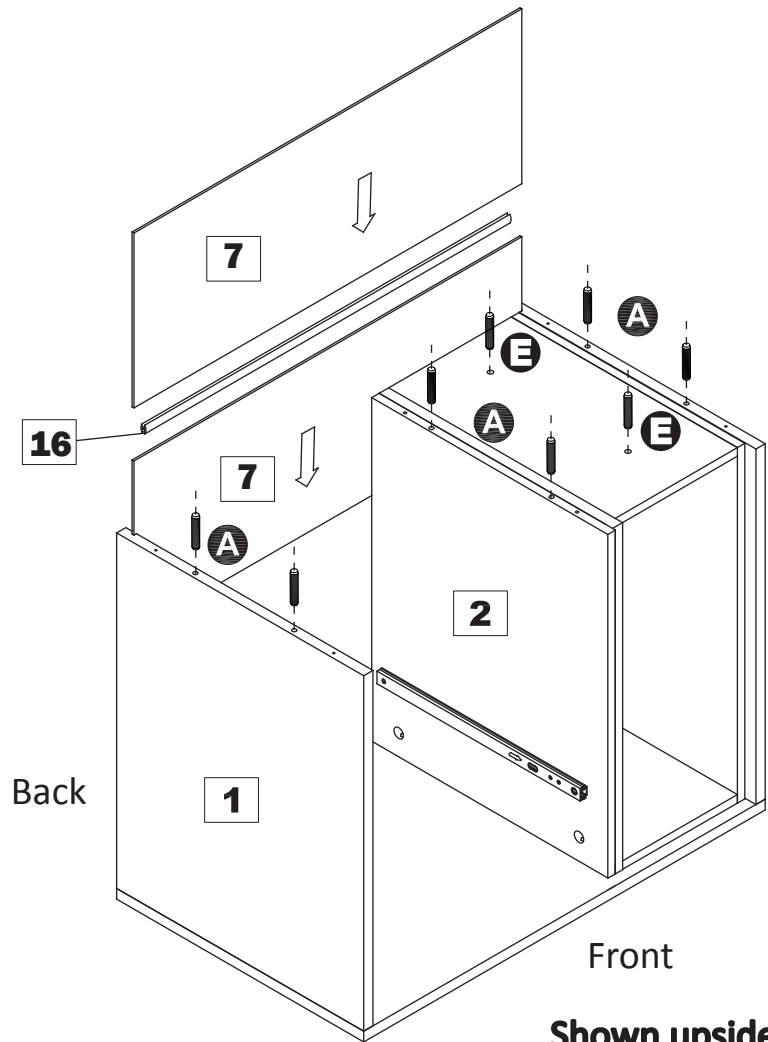


Shown upside down

E



Small Wooden Dowel Qty 2

A




Large Wooden Dowel Qty 6

STEP 8

Locate base panel **8** into position.

Secure using screws **K**.

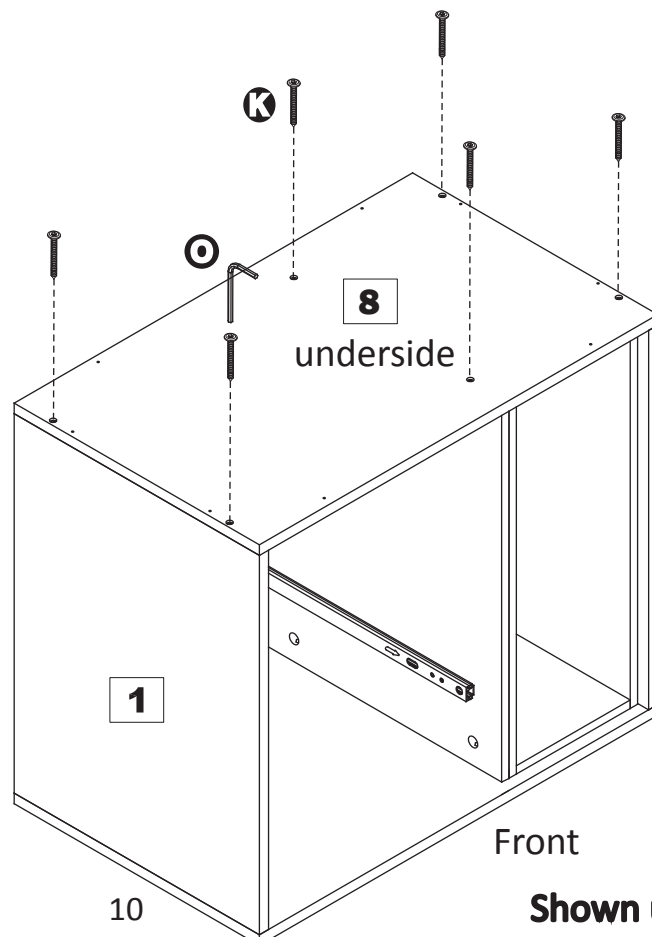

Front


Shown upside down

K



Screw Qty 6

O





Allen Key Qty 1

Assembly Steps

STEP 9

Fit hinges **I** to door **17** using screws **J**.

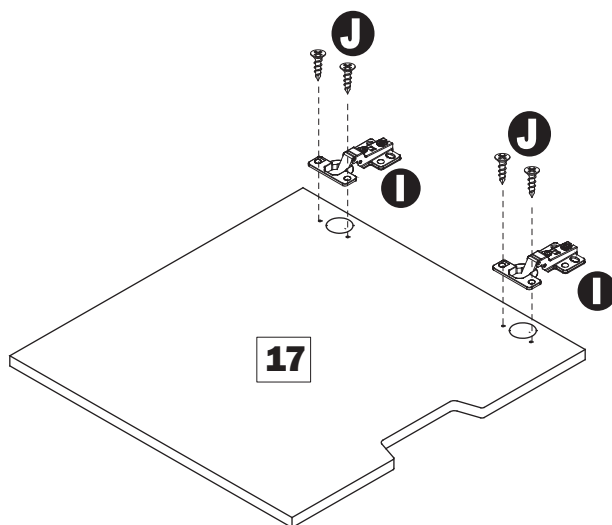


Hinge Qty 2



Screw Qty 4

STEP 10

Assemble door **17** using screw **J**.

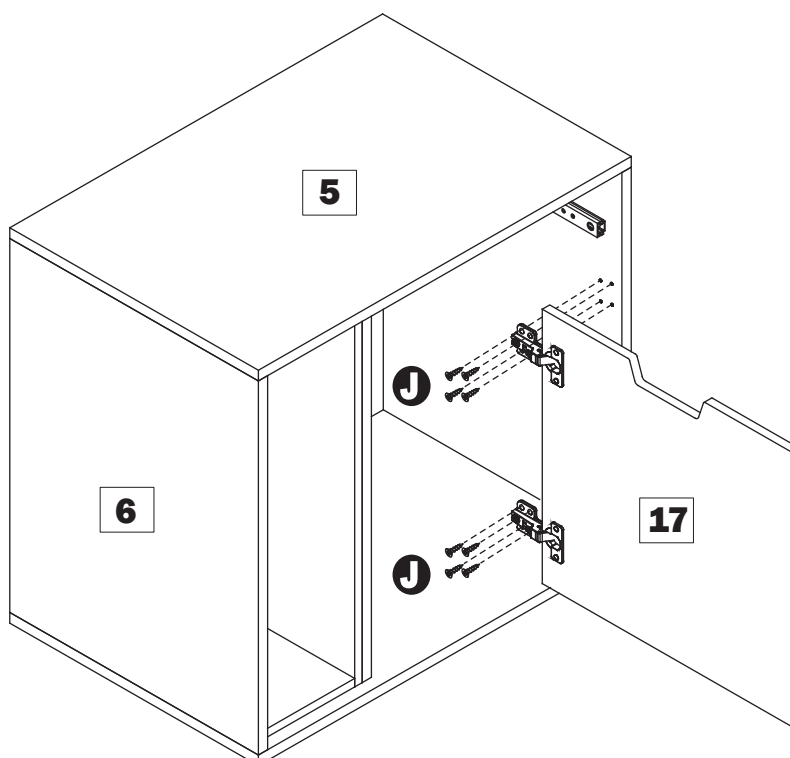


Screw Qty 8

Assembly Steps

STEP 11

Assemble metal base frame legs **9** and stretchers **10** together using screws **L**.

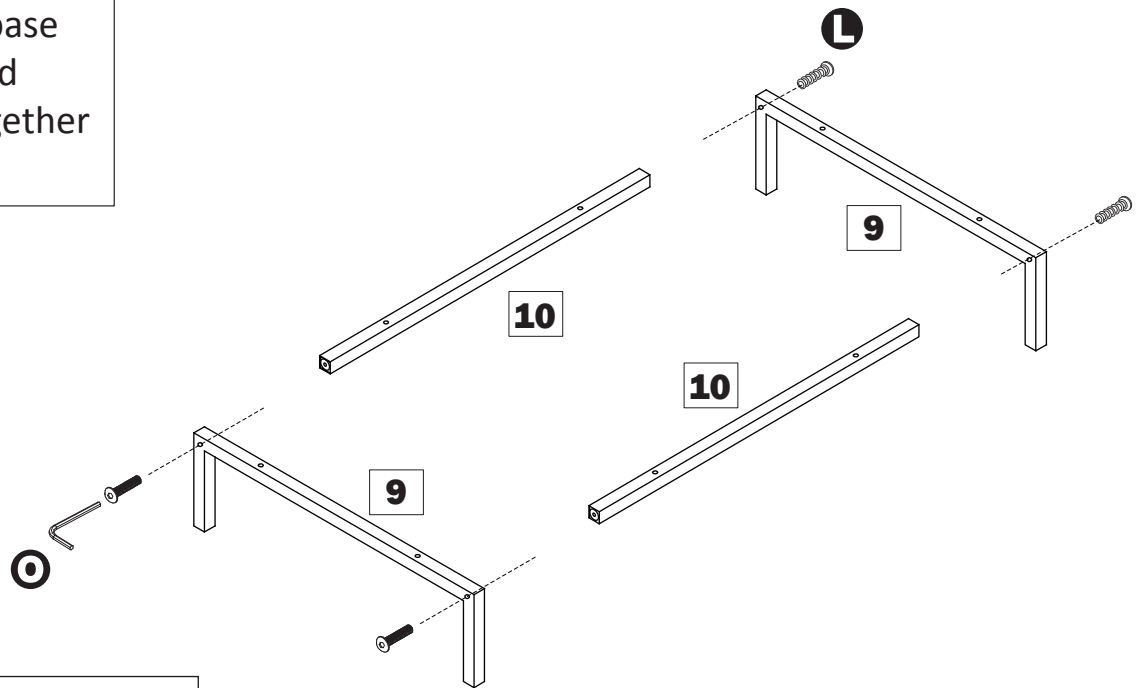


L



Screw Qty 4

O




Allen Key Qty 1


STEP 12

Locate base frame into position.

Secure using screws **N**.

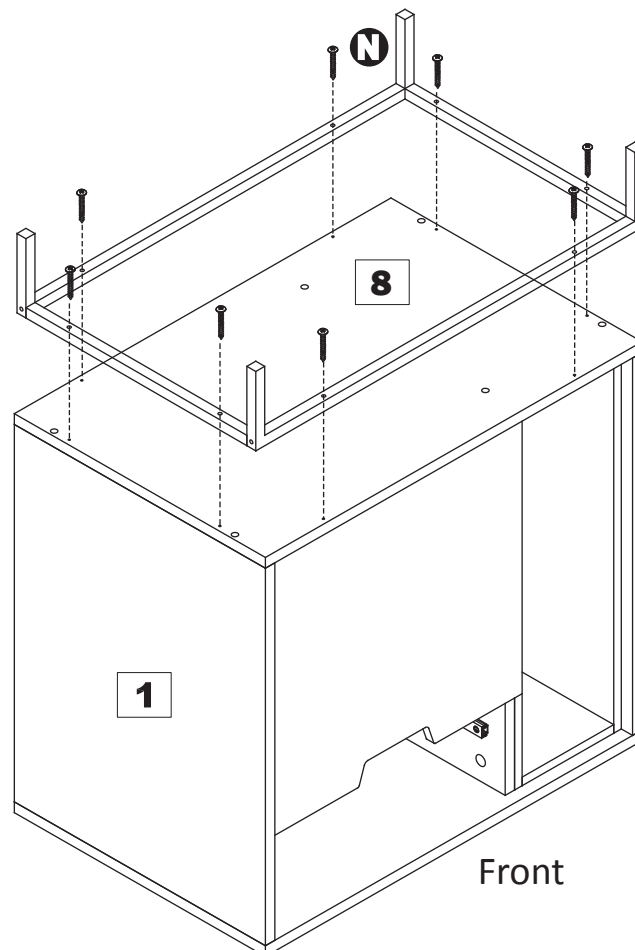

N




Screw Qty 8


Assembly Steps

STEP 13


Assemble drawer back panel **15** and side panels **13** and **14** using screws **M**.

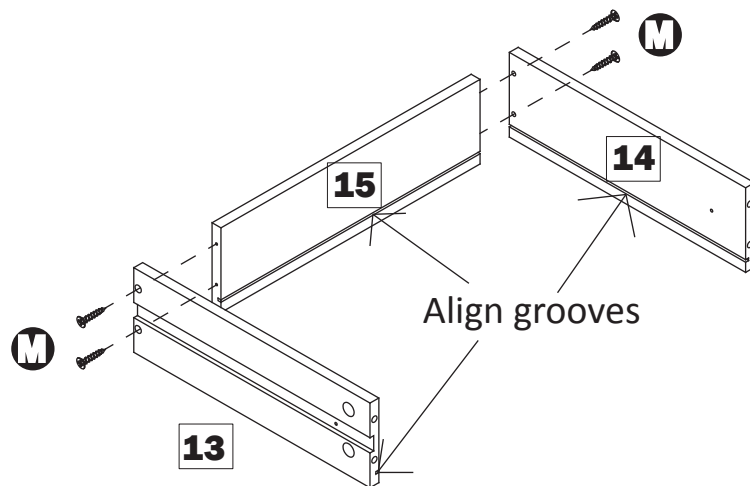

Slide drawer base **11** into grooves.

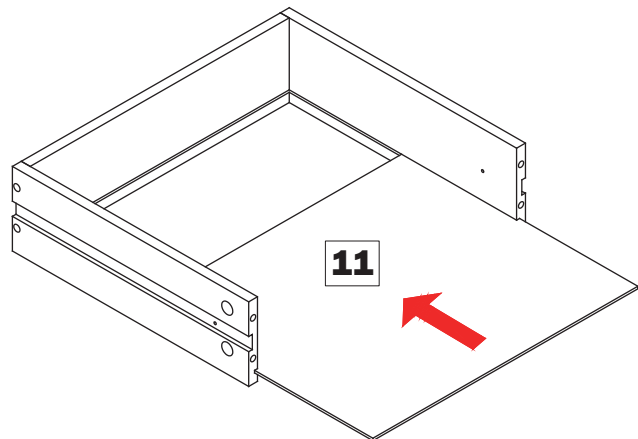

Assemble drawer front **12**. Secure using small cam nuts **D**.

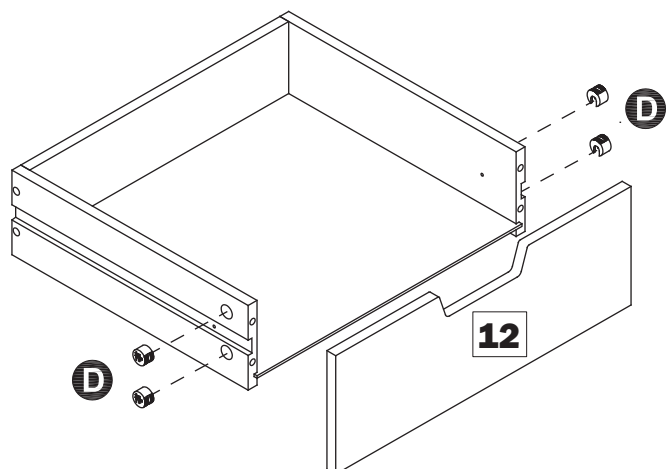

M



Wood Screw Qty 4

D



Small Cam Nut Qty 4


Assembly Steps

STEP 14

With help, stand the unit upright.


Engage the drawer runners.

Two people required

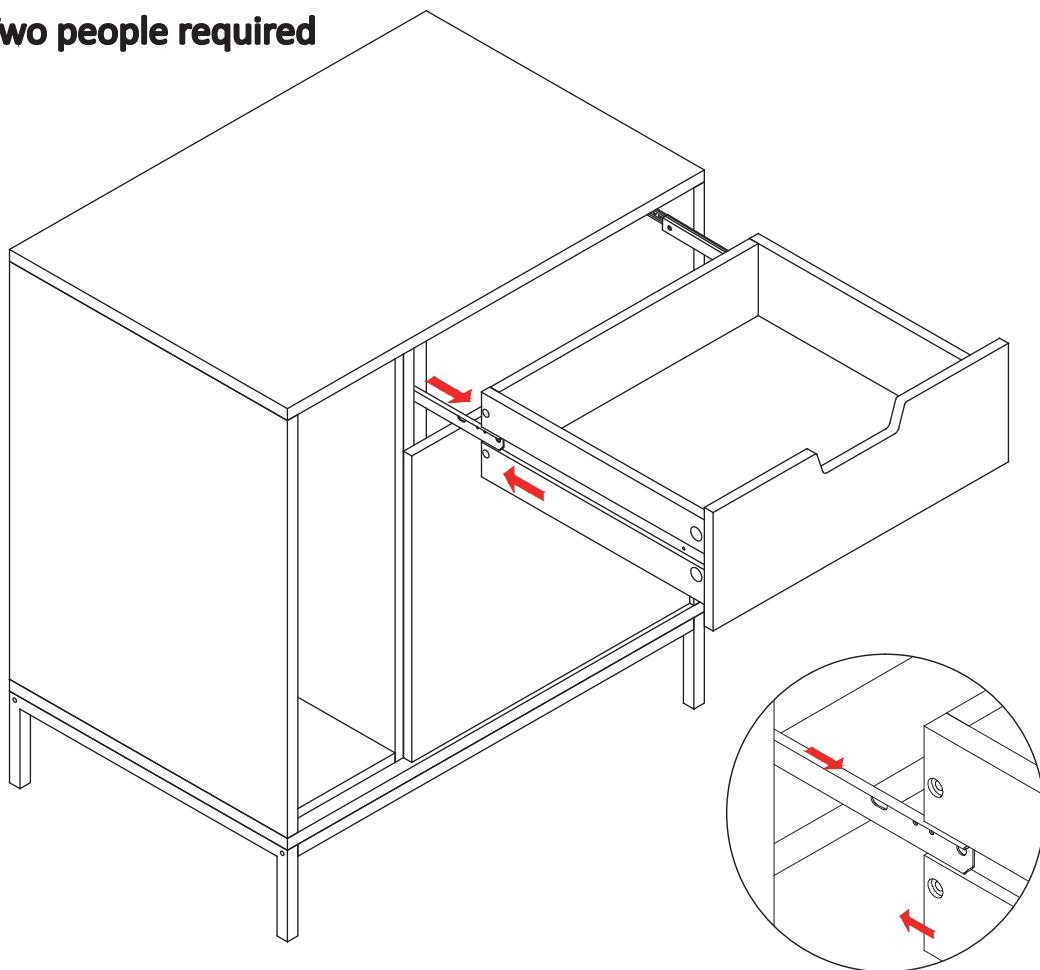

STEP 15

Secure drawer body to runners using screws **H**.

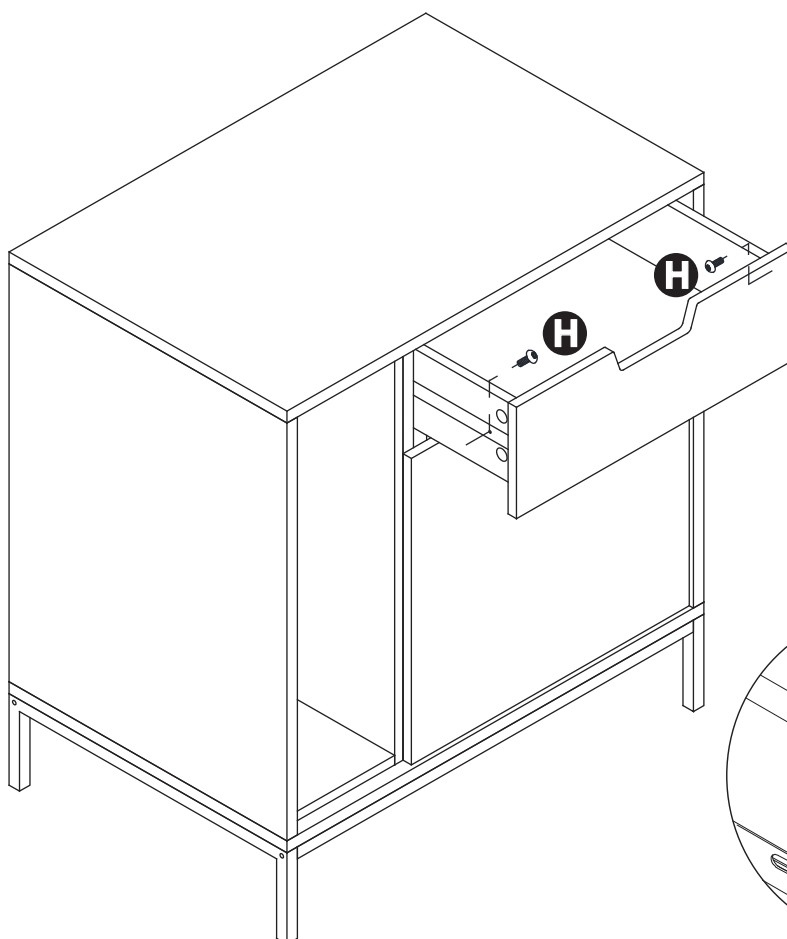

H




Screw Qty 2

Assembly Steps

STEP 16

Assembly is complete.

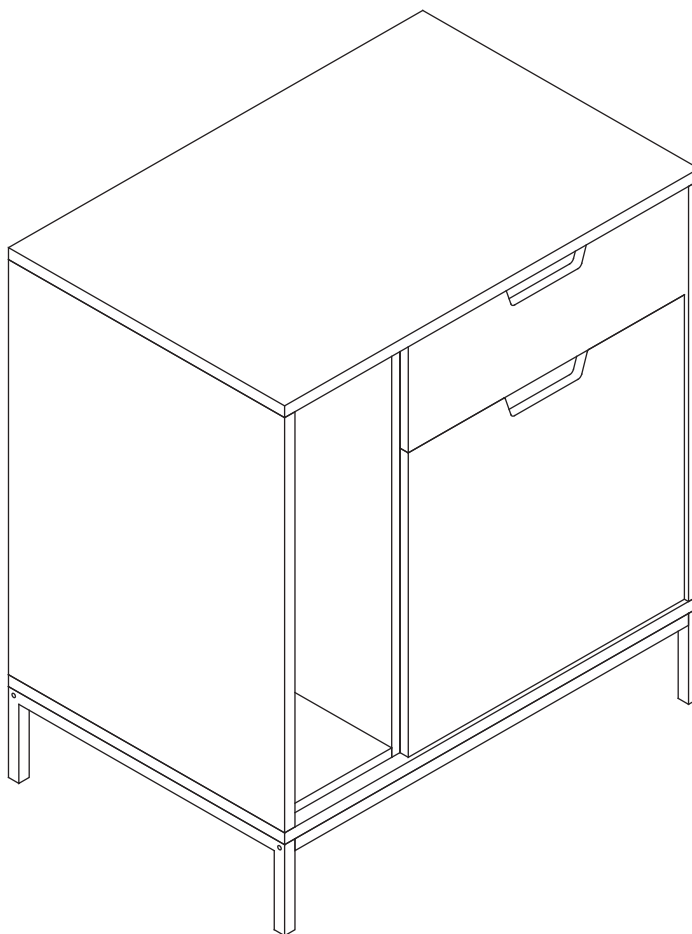

After Sales Support / Product Returns

If you have questions regarding the operation of your purchase, or in the unlikely event you need to return the unit because it is faulty or is no longer wanted, please contact our product returns department at **customerservice@forwardindustries.com, or 561-465-0030, Option 0.**

Address: **Forward Industries, 105 South Narcissus Avenue Suite 412, West Palm Beach, FL 33401**