

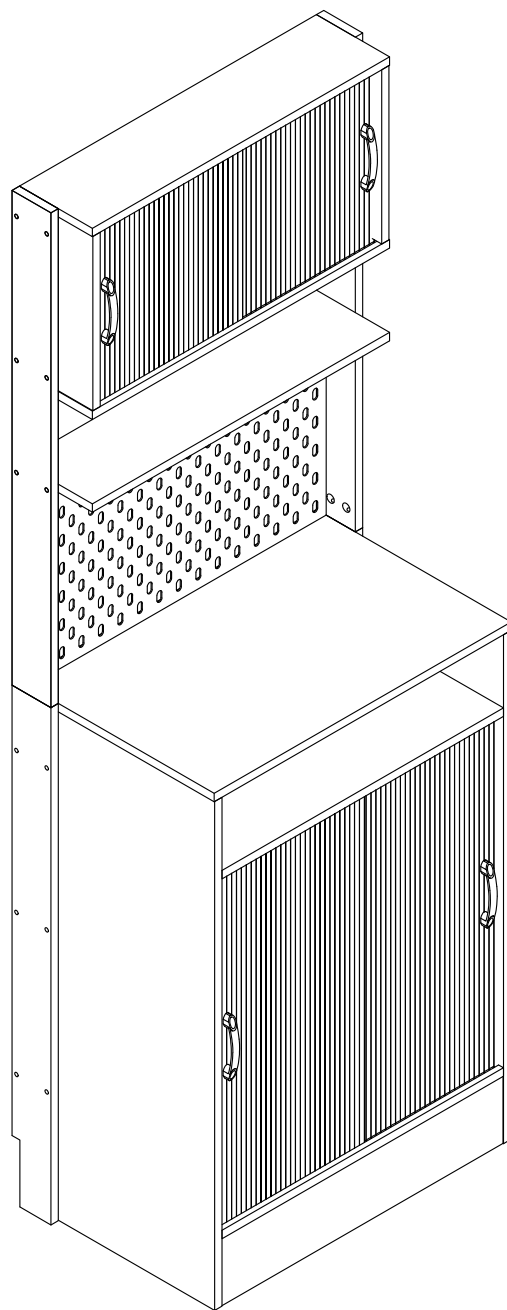
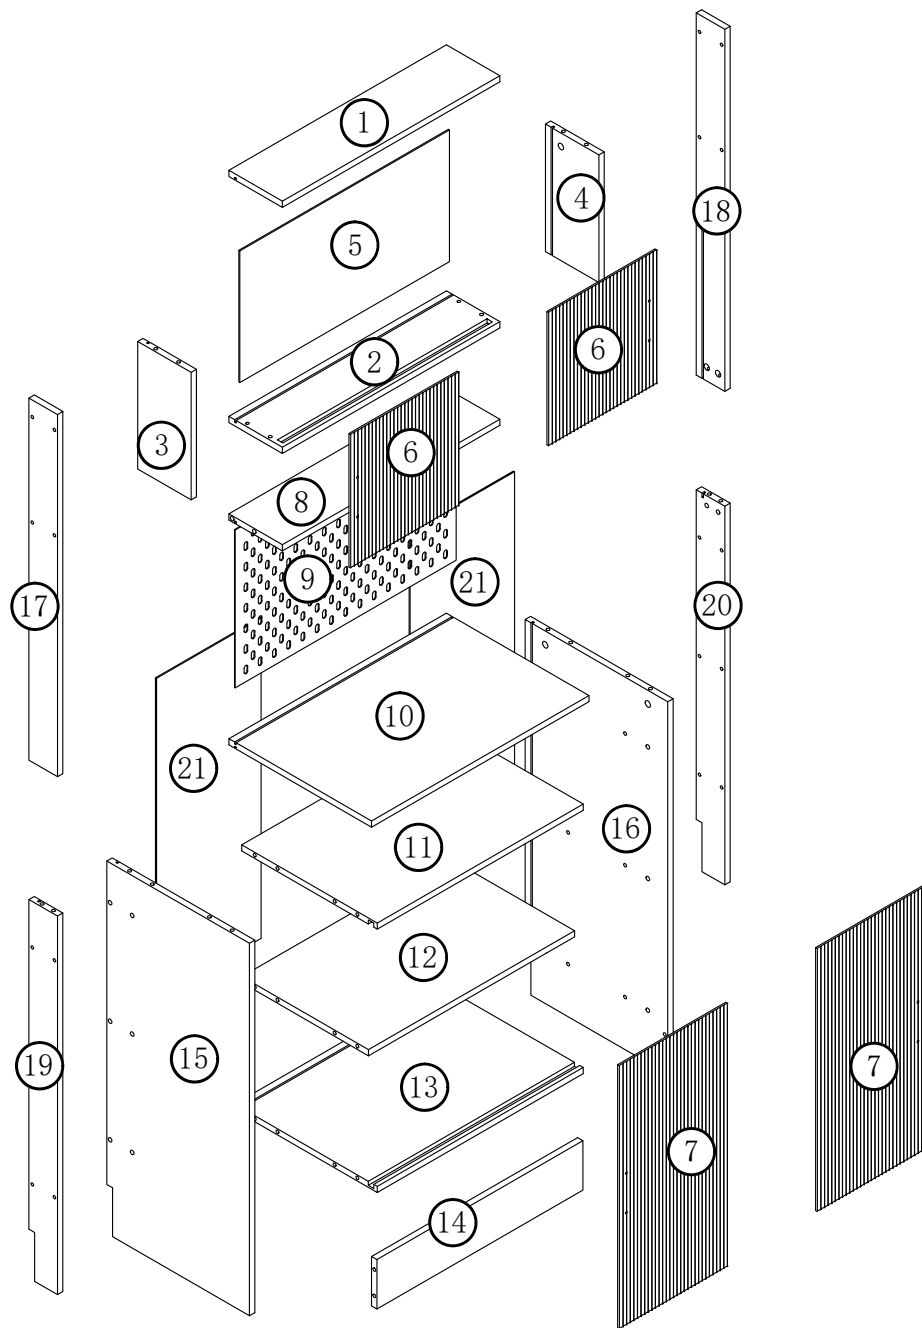
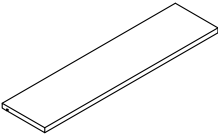
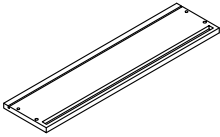


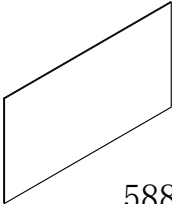


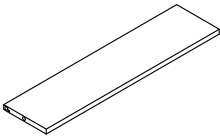
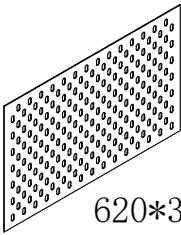
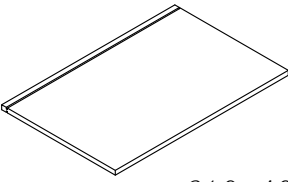
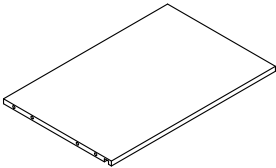
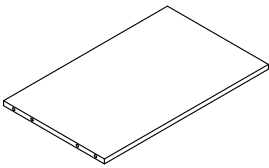
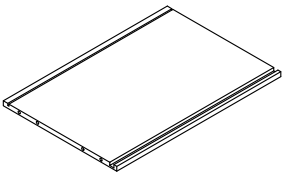
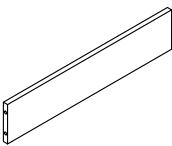
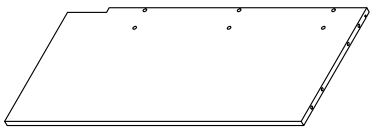
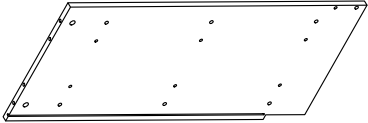











O 6*60 4PCS	P 8*40 2PCS	Q 4*50 2PCS				
H 40PCS	I 96 4PCS	J 4*8 8PCS	K 6*25 24PCS	L 768 1PC	M 2PCS	N 10*11 4PCS
A 20PCS	B 24PCS	C 8*40 22PCS	D 7*50 2PCS	E 3.5*14 2PCS	F 10PCS	G 3*12 10PCS

1  610*150 (mm) 24. 02*5. 91 (inch) 1PC	2  610*150 (mm) 24. 02*5. 91 (inch) 1PC	3  310*150 (mm) 12. 2*5. 91 (inch) 1PC
4  310*150 (mm) 12. 2*5. 91 (inch) 1PC	5  588*320 (mm) 23. 15*12. 6 (inch) 1PC	6  324*303 (mm) 12. 76*11. 93 (inch) 2PCS
7  639*303 (mm) 25. 16*11. 93 (inch) 2PCS	8  610*150 (mm) 24. 02*5. 91 (inch) 1PC	9  620*383. 5 (mm) 24. 41*15. 1 (inch) 1PC
10  610*400 (mm) 24. 02*15. 75 (inch) 1PC	11  578*380 (mm) 22. 76*14. 96 (inch) 1PC	12  578*355. 5 (mm) 22. 76*14 (inch) 1PC
13  578*400 (mm) 22. 76*15. 75 (inch) 1PC	14  578*120 (mm) 22. 76*4. 72 (inch) 1PC	15  905*400 (mm) 35. 63*15. 75 (inch) 1PC


16  905*400 (mm) 35.63*15.75 (inch) 1PC	17  880*80 (mm) 34.65*3.15 (inch) 1PC	18  880*80 (mm) 34.65*3.15 (inch) 1PC
19  920*80 (mm) 36.22*3.15 (inch) 1PC	20  920*80 (mm) 36.22*3.15 (inch) 1PC	21  778.5*293 (mm) 30.65*11.54 (inch) 2PCS

Hardware installation demonstration

NOTE:Please make sure "A"hardware tightened and can't be pulled out!

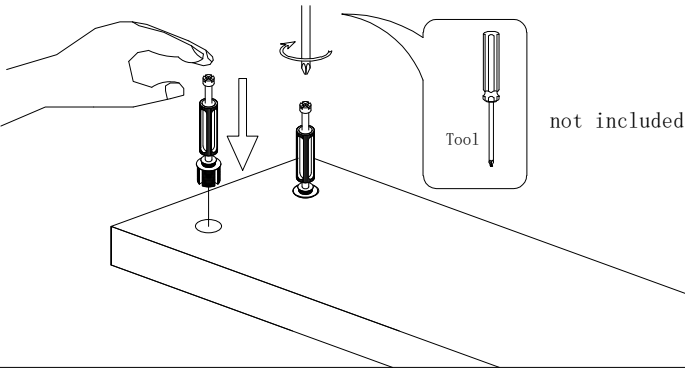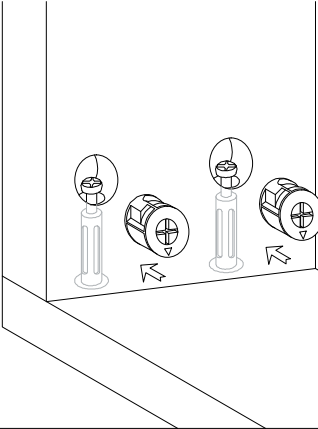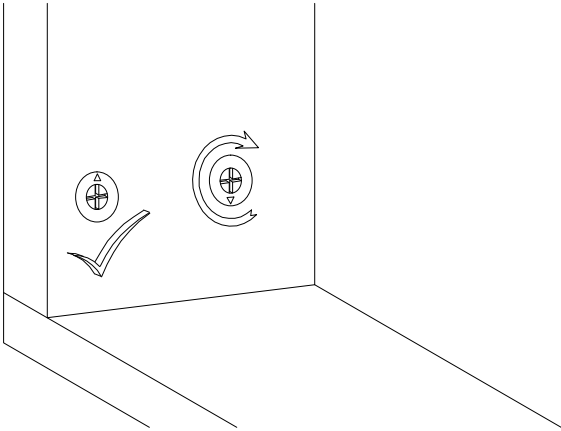I 	II 
III 	

1

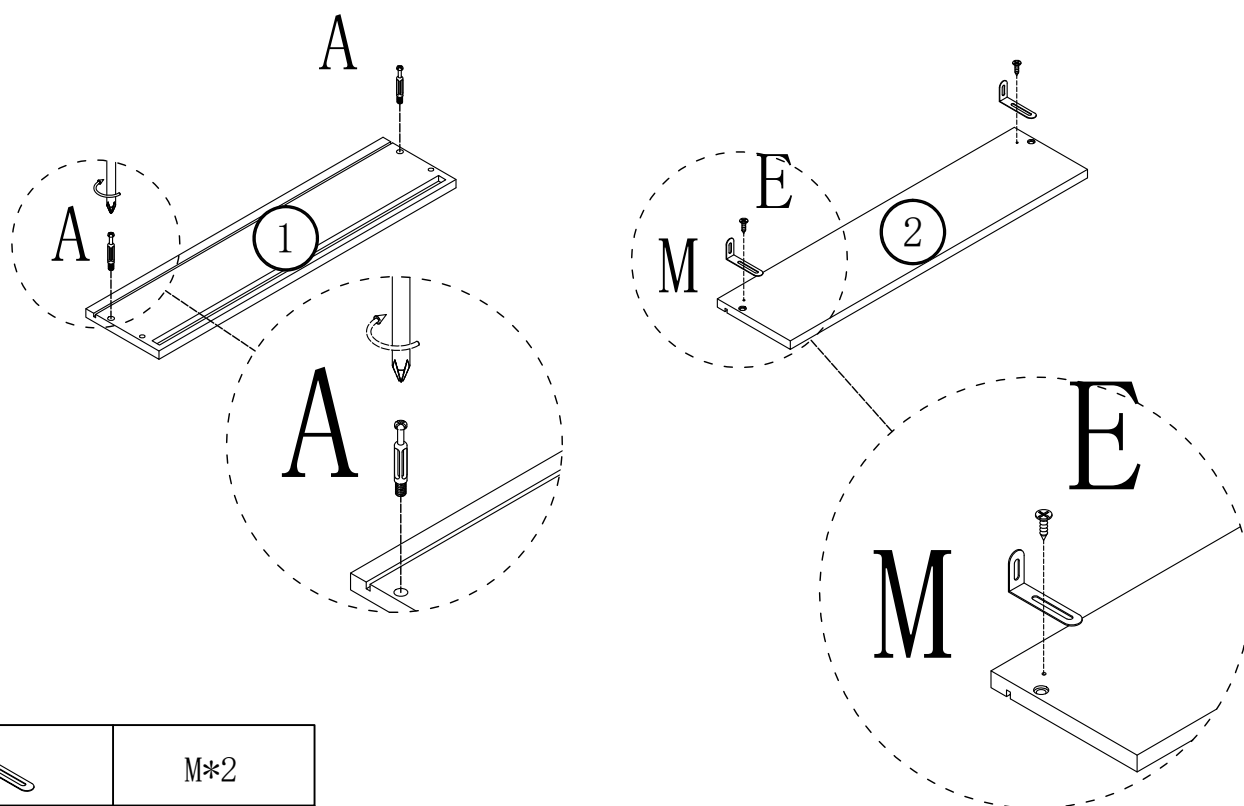


	M*2
	E*2
	A*2

Put A on board ①

Put M、E on board ②

2

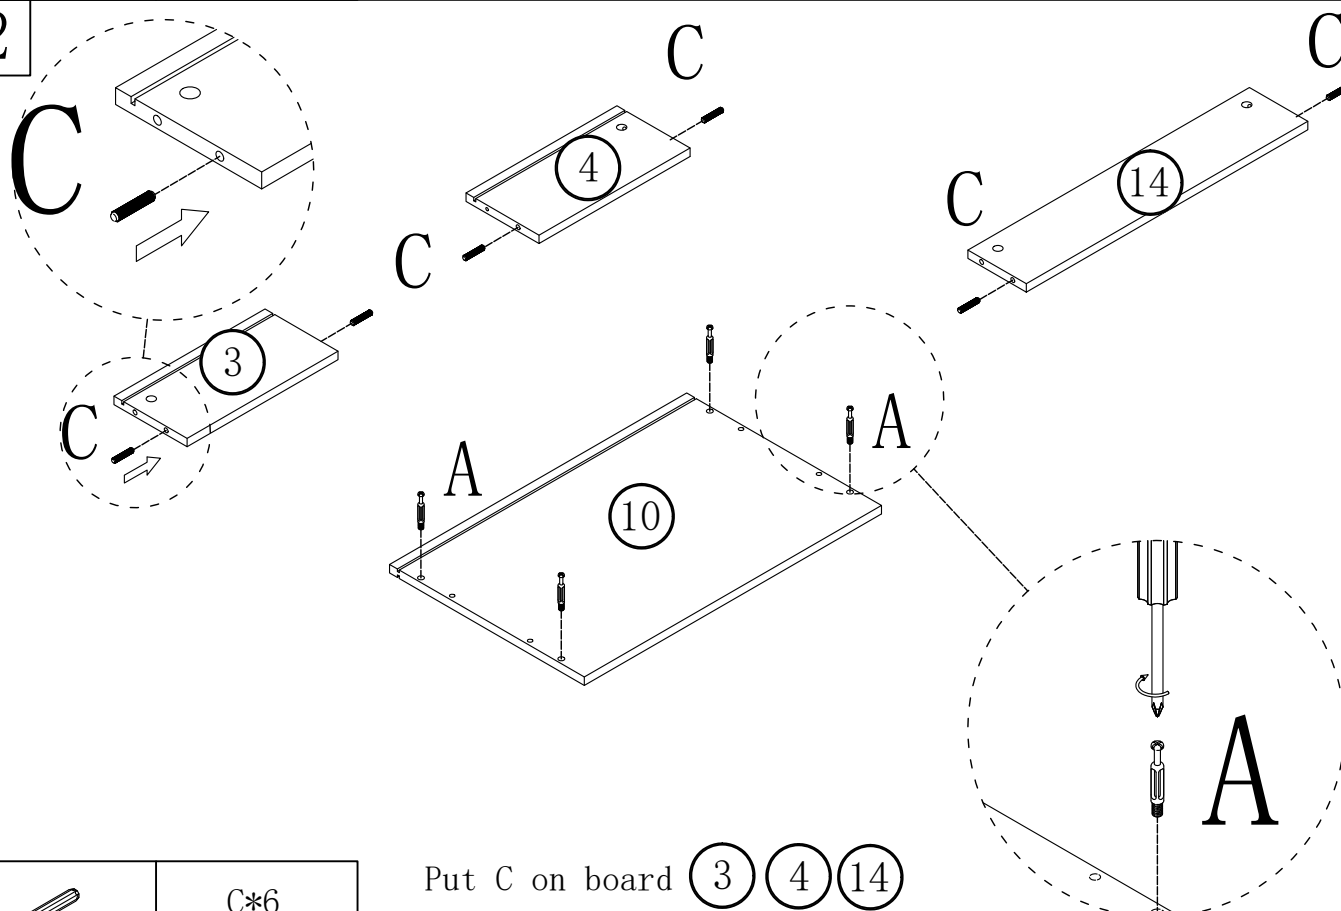


	C*6
	A*4

Put C on board ③④⑭

Put A on board ⑩


3

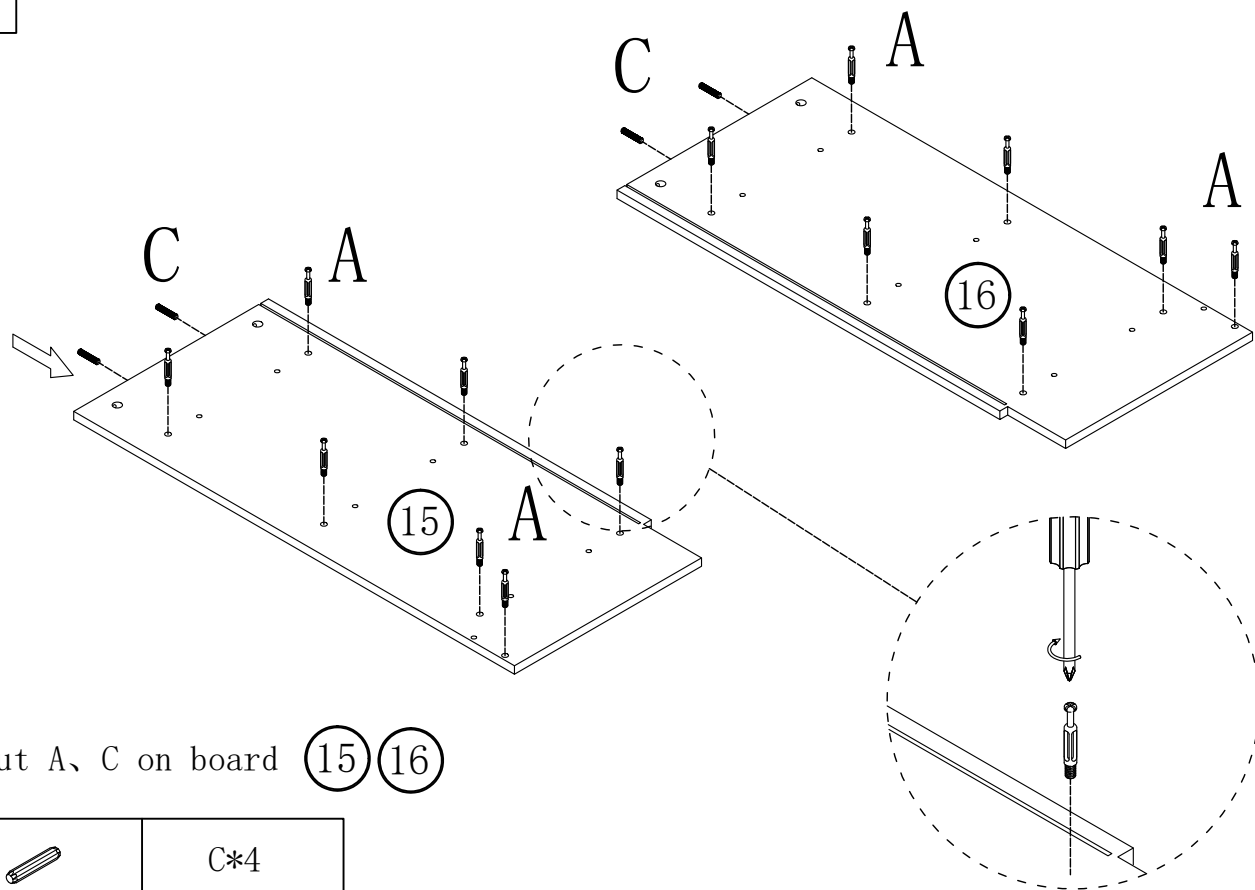

Put A, C on board (15) (16)

	C*4
	A*14


4

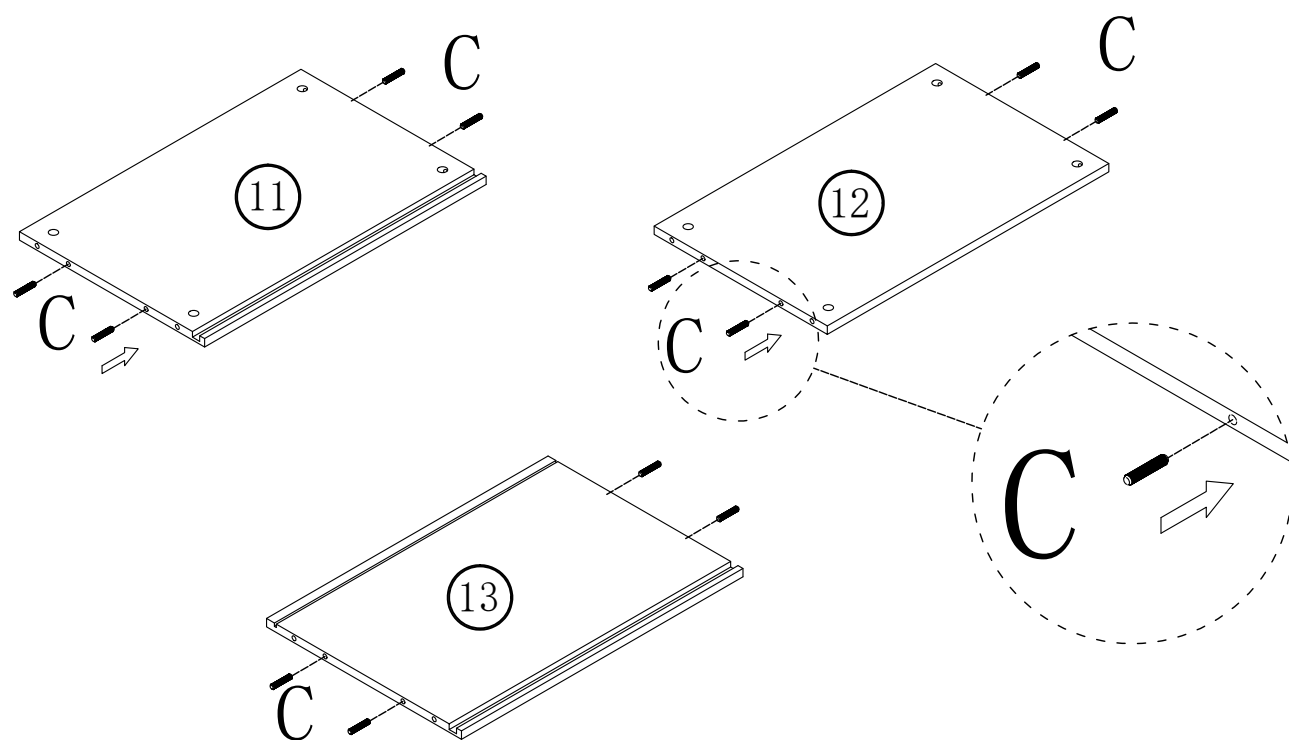


Put C on board (11) (12) (13)

	C*12
---	------

5

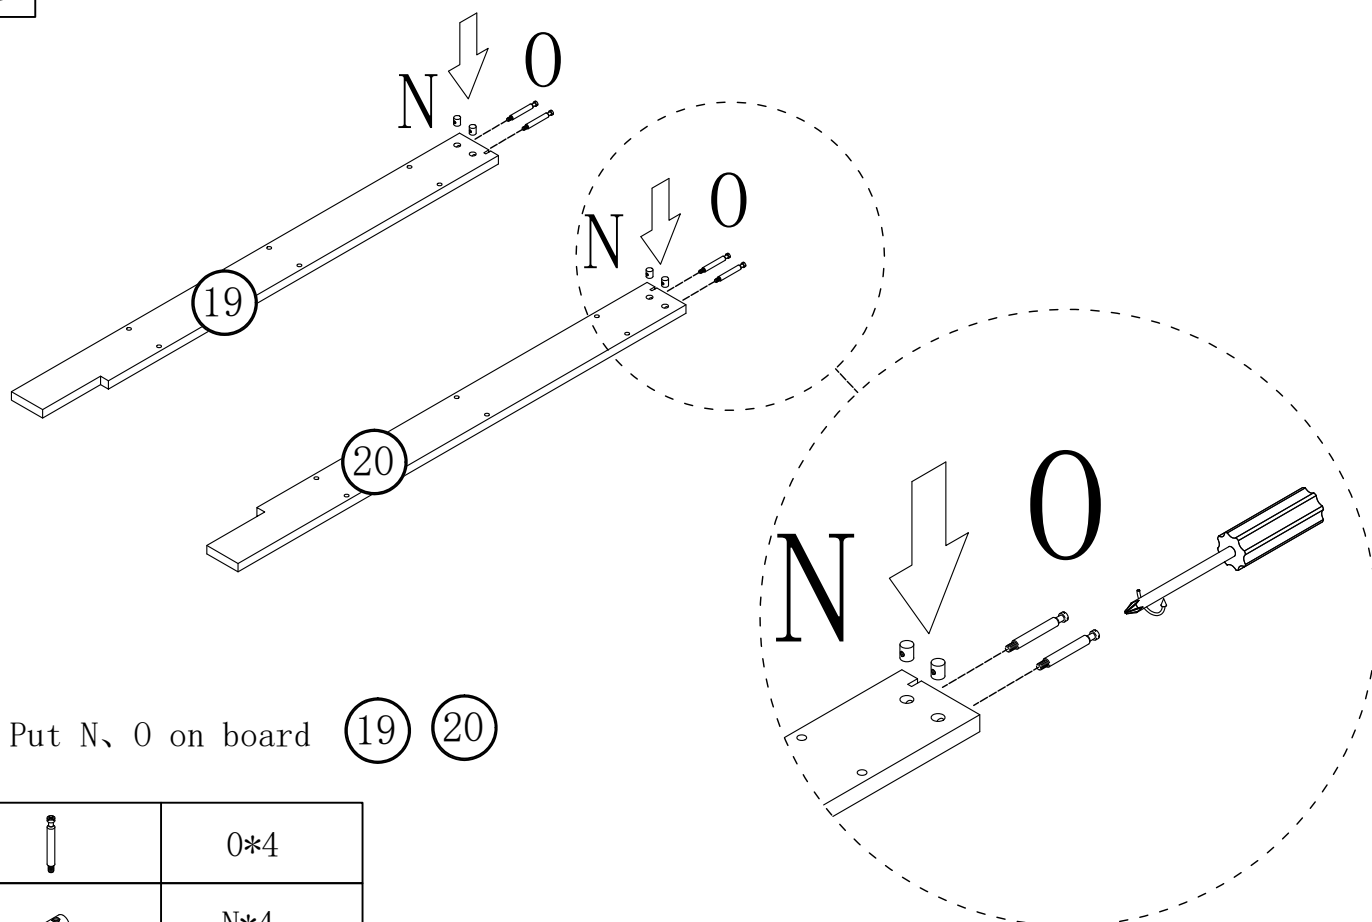


6

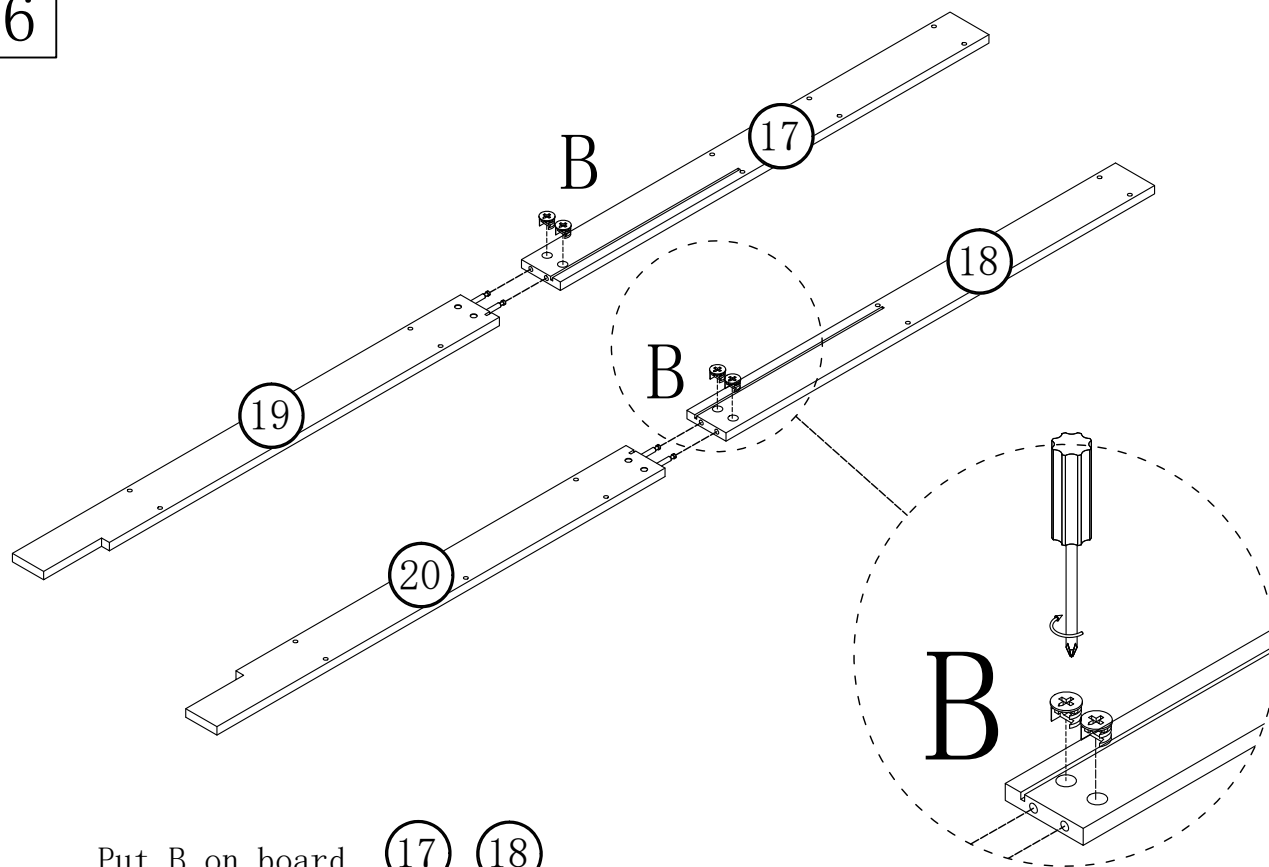


B*4

Make sure the arrow on the screw align to the hole on the side.


7

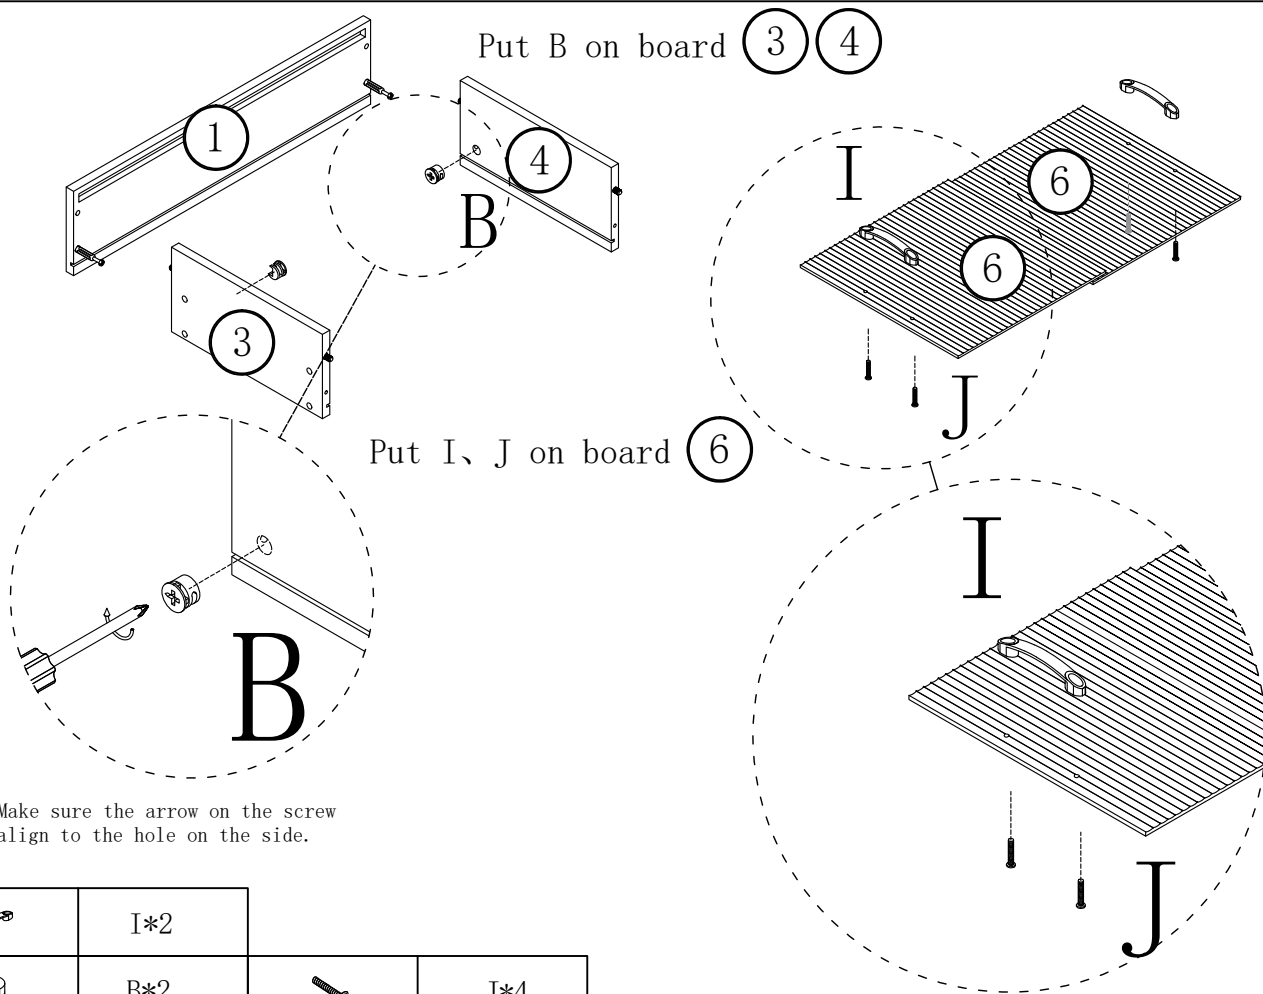

8

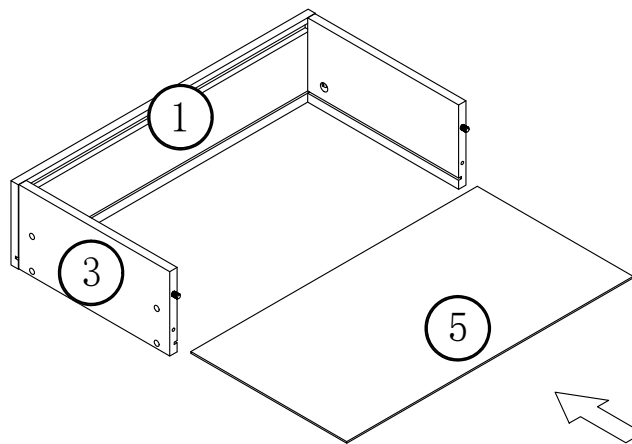

9

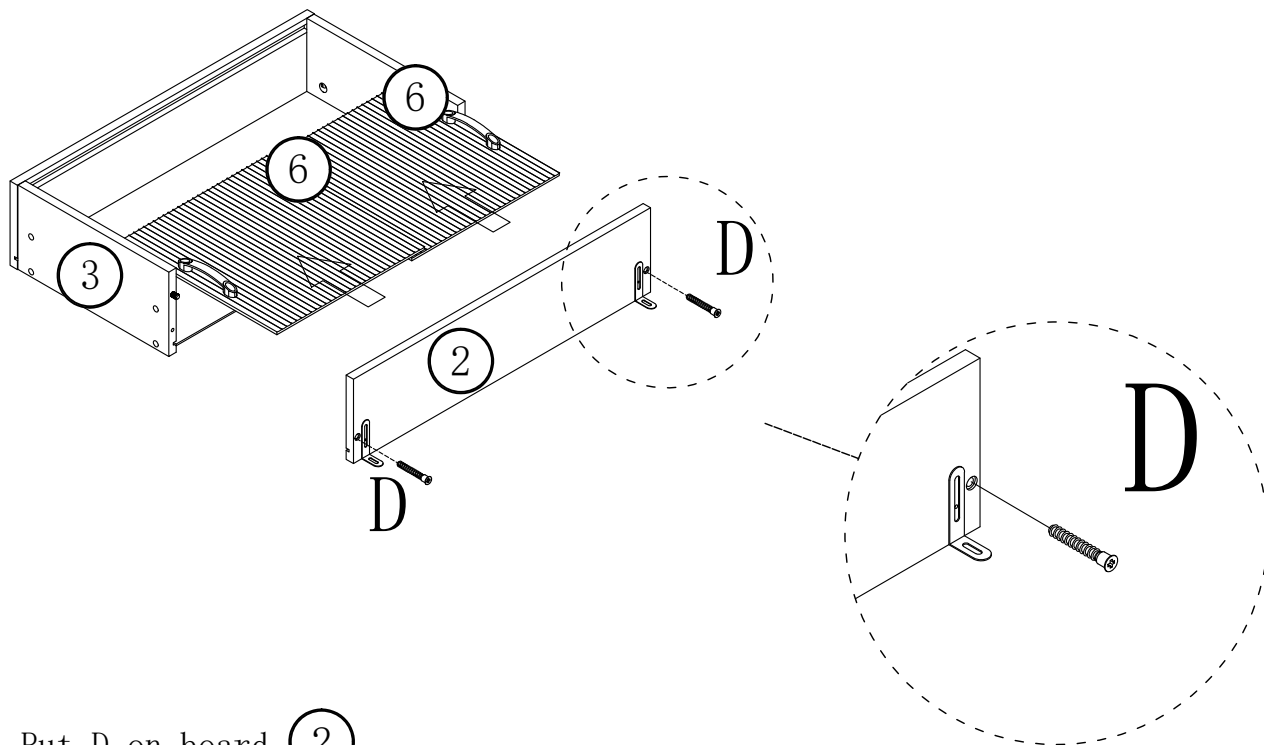


Put D on board (2)



D*2

10

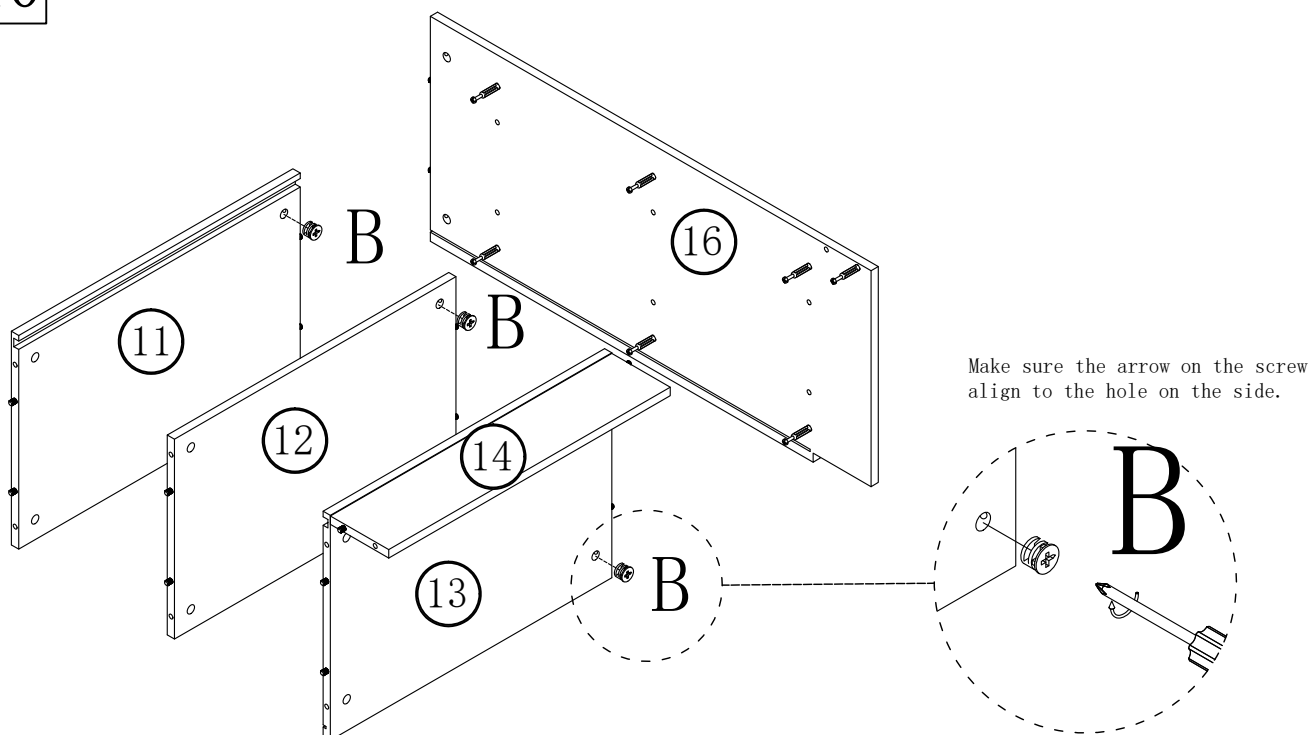


Put B on board (11) (12) (13) (14)



B*7


11

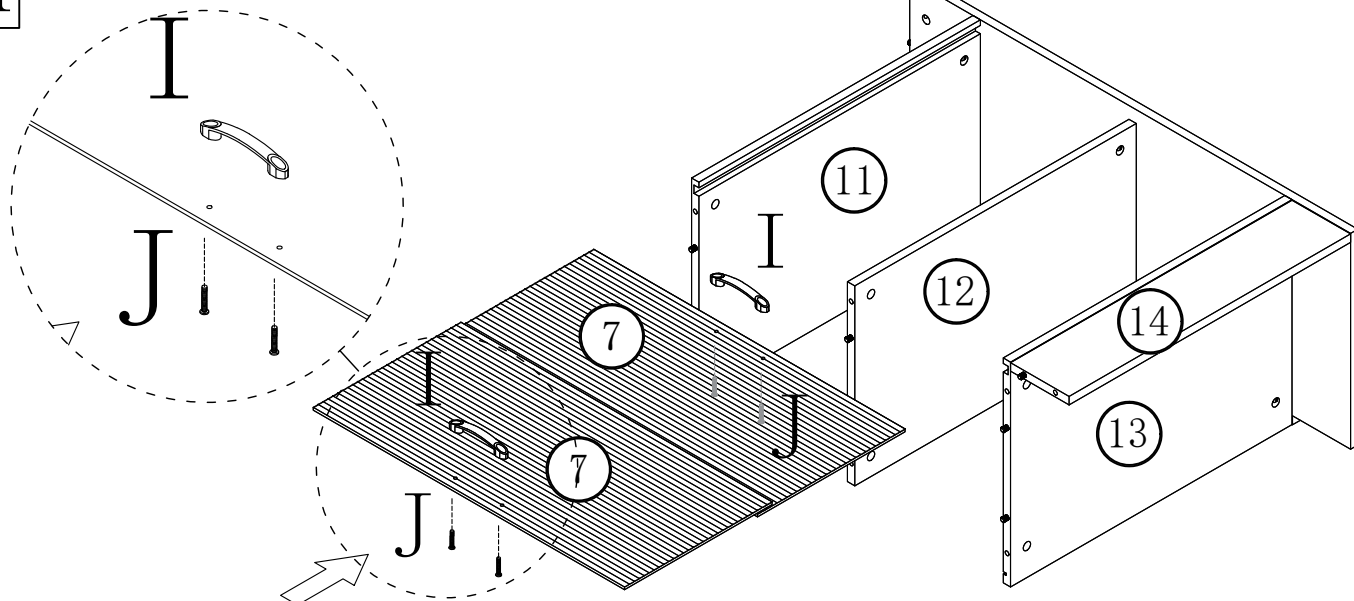

Put I, J on board ⑦

	I*2
	J*4

12

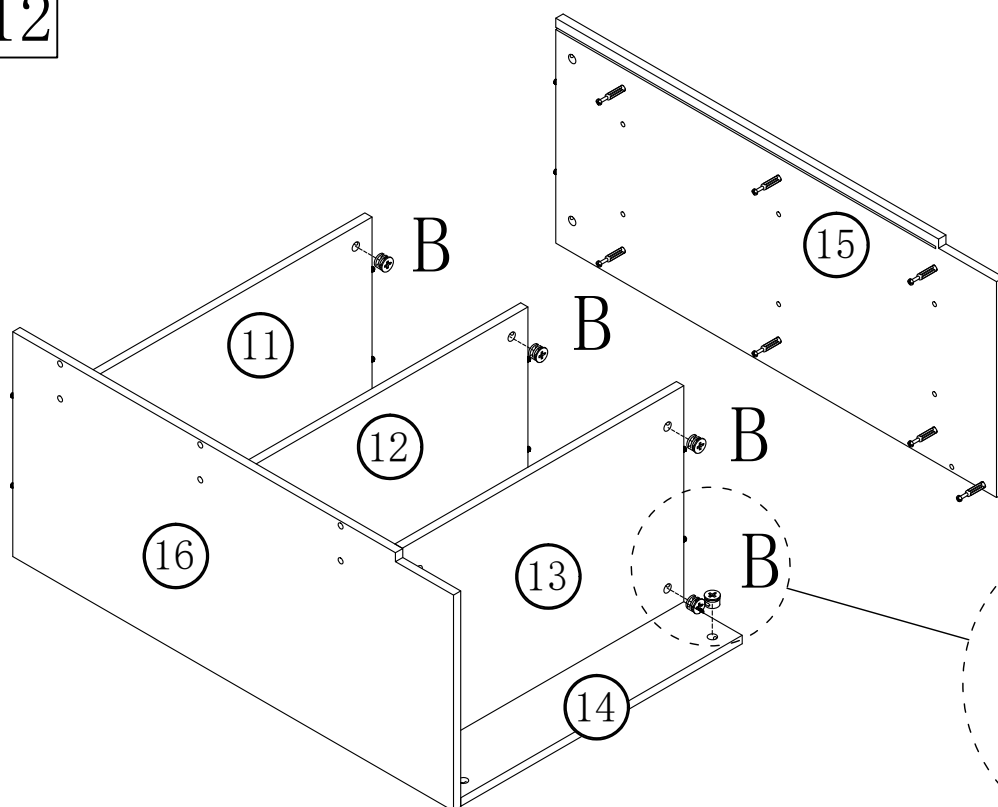


Make sure the arrow on the screw align to the hole on the side.

Put B on board ⑪ ⑫ ⑬ ⑭

	B*7
--	-----


13

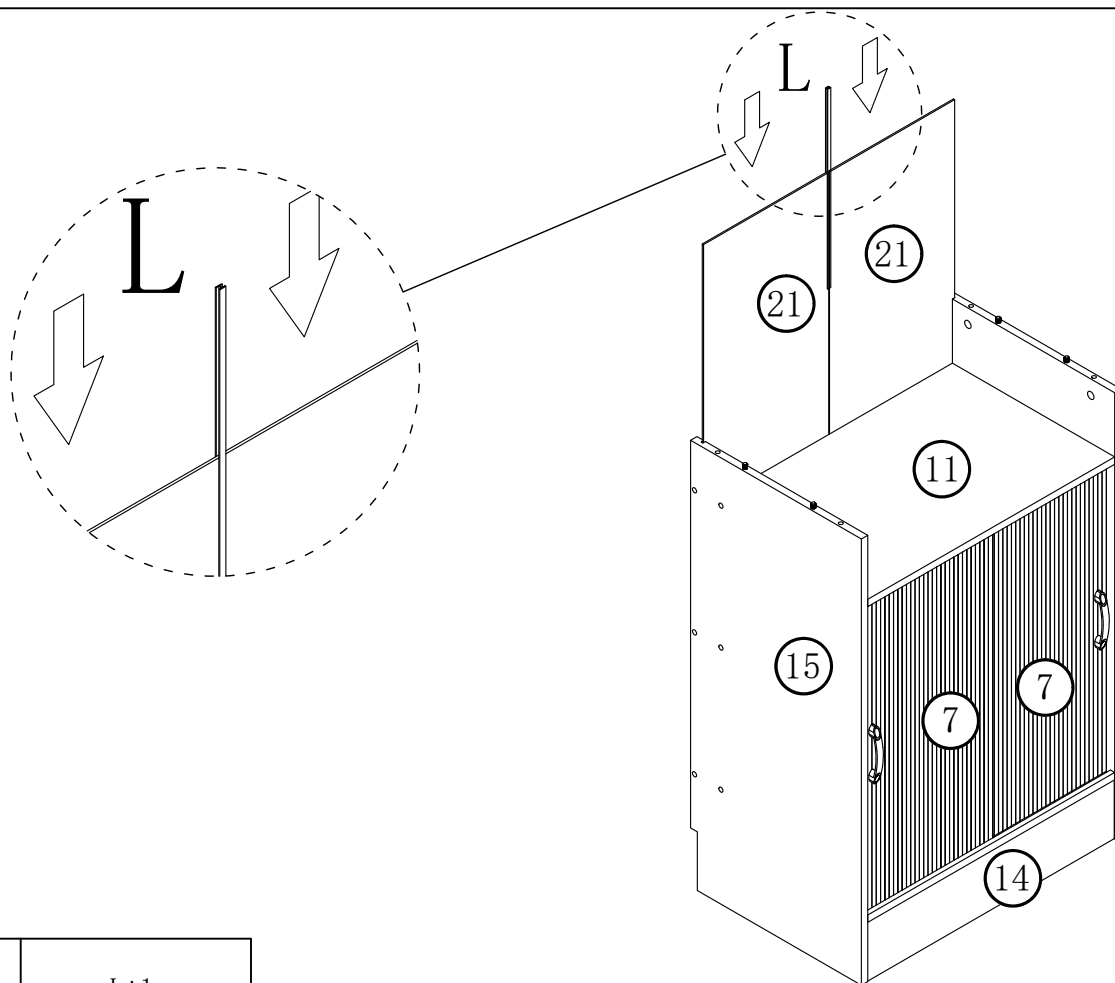


	L*1
--	-----

14

Make sure the arrow on the screw align to the hole on the side.

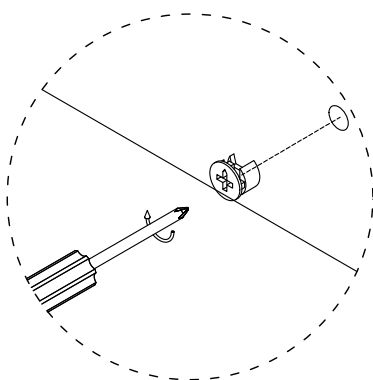


Put B on board 15 16

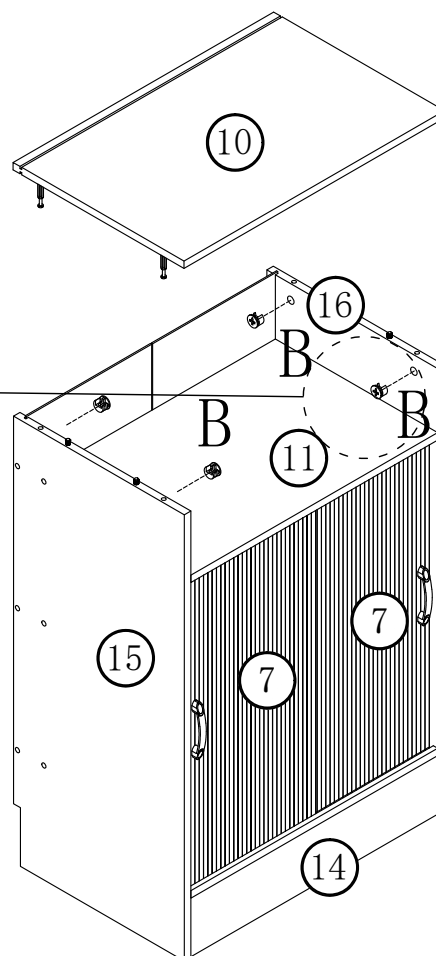

	B*4
--	-----

15

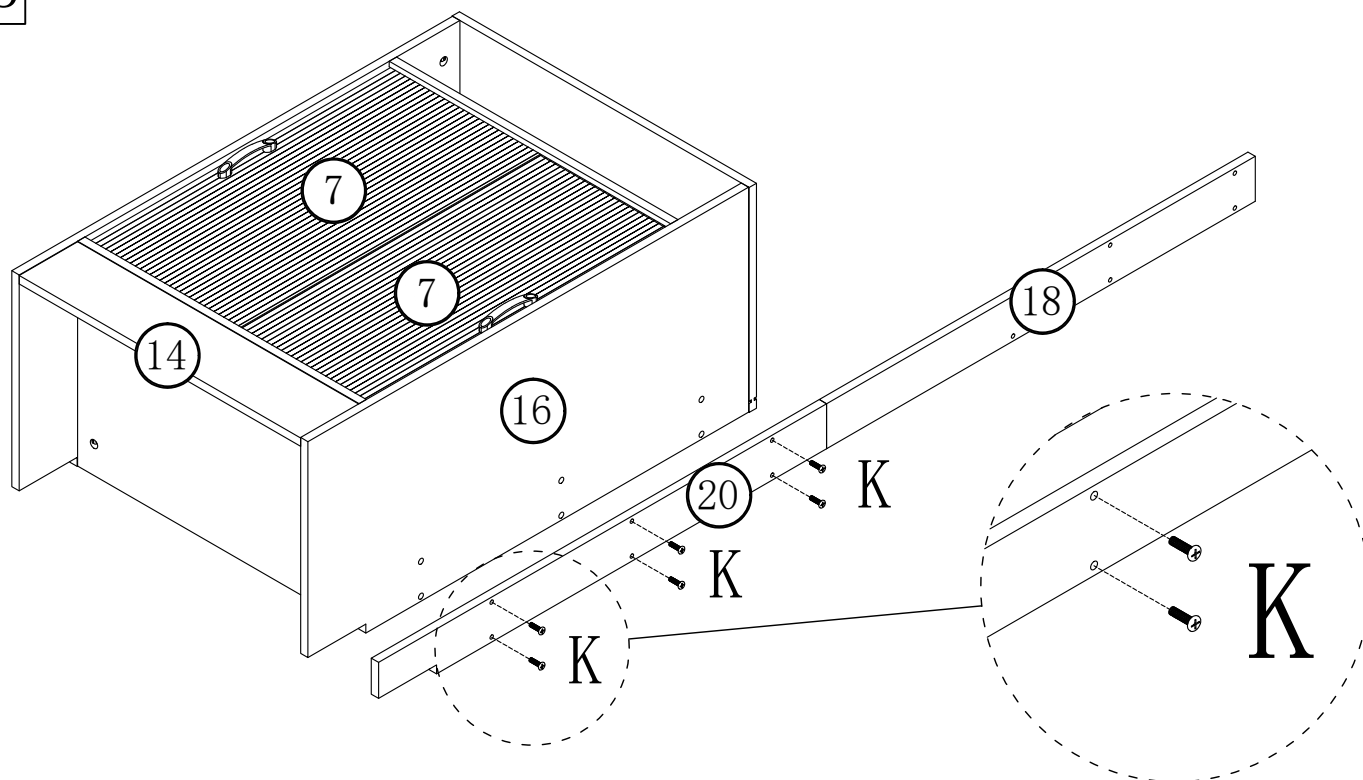


Put K on board (20)



K*6

16

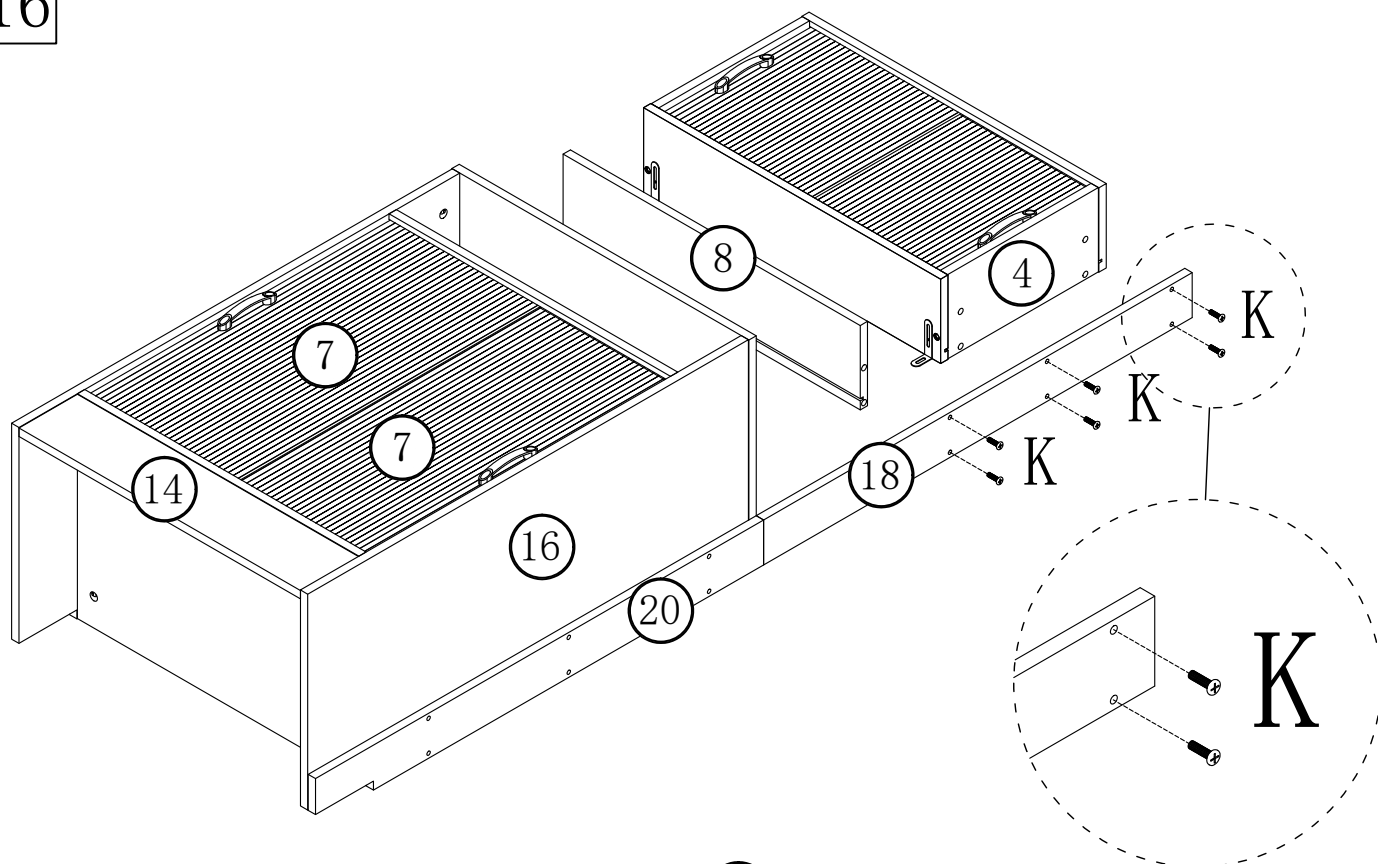


Put K on board (18)




K*6

17

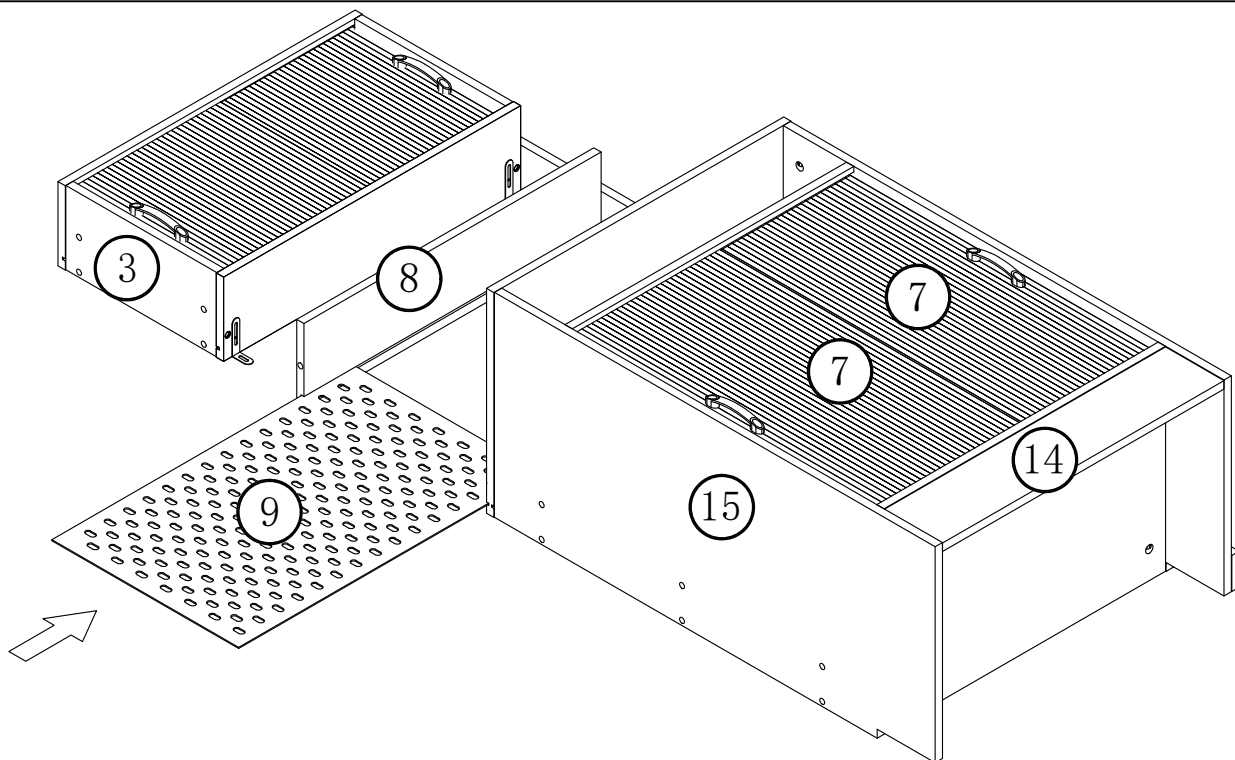


18

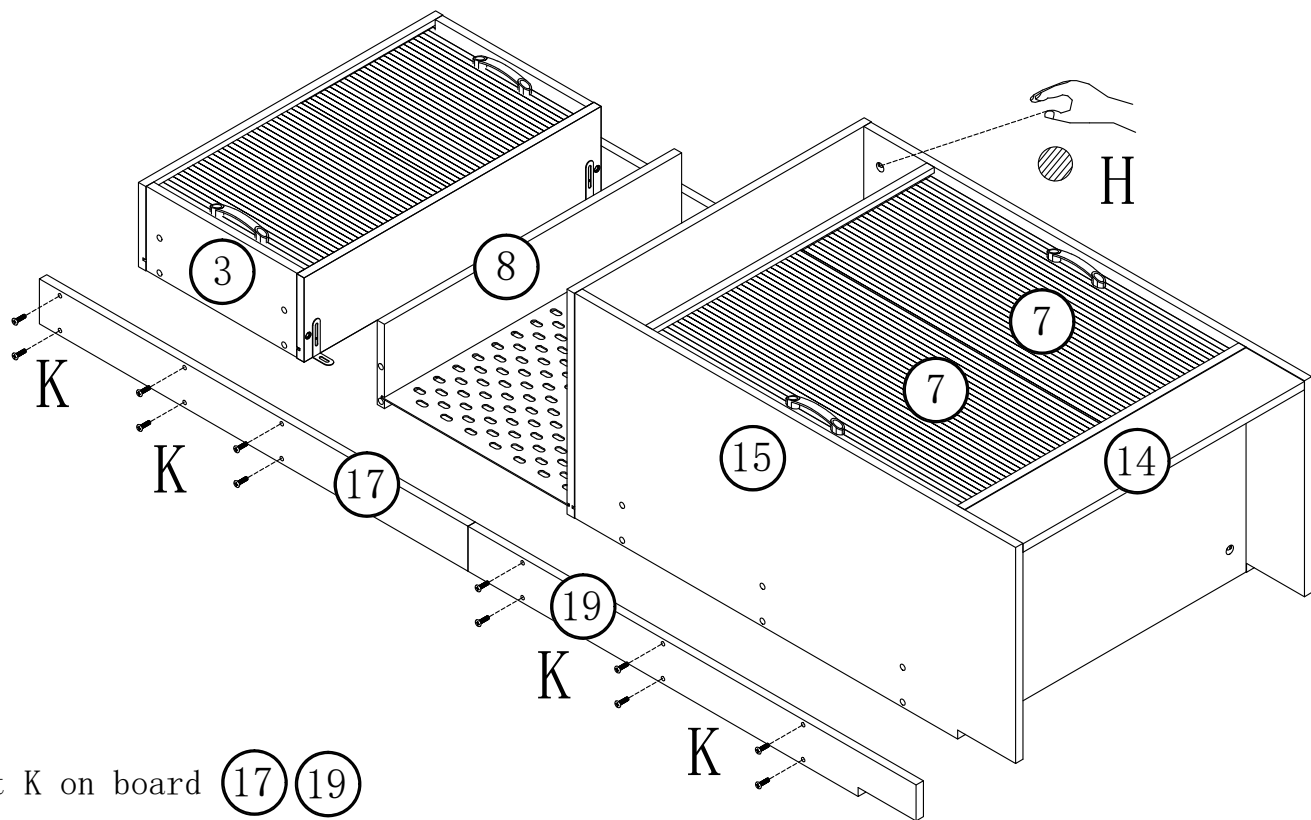


Put K on board (17) (19)

	H*40
	K*12

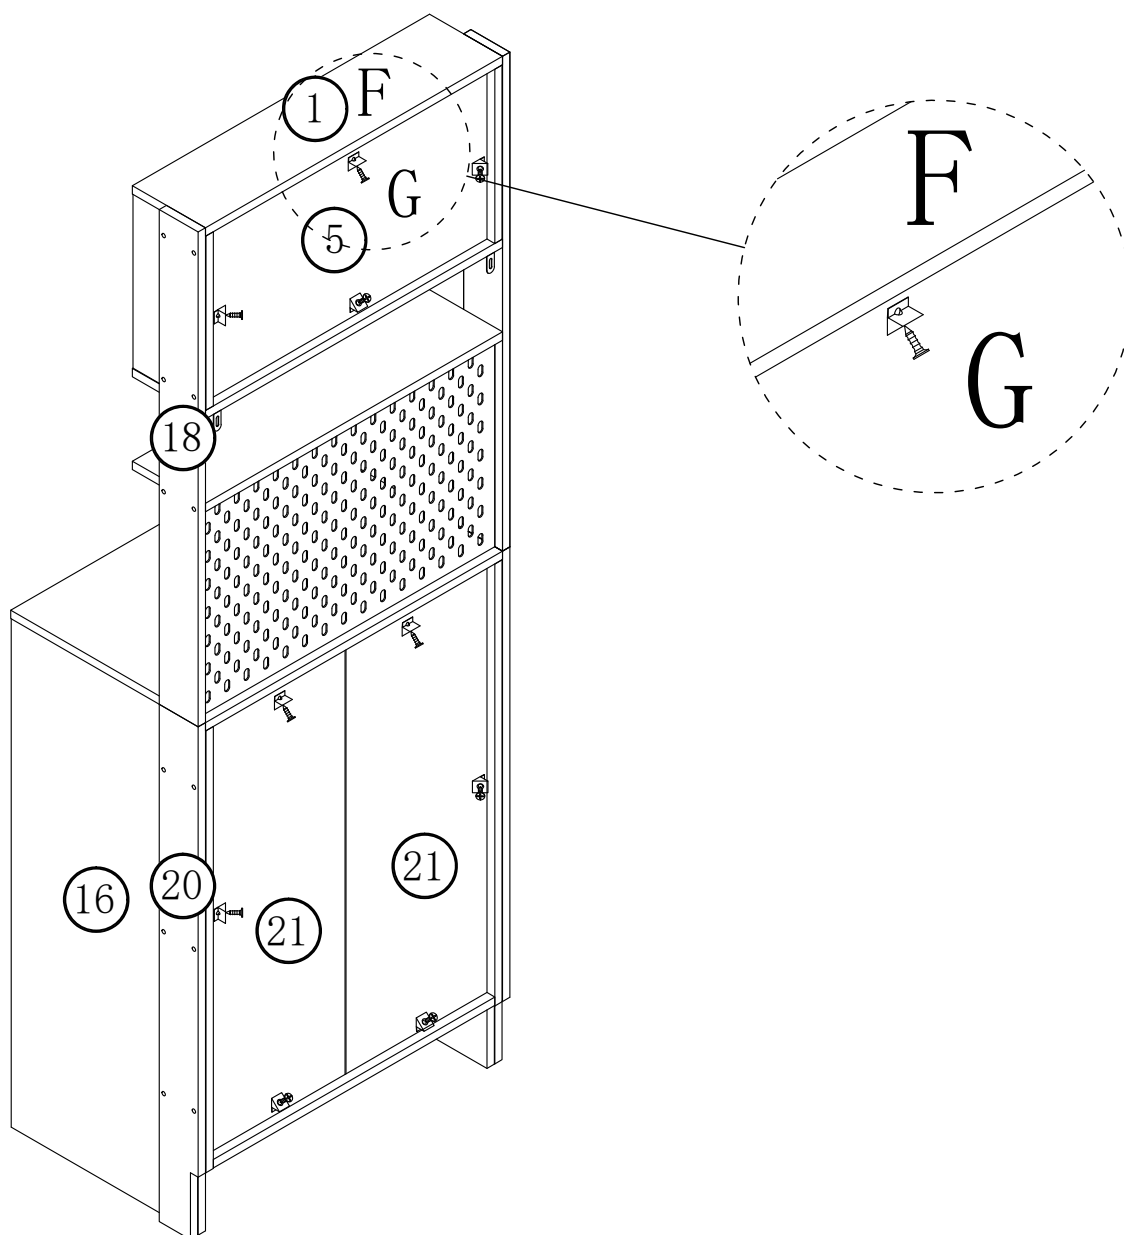

	G*10
	F*10

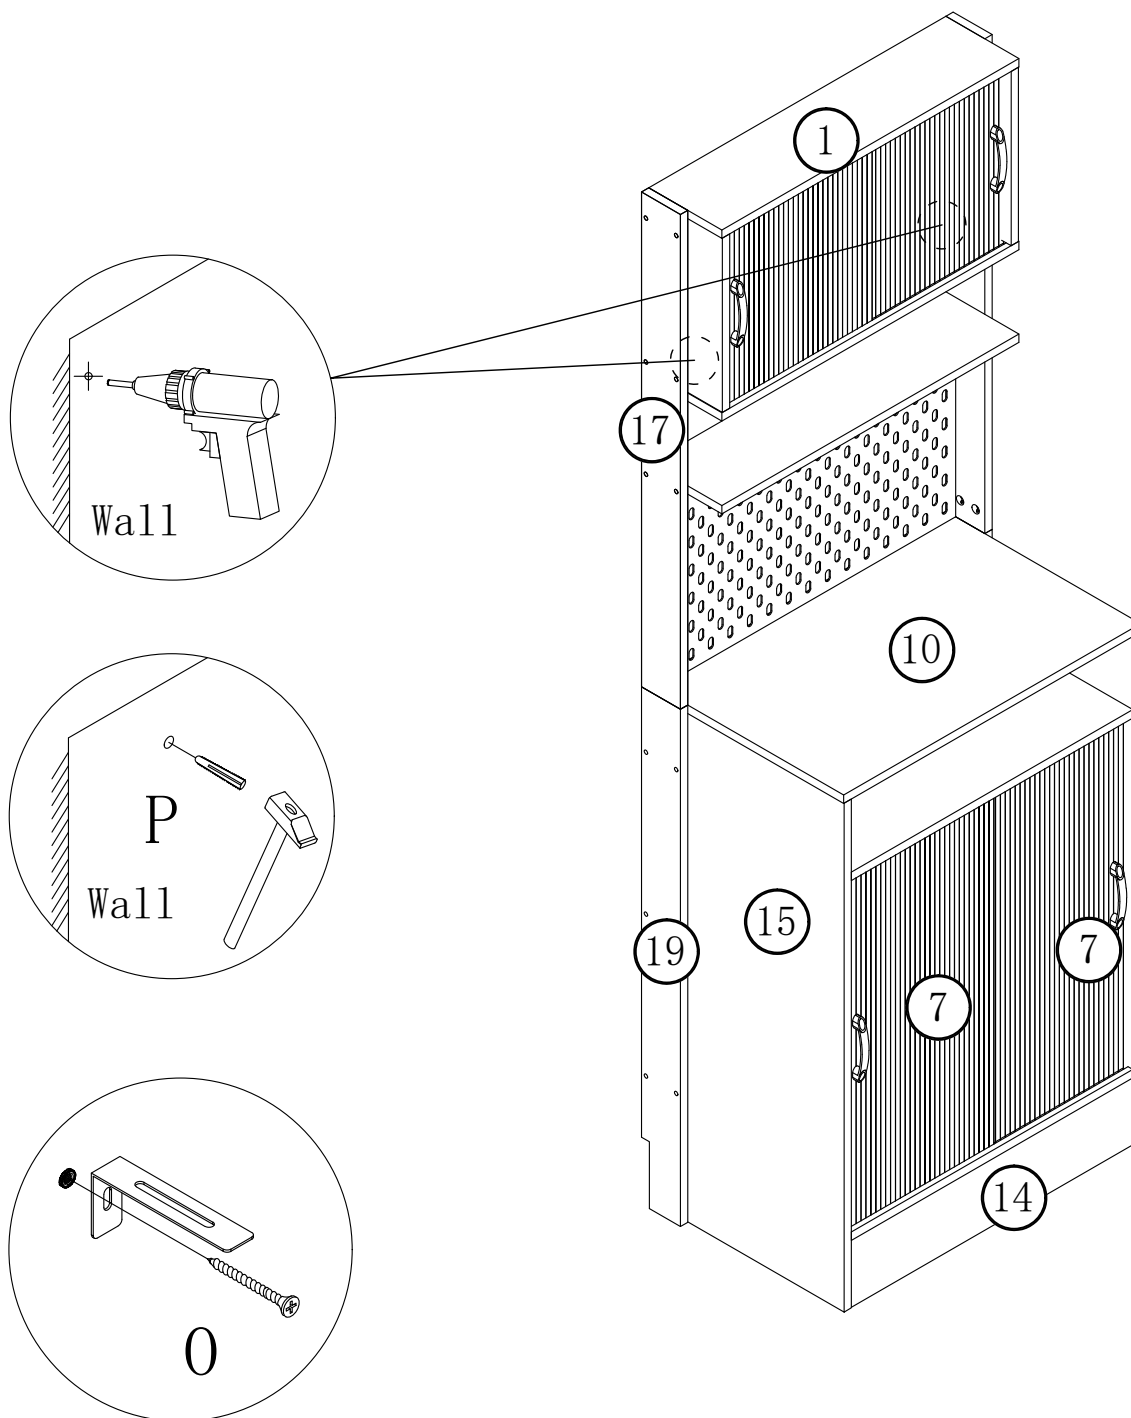

	0*2
	P*2