


# Hampton NightStand

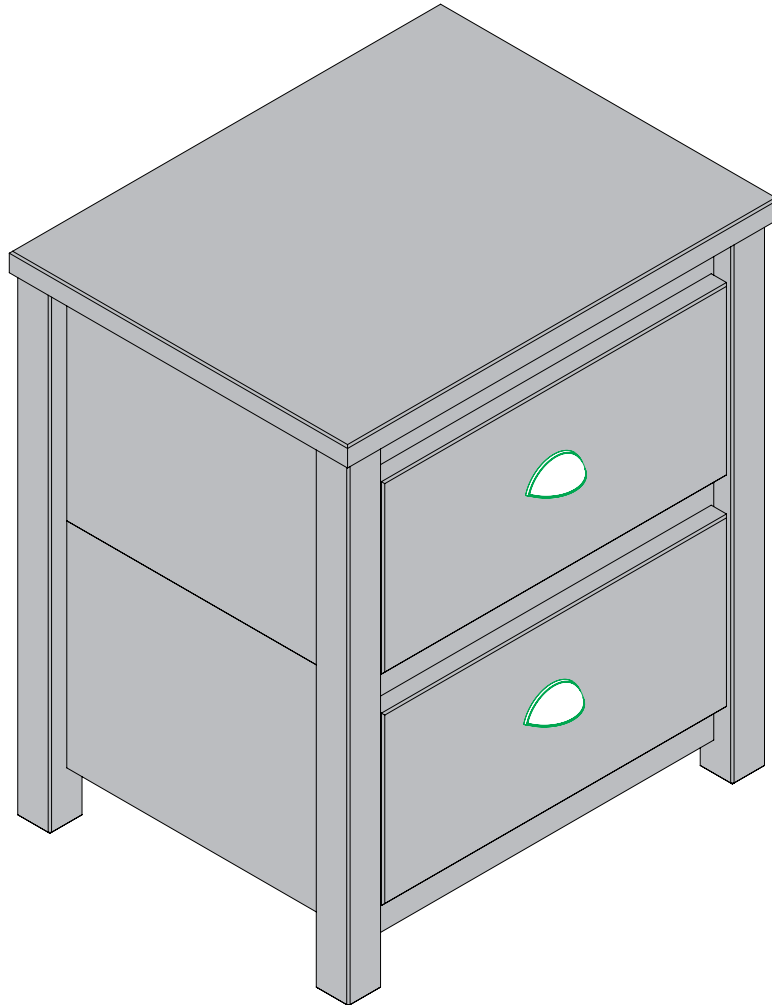

Assembly  
01 person



Time  
50 minutes approximately




Tools  
philips key, rubber hammer



Volume quantity  
01 boxes

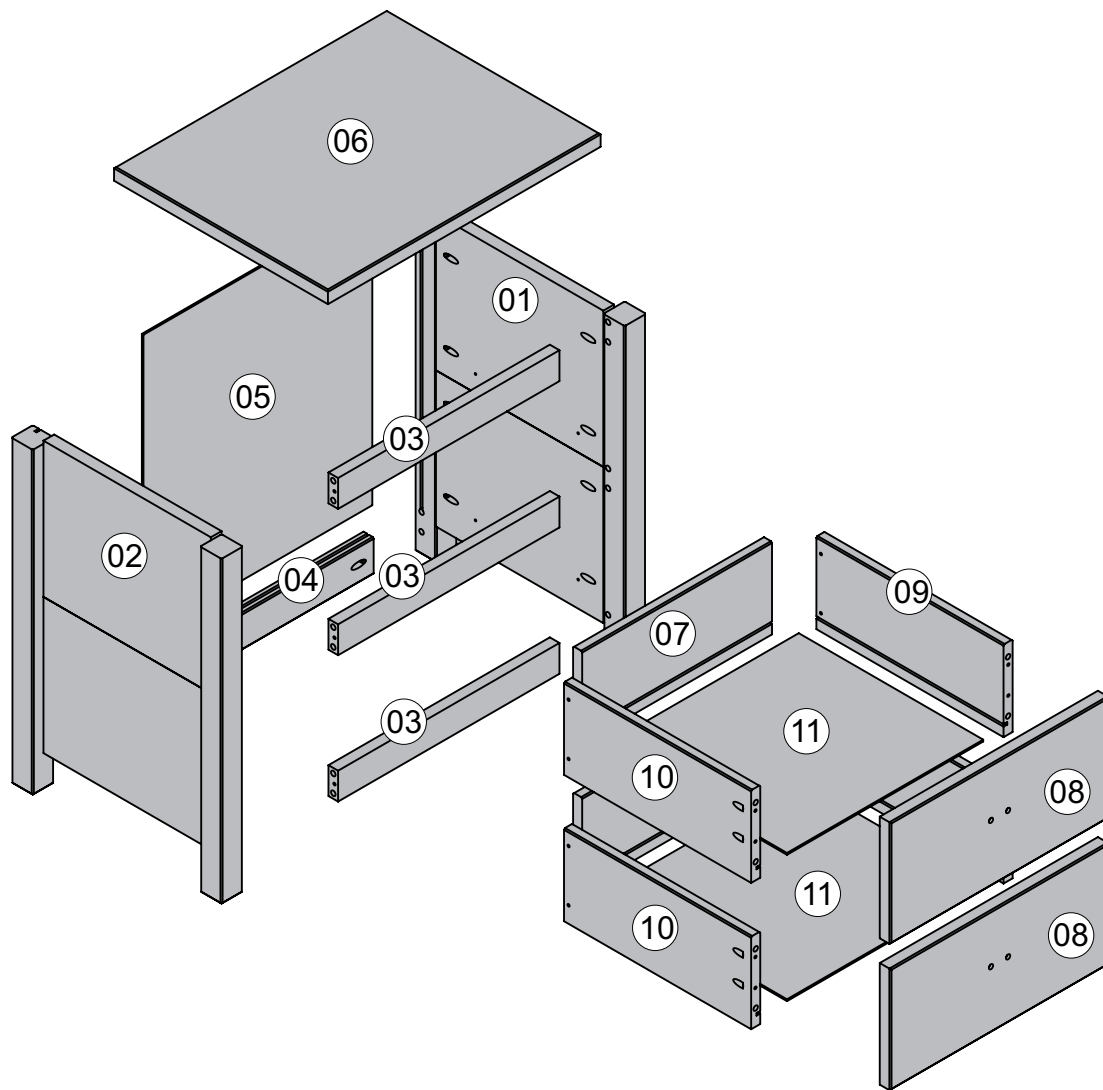








Parts list for assembly. Please confirm all parts available before assembly



#### ATTENTION


- \* Read and observe carefully all the assembly instructions before beginning assembly.
- \* The assembly of the product must be done on a clean and flat surface. We suggest to use the packaging to cover the floor to avoid damages.
- \* The screws must be tightened periodically.
- \* Avoid contact with sharp objects.
- \* Avoid banging pieces together.

Hardware list for assembly.  
Please confirm all hardware available before assembly


Z	 ø1/8" x 5/8"	16x
BA	 ø1/8" x 1' 3/8"	28x
BM	 13' 3/4"	02x
BN	 13' 3/4"	02x
BO	 13' 3/4"	02x
BP	 13' 3/4"	02x
BR	 ø5/16" x 1' 1/4"	24x
BS	 ø1/4" x 5"	02x
BT	 M4 x 1"	04x

SPARE  
+ 02x  
+ 02x


+ 02x

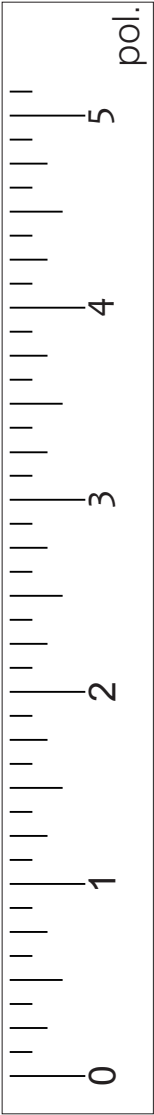



Step - 01

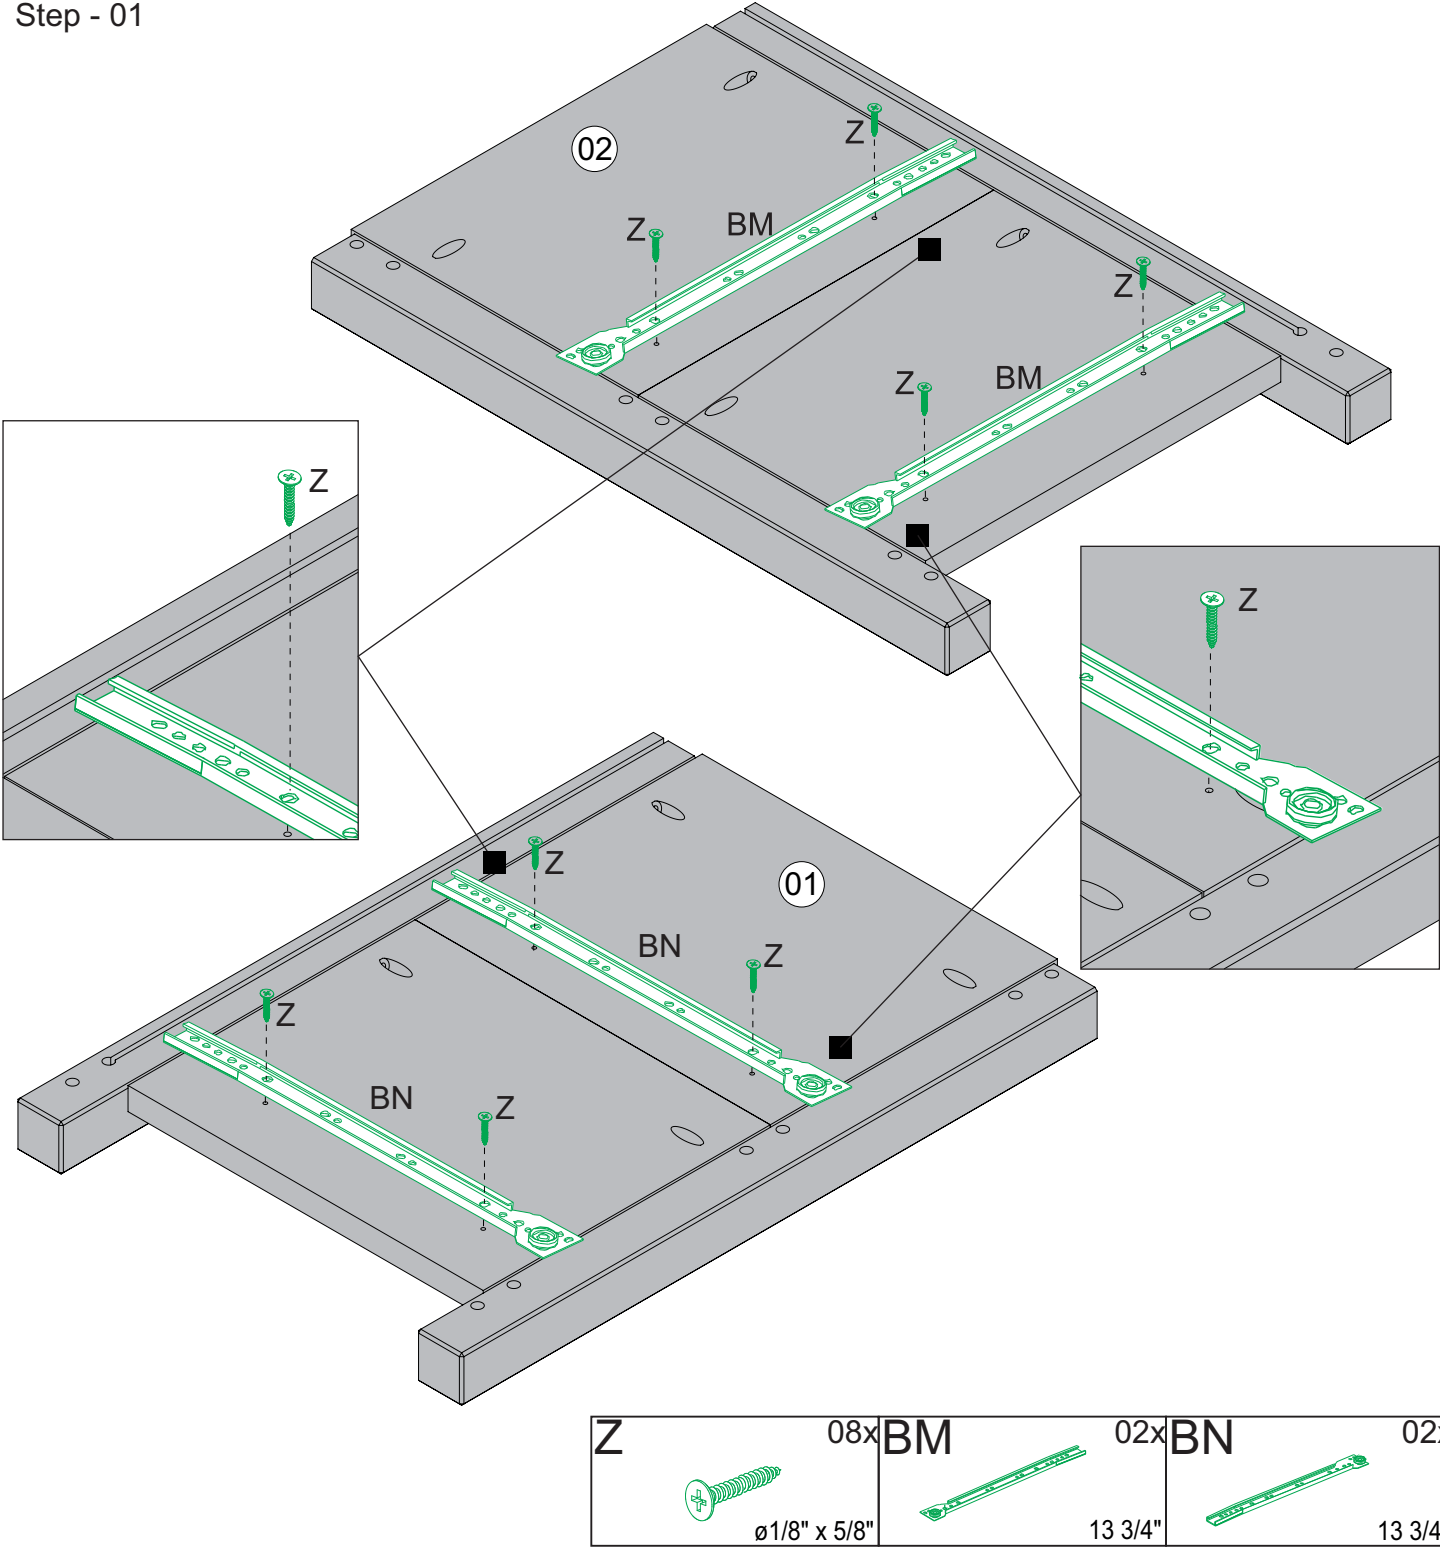



Step - 02

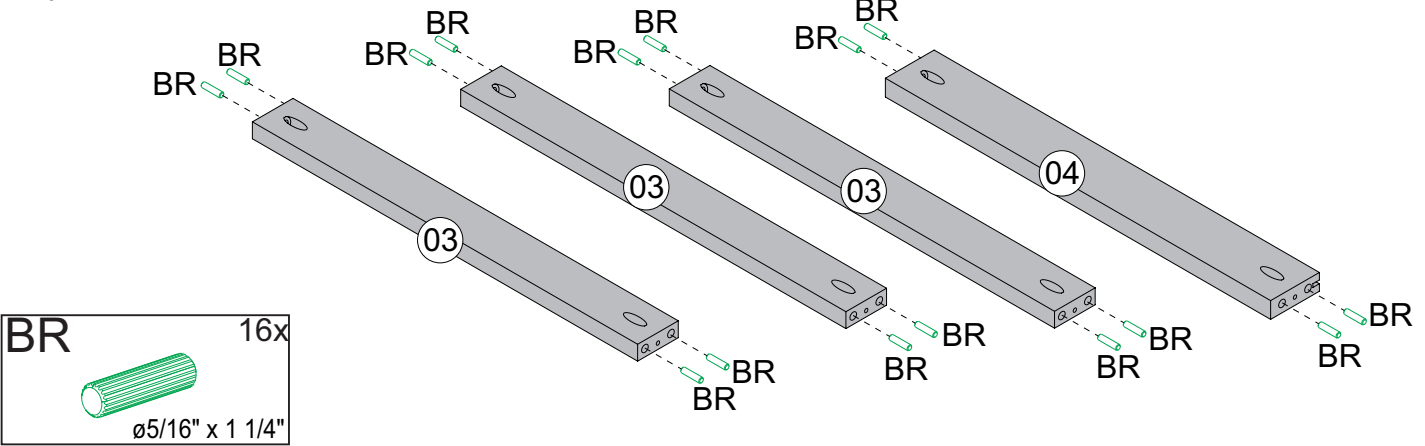


Step - 03

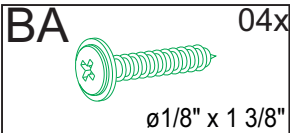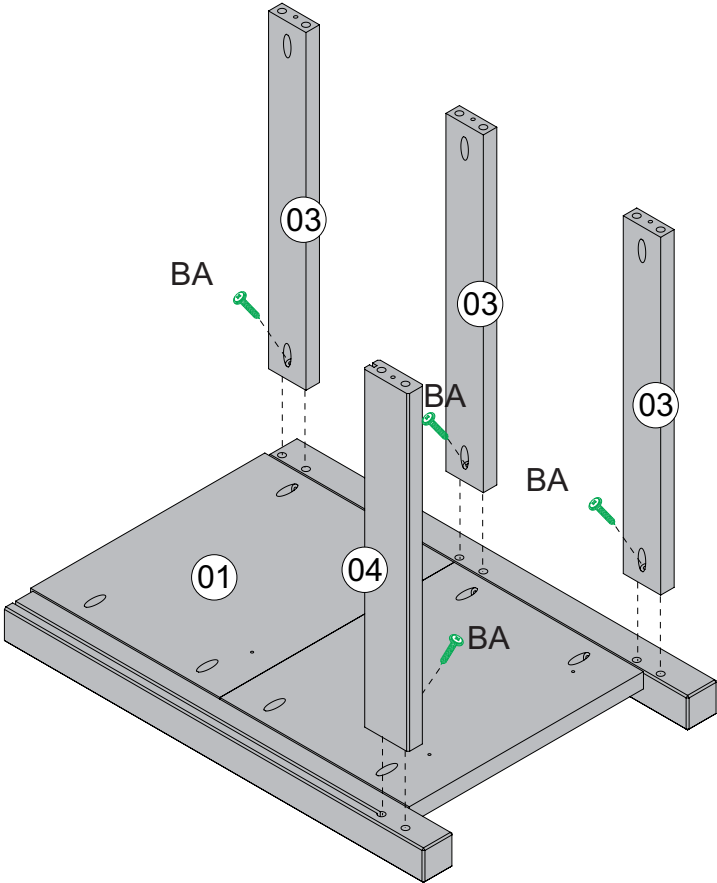

Step - 04

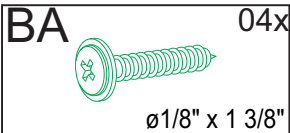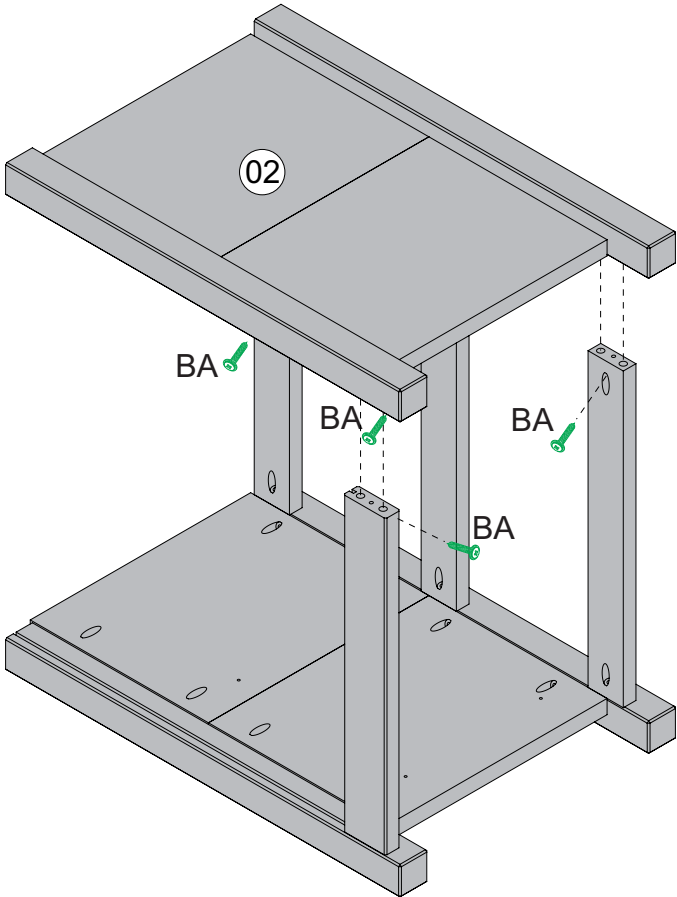


## Step - 05

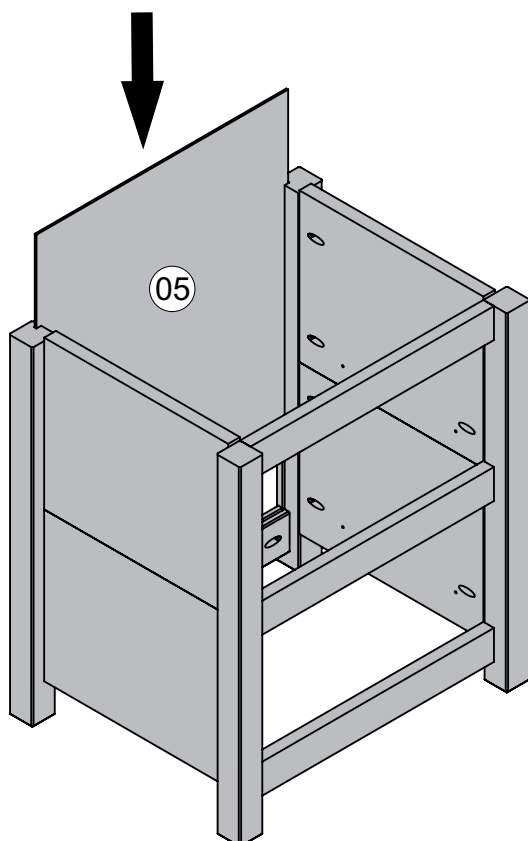




**Product Name:** HAMPTON NIGHTSTAND/HM20  
**Country:** Made in Brazil  
**Mfg Date/Lot:** 00/0000 - PO N° 0000/0000  
**Company:** Ecoflex Furniture, LLC  
 1031 East Mountain Street Bldg. 306  
 Kernersville, NC 27284

California 93120 Phase 2 and TSCA Title VI Compliant for Formaldehyde


**⚠ WARNING:** This product can expose you to chemicals including formaldehyde, which is known to the State of California to cause cancer or birth defects or reproductive harm. For more information, go to: [www.p65Warnings.ca.gov/furniture](http://www.p65Warnings.ca.gov/furniture)

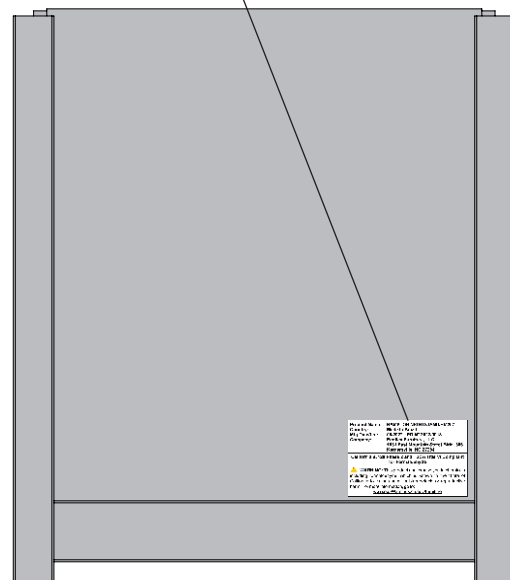


## Step - 06

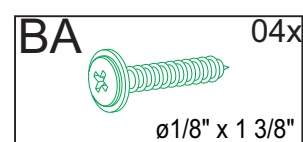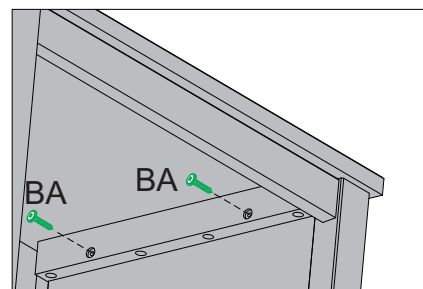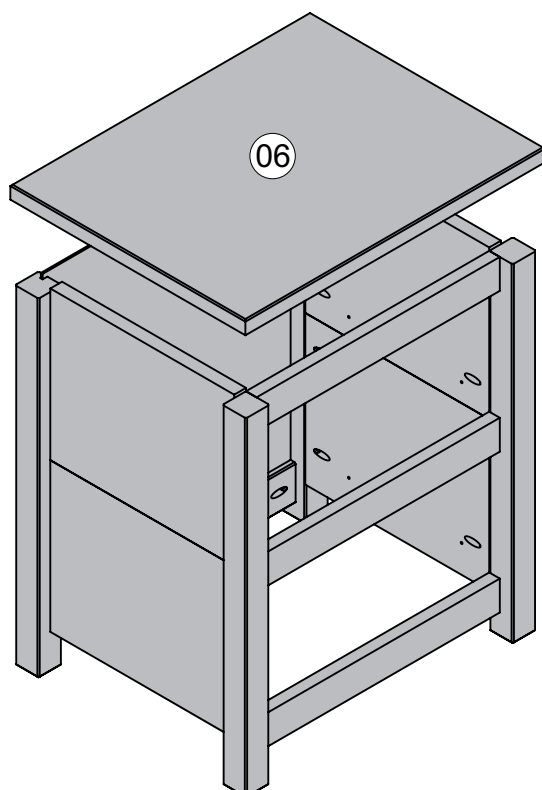


Step - 07

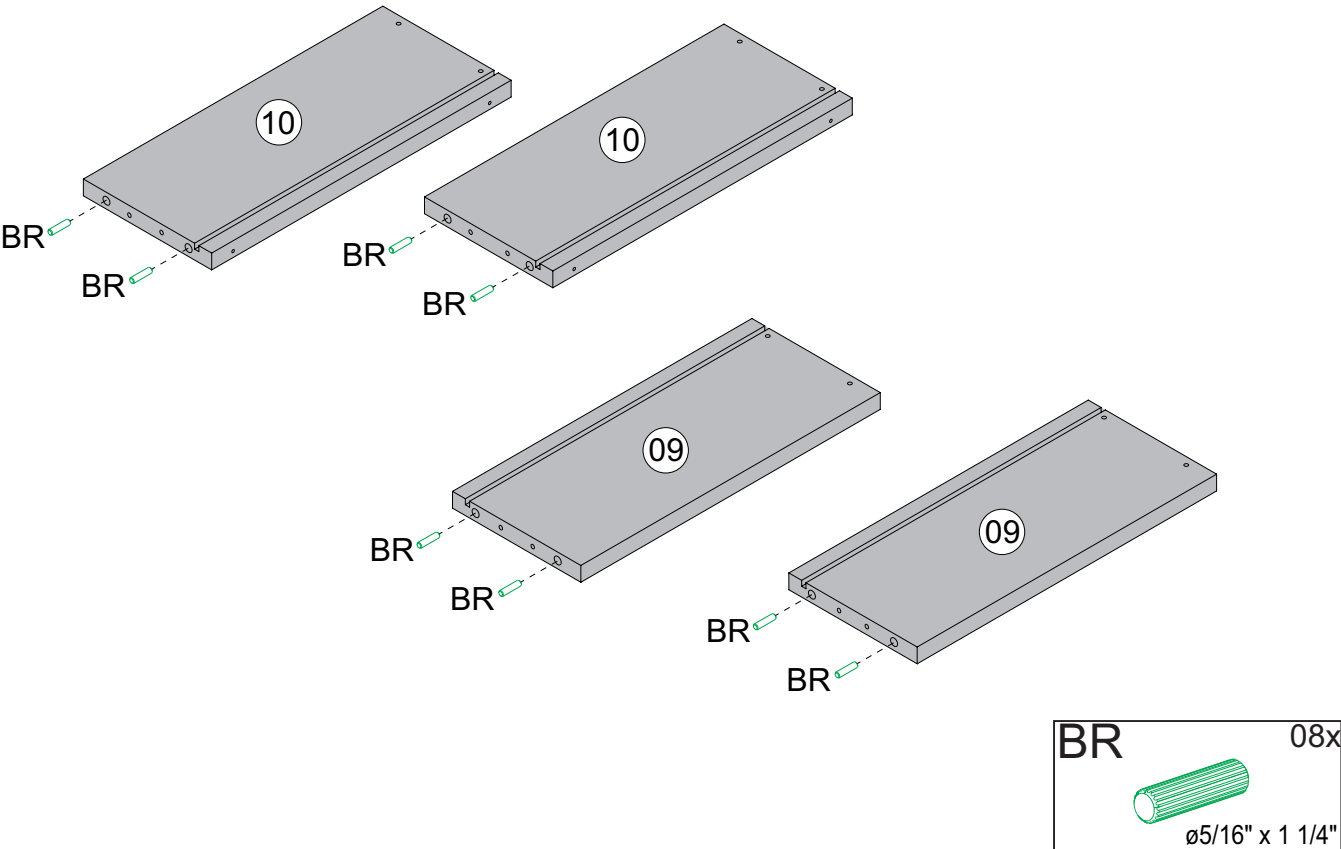



Step - 08

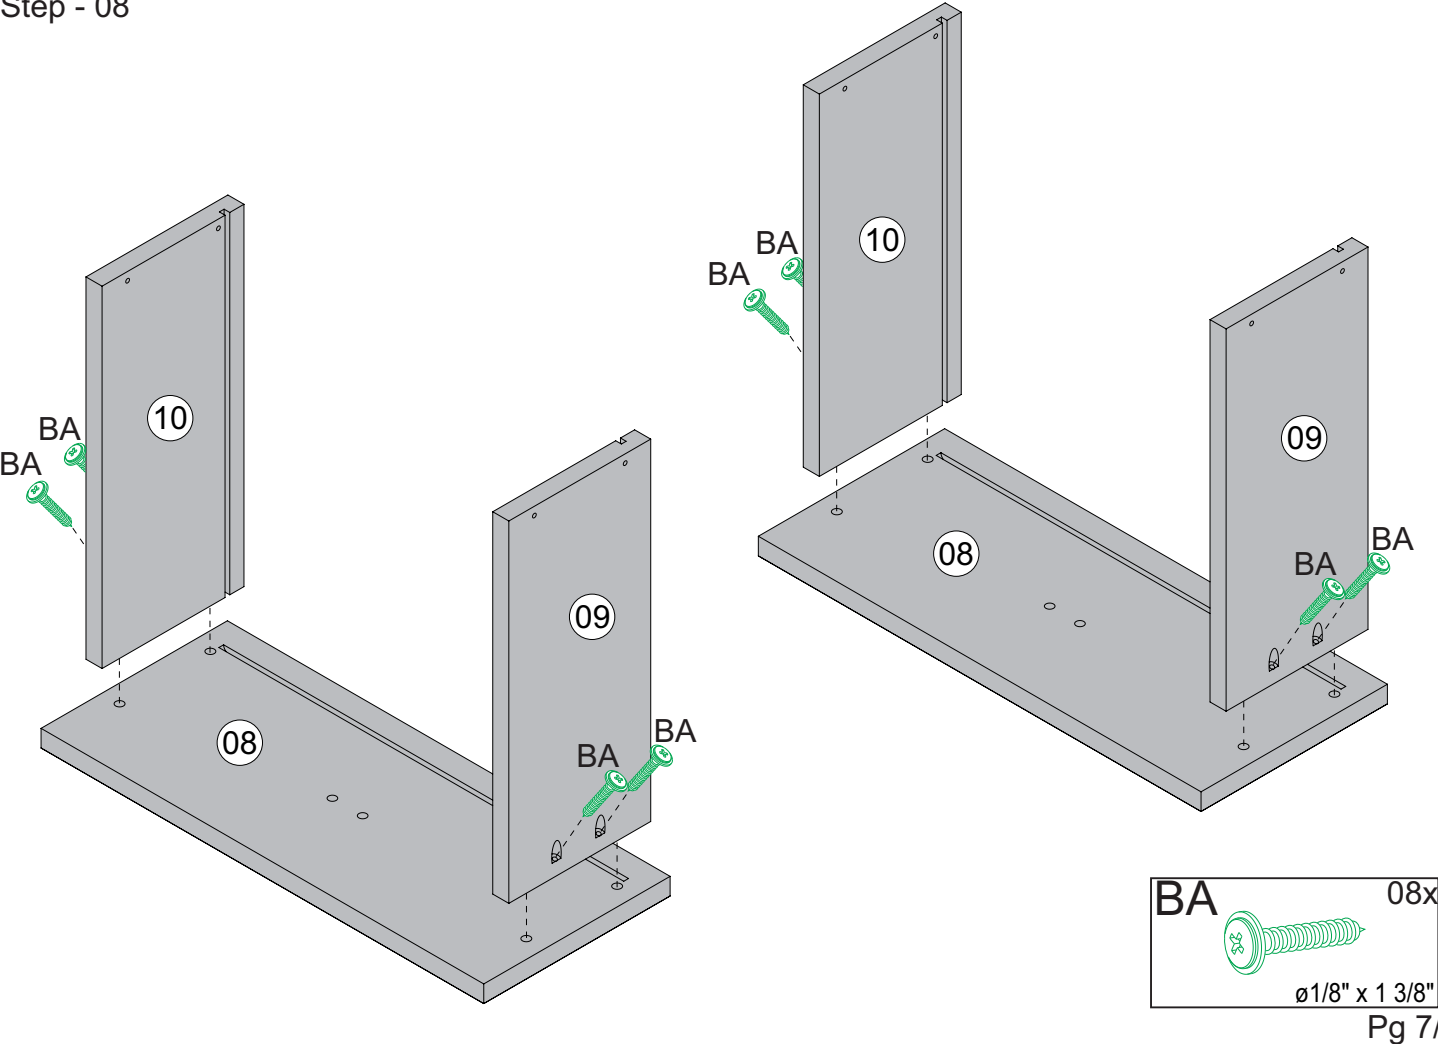

Step - 09

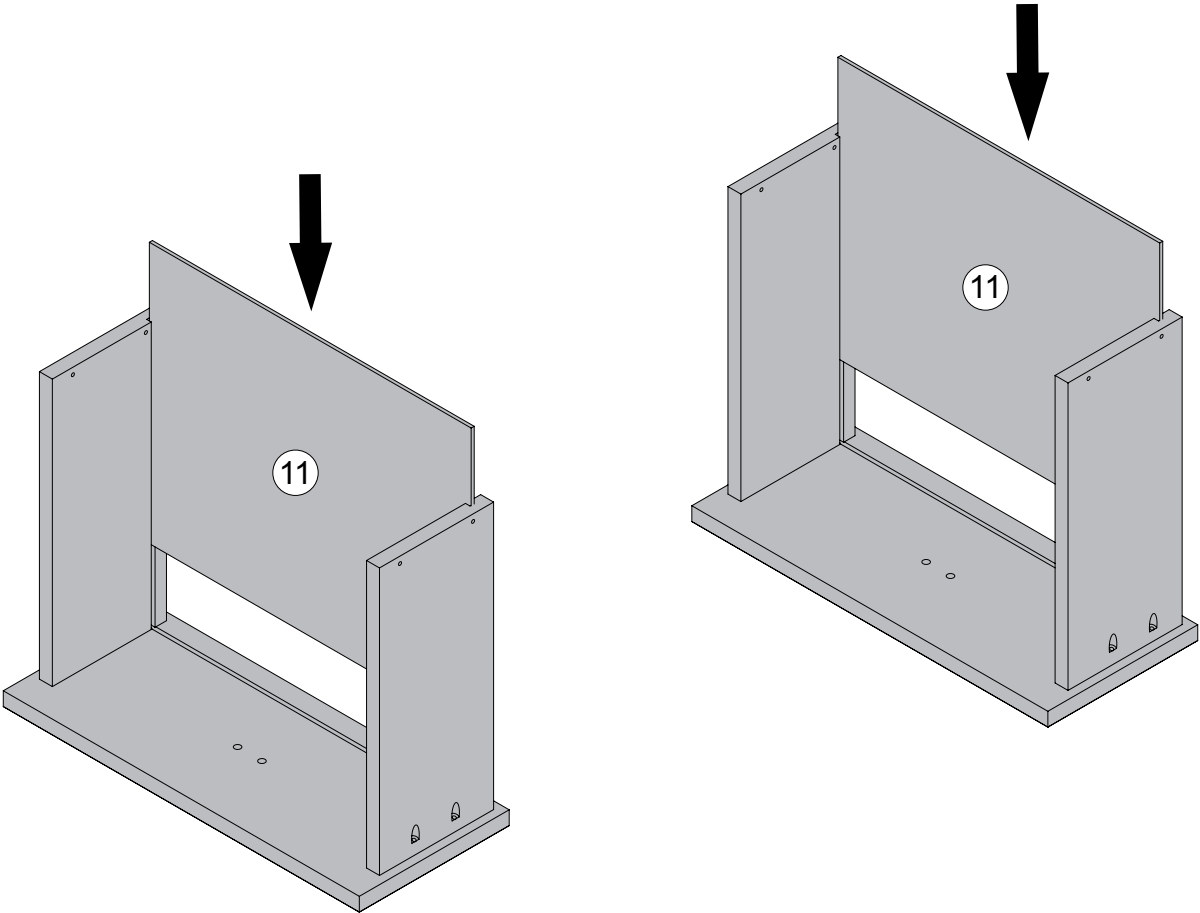





Step - 10

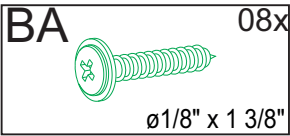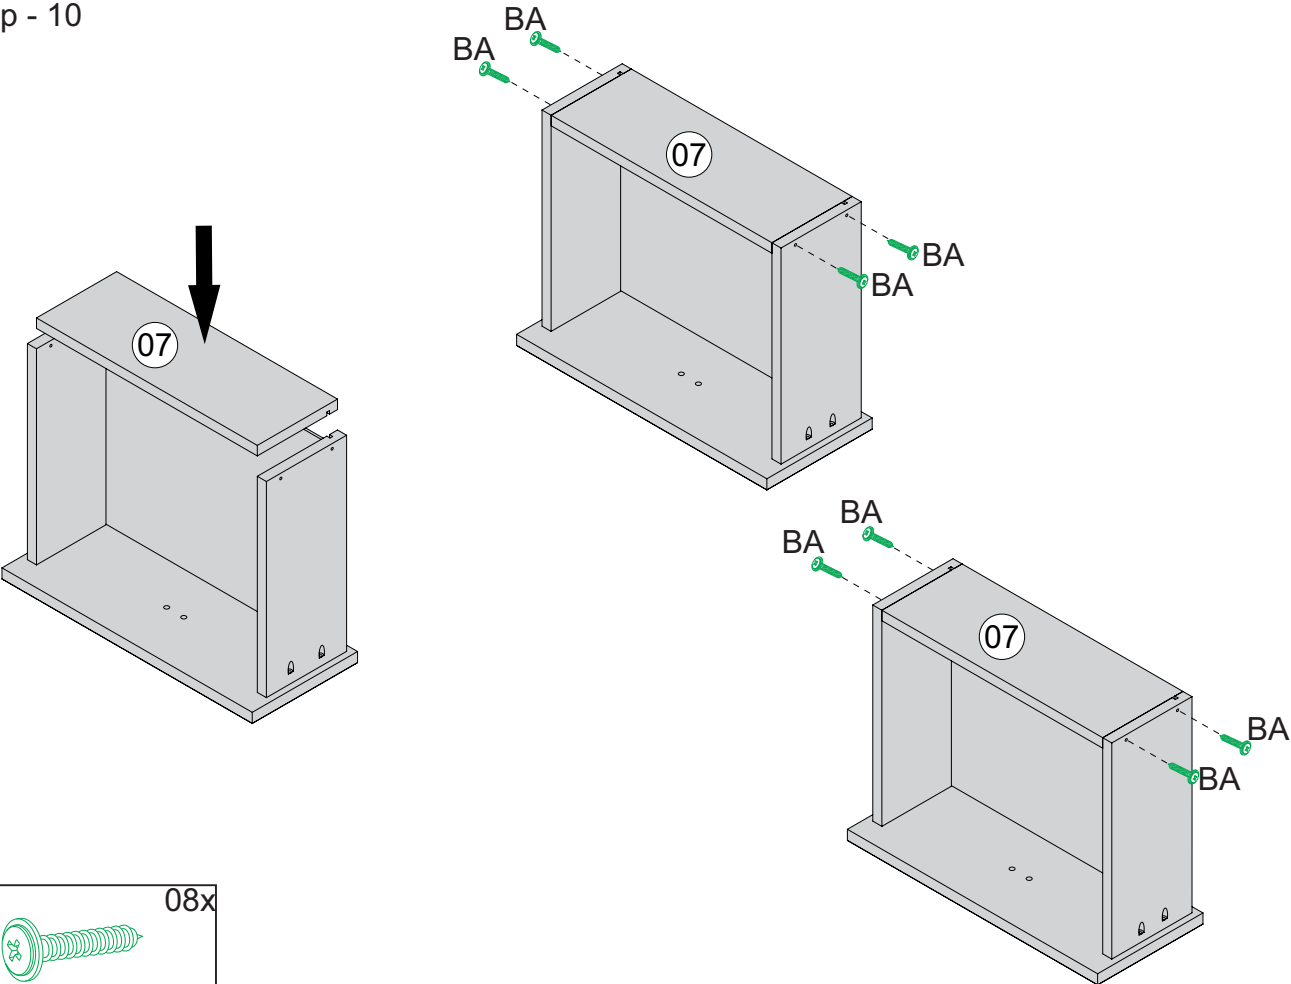




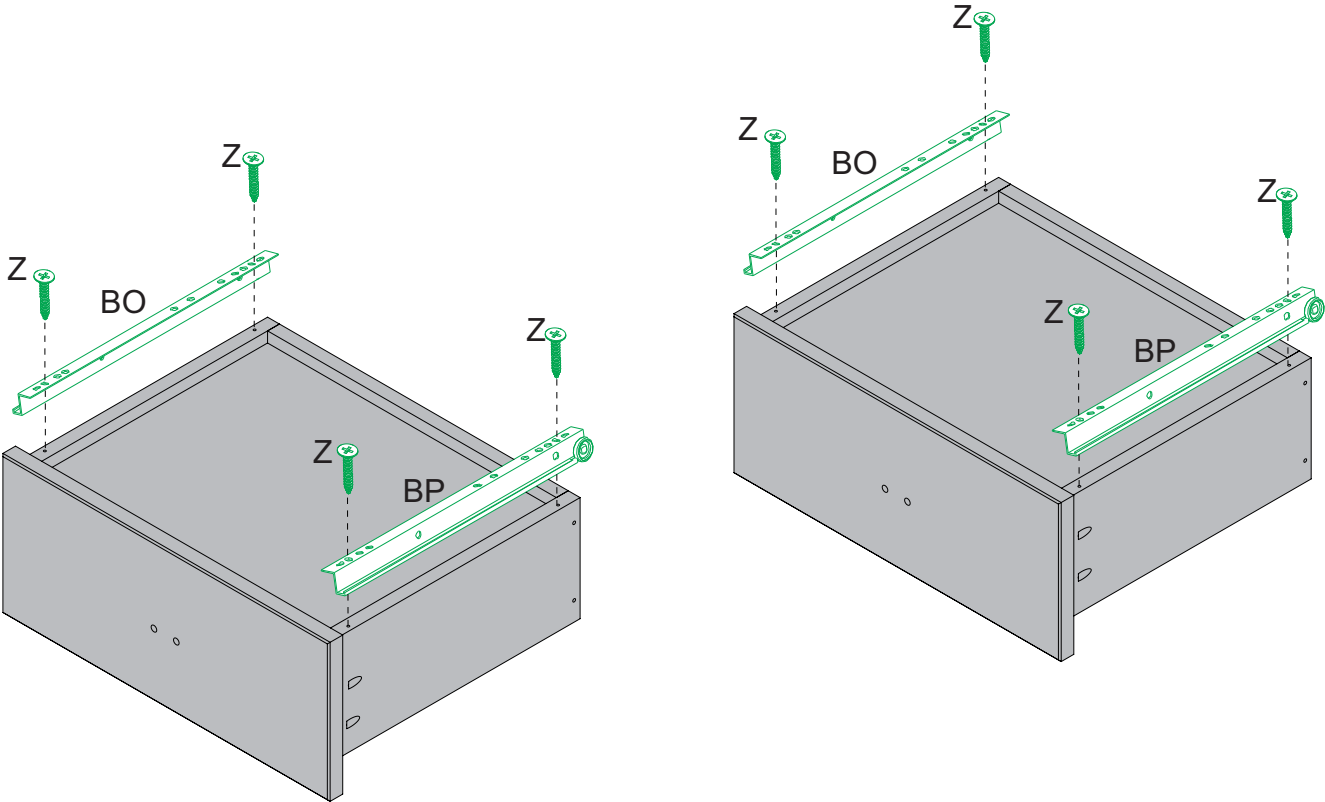

Step - 11



Z	08x	BO	02x	BP	02x
					
	ø1/8" x 5/8"		13 3/4"		13 3/4"

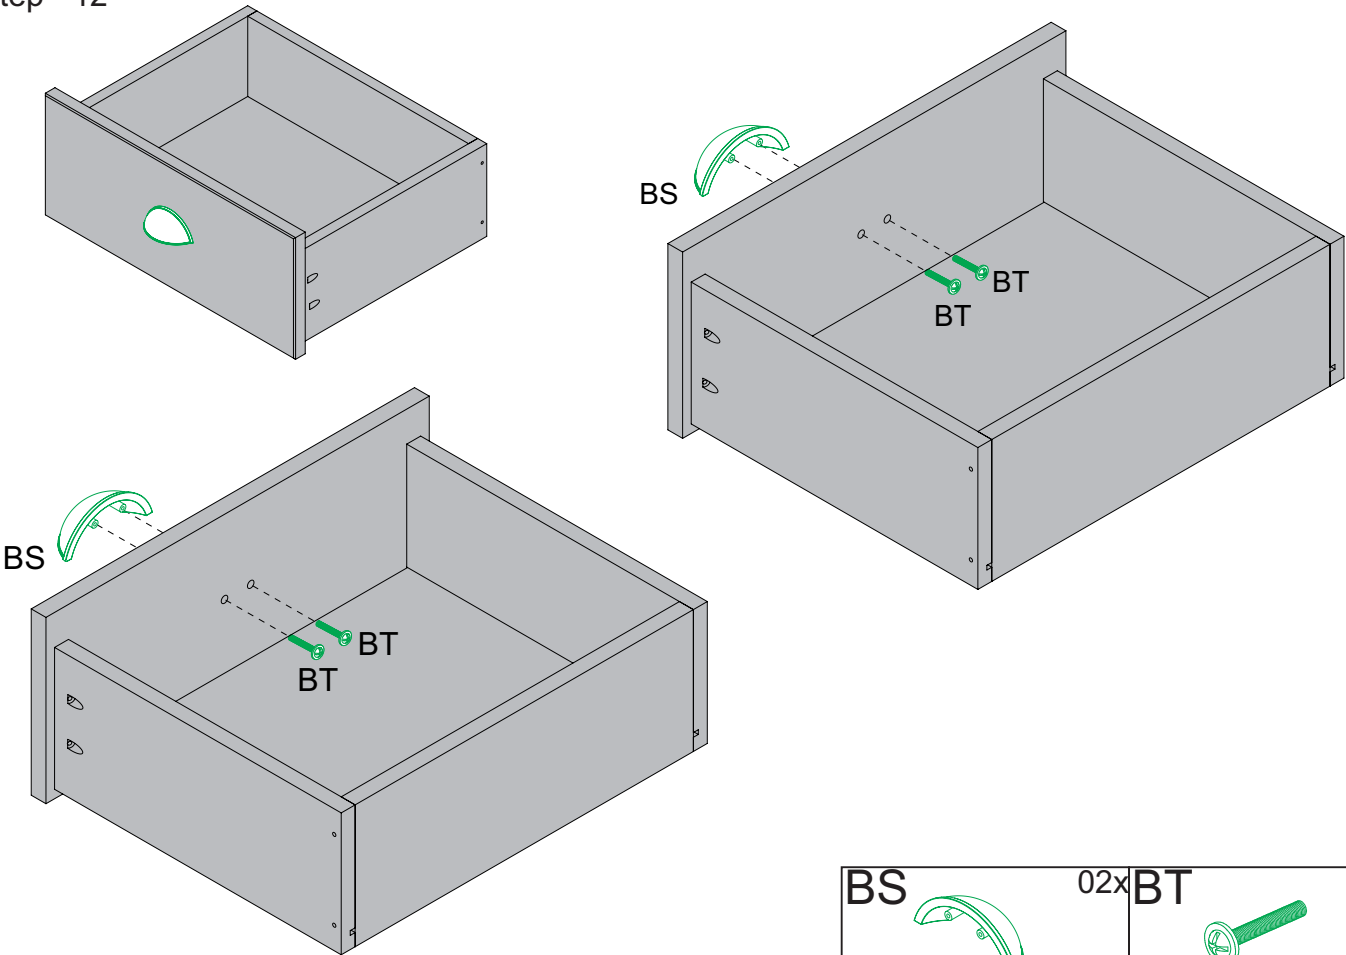Step - 12



BS	02x	BT	04x
			
	ø1/4" x 5"		M4 x 1"

