

H385302, H385303, H385304 ASPYN SCONCE

ASSEMBLY AND MOUNTING INSTRUCTIONS

GENERAL

- WARNING-DISCONNECT POWER BEFORE RELAMPING OR WIRING THE FIXTURE. TURN OFF THE ENTIRE ELECTRICAL CIRCUIT TO WHICH THE LIGHTING FIXTURE IS ATTACHED
- INSTALLATION AND MAINTENANCE OF THIS FIXTURE SHOULD BE COMPLETED BY A LICENSED ELECTRICAN
- FAILURE TO INSTALL FIXTURE CORRECTLY COULD RESULT IN SERIOUS INJURY OR DEATH
- READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION.

- IF AN EXISTING FIXTURE IS BEING REPLACED, REMOVE IT AND NOTE TO WHICH WIRE IN THE OUTLET BOX THE ORIGINAL FIXTURE WAS ATTACHED.
- BEFORE DISCARDING THE CARTON DOUBLE CHECK THE PACKAGING TO MAKE SURE ALL PARTS HAVE BEEN FOUND.
- THIS FIXTURE WAS DESIGNED TO BE MOUNTED TO AN OCTAGON OUTLET BOX. THE BOX MUST BE SECURELY MOUNTED TO THE STRUCTURE OF THE BUILDING.

INSTALLATION

STEP 1.	Drill holes on the ceiling .Attached the mounting plate on the ceiling then secure it with plastic anchor and the screws.		FAILURE TO CONNECT THE APPROPRIATE WIRES CORRECTLY COULD RESULT IN SEROIUS INJURY OR
STEP 2.	Pull the wires out from the outlet box, and install mounting plate onto the outlet box using the (2) mounting screws.	STEP 6.	DEATH!
STEP 3.	Fasten bare ground wire to ground wire from the wall outlet box (usually green or copper color) or connect ground wire to green screw on the mounting plate.		STEP 6. Carefully place connections back into the outlet box. STEP 7. Place back plate over the mounting plate and secure with set screws. STEP 8. Install the lamp(s). The fixture is rated for 4 watt G9 LED lamp.
		STEP 7.	
STEP 4.	Connect the neutral (white) fixture wire coming from the fixture base to neutral (usually white) outlet wire. Fasten	STEP 8.	
	both wires together with a plastic wire nut and tightly wrap the wire nut with electrical tape.		DO NOT EXCEED RECOMMENDED WATTAGE!
		STEP 9.	Assemble the glass shade to the back plate.
STEP 5.	Repeat the previous step with the hot (black wires). Make sure there are no exposed wires or strands that could	STEP 10.	Restore power to the circuit at breaker or fuse box.

DIMMING

The fixture can be controlled by a wall dimming device. Only use triac/electronic dimmer. Make sure carton is marked for use with LED compact fluorescent-incandescent light source only. These can be

provided by your local electrical distributor, home center, or hardware store.


CLEANING

Please clean with a soft, dry cloth ONLY! Do not use cleaning products.




H385302, H385303, H385304 ASPYN SCONCE

ASSEMBLY AND MOUNTING DIAGRAM

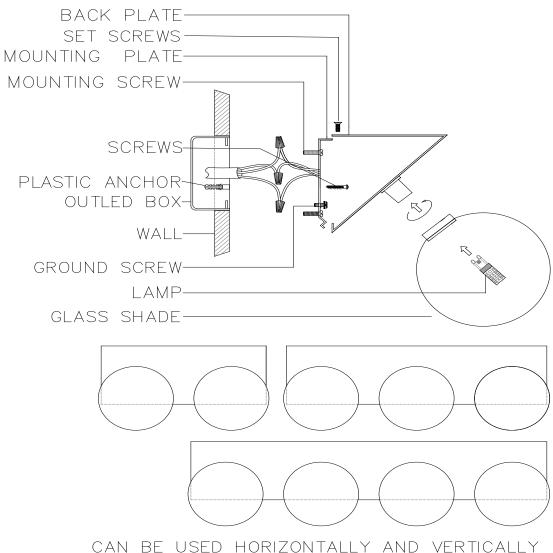

WIRE NUT/TAPING DIAGRAM



www.hudsonvalleylighting.com/mitzi| #mymitzi