













## Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Seat		1x
B	Tray		1x
C	Long Leg		2x
D	Short Leg		2x
E	Support Leg		2x
F	Wheel		2x
HW1	Bolt and nut	 M8x50	8x
HW2	Wheel Bolt		2x
HW3	Screw L	 M6x60	4x
HW4	Screw S	 M6x40	4x
HW5	Wrench		1x
HW6	Allen Key		1x

# JY

JONATHAN Y


MODEL# PAT1003

Product Dimension: 68.9"D x 23.62"W x 13.39"H

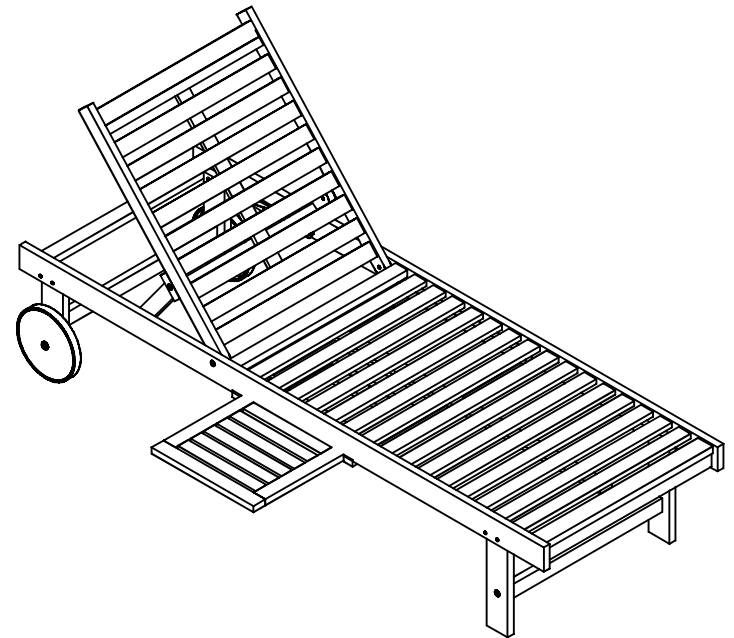


# PREPARATION

Tool required for assembly (included): Allen Key and Wrench.

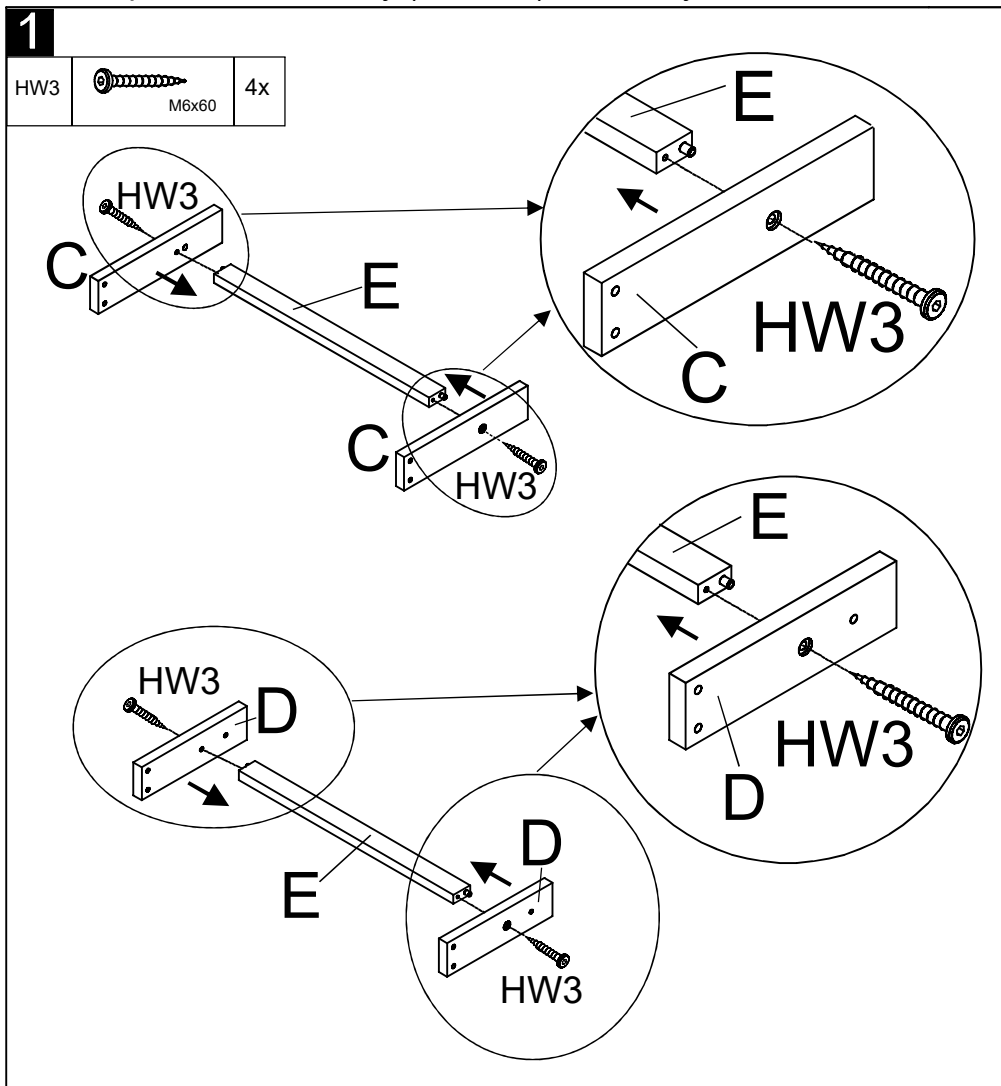


Step 1: Attach the Long leg (C) and Short leg (D) to the Support (E) as shown on the picture. Using the Screw L (HW3) and tighten with the Allen key (HW6) as shown on the picture.

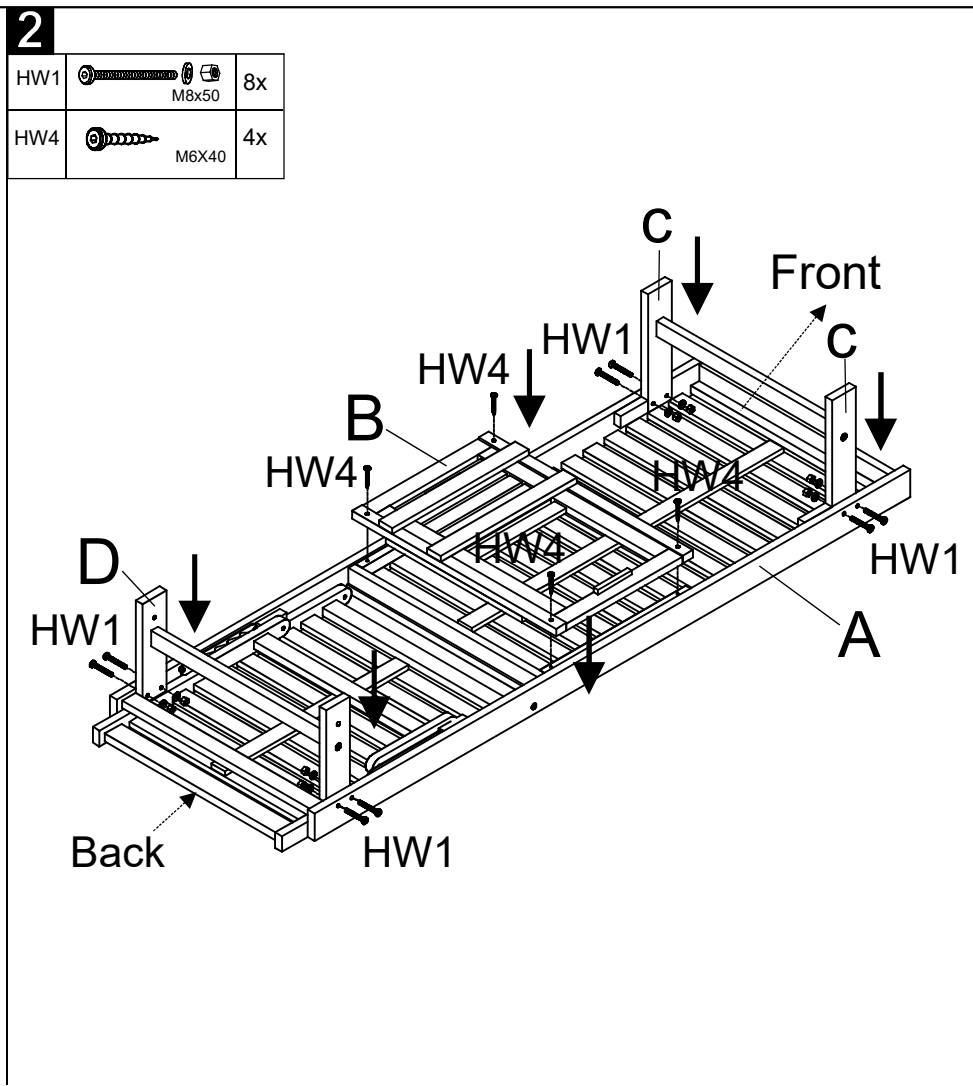


Step 2: Attach set of Long leg (C) and Short leg (D), the Tray (B) to the Seat (A) as shown on the picture. Using the Bolt & nut (HW1) and Screw S (HW4) to put into all position as shown on the picture. Make sure correct position Long leg in the front, short leg in the rear as shown on the picture.

3

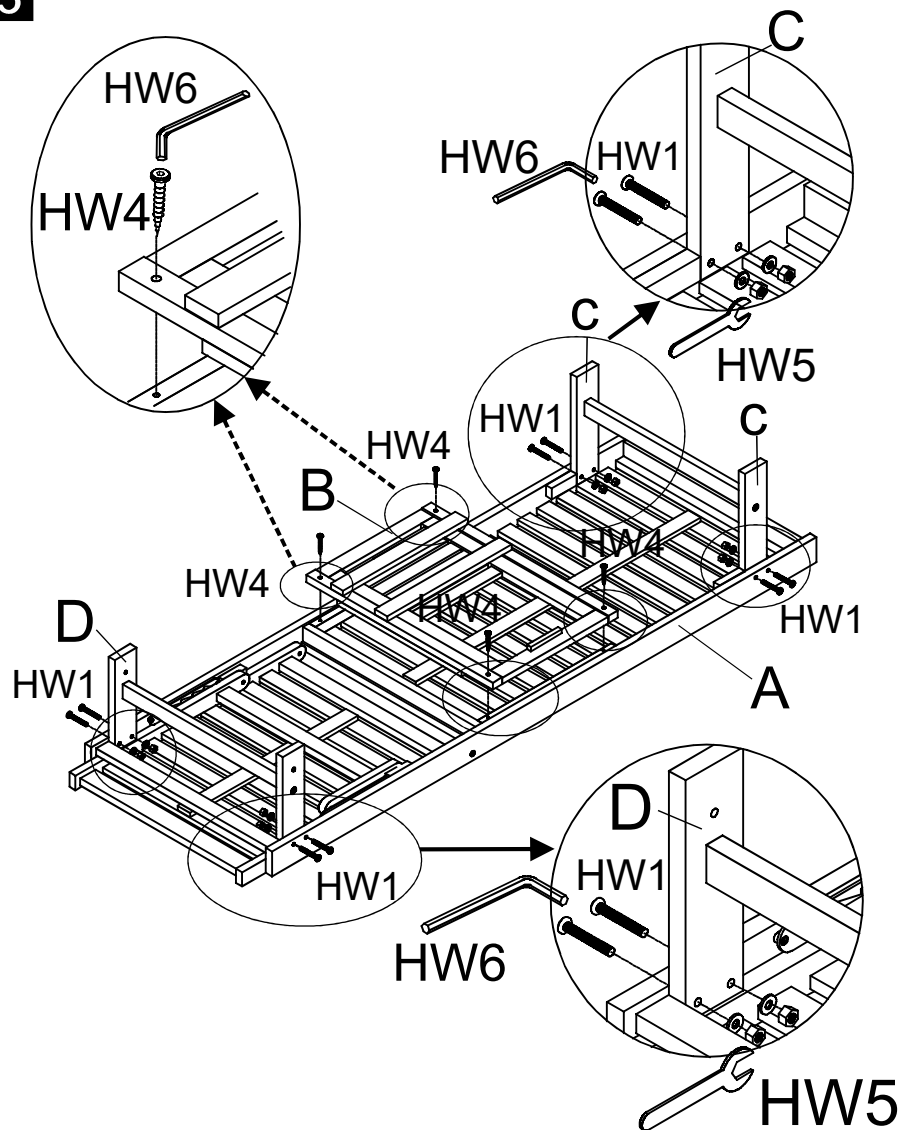

Step 3: Tighten all Bolt & nut (HW1) and Screw S (HW4) by using the Wrench (HW5) and Allen key (HW6) as shown on the picture.

4

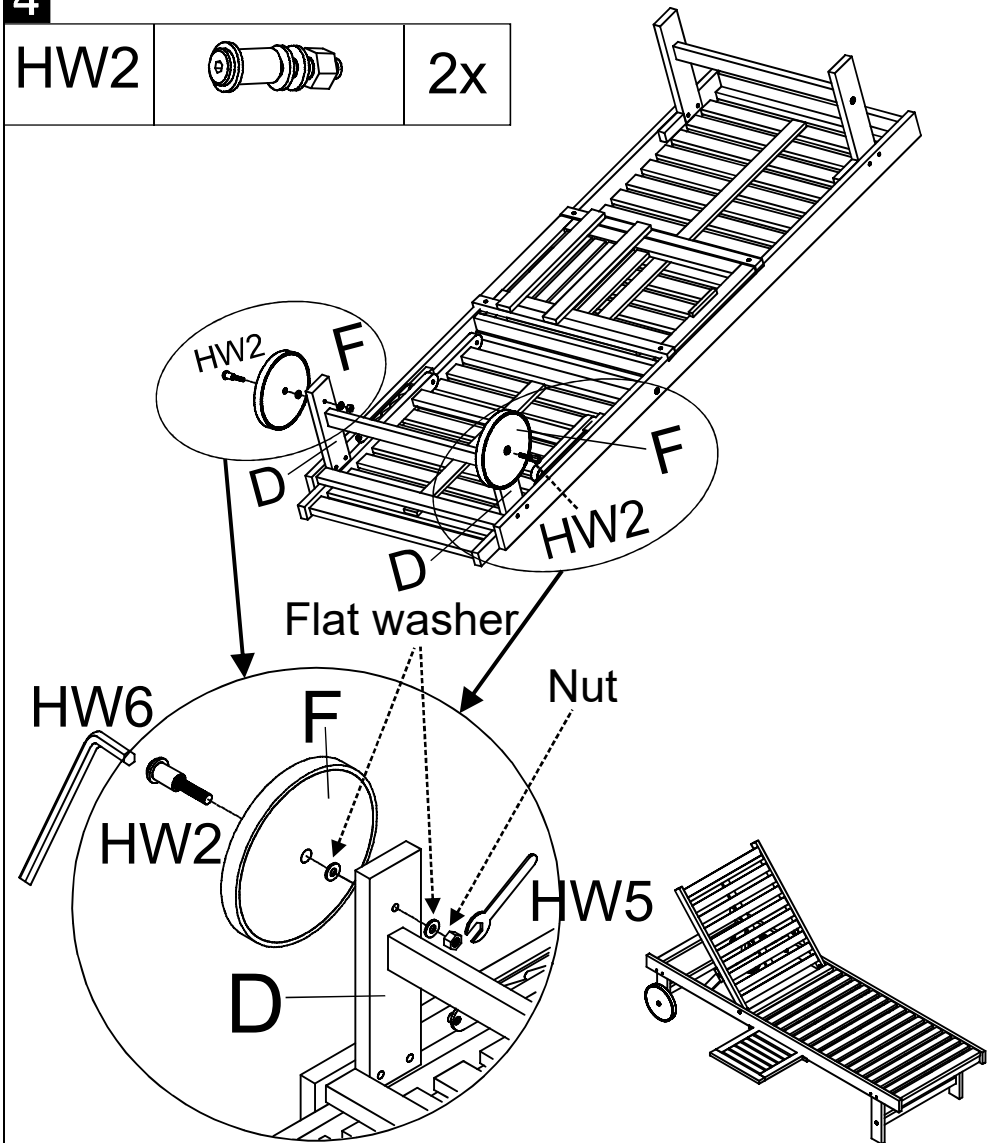

Step 4: Attach the Wheel (F) to the Short leg (D) and using the Wheel bolt (HW2) as shown on the picture. Tighten it by the Wrench (HW5) and Allen key (HW6) as shown on the picture.