




DESIGNED FOR LIFE

Assembly Instructions

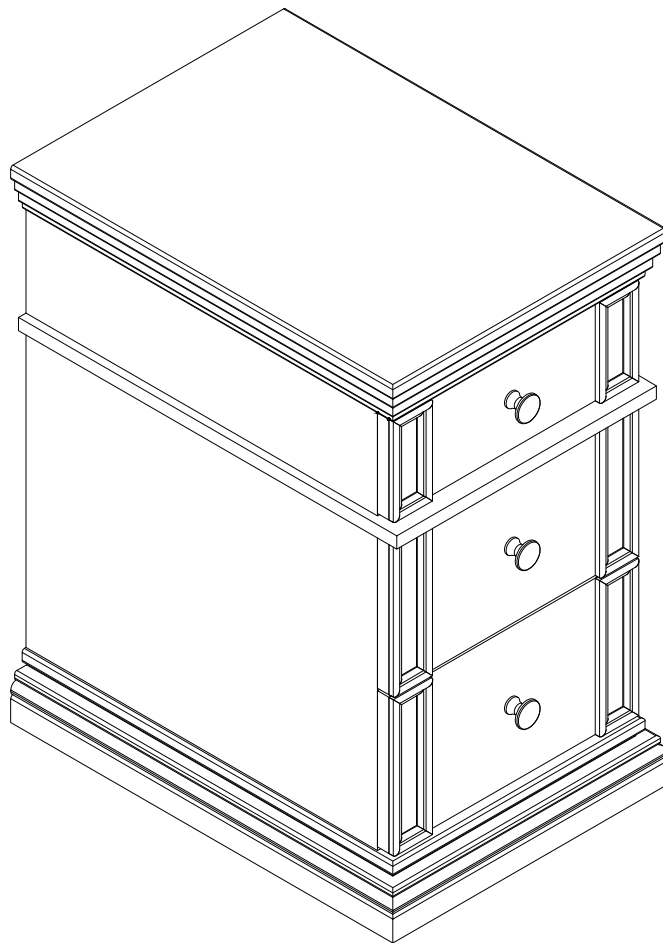

Side Cabinet

Model No.
HOGA-RY0259



LITTLE TREE
Little Tree by Tribesigns

www.tribesigns.com



Contact Us

We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

How to Get the Assembly Video

Step 1


Scan the QR code.






Installation Video

Step2

Search with the Model No.
(on the bottom left corner of the title page)

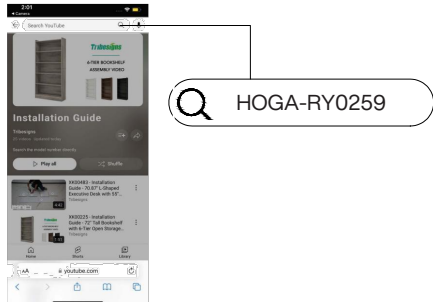


Note: If you can't find the assembly video, please contact us.

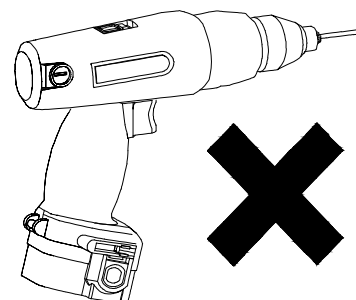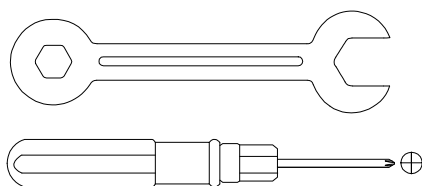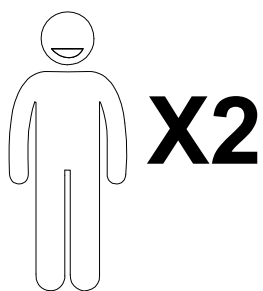



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

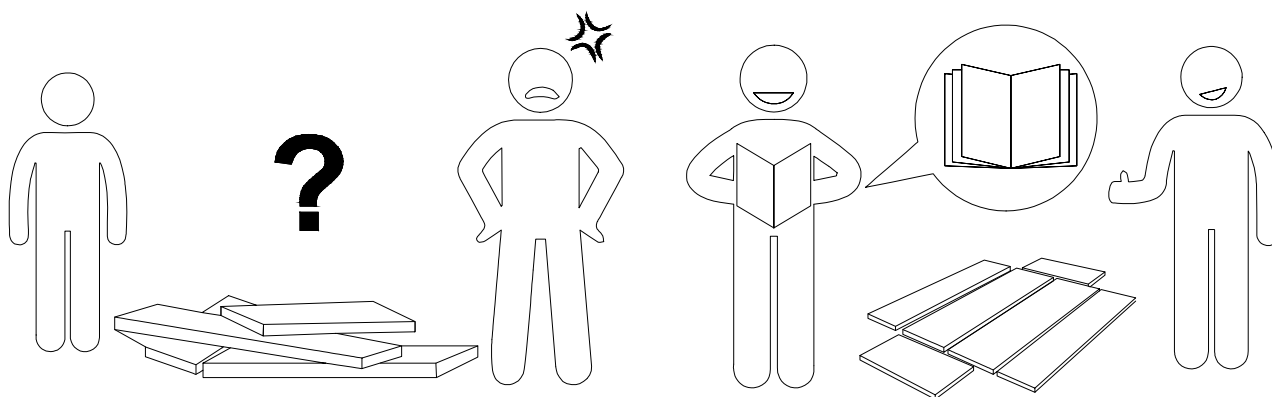

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.













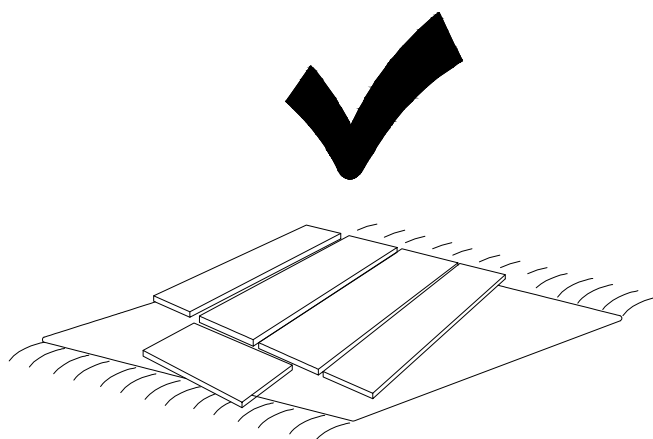
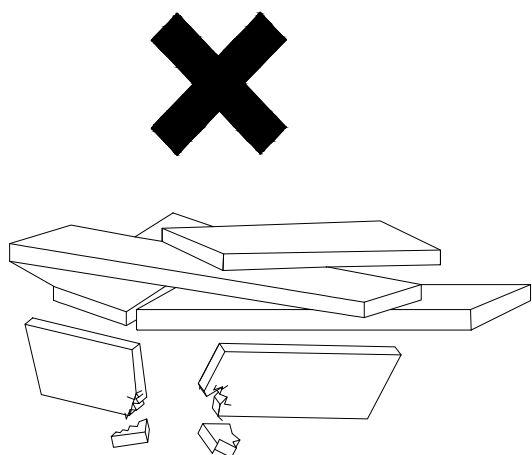


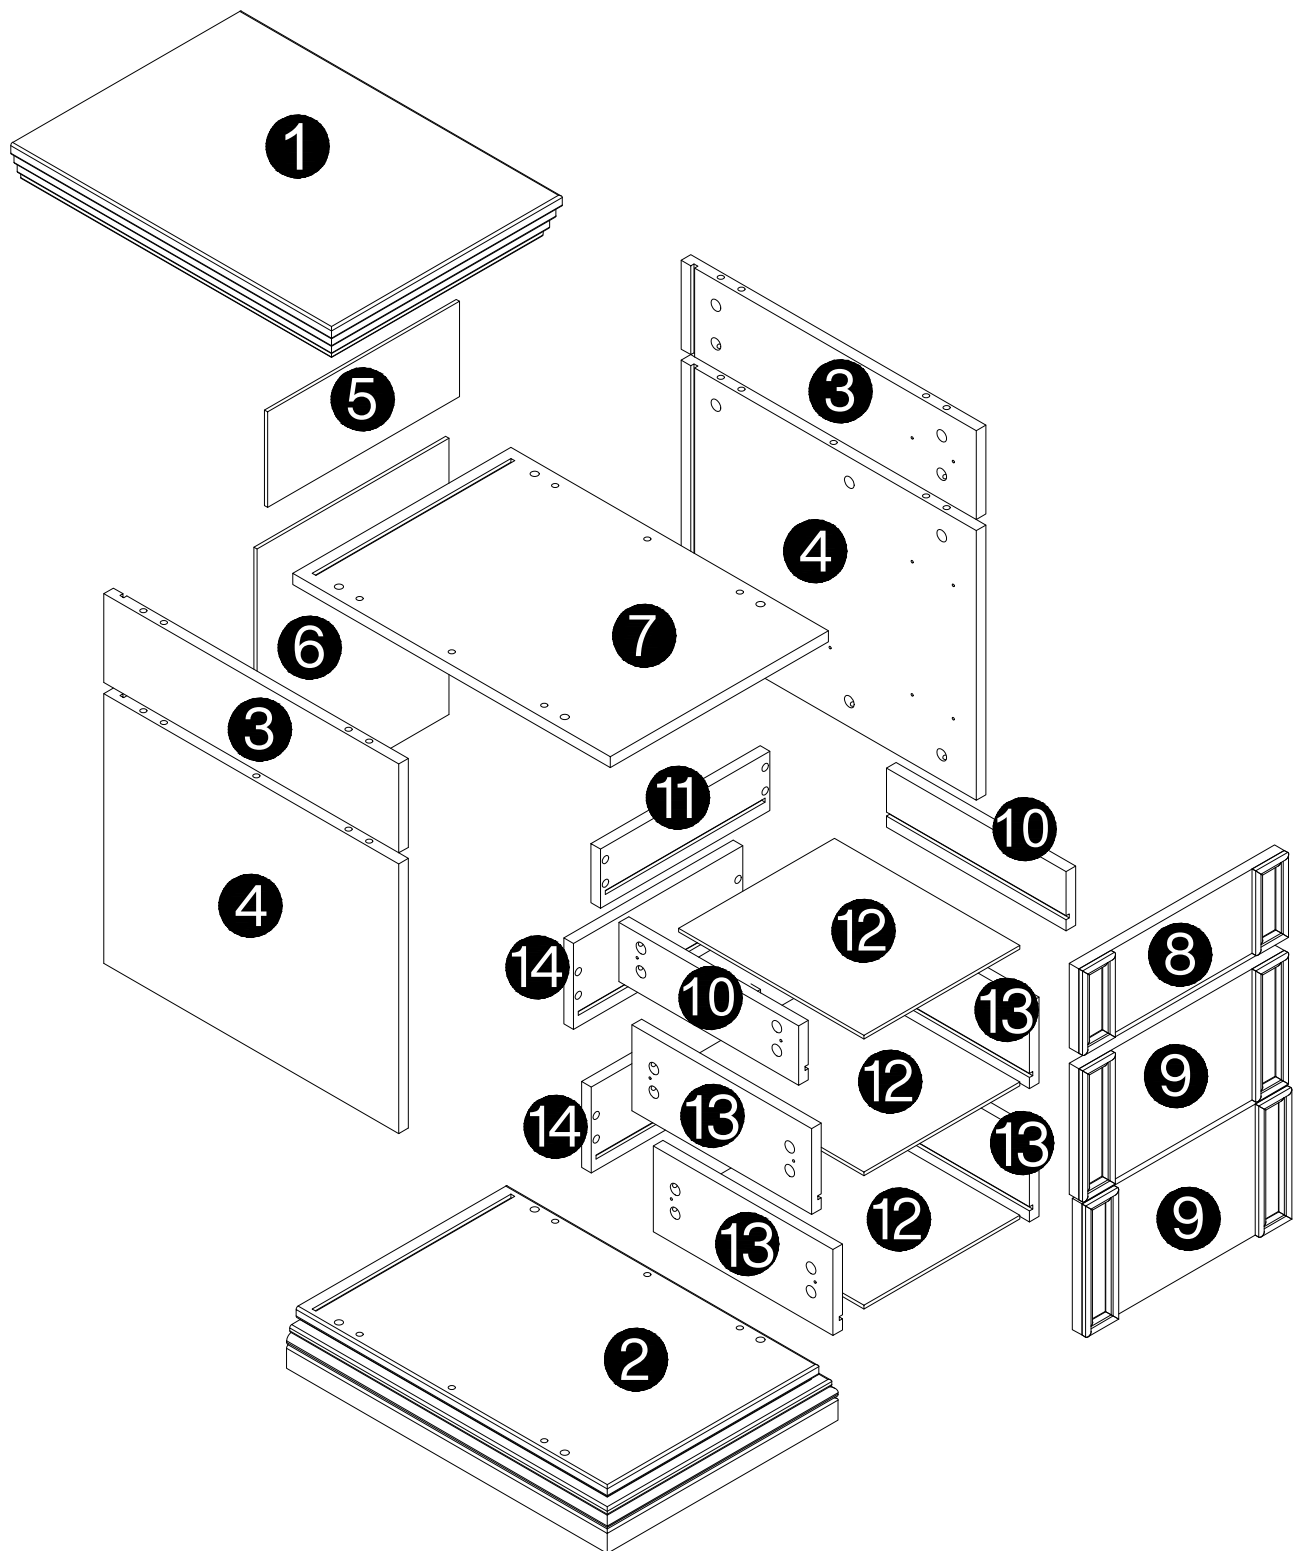**Caution**













Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

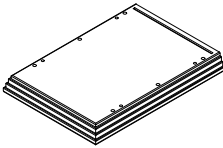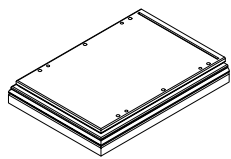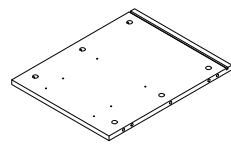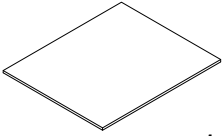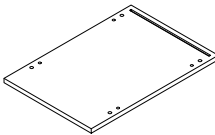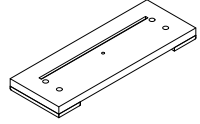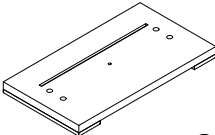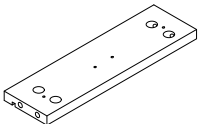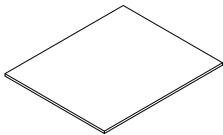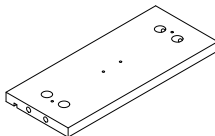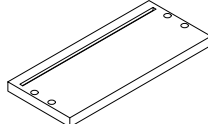

Parts List

1  1pc	2  1pc	3  2 pcs	4  2 pcs
5  1pc	6  1pc	7  1pc	8  1pc
9  2 pcs	10  2 pcs	11  1pc	12  3 pcs
13  4 pcs	14  2 pcs		


Hardware List

A	B	C	D	E	F
 M6×40mm 36+1 pcs	 M6×40mm 12+1 pcs	 Ø15×12mm 48+1 pcs	 Ø8×30mm 8+1 pcs	 Ø8×50mm 4 pcs	 300mm 6 pcs
G	H	I	J	K	L
 Ø30x20mm 3 pcs	 M4×20mm 3 pcs	 17x16x10.5 8 pcs	 Ø3.5X14mm 36 pcs	 Ø3.5X18mm 8 pcs	 M6 4 pcs




Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

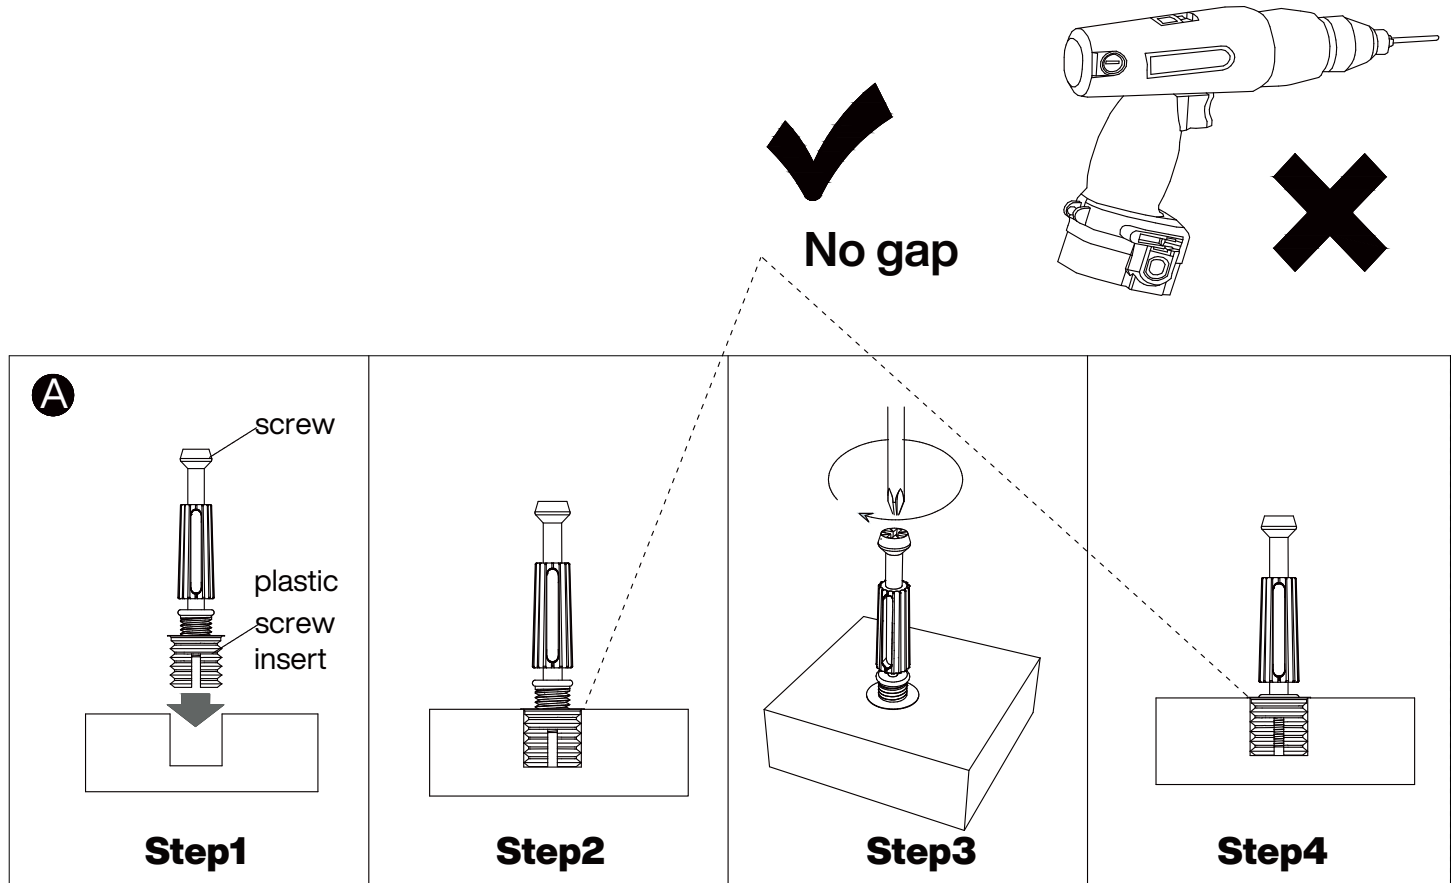

Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

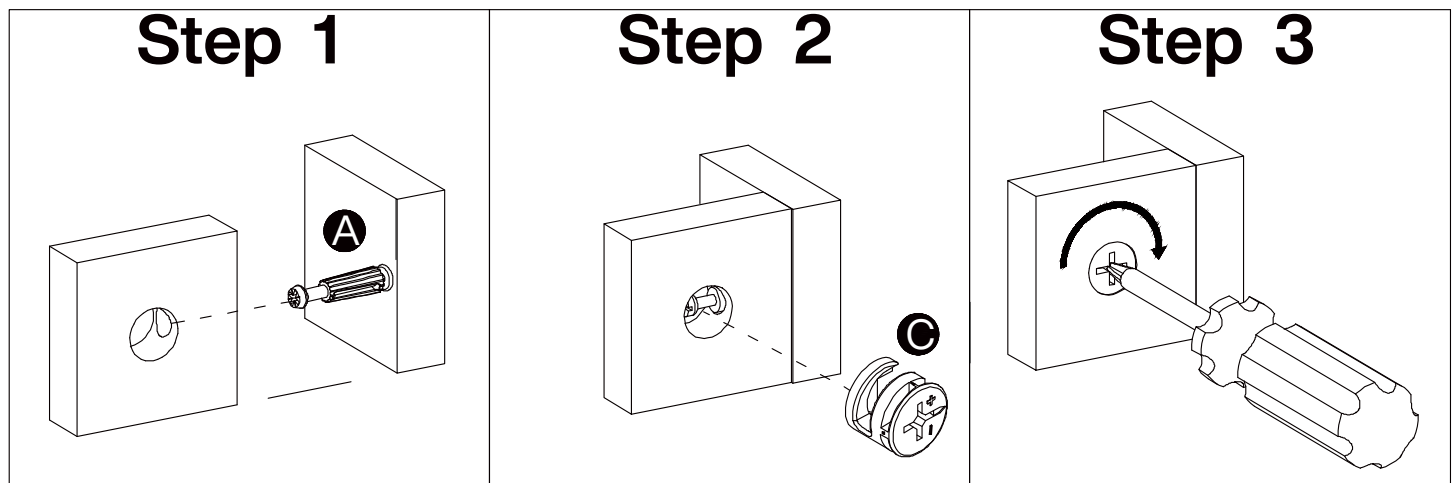





Please split component “F” into “F-1” and “F-2” before assembling the slide and then proceed to the next step of assembly



Step 1

Pull apart component "F" to each side, and then gently push up the lever of component "F-2"

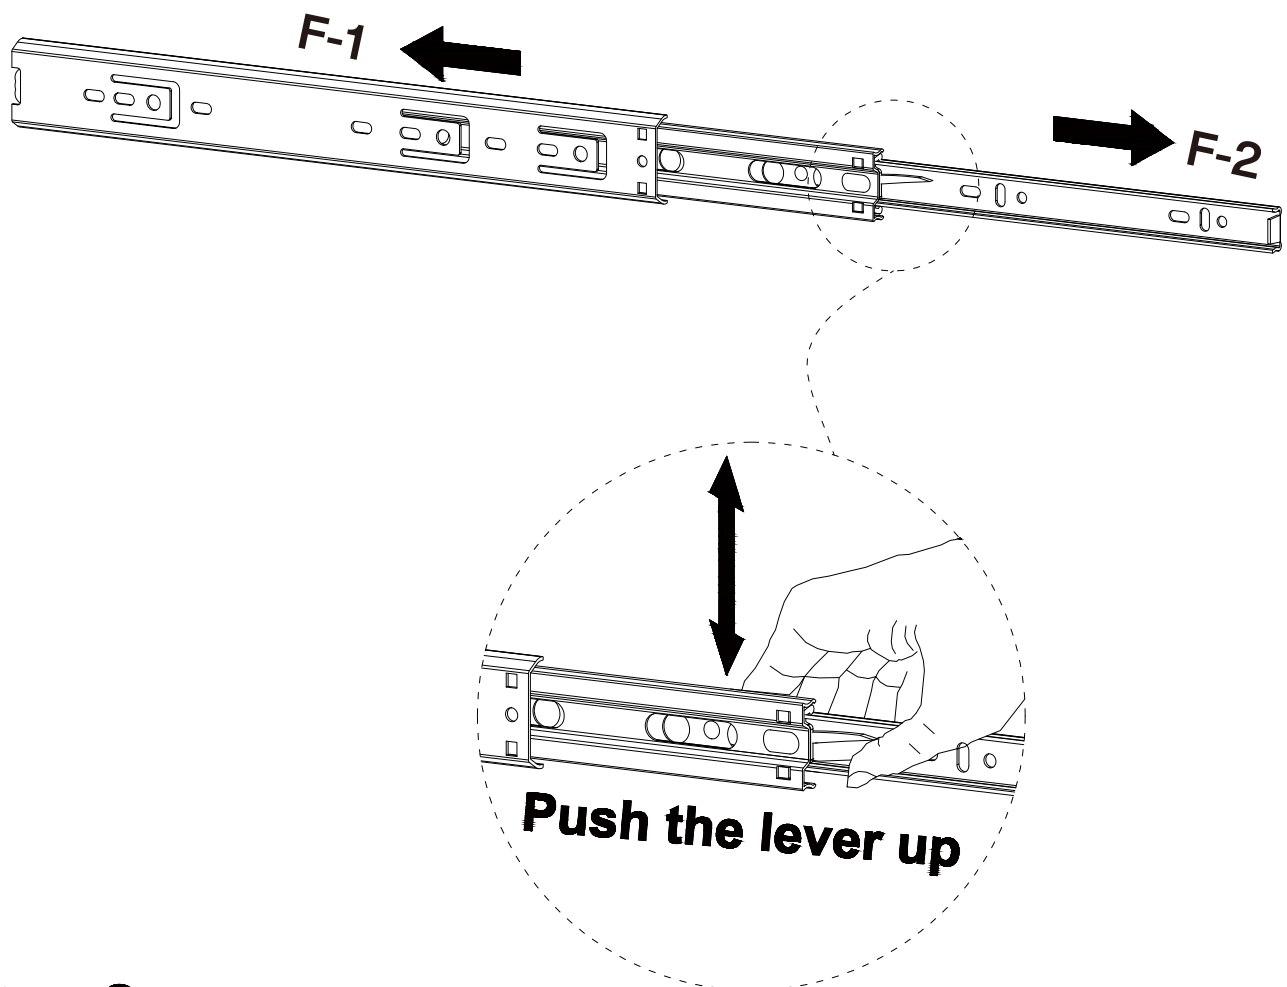

Step 2 Split component “F-1” and “F-2”

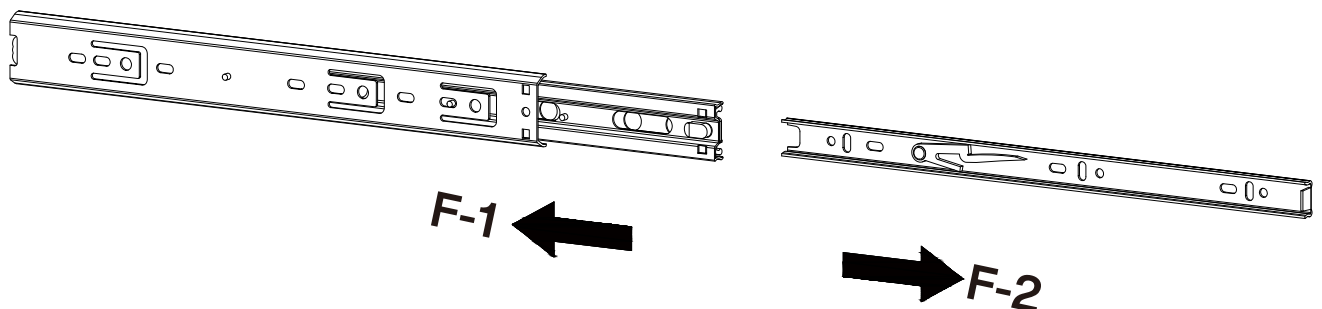

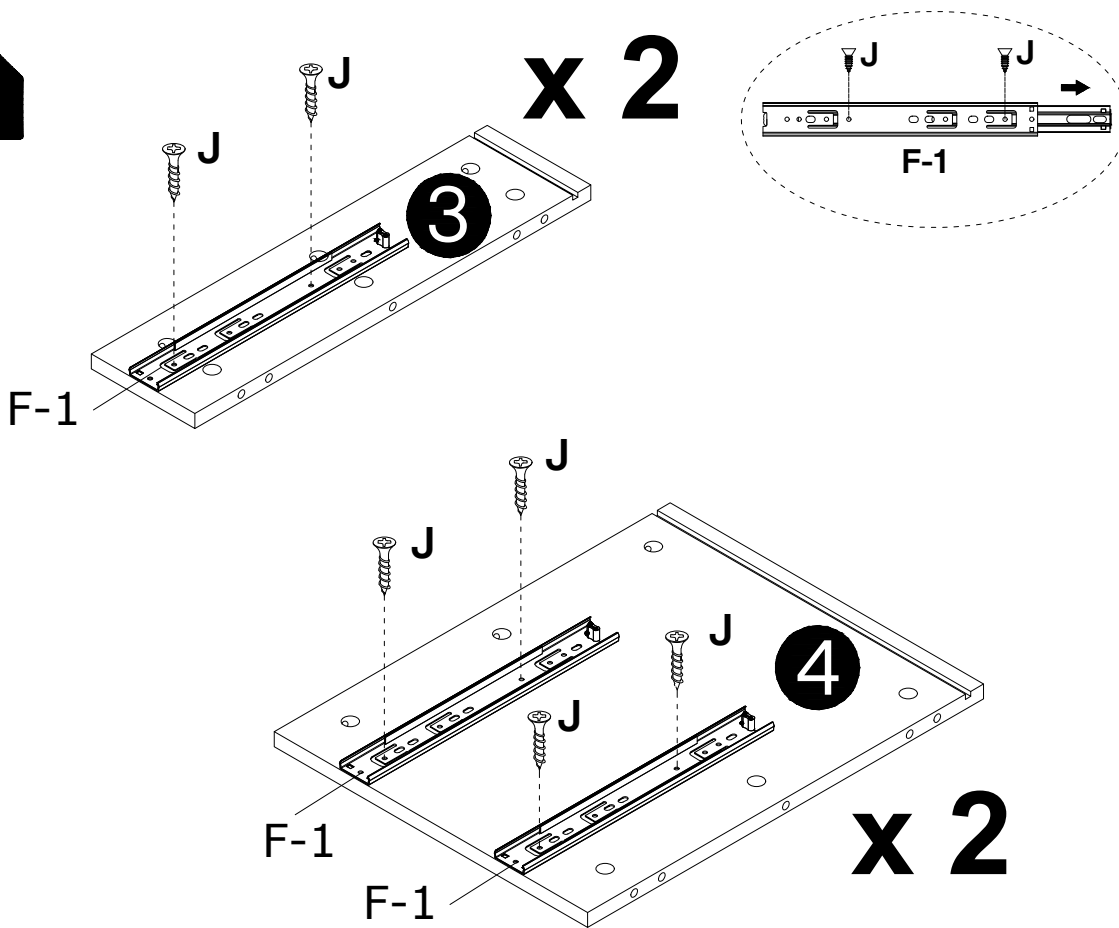**1****J**



Ø3.5×14mm

12 pcs

F-1

300mm

6 pcs

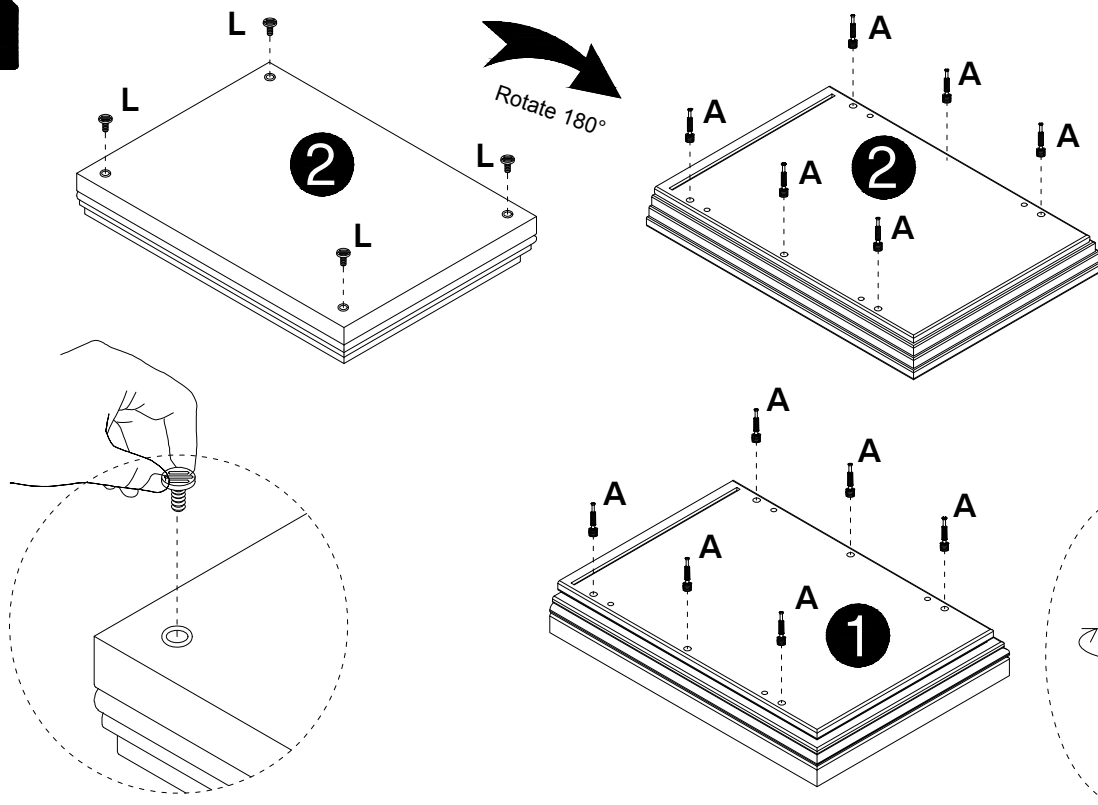2**A**


M6×40mm

12 pcs




L

M6


4 pcs

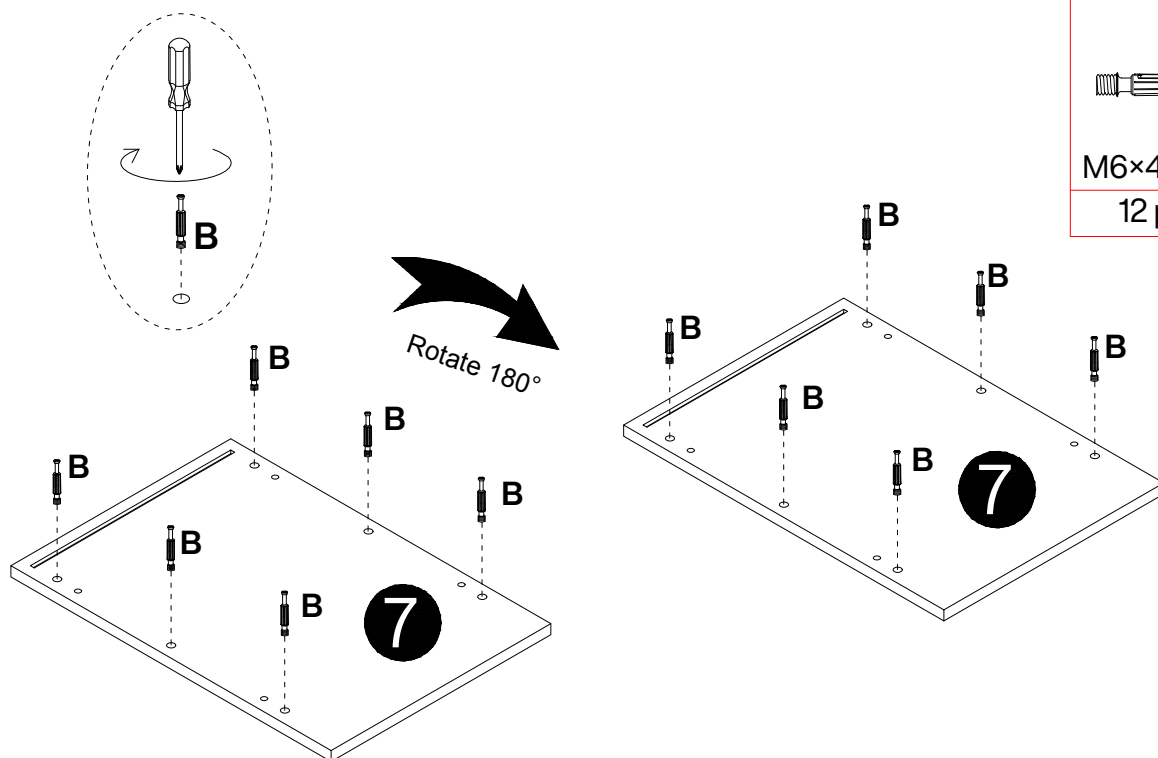**3****B**

M6×40mm
12 pcs

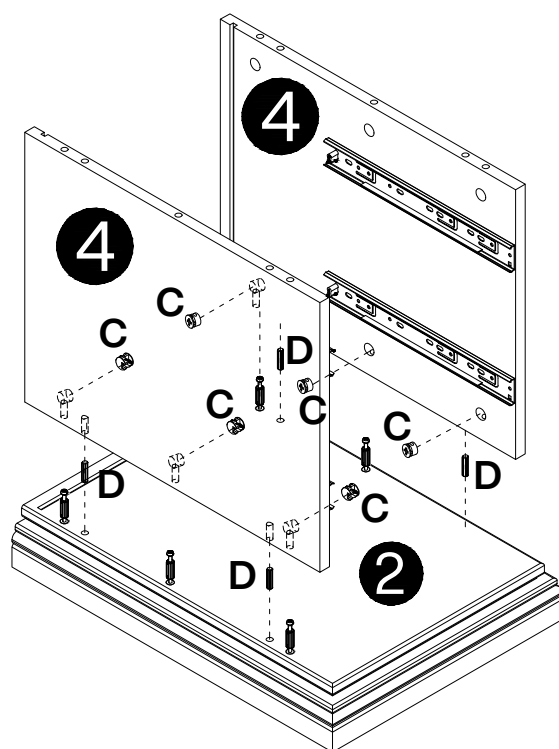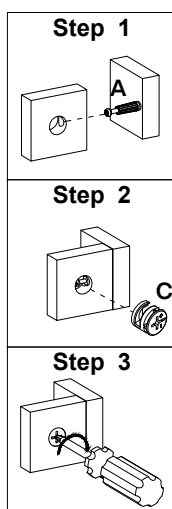4**C**


Ø15×12mm
6 pcs

D



Ø8×30mm
4 pcs




5

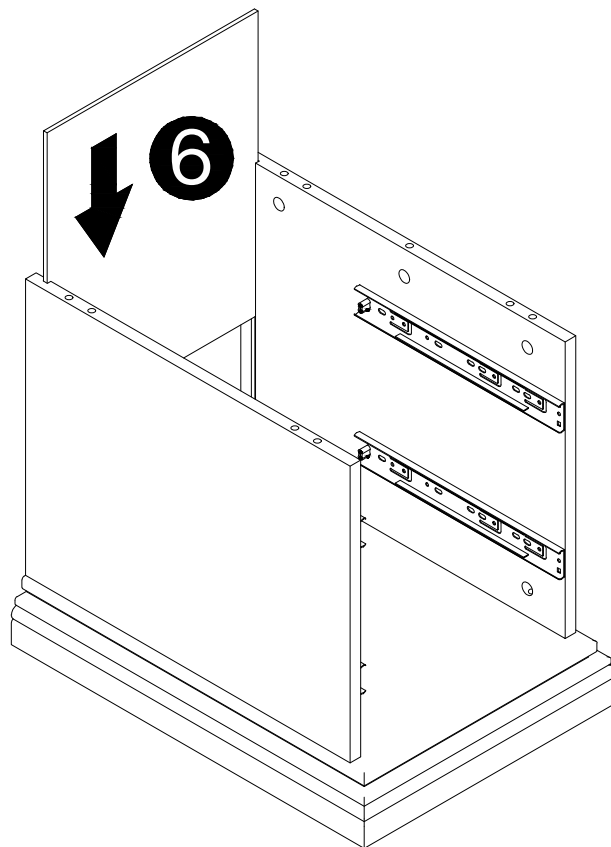

6

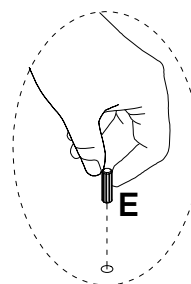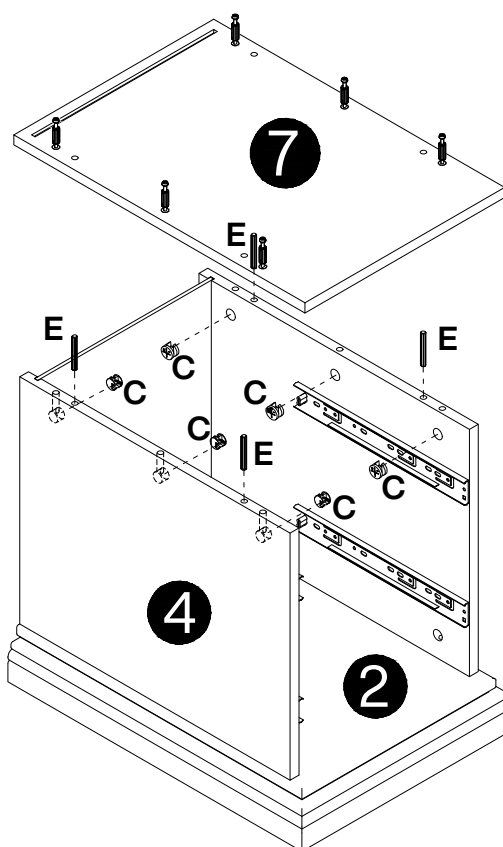


C



Ø15×12mm

6 pcs


E




Ø8×50mm

4 pcs


Step 1



Step 2




Step 3

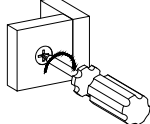




7

C




Ø15×12mm


6 pcs

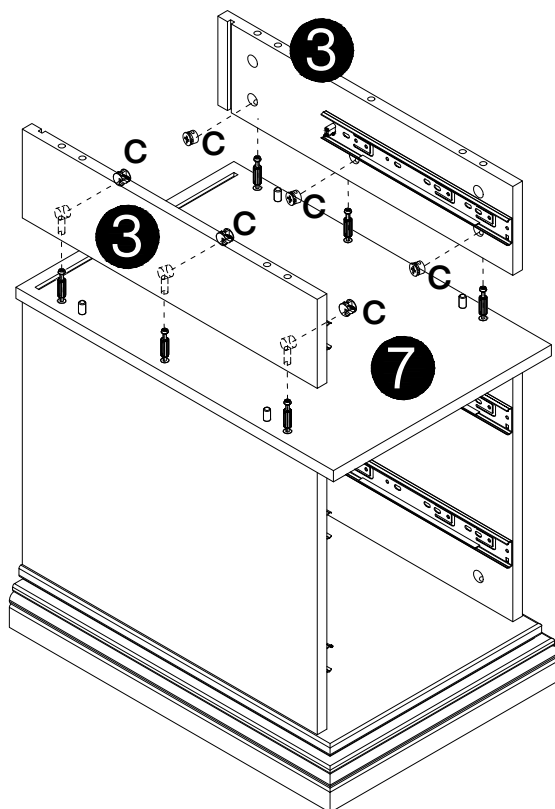


Step 1




Step 2



Step 3


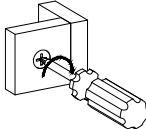


8

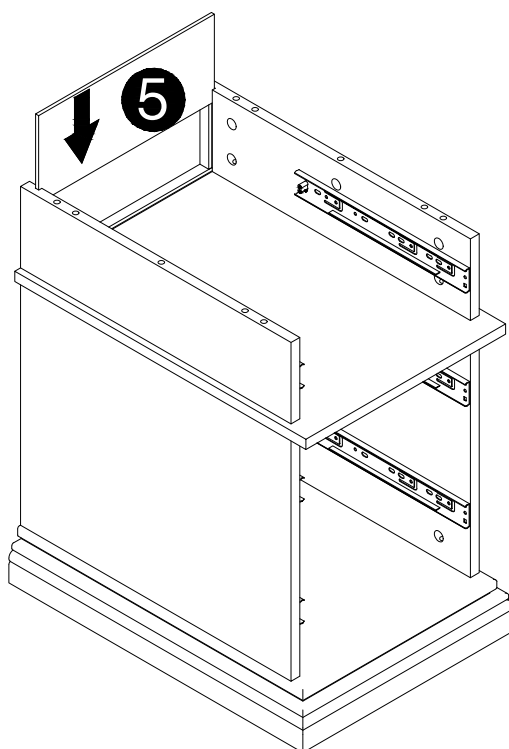




9

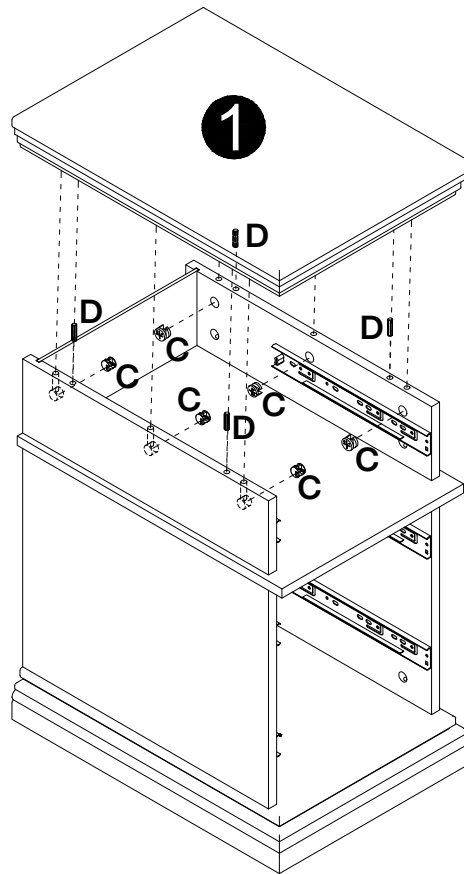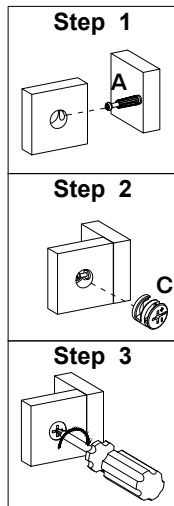


C



Ø15×12mm

6 pcs



D



Ø8×30mm


4 pcs

10

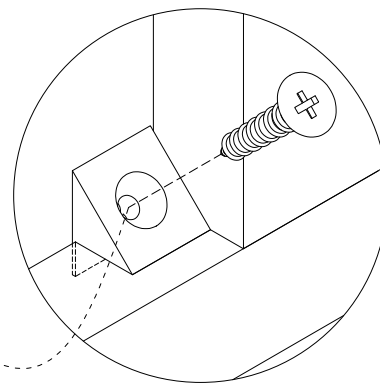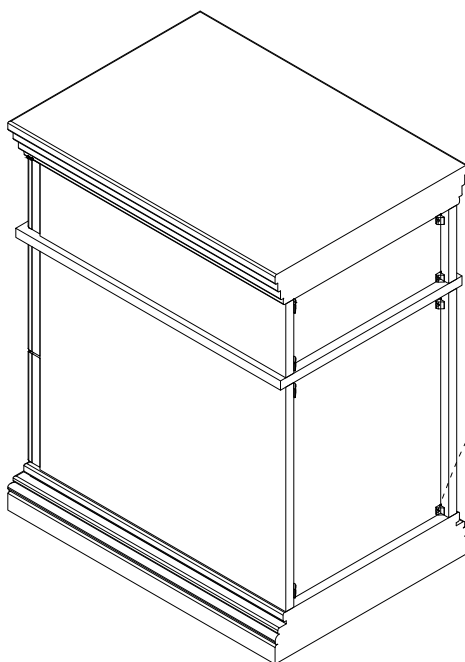

Back Plate Buckle


B



17x16x10.5

8 pcs

K




Ø3.5×18mm


8 pcs



11

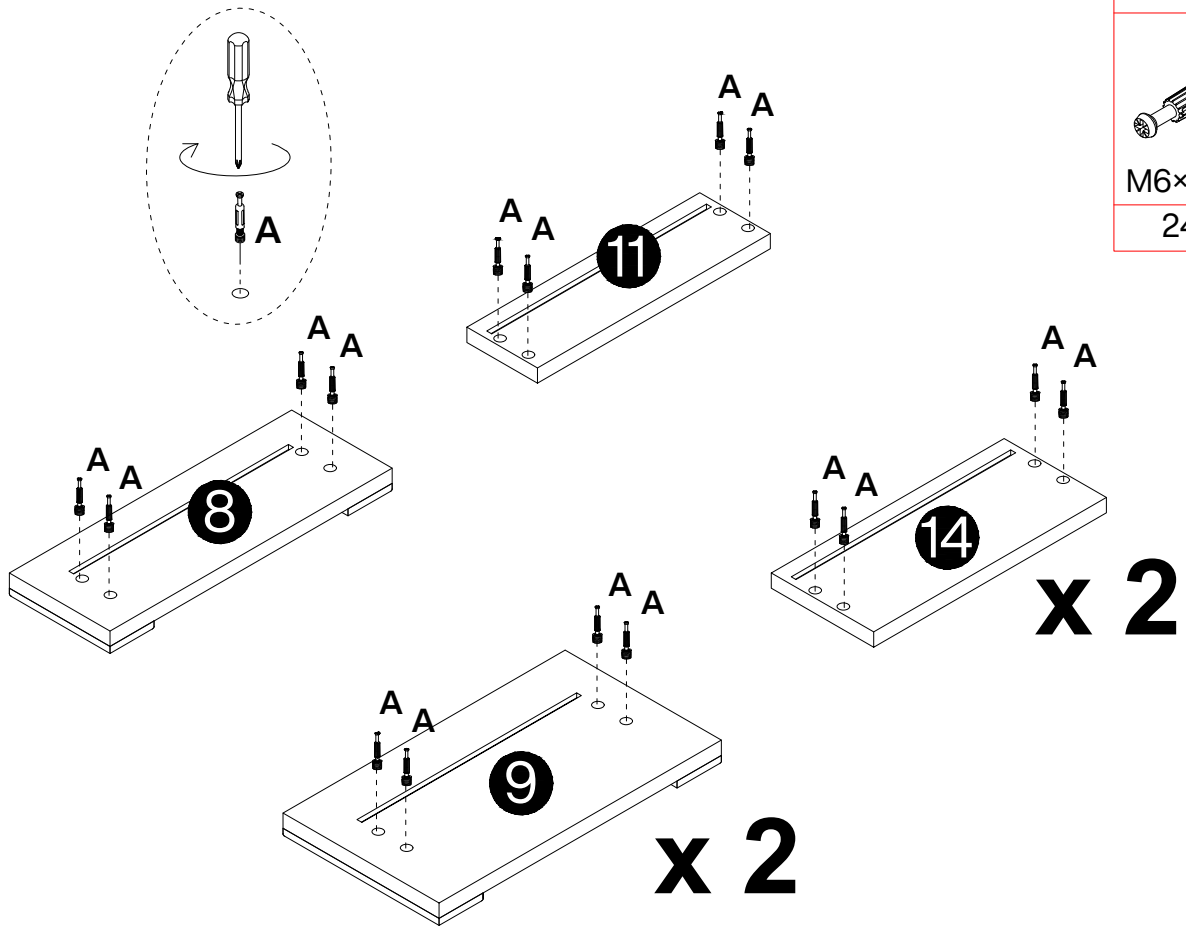


A




M6×40mm

24 pcs

12

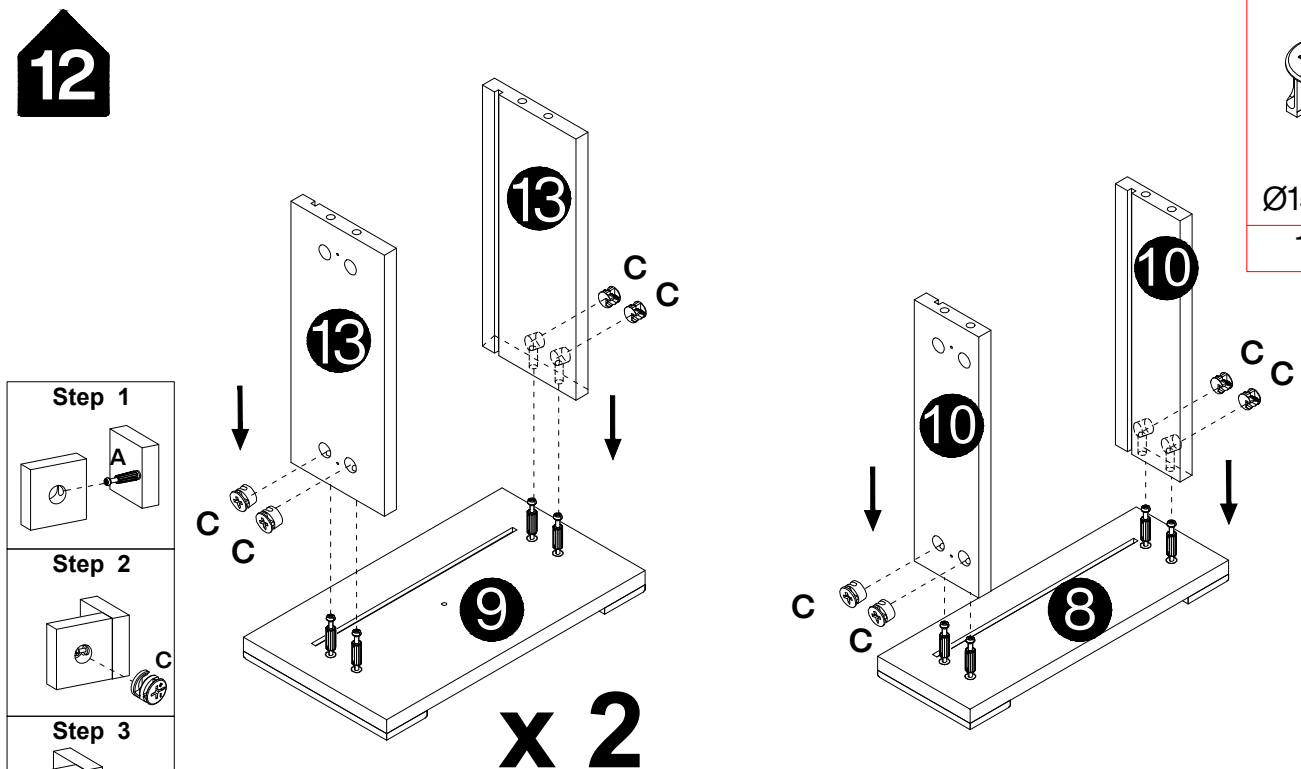


C




Ø15×12mm

12 pcs


Step 1



Step 2





Step 3






13

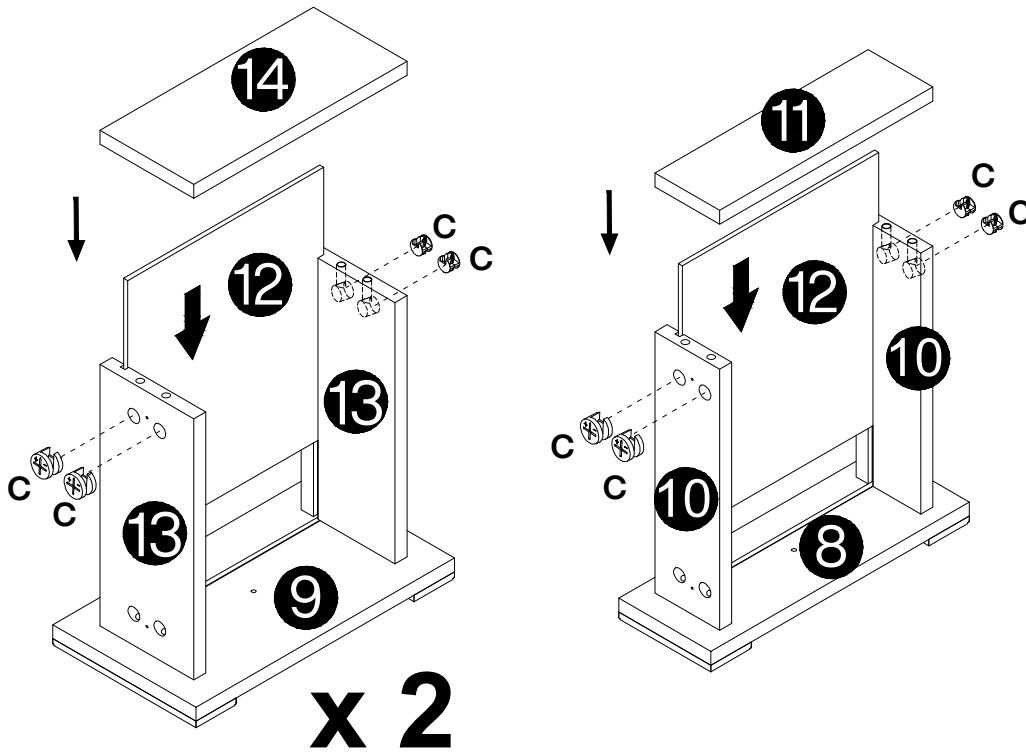
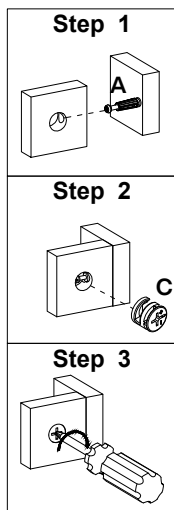


C




Ø15×12mm
12 pcs

14

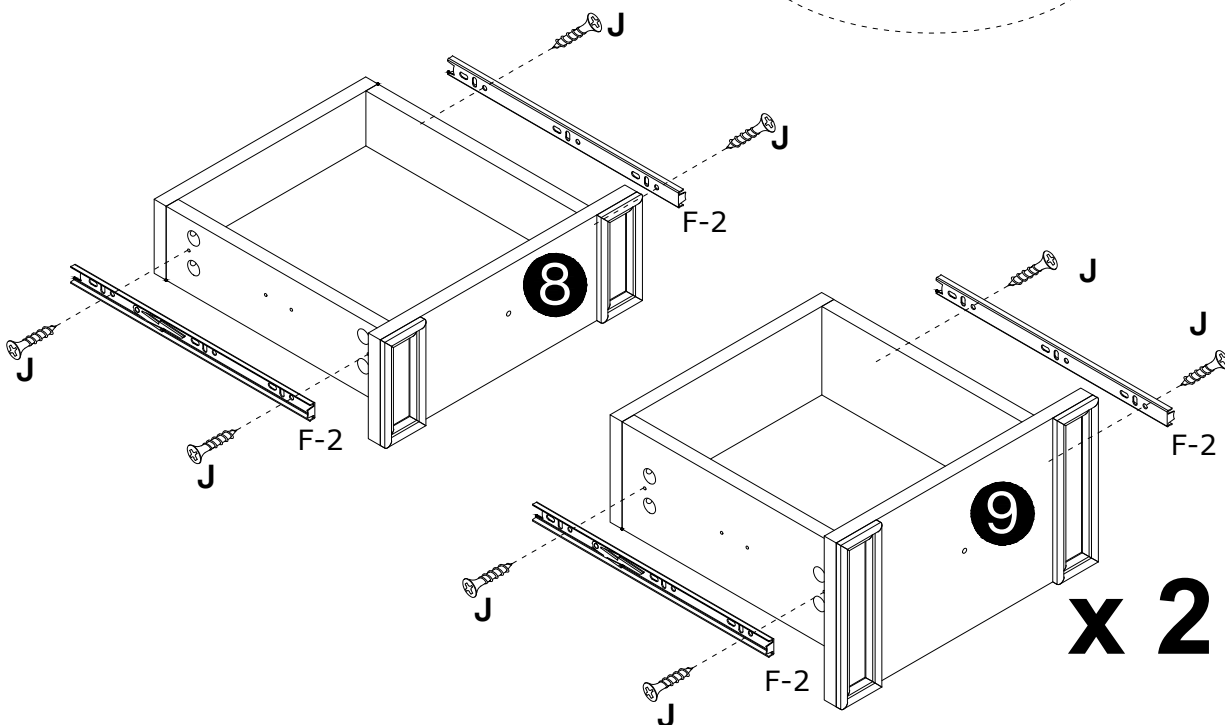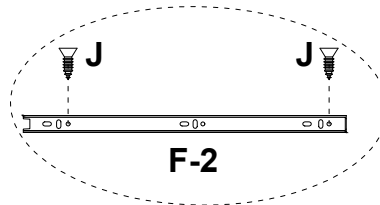

J



Ø3.5×14mm
12 pcs


F-2



300mm
6 pcs



15

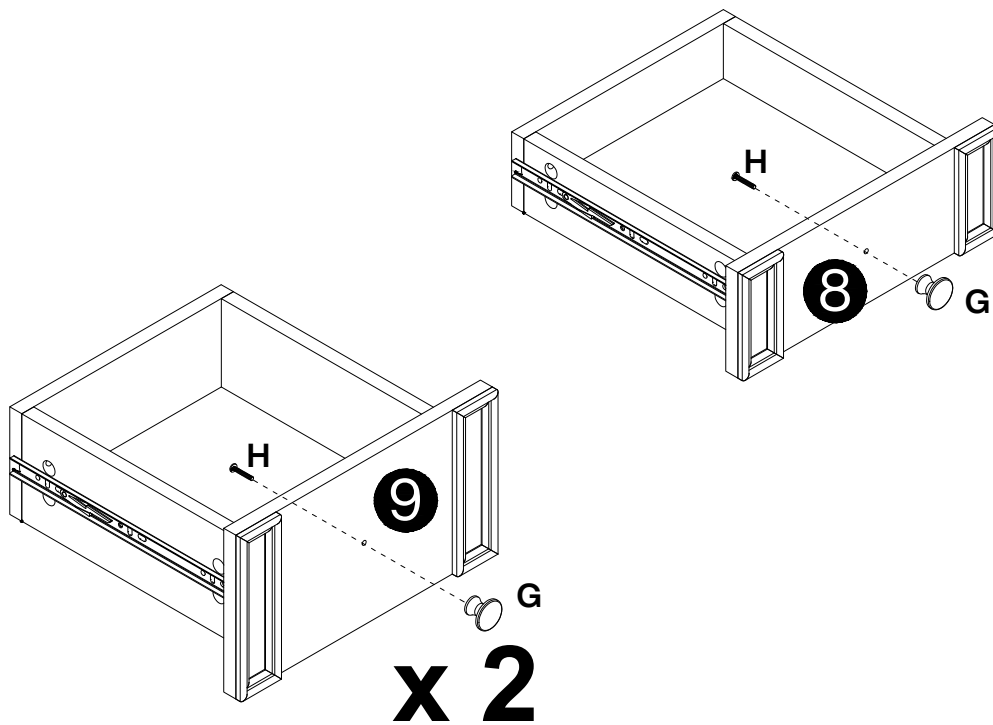

G



Ø3.5×14mm

3 pcs


H




Ø4×20mm

3 pcs


16

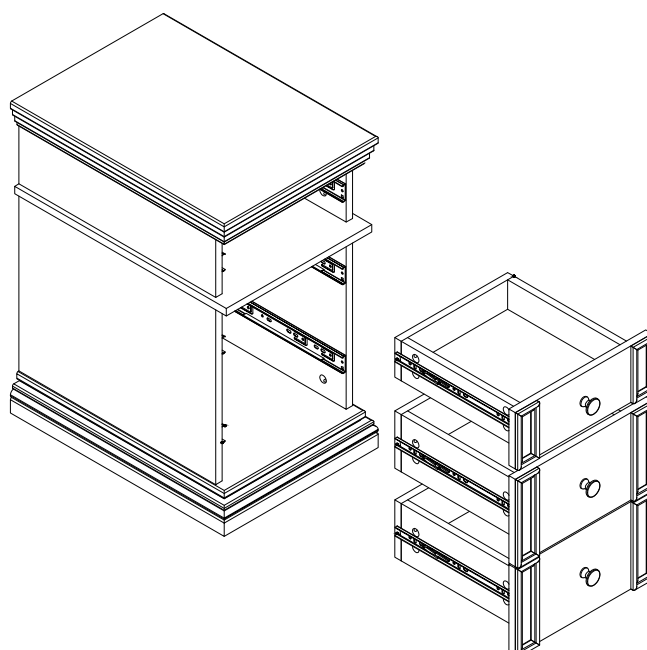


Step 1

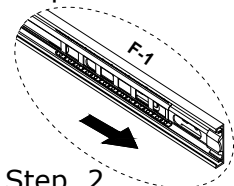

Step 2

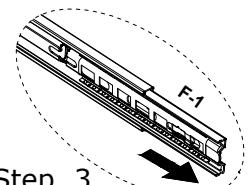

Step 3

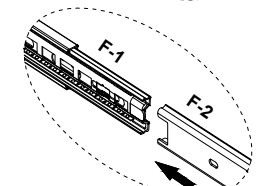


Before installation, slide the inner iron pieces of #F-1 to the outermost side. Then align it with #F-2 and gently push it inward to complete the slide installation.



DESIGNED FOR LIFE

Thank you for your support!

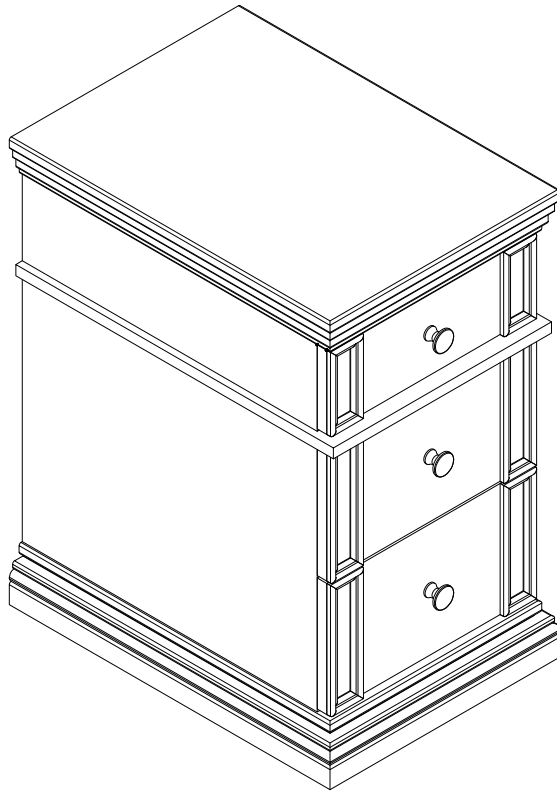

Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888

7 AM to 8 PM EST,
Monday to Friday

Follow Tribesigns



Facebook



Instagram



Pinterest



Twitter



YouTube



TikTok



WhatsApp