

Shower Door Kit

Installation Instructions

English Instructions.....

FREEDOM[®]
OUTDOOR LIVING



Read all instructions prior to installing product.

Refer to manufacturers safety instructions when operating any tools.

To register your product, please visit: **freedomproduct.com**

⚠ WARNING:

- Improper installation of this product can result in personal injury. Always wear safety goggles when cutting, drilling and assembling the product.
- Incorrect installation may cause harm to the product or individual.

NOTICE:

- DO NOT attempt to assemble the kit if parts are missing or damaged.
- DO NOT return the product to the store. For assistance or replacement parts call: 1-800-336-2383.

BEFORE YOU BEGIN:

Check your local zoning laws.


- Local zoning laws and Home Owners Associations may regulate the location, style and height of your product or even require a permit signoff beforehand.
- Check local codes for frost line depth and regulations.
- You must have the utility companies clearly mark your property for electrical, gas or water lines to avoid puncturing any unseen underground utilities.

TOOLS/MATERIALS NEEDED:

Drill
#2 Square Drive Bit
3/32" Drill Bit
Phillips Screwdriver
Rubber Mallet
10" Wood Blocks
Tape Measure
Line Level and Plumb Bob
Safety Glasses
Pencil


Component list:

Item #	Description	Qty.
1	7/8" x 1-1/2" x 51-1/2" Privacy Strip	1
2	7/8" x 1-1/2" x 18-1/4" Privacy Strip	1
3	7/8" x 1-1/2" x 25" Privacy Strip	1
4	7/8" x 6" x 50" Tongue & Groove Board	4
5	7/8" x 4" x 50" Tongue End Board	1
6	7/8" x 4" x 50" Groove End Board	1
7	2-3/4" x 4-3/4" x 59-1/2" Door Upright	2
8	1" x 1-3/8" x 47-3/8" U-Channel	2
9	1-3/4" x 5-1/2" x 40-3/8" Top/Bottom Rail	2
10	Installation Instructions	1
11	7/8" x 1-1/2" Privacy Strip End Cap	6
12	2-3/4" x 4-3/4" x 1" Door Upright Post Cap	2
13	4oz. Glue	1
14	Standard Wrap Hinge Kit - Black	1
15	Outdoor Shower Door Screw Pack	1
16	Heavy Duty Gate Latch - Black	1
17	Gate Handle - Black	1

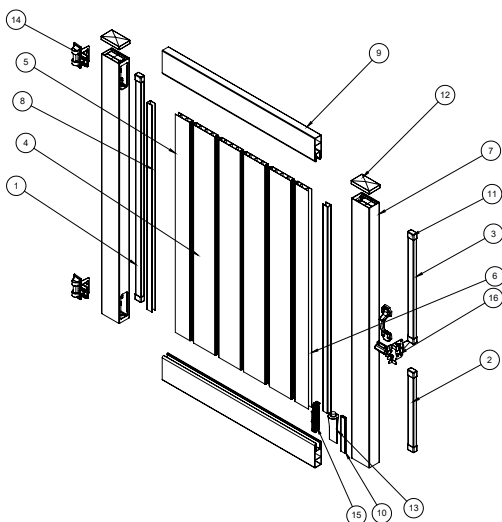


1**Preparation**



- a. Lay door components on a smooth, flat and clean surface. Begin by arranging the rails in the correct orientations.
- b. Slide U-Channels onto end boards (Fig. 1).

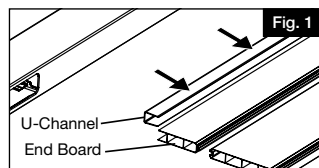**2****Inserting boards into rails**

- a. Slide the boards into the bottom rail, starting and ending with end boards while locking each of them together (Fig. 2).
- b. Slide the top rail over the boards (Fig. 2).

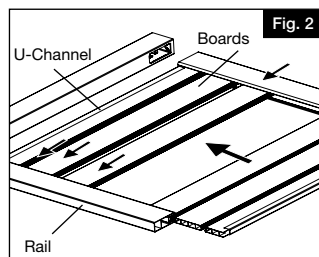**3****Gluing rails to upright**

- a. Apply provided glue to all inside surfaces of the uprights where the rails will be installed (Fig. 3).
- b. Attach uprights to rails (Fig. 4).

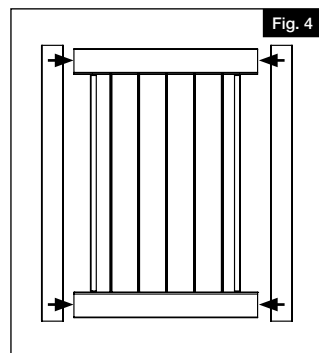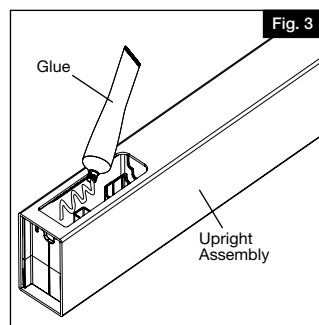

4

Square the door

Ensure the door is square. Measure diagonally from top of left corner rail (A) to bottom of right corner rail (B) and note the length. Then, measure diagonally from top of right corner rail (C) to bottom of left corner rail (D). Note the length. Make sure both measurements are the same before installing screws into uprights (Fig. 5)

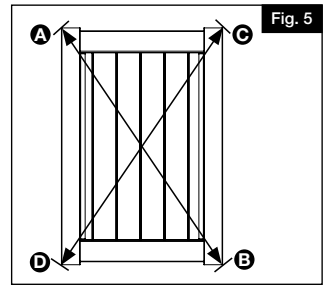


Fig. 5

5

Securing the uprights

Install two 6" screws (provided) through each upright insert and into the rail using the molded grooves on the insert as a guide (Fig. 6).

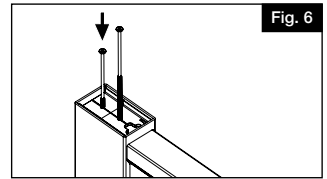


Fig. 6

6

Attaching upright caps

Install upright caps onto the top of each upright with remaining vinyl cement (Fig. 7).

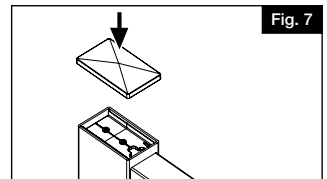


Fig. 7

7

Attaching gate hardware

Install Barrette Outdoor Living® hinges, handle and latch according to hardware instructions.



Fig. 8

8

Install privacy strips

- Place privacy strip end caps onto ends of privacy strips (Fig. 8).
- Place privacy strips on inside of posts so that they are flush with the door when the door is closed. (Fig. 9). Secure privacy strips to posts using supplied screws.

NOTE:

Privacy strips cover gaps between door and posts but also act as door stops.

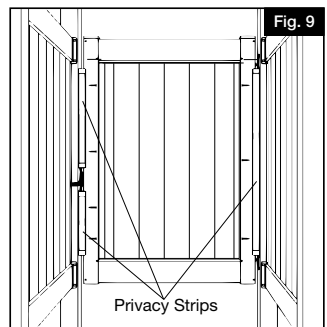


Fig. 9

4

Shower Stall Kit

Installation Instructions

English Instructions.....1

FREEDOM[®]
OUTDOOR LIVING



Read all instructions prior to installing product.

Refer to manufacturers safety instructions when operating any tools.

To register your product, please visit: **freedomproduct.com**

⚠ WARNING:

- Improper installation of this product can result in personal injury. Always wear safety goggles when cutting, drilling and assembling the product.
- Incorrect installation may cause harm to the product or individual.

NOTICE:

- DO NOT attempt to assemble the kit if parts are missing or damaged.
- DO NOT return the product to the store. For assistance or replacement parts call: 1-800-336-2383.

BEFORE YOU BEGIN:

Check your local zoning laws.



- Local zoning laws and Home Owners Associations may regulate the location, style and height of your product or even require a permit signoff beforehand.
- Check local codes for frost line depth and regulations.
- You must have the utility companies clearly mark your property for electrical, gas or water lines to avoid puncturing any unseen underground utilities.

TOOLS/MATERIALS NEEDED:

Circular Saw / Hand Saw / Chop Saw
Post Hole Digger / Auger
Line Level
Post Level
Tape Measure
Ratchet Set
Drill Gun #2, #3, Phillips
Driver Bit Extender (Recommended)
Hammer
Safety Glasses
Black Sharpie or Carpenter's Pencil
Rags and Spray Cleaner
4x4x96" Lumber
Pre-Mixed Concrete
Glue / Post Top Clips
(8) Galvanized Screws

Component list:


Item #	Description	Qty.
1	4"x4" Pyramid Post Top	4
2	4"x4"x96" Vinyl Post White	4
3	1.75"x5.47"x42.125" Privacy Panel Rail	4
4	1.02"x1.379"x46.5" U-Channel	4
5	0.875"x6"x50" - 0.35W Tongue & Groove Board	14
6	0.875"x1.5"x48" Curtain Rod	2
7	1.75"x5.5" Bracket Kit	4
8	0.875"x1.5" End Cap	4
9	1.5" Pan Head Screw	32
10	Screw Head Cap	40
11	1" Pan Head Screw	8

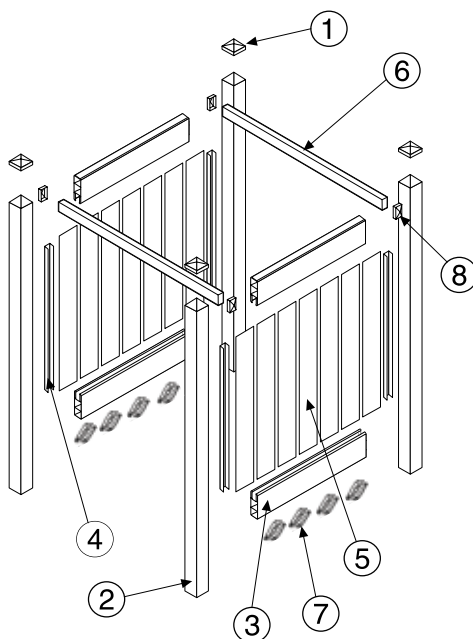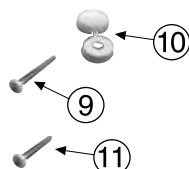

1

Measure and Mark Post Layout



Measure, mark and "square" posts according to dimensions. Use "Corner to Corner Diagonal" dimension as a reference to ensure that posts are squared (Fig. 1).

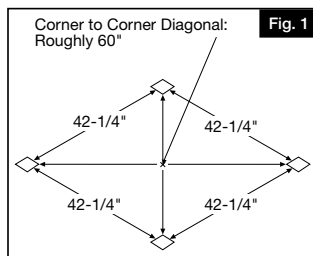

2

Post Installation


- Dig a 3 foot deep by 10 inch diameter hole for each post footing (Fig. 2). Use a post hole digger or an auger.
- Slide 4x4 vinyl posts over 4x4x96" lumber so that 2 feet of lumber is extended below vinyl posts. Secure lumber to posts with galvanized screws (not included) below finish grade (Fig. 3).
- Insert posts and double-check measurements. Pour pre-mixed concrete into holes and use a post level to make plumb

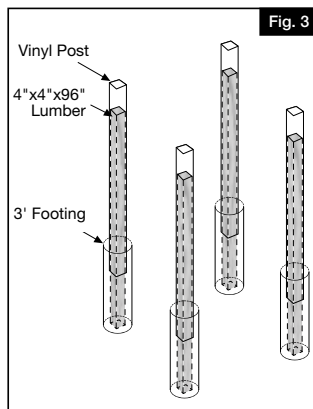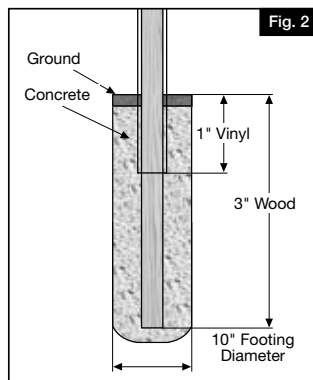

Wall Panel Installation


Bottom Rail

- Slide brackets onto bottom rail and lift into place between posts (Fig. 4).
- Offset bottom brackets 10" above finish grade and center bottom rail on posts (Fig. 4).
- Mount brackets to posts using included 4 screws per bracket. Insert white screw head caps to hide screws.

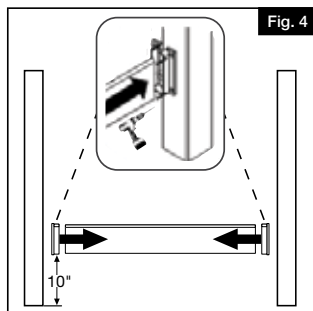


Vertical Tongue and Groove Boards

- Insert vertical tongue and groove boards into bottom rail from left to right.
- Place U-Channel vertically on edge of tongue and groove board #1 and #7 (Fig. 5).

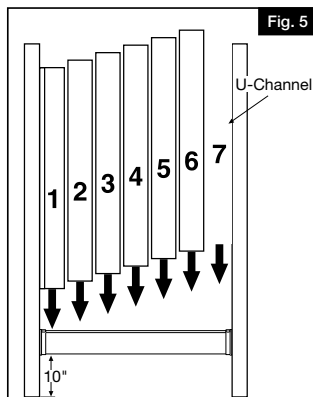

Top Rail

- Slide brackets onto top rail and place on top of vertical tongue and groove boards (Fig. 6).
- Mount brackets to posts using included (4) 1.5" screws per bracket. Insert white screw head caps to hide screws (Fig. 6).

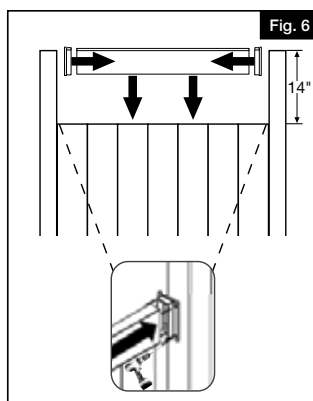


4**Curtain Rod Installation**

- a. Attach end caps to ends of curtain rods. Use glue to create a stronger bond.
- b. Place curtain rods on interior side of posts (Fig. 7). Mount curtain rods to posts using included (2) 1" pan head screws per rod. Insert white caps to hide screws.

5**Post Tops Installation**

- Place post tops on top of posts. Use glue or post top clips to create a stronger bond (Fig. 7).

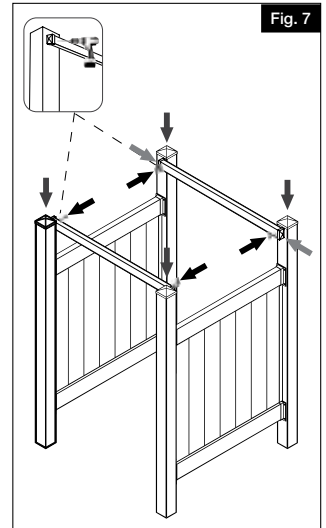

FREEDOM[®]
OUTDOOR LIVING

Barrette Outdoor Living
7830 Freeway Circle, Middleburg Heights, OH 44130
freedomproduct.com • (888) 418-4400

BY **Barrette**
OUTDOOR LIVING 