
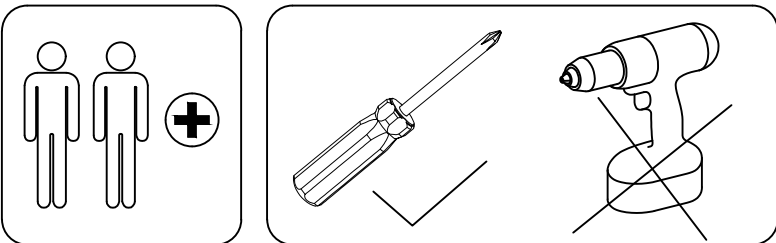



Kitchen Island Card

SKU N707P254872


Assembly instructions-Please keep for future rerence

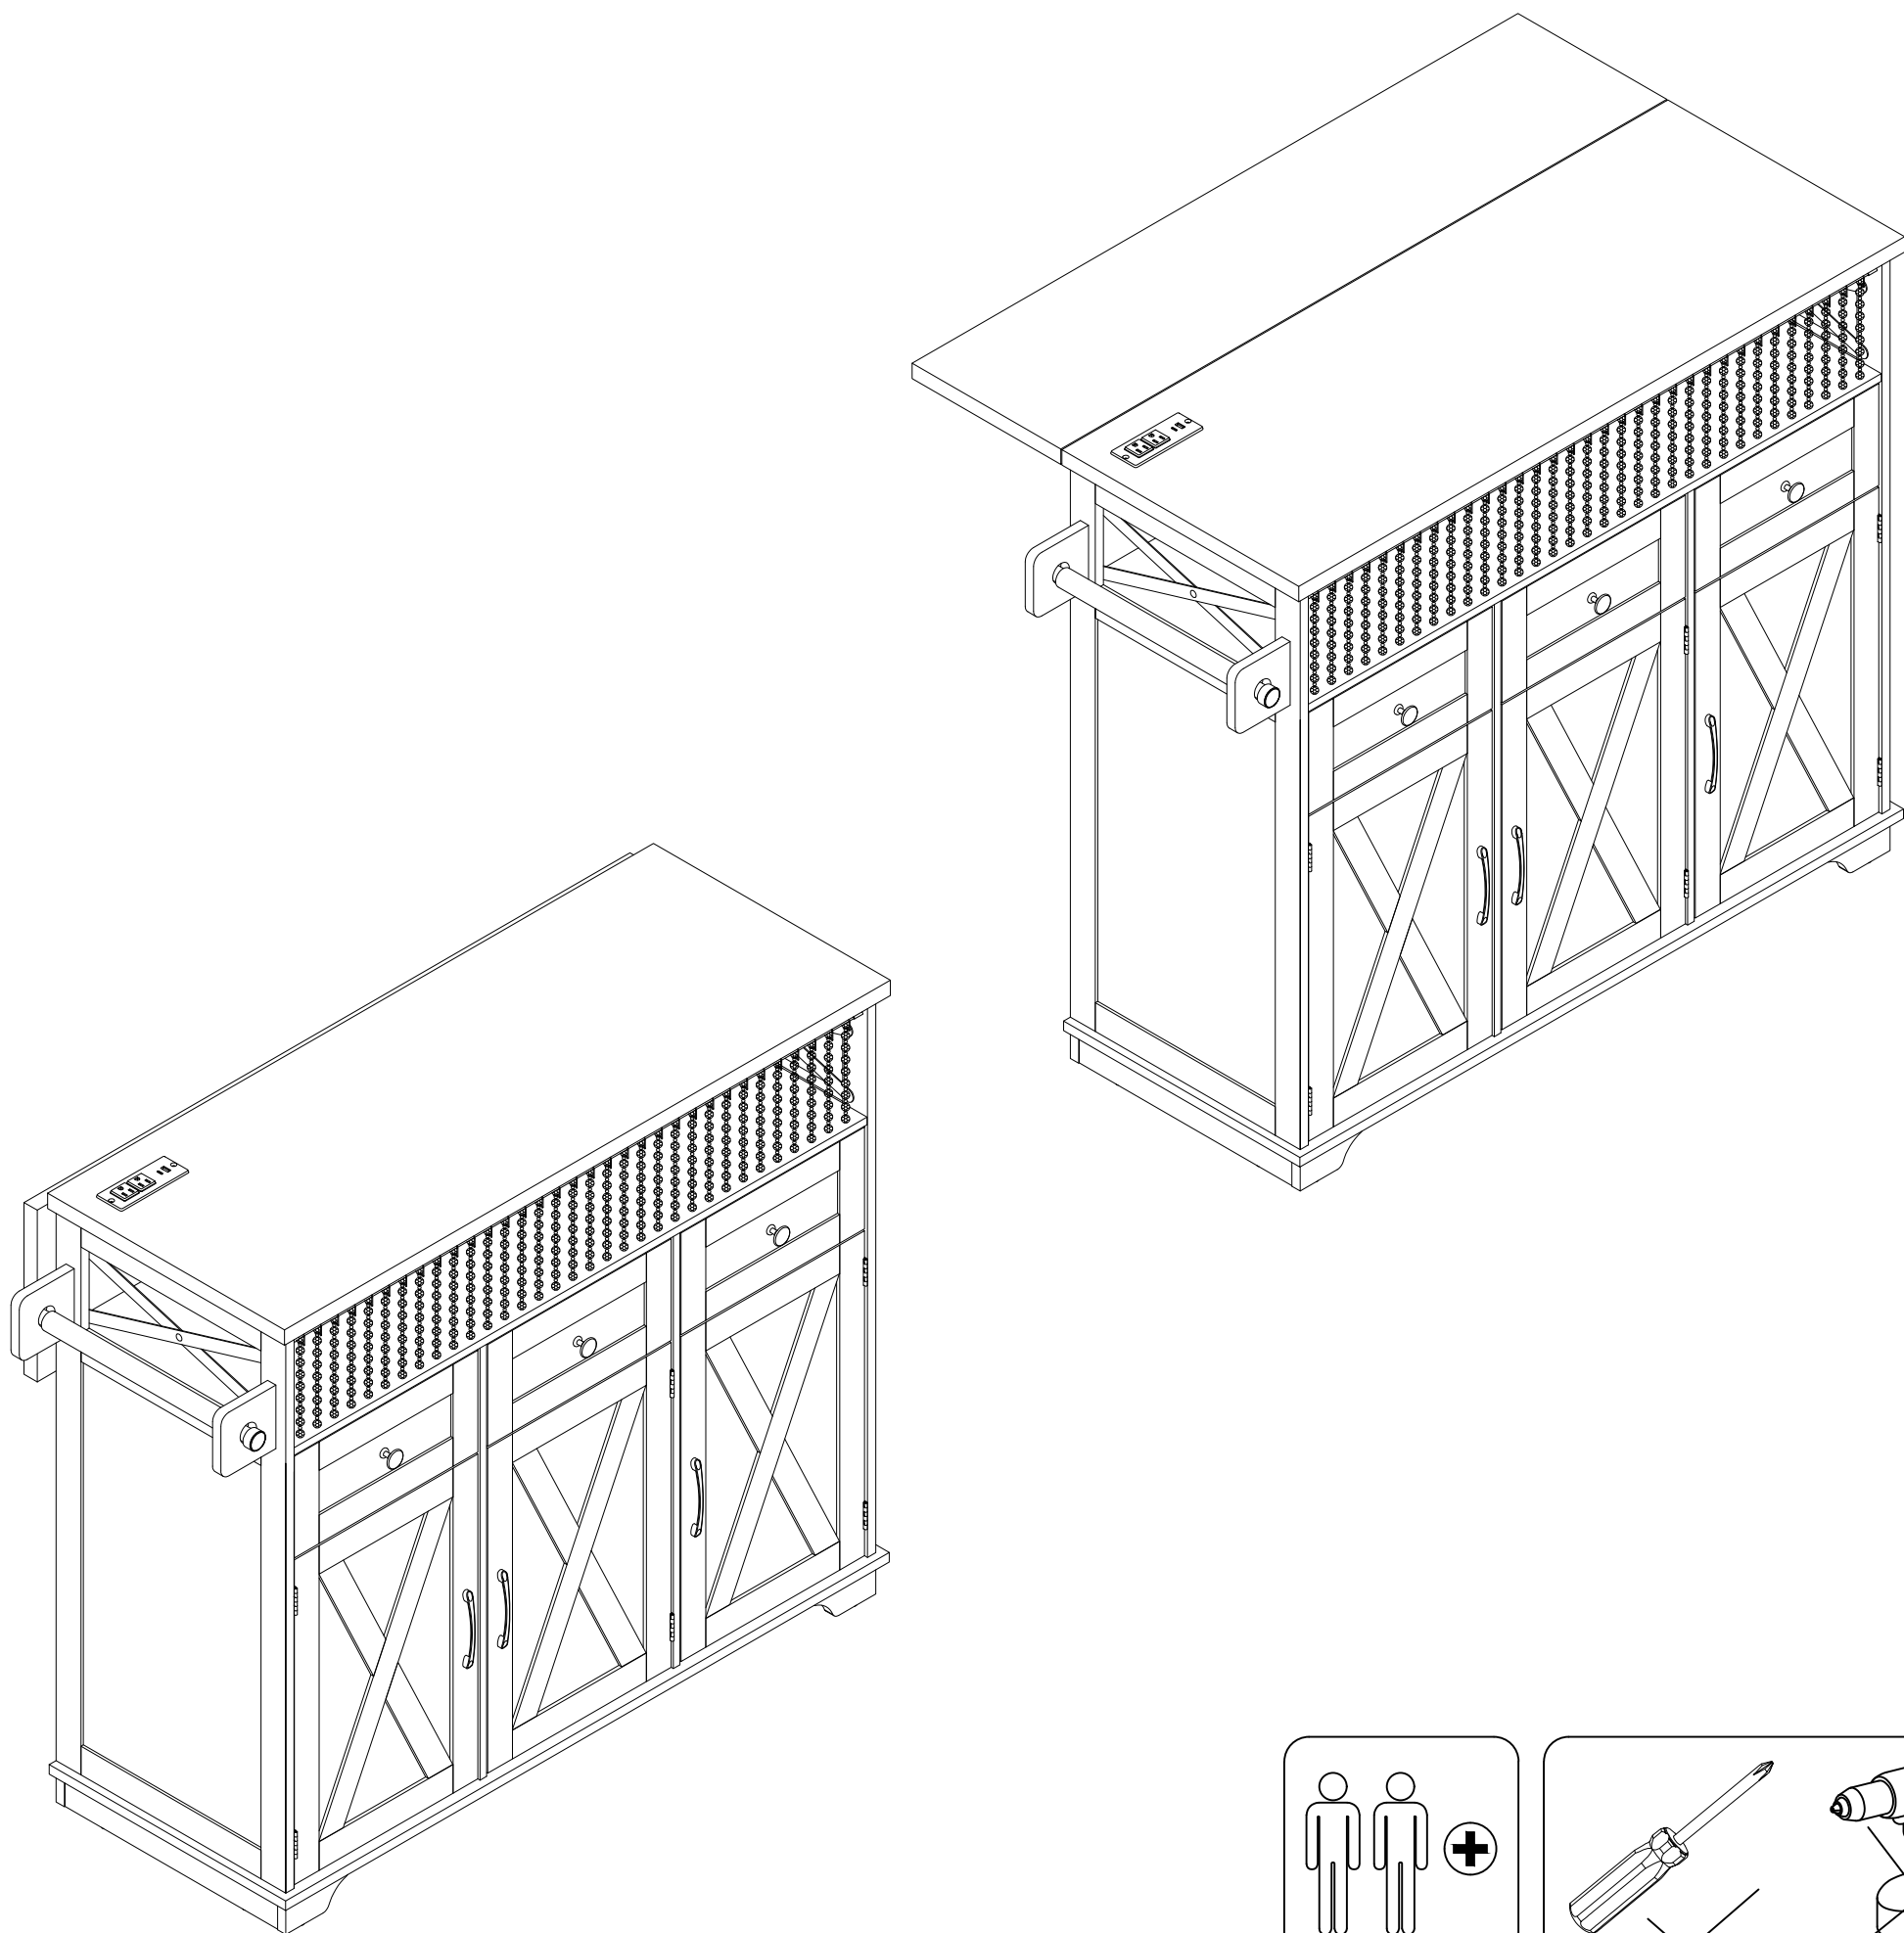


Important-Please read these instructions fully before starting assembly

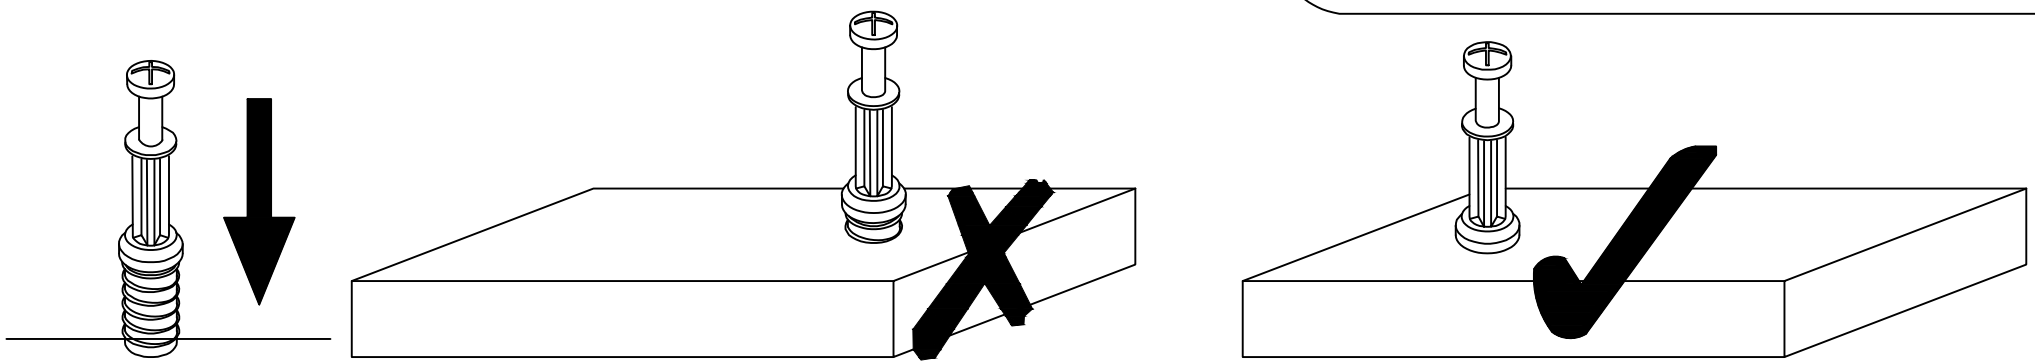


QUICKFIT: Tighten quickfit until shoulder is flush with panel.
Do not overtighten or undertighten.

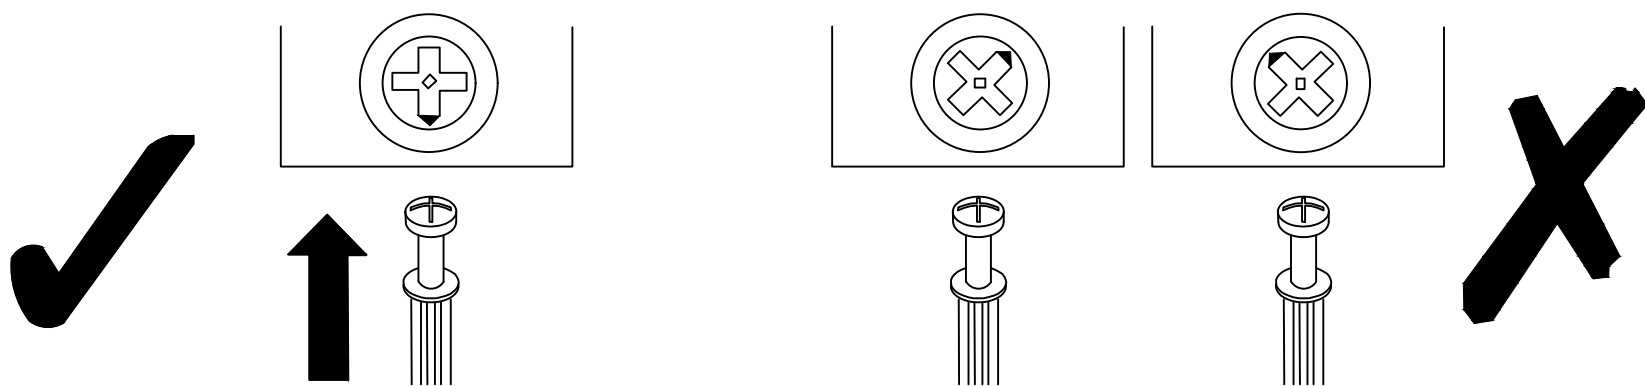

LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

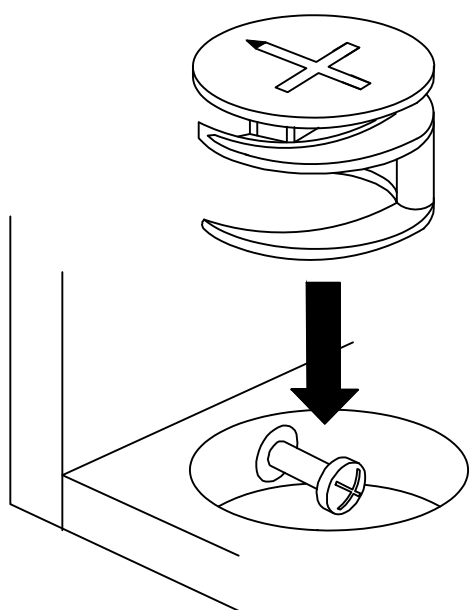


Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.










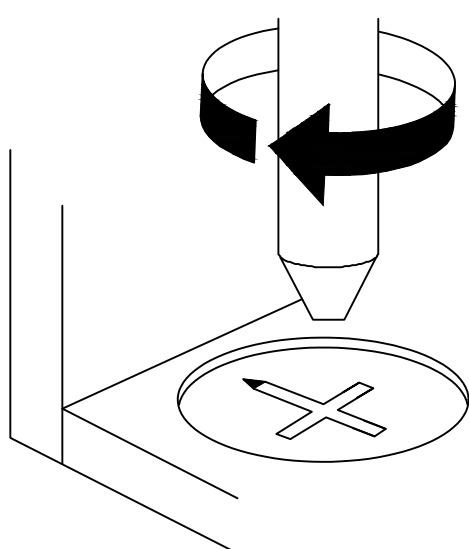












Turn cam lock clockwise to tighten.







Assembly Instructions

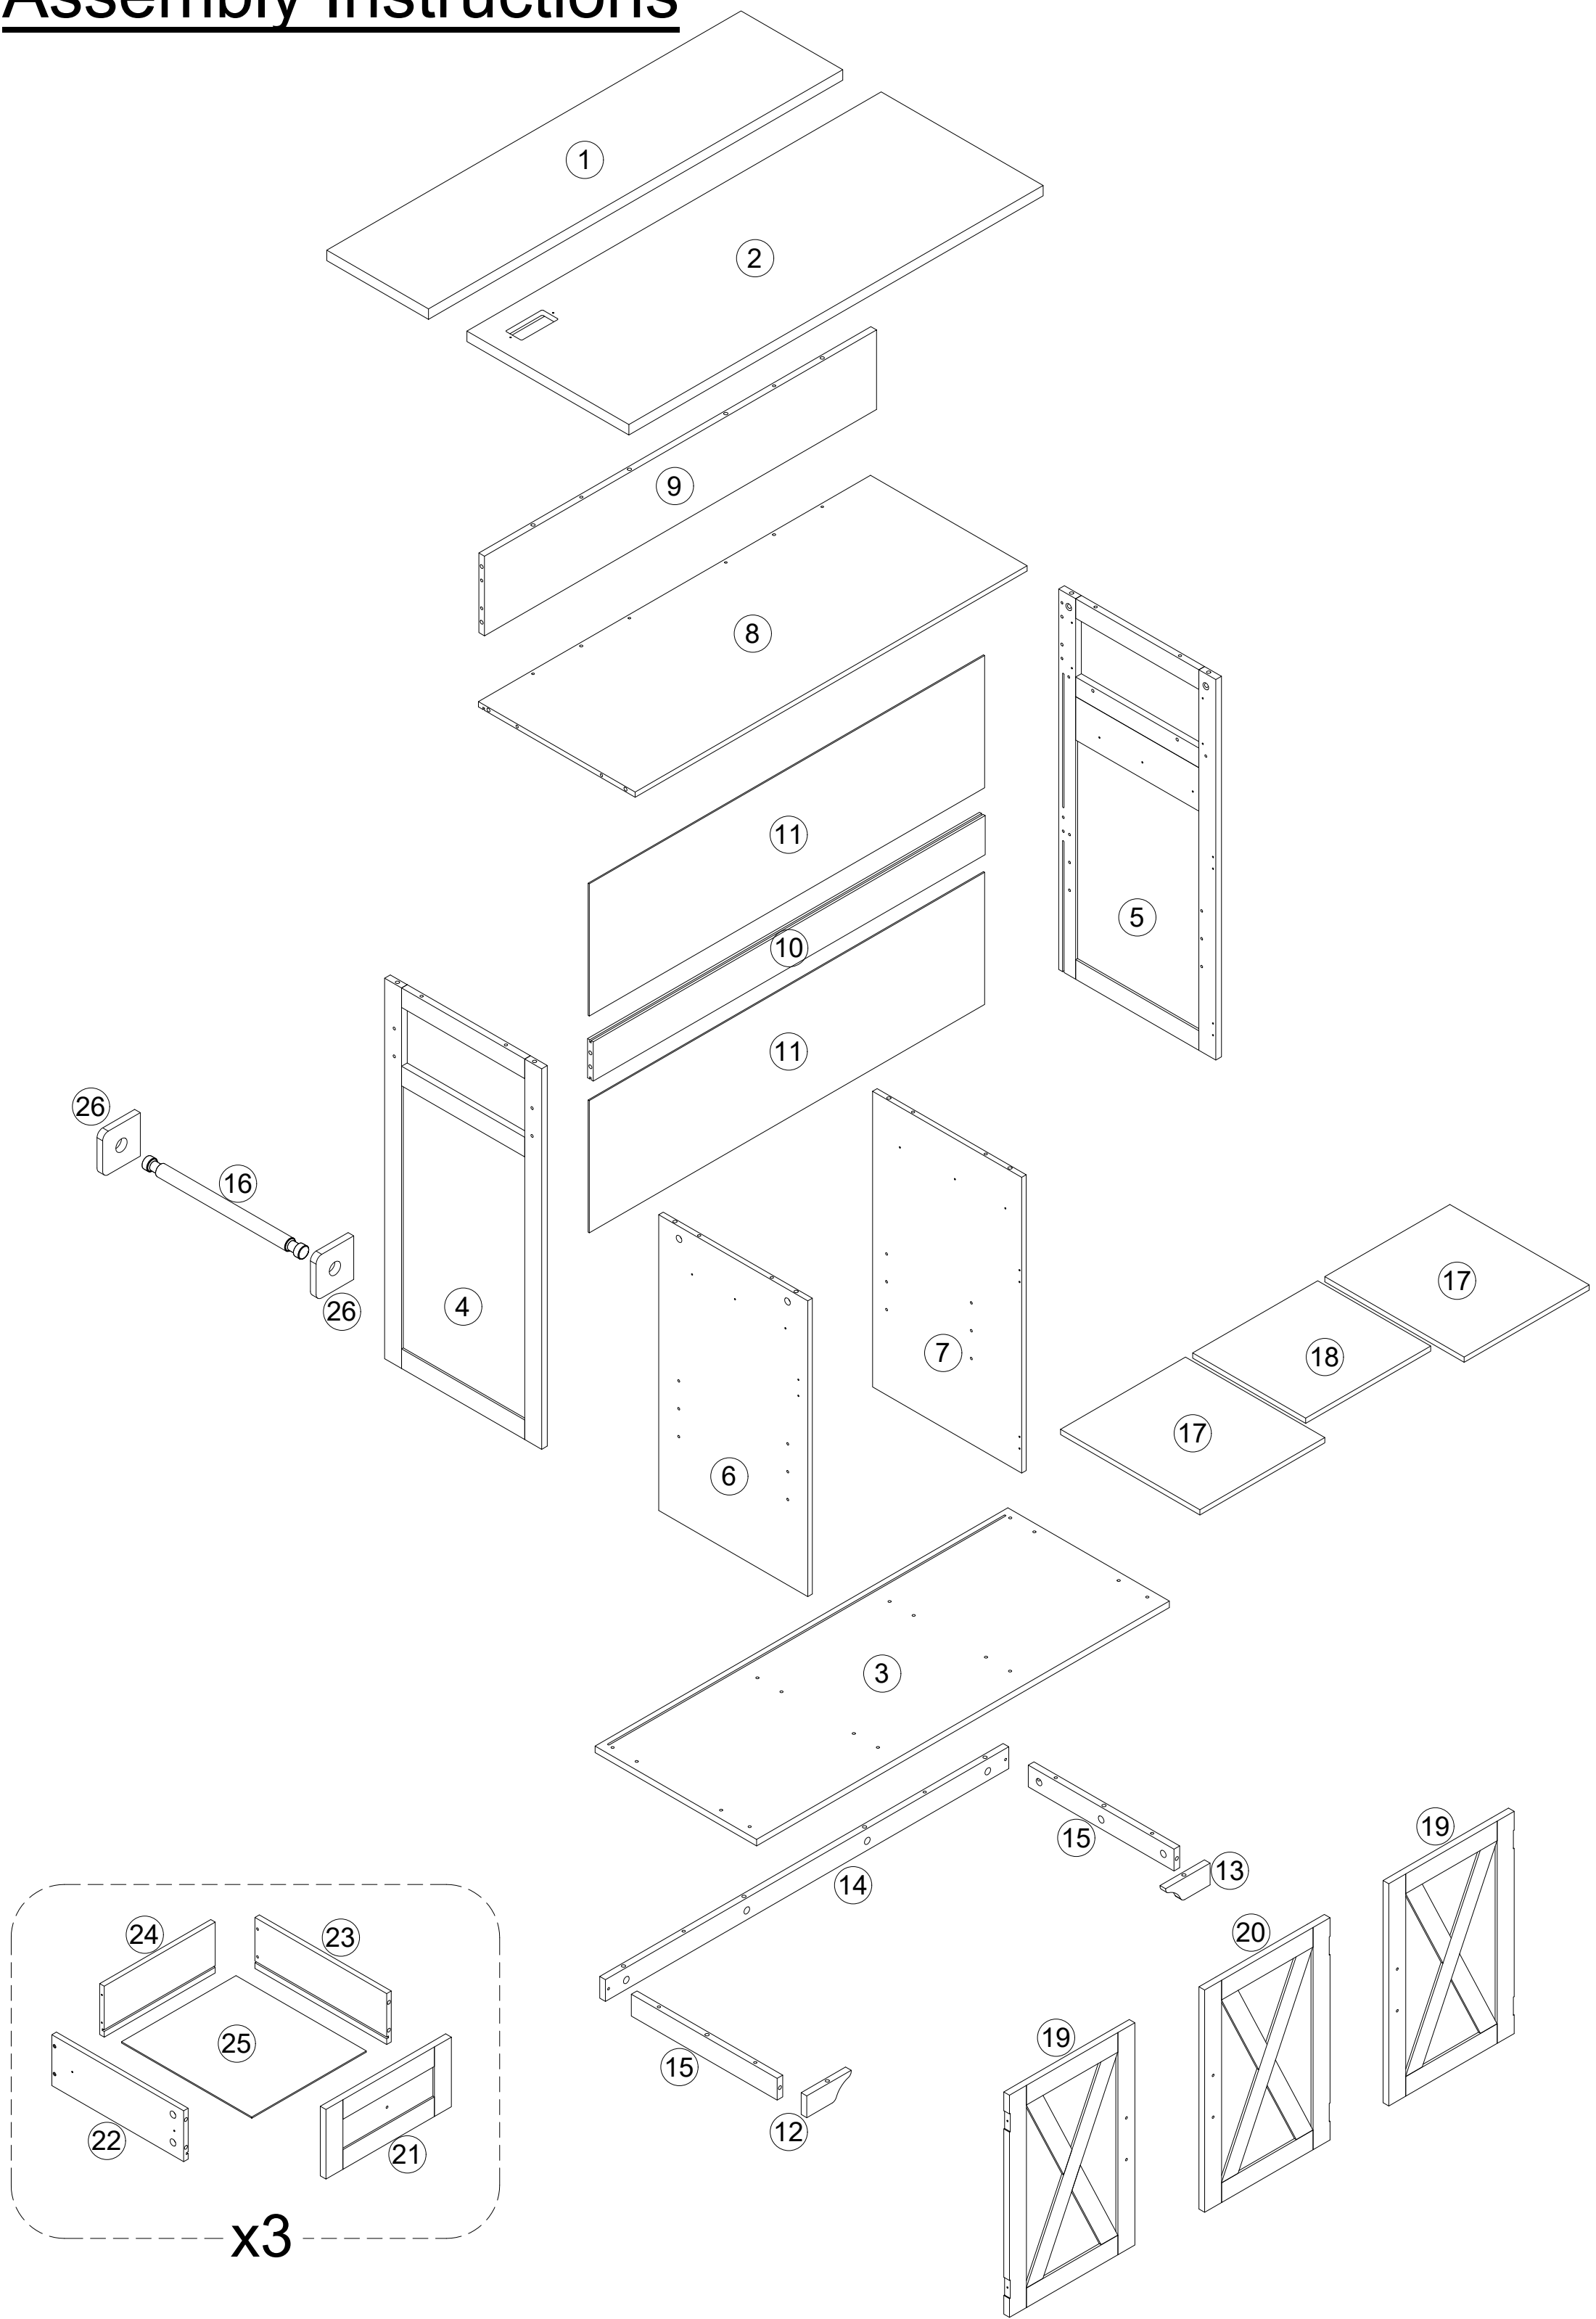
























Parts List

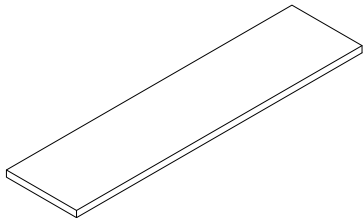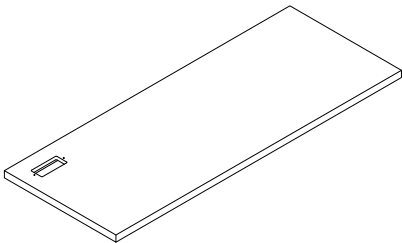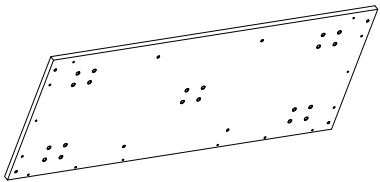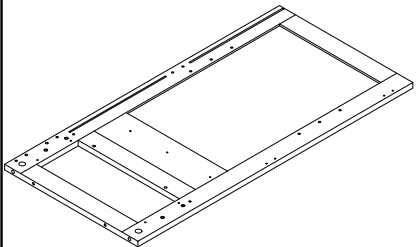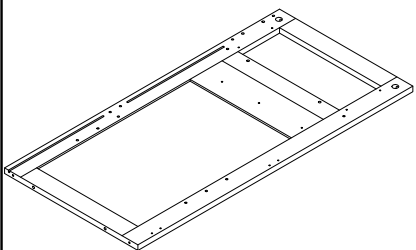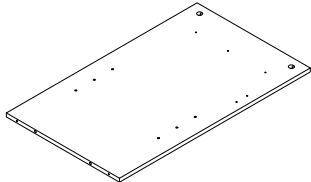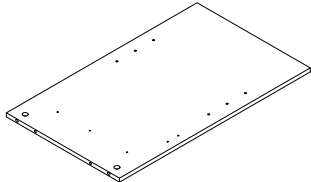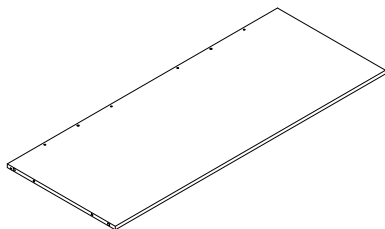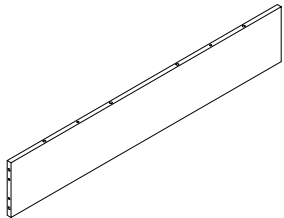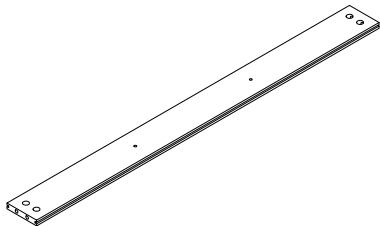NO.	PARTS	QTY
①		x1
②		x1
③		x1
④		x1
⑤		x1
⑥		x1
⑦		x1
⑧		x1
⑨		x1
⑩		x1

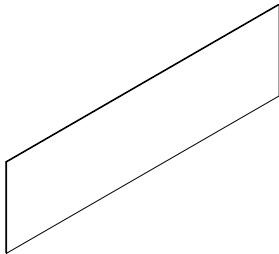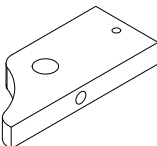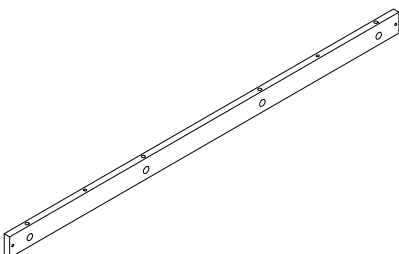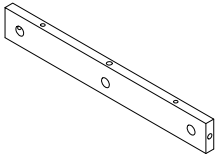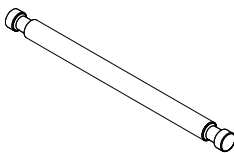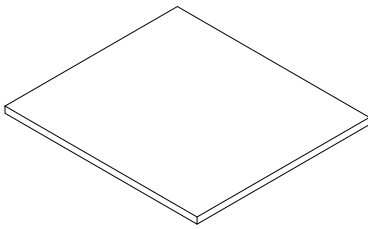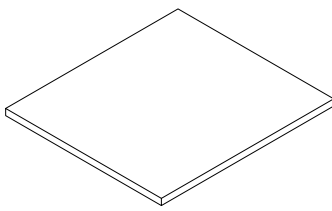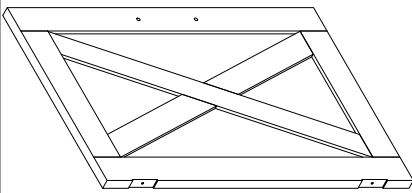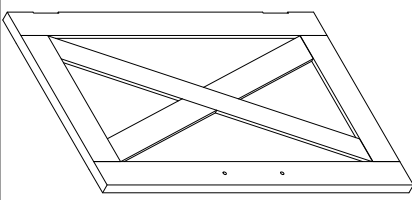NO.	PARTS	QTY
⑪		x2
⑫		x1
⑬		x1
⑭		x1
⑮		x2
⑯		x1
⑰		x2
⑱		x1
⑲		x2
⑳		x1

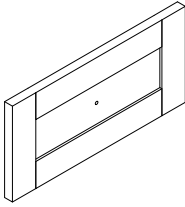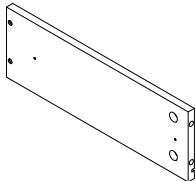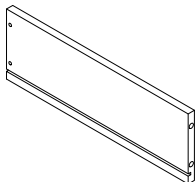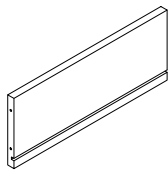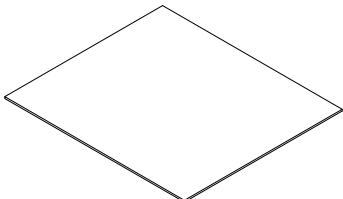
NO.	PARTS	QTY
㉑		x3
㉒		x3
㉓		x3
㉔		x3
㉕		x3
㉖		x2

Hardware

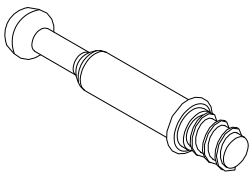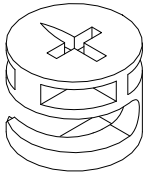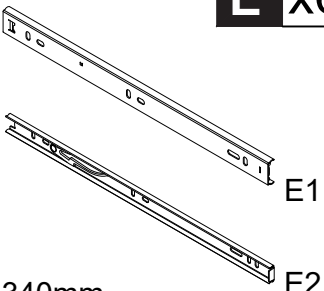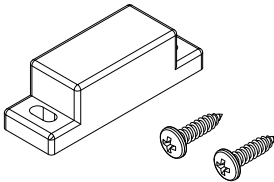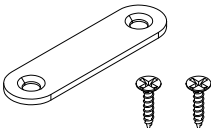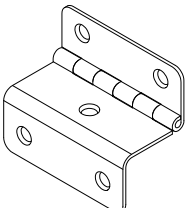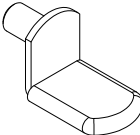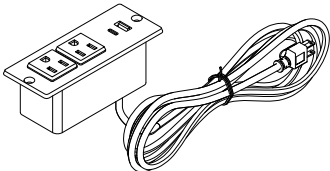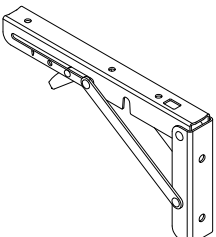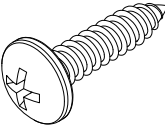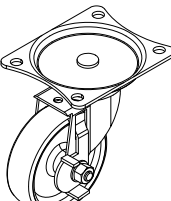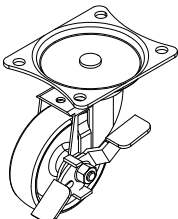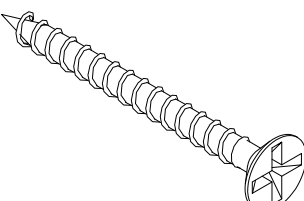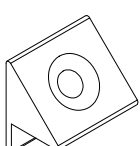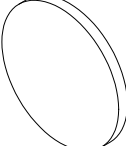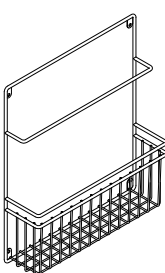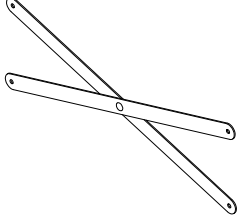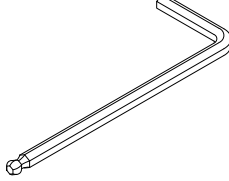
A x52 	B x52 	C x34 6x30mm 	D x14 5x38mm 	E x6  L=340mm
F x3 	G x3 	H x3 M4x10mm 	I x6 M4x16mm 	J x3 3x14mm 
K x3 3x10mm 	L x6 	M x12 	N x30 3x12mm 	O x34 3.5x12mm 
P x1 	Q x1 	R x3 	S x9 4x16mm 	T x12 4x12mm 
U x26 M6x10mm 	V x3 	W x2 	X x33 	Y x33 
Z x12 3.5x35mm 	AA x10 3x16mm 	BB x20 	CC x1 	DD x2 
EE x6 3x10mm 	FF x1 	GG x1 		

Assembly Steps


1

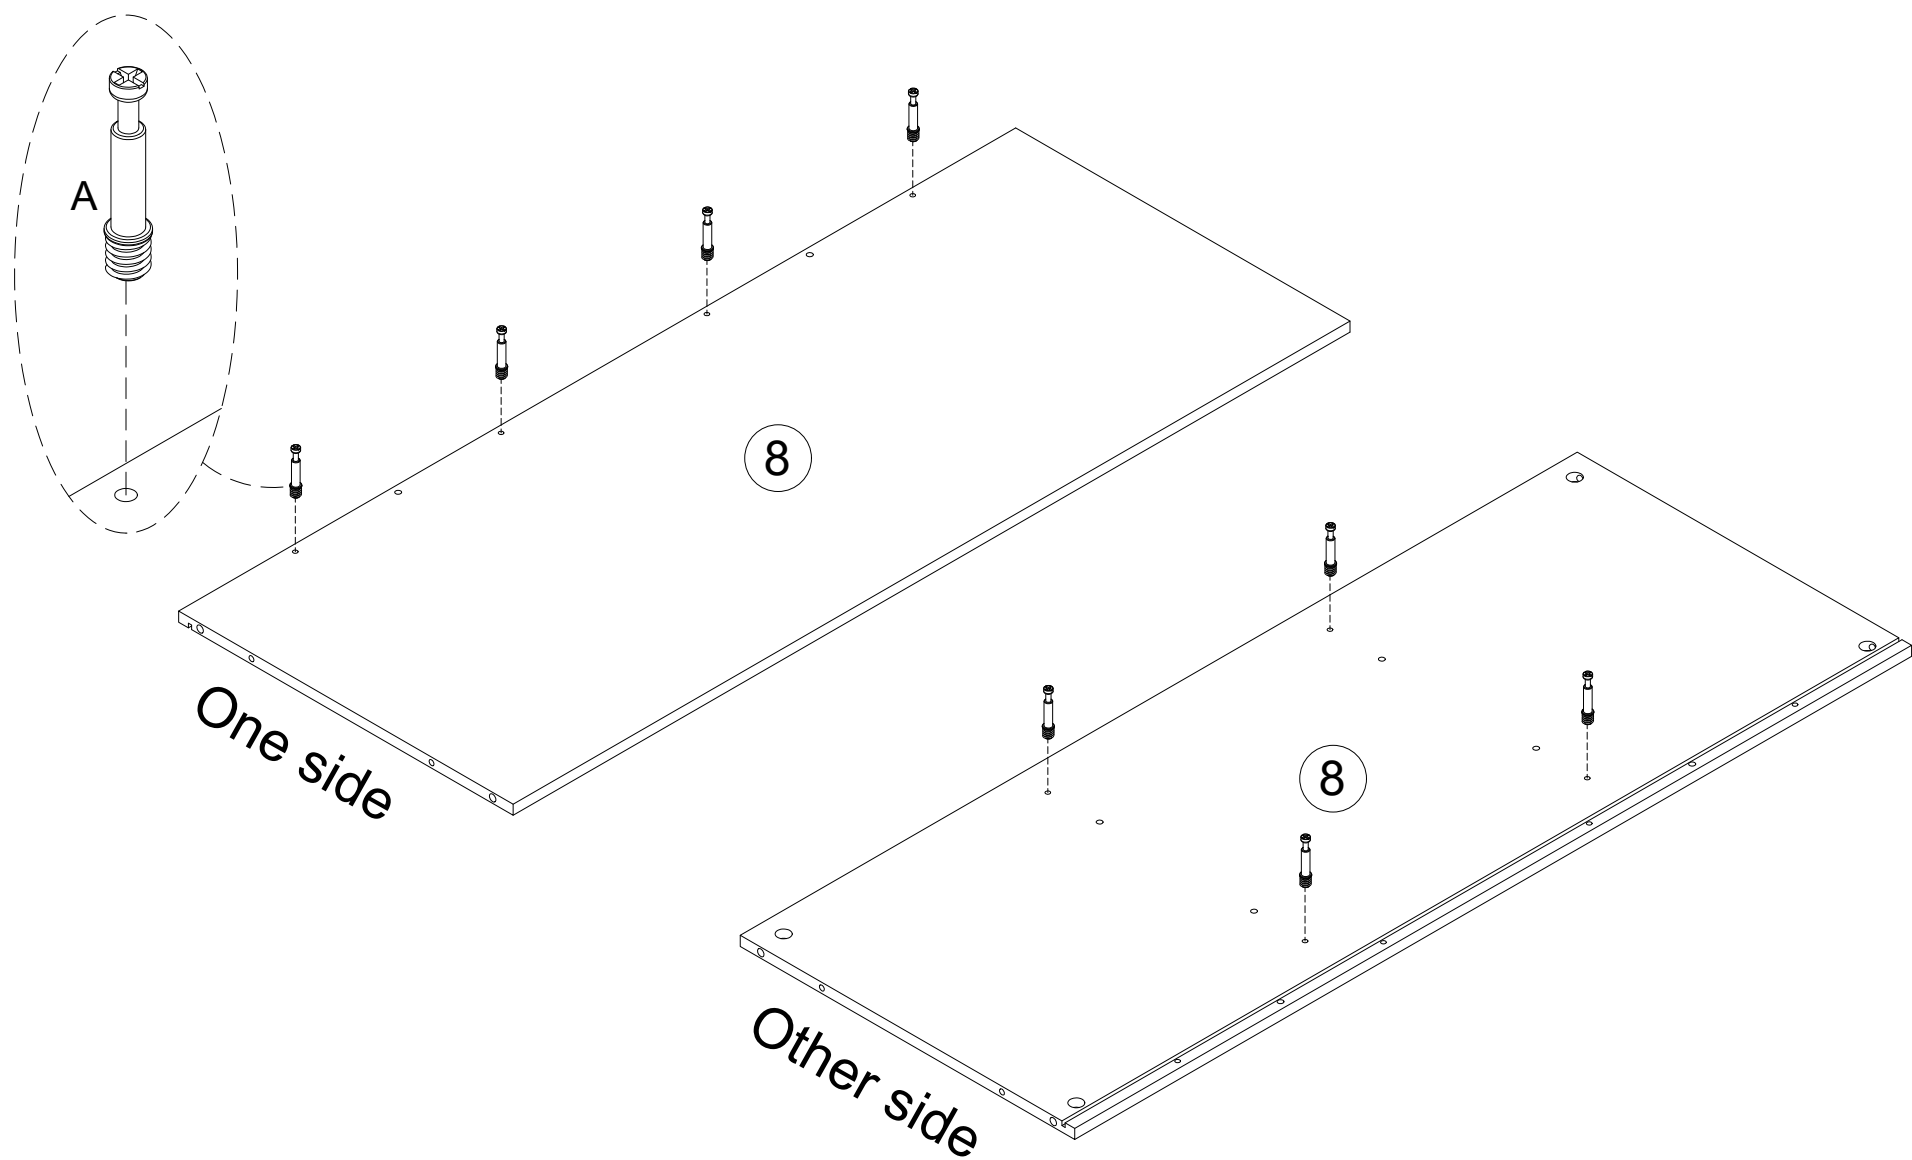


Ax8



2

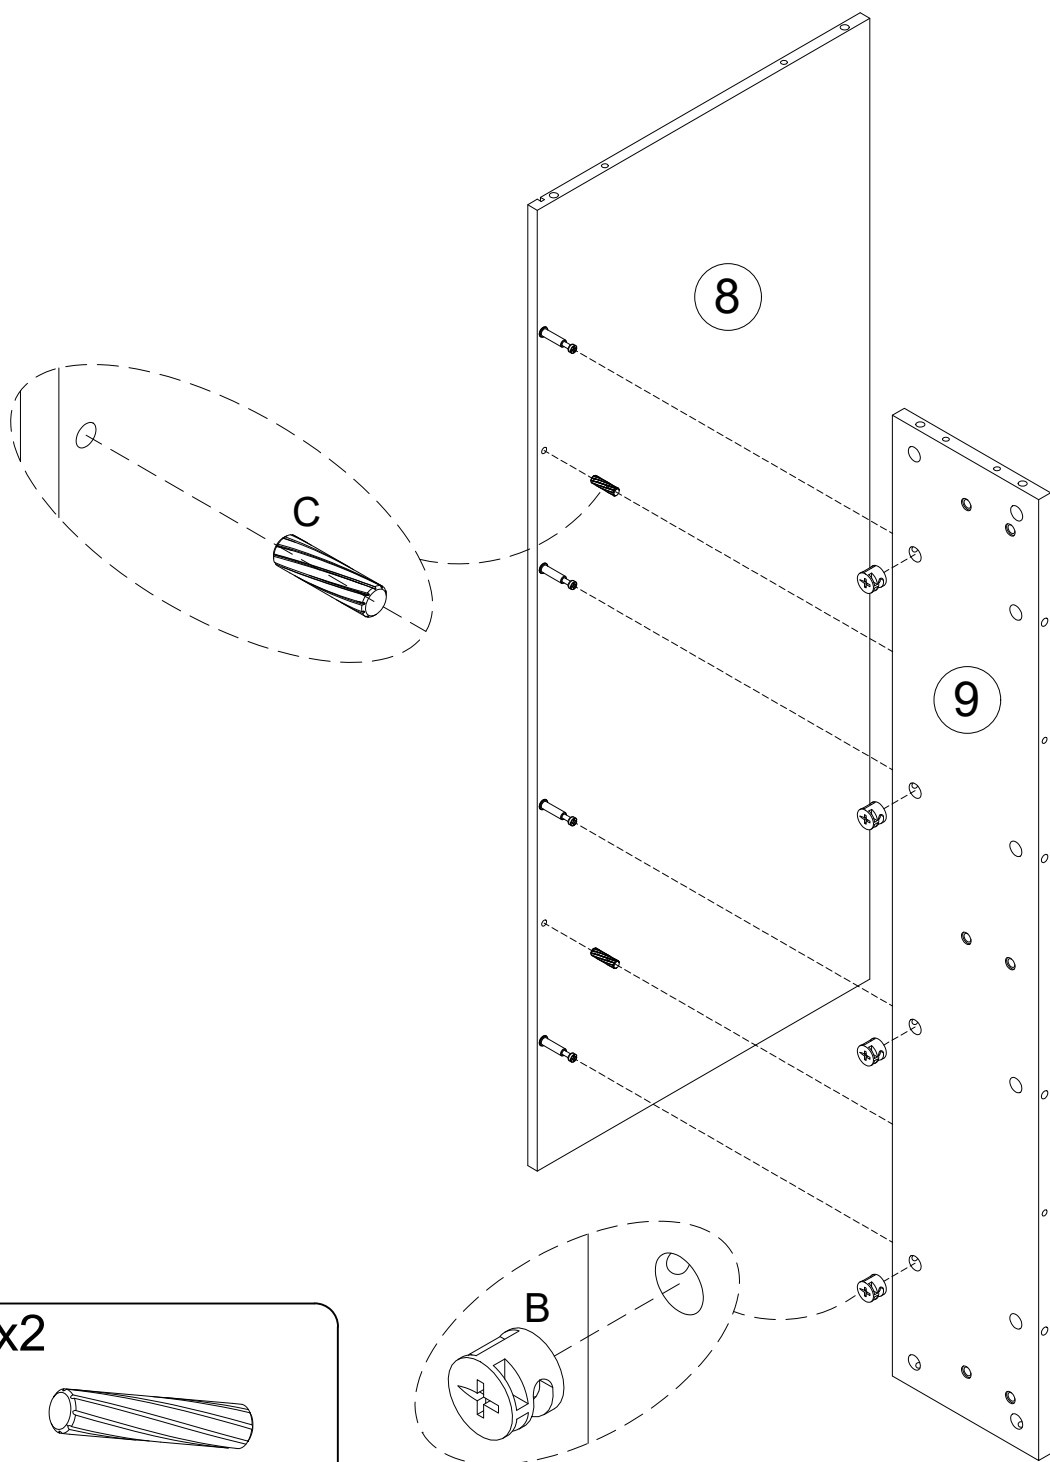


Bx4





Cx2




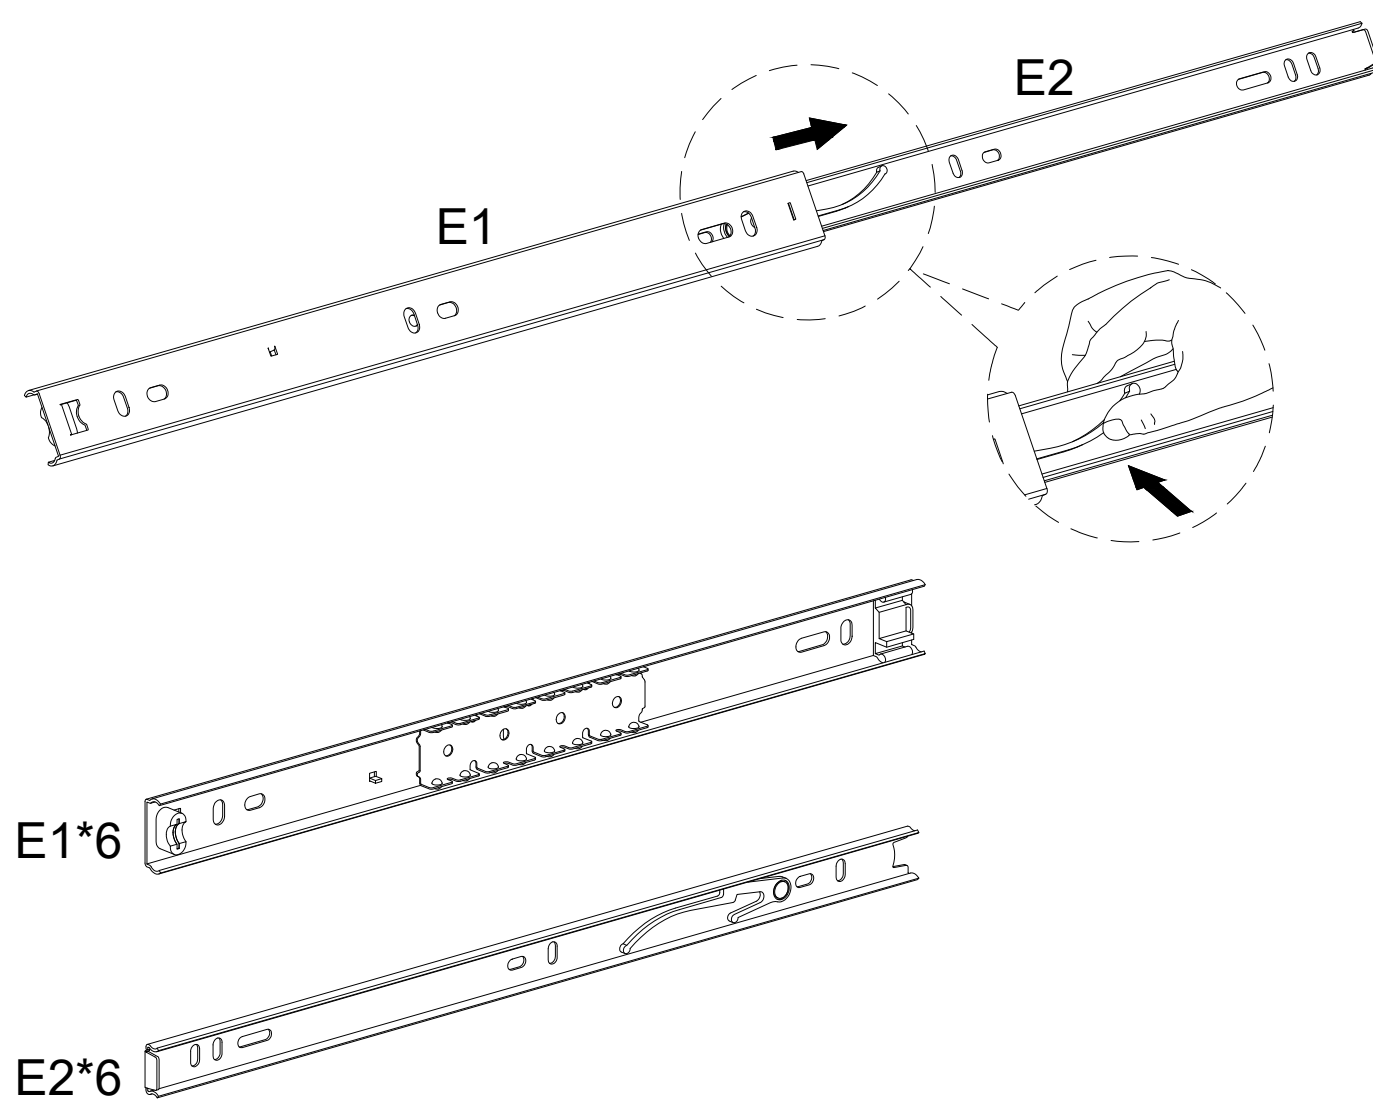


Ex6

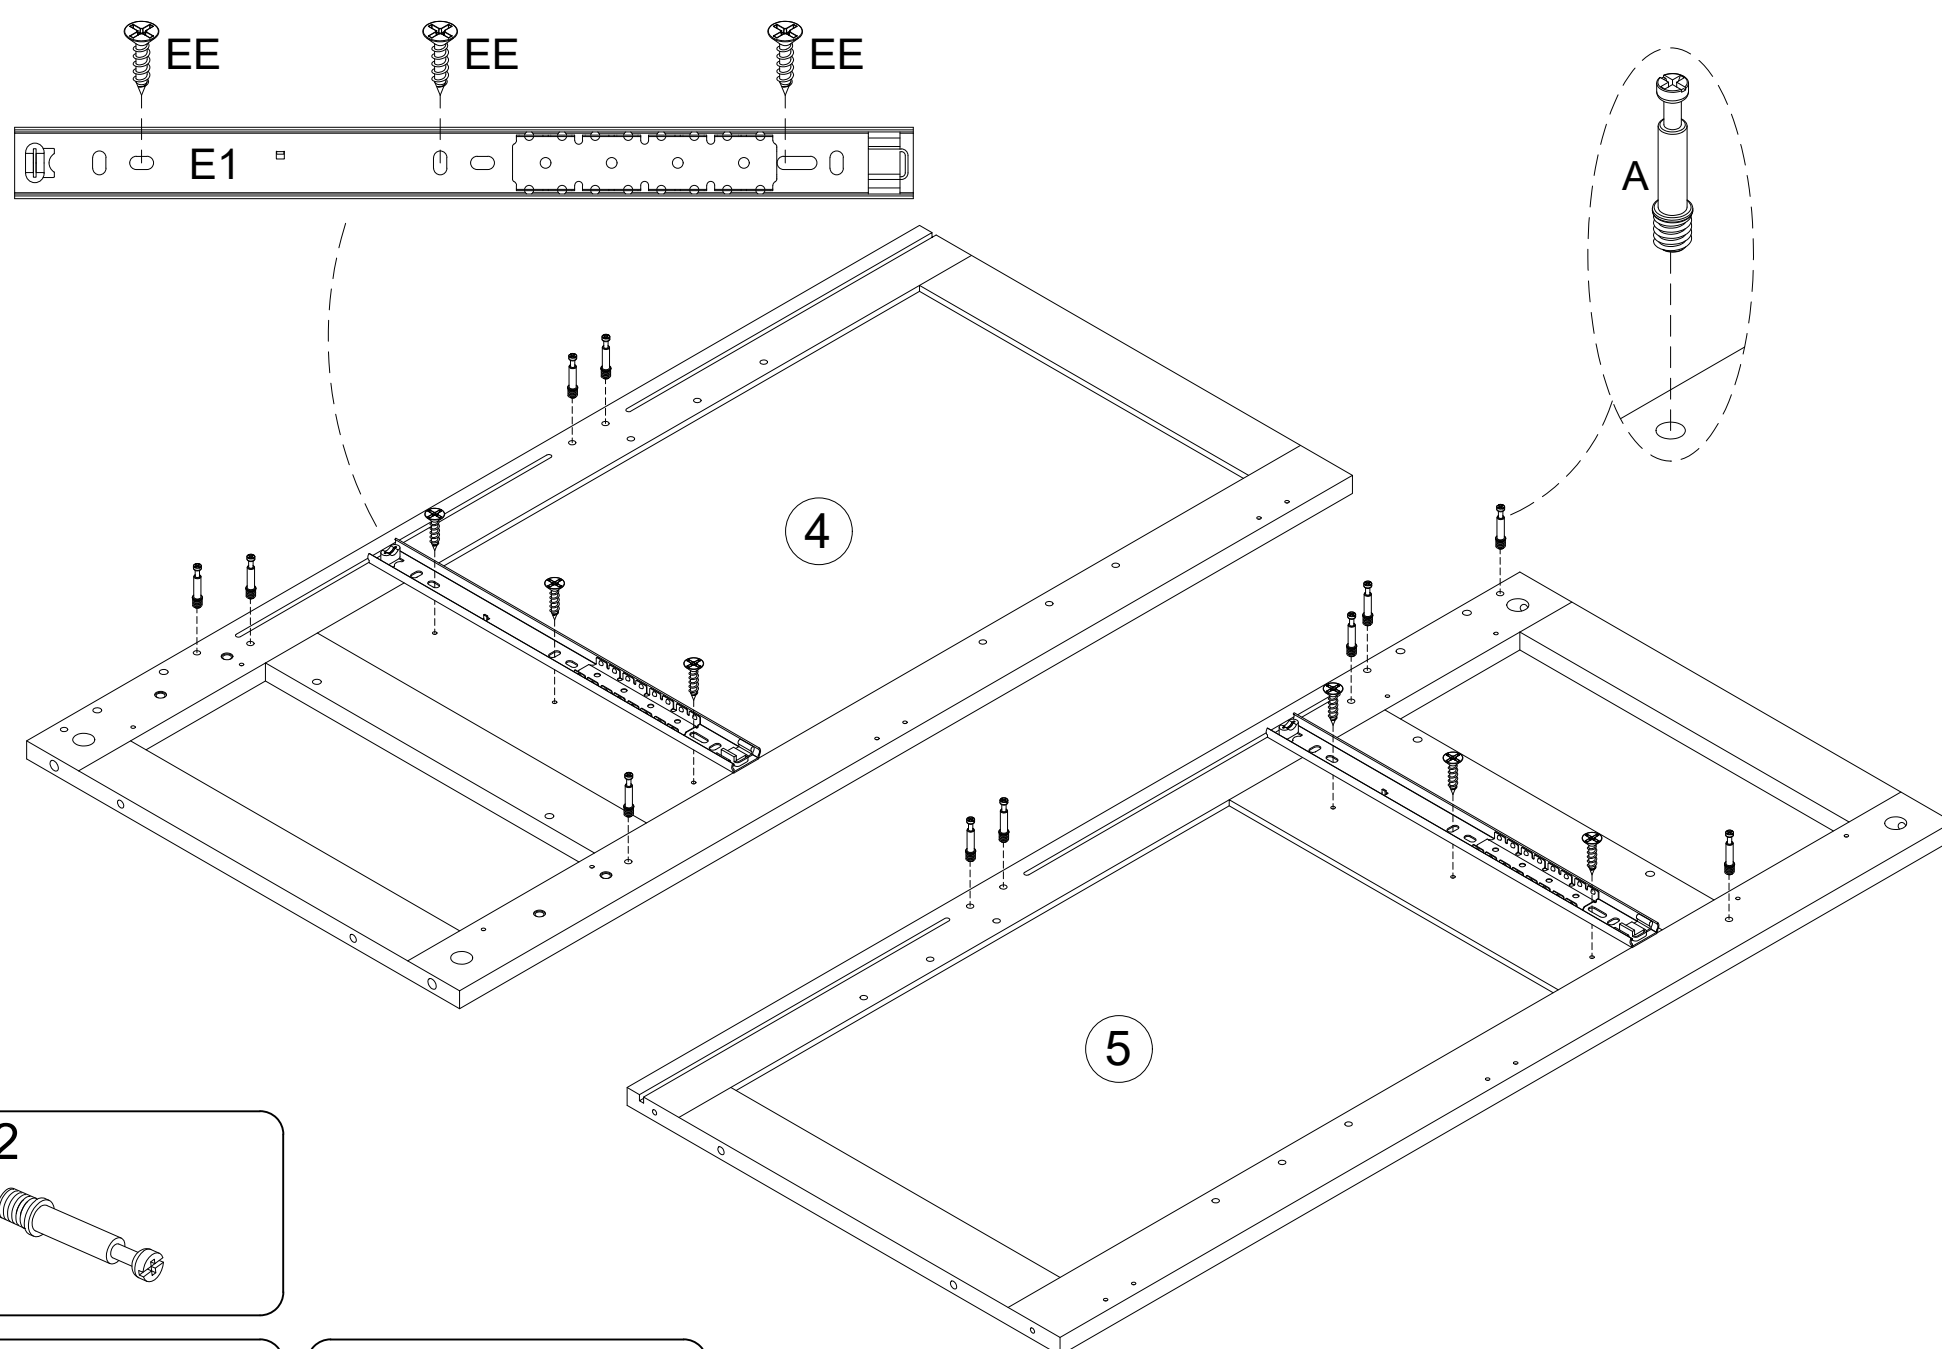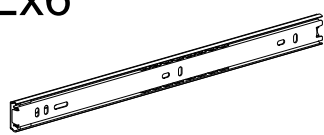


Ax12






E1x2




EEx6




5

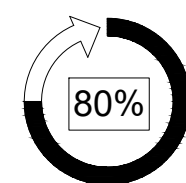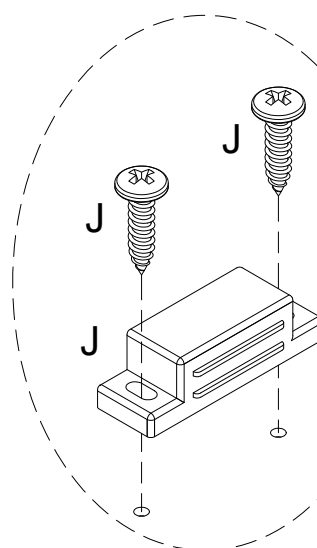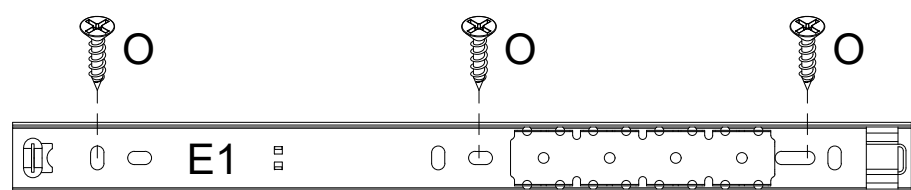


80% festziehen

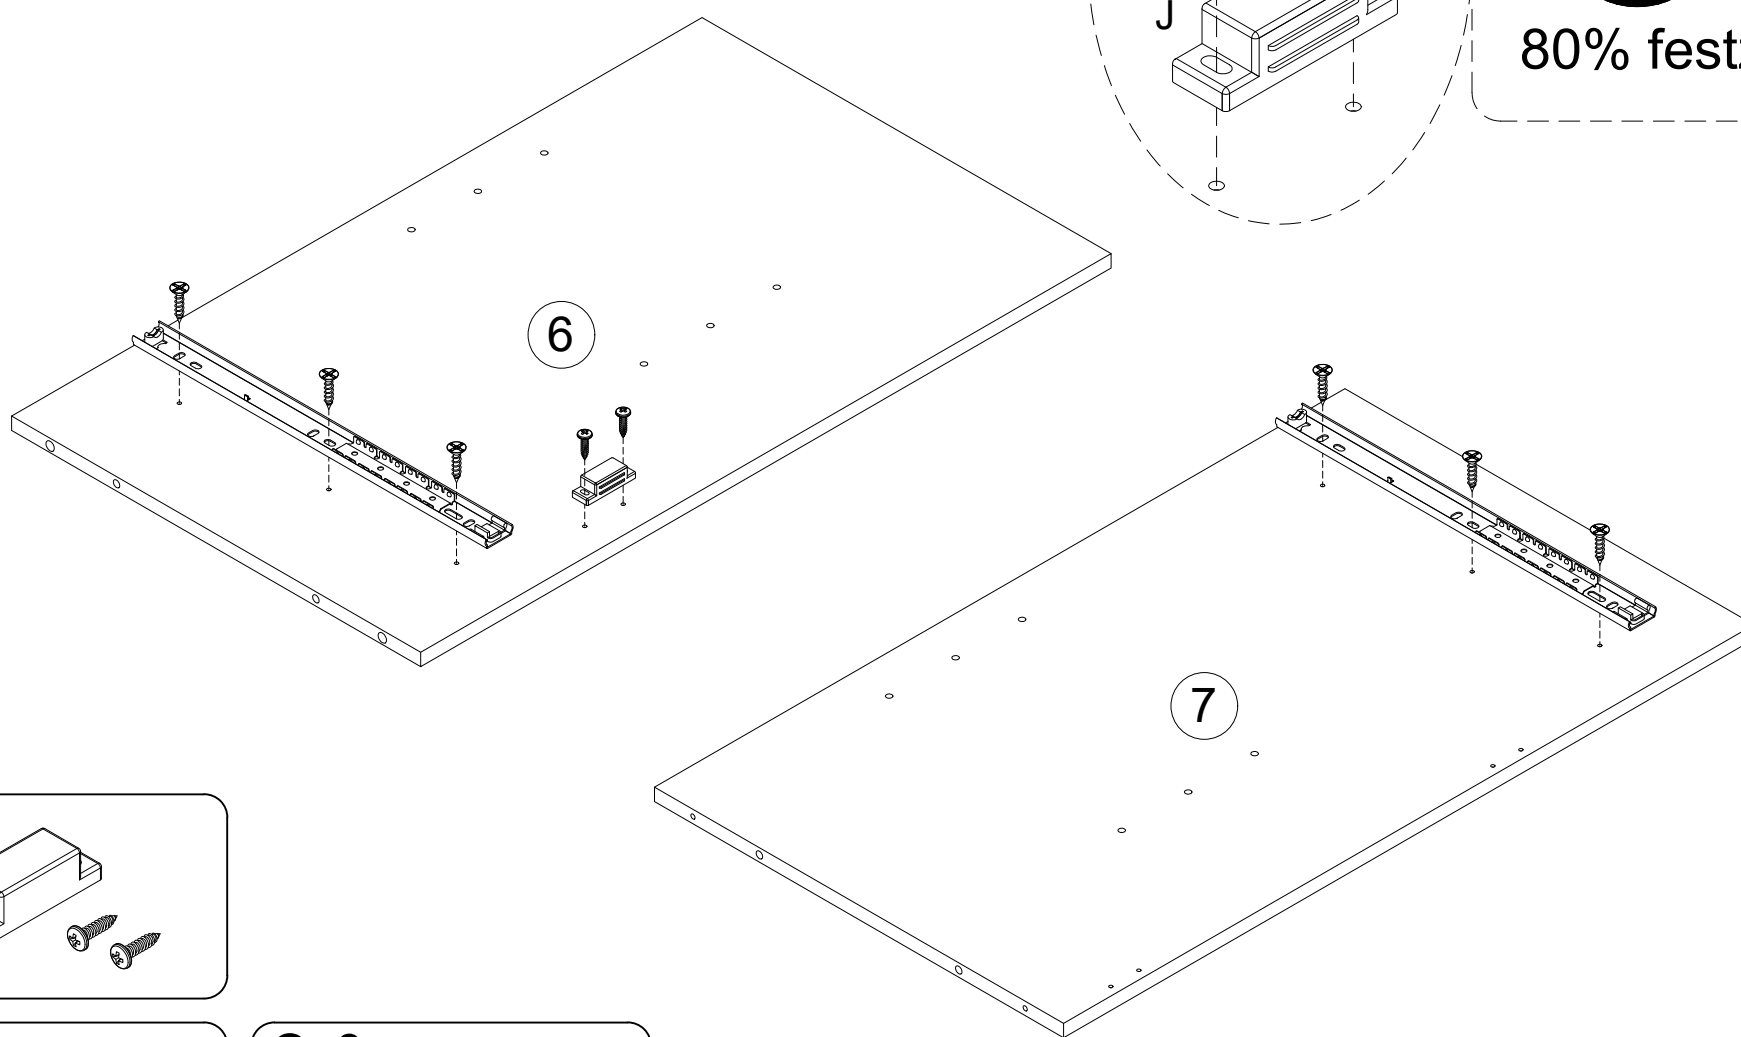


Jx1

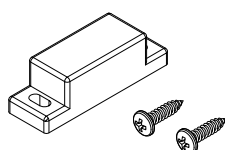




E1x2




Ox6




6

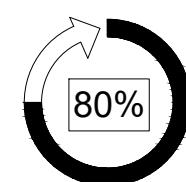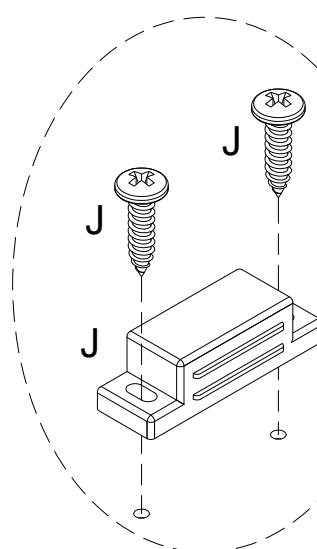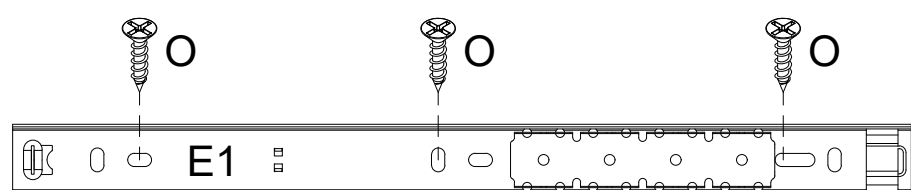


80% festziehen

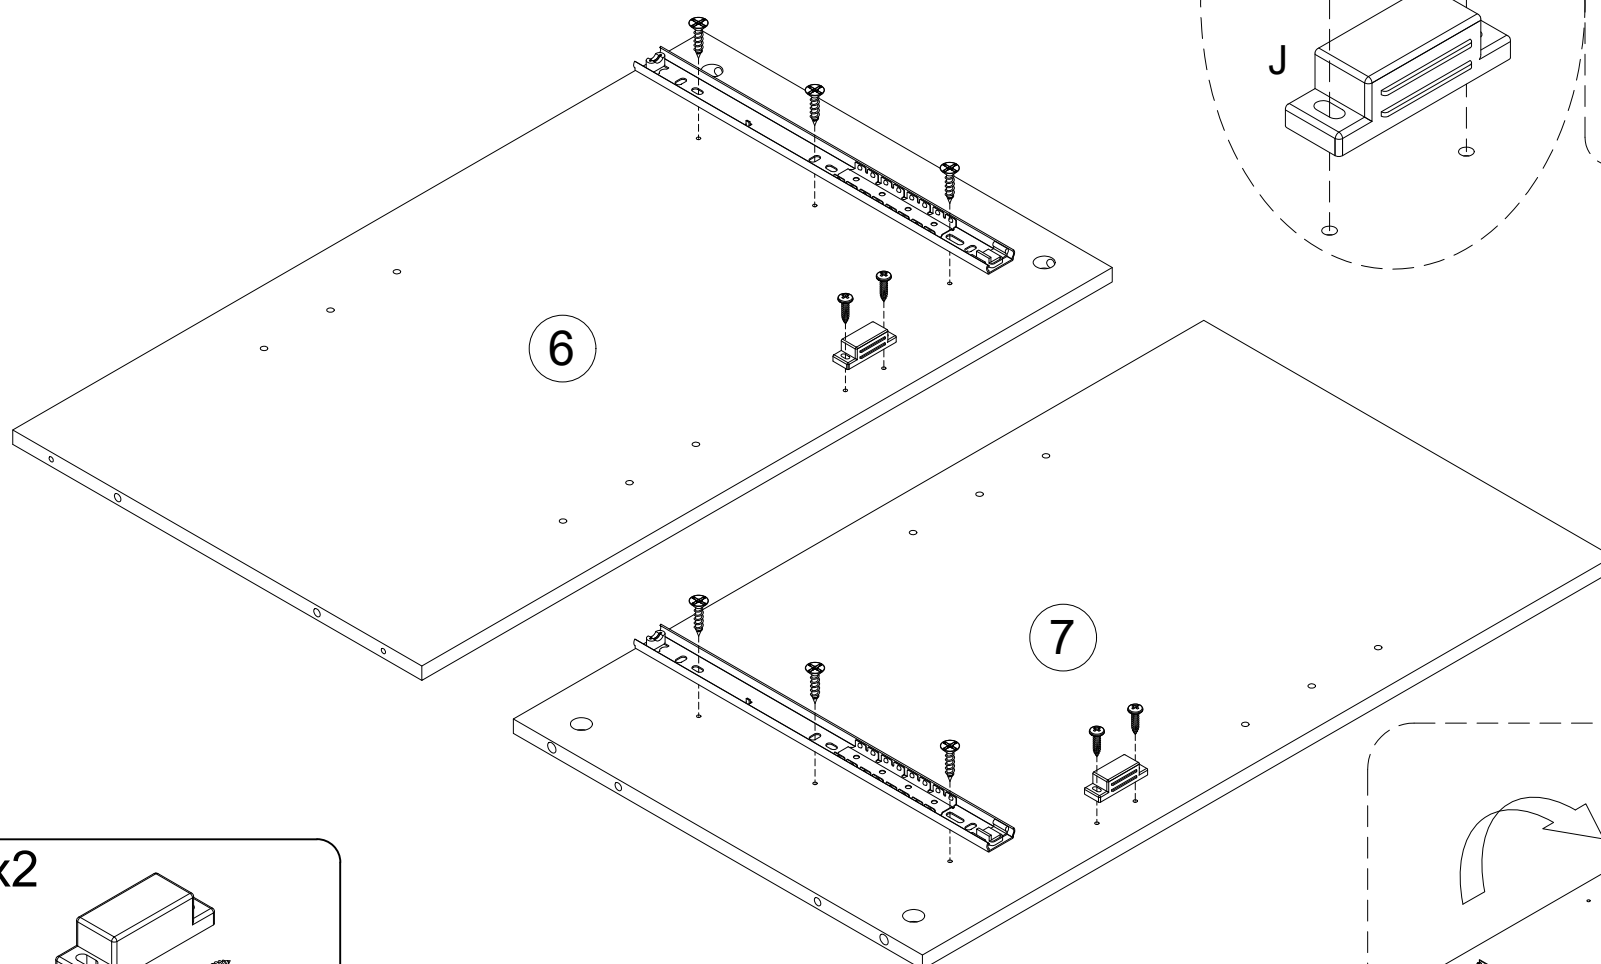



Jx2

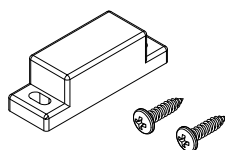


E1x2




Ox6

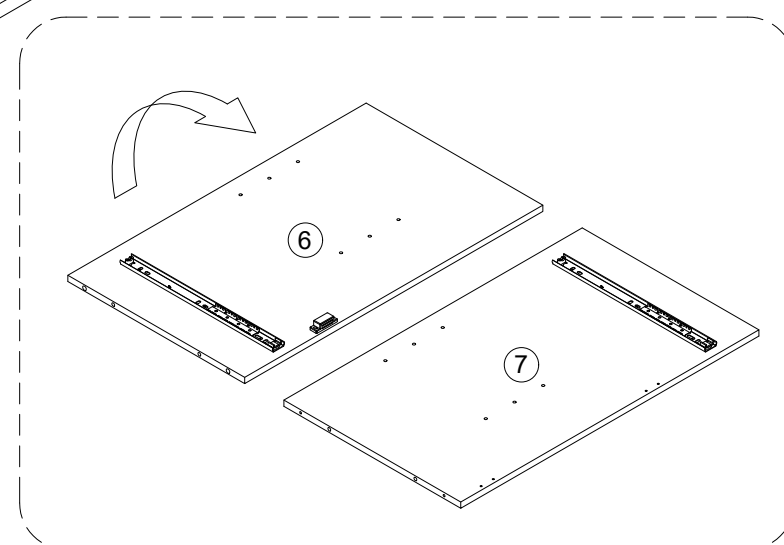

7

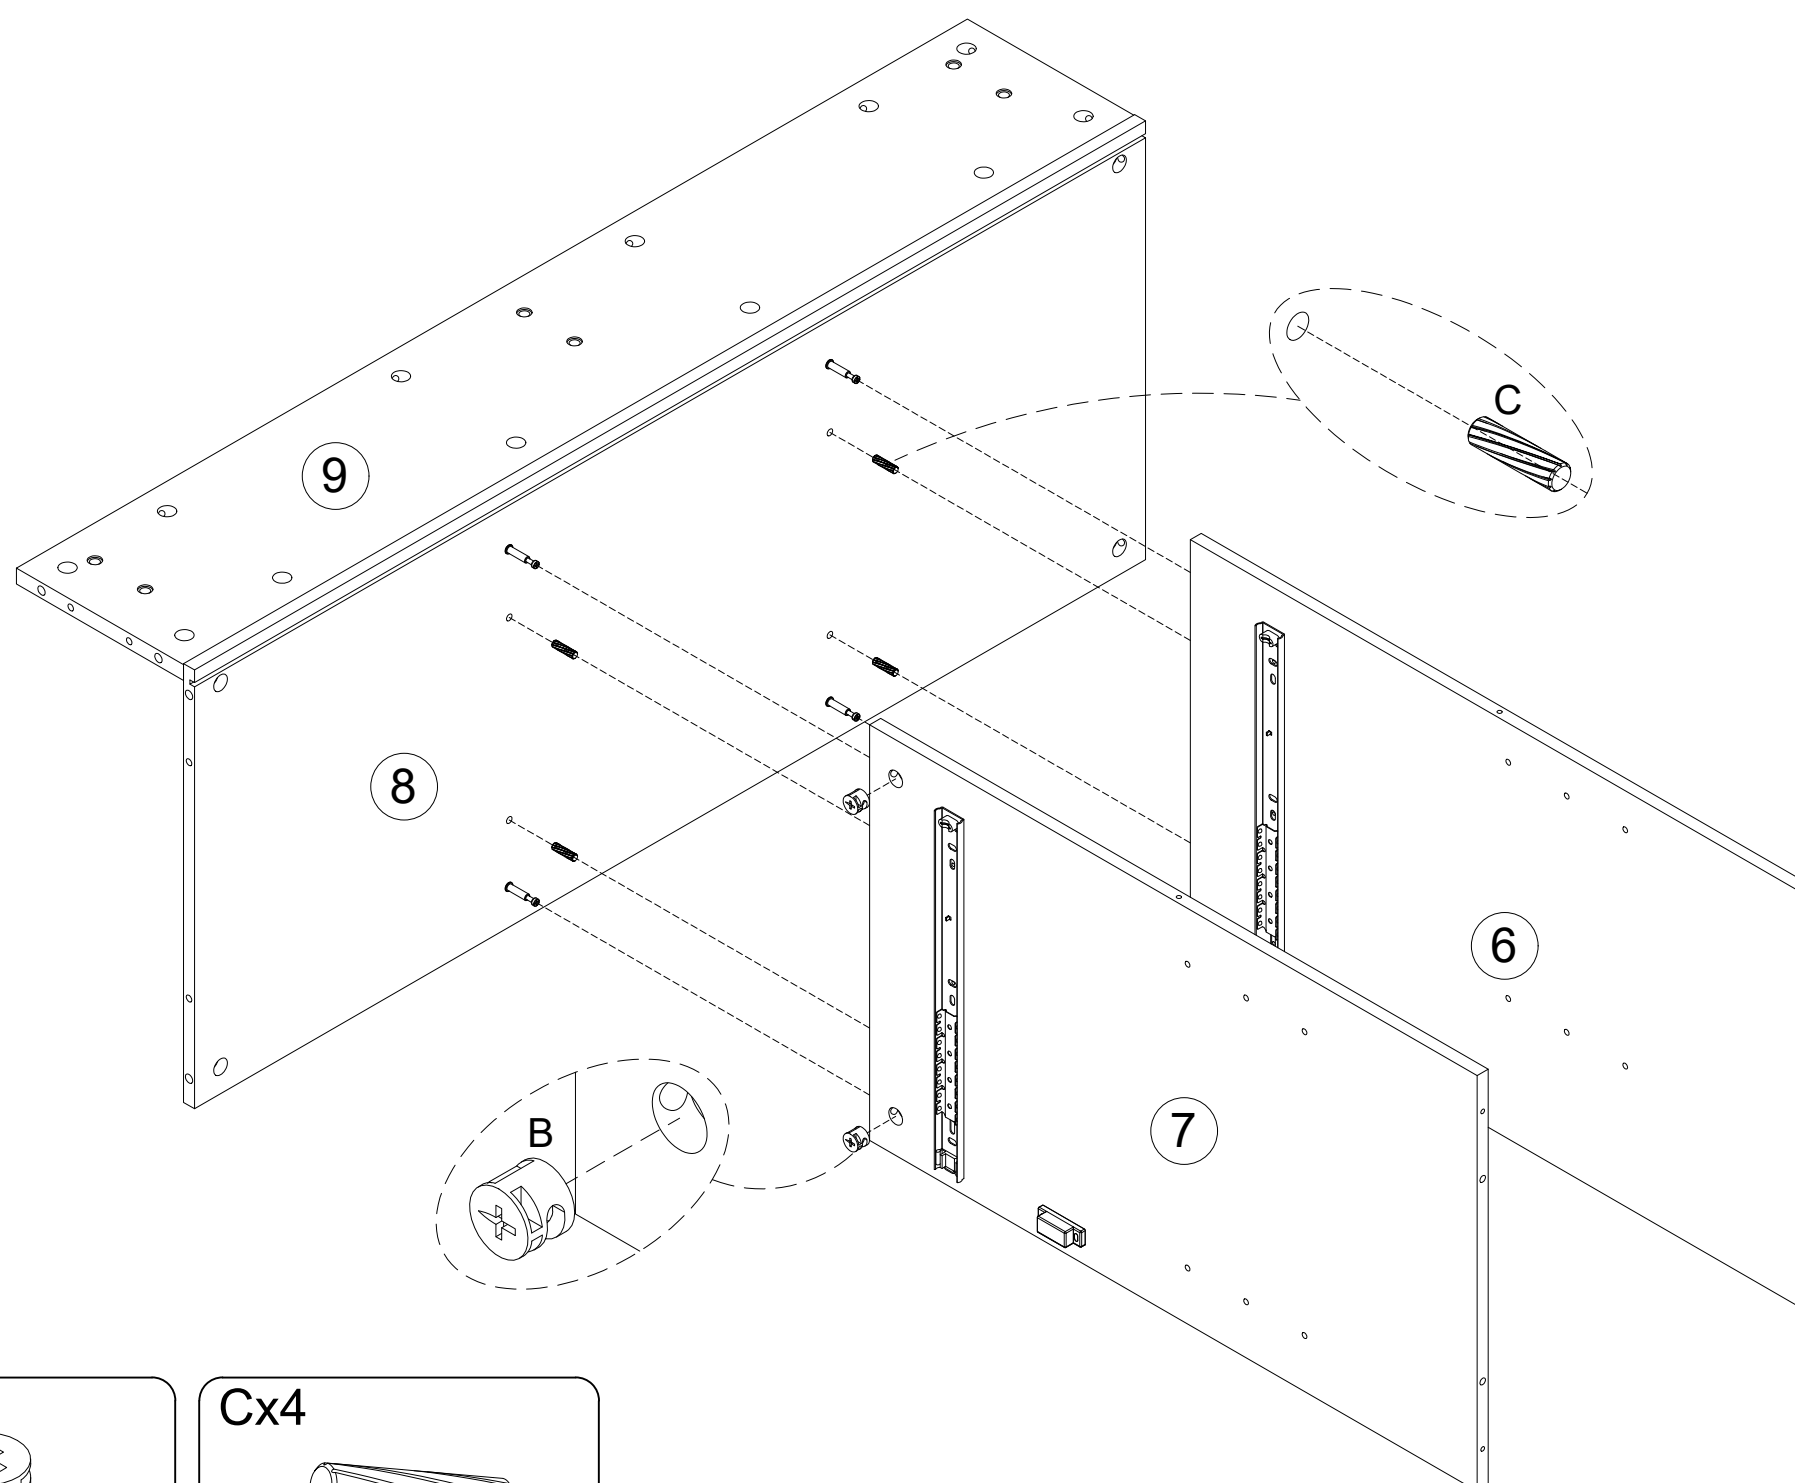


Bx4




Cx4






8

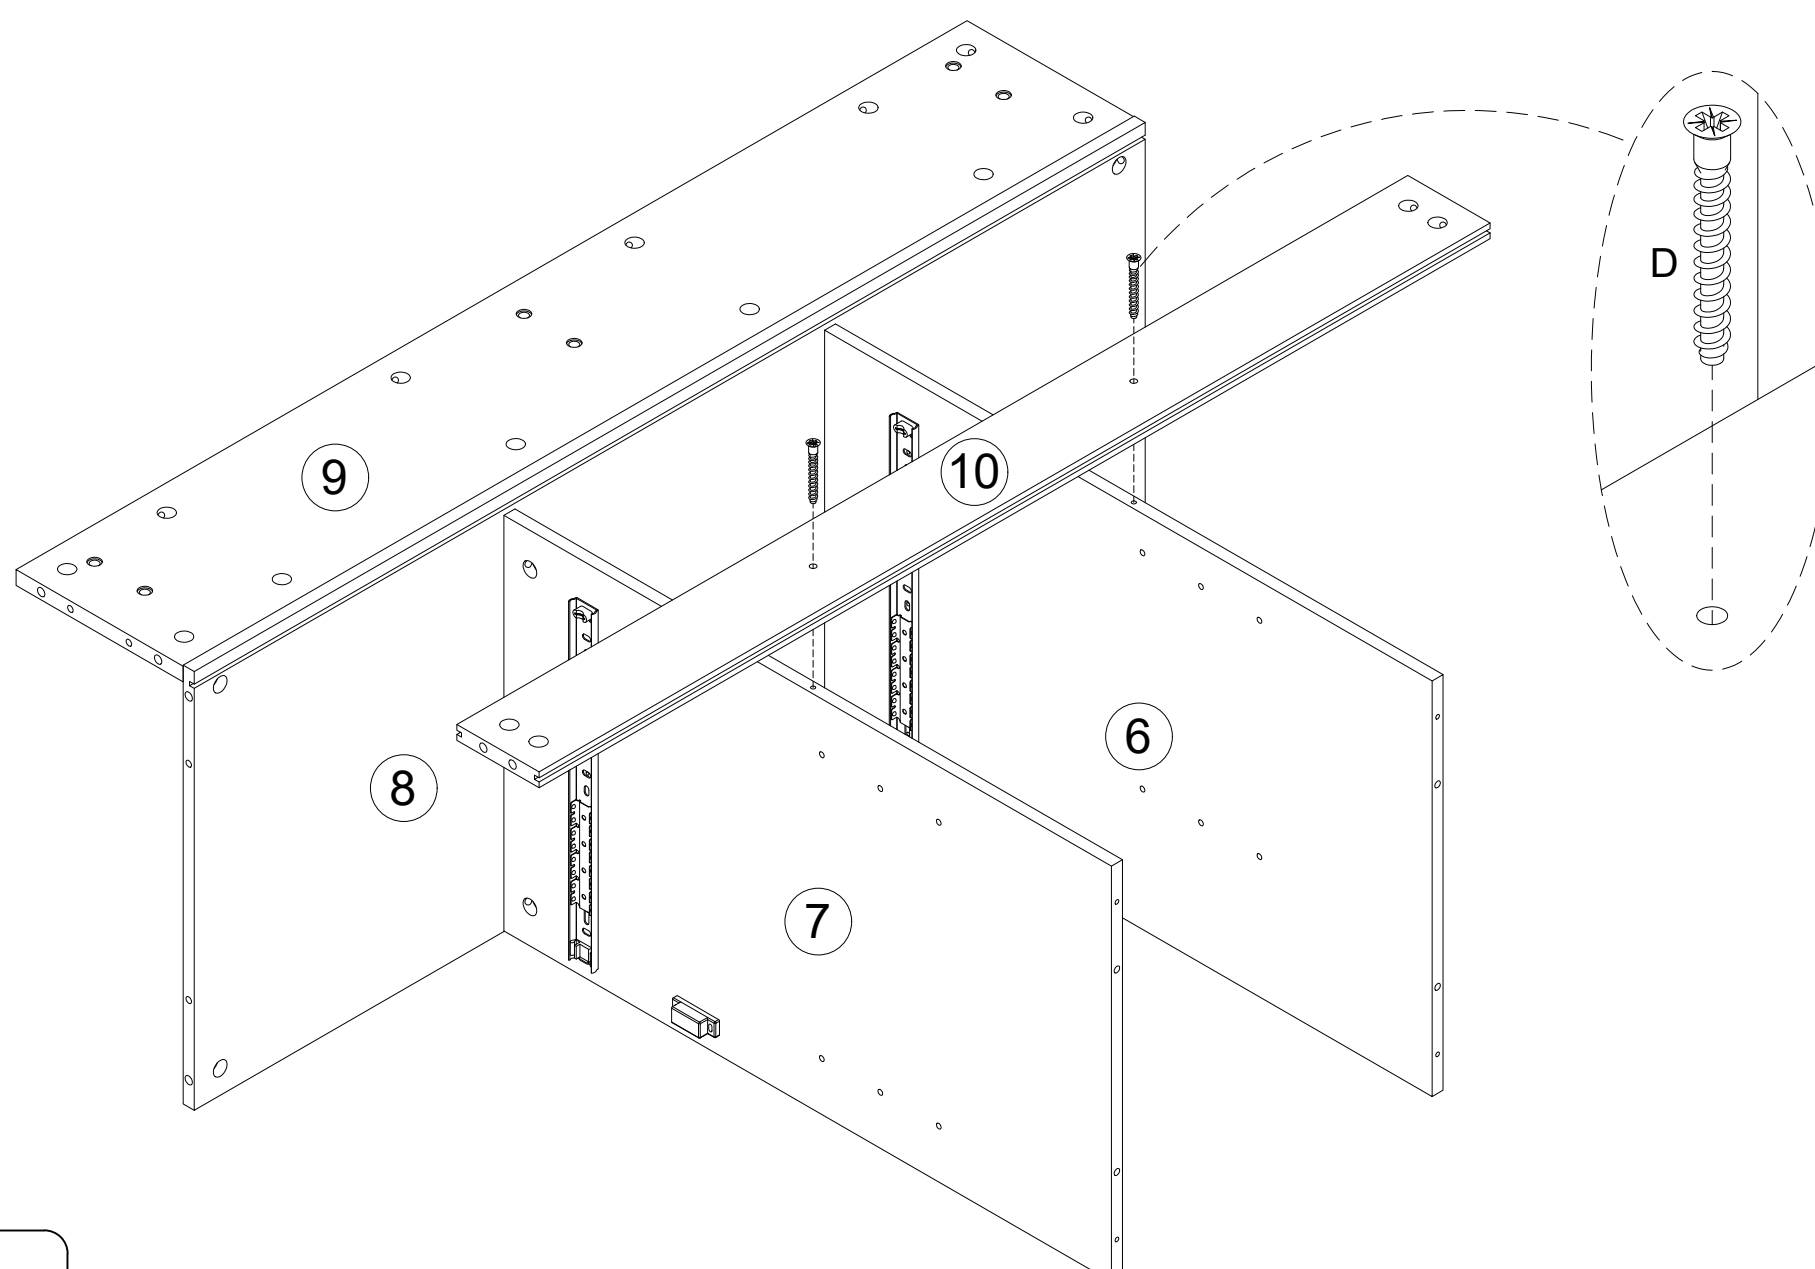


Dx2



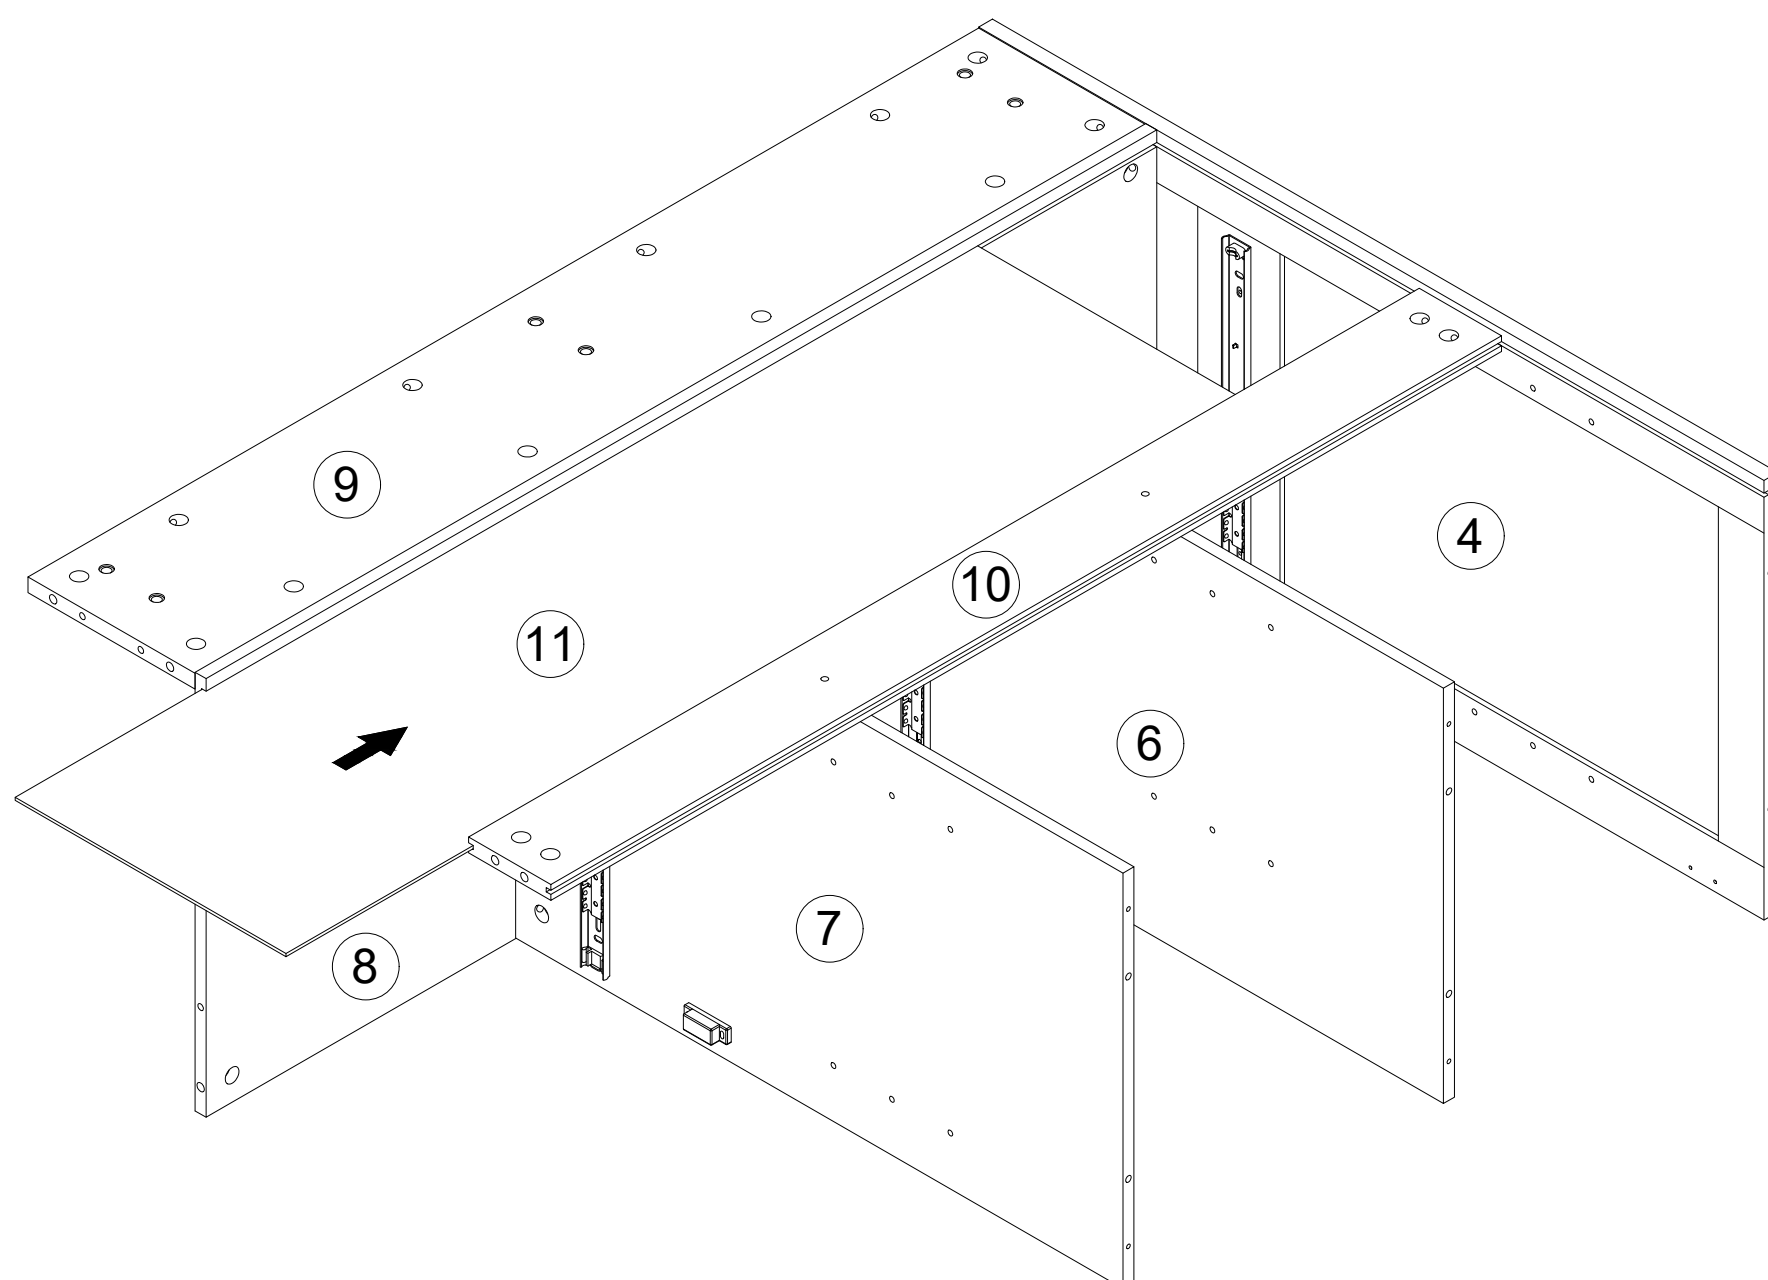
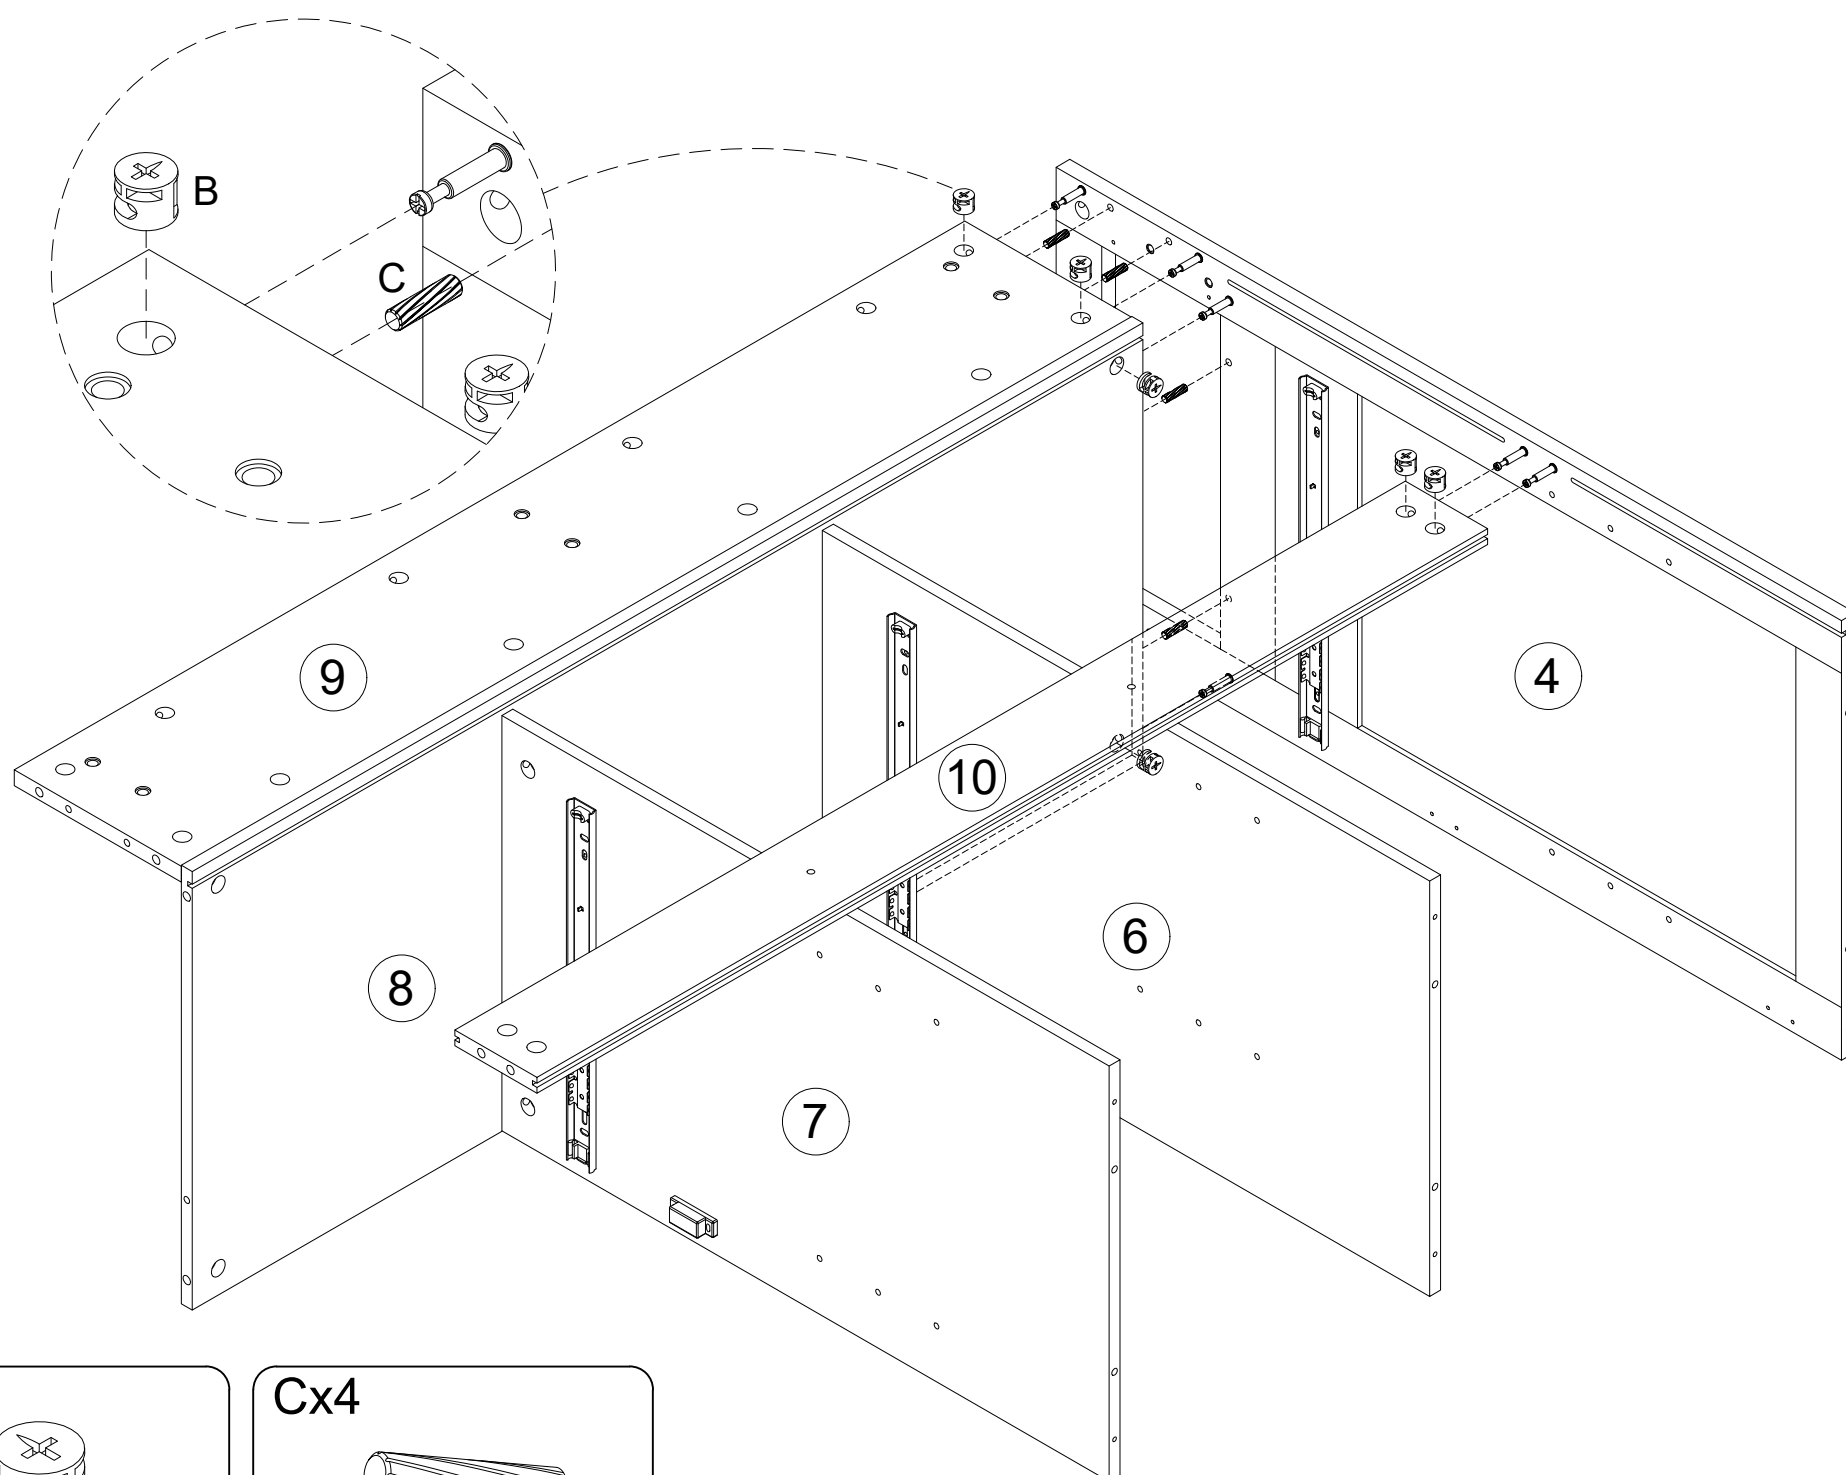


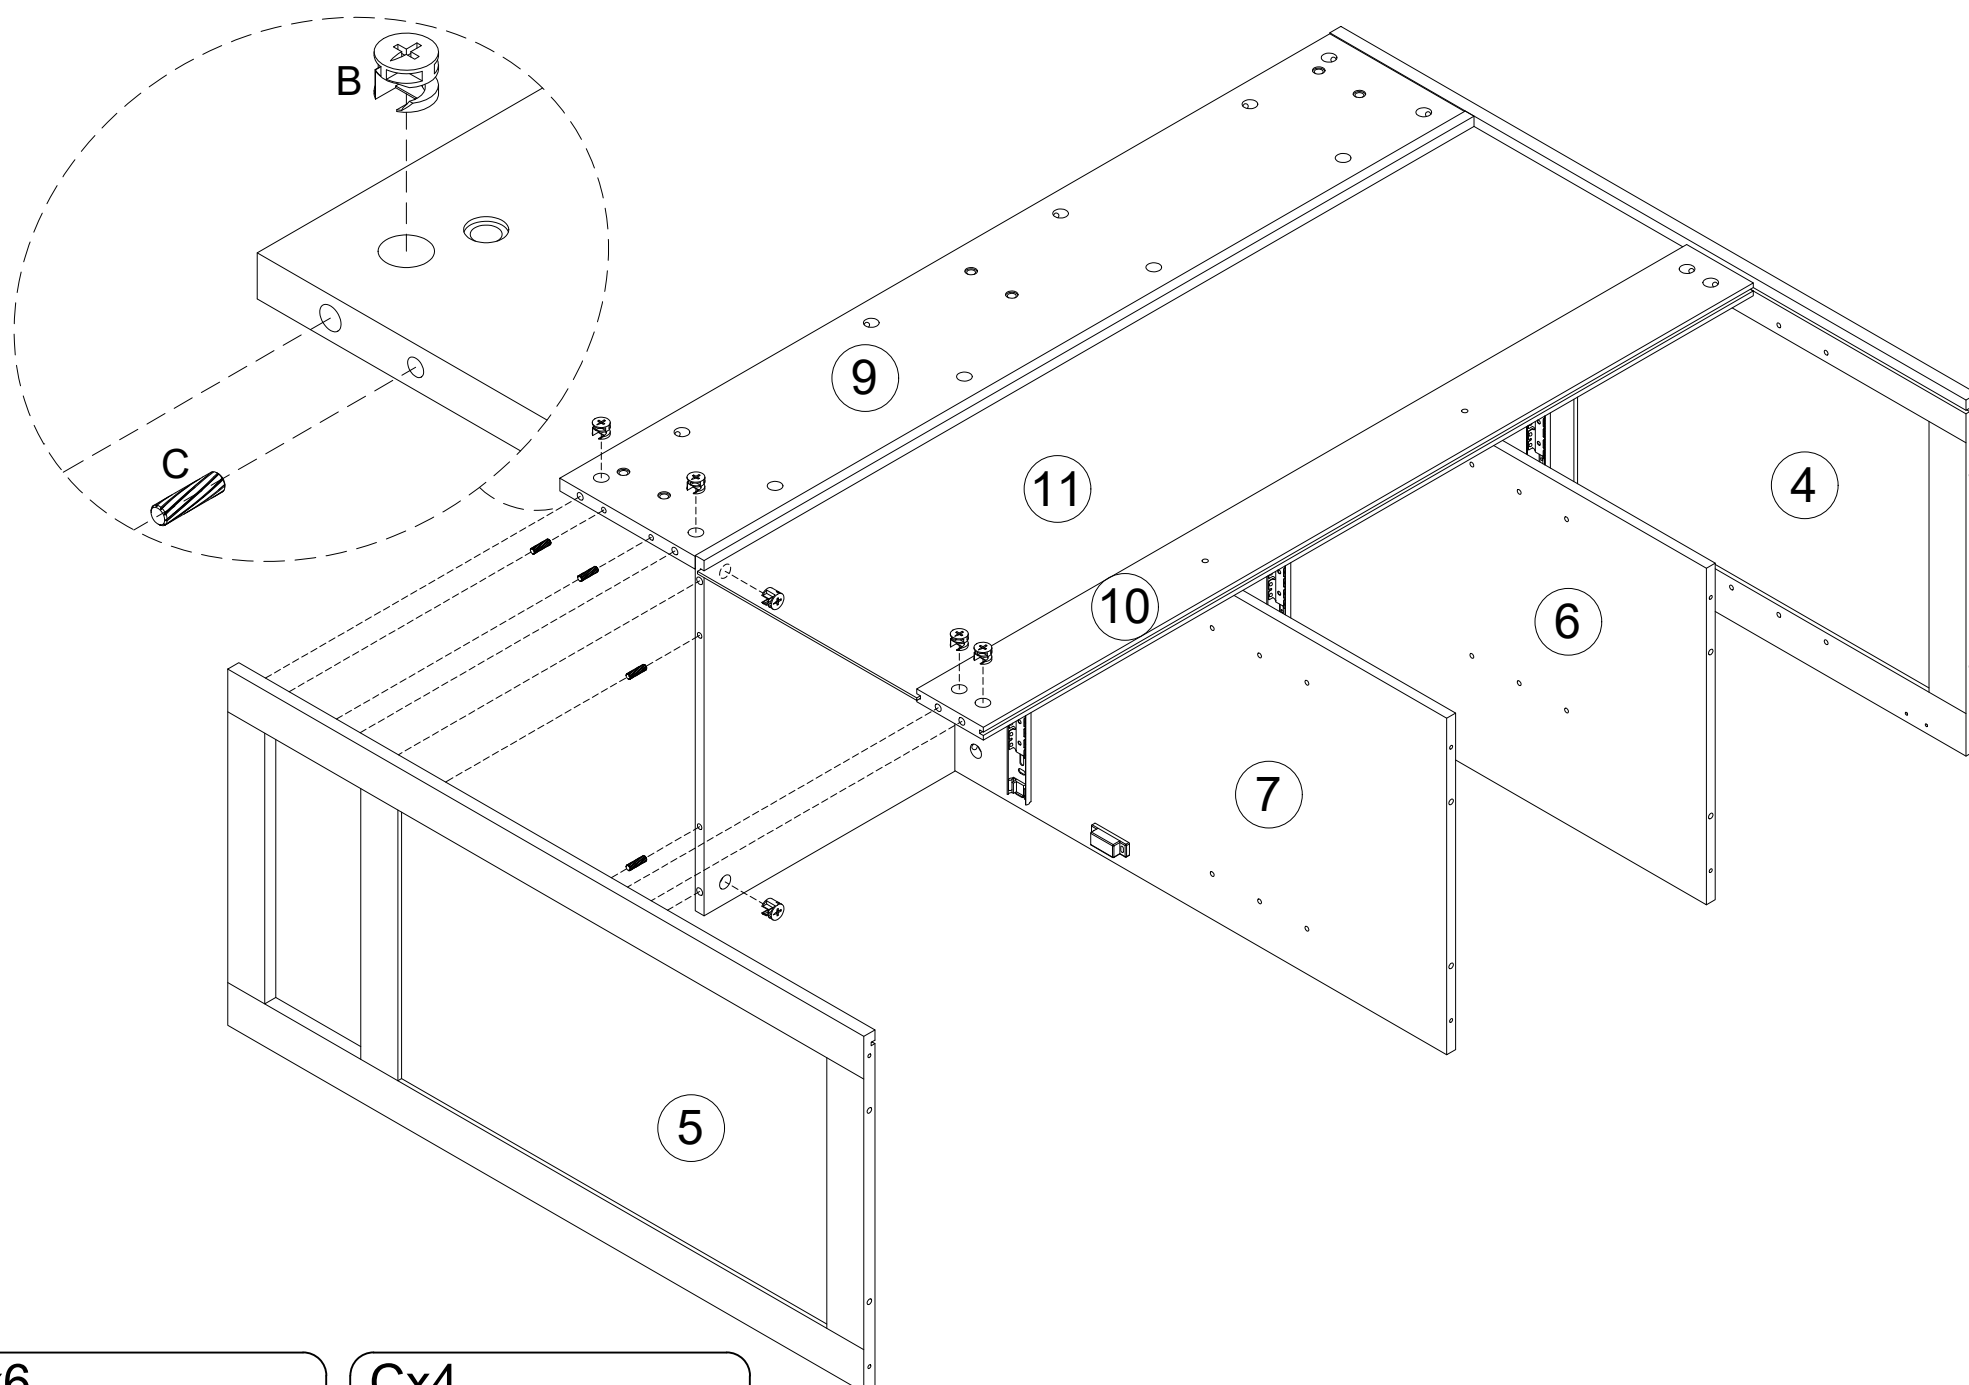




Bx6



Cx4

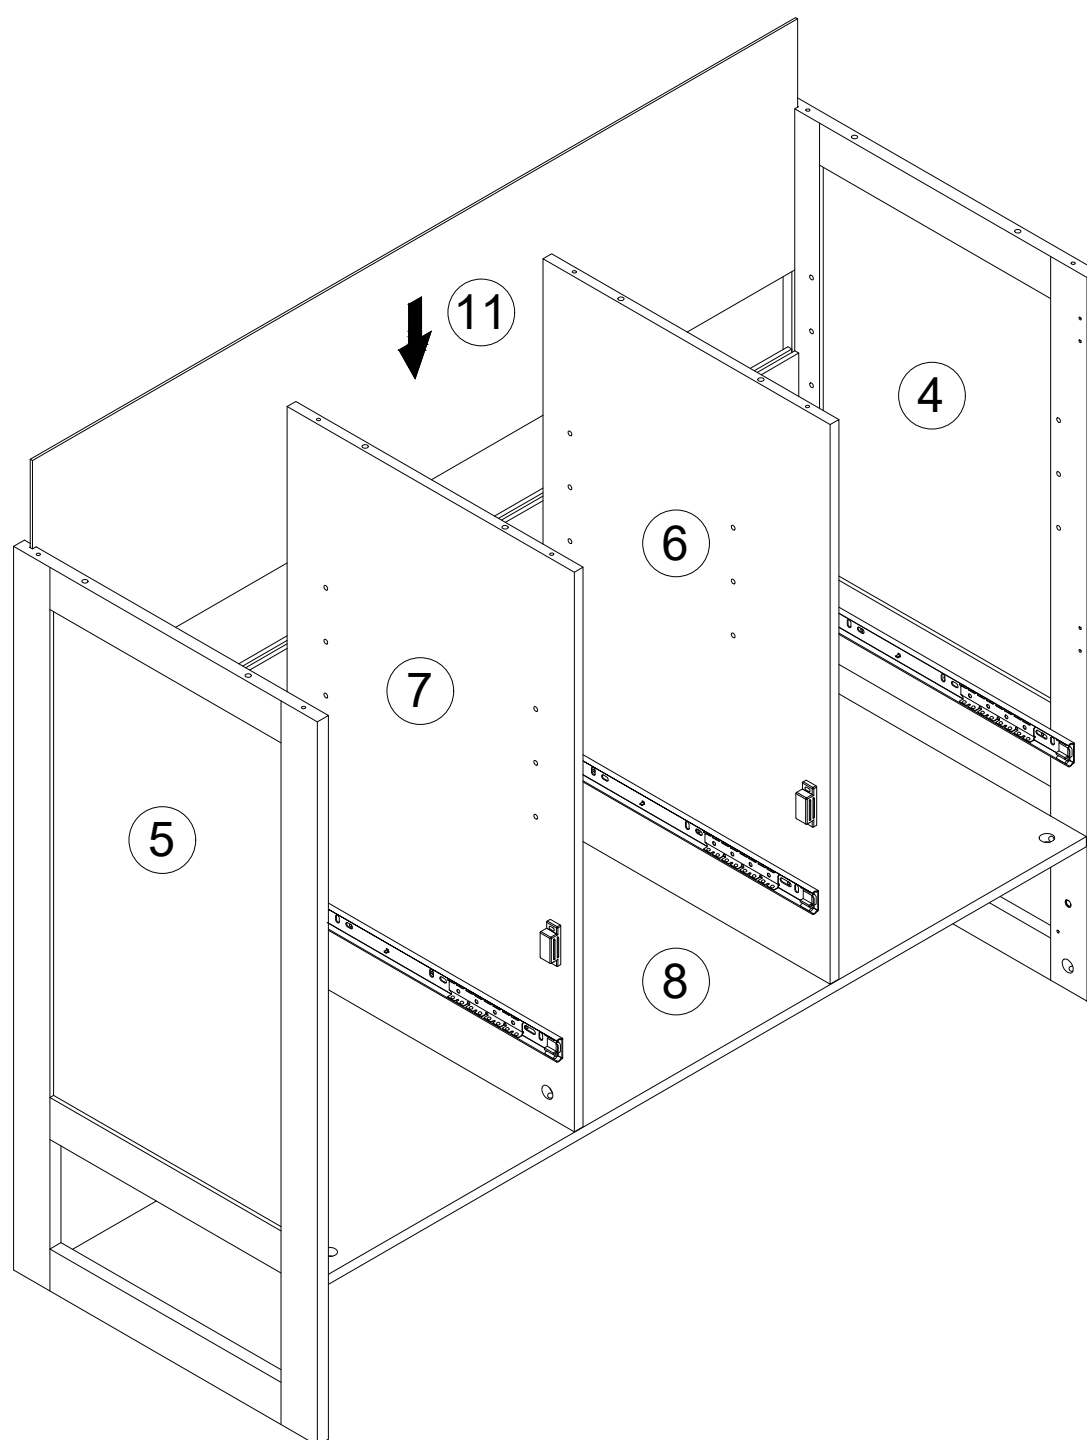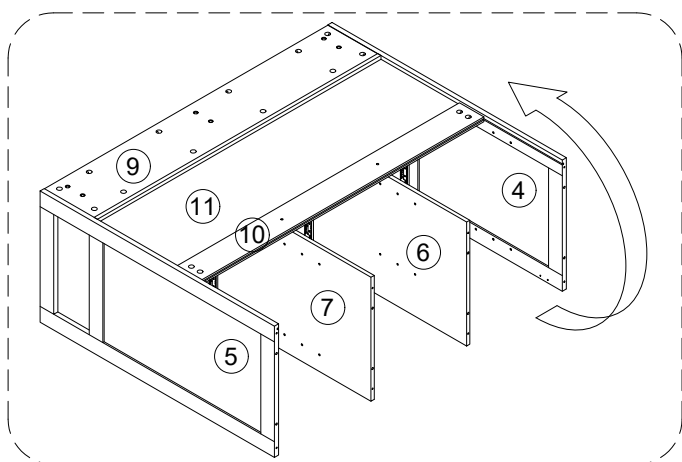


13

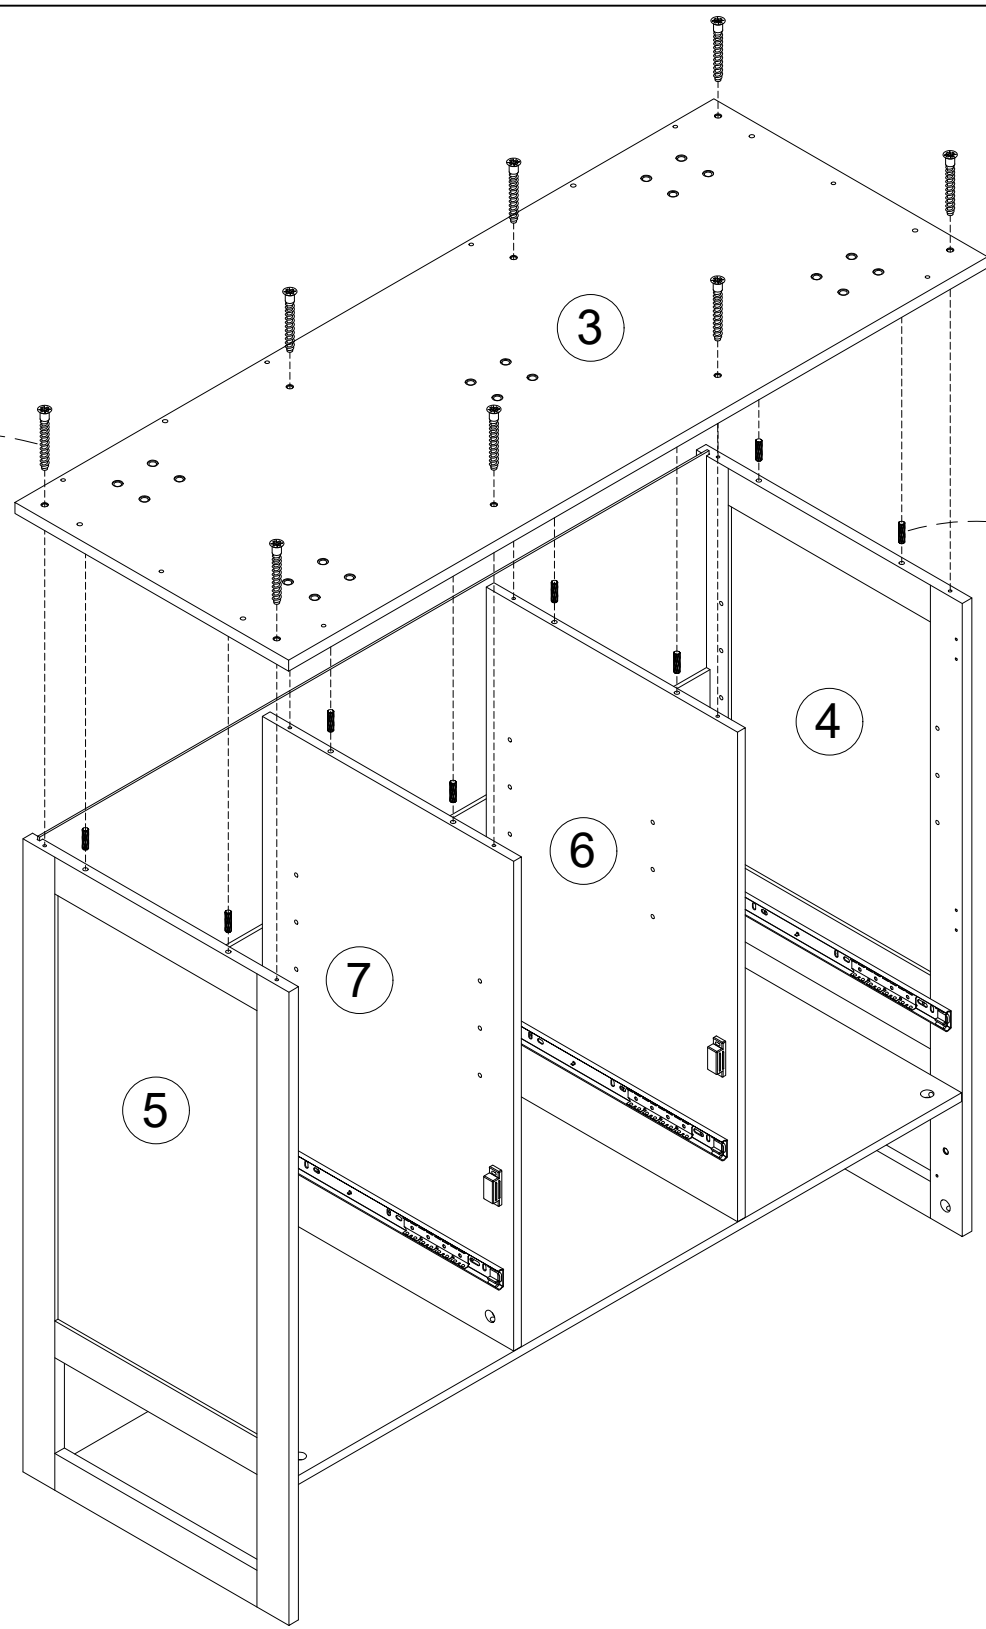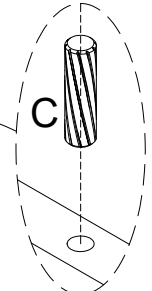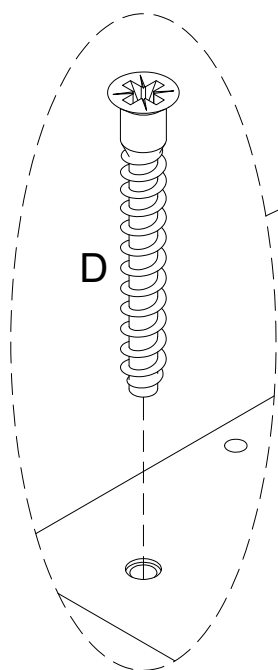


Cx8



Dx8





14

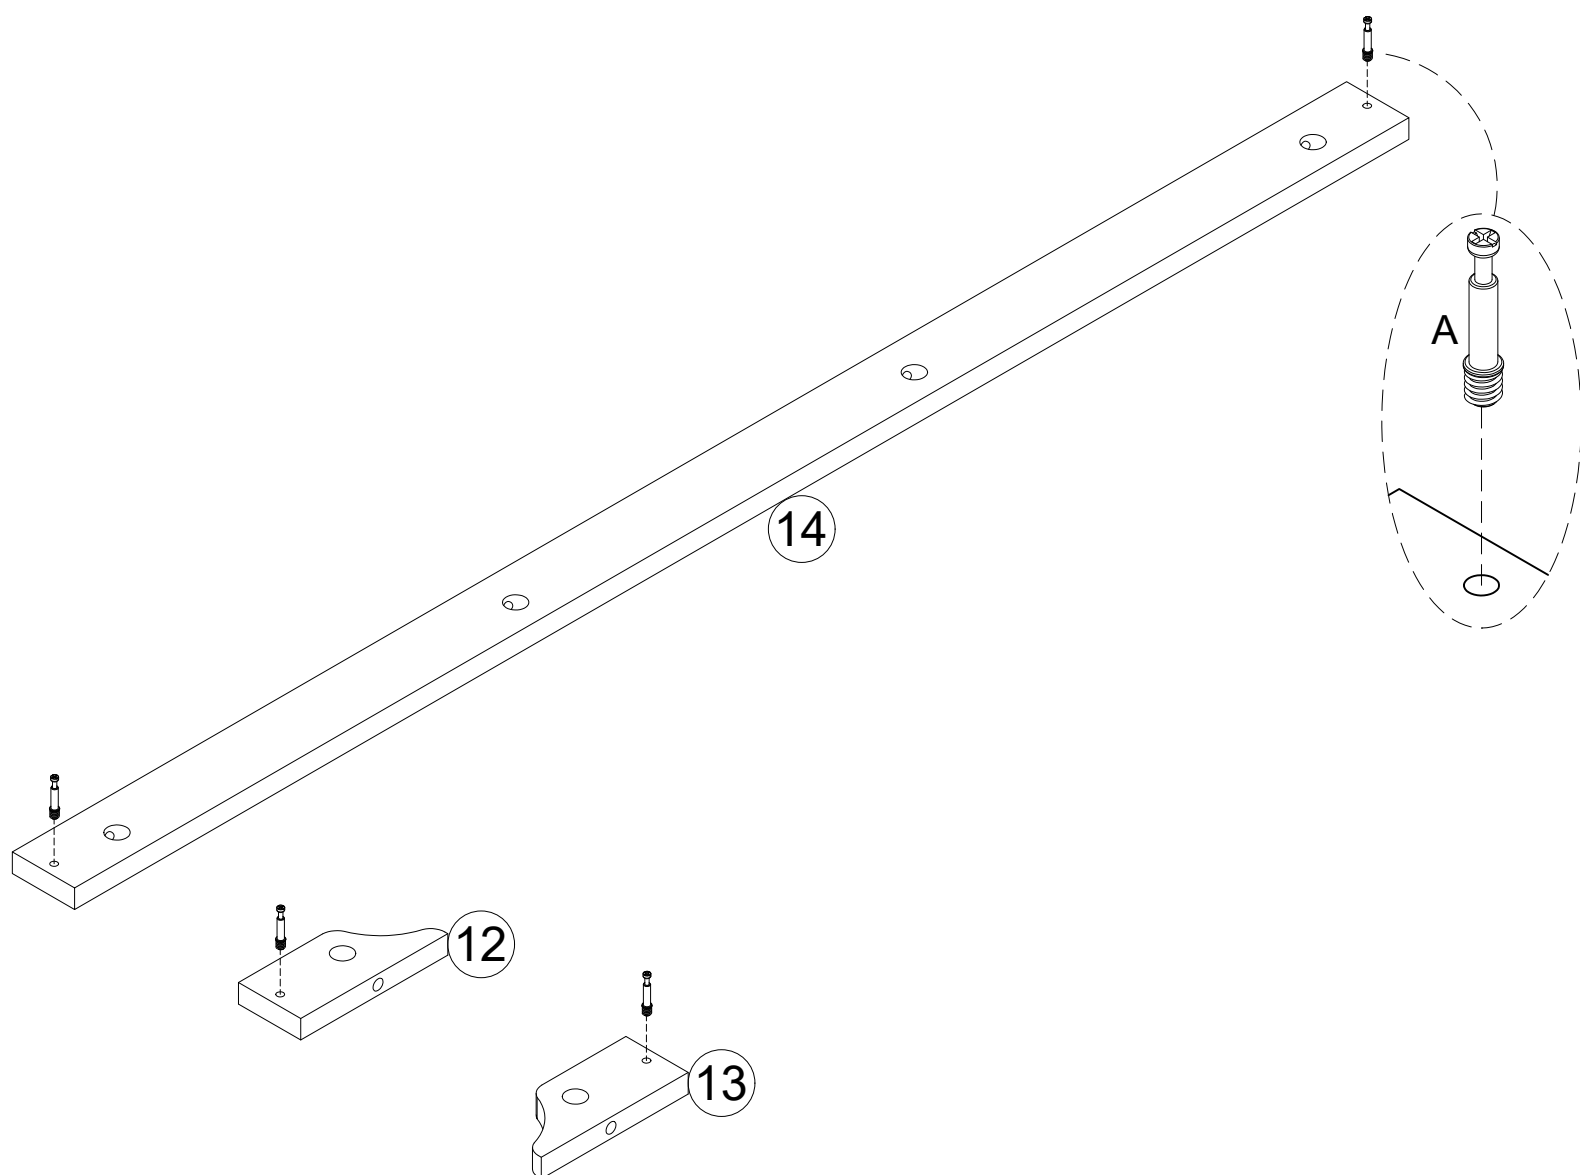



A

Ax4




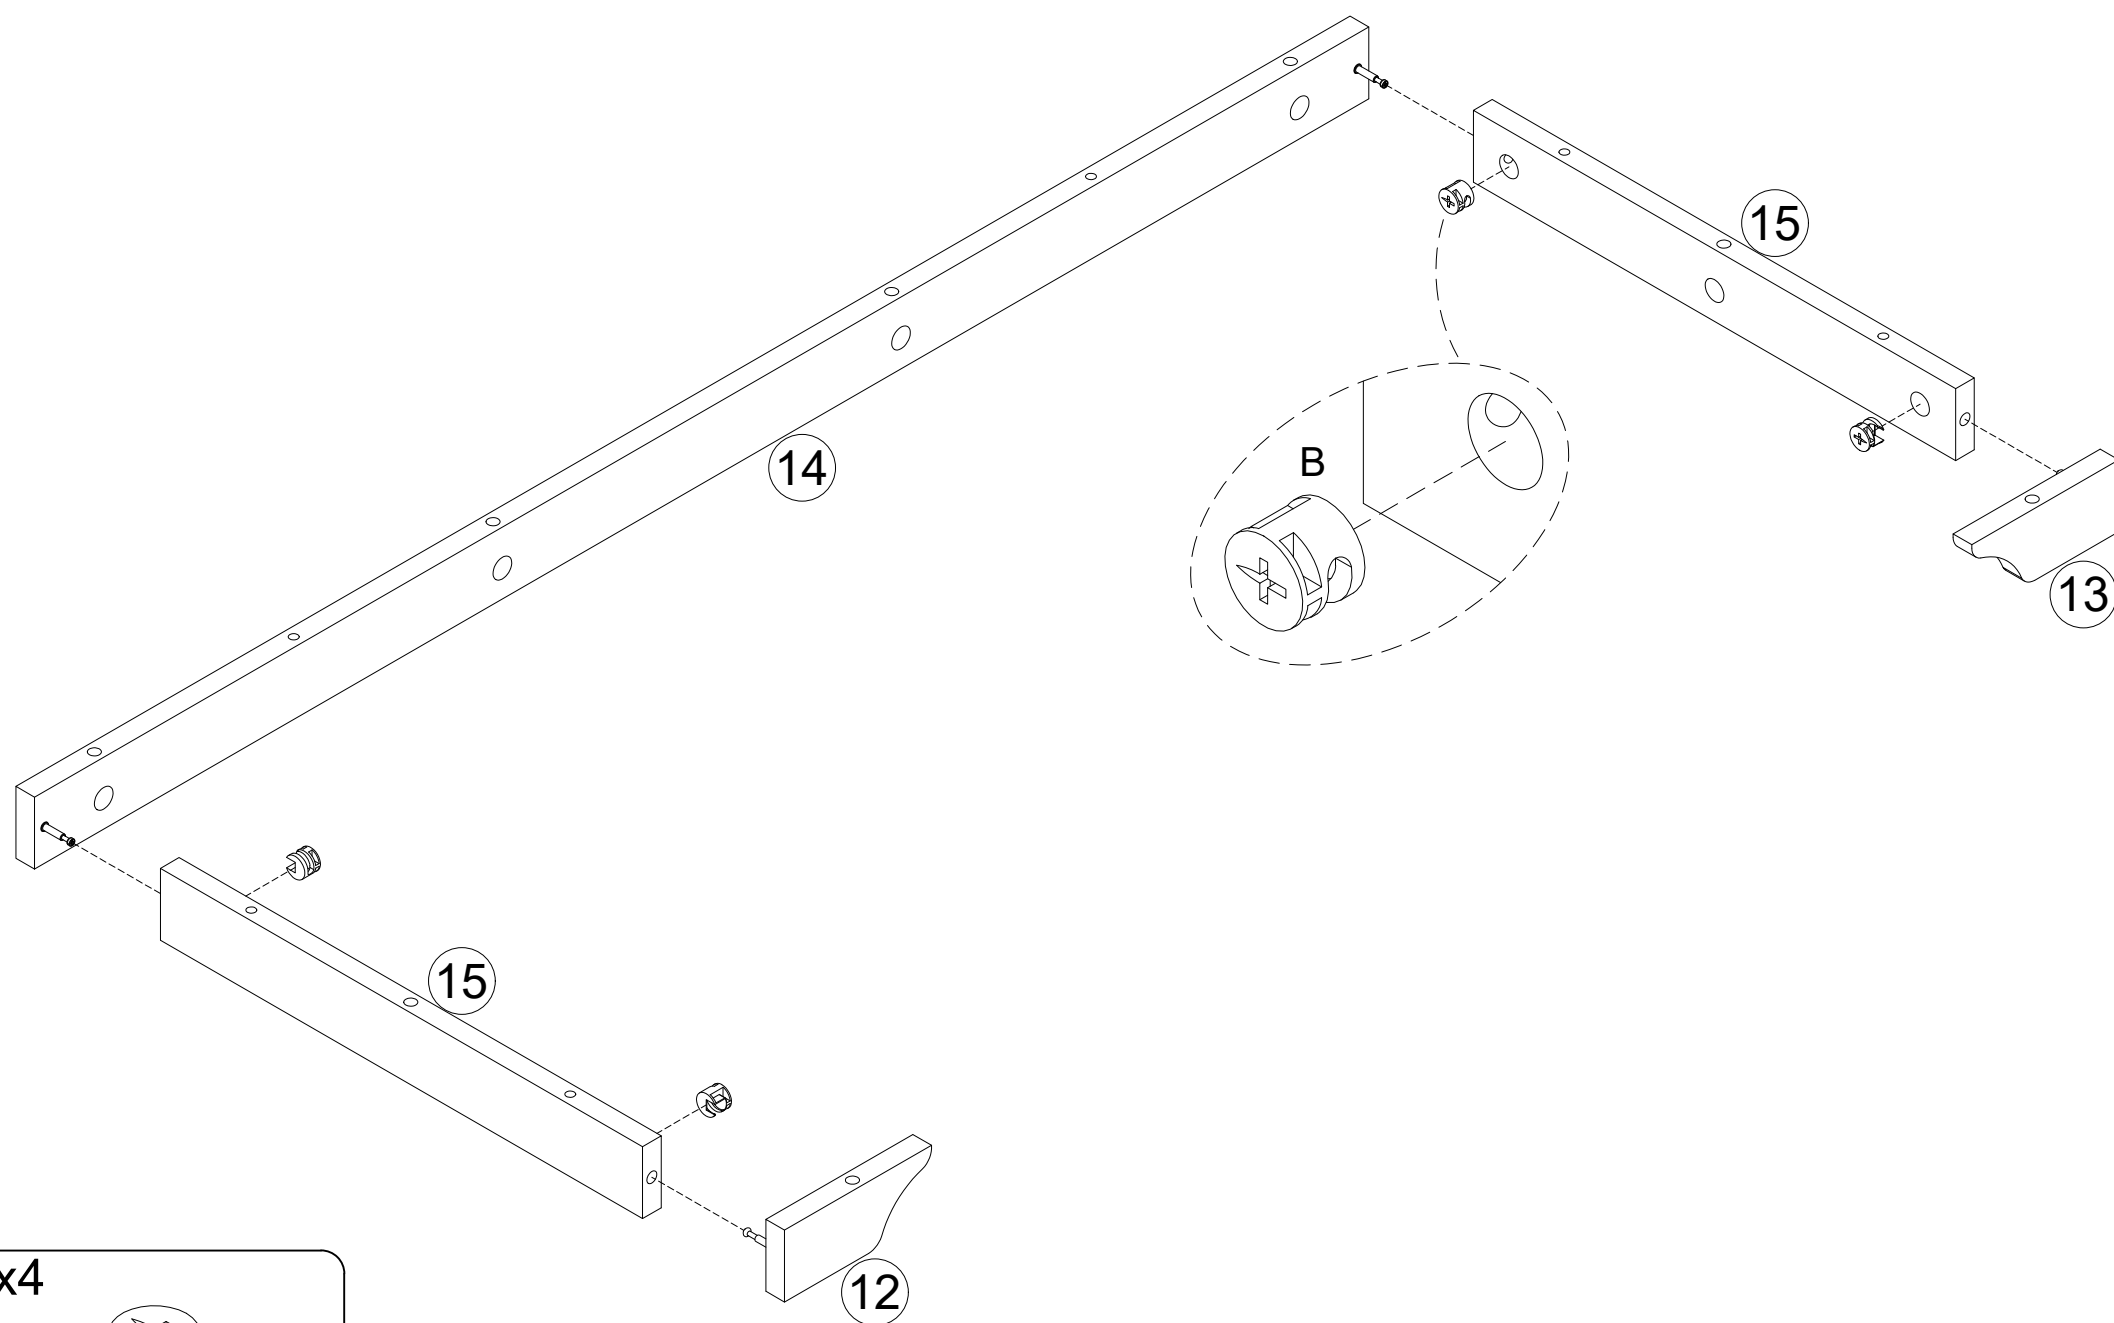


Bx4

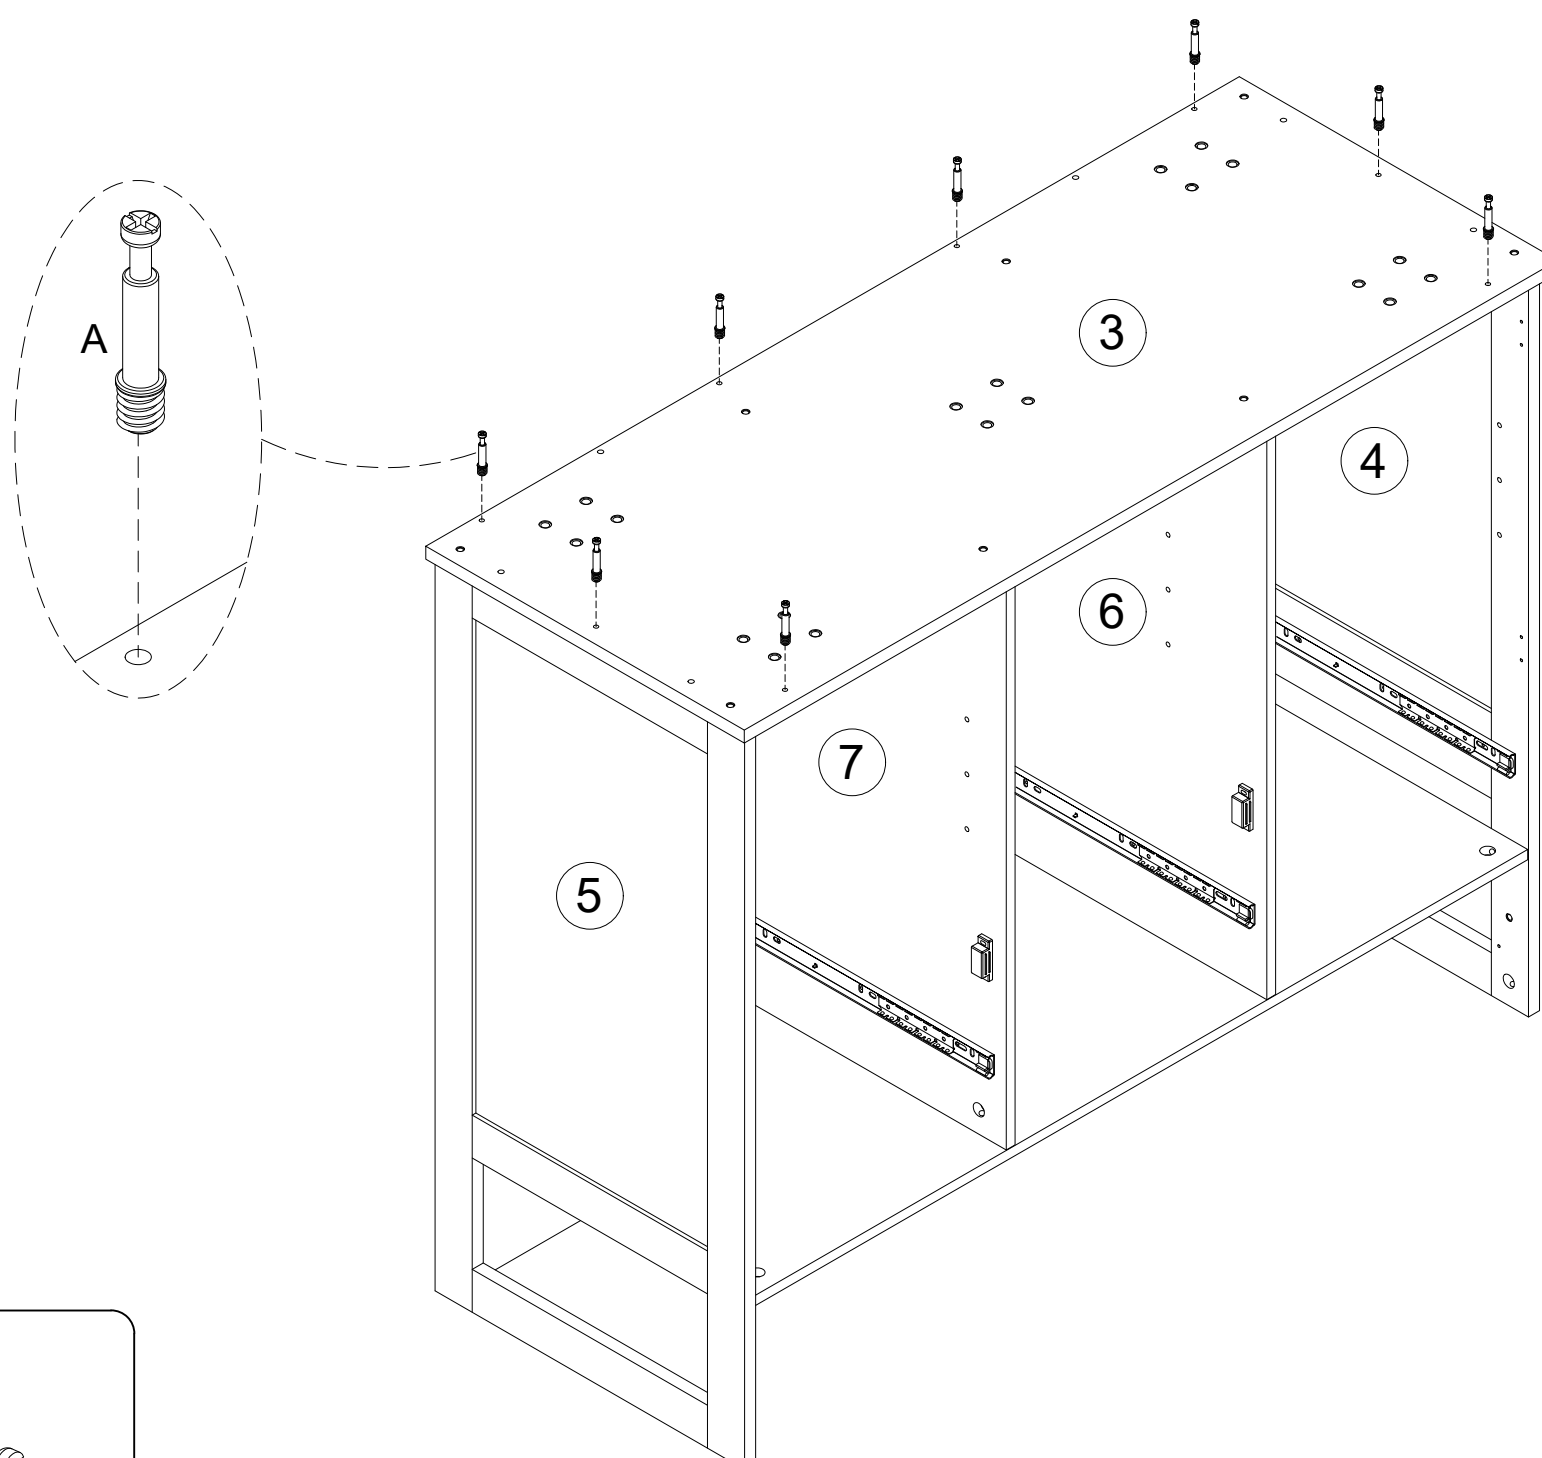


Ax8





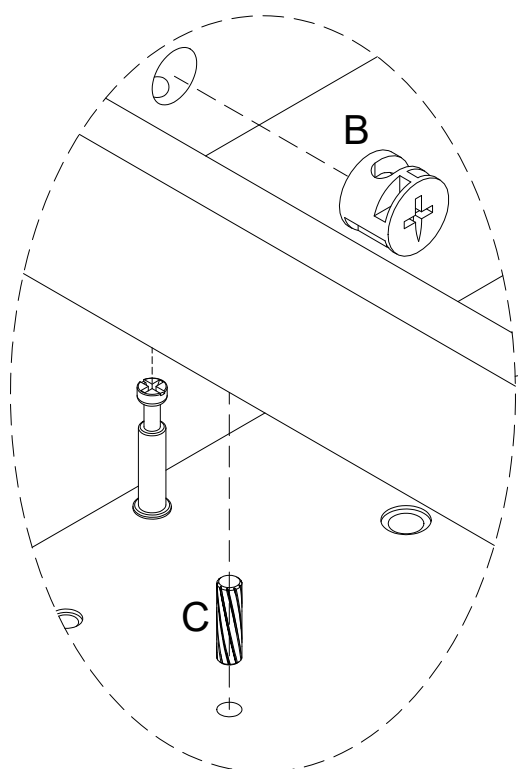


Bx8




Cx6

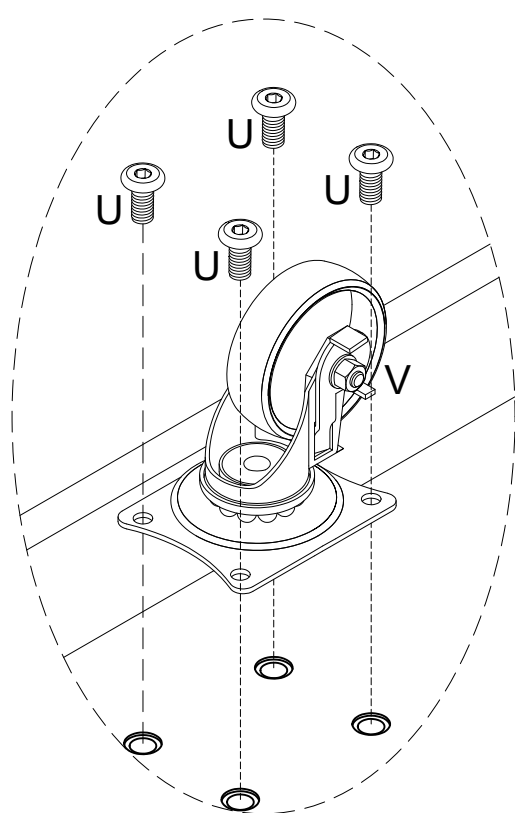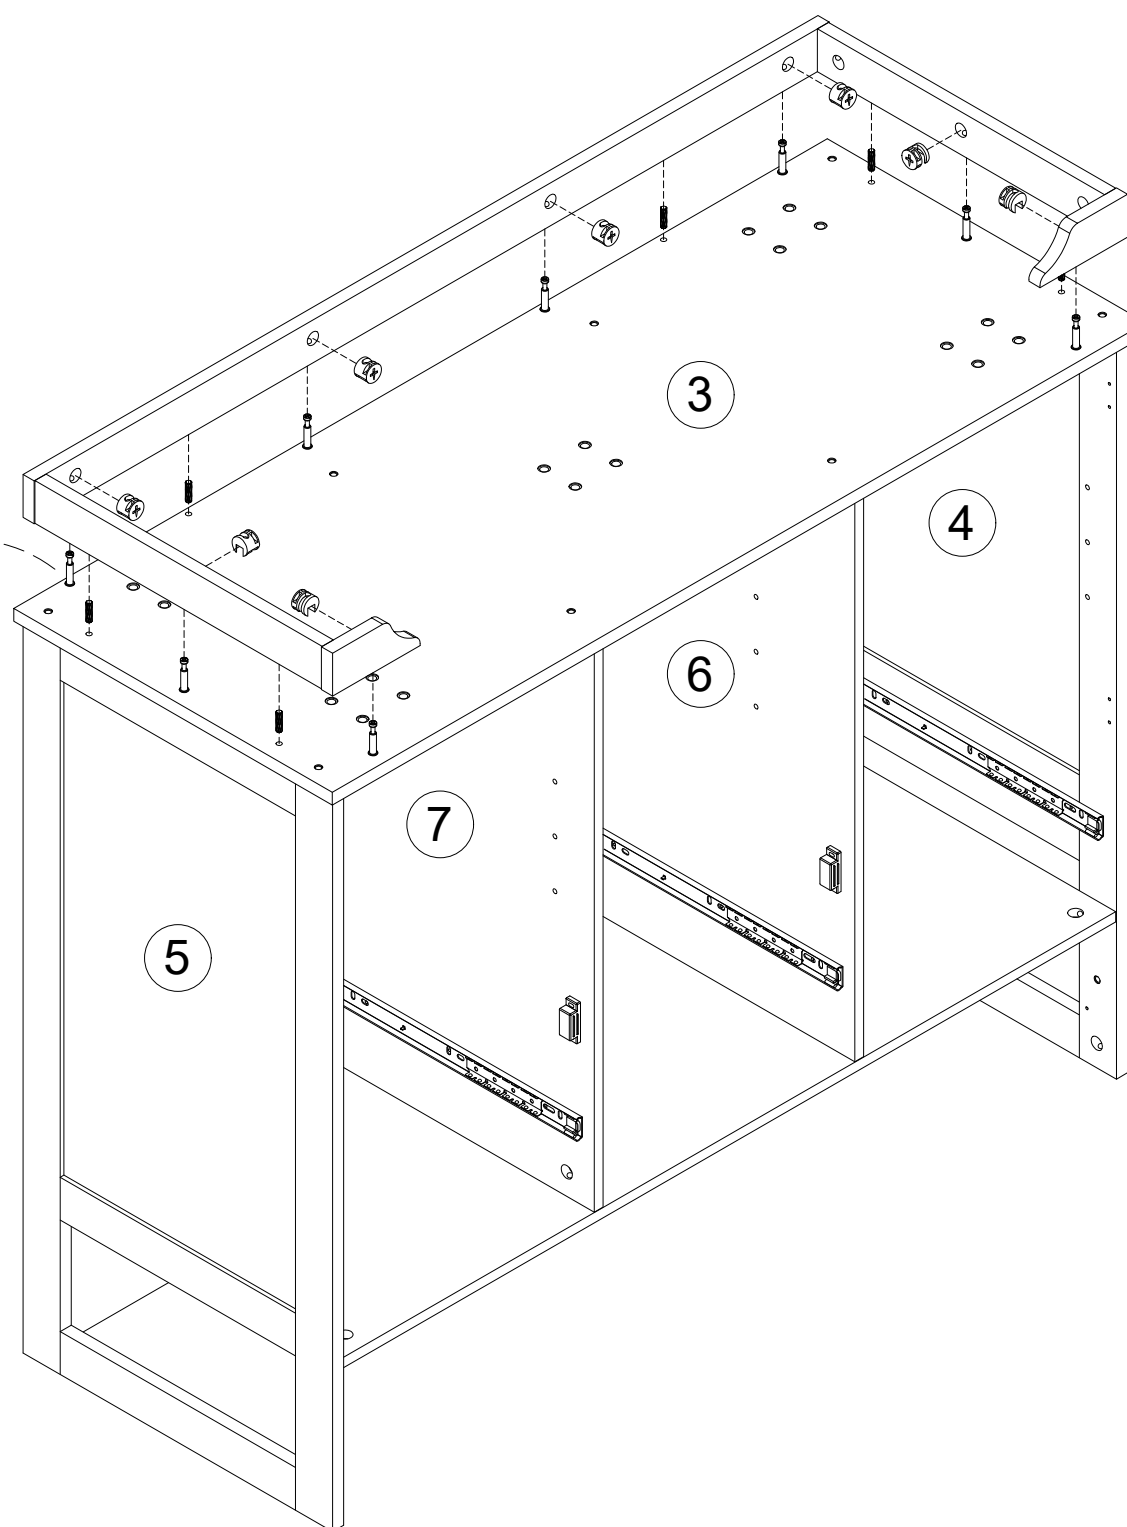



Ux20





Vx3

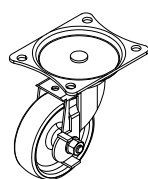


Wx2

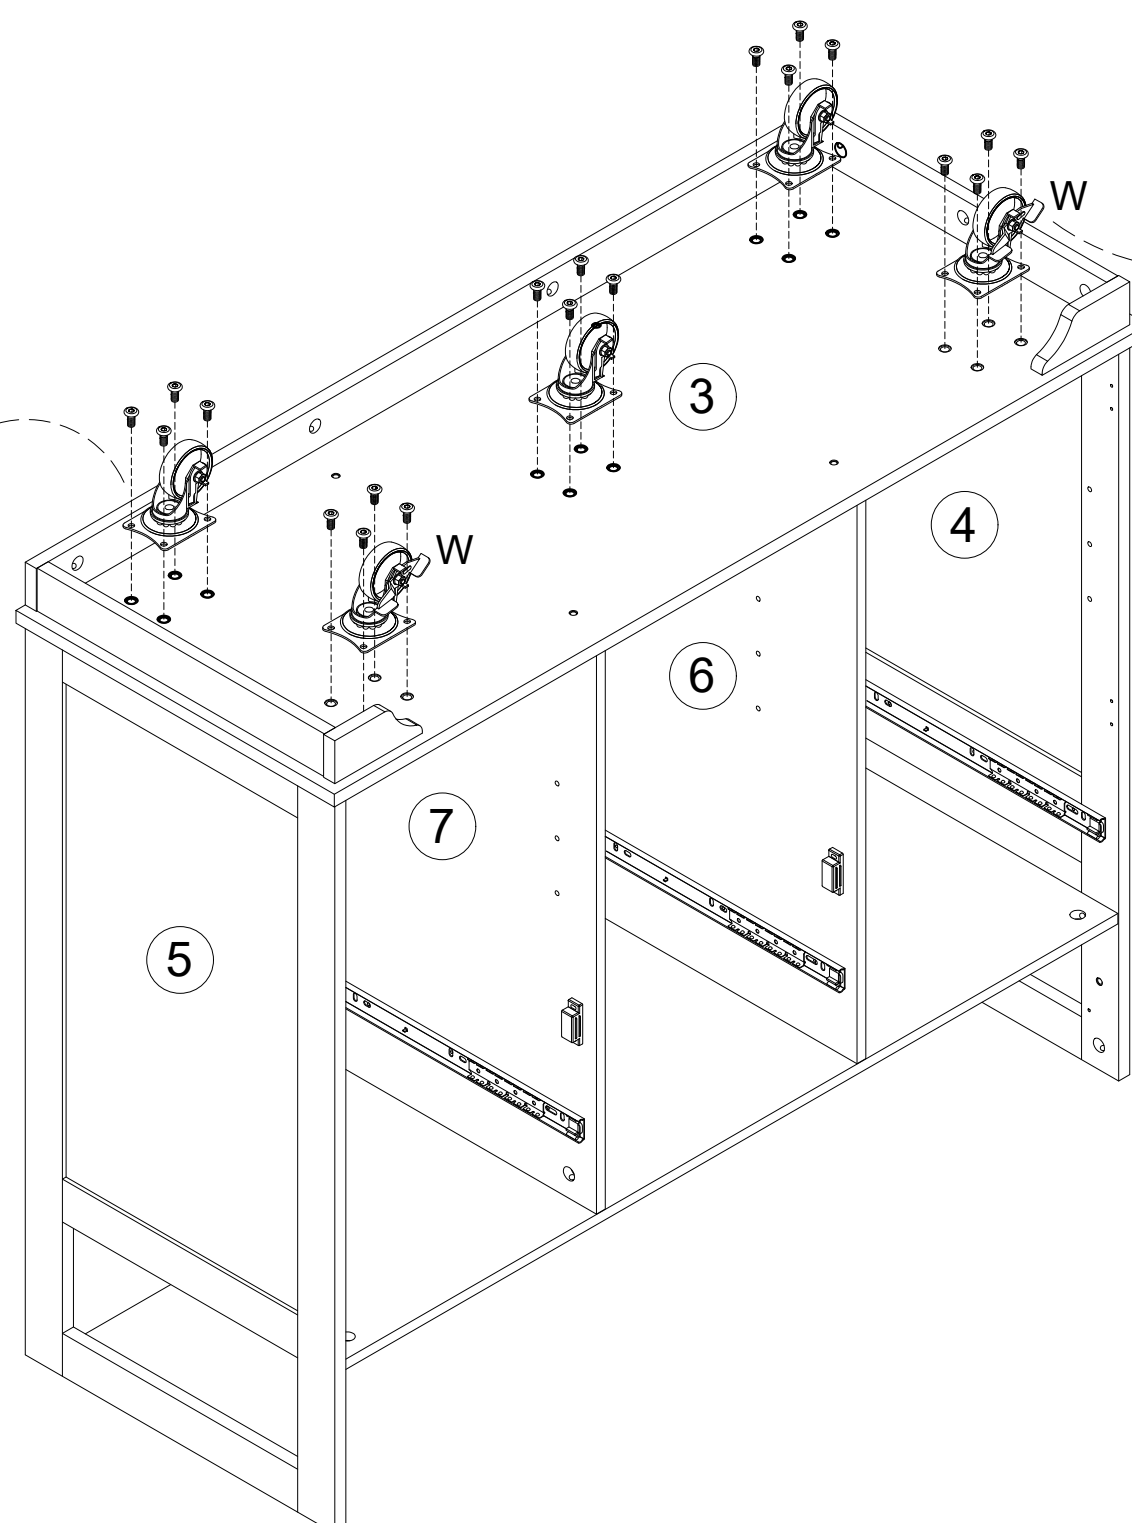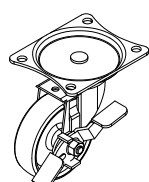


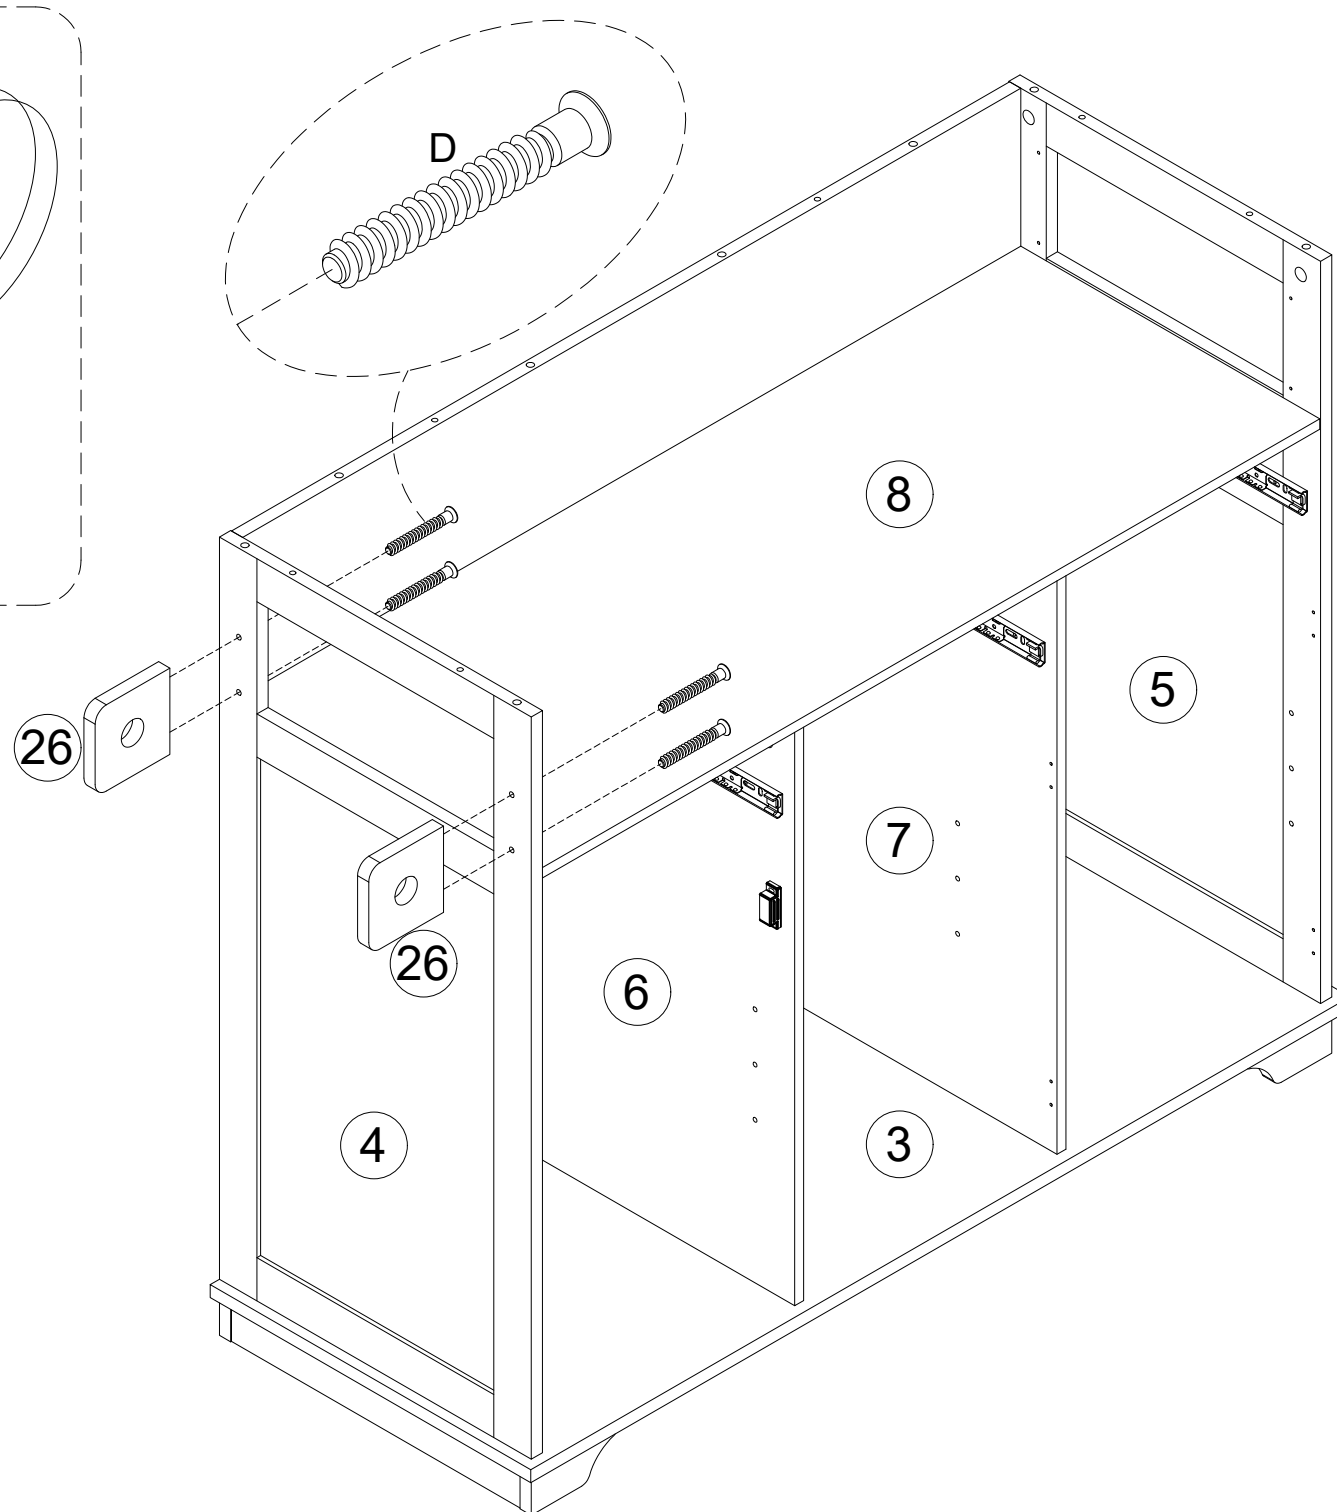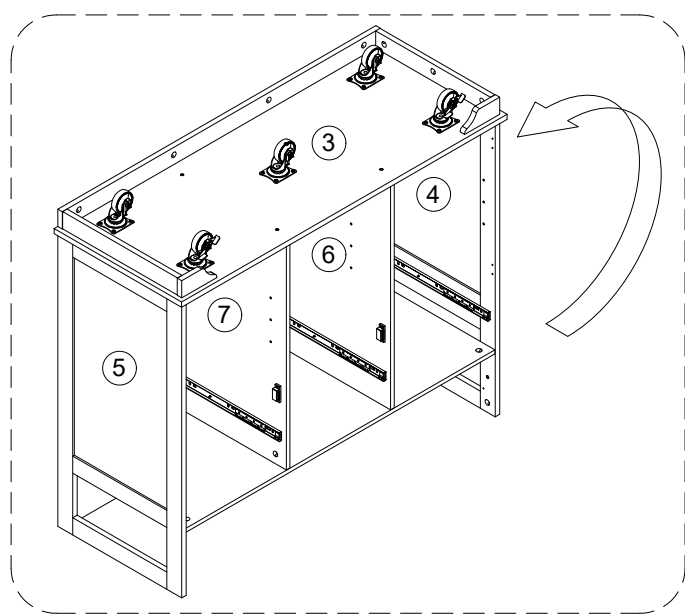

Dx4




Pay attention to the obverse and the reverse of the X-shaped iron frame

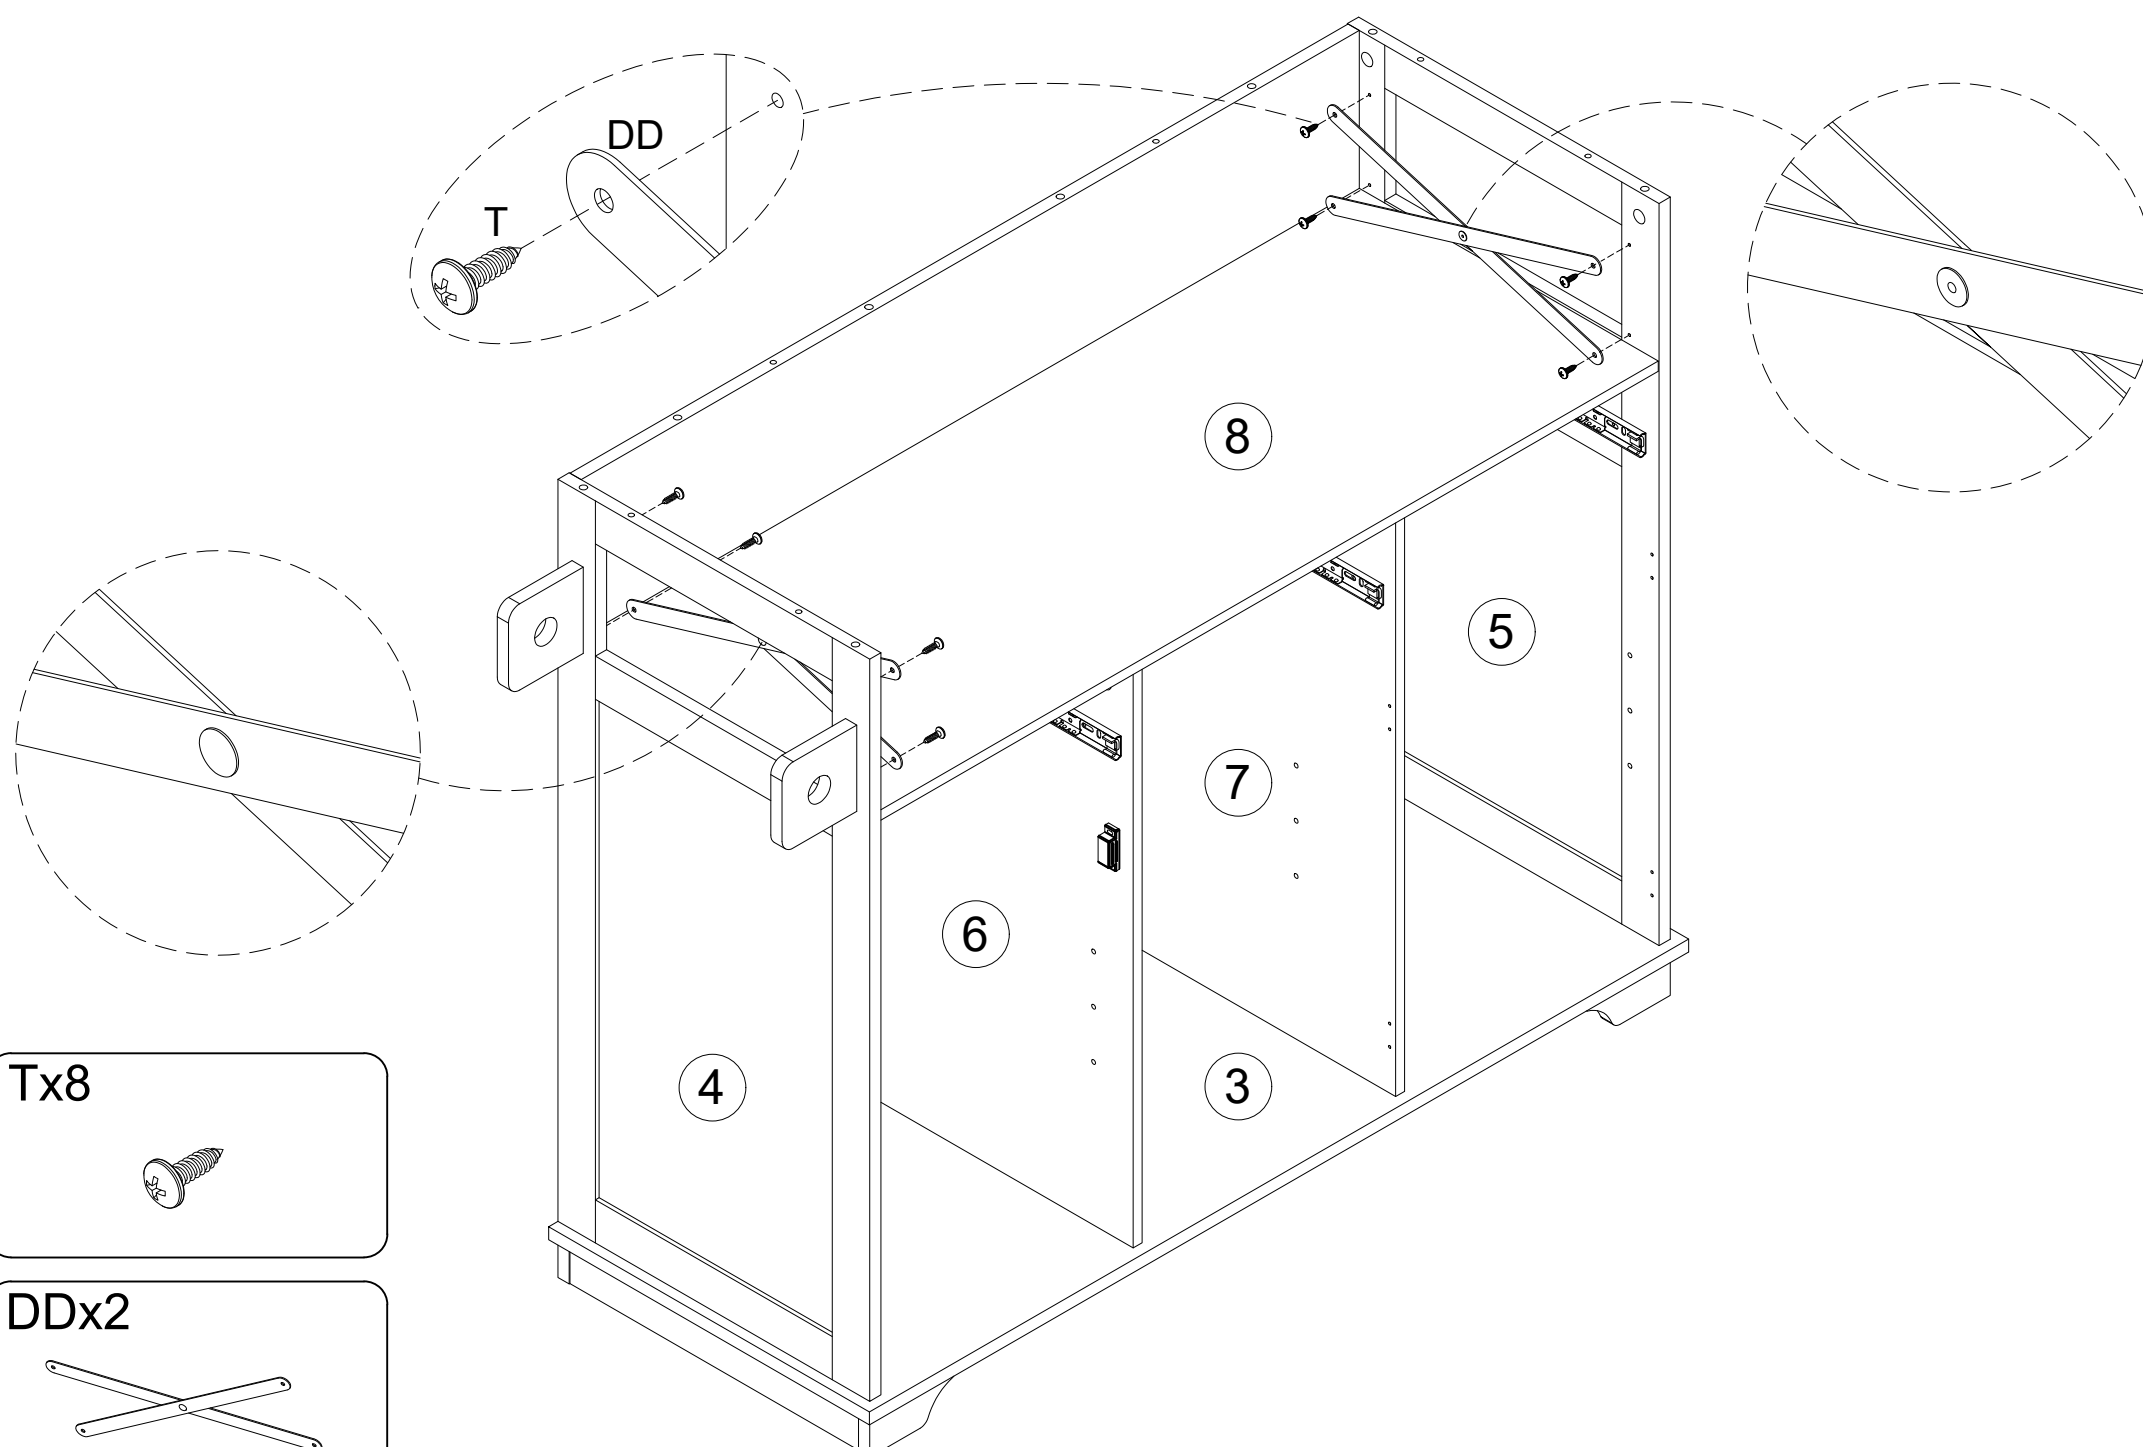


Tx8




DDx2



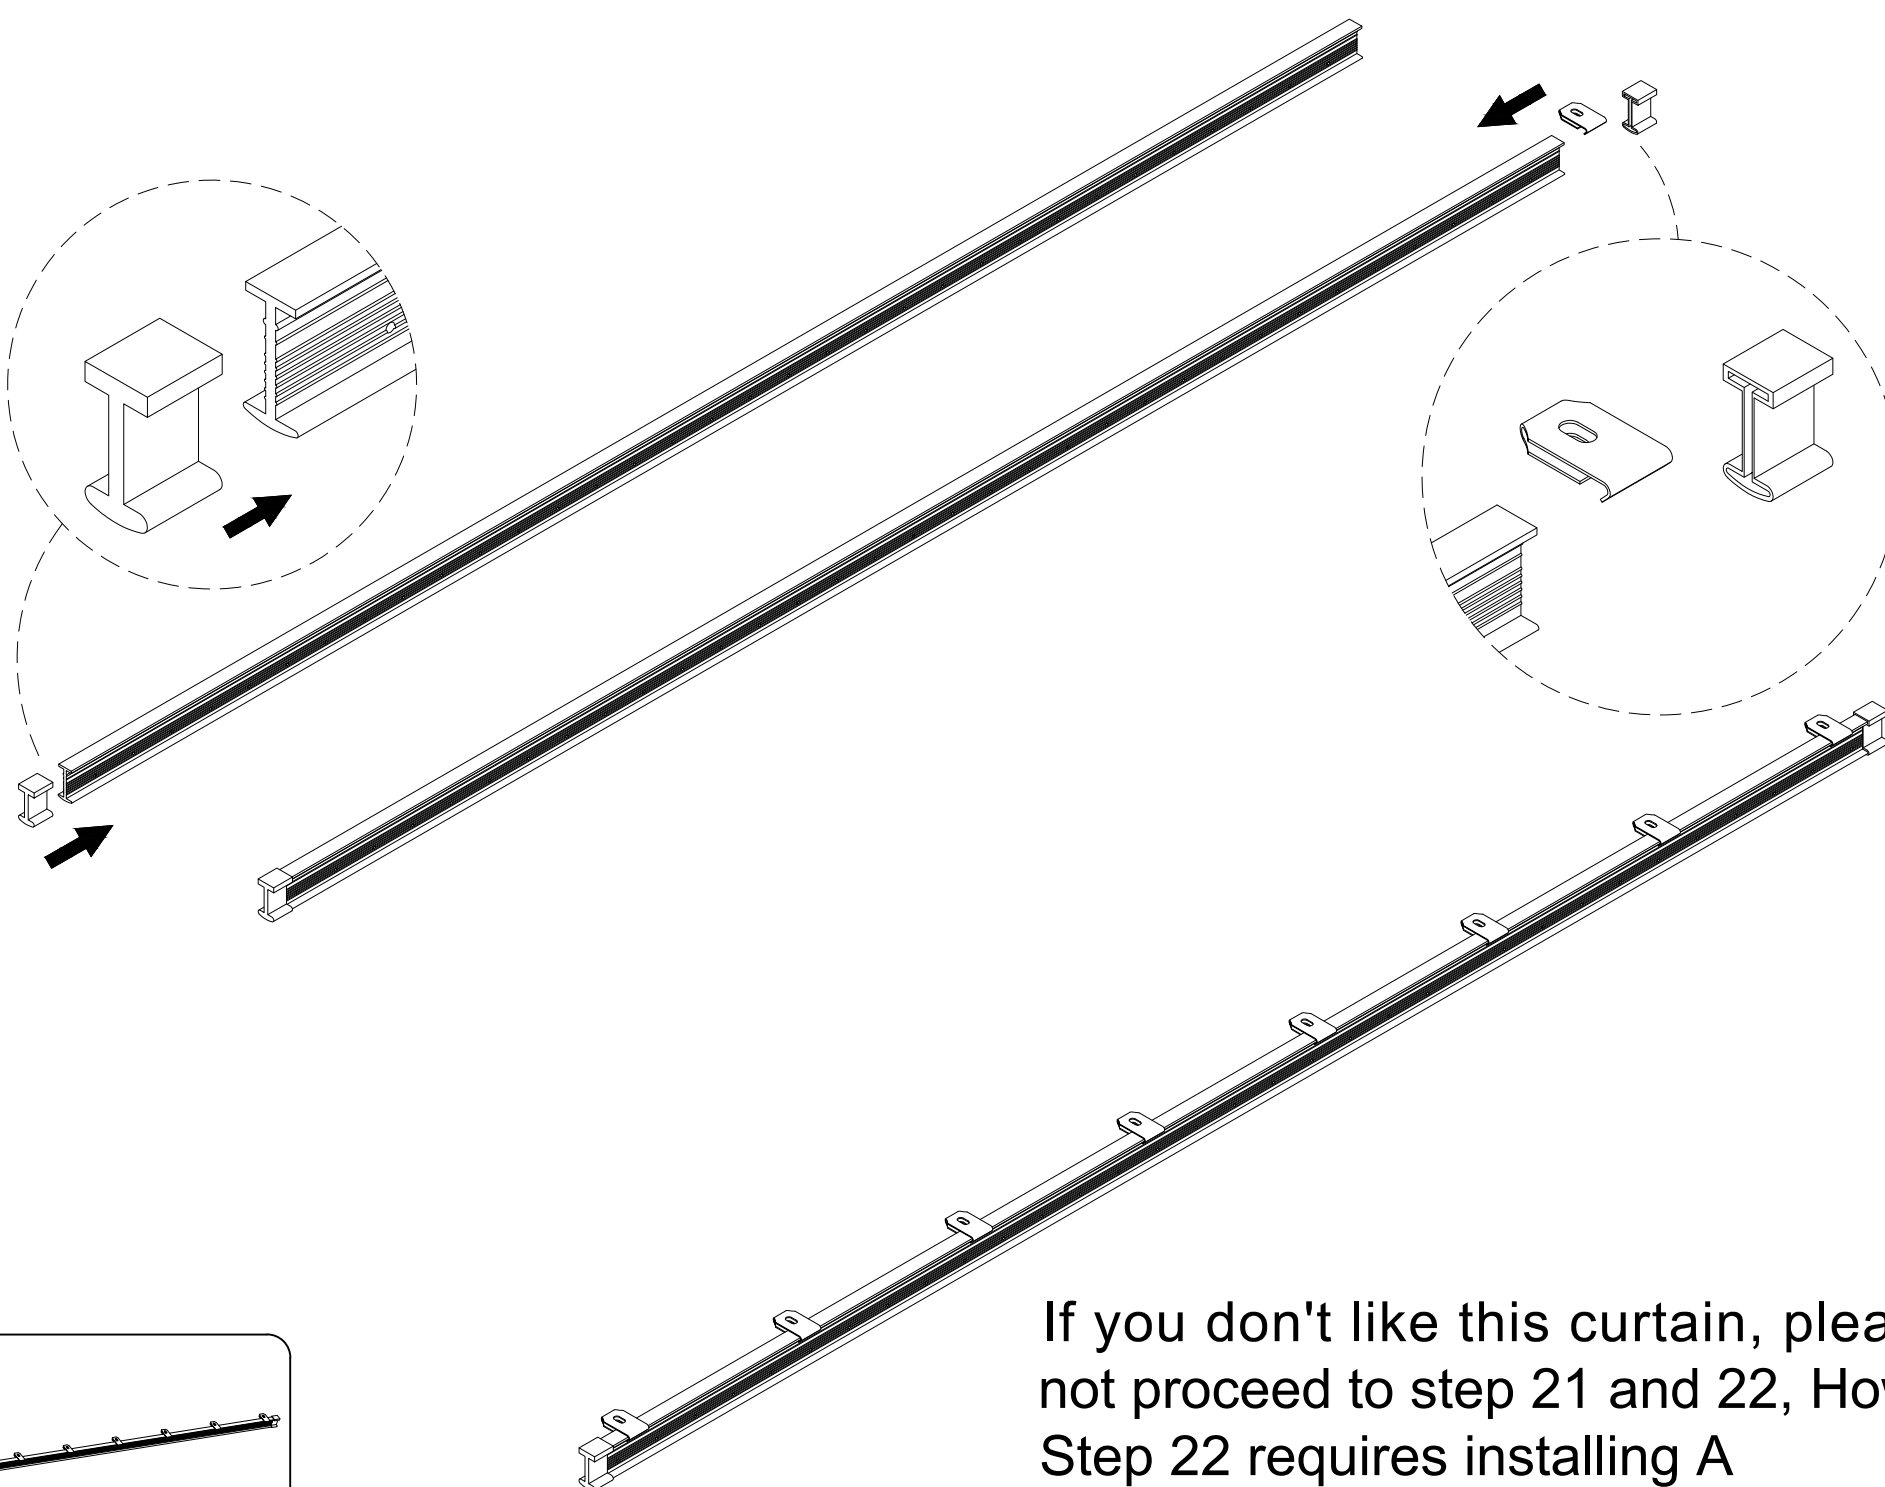


If you don't like this curtain, please do not proceed to step 21 and 22, However, Step 22 requires installing A

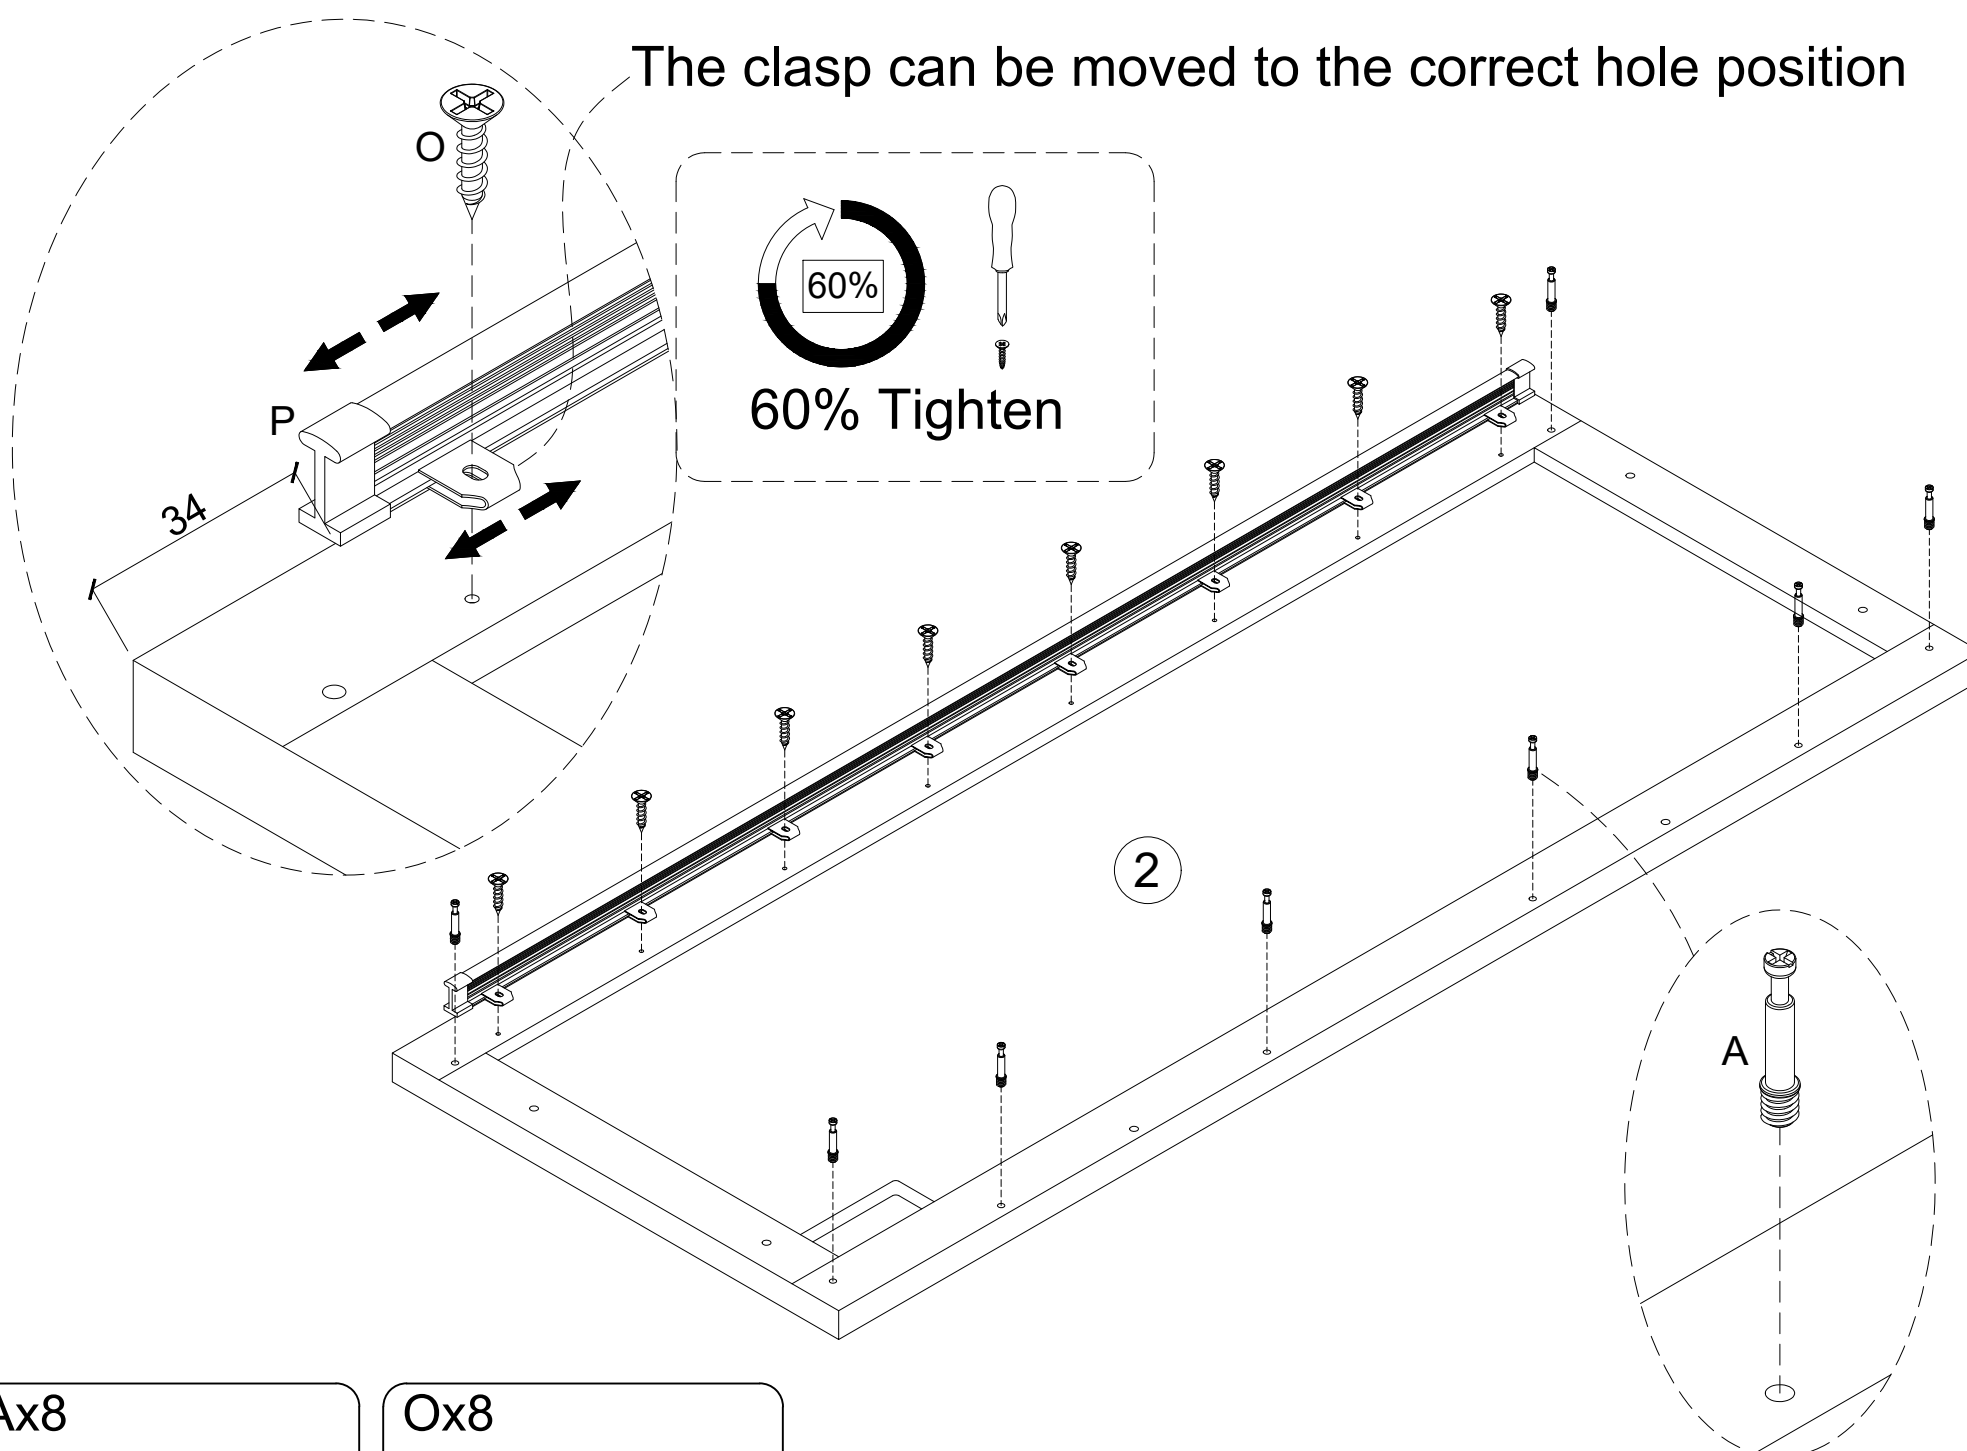


The clasp can be moved to the correct hole position

60%
60% Tighten



Ax8



Ox8





A

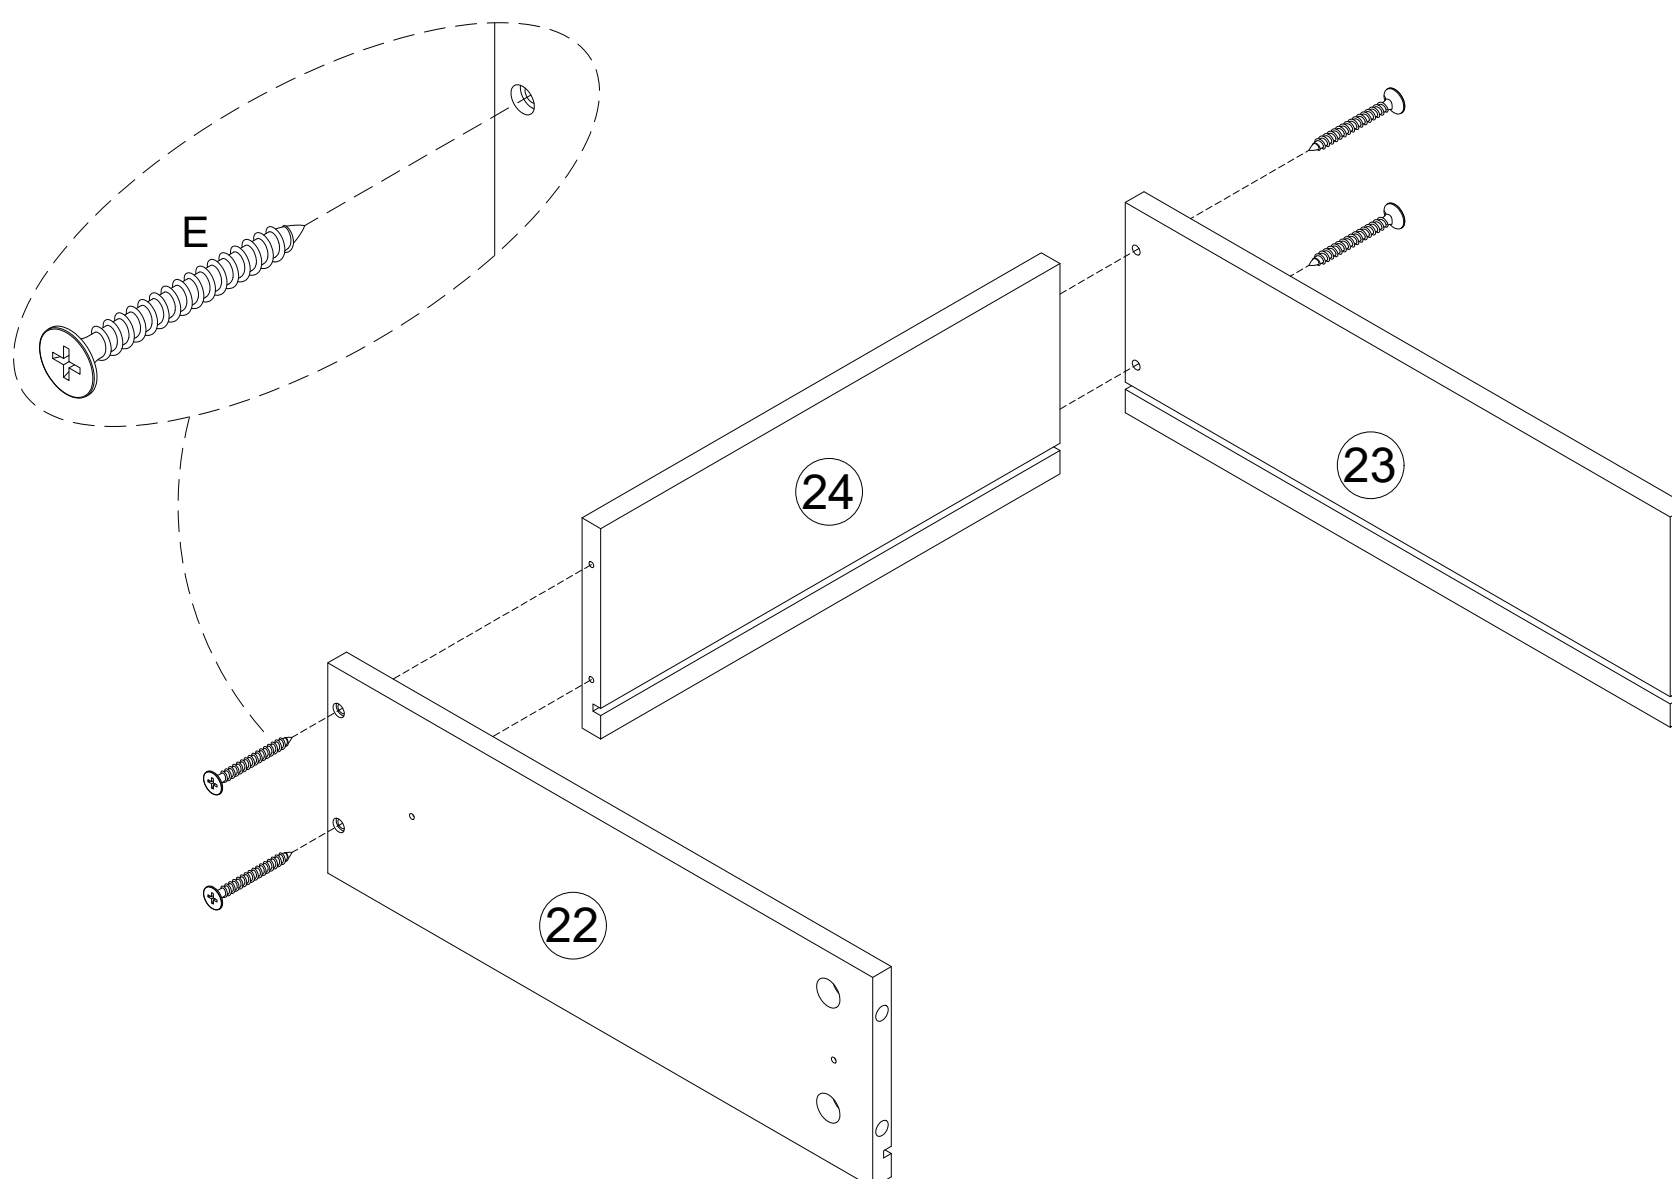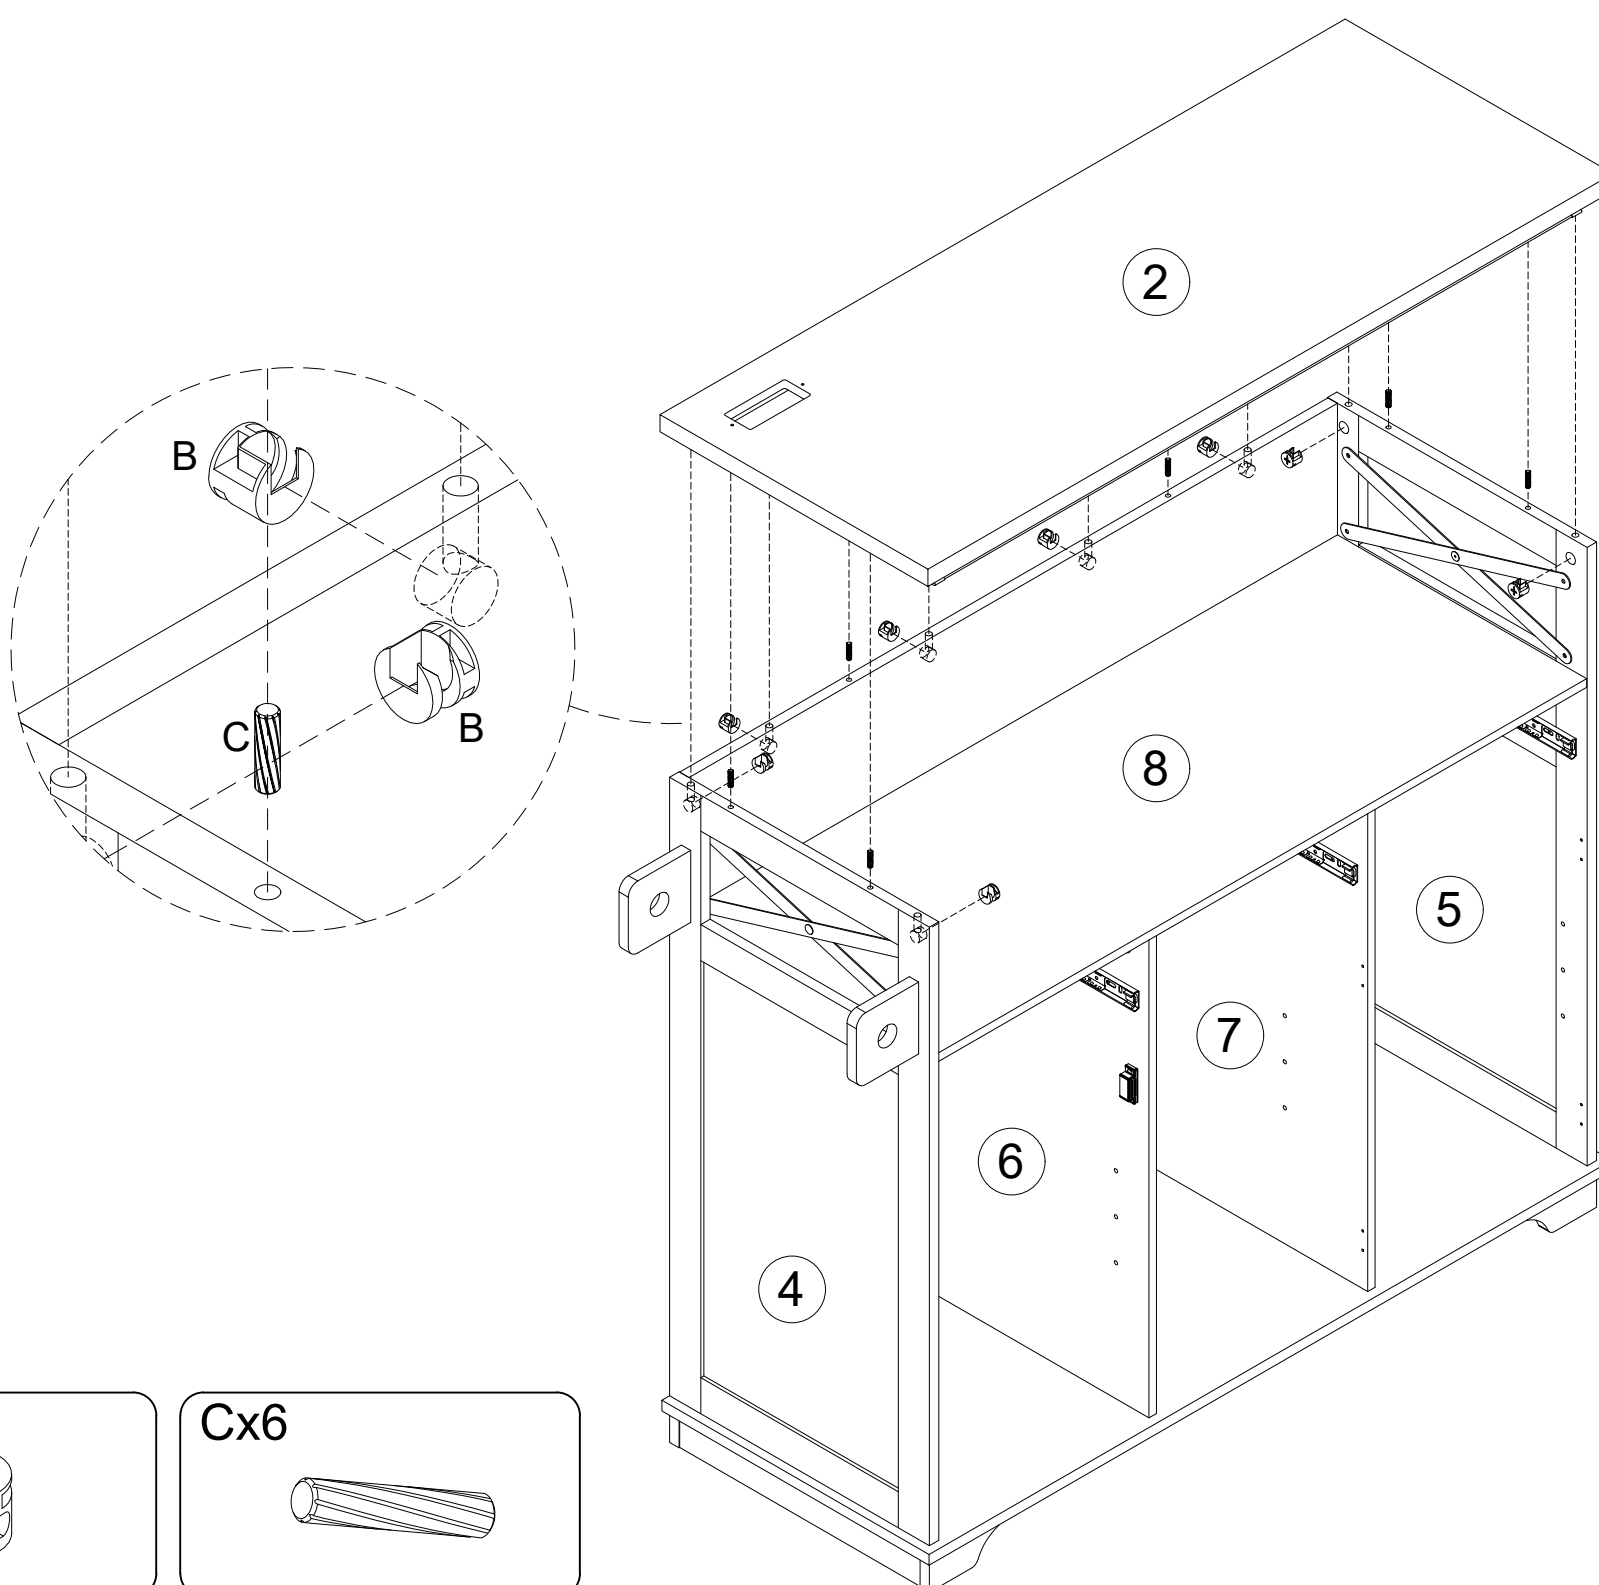



x3

Zx12



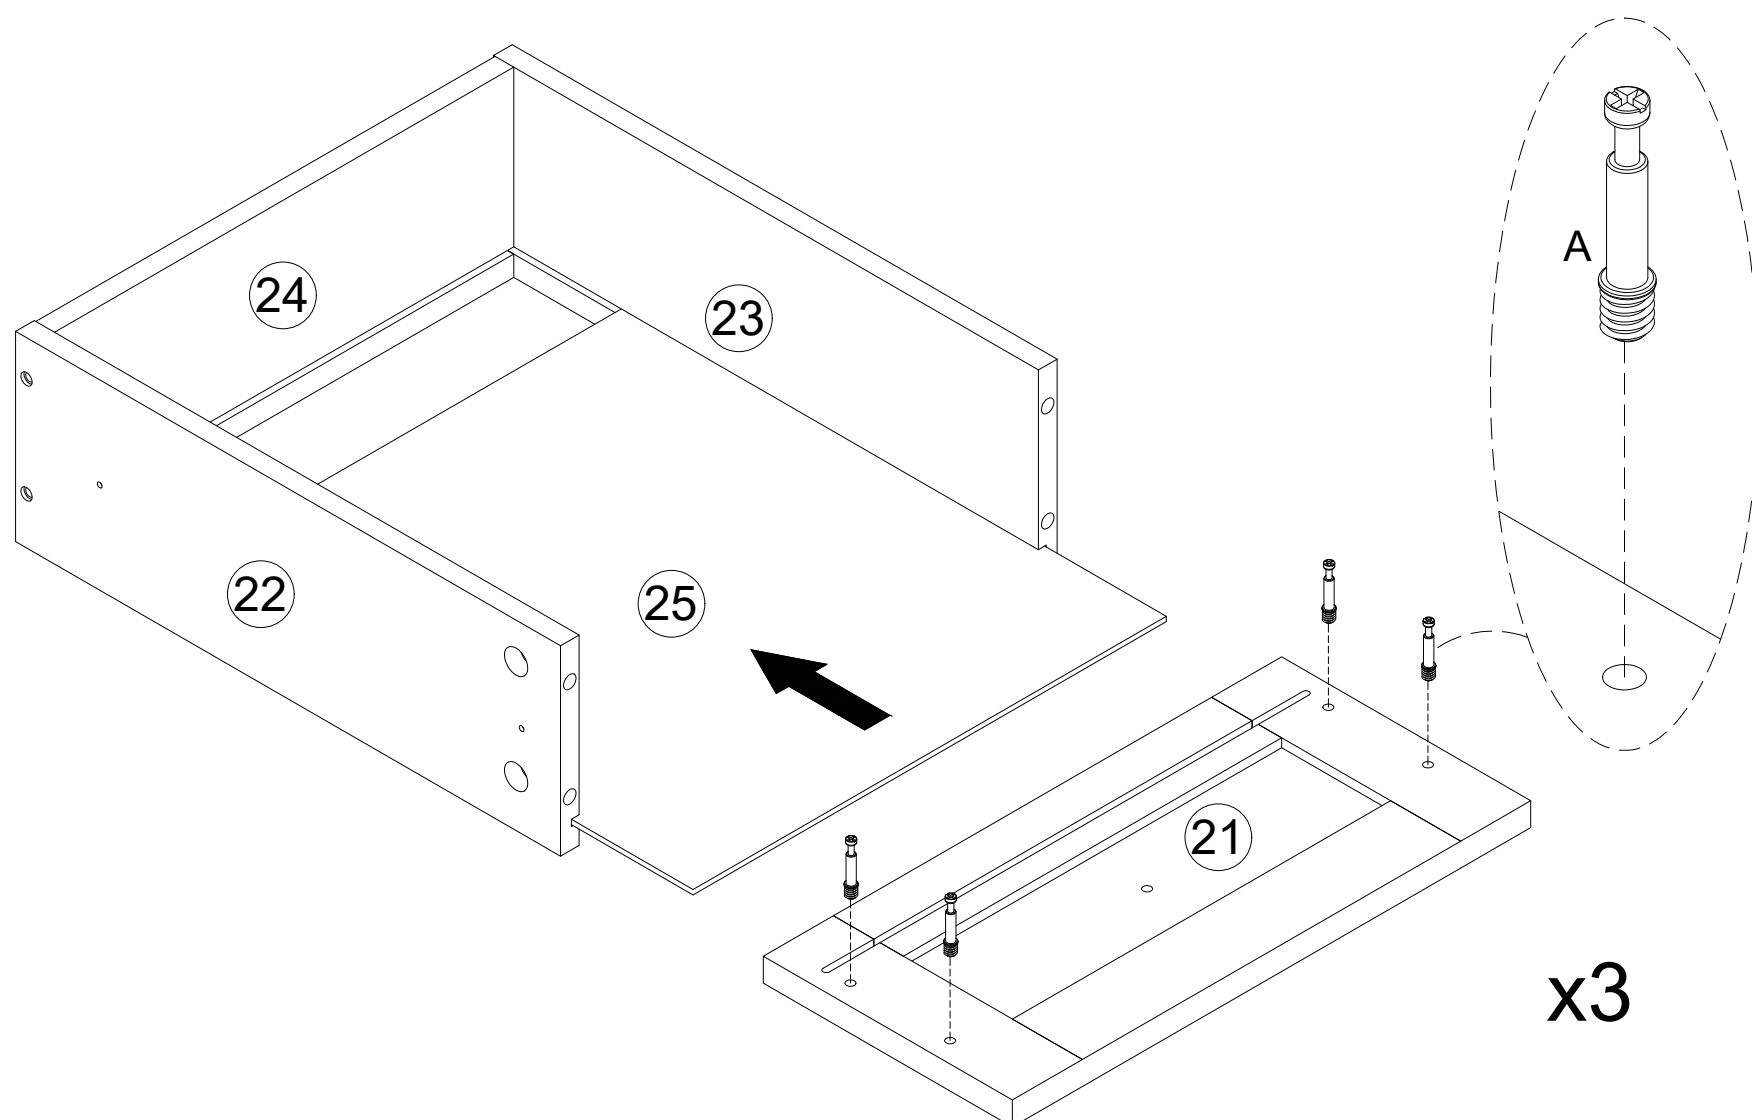

Ax12

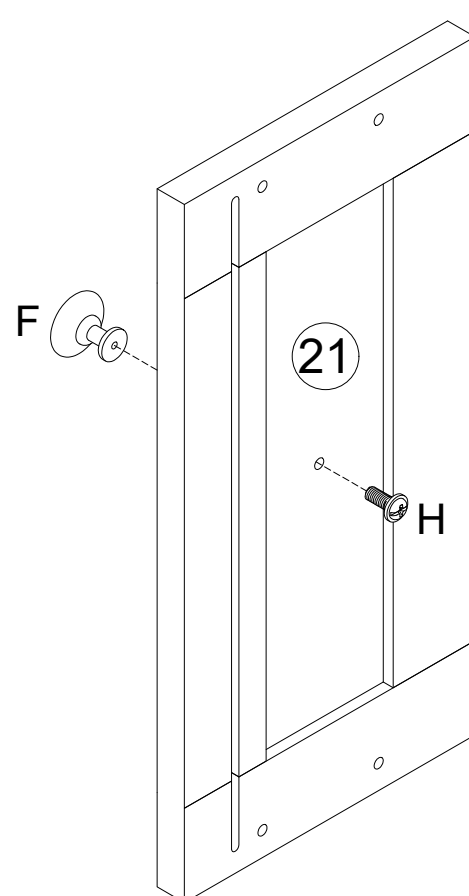


Fx3





Hx3



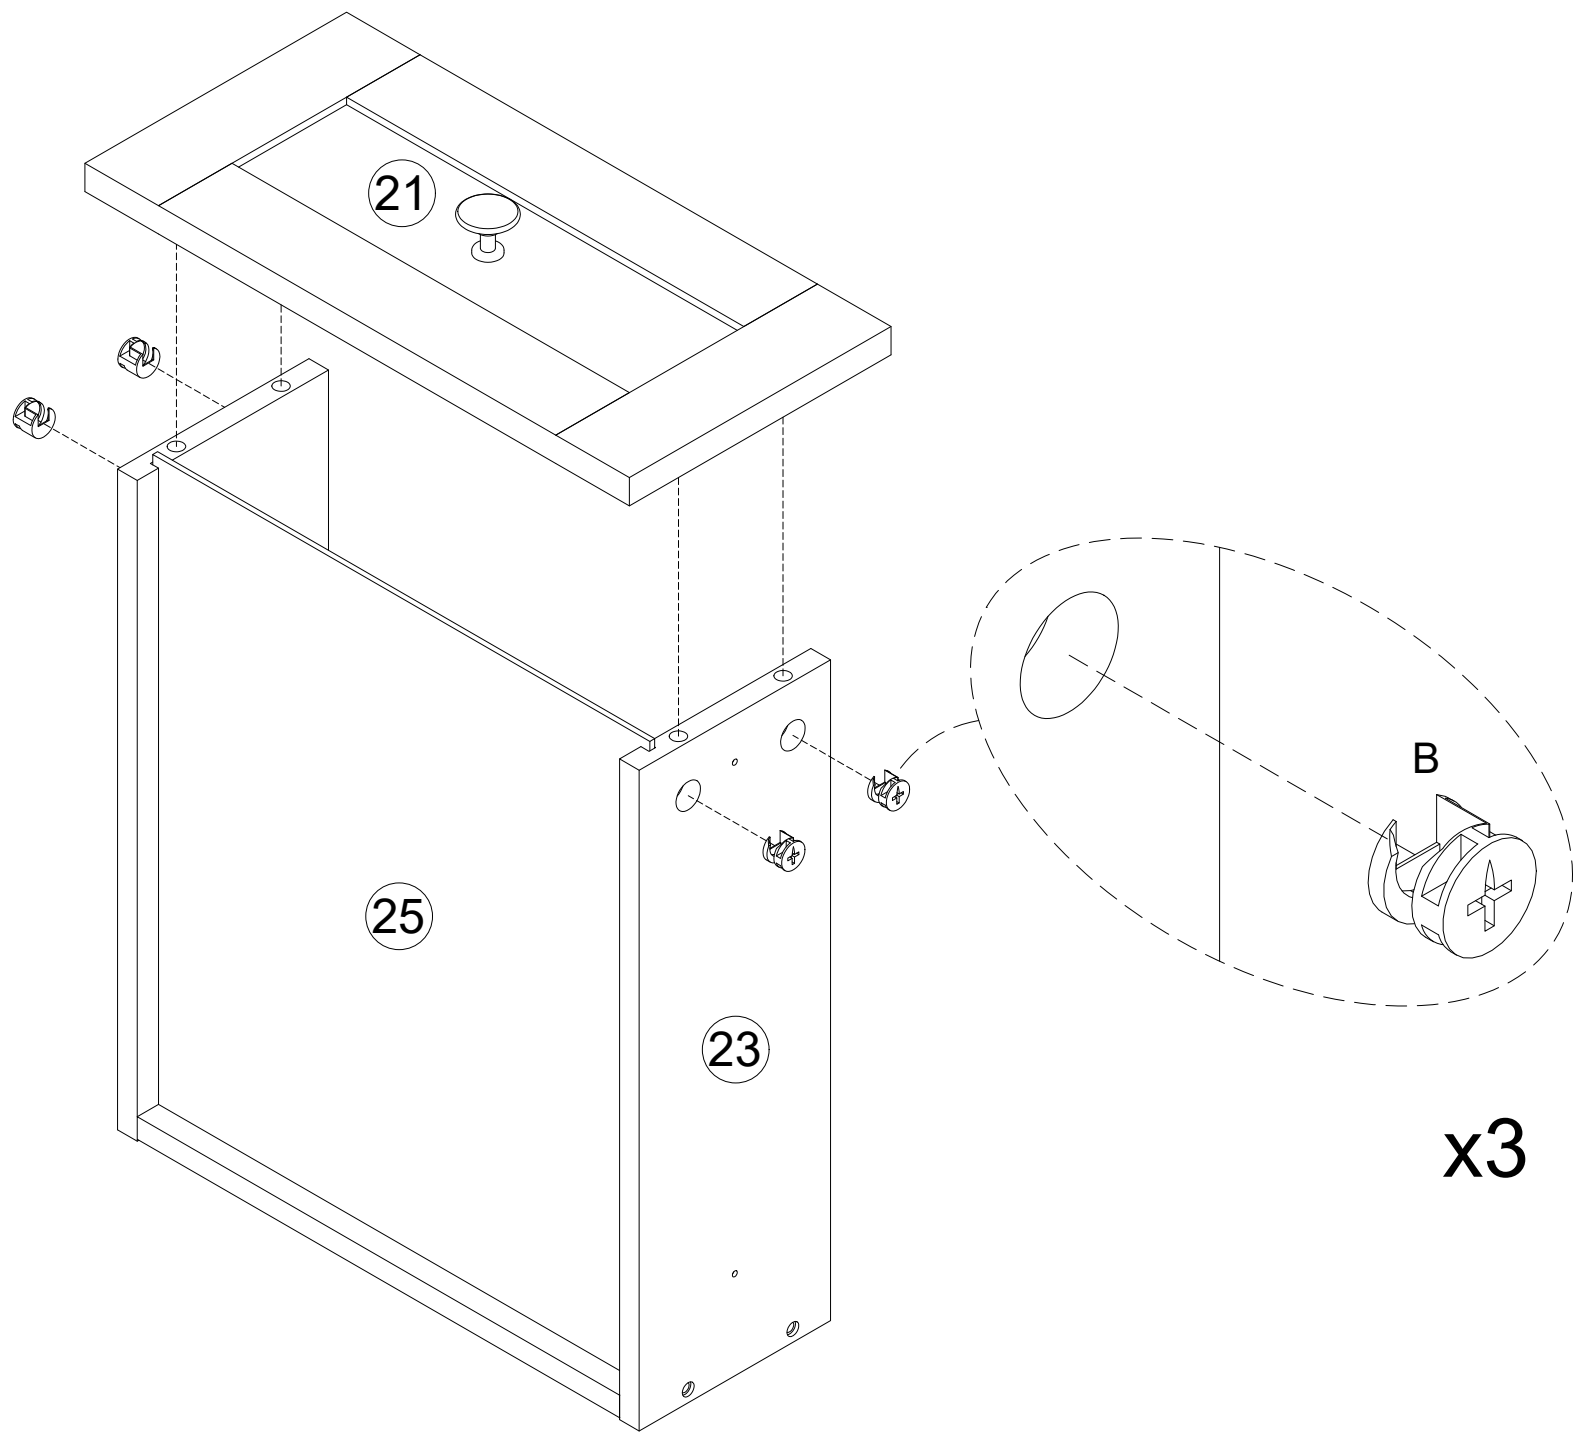

x3

Bx12

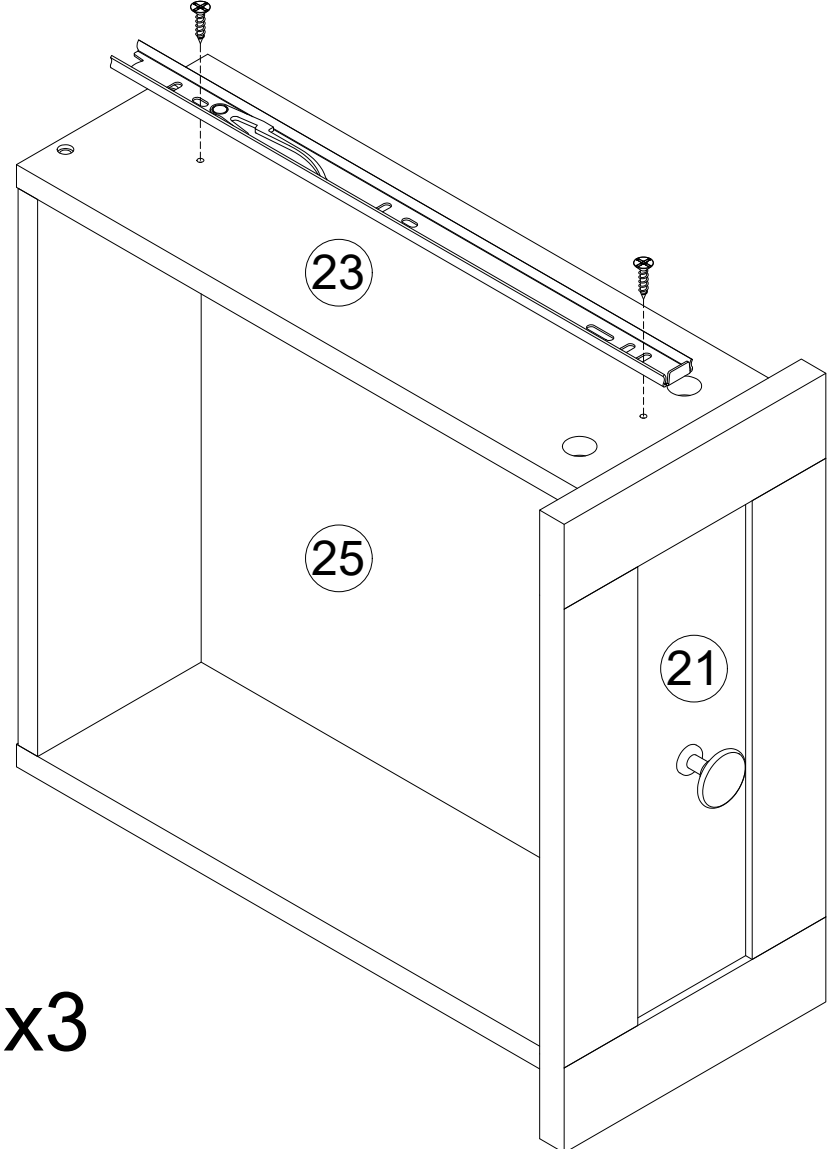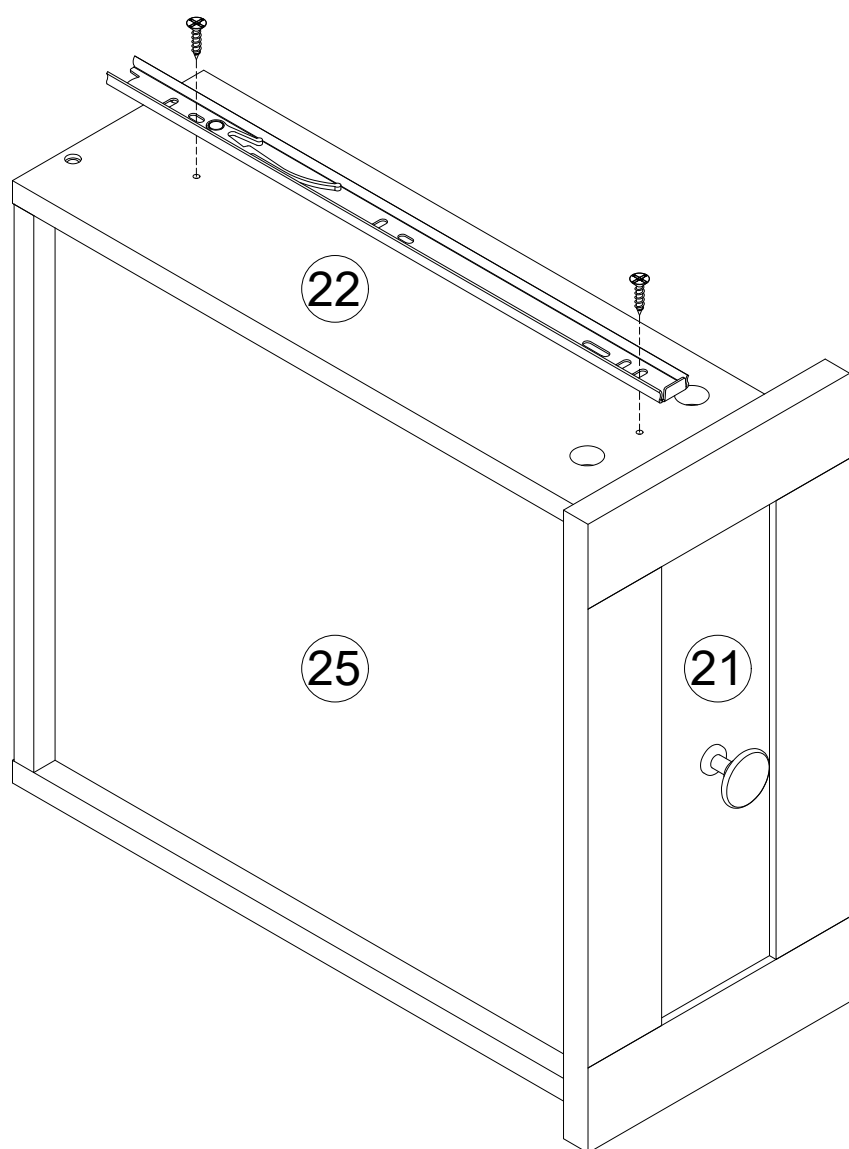



x3

E2x6




Ox12



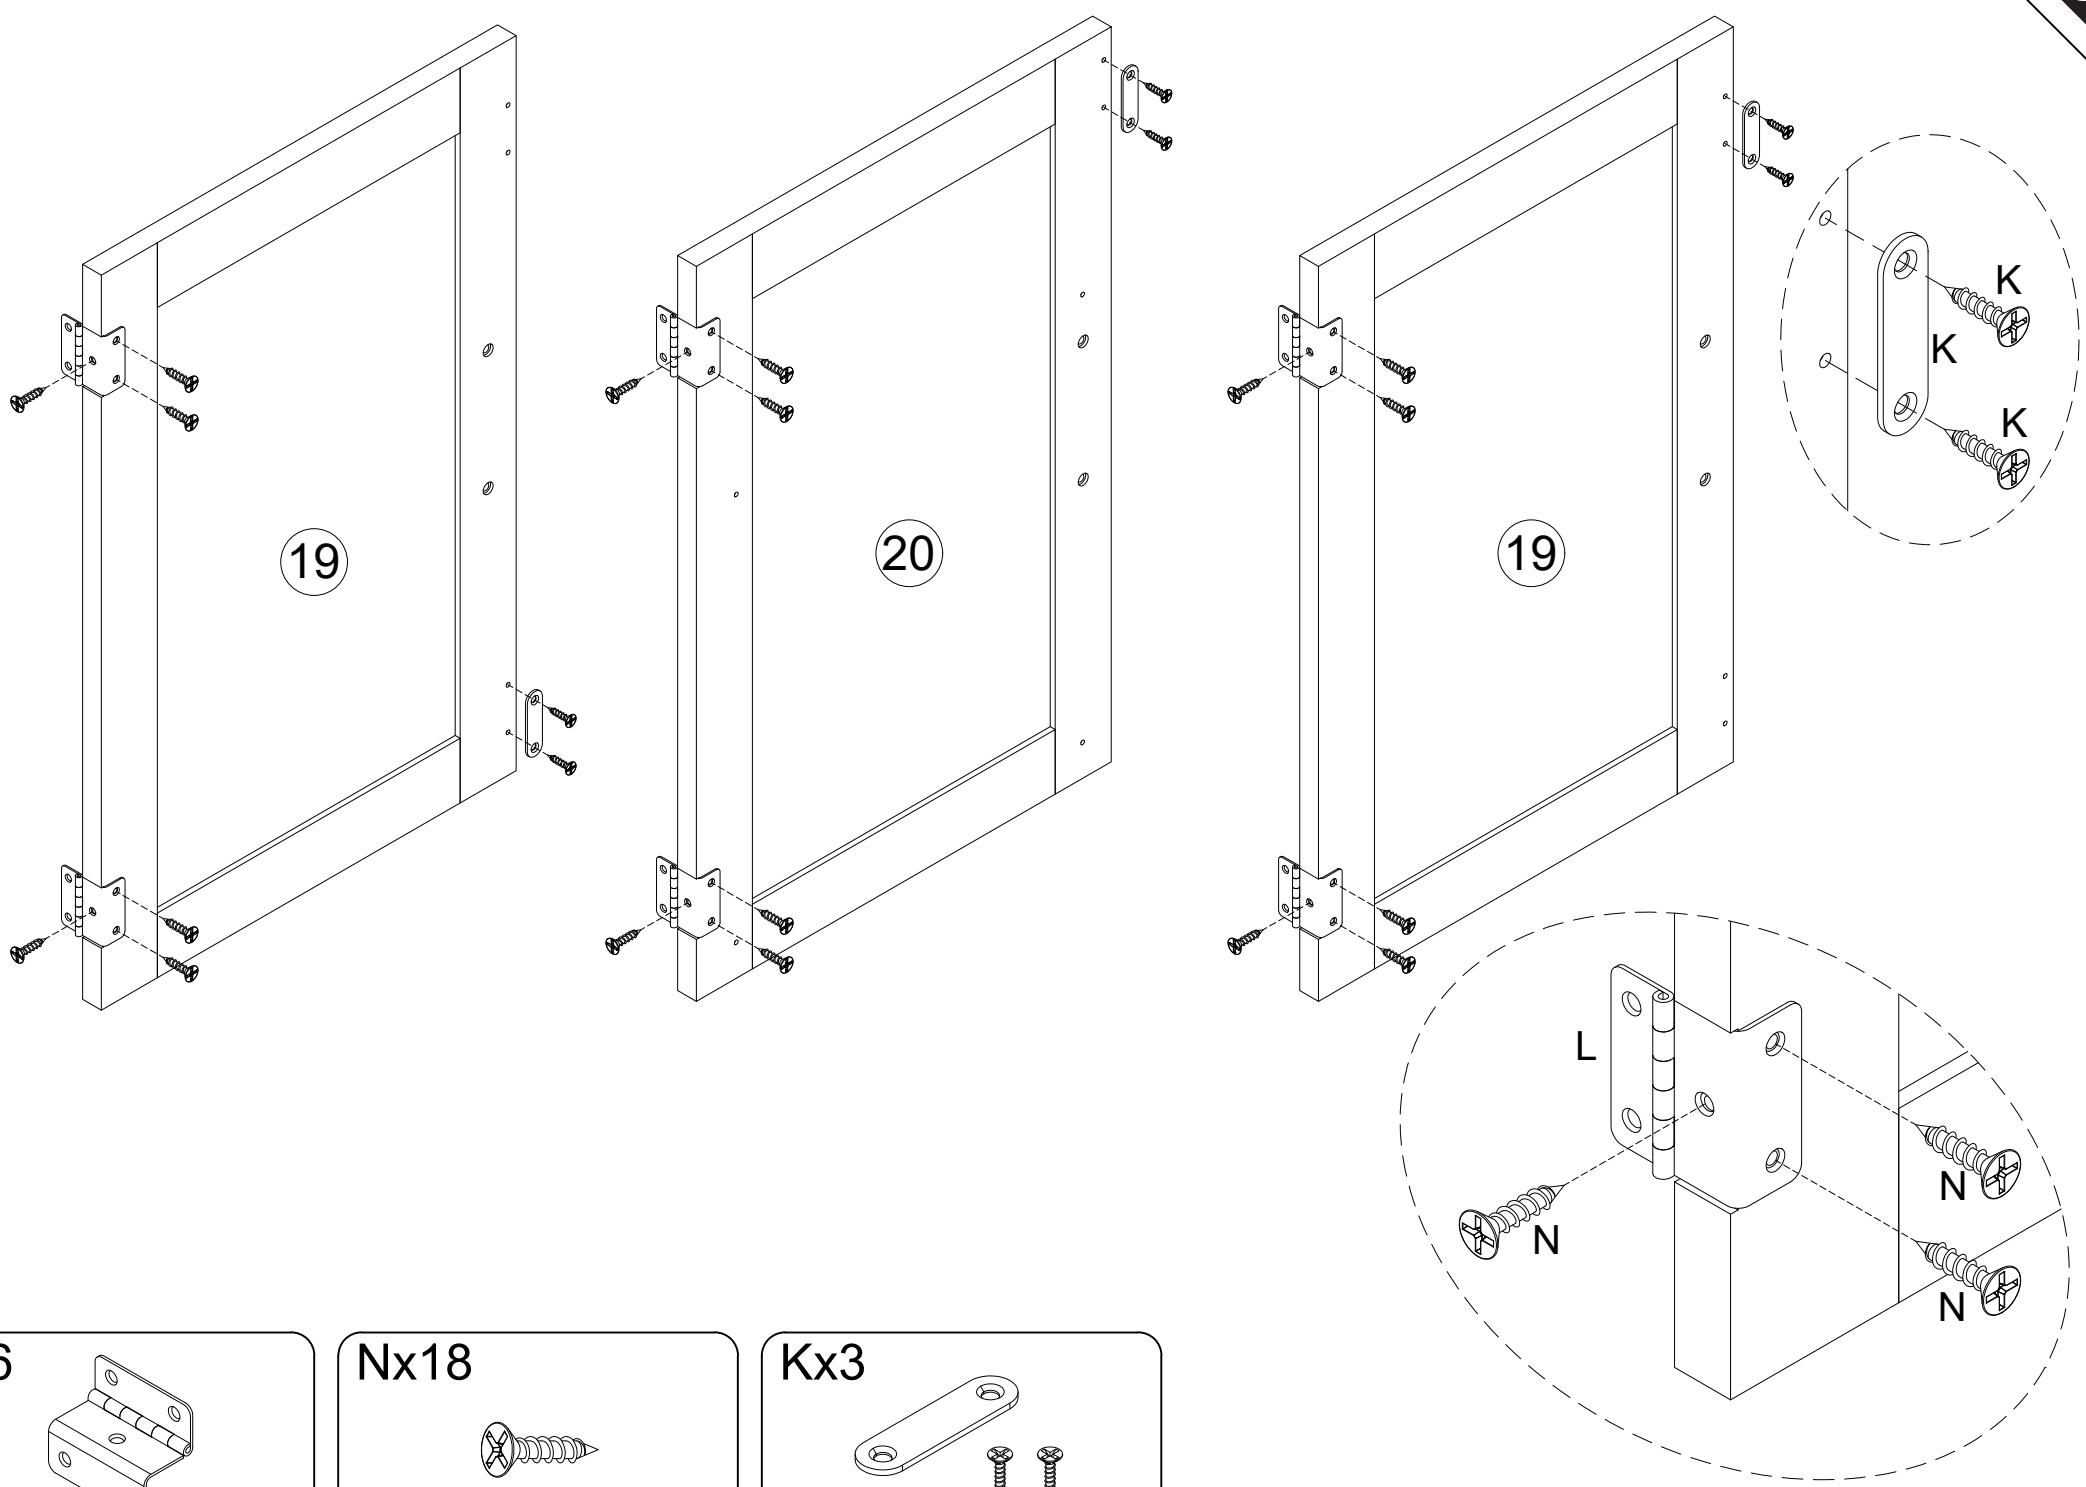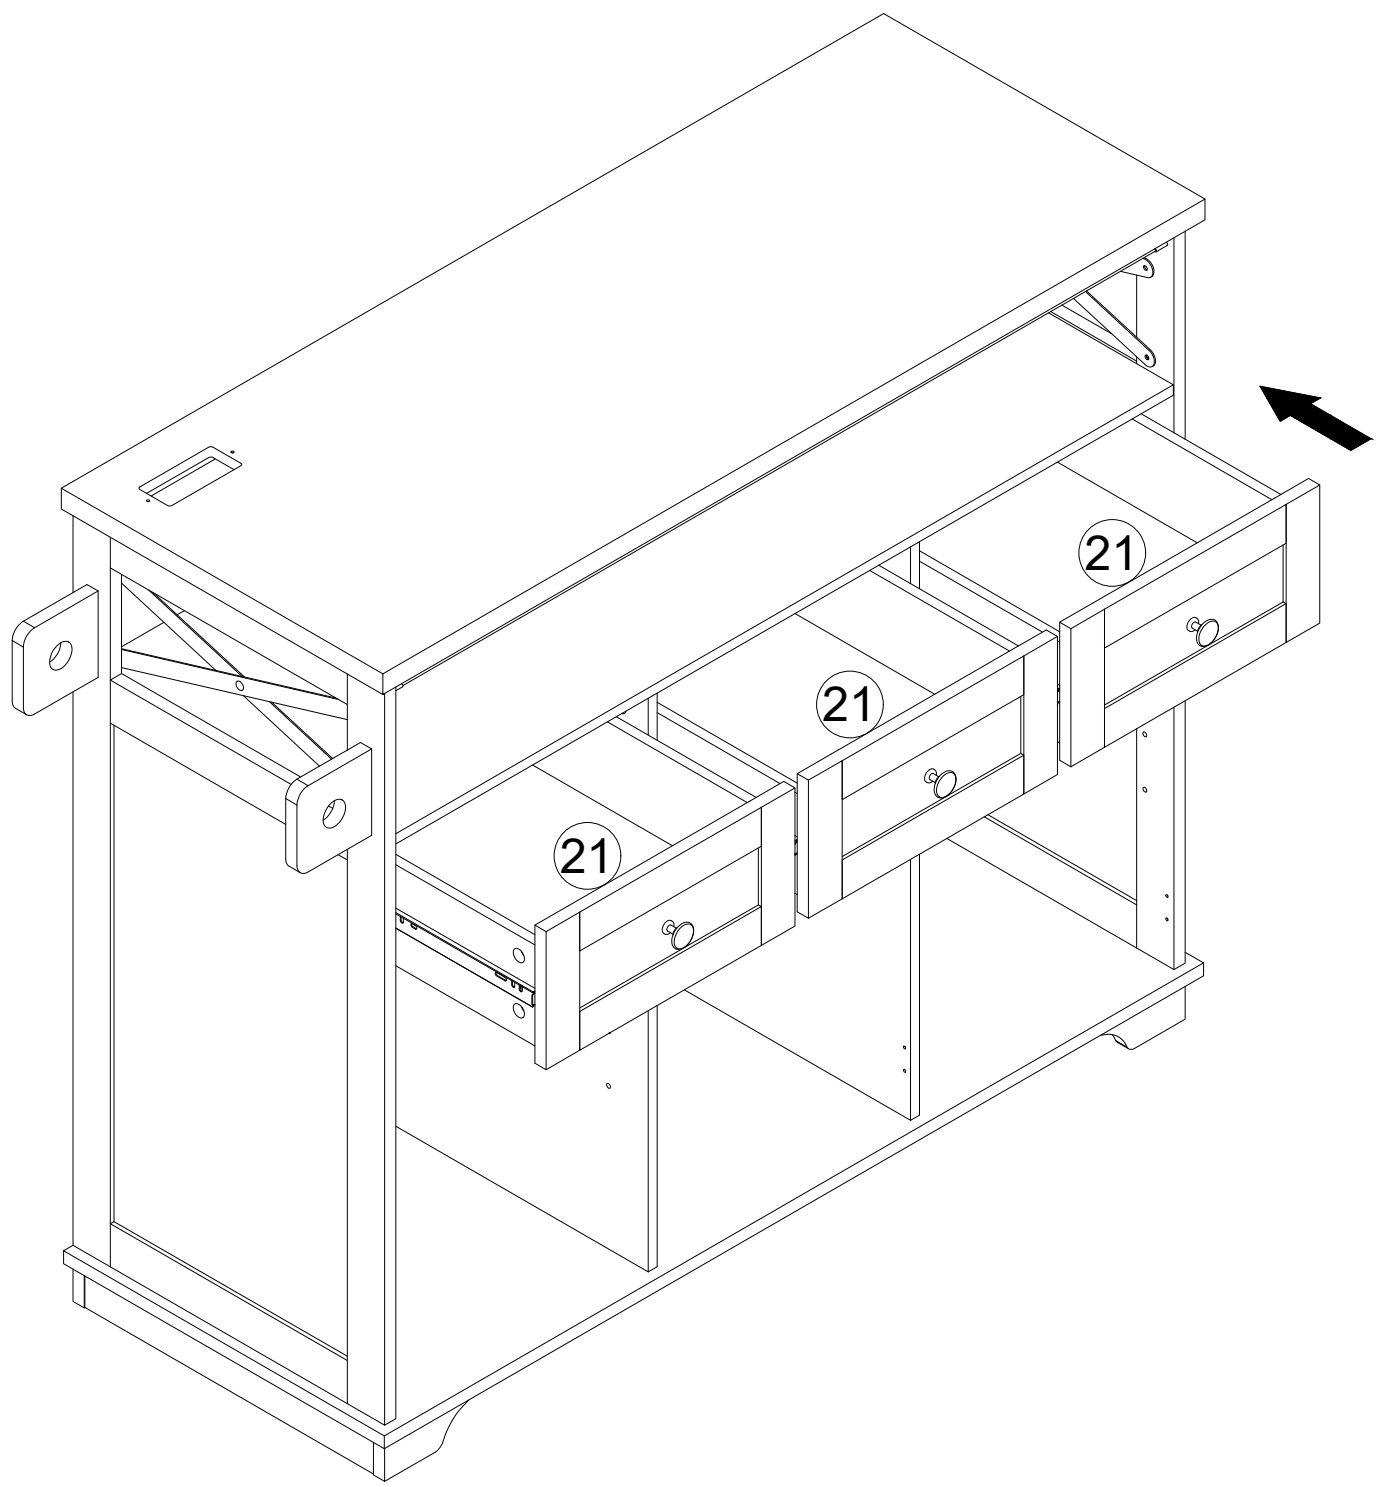

- Lx6
- Nx18
- Kx3

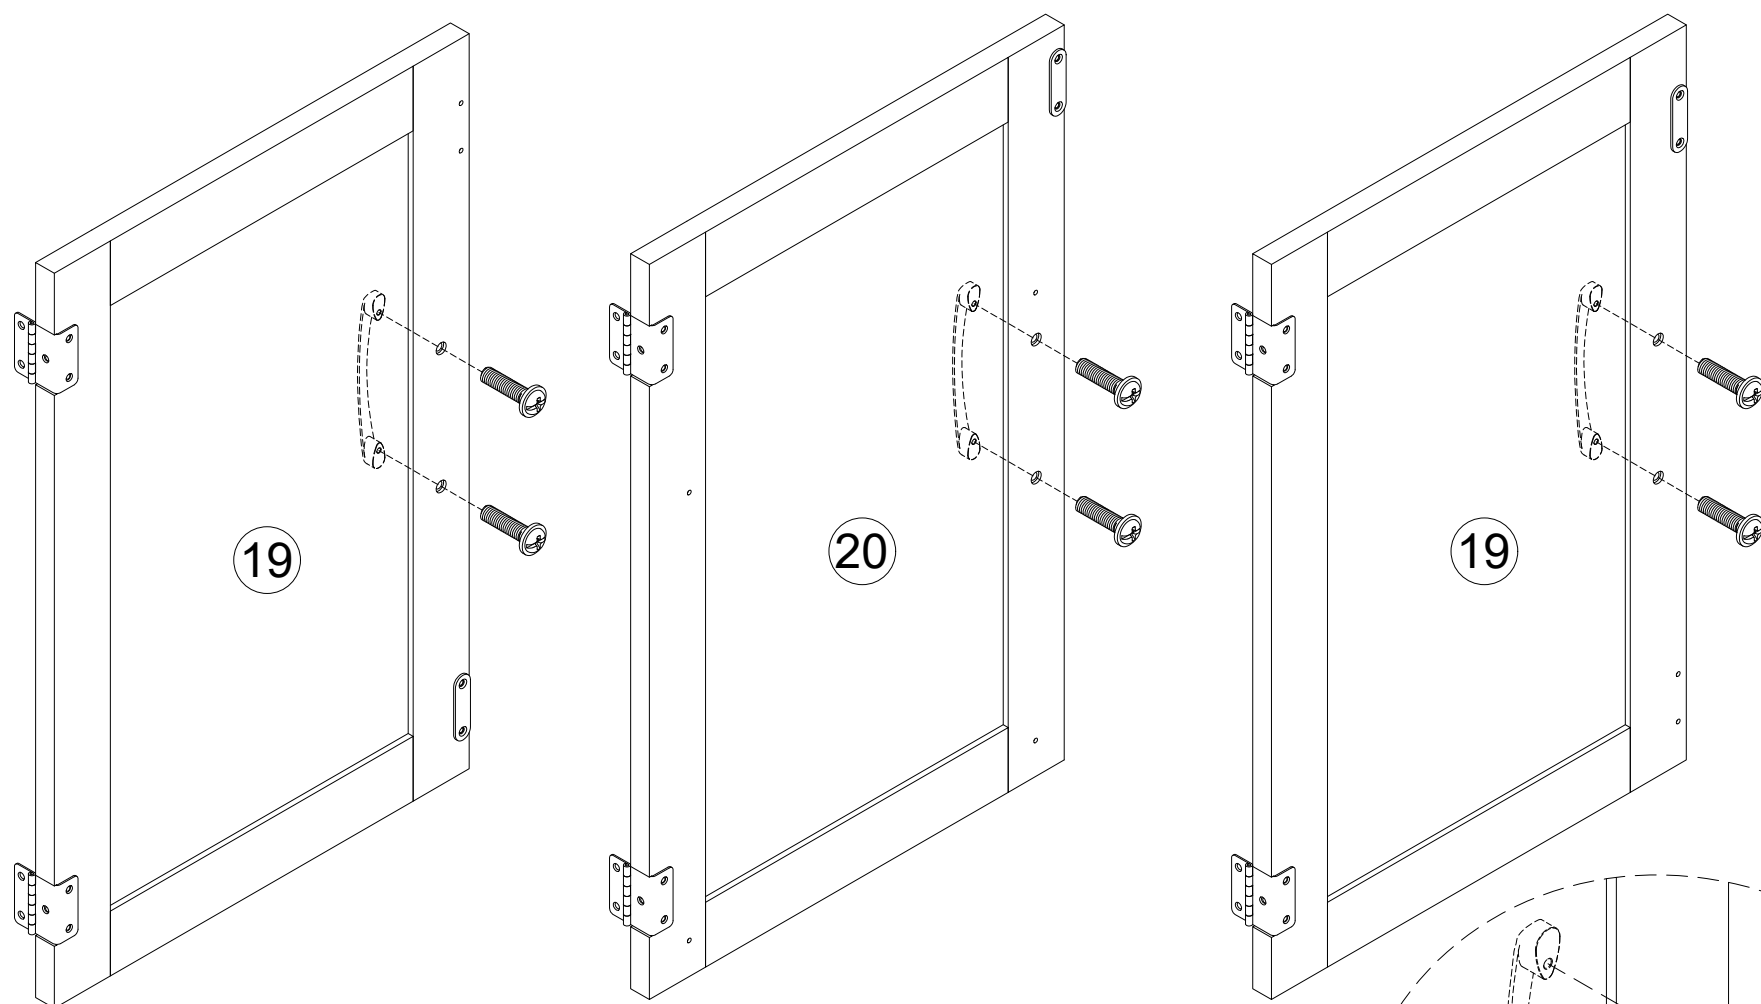




Gx3



Ix6




G

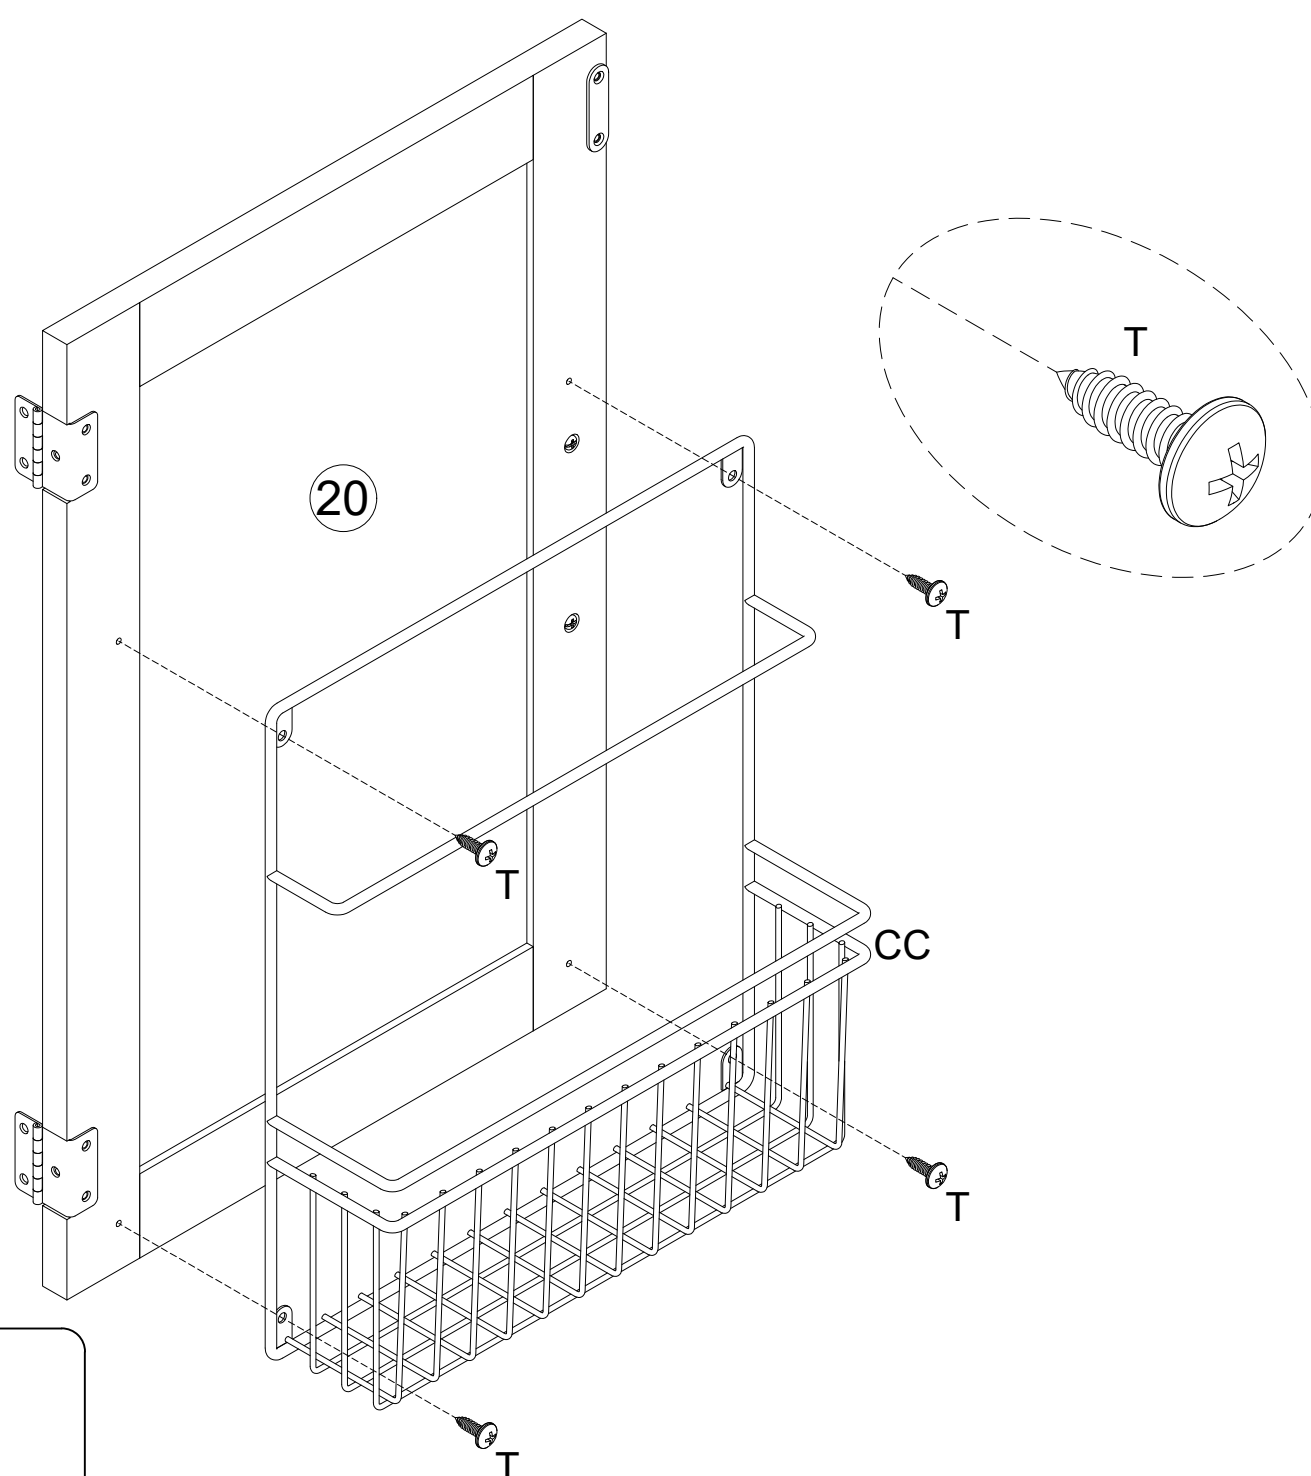

Tx4



CCx1

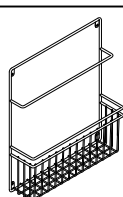

T



T

CC

T




T

Install the door first, then adjust the suction position of the door, so that the door is level with the front, and finally lock the screw of the door suction **J** to 99%

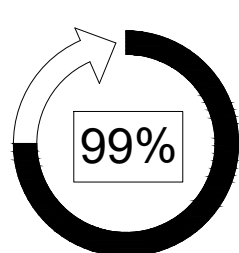




99% festziehen

Nx12

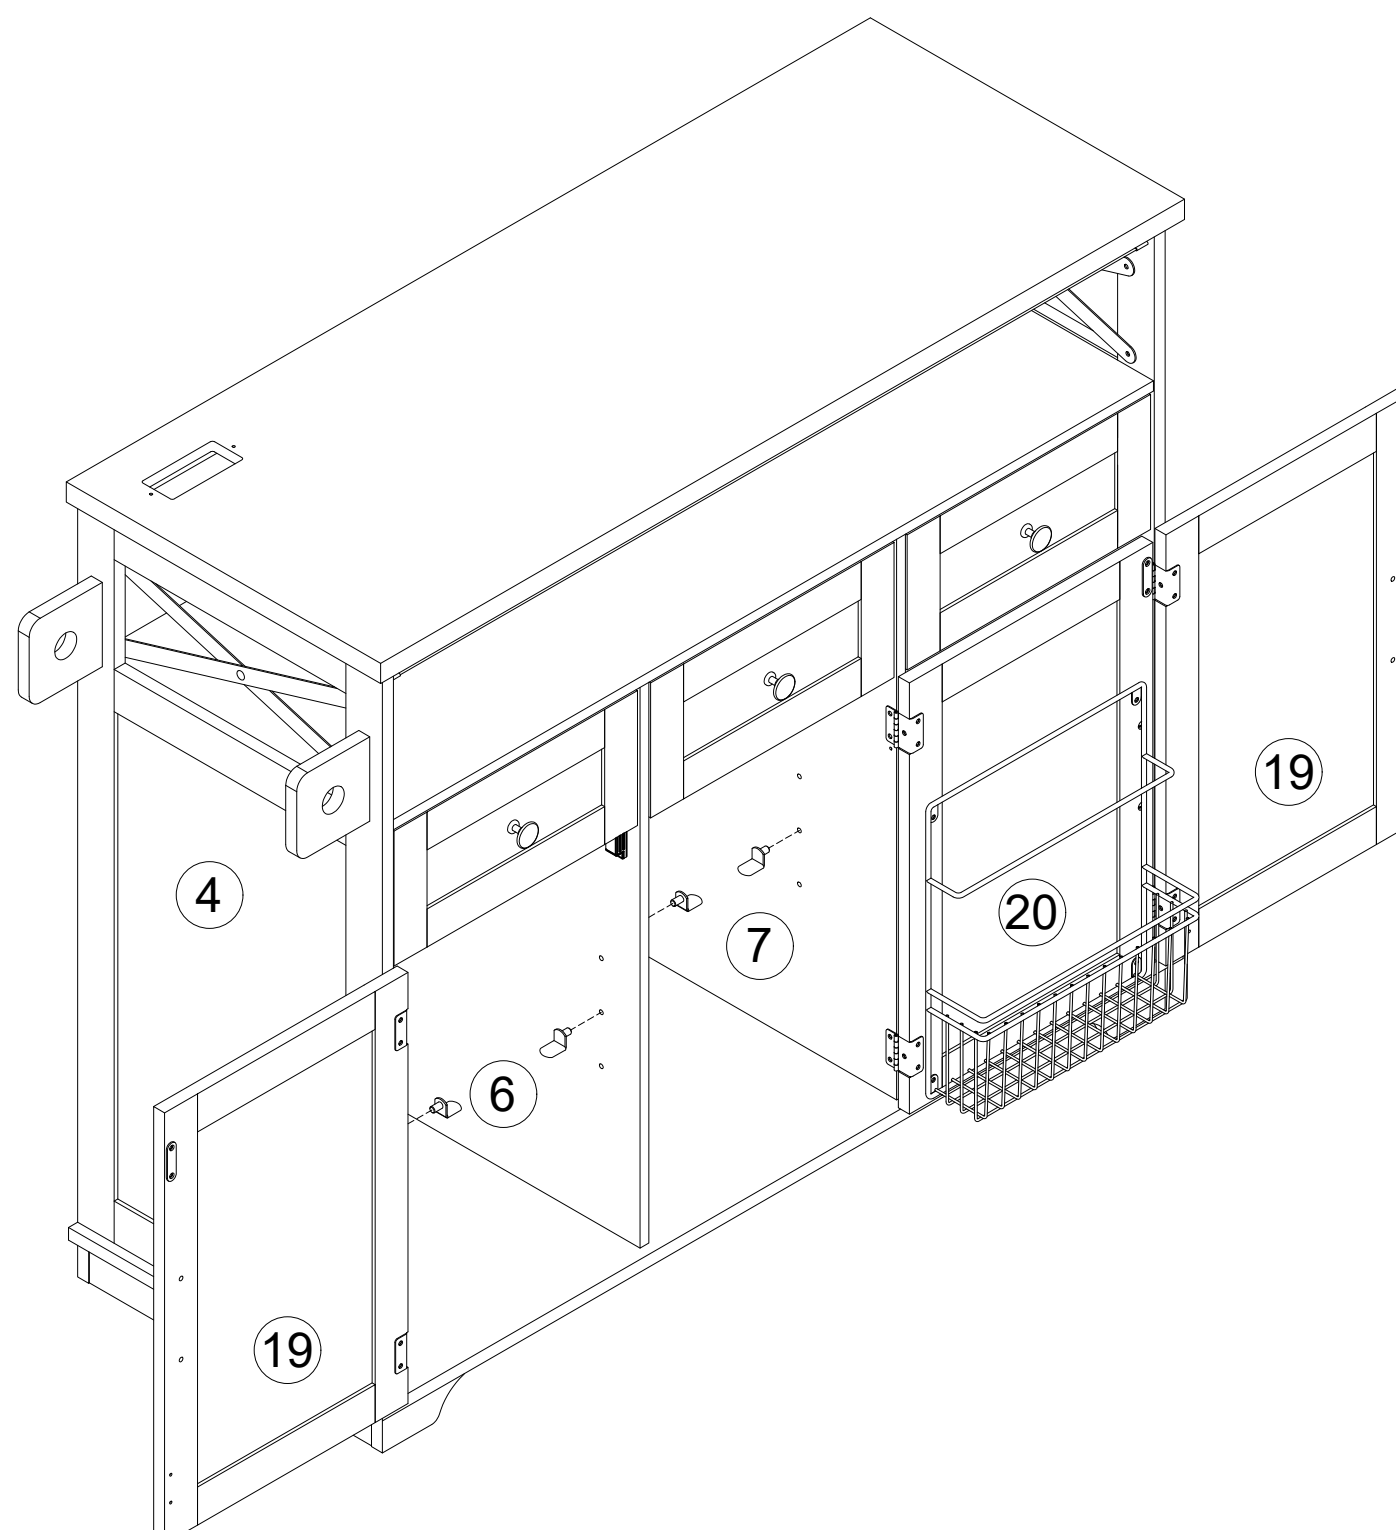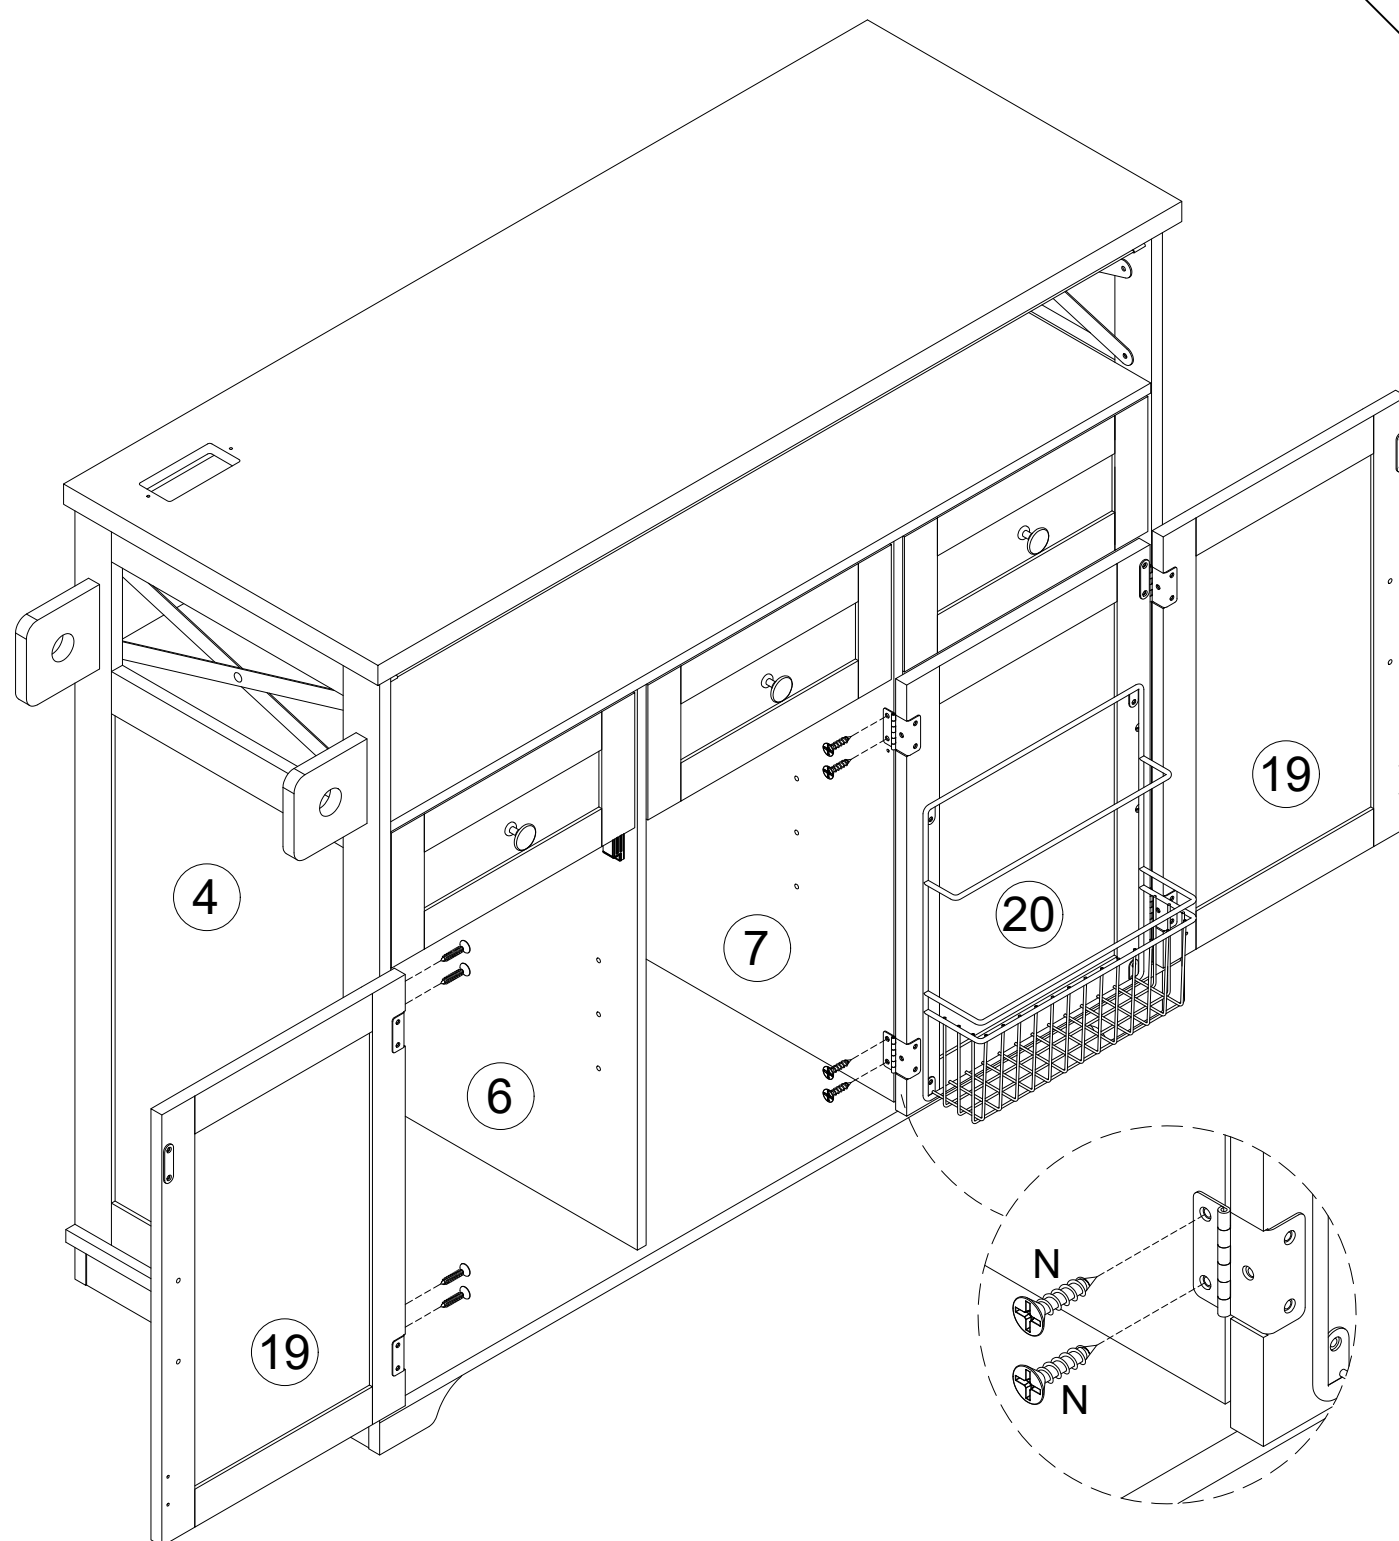




Mx8

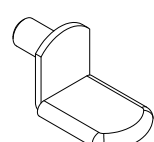

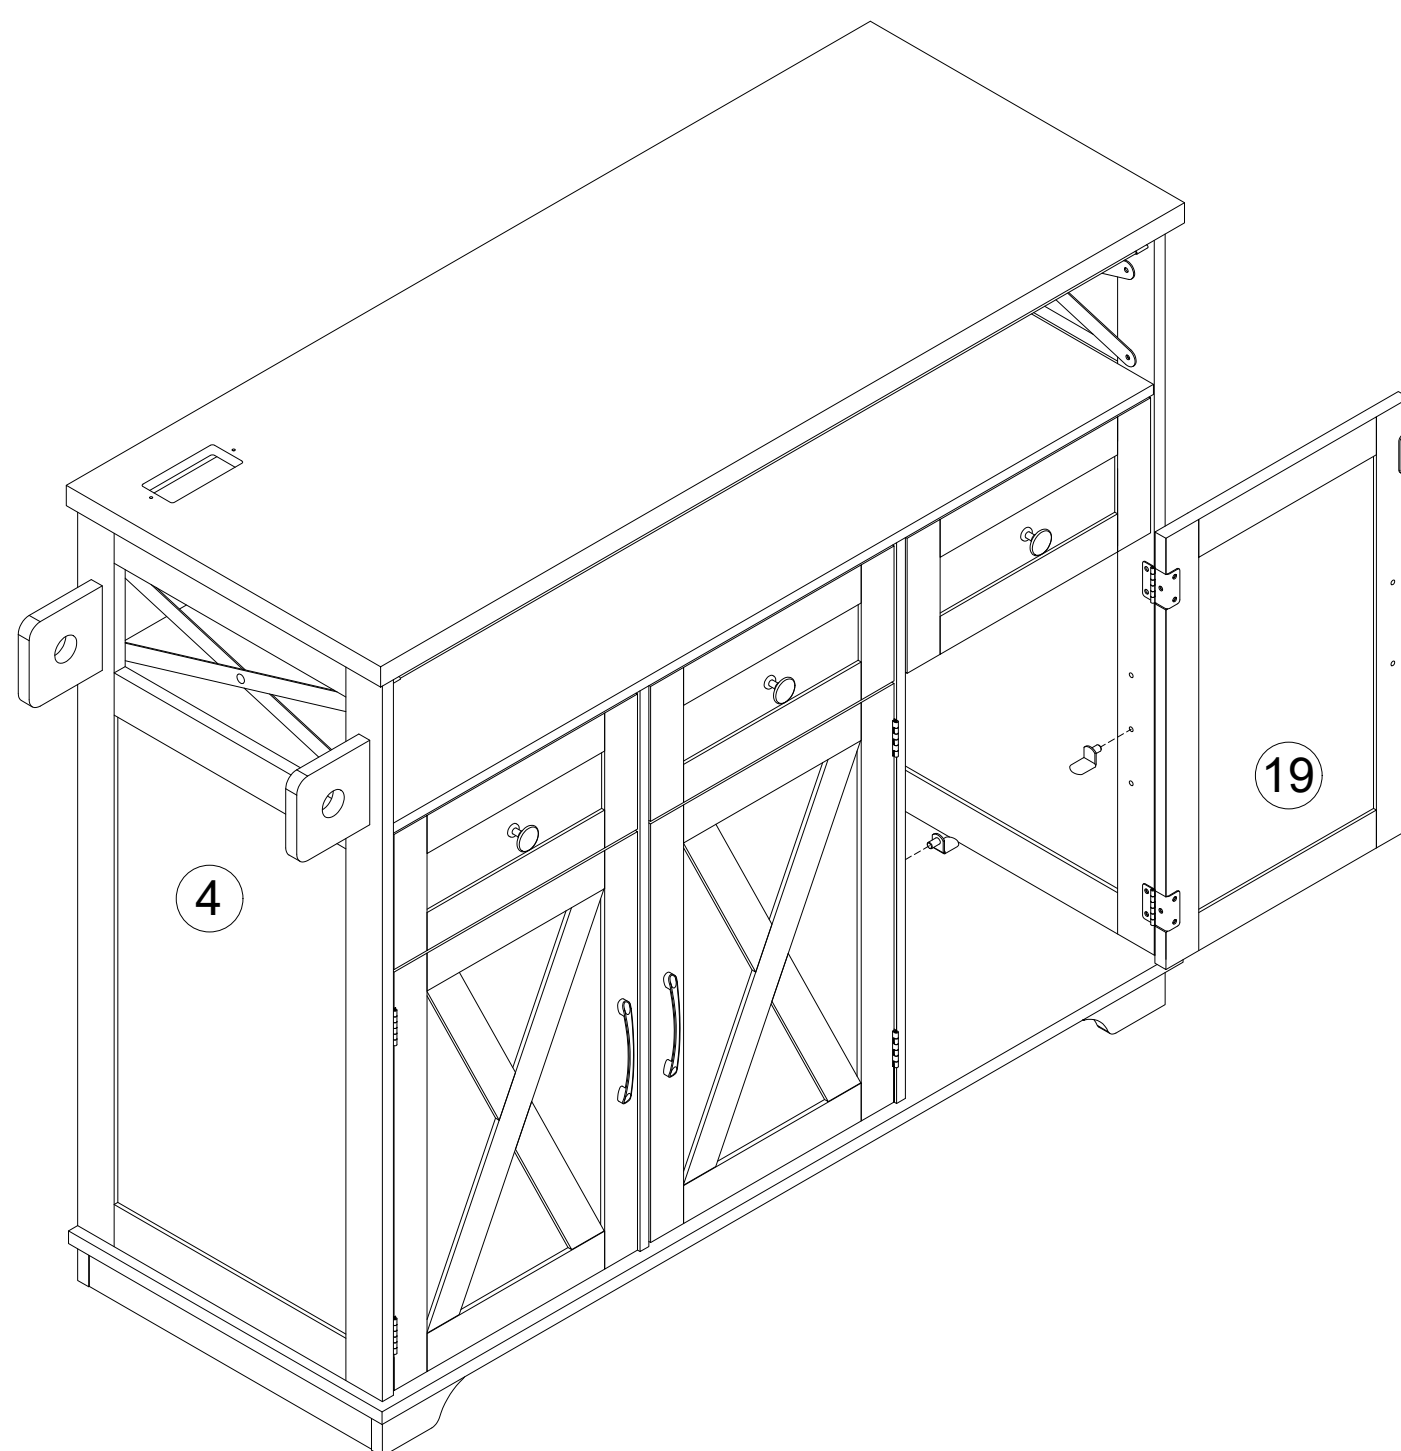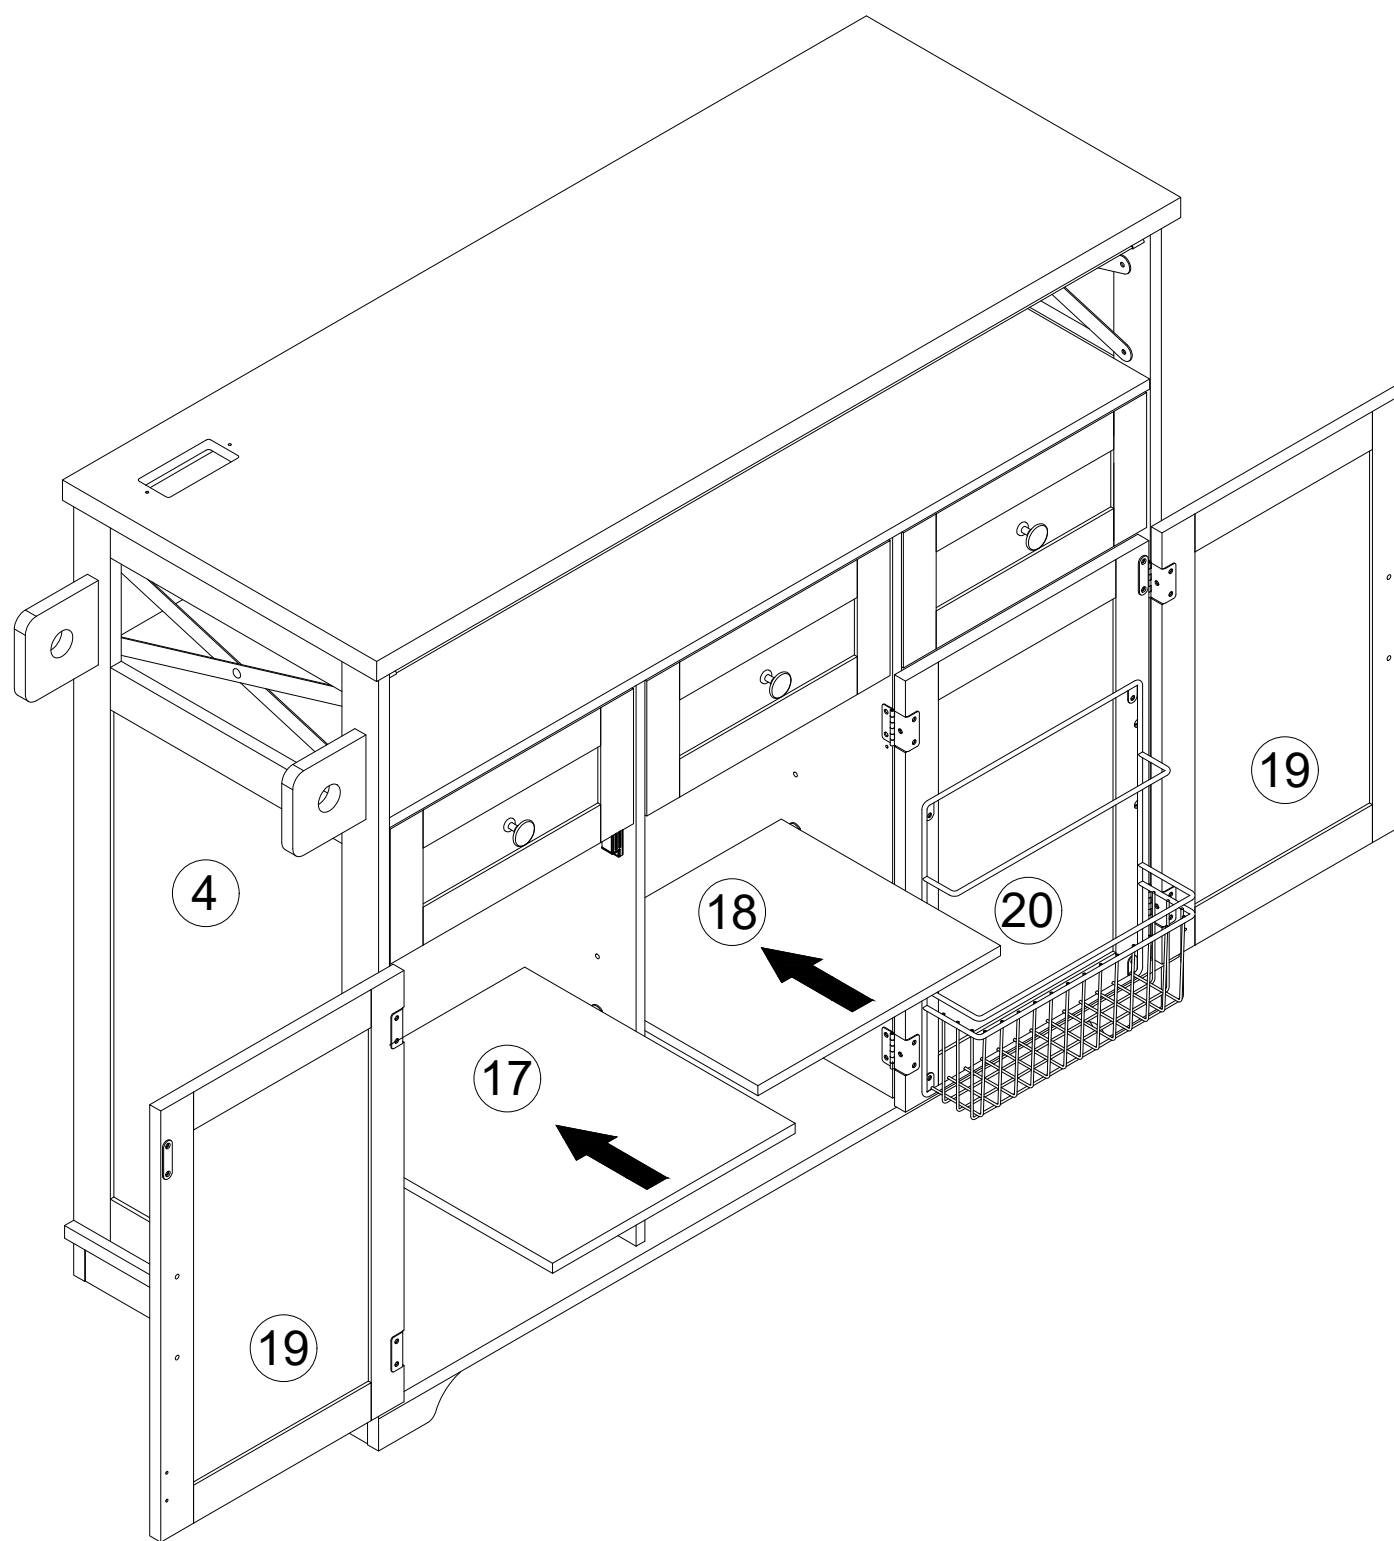


Mx4

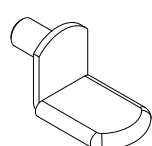

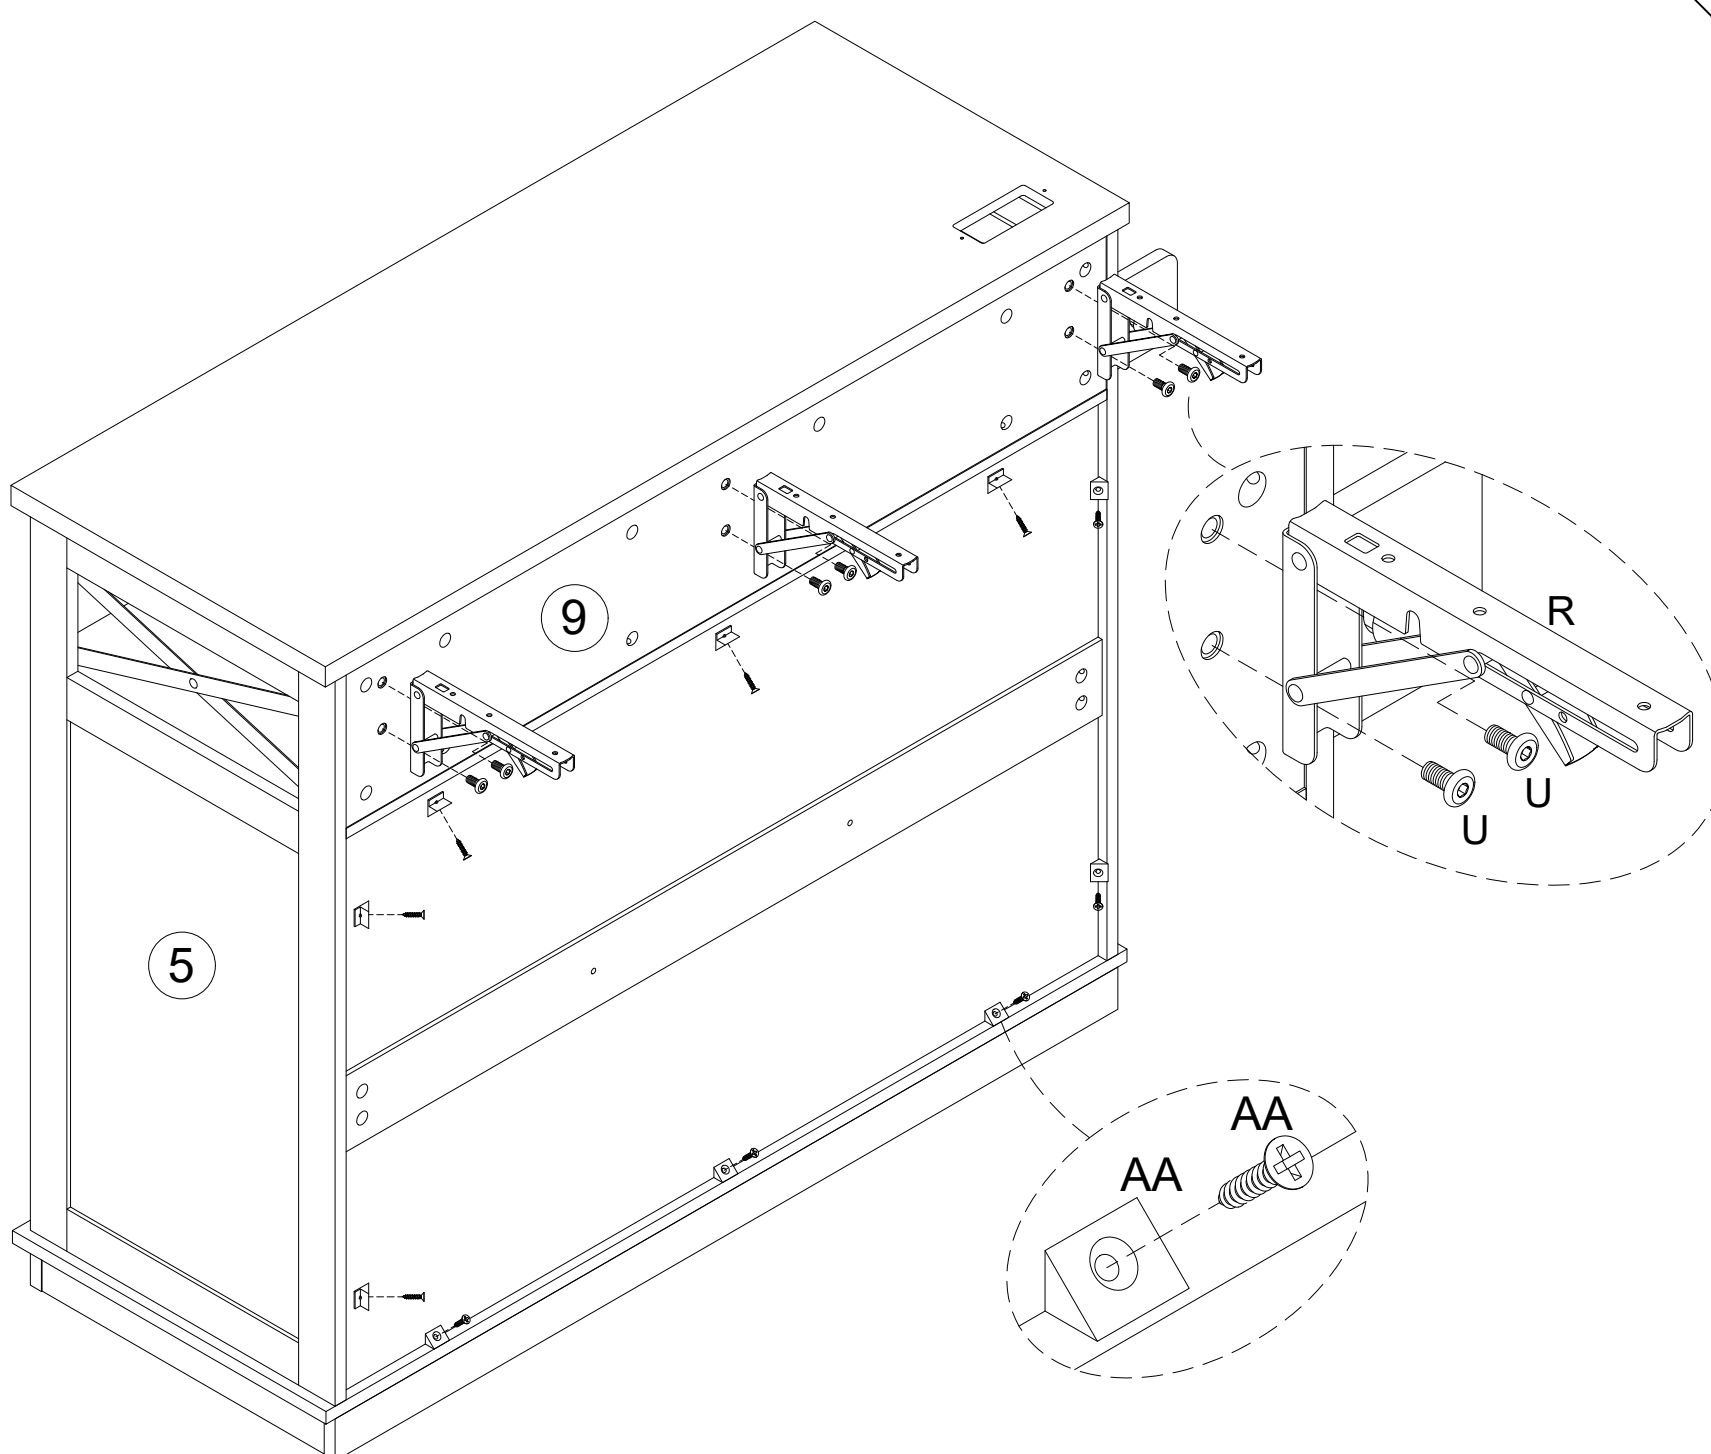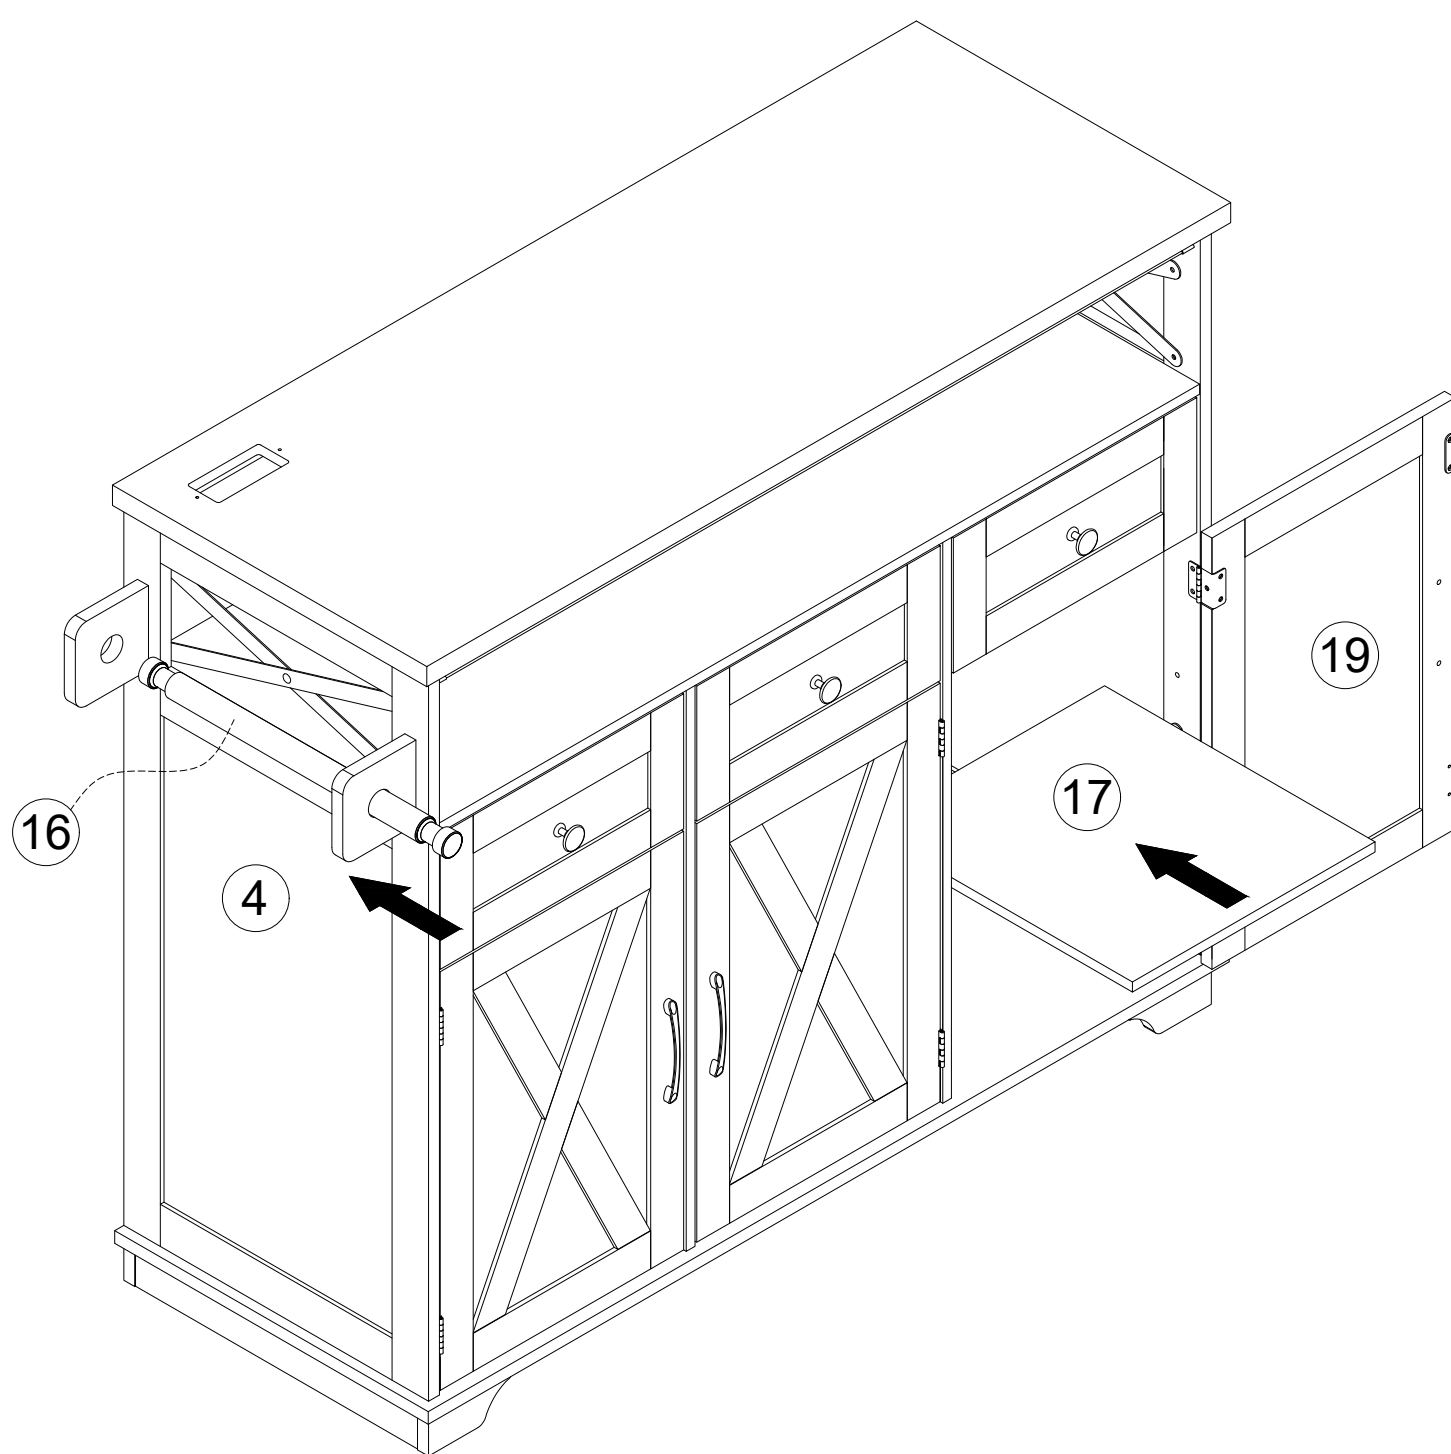


Rx3

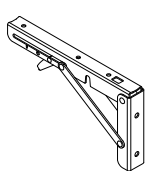


Ux6



AAx10

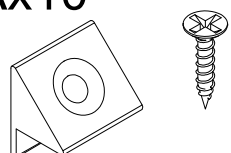


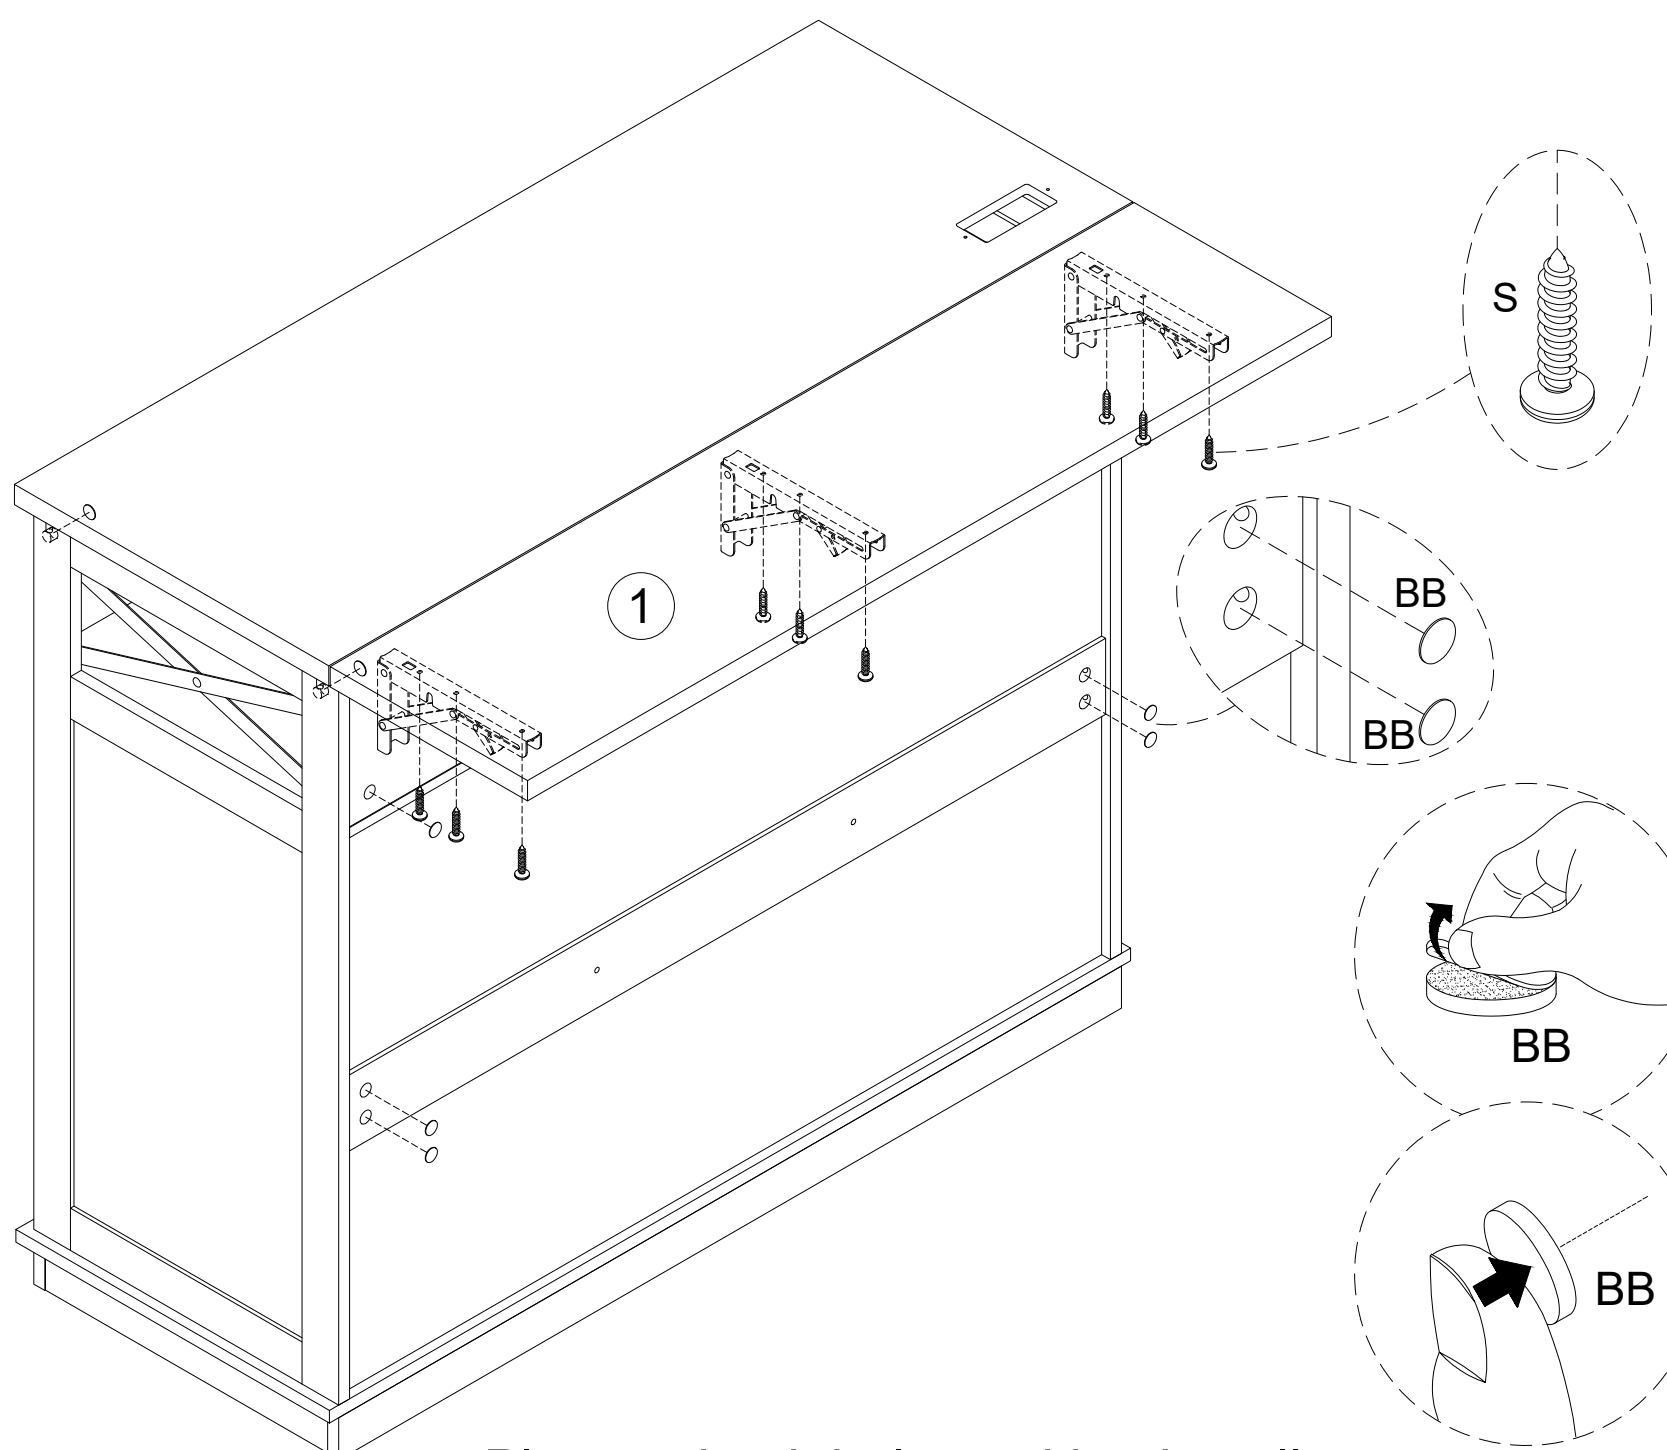



Sx9




BBx20




Please check hole position install

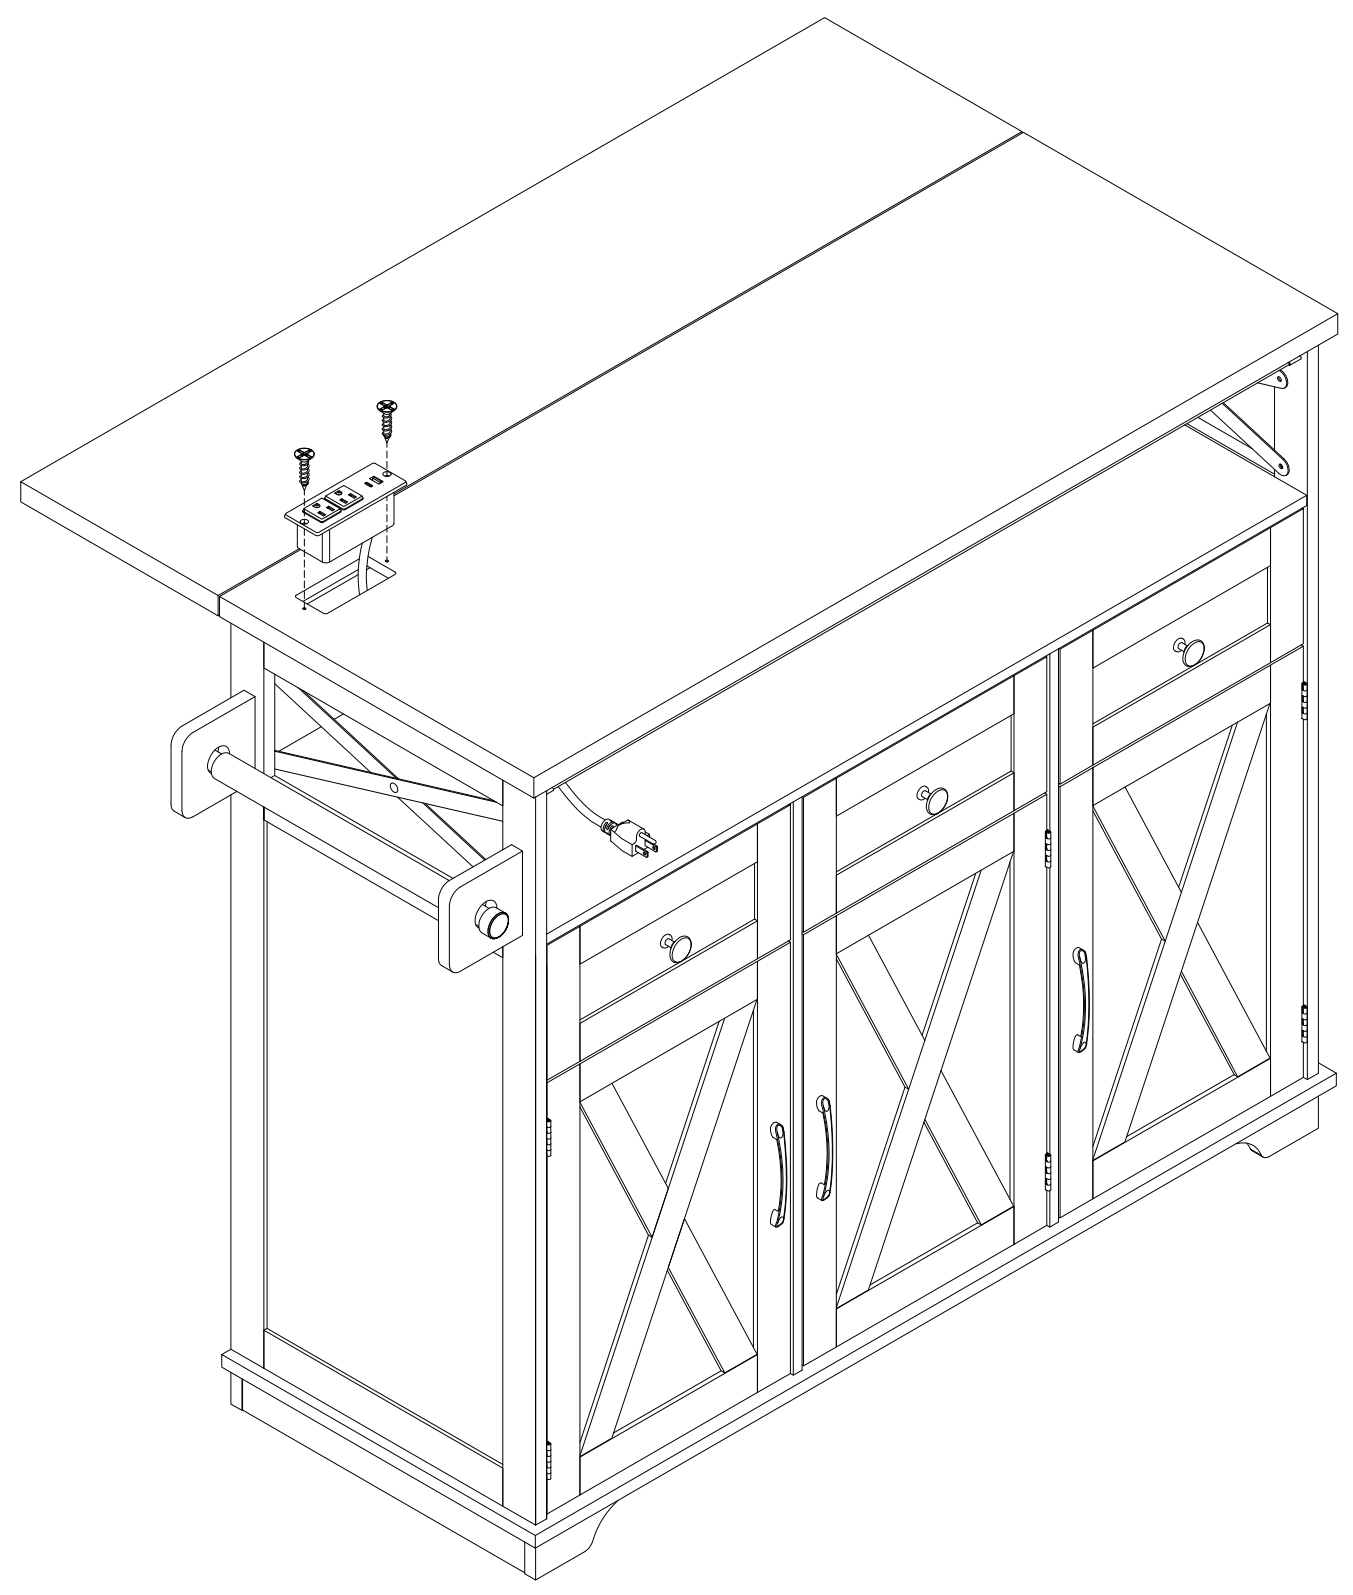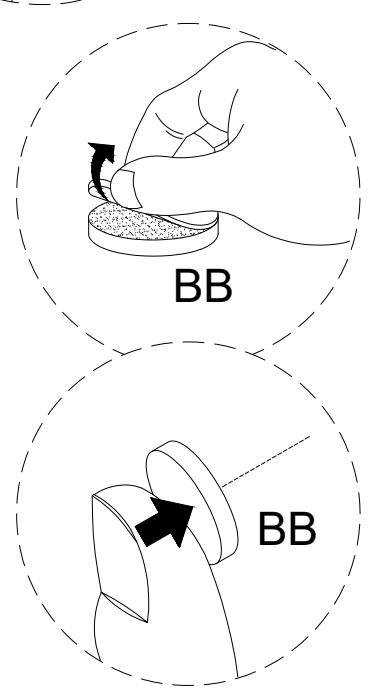


Qx1

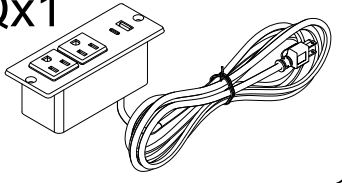

Ox2






Lock the P screws to 99%

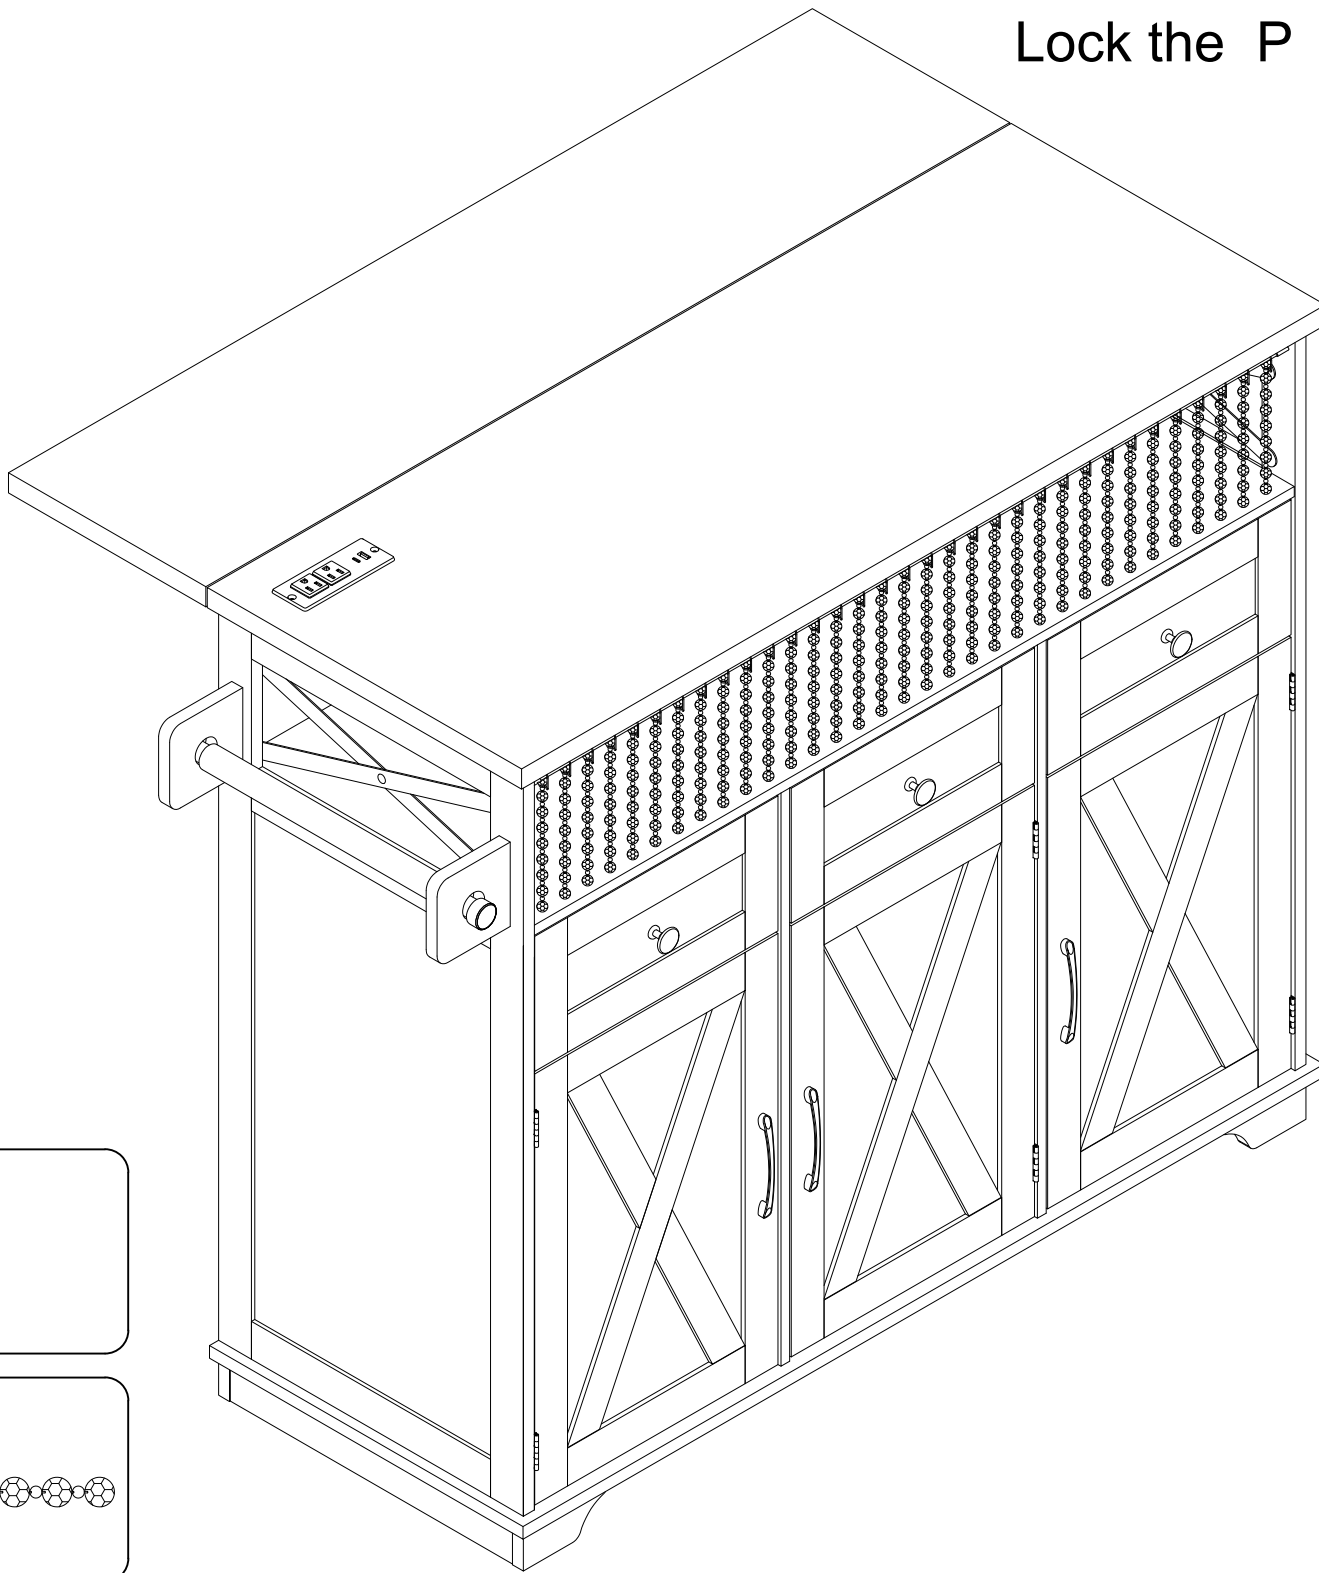

Xx33



Yx33

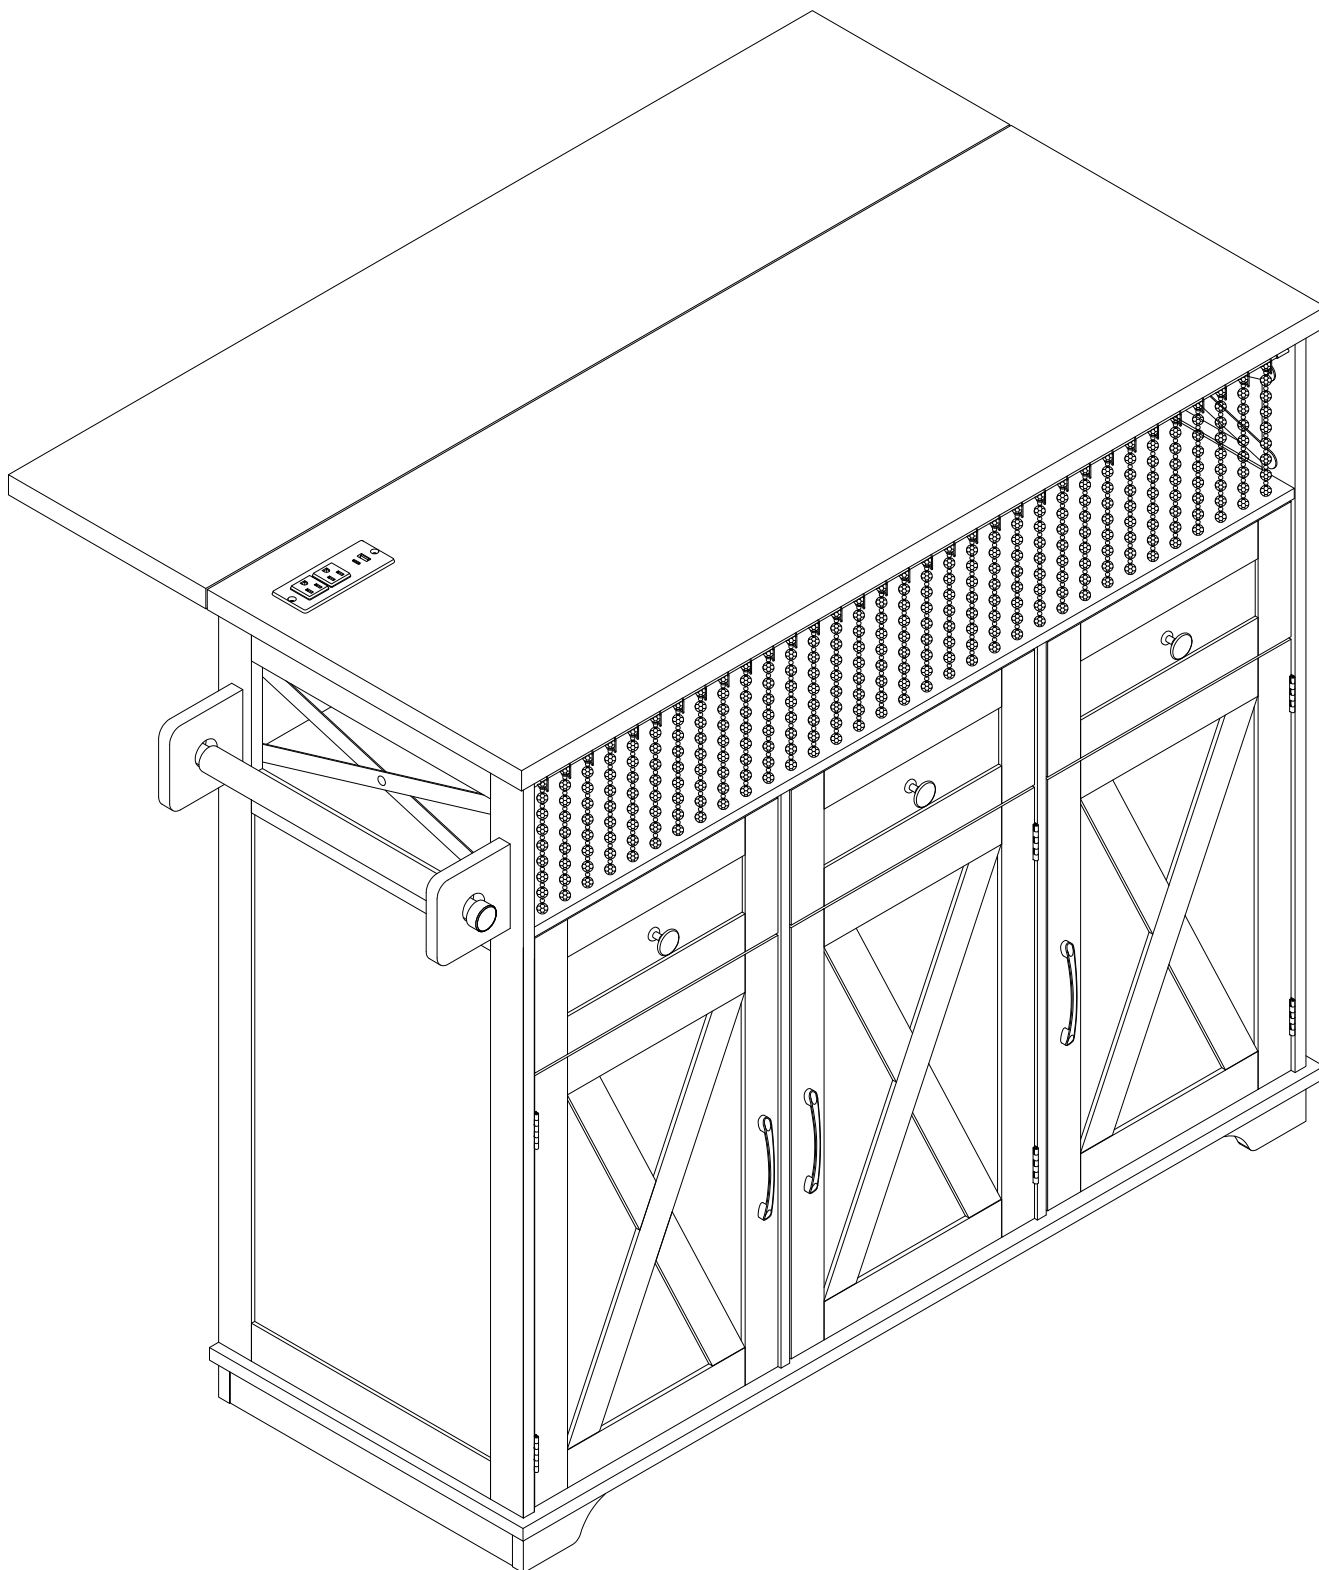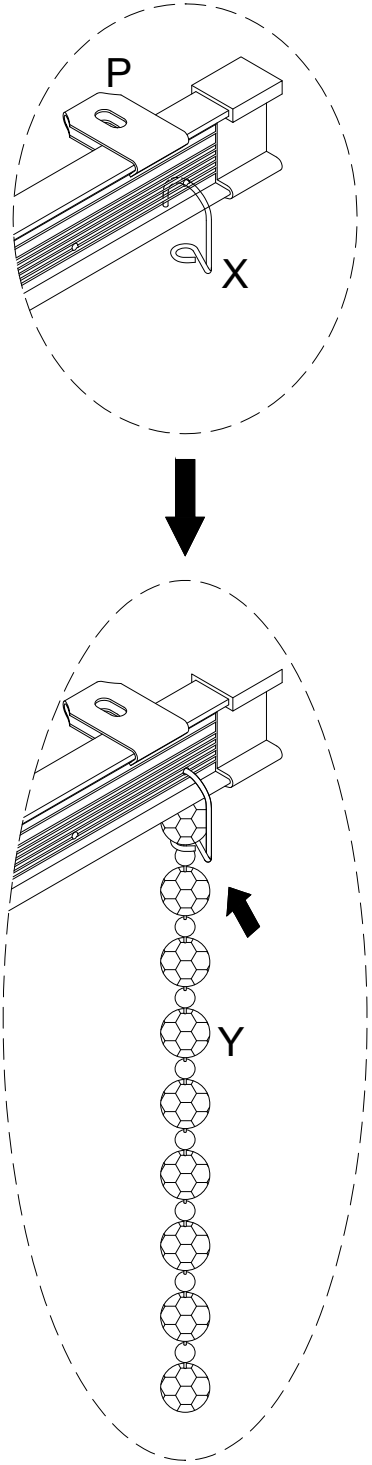

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance

-  ● Not for commercial use. For residential use only.
 -  ● Furniture may scratch floors. We recommend using furniture pads to protect your floors.
 -  ● Do not put hot items directly on furniture surface.
 -  ● Do not clean furniture with harsh cleansers or polish.
 -  ● Do not place furniture under direct sunlight.
 -  ● Do not place furniture near heating or cooling vents.
 -  ● Do not write on furniture without a padded barrier to protect the surface.
 -  ● Do not place furniture outside . For indoor use only.
 -  ● Stains may be removed with mild soap solution and damp cloth.
 -  ● Children should not climb or jump on the furniture.
-
-  ● Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in carton for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.