




ANCHORING BOLTS & RAILINGS

Project how-to guide

◆ The Pro's Choice Since 1936

PREPARATION

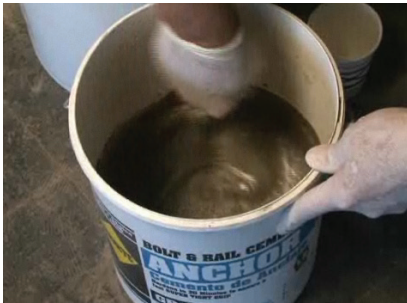

MIX ACCORDING TO DIRECTIONS ON CONTAINER.

NOTE: *This is a rapid setting product. Only mix the amount needed.*



APPLICATION



Pour the product into the hole, filling it completely.

If used in an environment where the patch will get wet, overfill the hole slightly. As it stiffens, gently slope the material so water moves away from the patch.



Anchor Cement will set in just 20 minutes.

NOTE: For complete product information, please refer to product data sheet.