
# **ASSEMBLY INSTRUCTIONS**


### **DINING TABLE**

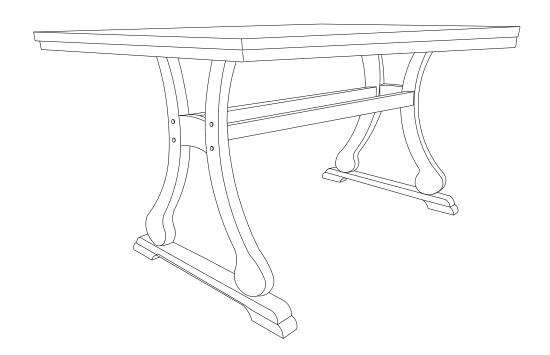


WF 530885

#### **IMPORTANT NOTE:**


- PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE TABLE IS FULLY SET-UP.

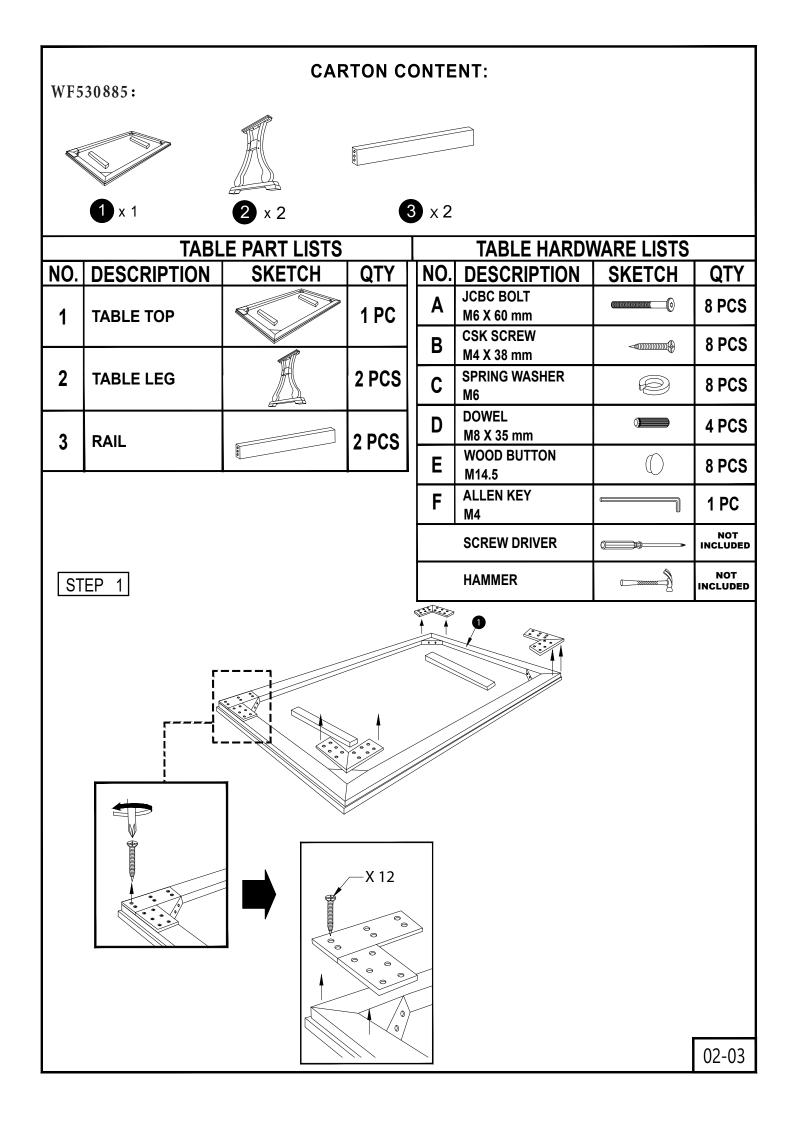

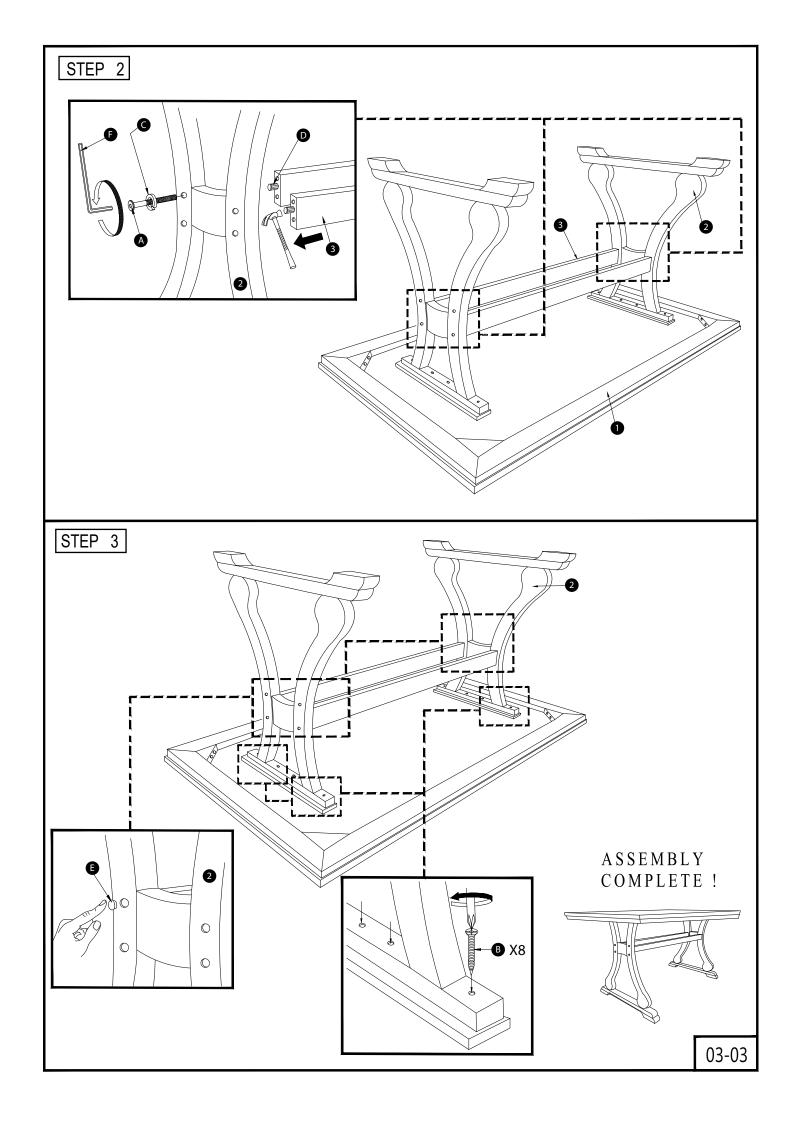

# **ASSEMBLY INSTRUCTIONS**


## **DINING CHAIR**

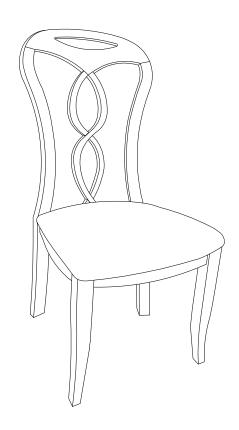


WF530886

### **IMPORTANT NOTE:**

- PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.

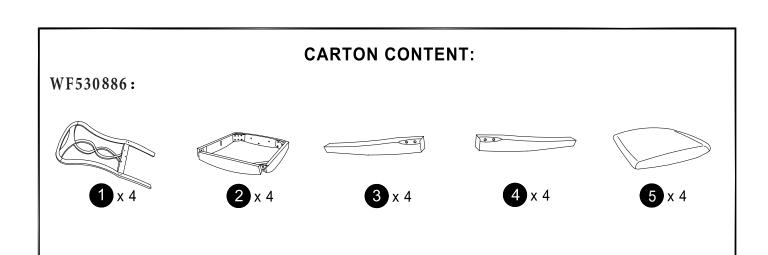


| CHAIR PART LISTS |               |        |          |                 | CHAIR HARDWARE LISTS    |                   |        |  |  |  |  |  |
|------------------|---------------|--------|----------|-----------------|-------------------------|-------------------|--------|--|--|--|--|--|
| NO.              | DESCRIPTION   | SKETCH | QTY      | NO.             | DESCRIPTION             | SKETCH            | QTY    |  |  |  |  |  |
| 1                | CHAIR BACK    |        | 4 PCS    | Α               | JCBC BOLT<br>M6 X 75 mm |                   | 16 PCS |  |  |  |  |  |
| 2                | BOX SEAT      |        | 4 PCS    | В               | JCBC BOLT<br>M6 X 60 mm |                   | 16 PCS |  |  |  |  |  |
| 3                | FRONT LEG - R | 60     | 4 PCS    | С               | JCBC BOLT<br>M6 X 38 mm | ( <del>)</del>    | 12 PCS |  |  |  |  |  |
| 4                | FRONT LEG - L | 0 0    | 4 PCS    | D               | CSK SCREW<br>M4 X 32 mm | ≪a <b>n</b> man(⊕ | 12 PCS |  |  |  |  |  |
| _                |               |        | $\vdash$ | E               | SPRING WASHER<br>M6     |                   | 44 PCS |  |  |  |  |  |
| 5                | SEAT          |        | 4 PCS    | F               | FLAT WASHER<br>M6       |                   | 44 PCS |  |  |  |  |  |
|                  |               |        | G        | ALLEN KEY<br>M4 |                         | 1 PC              |        |  |  |  |  |  |
| ST               | EP 1          |        | ,        | SCREW DRIVER    |                         | NOT<br>INCLUDED   |        |  |  |  |  |  |
| 100%             |               |        |          |                 |                         |                   |        |  |  |  |  |  |

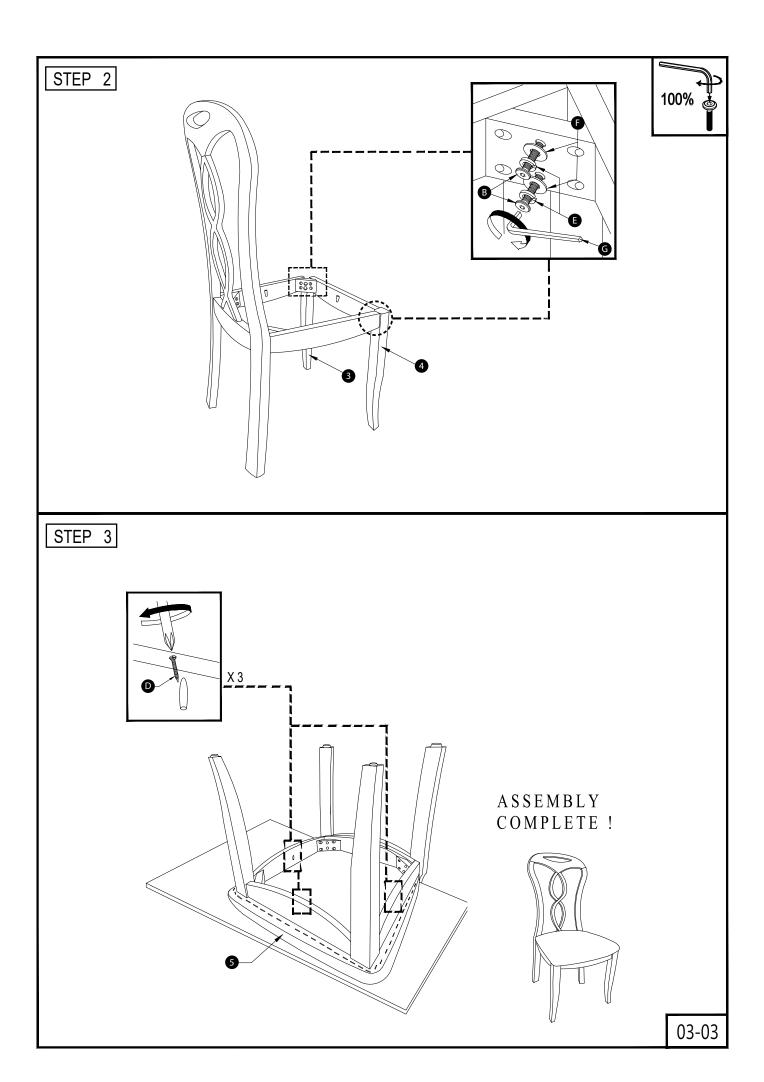

# **ASSEMBLY INSTRUCTIONS**


## **DINING CHAIR**

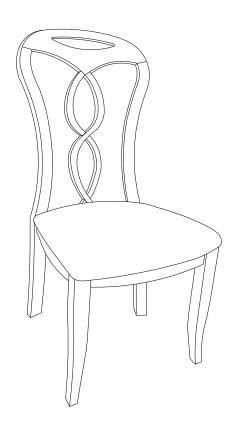

WF530887

### **IMPORTANT NOTE:**

- PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.

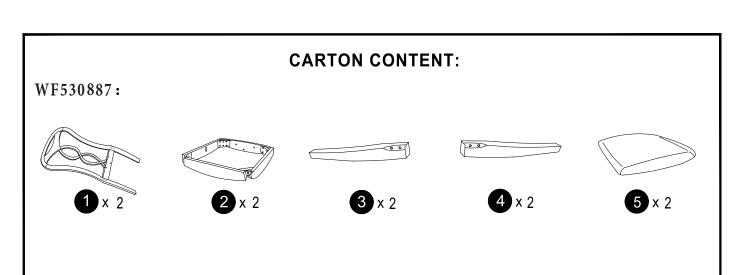

|                                  |               | ART LISTS | CHAIR HARDWARE LISTS |                 |                         |                      |        |  |  |  |  |  |  |
|----------------------------------|---------------|-----------|----------------------|-----------------|-------------------------|----------------------|--------|--|--|--|--|--|--|
| NO.                              | DESCRIPTION   | SKETCH    | QTY                  | NO.             |                         | SKETCH               | QTY    |  |  |  |  |  |  |
| 1                                | CHAIR BACK    |           | 2 PCS                | Α               | JCBC BOLT<br>M6 X 75 mm | (p)                  | 8 PCS  |  |  |  |  |  |  |
| 2                                | BOX SEAT      |           | 2 PCS                | В               | JCBC BOLT<br>M6 X 60 mm |                      | 8 PCS  |  |  |  |  |  |  |
| 3                                | FRONT LEG - R |           | 2 PCS                | С               | JCBC BOLT<br>M6 X 38 mm |                      | 6 PCS  |  |  |  |  |  |  |
| 4                                | EDONT LEC. 1  | 0 0       |                      | D               | CSK SCREW<br>M4 X 32 mm | ≪a <b>a</b> anaa (†) | 6 PCS  |  |  |  |  |  |  |
| <u> </u>                         | FRONT LEG - L |           | 2 PCS                | E               | SPRING WASHER<br>M6     |                      | 22 PCS |  |  |  |  |  |  |
| 5                                | SEAT          |           | 2 PCS                | F               | FLAT WASHER<br>M6       |                      | 22 PCS |  |  |  |  |  |  |
|                                  |               |           | G                    | ALLEN KEY<br>M4 |                         | 1 PCS                |        |  |  |  |  |  |  |
| STEP 1 SCREW DRIVER SCREW DRIVER |               |           |                      |                 |                         |                      |        |  |  |  |  |  |  |
| 100%                             |               |           |                      |                 |                         |                      |        |  |  |  |  |  |  |

