
# Installation Instructions


#### Faucet types:

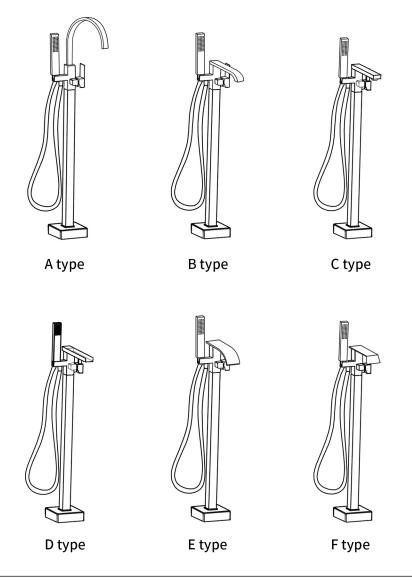

style may vary by model, but the installation ways are the same

## Essential accesscories list

Part Name	
Subject	
Straight pipe	
Allen key	
Inner-hexagon screw	
Decorative cover	
Water supply hoses	
The base	
Explosion screws	
Hand shower	
Shower hose	
Instruction	
	Subject Straight pipe Allen key Inner-hexagon screw Decorative cover Water supply hoses The base Explosion screws Hand shower Shower hose

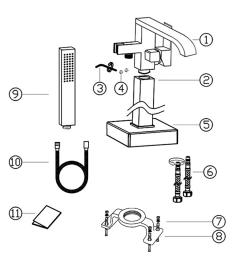

### Presentation:

- 1. The switching handle: Switch water to faucet spout or hand shower: turn left for faucet spout; Turn right for hand shower
- 2.Hot and cold water handle: Pushing the handle to right turns the water on Turn the handle forward for hot water ;Turn the handle backward for cold water

## Caution:


- 1.Before installation, all water lines must be flushed at least 60 seconds to remove any foreign material so that the foreign material will not block the areator or damage the cartrige
- 2.Use water and soft cloth to clean the faucet
- 3.Can use a mild liquid detergent for cleaning, do not use abrasive detergent that may scratch or dull the surface.


## Installation Instructions

1.Put the straight pipe, decorative cover over the water supply hoses.


Make sure screwed ir and cold w


2.Screw and hand tighten the water supply hoses to the subject(DO NOT USE SPANNER TO TIGHTEN AS IT CAN DAMAGE THE O-RING). Make sure the water supply hoses were screwed into the correct inlets for hot water and cold water.

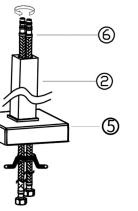


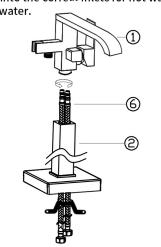


- 3.Prepare water supply pipes like the drawing below. (unit:mm/inch)
- 4.Using Allen key to screw 5.Screw the base to the inner-hexagonscrews to straight pipe. connect the subject and straight pipe.

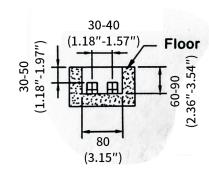

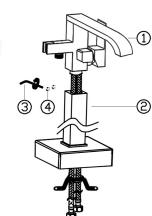


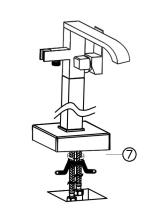


6.Connect another side of the water supply hoses to the water supply pipe. Make sure they were screwed into the correct outlets for hot water and cold water

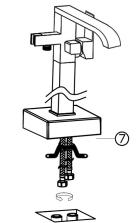

8.Screw the shower hose to hand shower and tub filler; Place hand shower into holder.

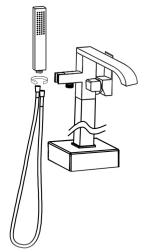

7.Drill holes and use the explosion screw to fixe the base on the ground then put the decorative cover over the base

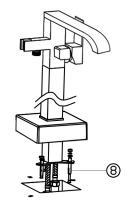

9.Inspect for leaks at all joints.

