



ASSEMBLY INSTRUCTION











If you have any questions about the product,
please don't hesitate to contact us.

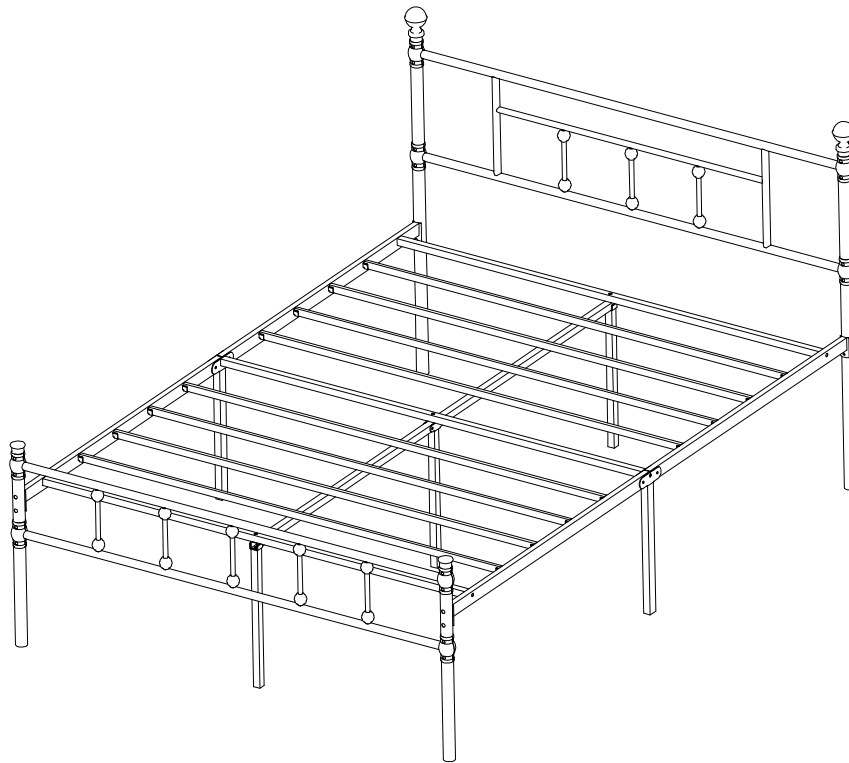





Size: Full/Queen

R3203/04-B

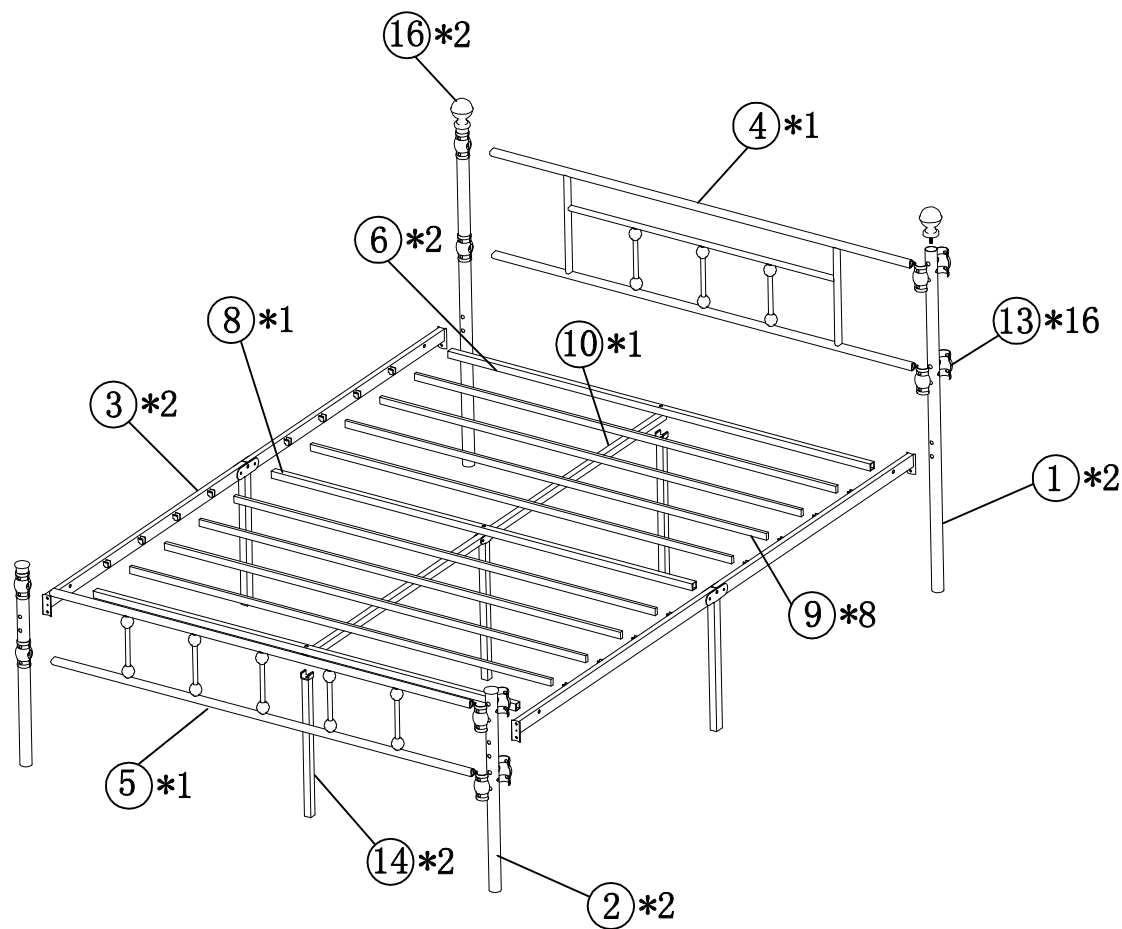

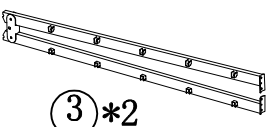
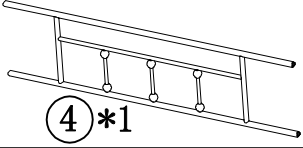

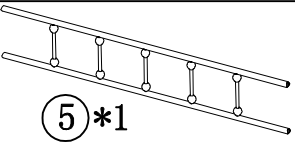
 ①*2	 ⑥*2	 ⑭*2	 D*8 (M8*40)
 ②*2	 ⑧*1	 ⑯*2	 E*6 (M8*35)
 ③*2	 ⑨*8	 A*8 (M8*50)	 G*3 (M8*55)
 ④*1	 ⑩*1	 B*16 (M6*28)	
 ⑤*1	 ⑬*16	 C*16 (M6)	

Step1

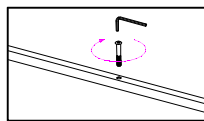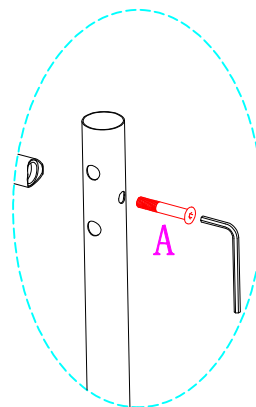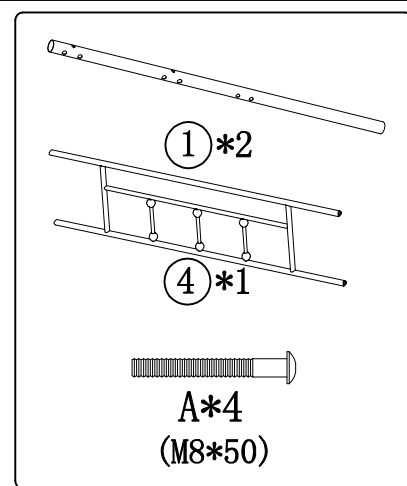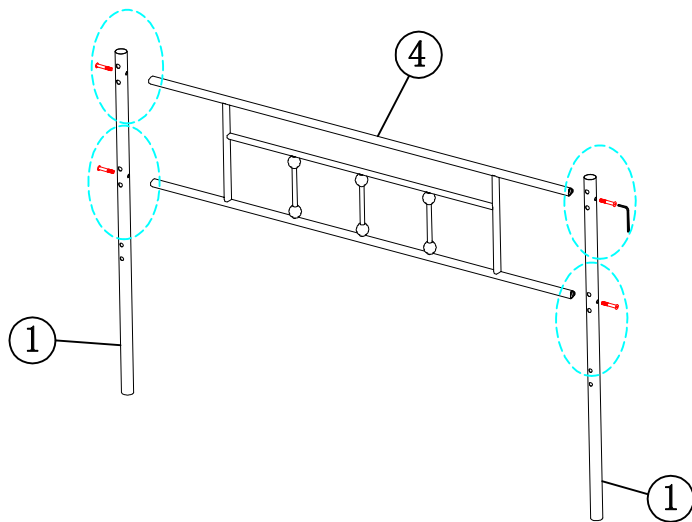



Do not fully tighten the screws yet.

Step2

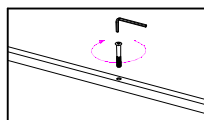
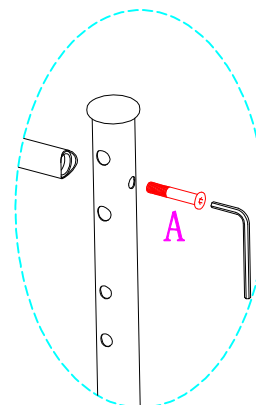
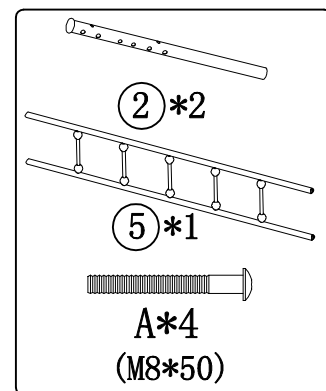
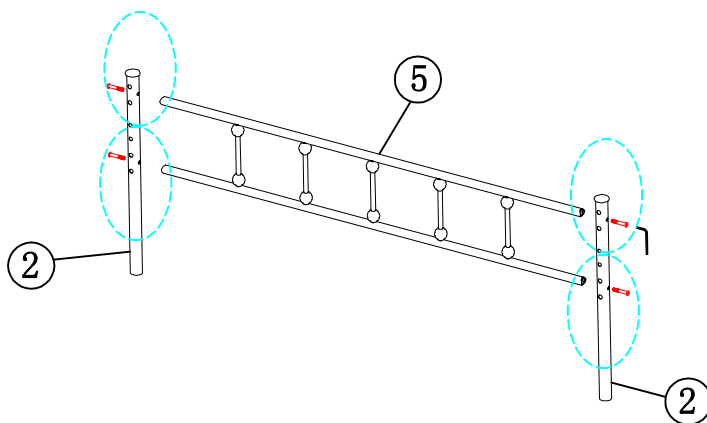


Do not fully tighten the screws yet.


Step3

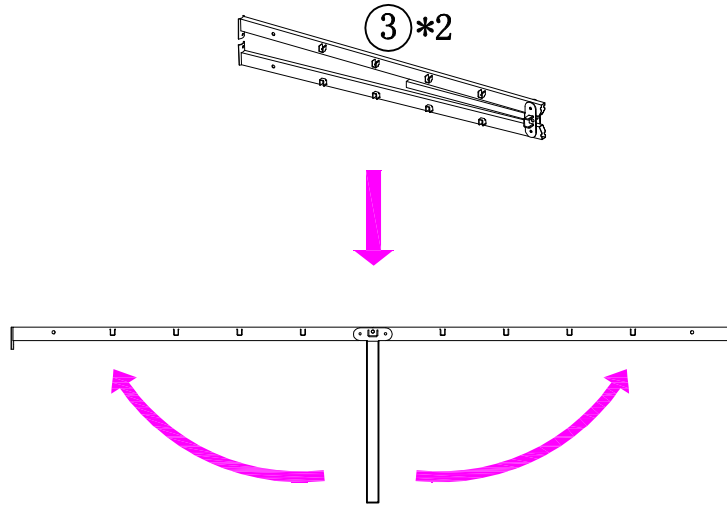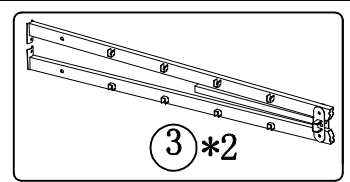


Step4

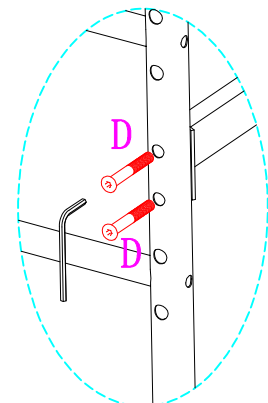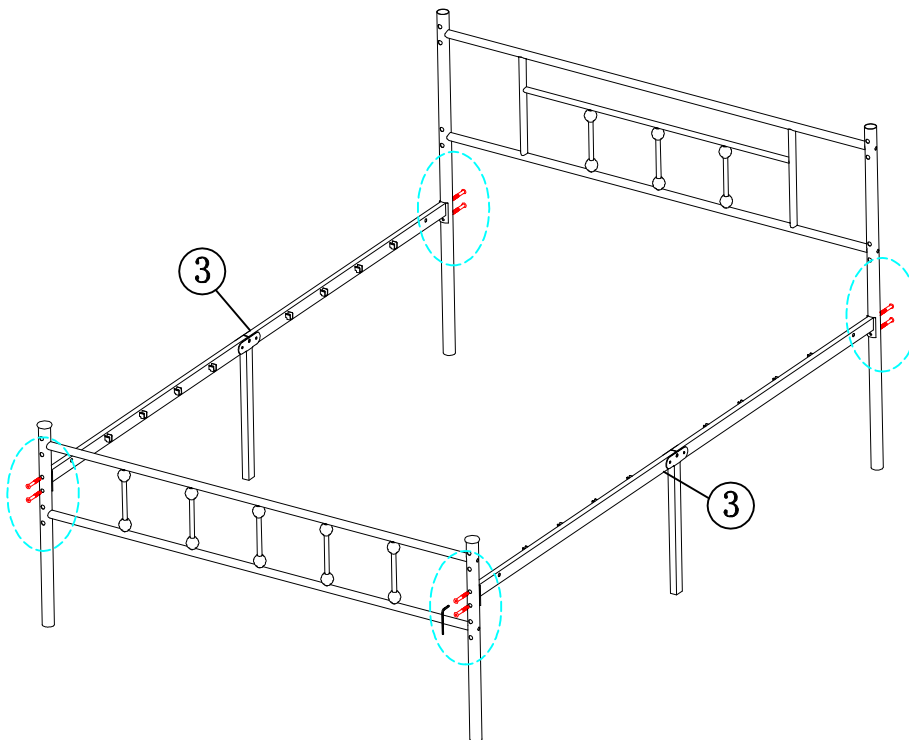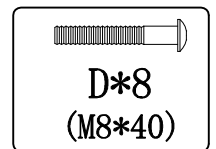



Step5

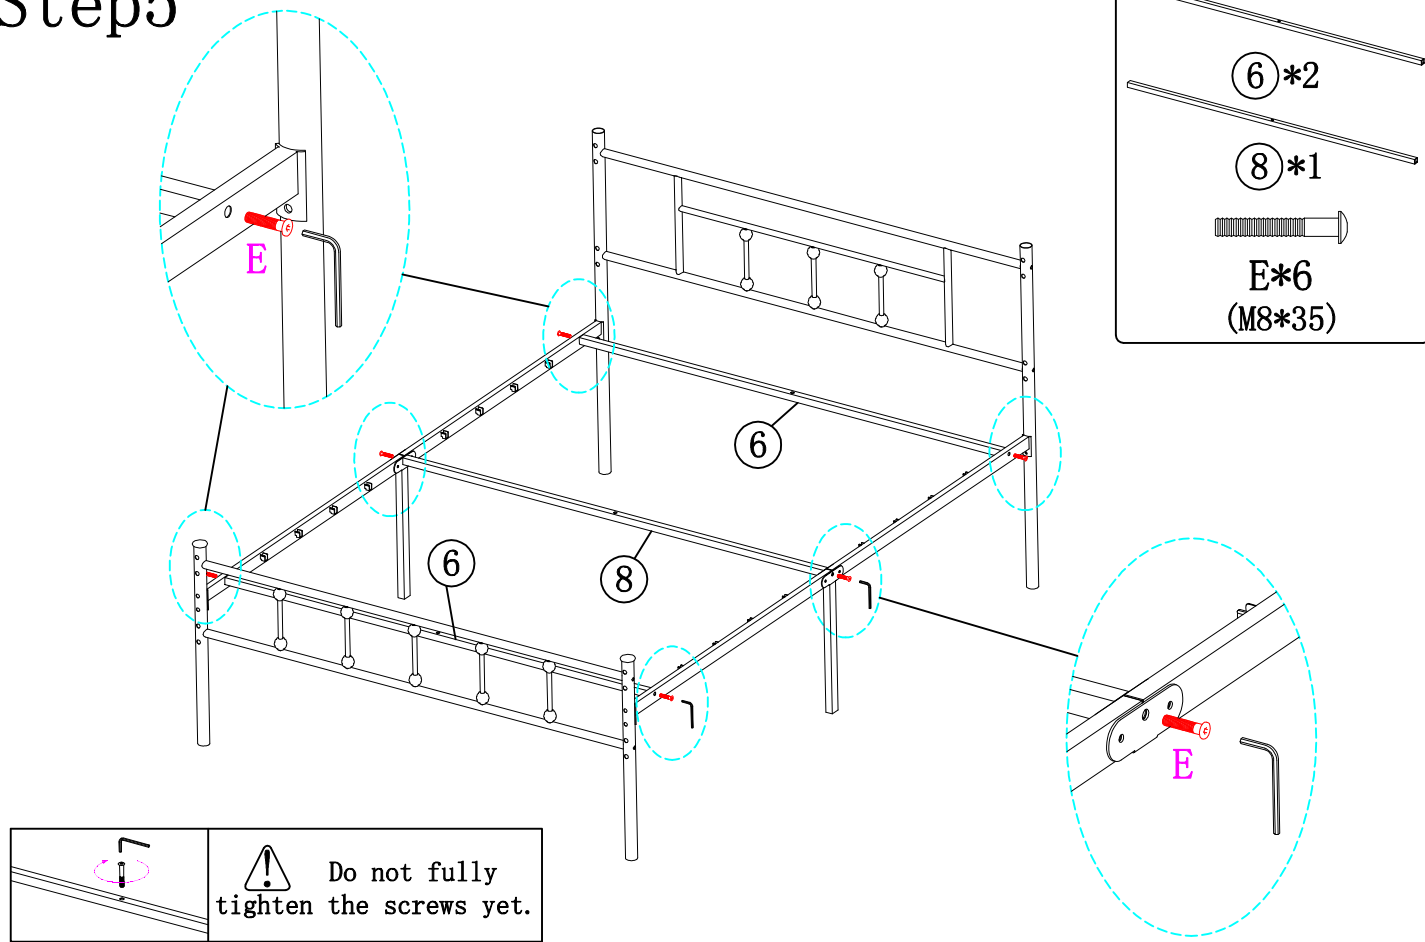


Step6

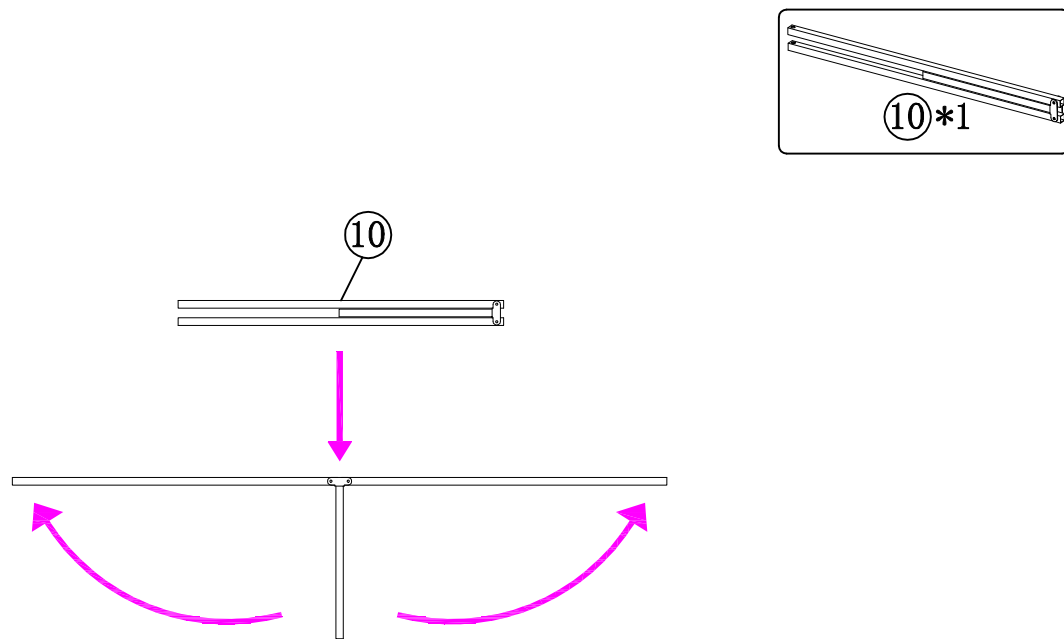

由 Autodesk 教育版产品制作

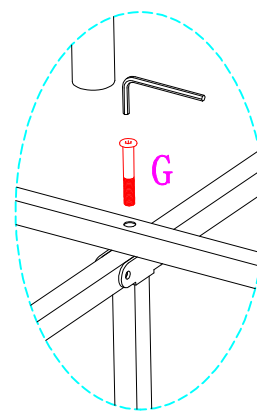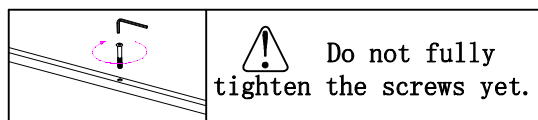

由 Autodesk 教育版产品制作

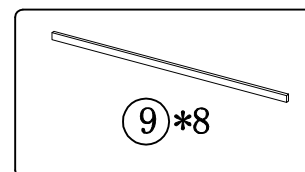



Step9

由 Autodesk 教育版产品制作


13*16




B*16
(M6*28)


C*16
(M6)

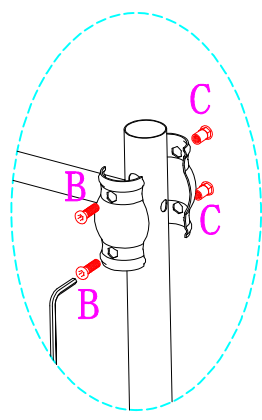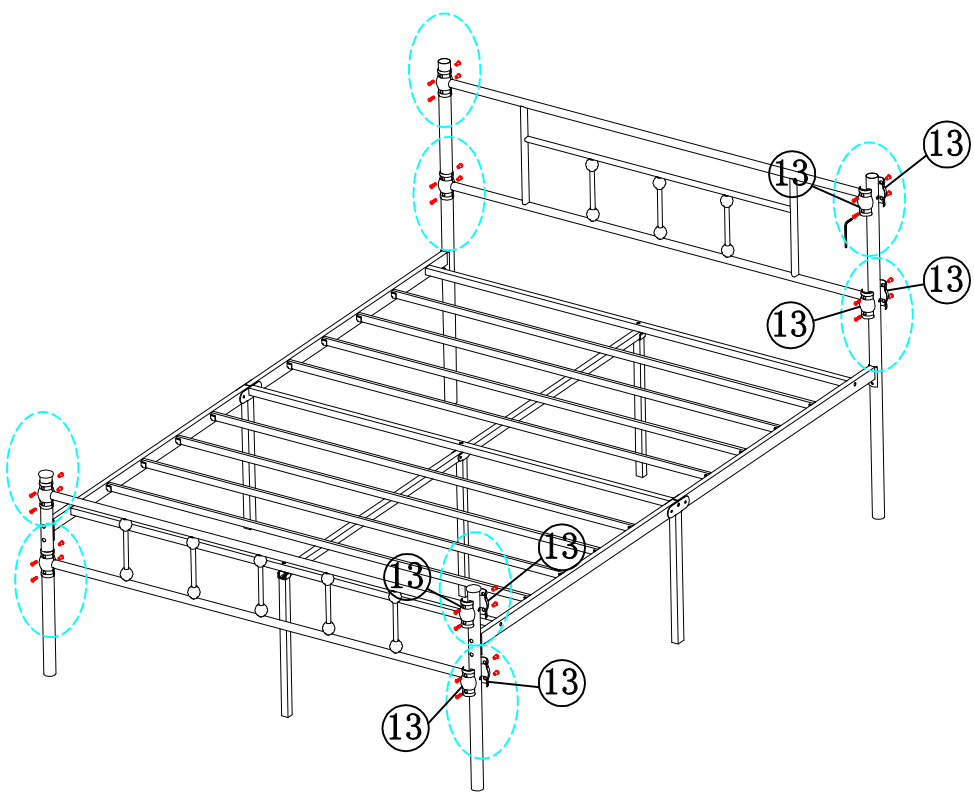

Step10


16*2

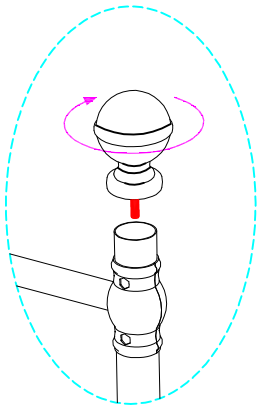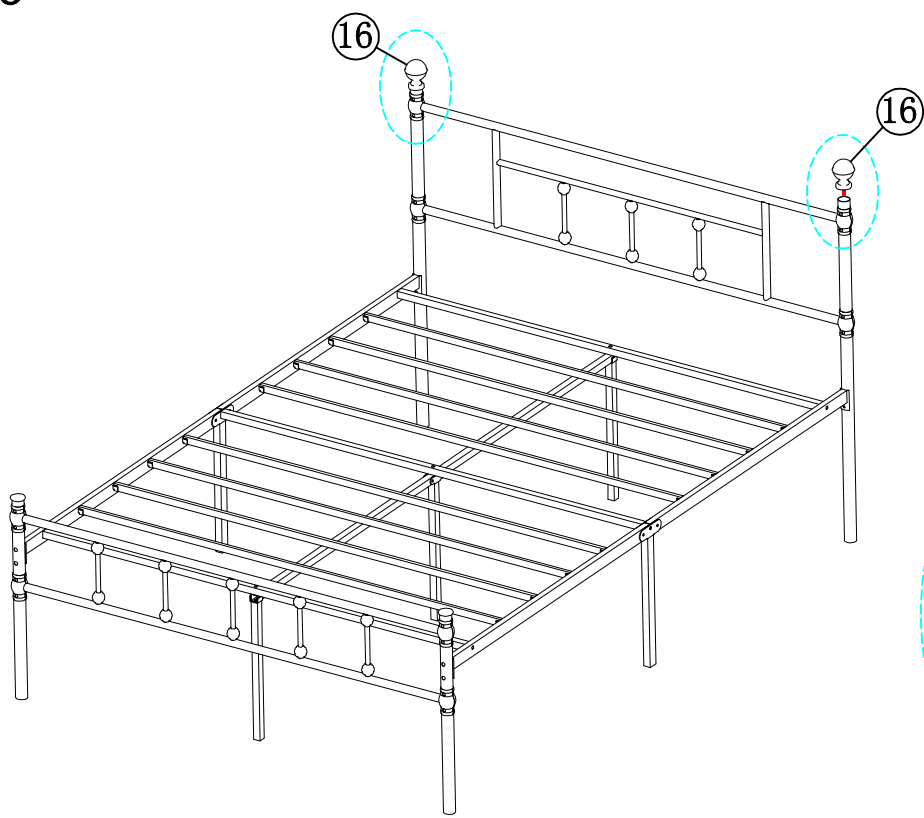


由 Autodesk 教育版产品制作

由 Autodesk 教育版产品制作

由 Autodesk 教育版产品制作

Step11

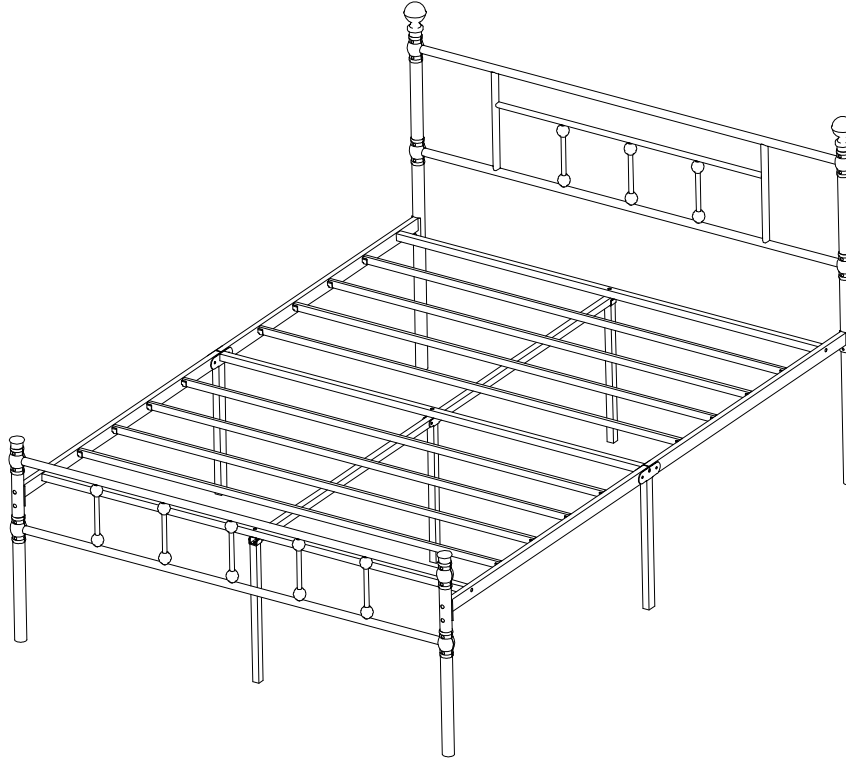

In the last step. please make sure all the screws are tightened.