





This example shows the preferred method of installation: Snapping the shields together

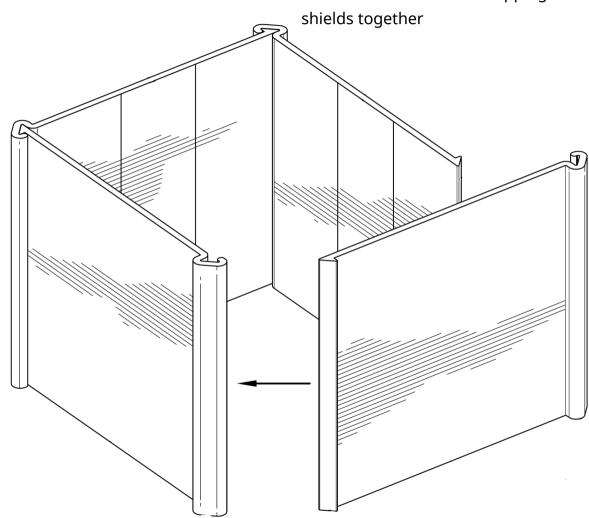





Push the arrow side of the shield into the hook side with some force. You could use a rubble mallet if needed

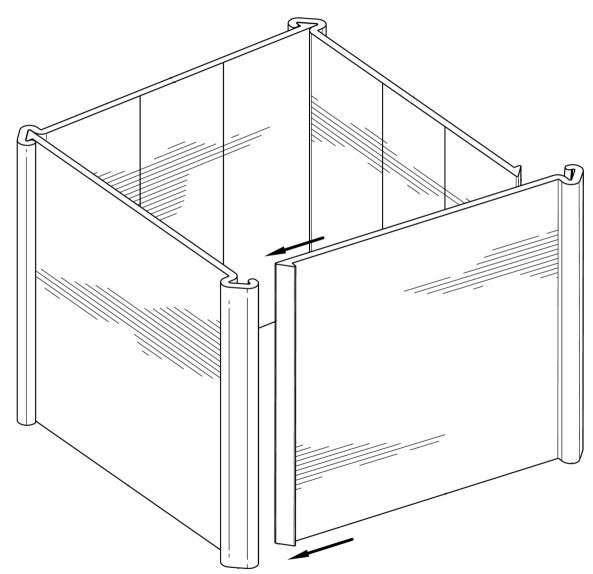




You will hear a snap sound when they connect creating your complete protection around your post.

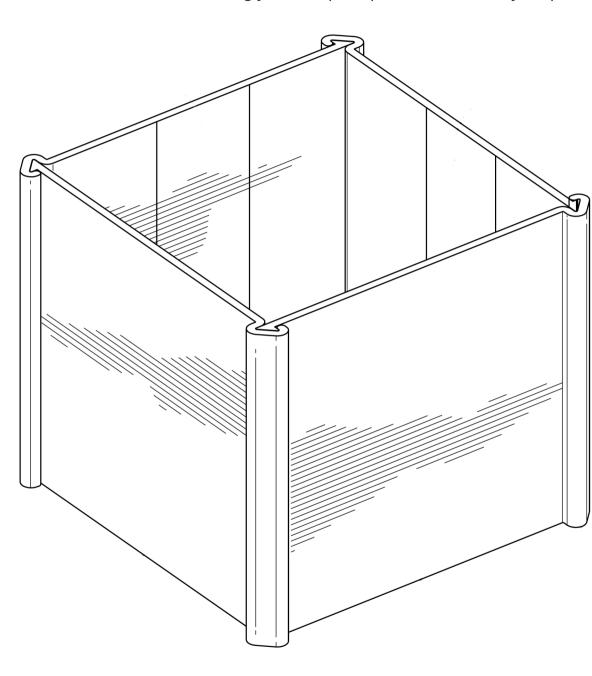

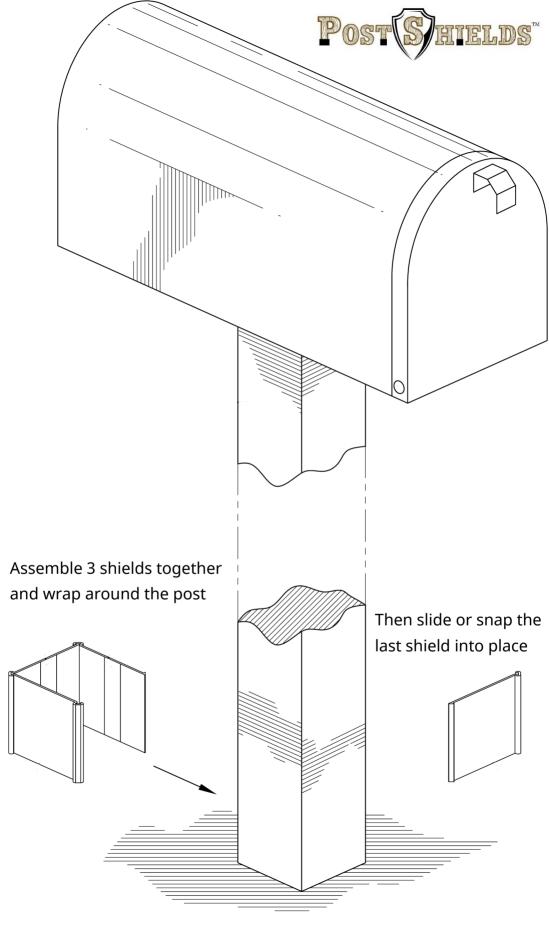

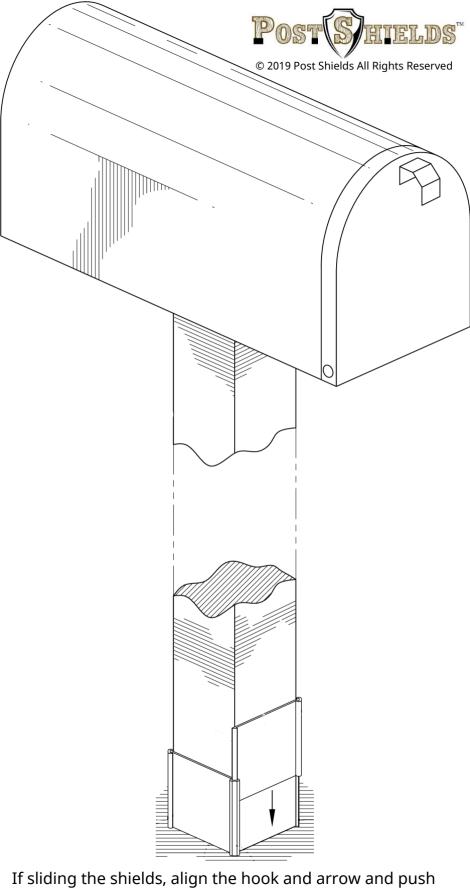

down. There will be some friction and will take some force.
You could use a rubber mallet if needed.



