
400/1450/1600 CABINET INSTALLATION INSTRUCTIONS FRONT LOAD

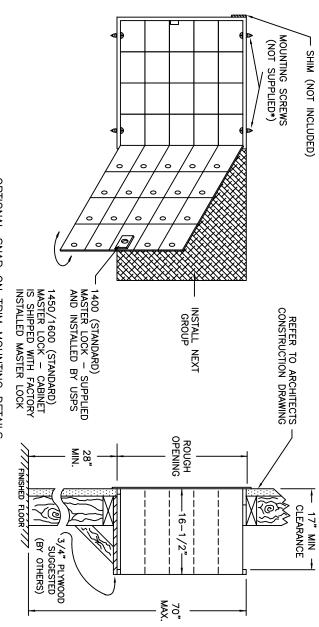

NOTE: WHEN SNAP ON TRIM IS USED, CABINET MUST PROJECT 3/8" BEYOND FINISHED WALL TO MAKE A FLUSH SURFACE BETWEEN THE CABINET AND THE TRIM, SEE OPTIONAL TRIM DETAIL.

- SLIDE FIRST GROUP OF BOXES INTO THE ROUGH OPENING IN WALL.
- ы SHIM AS NECESSARY FOR GATE TO OPEN AND CLOSE FREELY. INSTALL AND TIGHTEN MOUNTING SCREWS* (2 IN TOP AND 2 IN BOTTOM).
- INSTALL NEXT GROUP OF BOXES THE SAME AS ABOVE.

ы


NEXT STEPS ONLY FOR CABINETS WITH OPTIONAL SNAP ON TRIM

- SCREW MOUNTING CLIP TO WALL USING $\#8 \times 1-1/4$ " SCREWS, SEE OPTIONAL TRIM DETAIL.
- HOOK ONE EDGE OF TRIM OVER LEG OF CLIP AND SNAP OVER SECOND LEG OF CLIP.

ù

FOR CONVENTIONAL LUMBER WE RECOMMEND A #8 X 2" FLAT HEAD WOOD SCREW.

OPTIONAL SNAP ON TRIM MOUNTING DETAILS

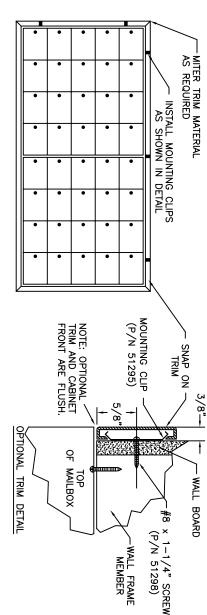

USPS STD-4C COMPLIANT MAILBOX SYSTEMS ARE MANDATORY FOR ALL **NEW CONSTRUCTION AND MAJOR RENOVATIONS**. MAILBOXES THAT ARE 4B+ COMPLIANT
WILL ONLY BE CONSIDERED USPS APPROVED IF THEY ARE **REPLACING** EXISTING MAILBOXES. CHECK WITH LOCAL POSTAL OFFICIAL PRIOR TO INSTALLING MAILBOX

1450/1600 SERIES ARE NOT 4B+ COMPLIANT 1400 SERIES ARE 4B+ COMPLIANT

PRODUCT SERIES

RECOMMENDED MOUNTING DETAILS

www.florencemailboxes.com • (800 5935 Corporate Drive manui

A GIBRALTAR INDUSTRIES COMPANY

nailboxes.com • (800) 275-1747	<u> </u>	manufacturing company	HUCH	FOR 1400/1450/1600 SERIES F/L MAILBOXES
CS2057	DRAWING NUMBER	SCALE 1:16	MODEL AF HORZ.	\AILBOXES
NBC	DRAWN BY	LAST REV DATE 7/2/2009	REV A	