

QZDB-3322, QZED-3322, QZRC-3322
QZLD-3322, QZSB-3322, QZSQ-3322

Drop-In Kitchen Sink Installation Instructions and Templates

Las Instrucciones y Plantillas de Instalación de las Tarjas de Cocina de Sobreponer

- Tools Required:
- Ruler/Tape Measure
 - Masking Tape
 - Caulk
 - Drill
 - Safety Glasses
 - Screwdriver
 - 1-1/4" Hole Saw
 - Saber Saw (if counter top cutout is required)

- Herramientas Necesarias:
- Regla/Cinta Métrica
 - Cinta Adhesiva Protectora
 - Calafateo
 - Taladro
 - Lentes de Seguridad
 - Destornillador
 - Sierra de Agujos de 1-1/4"
 - Sierra Sable (si se requiere recorte de la superficie del mostrador)




Drop in side:
1. Select the drop-in kitchen sink template that applies to the model sink you are installing. Cut out the inside of the template and discard the cutout portion. Locate the template front to rear and right to left on the countertop so the bowl will not interfere with the cabinets below. Attach the template to the countertop with masking tape and draw a pencil line around the inside of the template. Discard the template.


Or
Invert sink and position onto the countertop. Locate sink front to rear and right to left so the bowl will not interfere with the cabinets below. Trace a pencil line around the outside edge of the sink and remove the sink from the countertop. Measure in 3/8" (10mm) from the initial sink outline and draw a second line inside the first. Draw a 1-1/2" radius at each corner. The second interior line will be your cut out line.

El lado de sobreponer:
1. Seleccione la plantilla de la tarja de cocina de sobreponer que aplica al modelo que se está instalando. Corte la parte interior de la plantilla y deshágase de la parte cortada. Ubique la platilla de frente a atrás y de derecha a izquierda en el mostrador para que la tarja no interfiera los armarios de abajo. Amarre la plantilla al mostrador con la cinta adhesiva protectora y dibuje una línea con lápiz por el interior de la plantilla. Deshágase de la parte cortada.

O
Invierta la tarja de cocina y colóquela en el mostrador. Ubique la tarja de cocina de frente para atrás para que no interfiera los armarios de abajo. Dibuje una línea con lápiz alrededor del borde exterior de la tarja y quite la tarja del mostrador. Mida desde el interior 3/8" del contorno inicial y dibuje una segunda línea dentro de la primera. Dibuje un radio de 1-1/2" en cada esquina. La segunda línea interior será la línea para cortar.

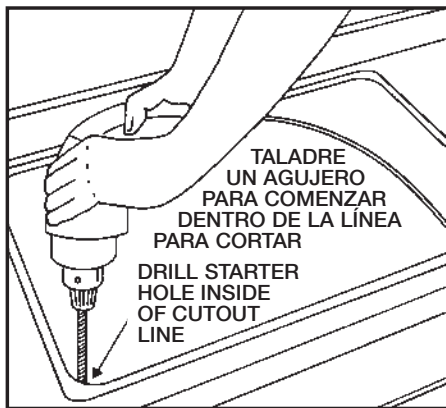


2. Drill starter hole inside of cutout line.

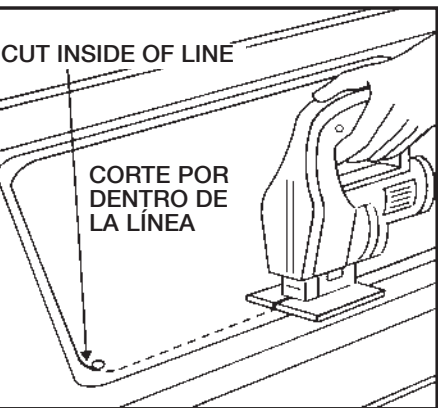

3. Using a saber saw, cut inside of cutout line. Trial fit sink to check proper fit.



4. Identify fixture hole locations. Drill a starter hole from reverse side. Working from the top side as illustrated, position a hole saw on the starter hole and drill to complete the fixture hole. To cool the hole saw and sink surface, a light application of water, periodically, is necessary. Attach faucet, drain, and accessories according to manufacturer's instructions.

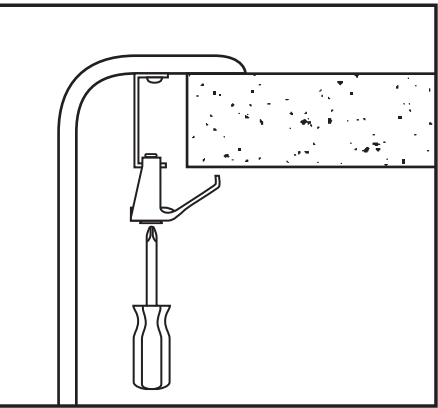

Visit swanstone.com for care & cleaning instructions

FORM #775-06-12



QUSB-3322

QURC-3322

QUED-3322

QUDB-3322

QULD-3322

QUSQ-3322

Undermount Templates

Plantillas de Tipo Fijado Abajo



This template drawing accommodates the Overlap mounting option only.

Esta plantilla únicamente pertenece a la opción de Colocar Parcialmente Unos Sobre Otros.

These templates are for undermount installation only of models: QUDB-3322, QUED-3322, QURC-3322, QULD-3322, QUSB-3322, QUSQ-3022.

This procedure should be performed by a professional fabricator. If an undermount kitchen sink installation is desired, the template is to be used by a professional fabricator.


Estas plantillas son para la instalación del tipo fijado abajo solamente de los modelos: QUDB-3322, QUED-3322, QURC-3322, QULD-3322, QUSB-3322, QUSQ-3322.

Solo un fabricante profesional debe hacer este procedimiento. Si se desea una tarja de cocina de tipo fijado abajo, solo un fabricante profesional debe utilizar la plantilla.

Visit swanstone.com for care & cleaning instructions


FORM #775-06-12

Undermount Installation Instructions

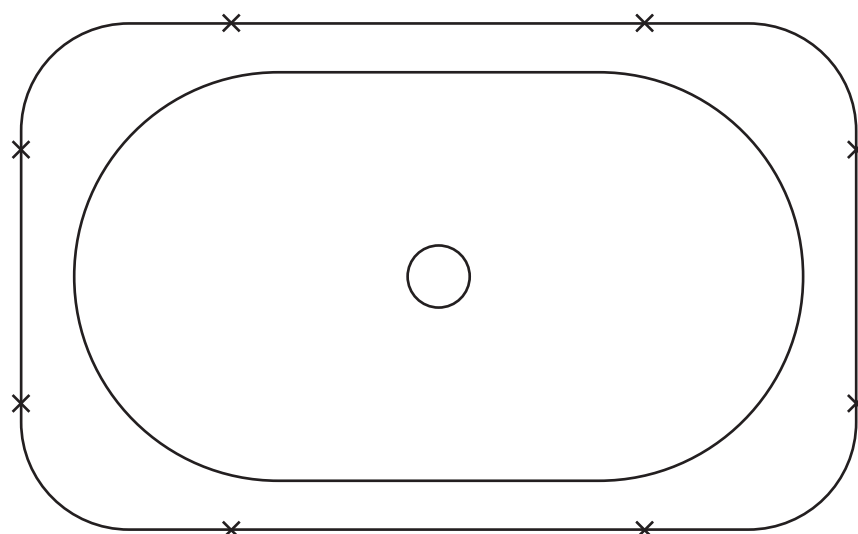


1. On underside of top locate eight points around bowl approximately 1" from bowl flange. For a tighter installation, the use of all eight clips is recommended.
2. Drill eight holes 1/4" x 1/4" at marked locations for brass inserts.
3. Tap in brass inserts, slotted end first.
4. Next, with bowl unit face up, clean top of bowl flange and underside of top around cutout with denatured alcohol.

Side View of Countertop

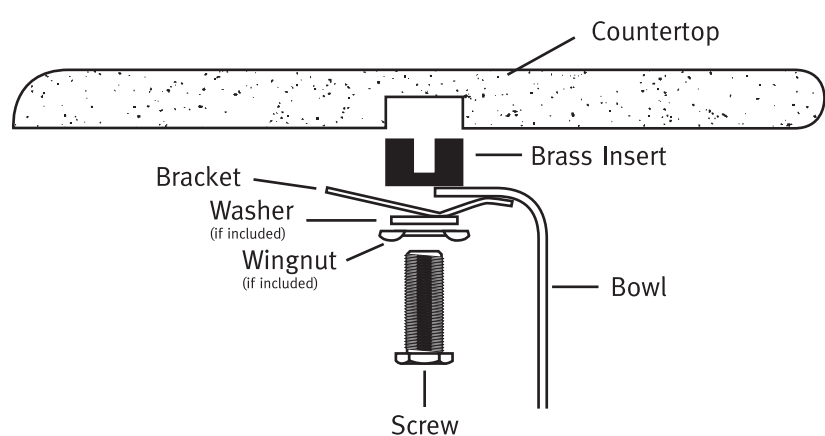


5. Apply a narrow bead of silicone caulk to top inside edge of bowl flange and position bowl.
6. Mount hardware by first threading wing nut (if included) well up on screw near the head. With washer (if included) and slotted clip in place, tighten screw securely to lock in brass insert.
7. When bowl is correctly positioned over cutout, tighten wing nuts to secure bowl.
8. Remove excess sealant from inside lip.

Las Instrucciones para la Instalación de Fijar Abajo

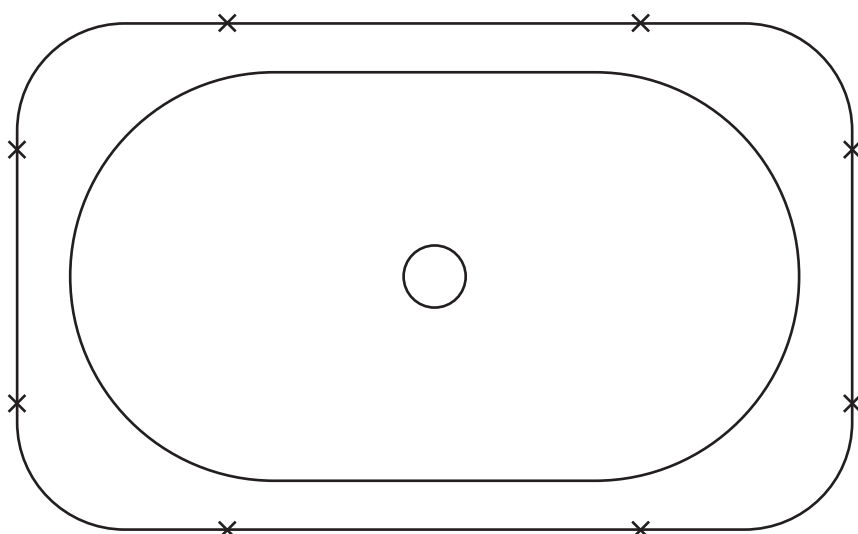

1. En la parte inferior del mostrador, ubique los ocho puntos en los alrededores de la piletta, aproximadamente 1" del reborde de la piletta. Para una instalación más apretada, se recomienda el uso de todas las ocho grapas.
2. Taladre ocho agujeros de 1/4" por 1/4" a los puntos indicados para los entredosos de latón.
3. Golpee suavemente los entredosos de latón, el extremo con ranura primero.
4. Próximo, con la piletta cara arriba, limpie la parte arriba del reborde de la piletta y la parte inferior de la parte arriba alrededor del recortado con el alcohol denaturado.

Side View of Countertop

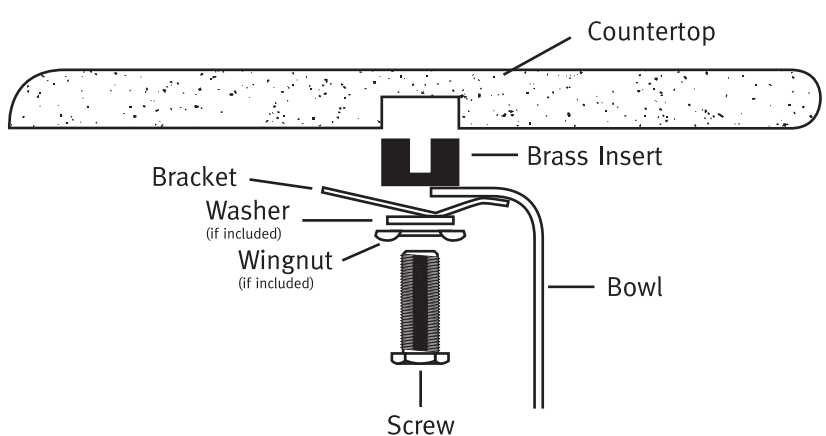

5. Aplique una gota estrecha de calafateo de la silicona al borde interior del reborde de la piletta y coloque la piletta.
6. Fije la ferrrería primero por ensartar la tuerca (si se incluye) bien arriba del tornillo cerca de la cabeza. Con la arendela (si se incluye) y la grapa con ranura en posición, apriete bien el tornillo para dejar encerrado dentro del entredós de latón.
7. Cuando se coloque correctamente la piletta por encima del recortado, apriete las tuercas para sujetar bien la piletta.
8. Quite la silicona excesiva del labio interior.