


*Thank you for your purchase!*

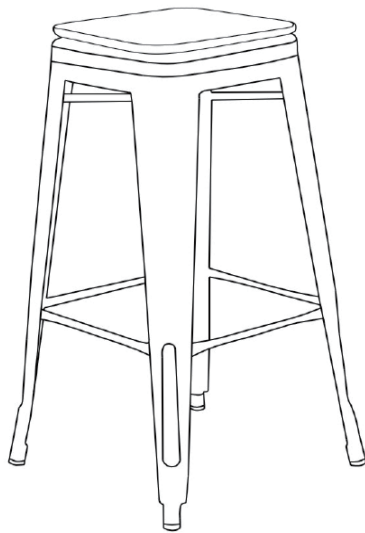

# Metal Dining Stool with Rustic Walnut Wood Seat

## ASSEMBLY INSTRUCTIONS

### Before You Begin:

Please identify all component parts and hardware pieces required before you begin. Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching during assembly.

### Caution:

Tighten all components securely before use. Failure to do so may result in personal injury.

DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

### Warning:

**CHOKING HAZARD** - Small Parts. Adult Assembly Required.

### DO NOT ALLOW CHILDREN TO CLIMB ON FURNITURE

Serious or fatal injuries can occur from furniture tipping over. You must install Tipping Restraint Hardware (where included) to help prevent the unit from tipping and causing accidental injury, instability, death or damage. The tipping restraint is intended only as a safety measure, it is not a substitute for proper adult supervision.






To help prevent furniture from tipping over it must be permanently attached to the wall. Anti-Tip Safety Wall Straps suitable for the unit weight and wall materials (if not included) should be purchased and installed.

Online Assembly Instructions: <http://ftp.flashfurniture.com/AssemblyInstructions/ET-BT3503-18-BL-WD-GG.pdf>

.....  
Customer Service Email: [CustomerExperience@belnick.com](mailto:CustomerExperience@belnick.com) | Phone: 866-552-2810

ET-BT3503-18-BL-WD-GG / ET-BT3503-18-BLK-WD-GG / ET-BT3503-18-ORG-WD-GG / ET-BT3503-18-PR-WD-GG  
ET-BT3503-18-RED-WD-GG / ET-BT3503-18-SIL-WD-GG / ET-BT3503-18-TL-WD-GG


## PARTS

<p>Wooden Seat</p> <p>A: </p>	<p>QTY</p> <p>1</p>	<p>Screw</p> <p>C: </p>	<p>QTY</p> <p>2</p>
<p>Mounting Bracket</p> <p>B: </p>	<p>QTY</p> <p>1</p>	<p>Allen Wrench</p> <p>D: </p>	<p>QTY</p> <p>1</p>
<p>Stool</p> <p>C: </p>			


## STEP 1

**STEP 1A:** Place Wooden Seat (Part A) face down on a clean, smooth surface. Turn Metal Stool (Part C) upside down onto Wooden Seat.

**NOTE:** Ensure pre-drilled holes on the underside of Wooden Seat are visible through the stool seat hole.

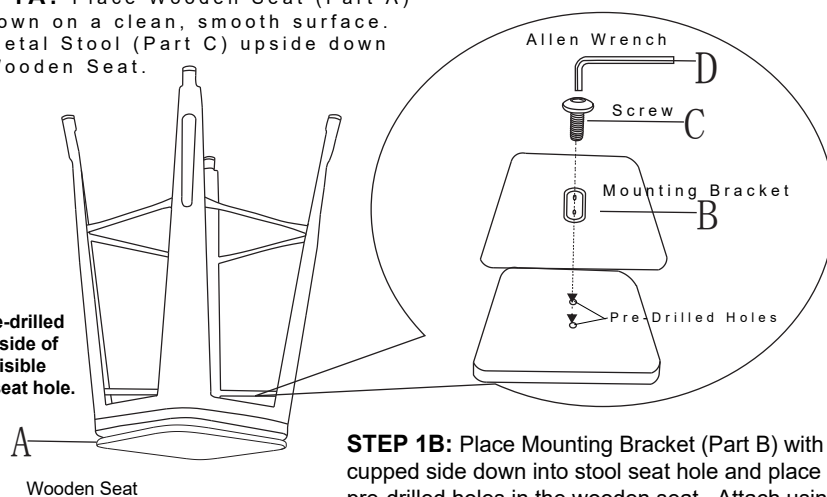

**STEP 1B:** Place Mounting Bracket (Part B) with cupped side down into stool seat hole and place over pre-drilled holes in the wooden seat. Attach using (2) Screws (Part C) and tighten with Allen Wrench (Part D)

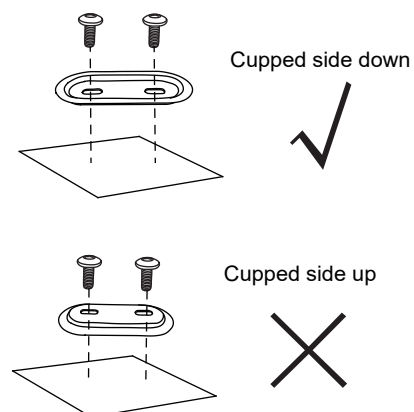

## STEP 2

