


PRODUCT INSTRUCTION

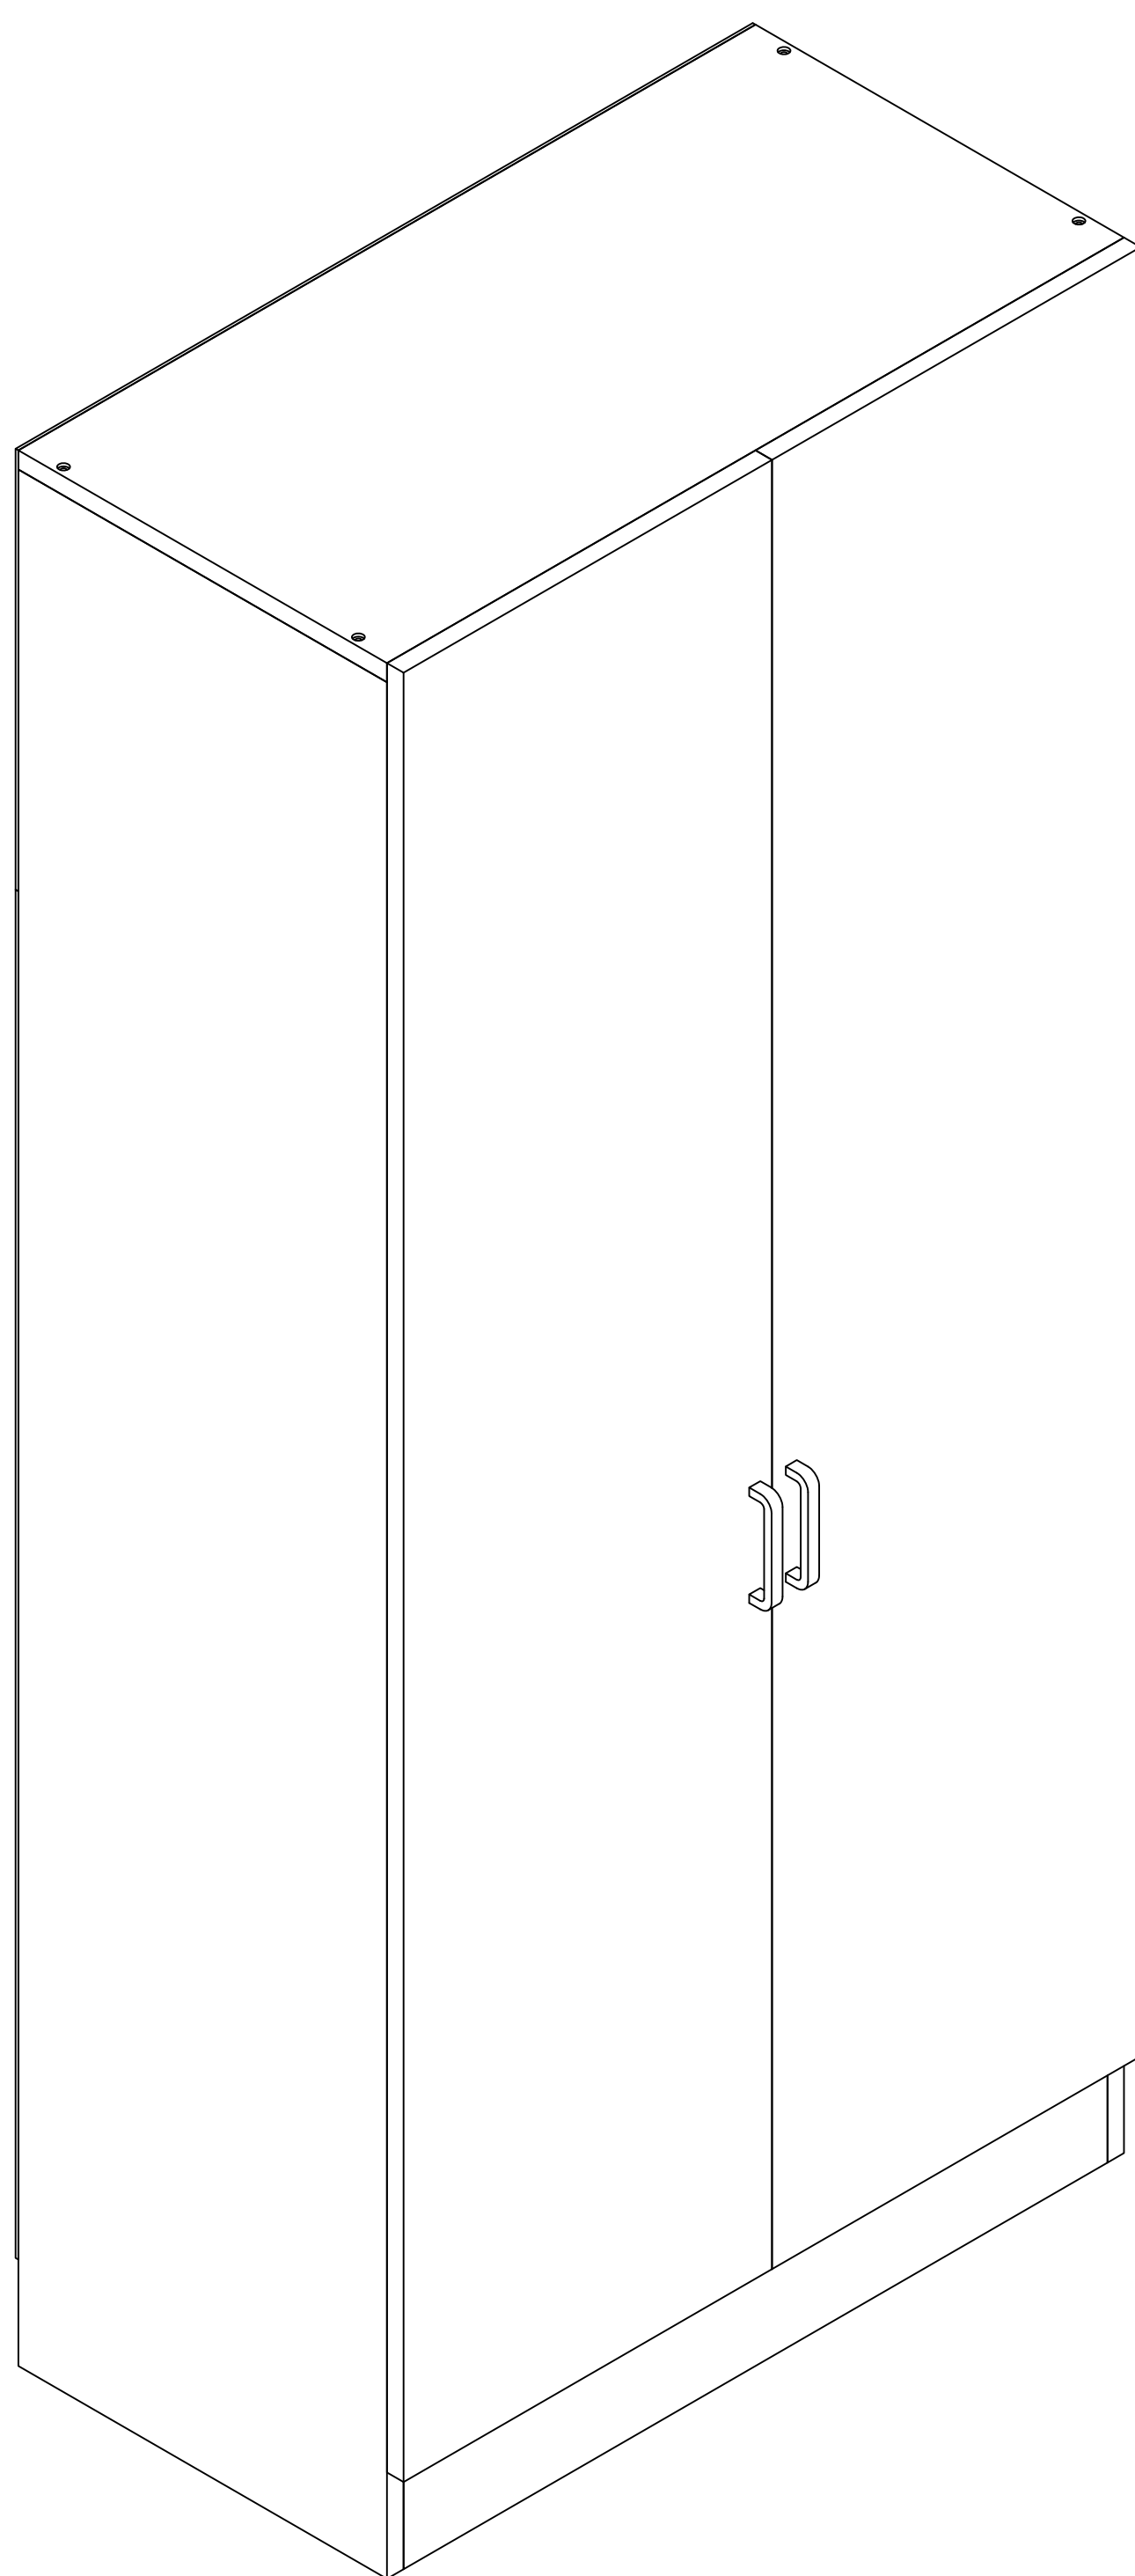

Night Table




WARNING


Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over.

- Place heaviest items in the lowest drawers.
- Do not set TVs or other heavy objects on the top of this product.
- Never allow children to climb or hang on drawer, door, or shelves.
- Never open more than one drawer at a time.
- Use of tip-over restraints, only reduces, but does not eliminate, the risk of tip-over.
- Never open more than one drawer at a time.
- Use of tip-over restraints, only reduces, but does not eliminate, the risk of tip-over.


MAINTENANCE TIPS

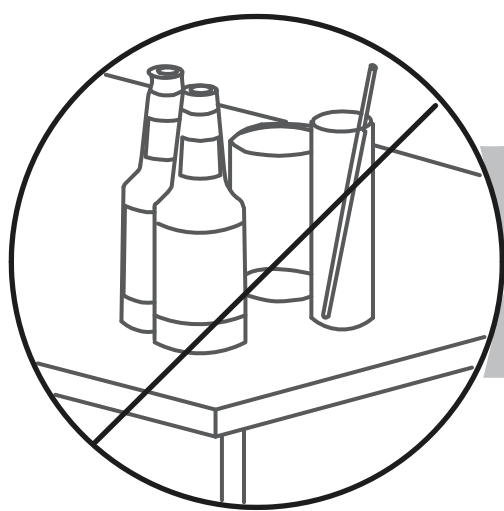


Never let liquids or damp cloths sit on this furniture.

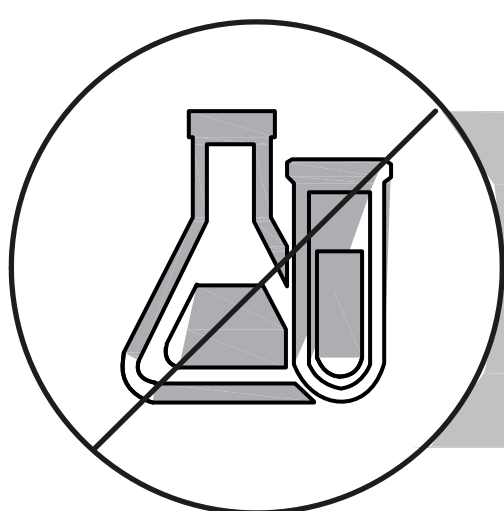


Never use chemical cleaning products. They can damage the finish. For cleaning, use only a slightly damp cloth and wipe dry.

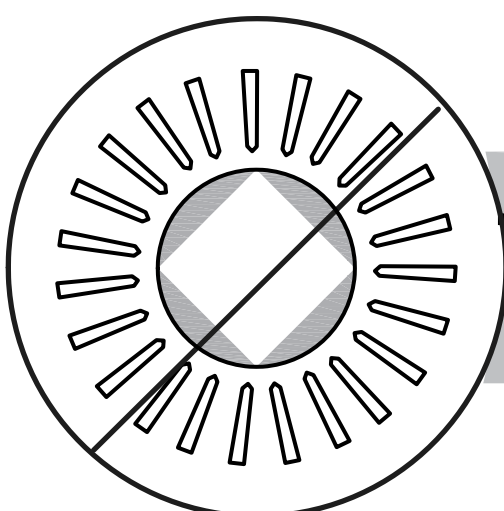

To avoid dulling of finish, do not place furniture in direct sunlight


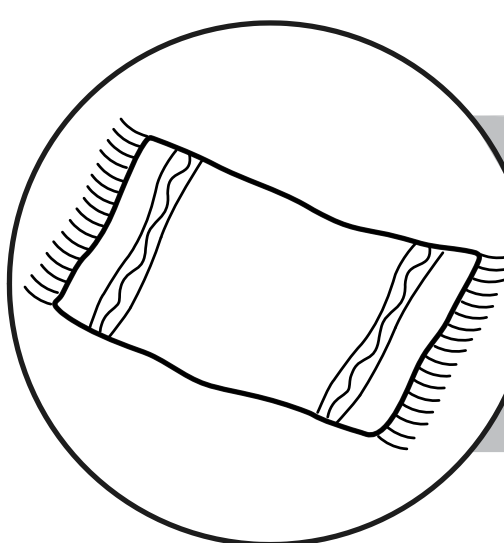


Do not put plastic or rubber rings under appliances. Use cloth or felt protectors.


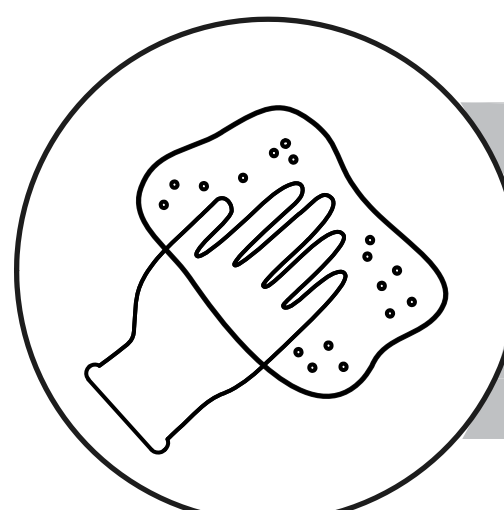


To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth.




Tools Required For Assembly

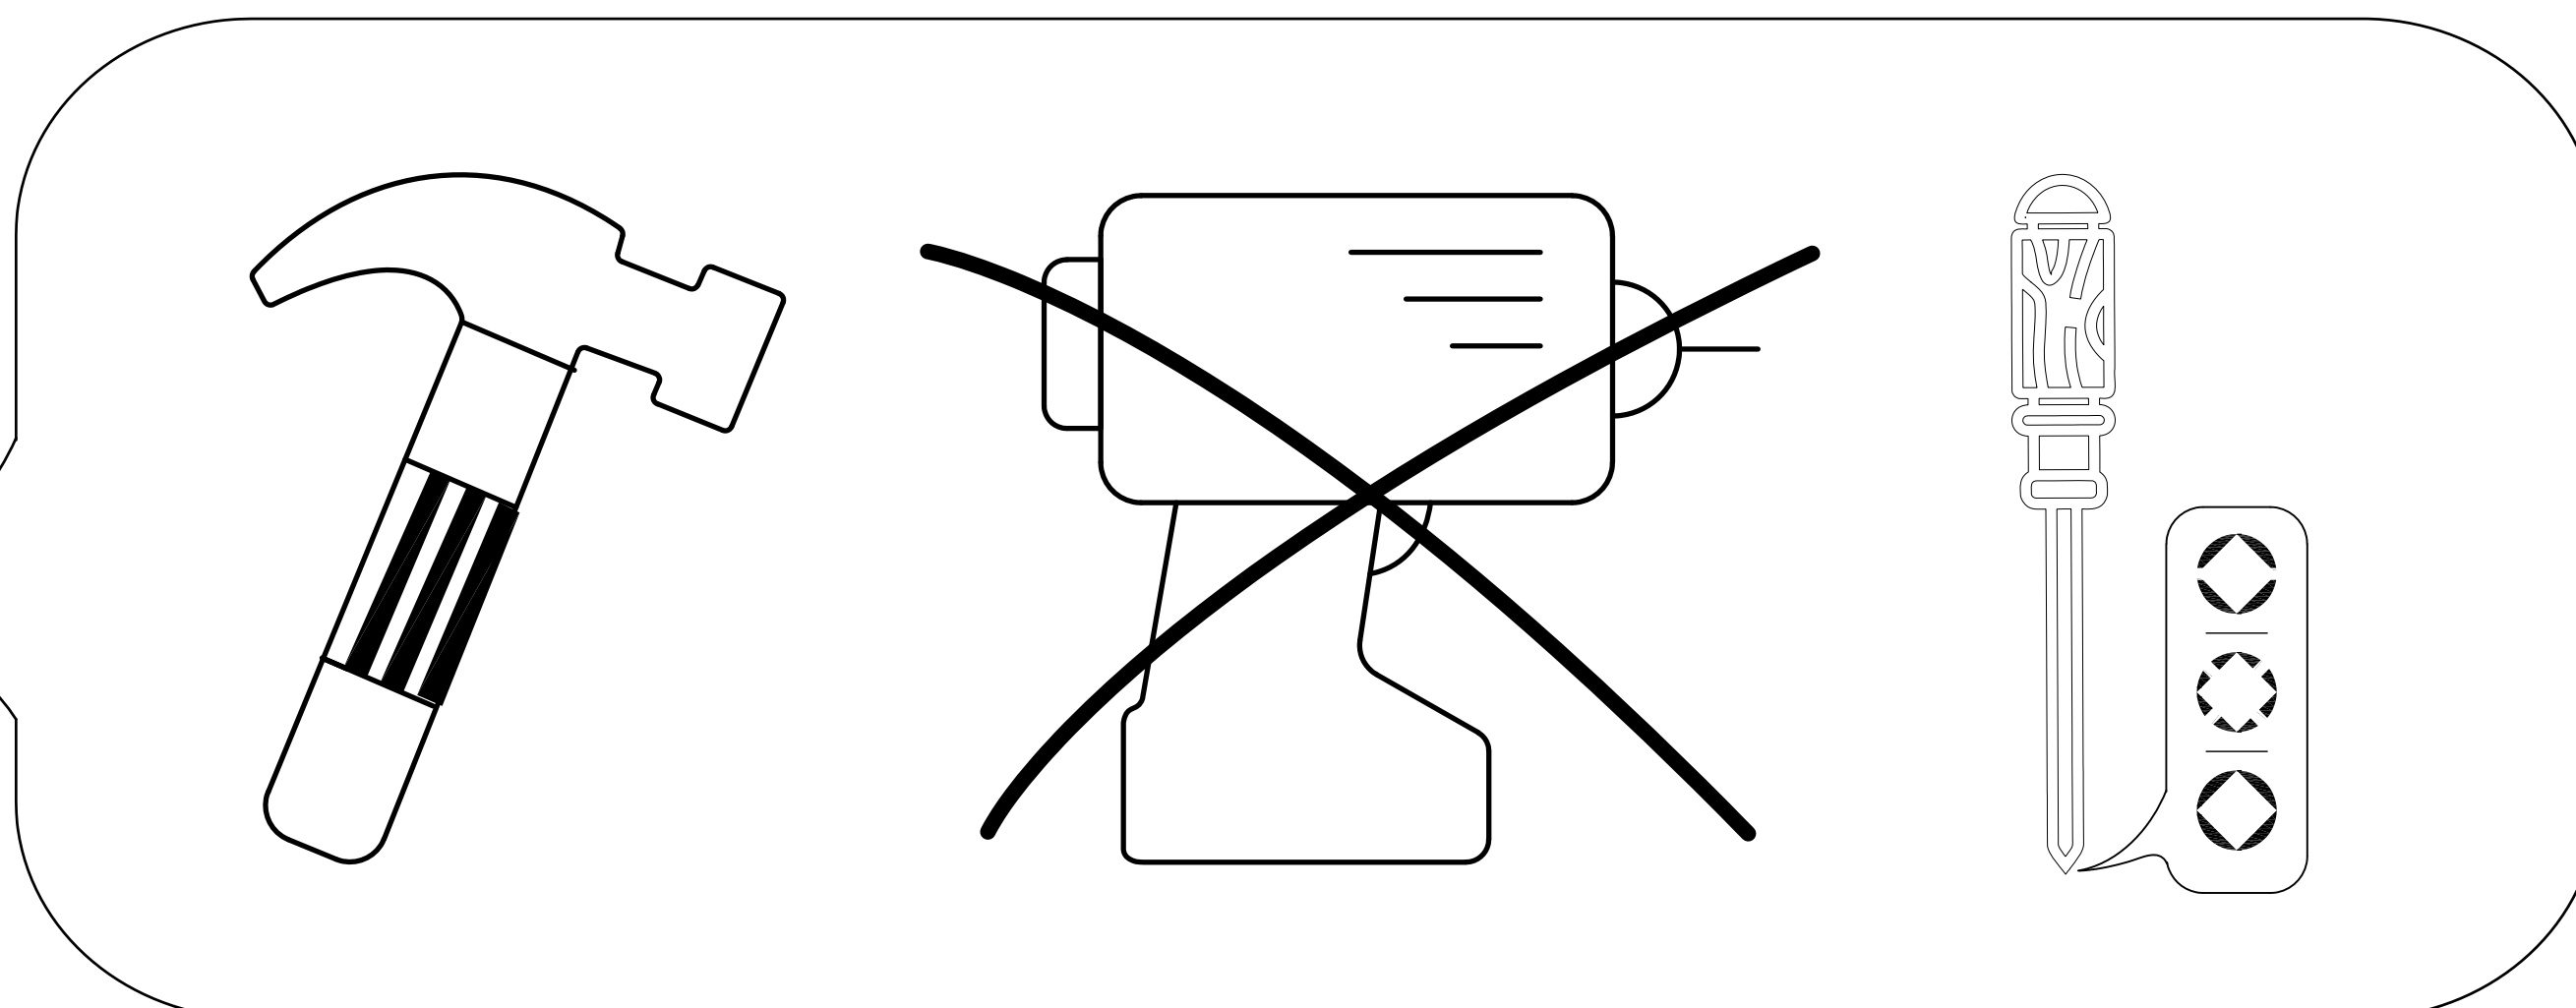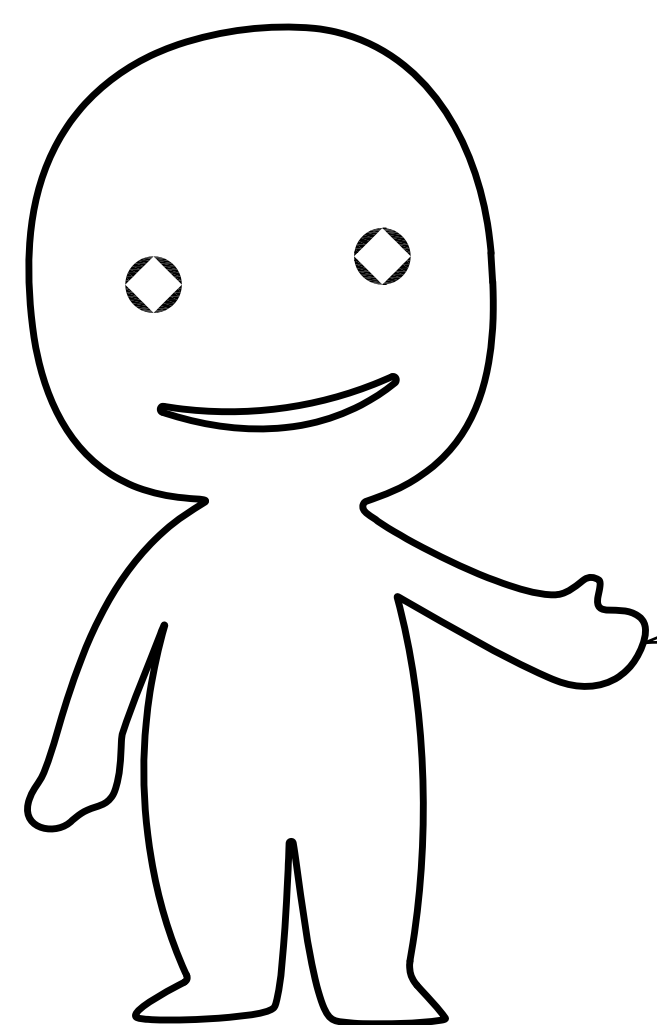

Need Two or More People To Complete

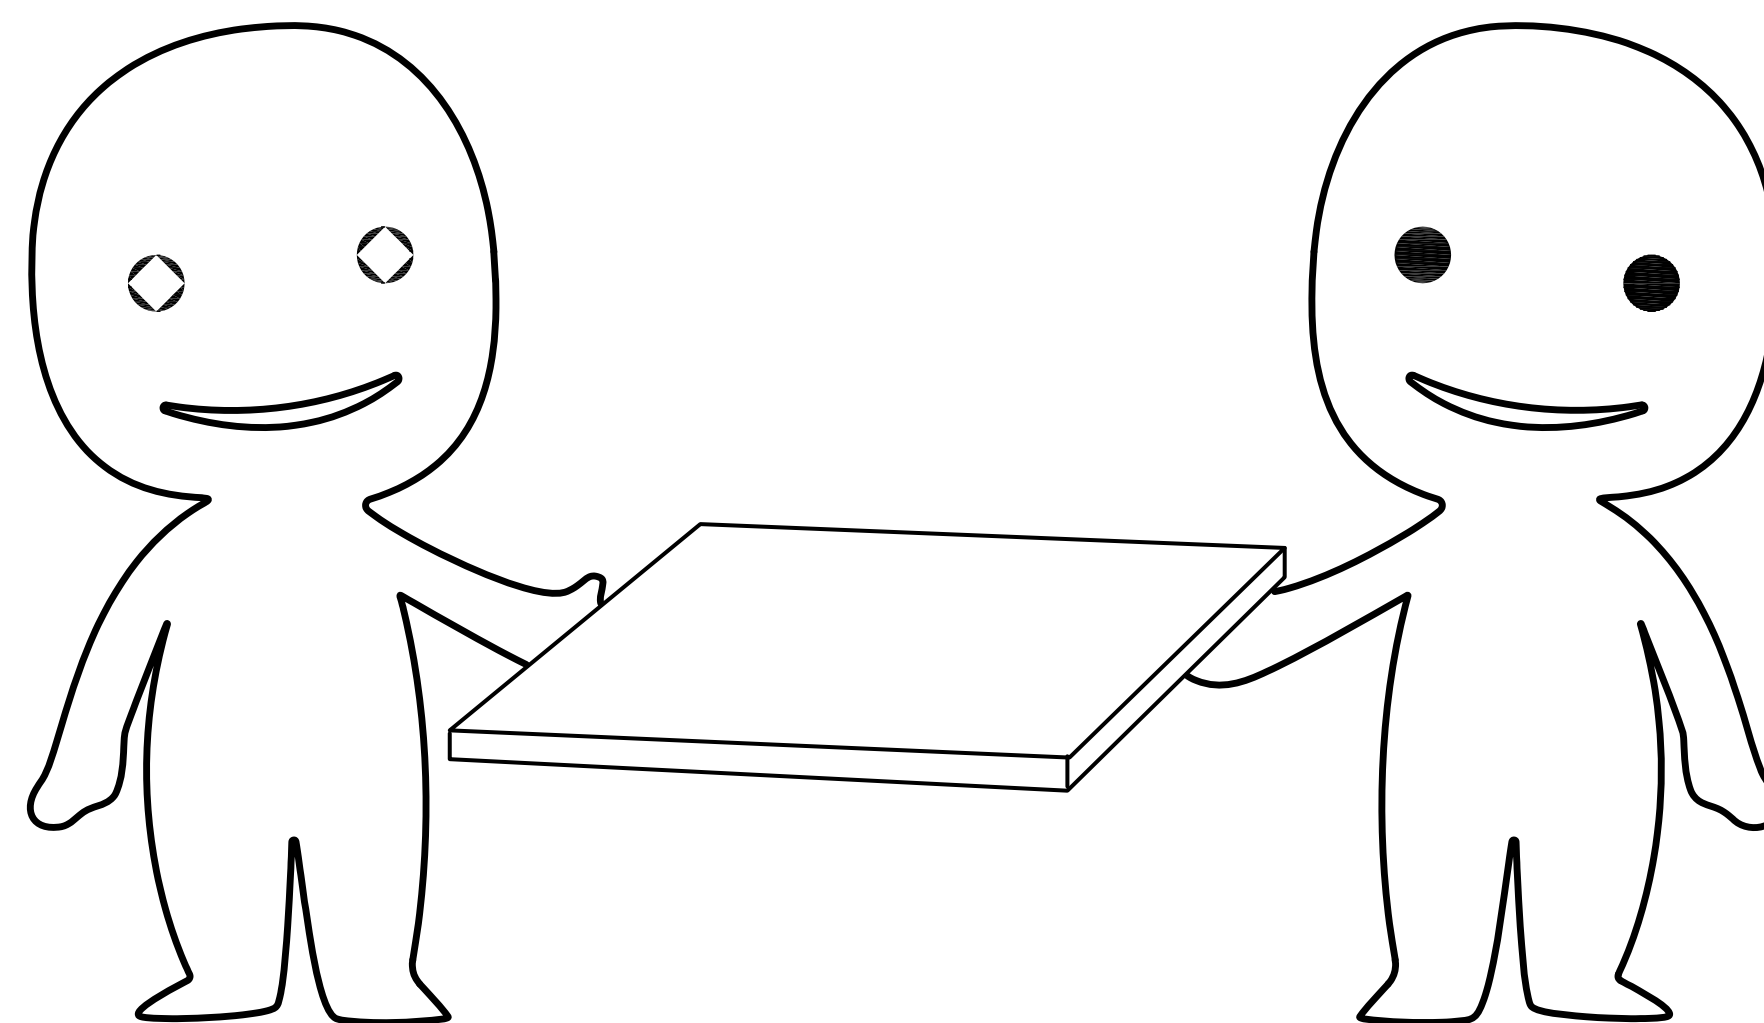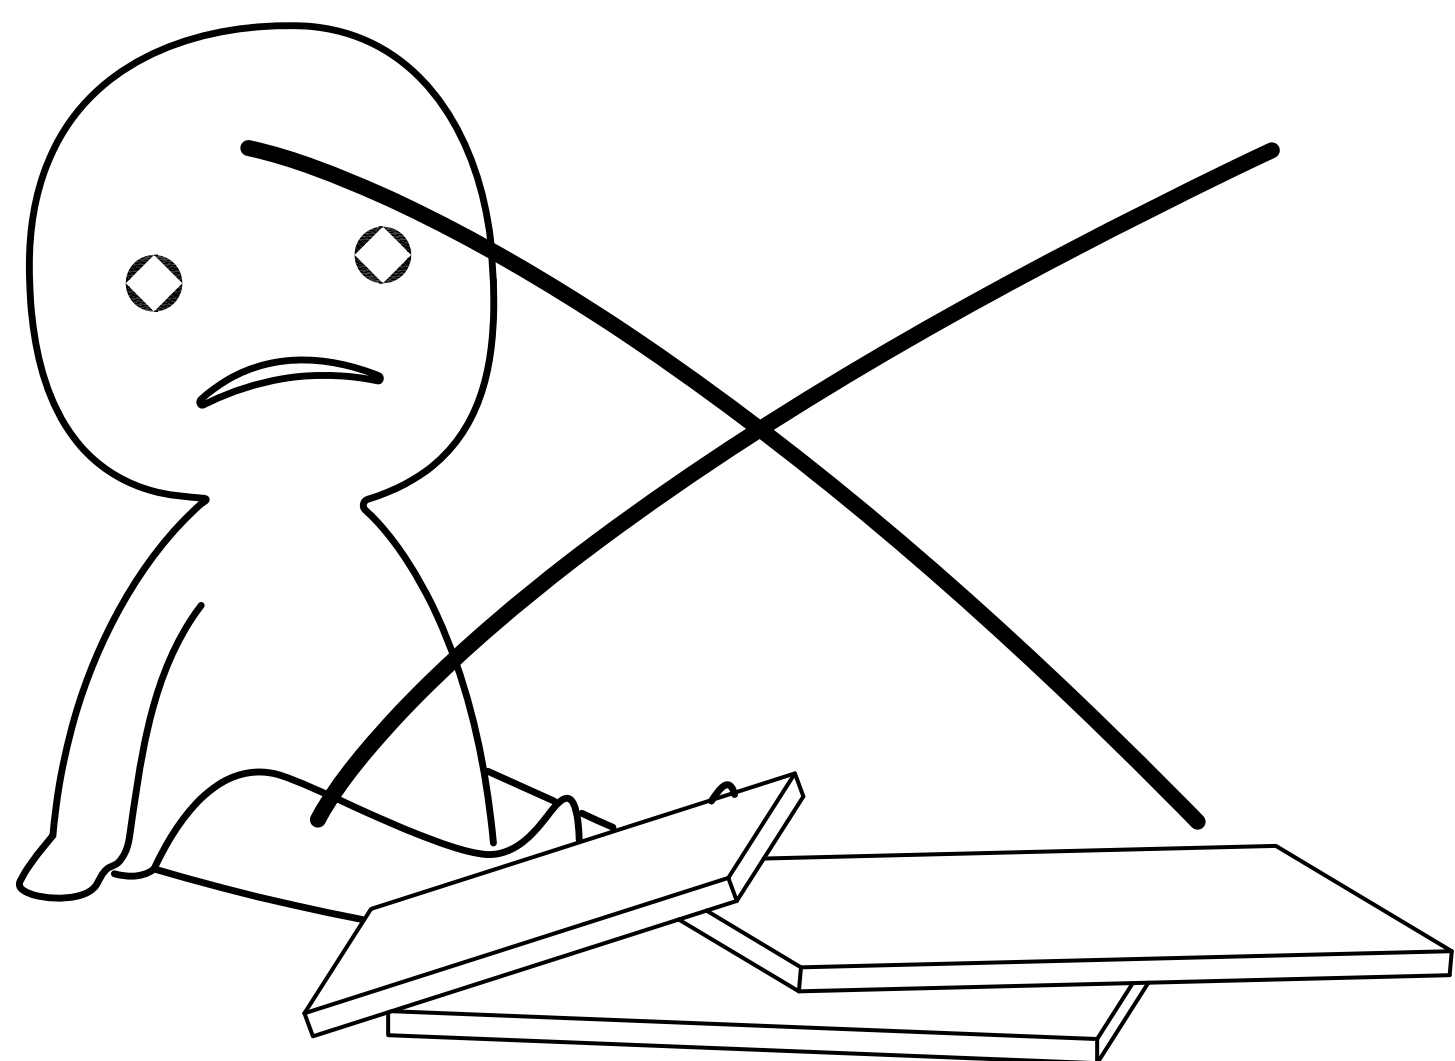


Assemble Item On a Clean Flat Surface

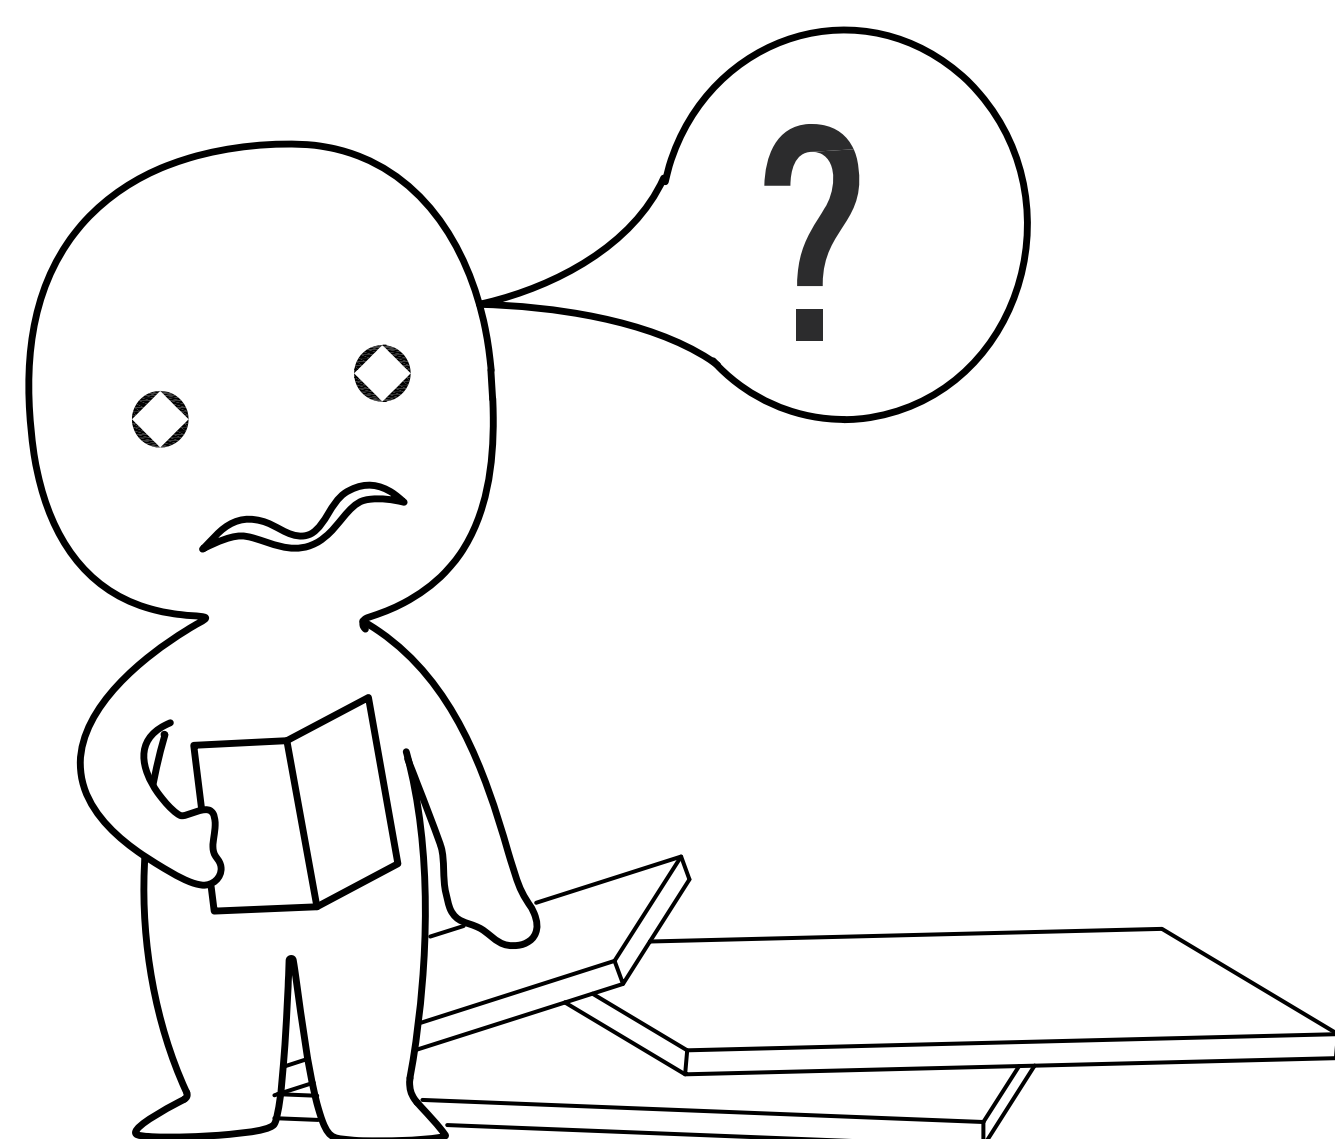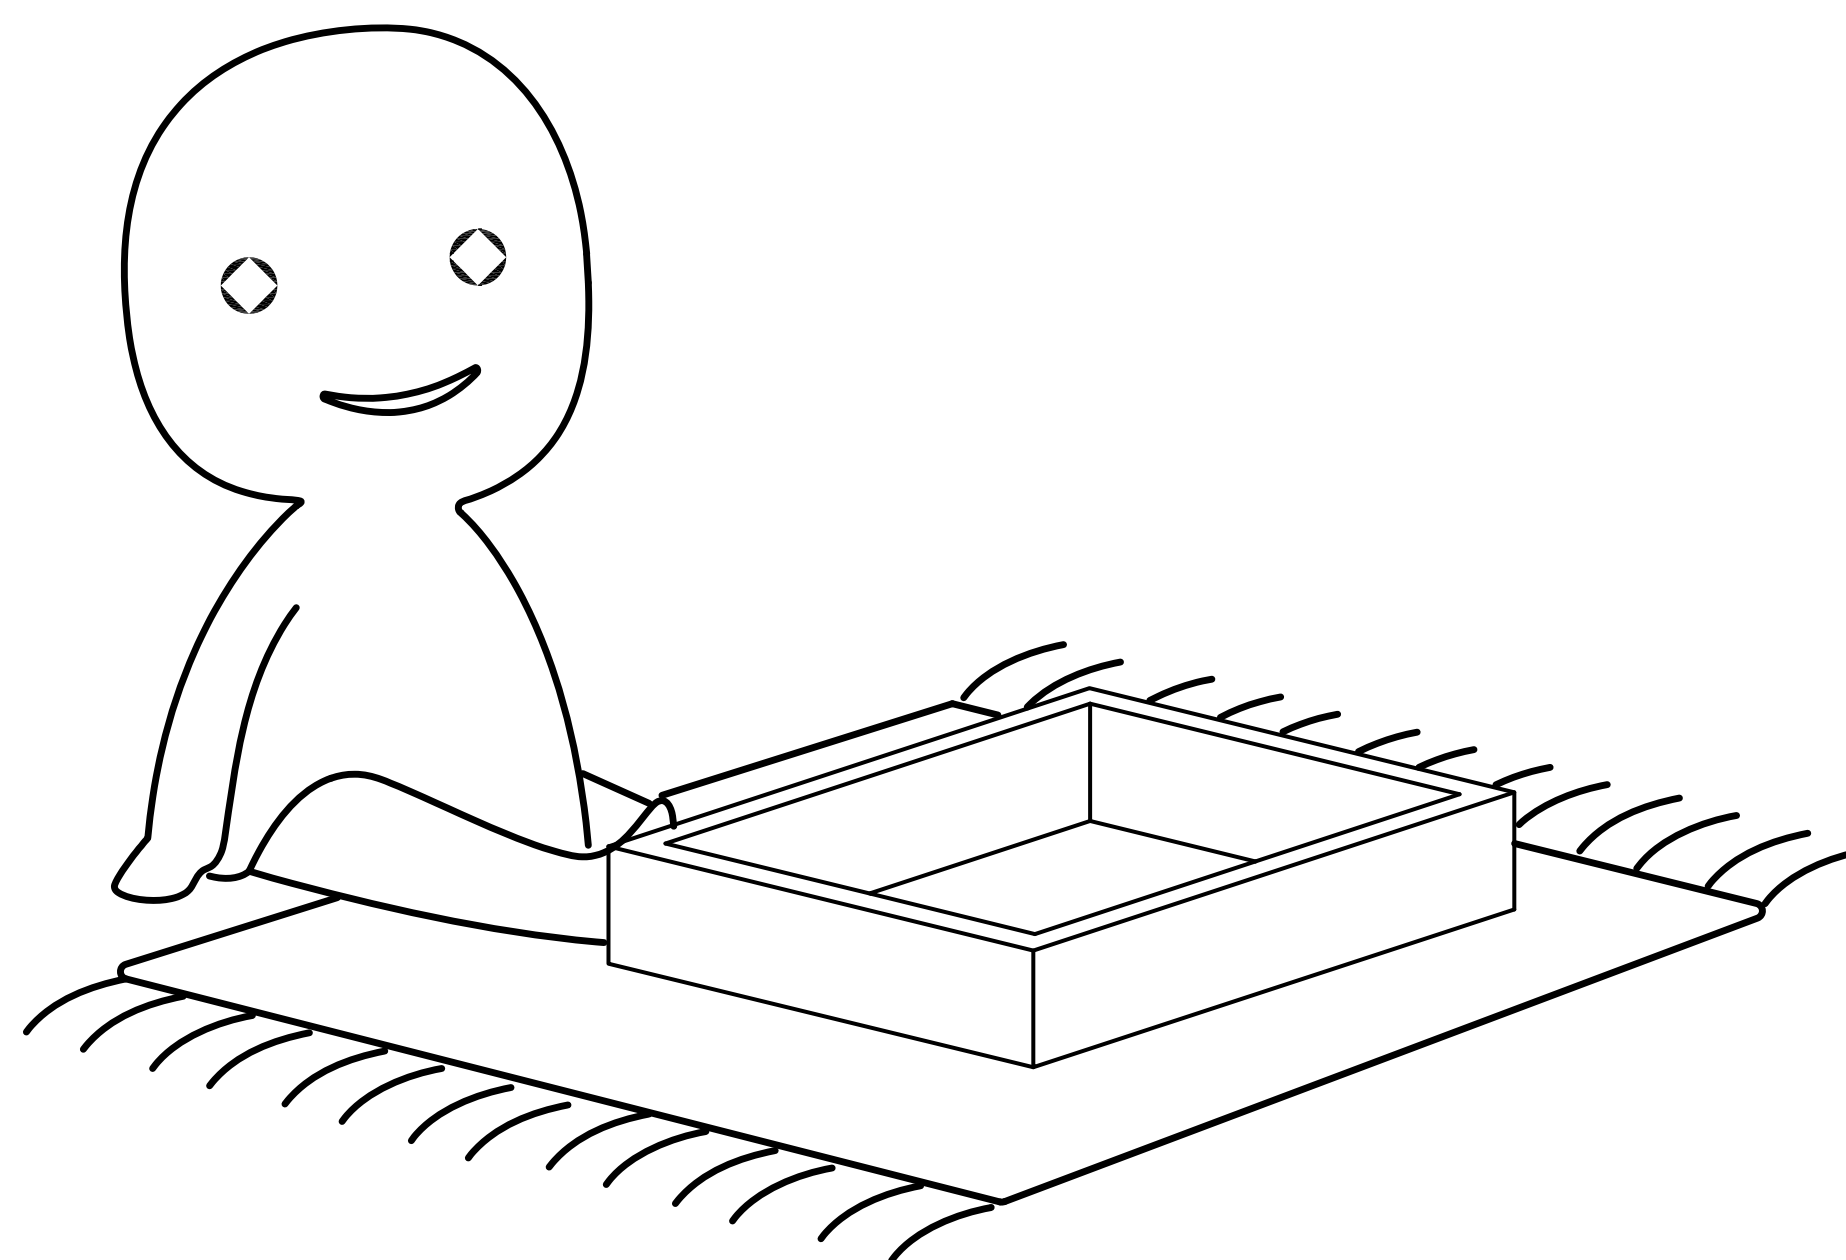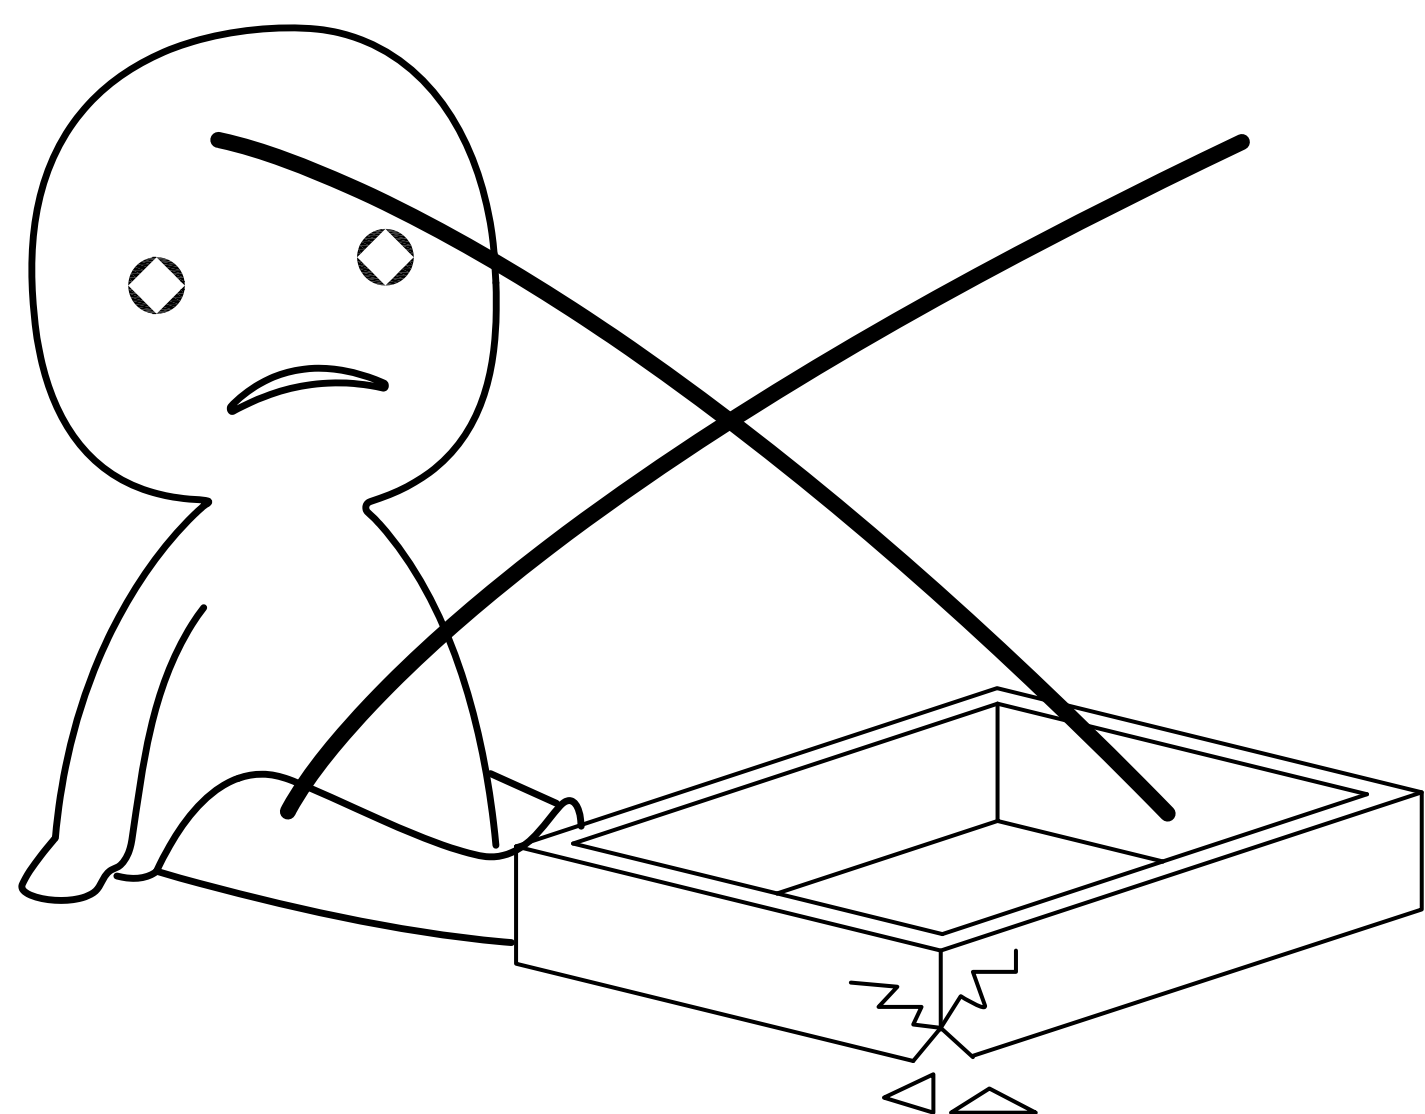

- Please check you have all hardware before assembling.
- Please ensure you have the name of the item and hardware part required and quantity.
- Please contact us by mail, if you have any questions, and we will reply you asap.
- Enjoy your new purchase!


Tips Before You Start

QUICKFIT

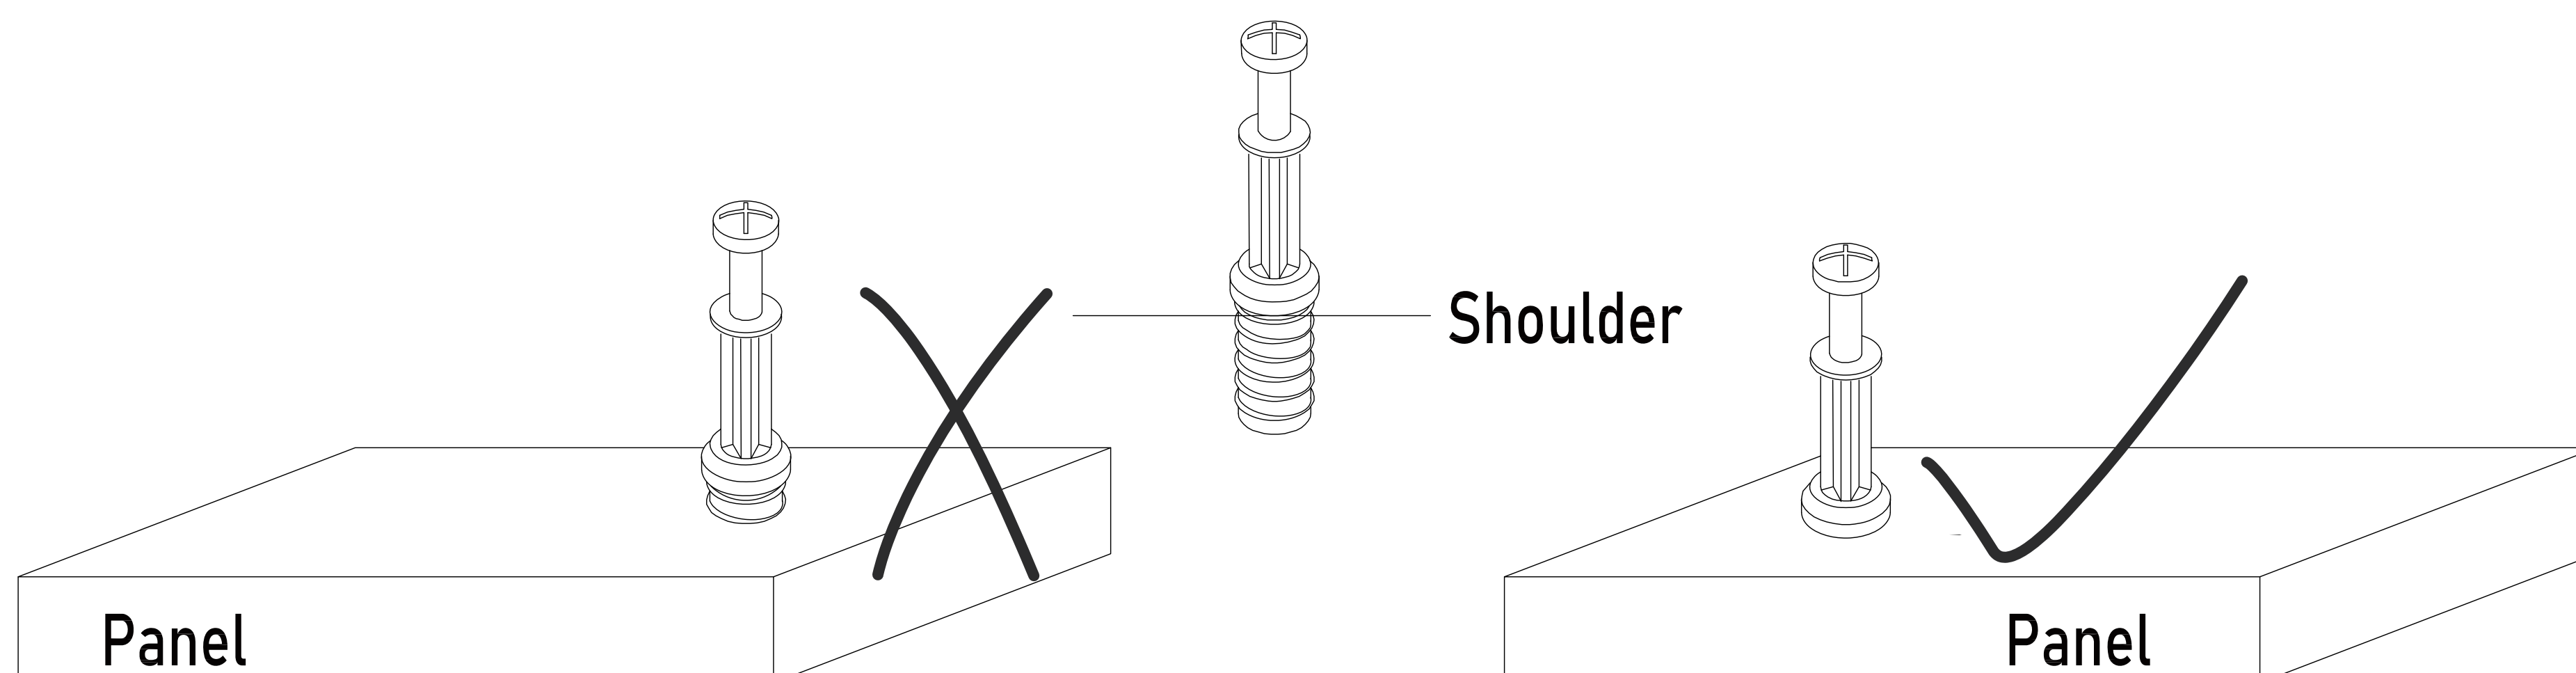


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

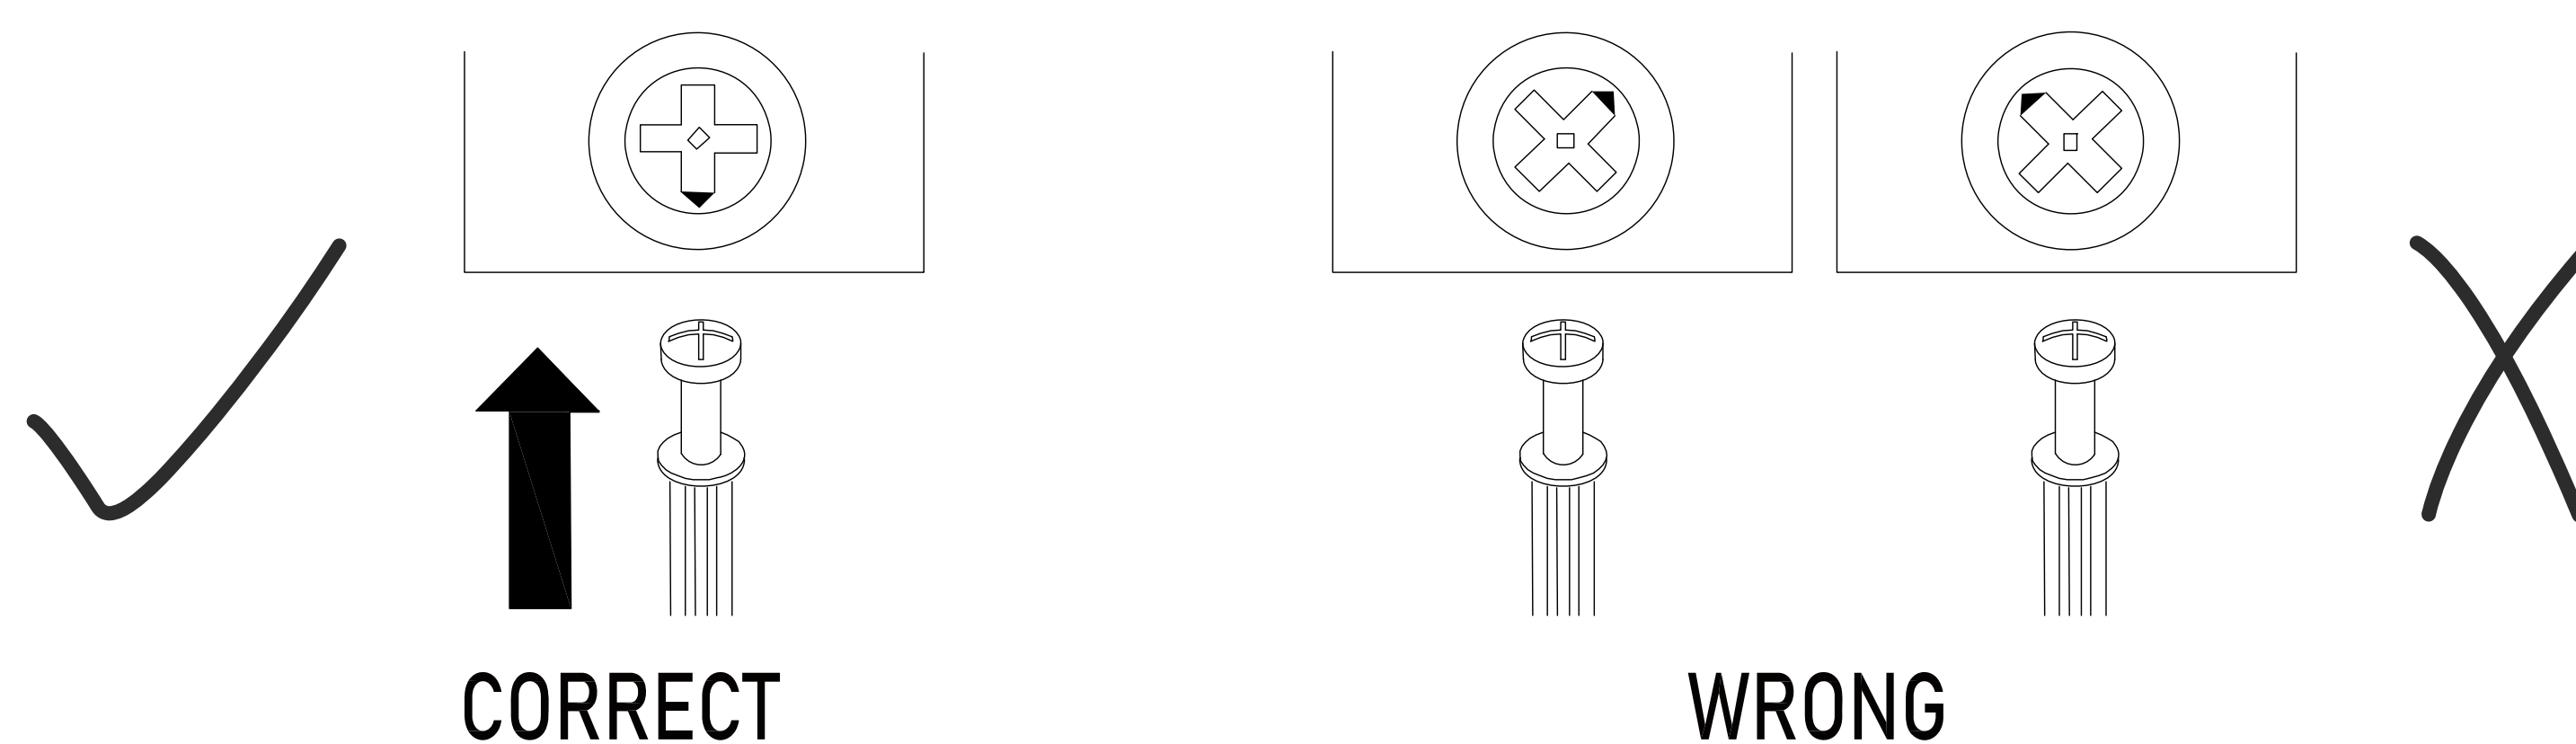












When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

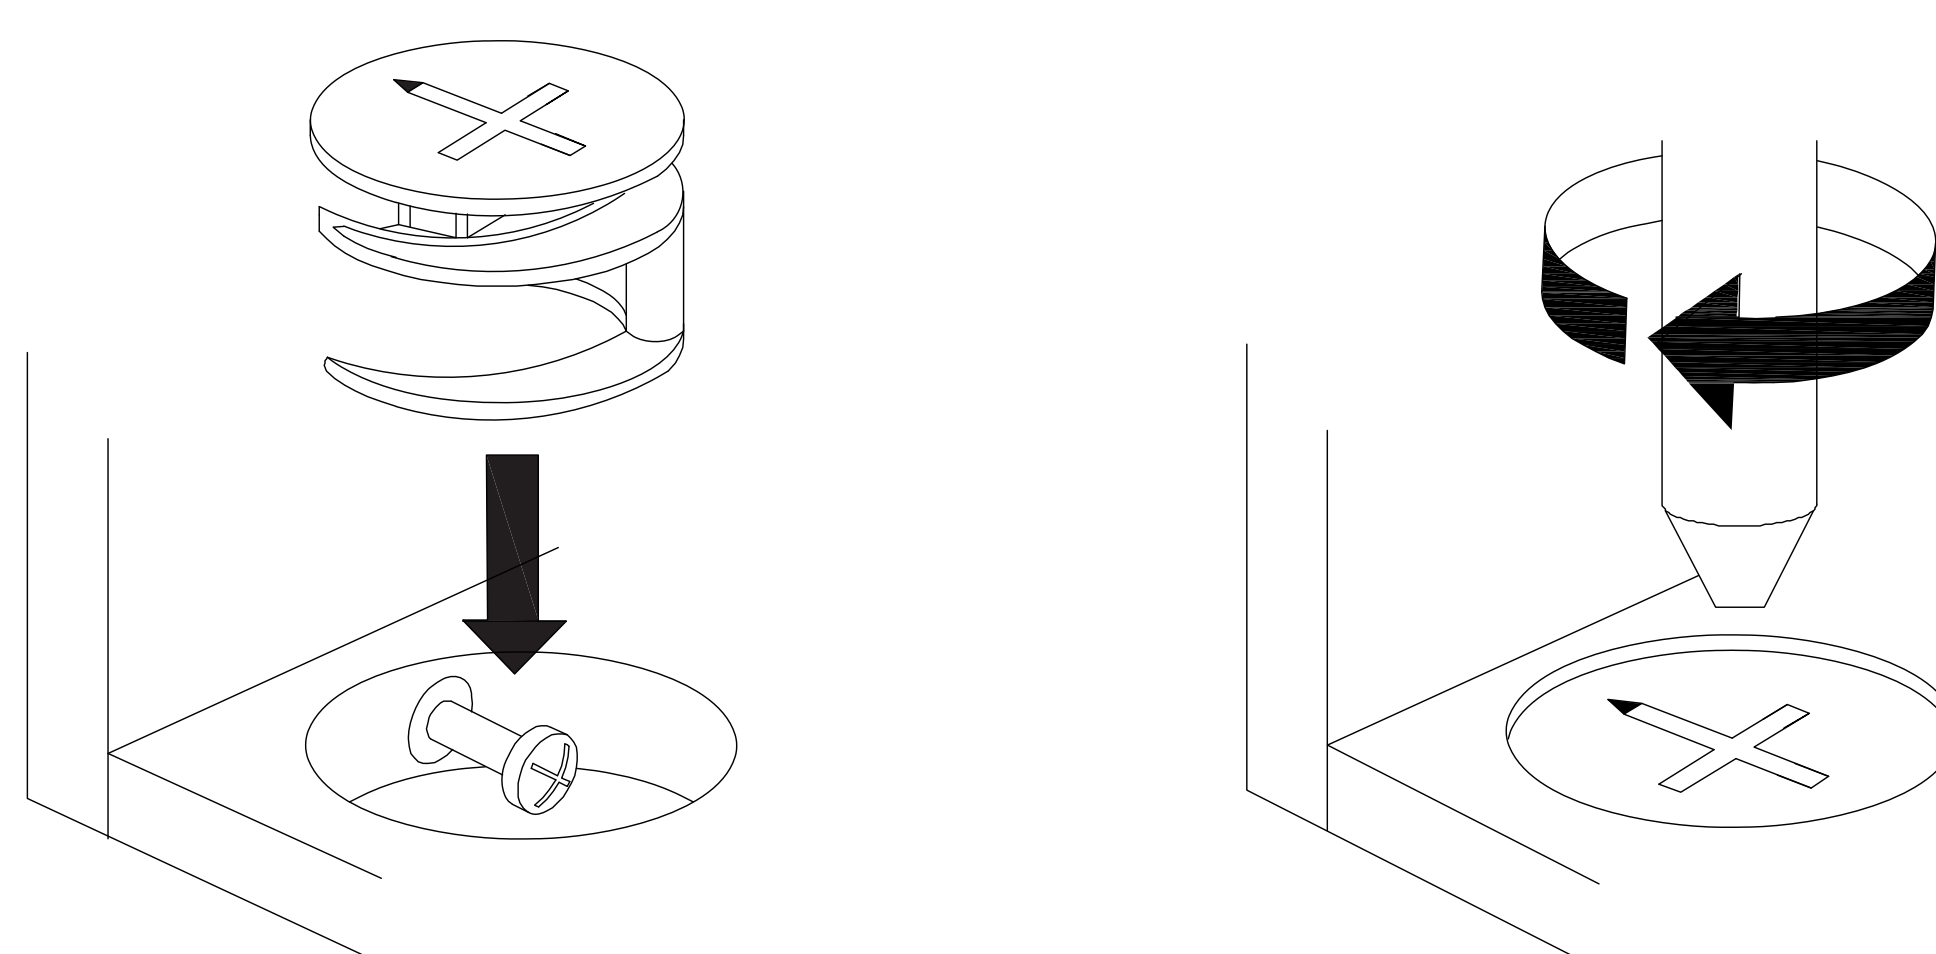


Turn cam lock clockwise to tighten.



Hardware List

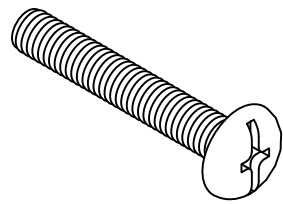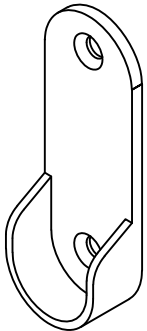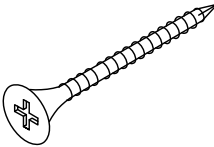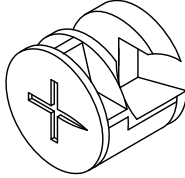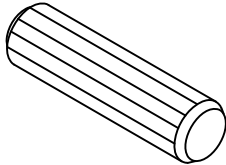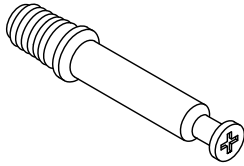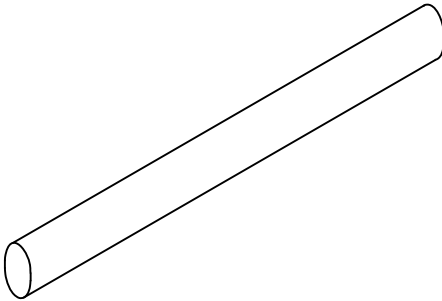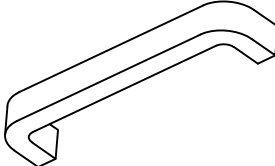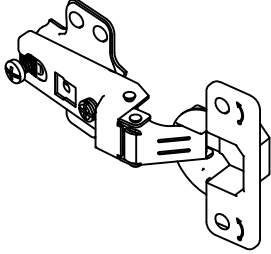					
5 x 1 Screw	100 x 2 Backboard nail	2 x 3 Coat Hanger	4 x 4 Screw	42 x 5 Camlock	80 x 6 Screw
					
30 x 7 Wooden Dowel	42 x 8 Quickfit Screw	1 x 9 Clothes Hanger	2 x 10 Handle	8 x 11 Hinge	




Parts List

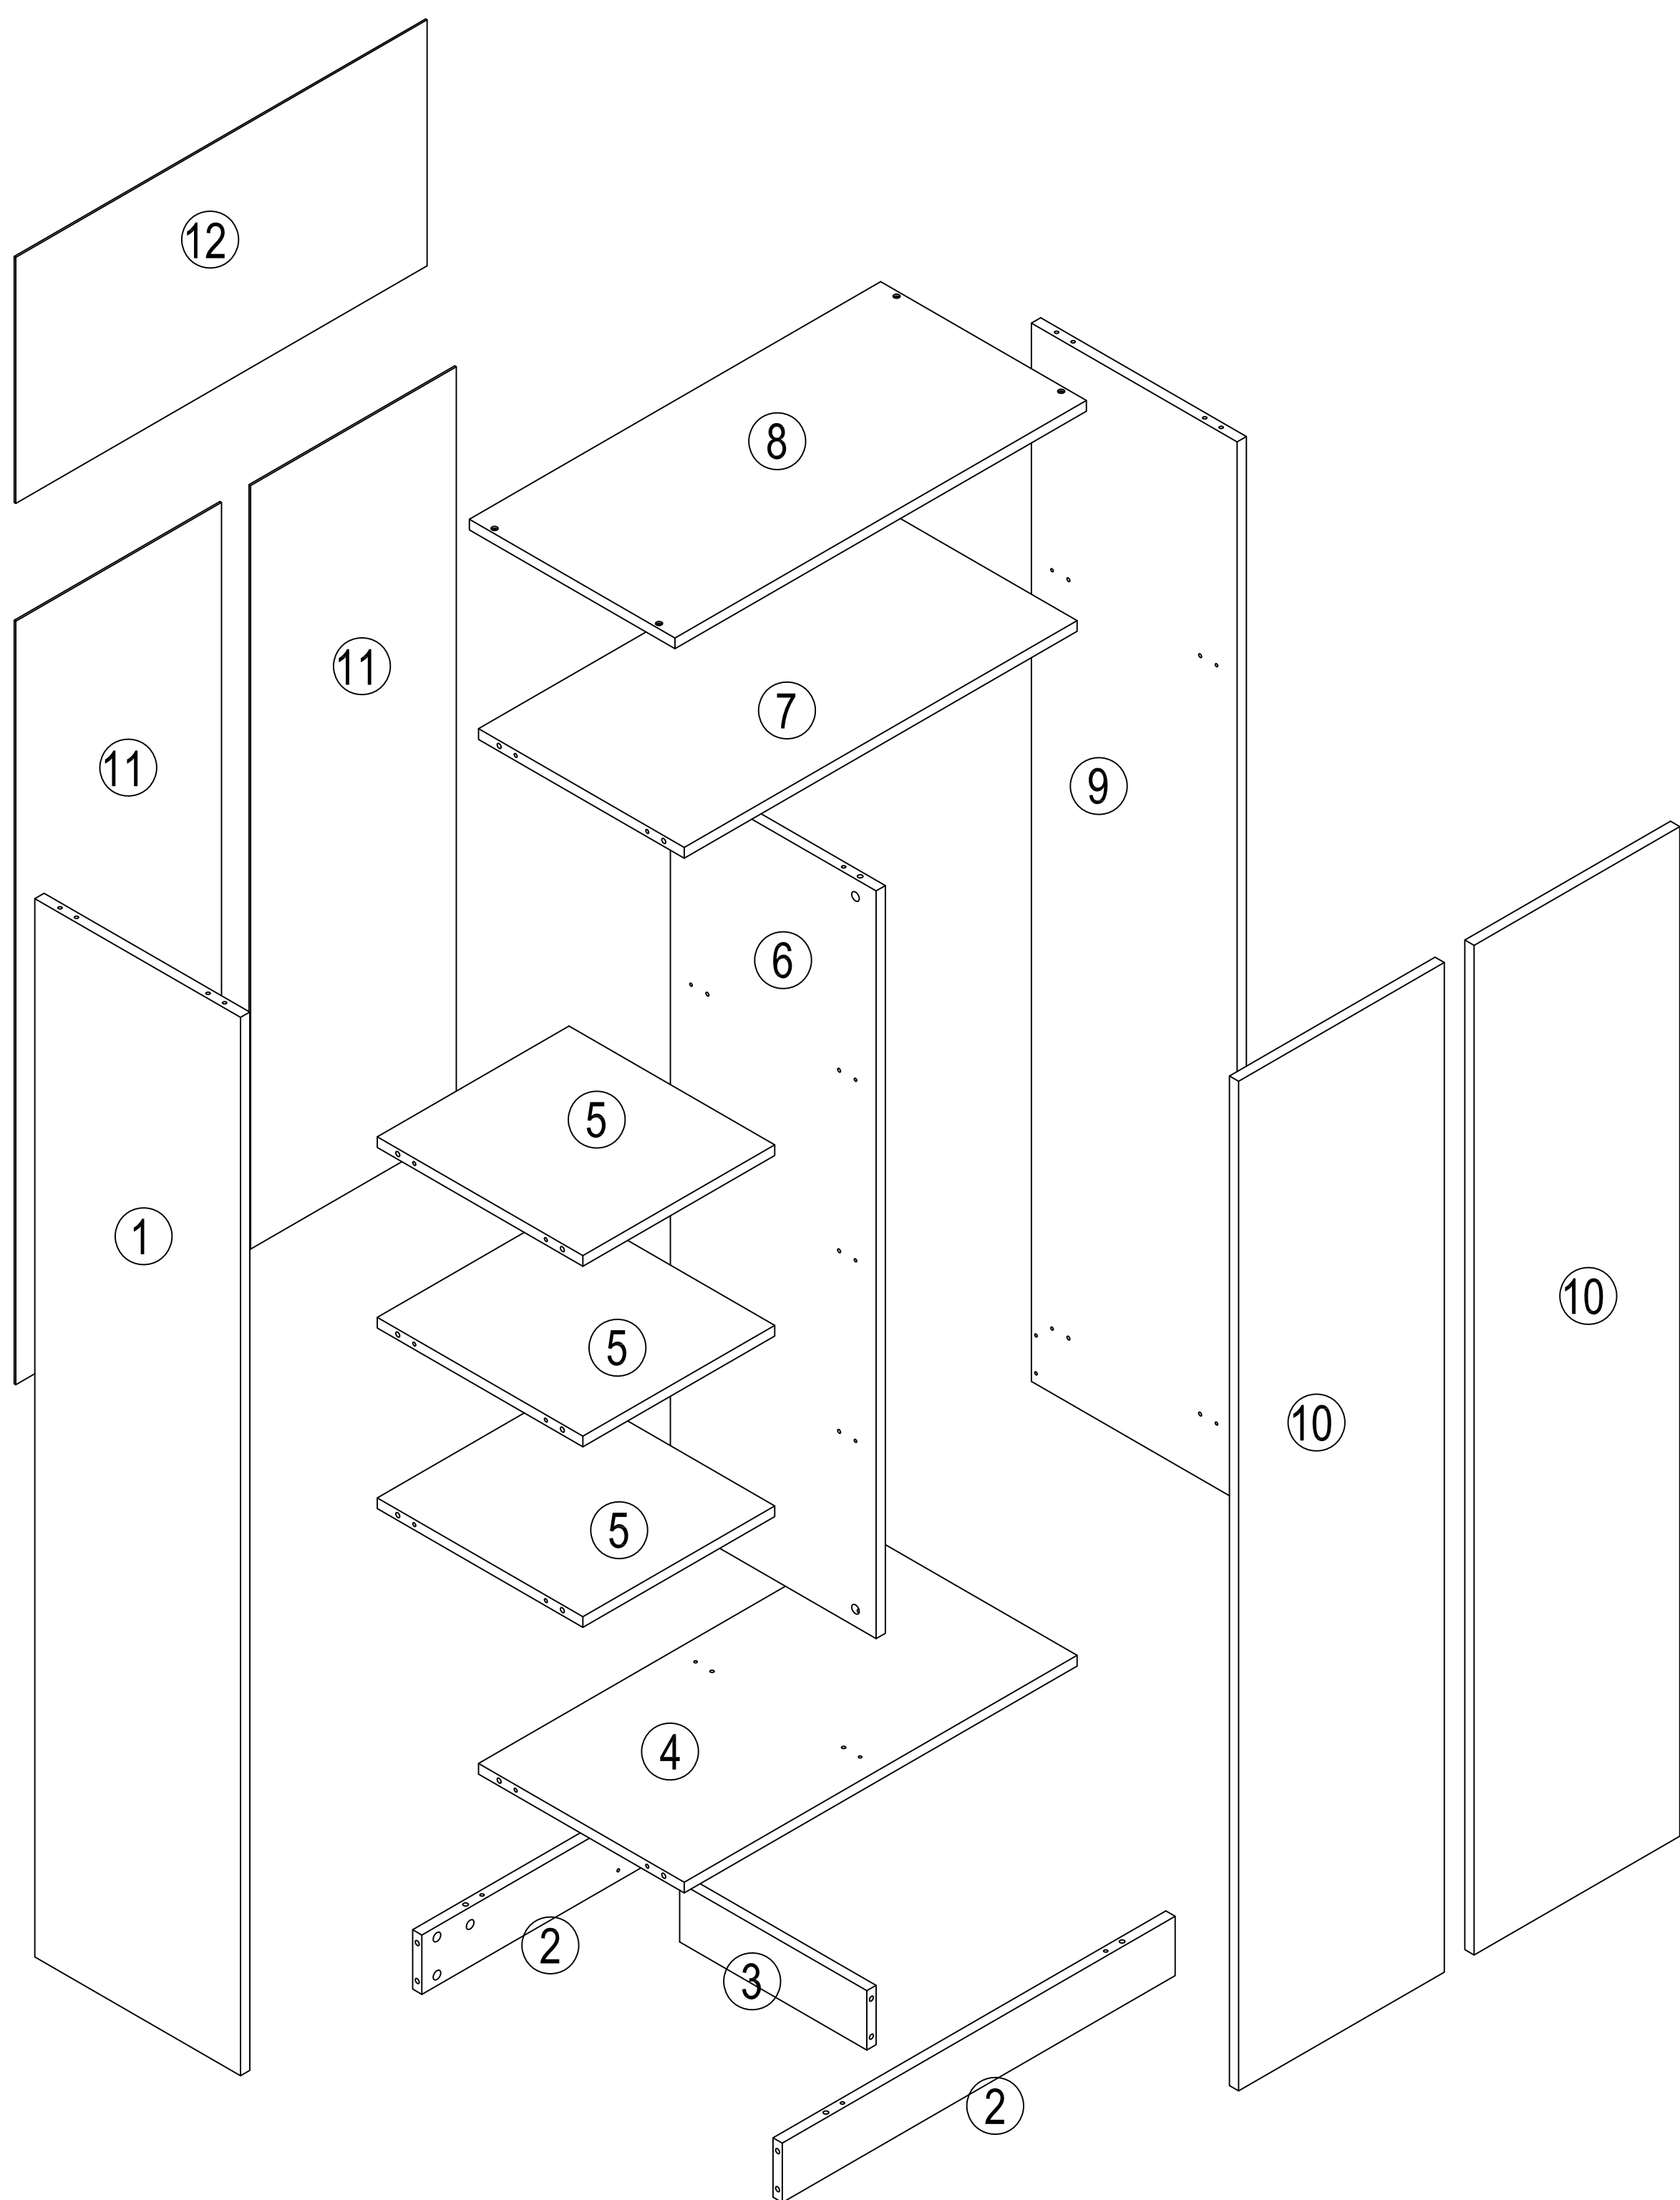




STEP 1

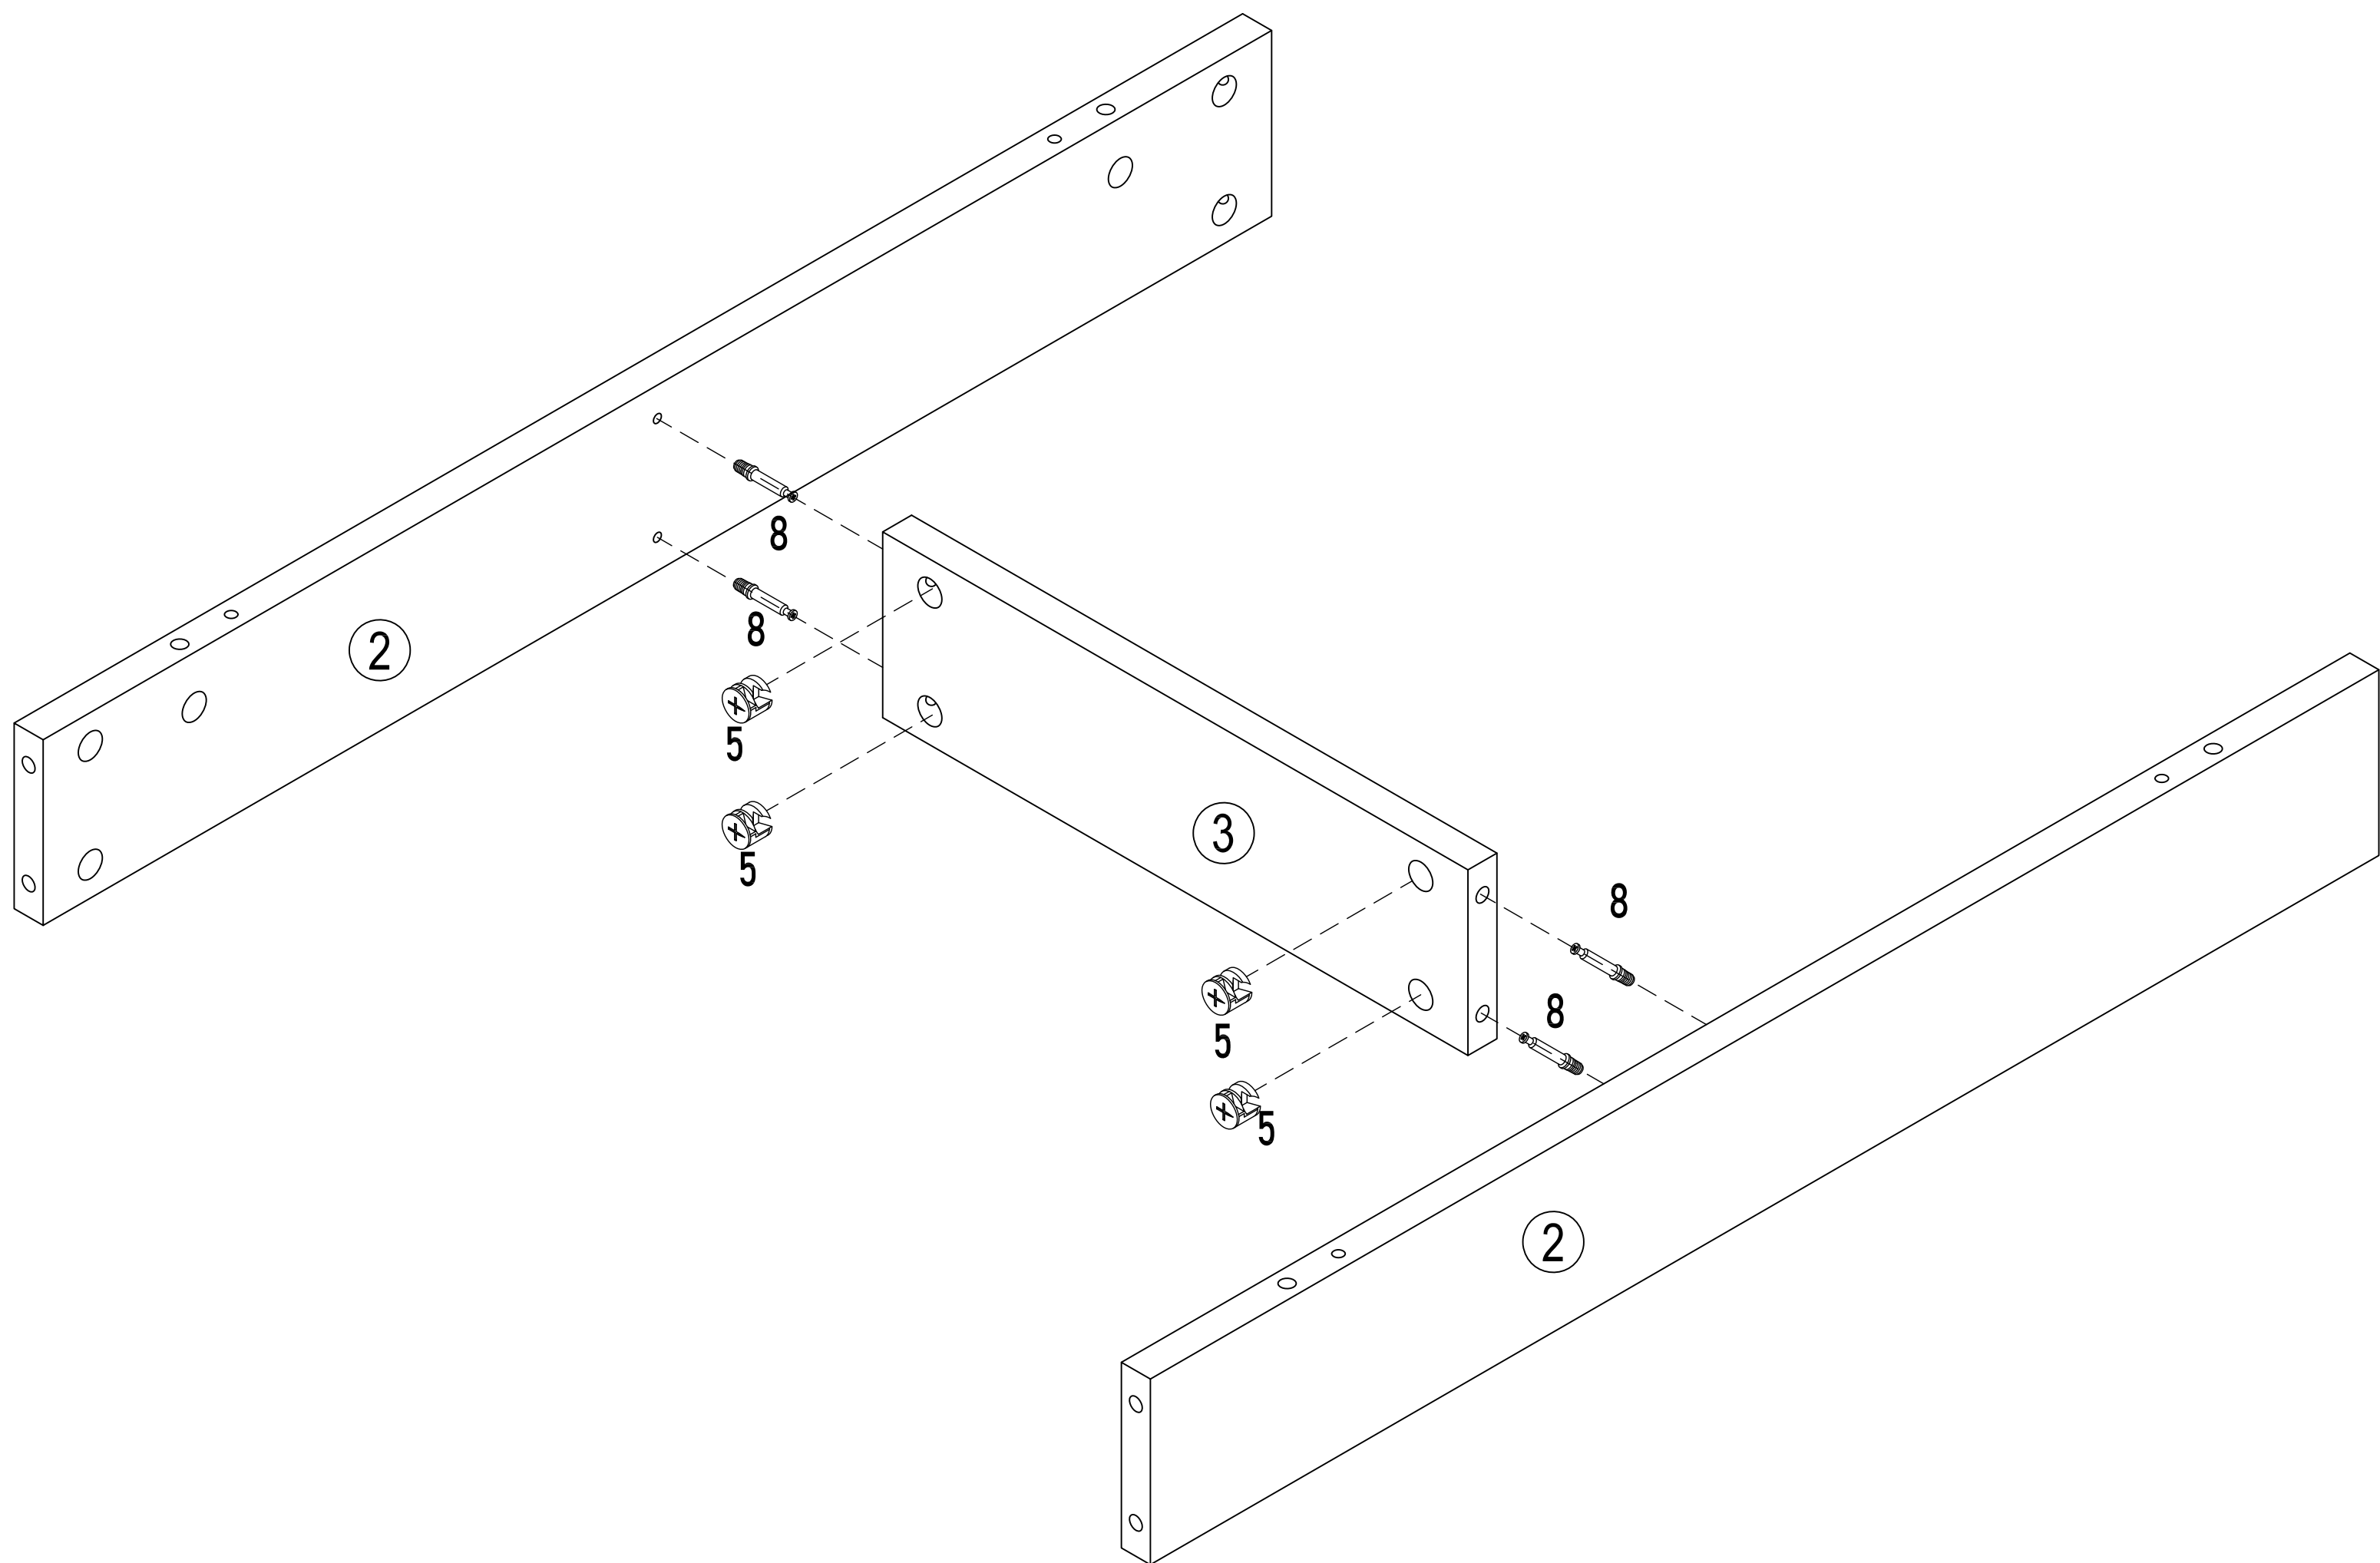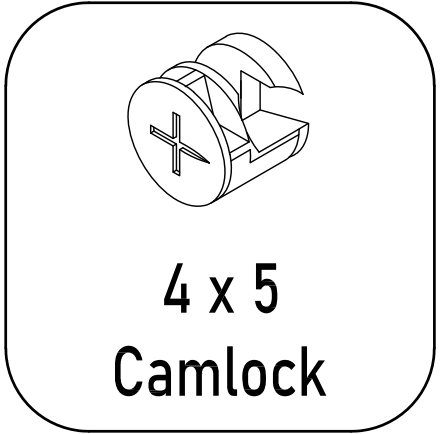




STEP 2

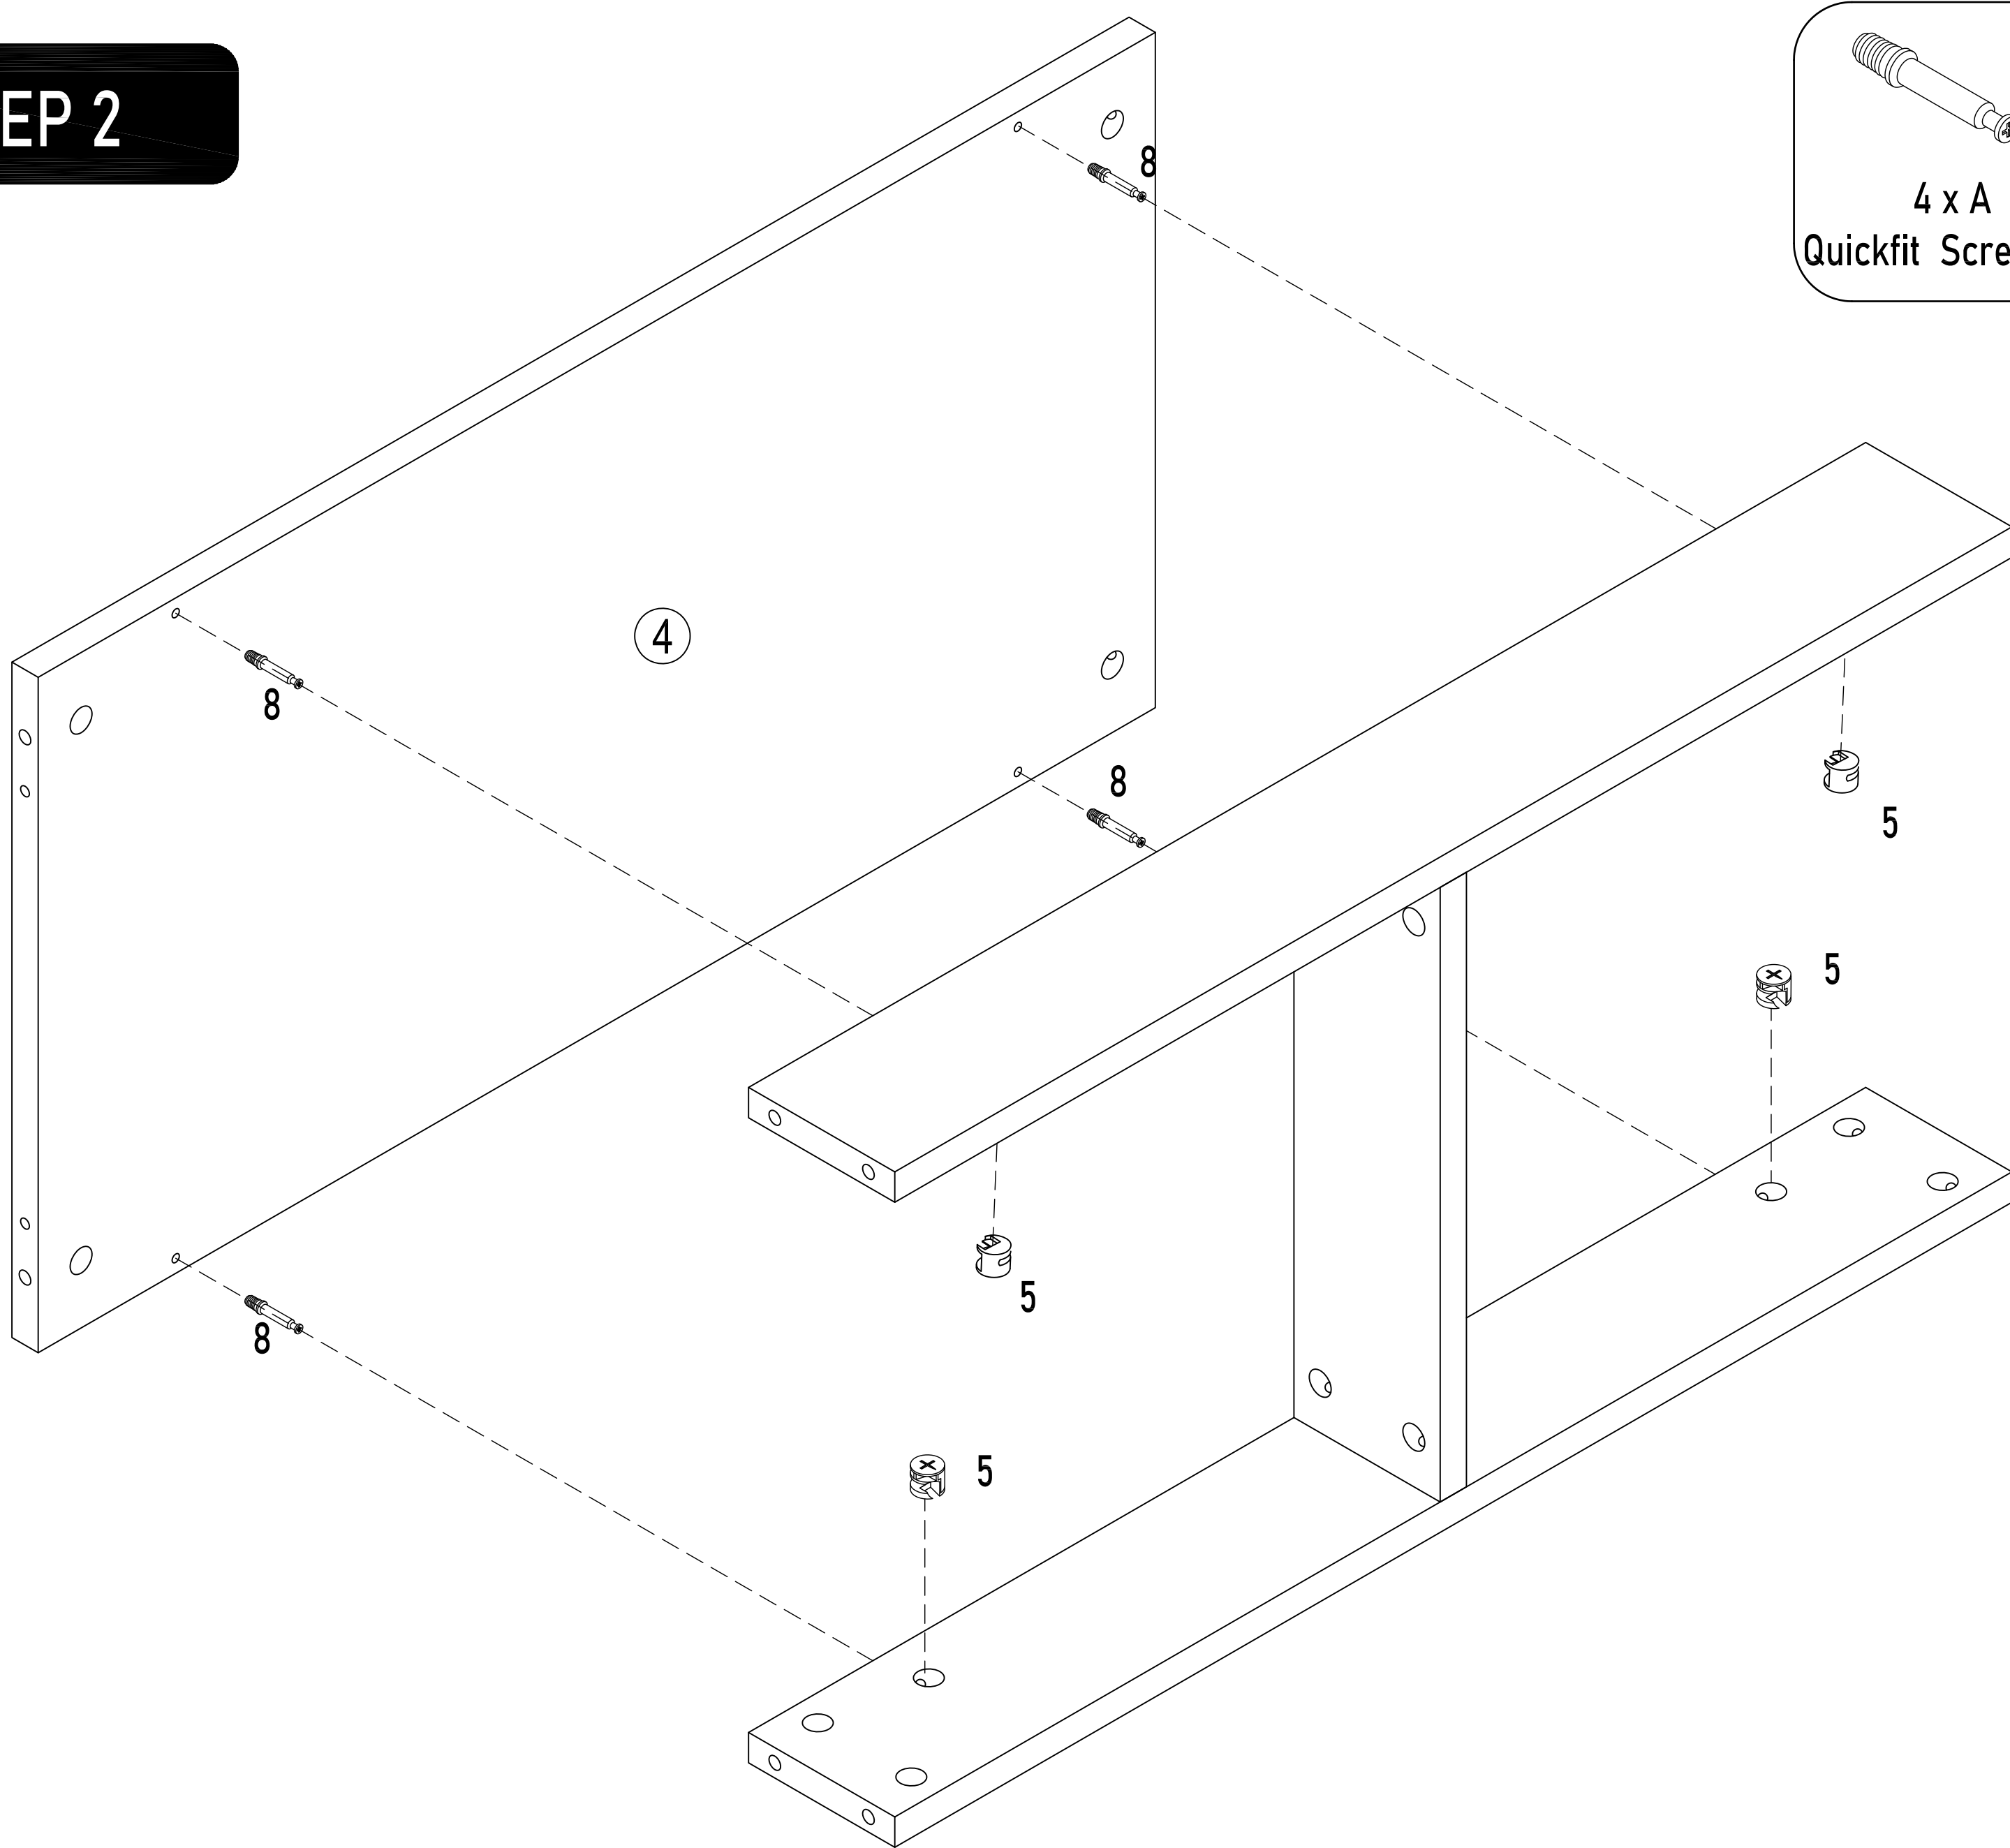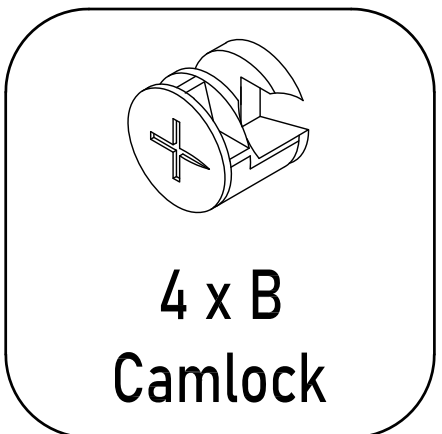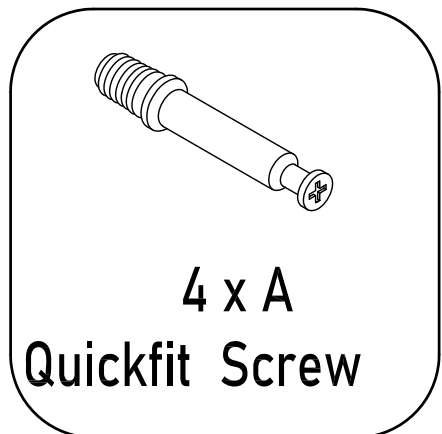




STEP 3

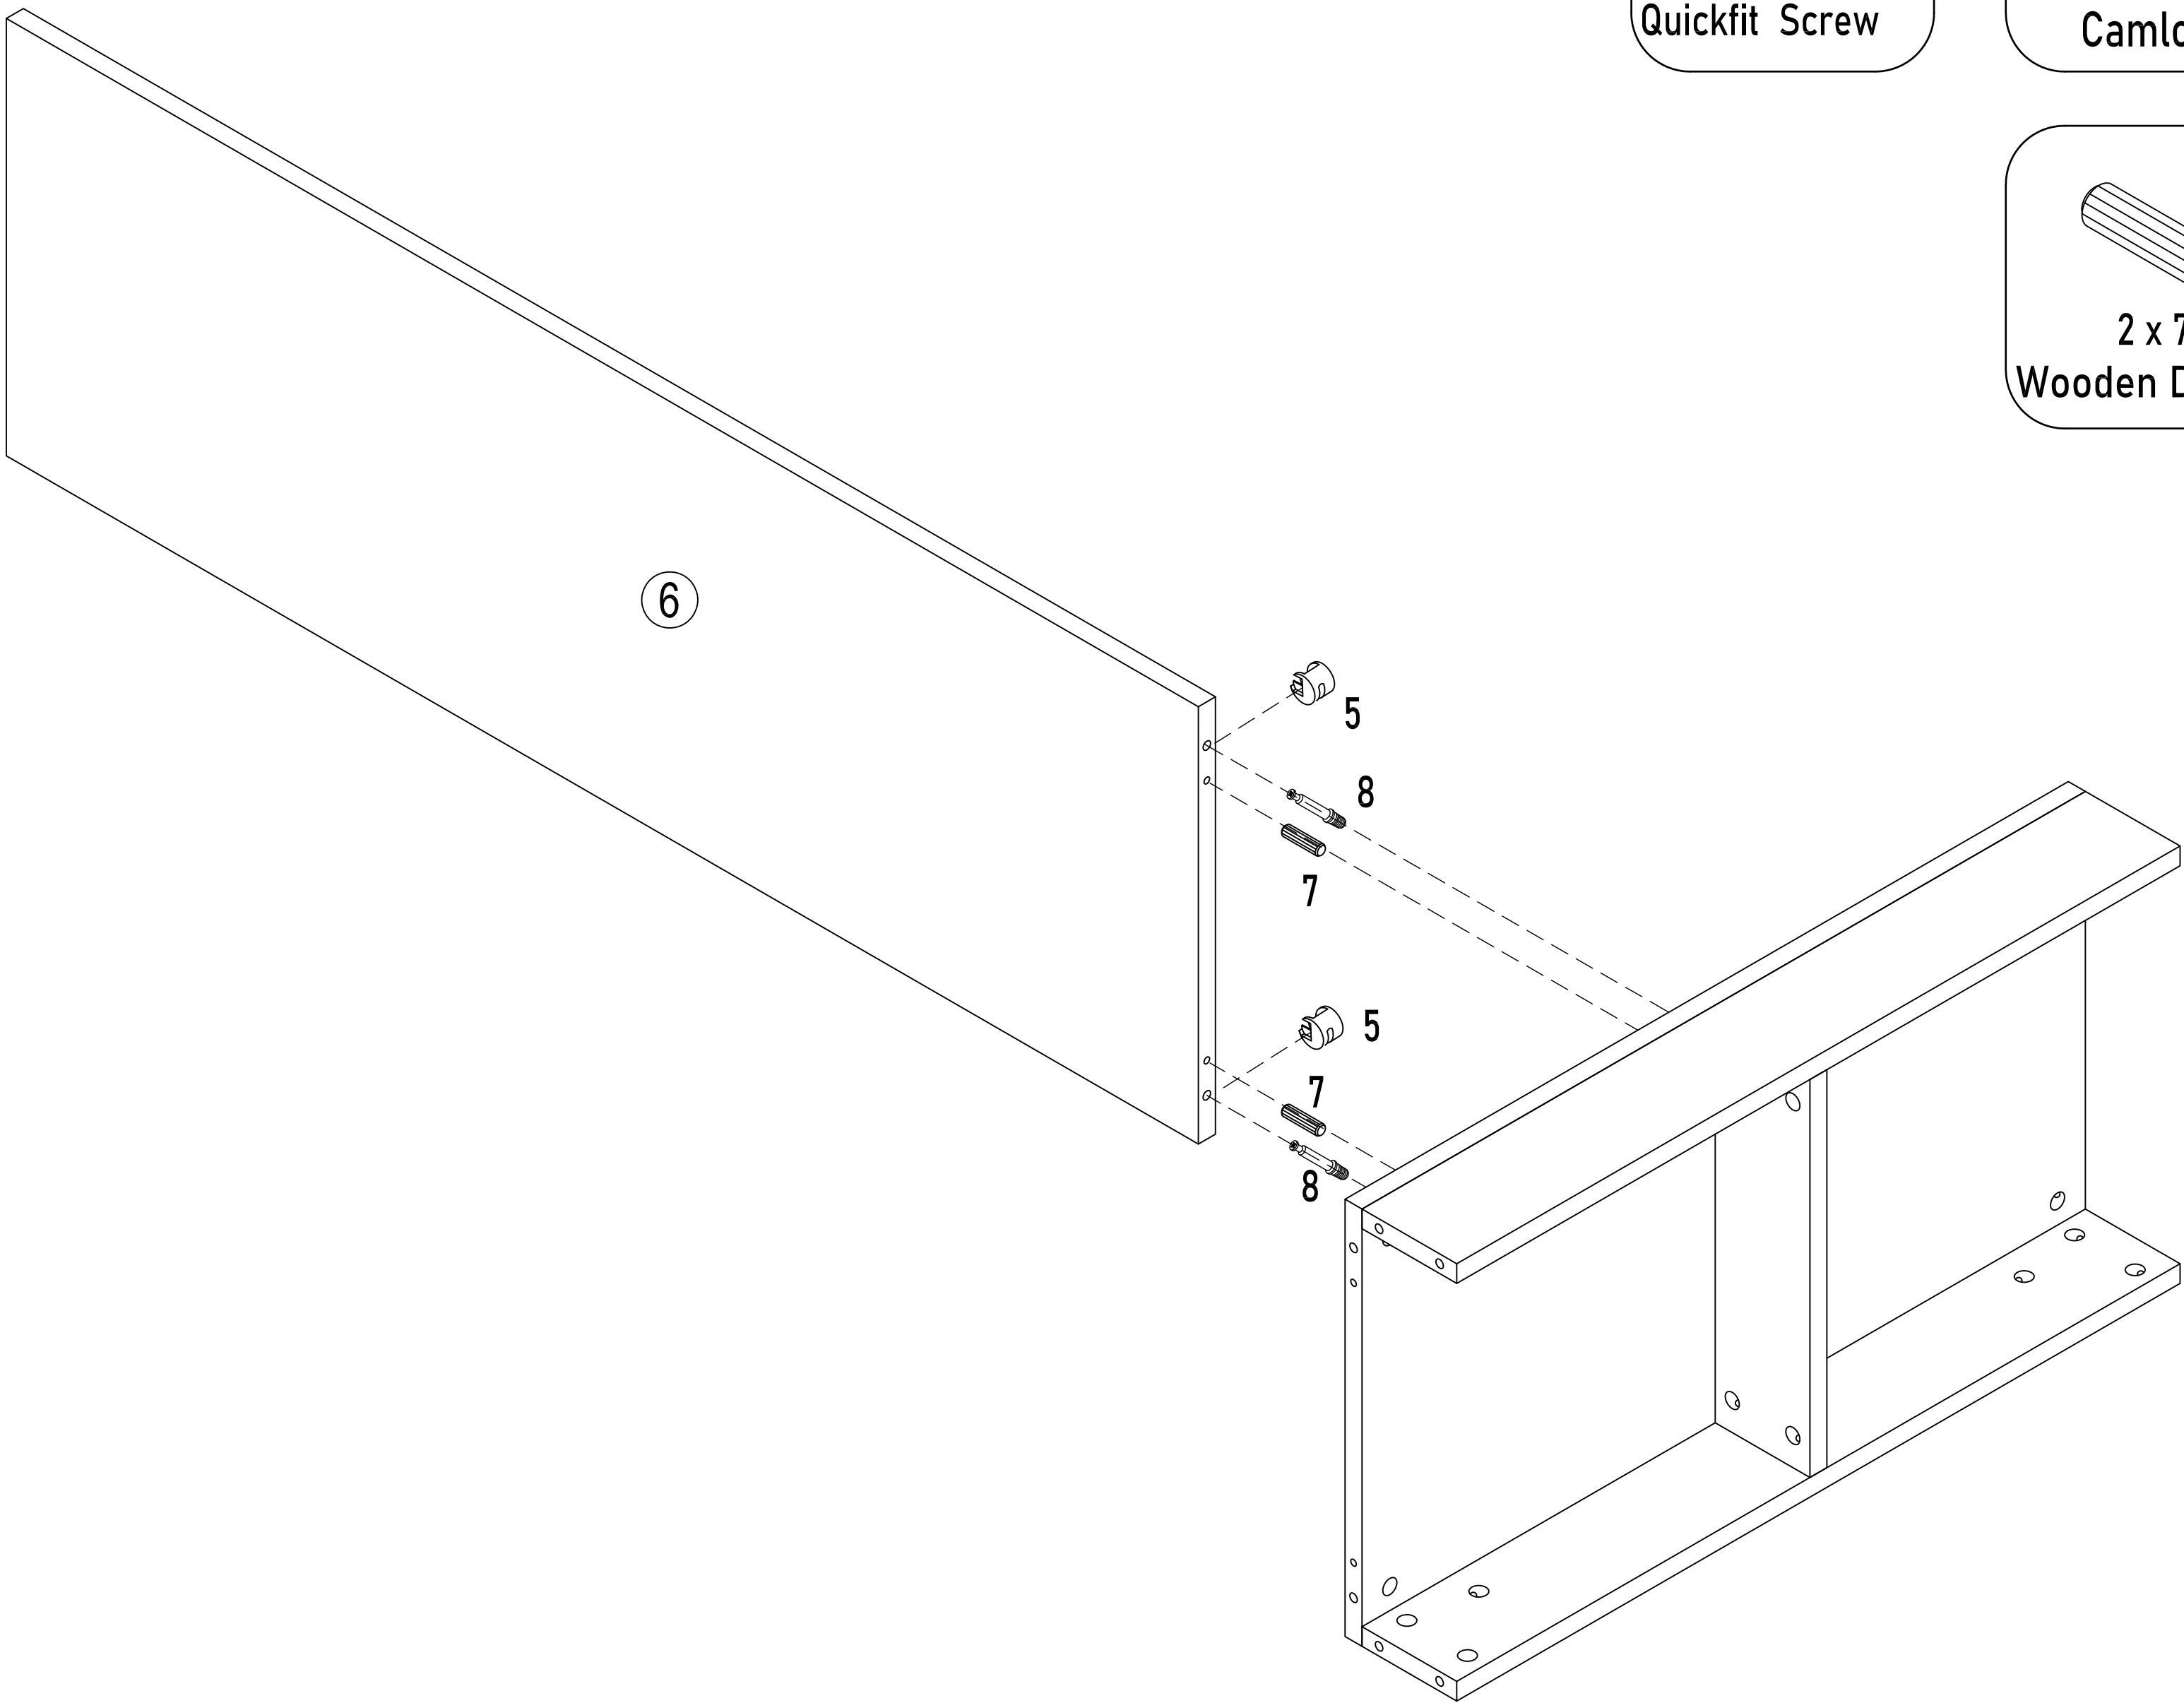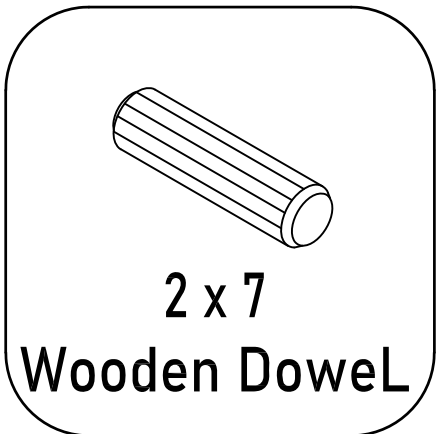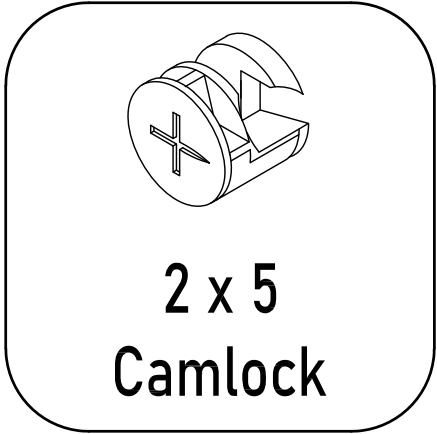




STEP 4

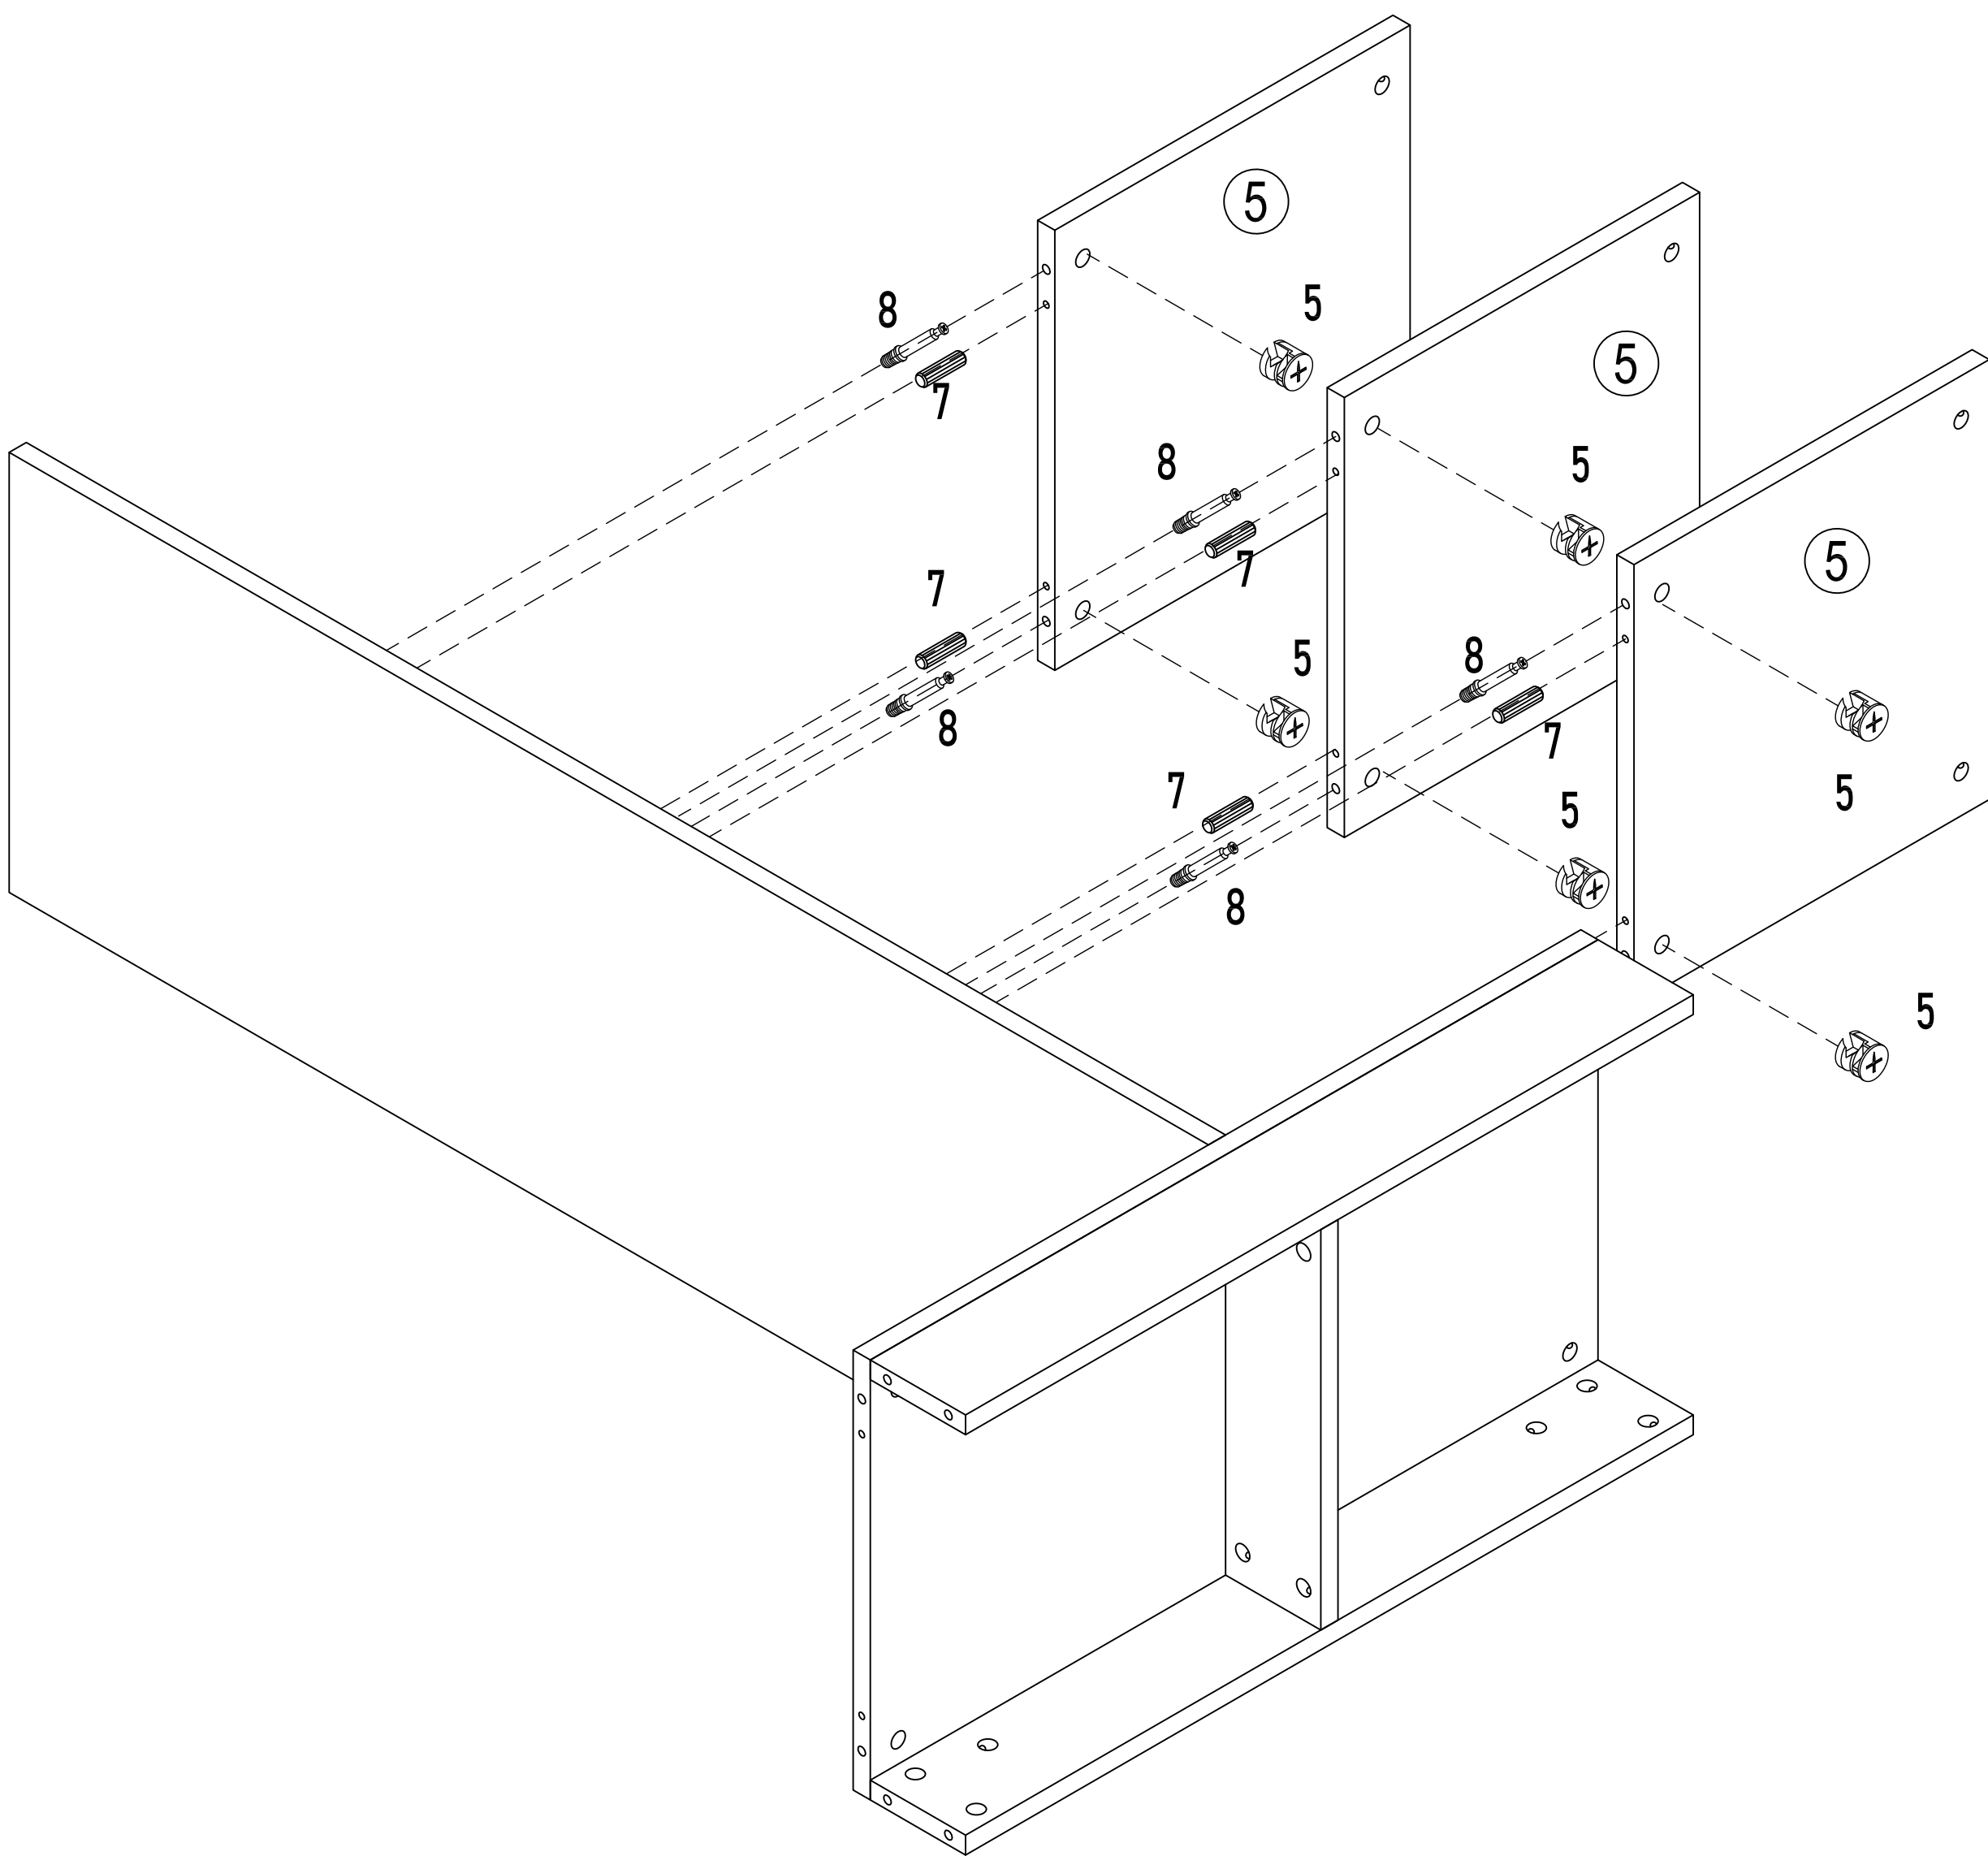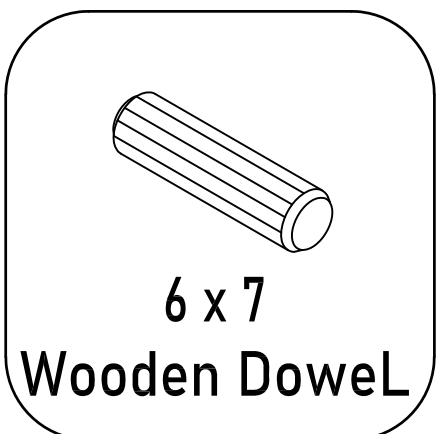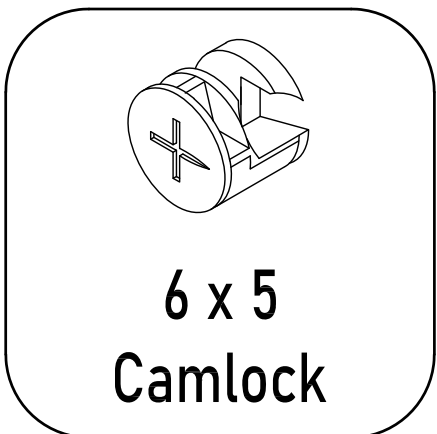





STEP 5

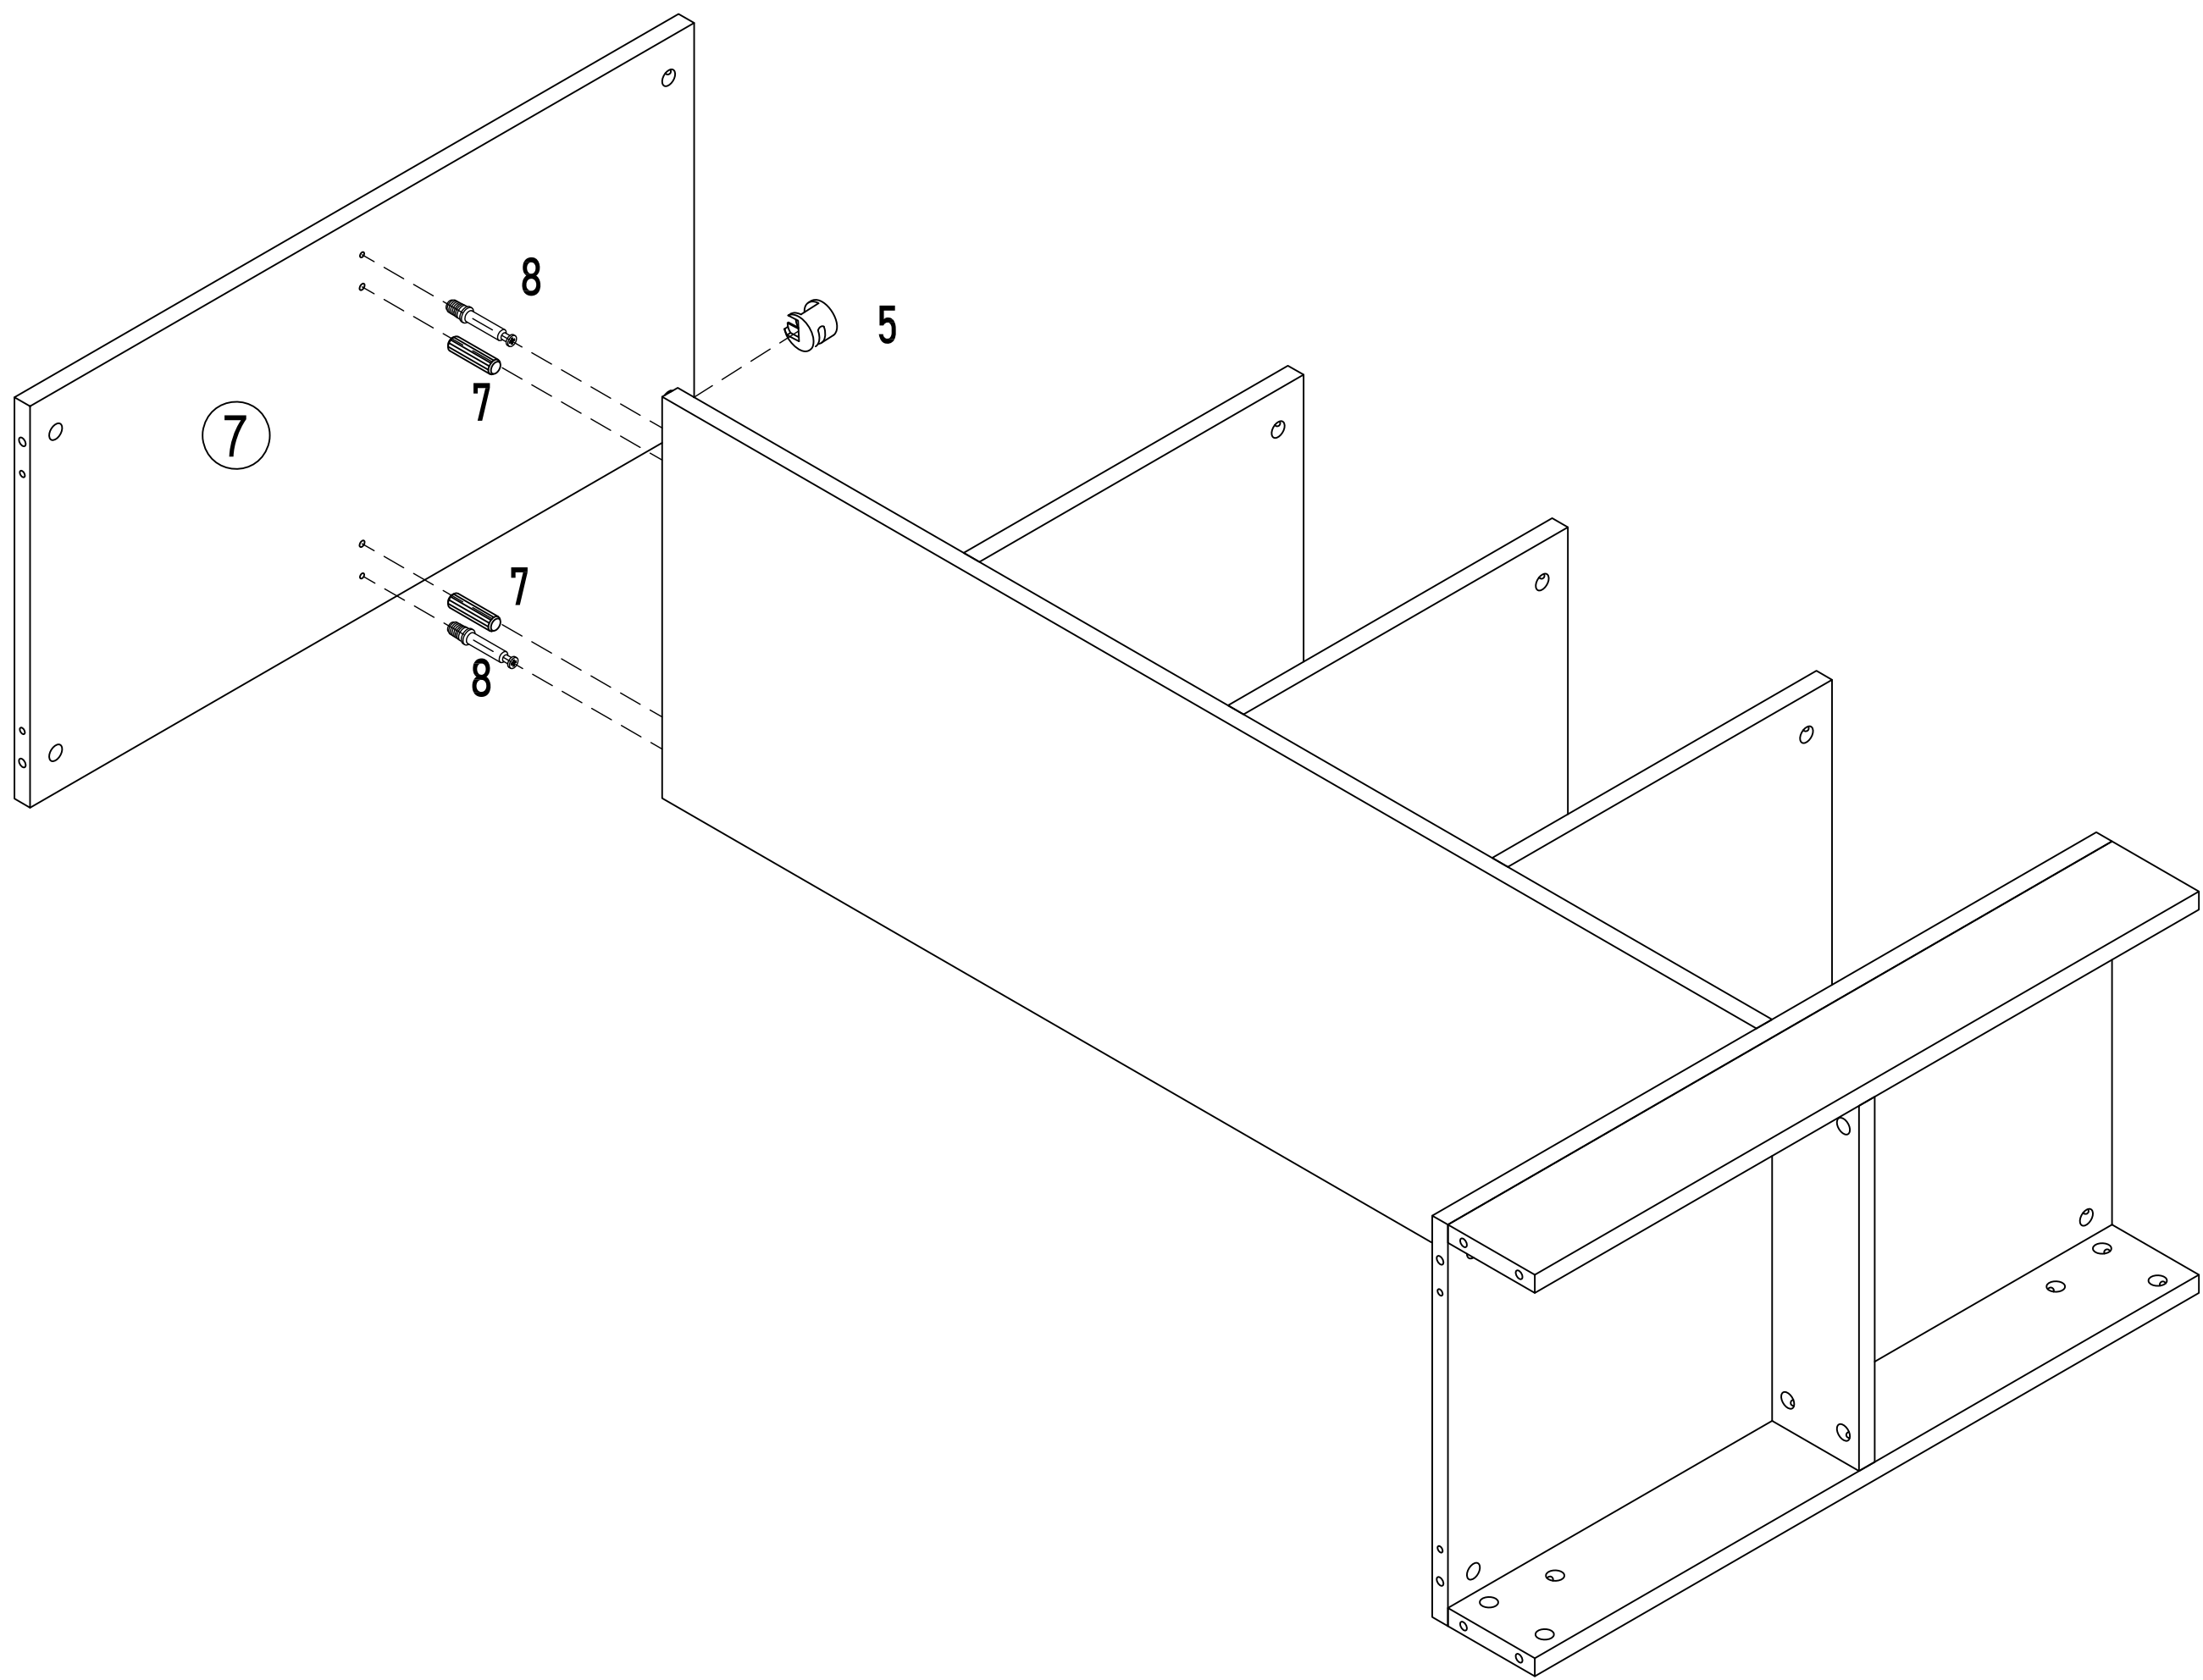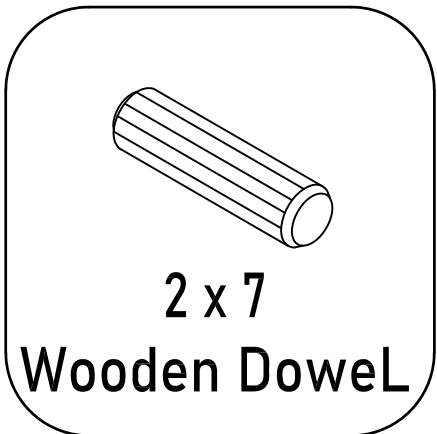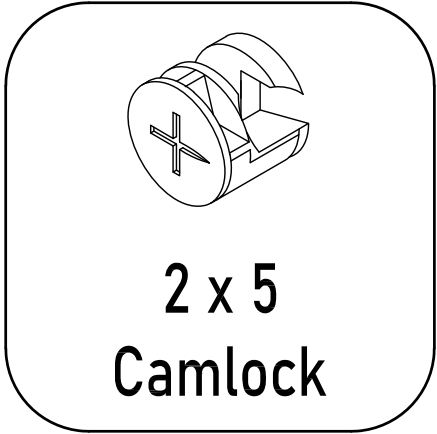



STEP 6

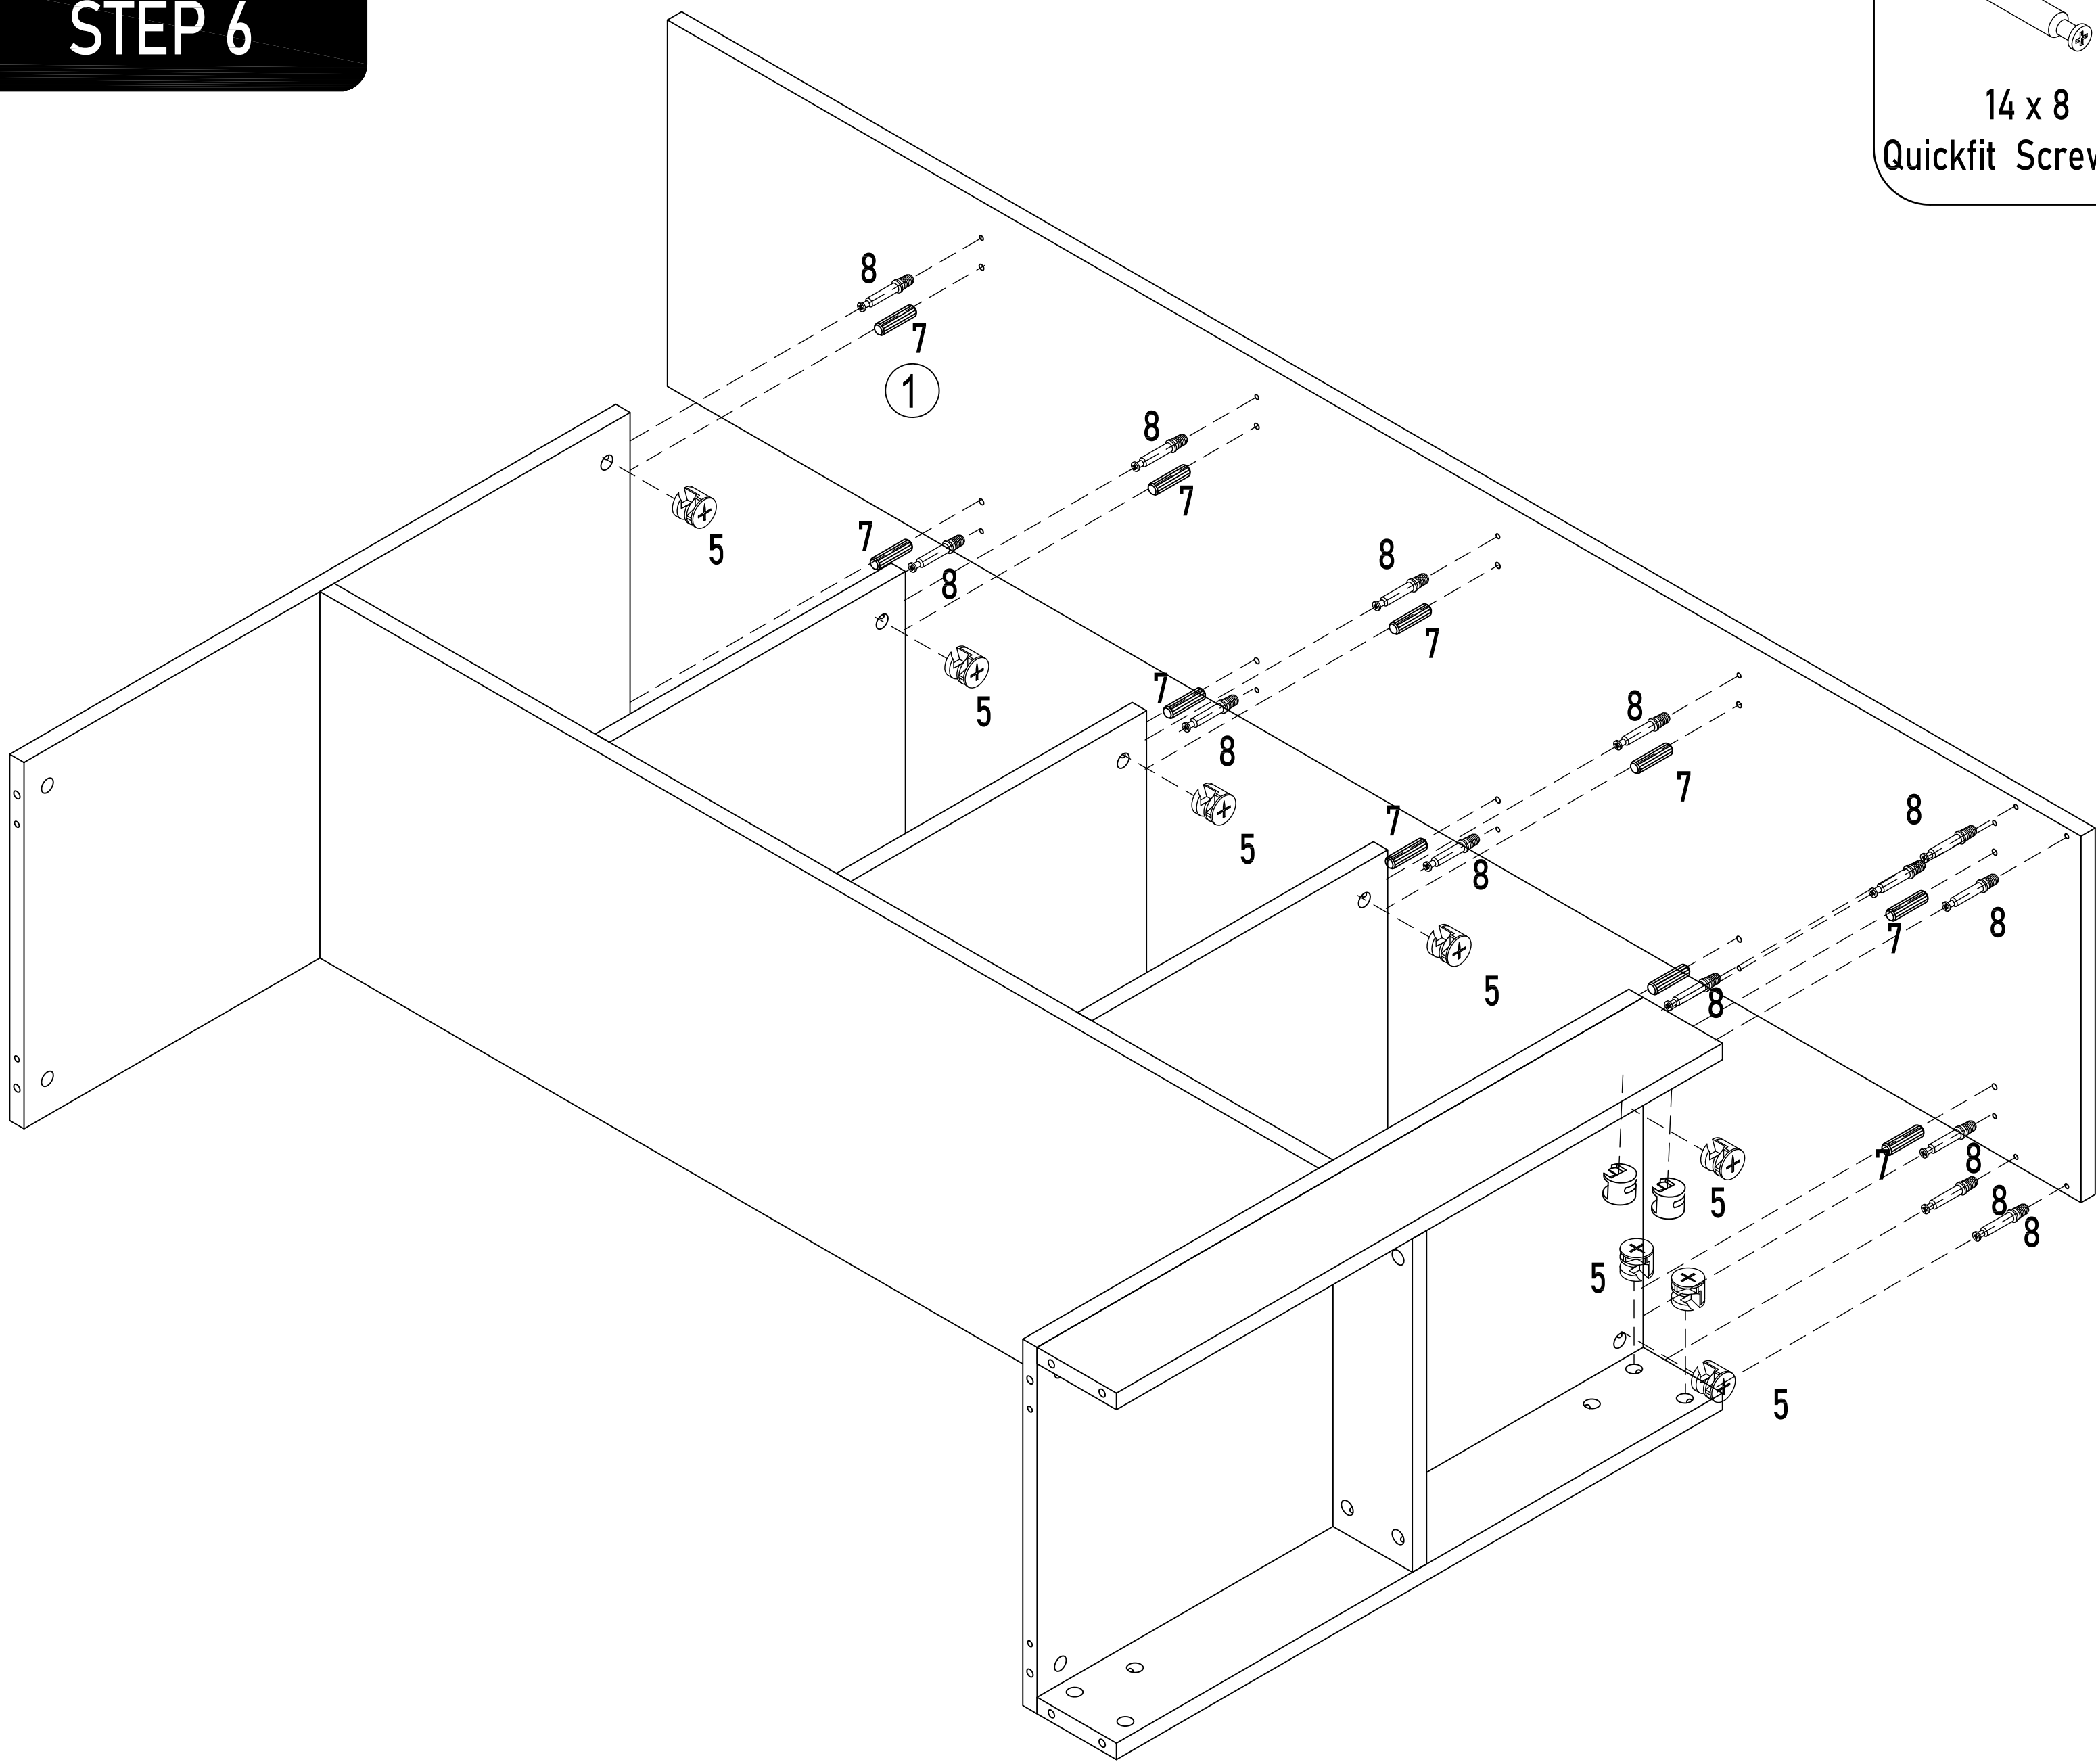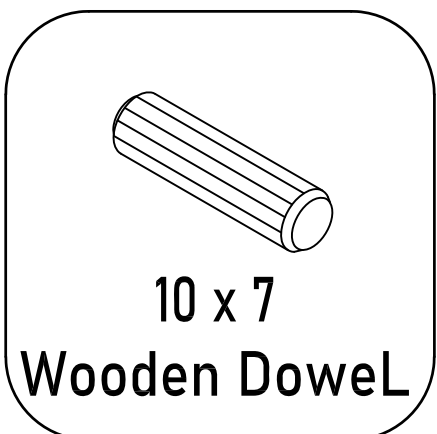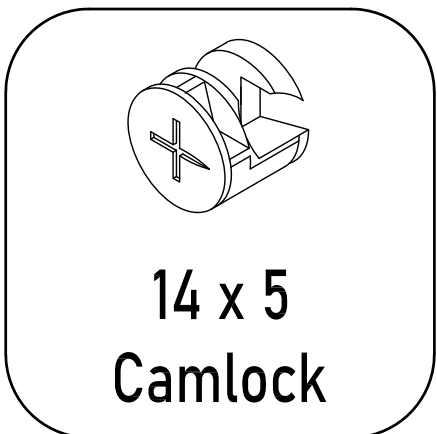

STEP 7

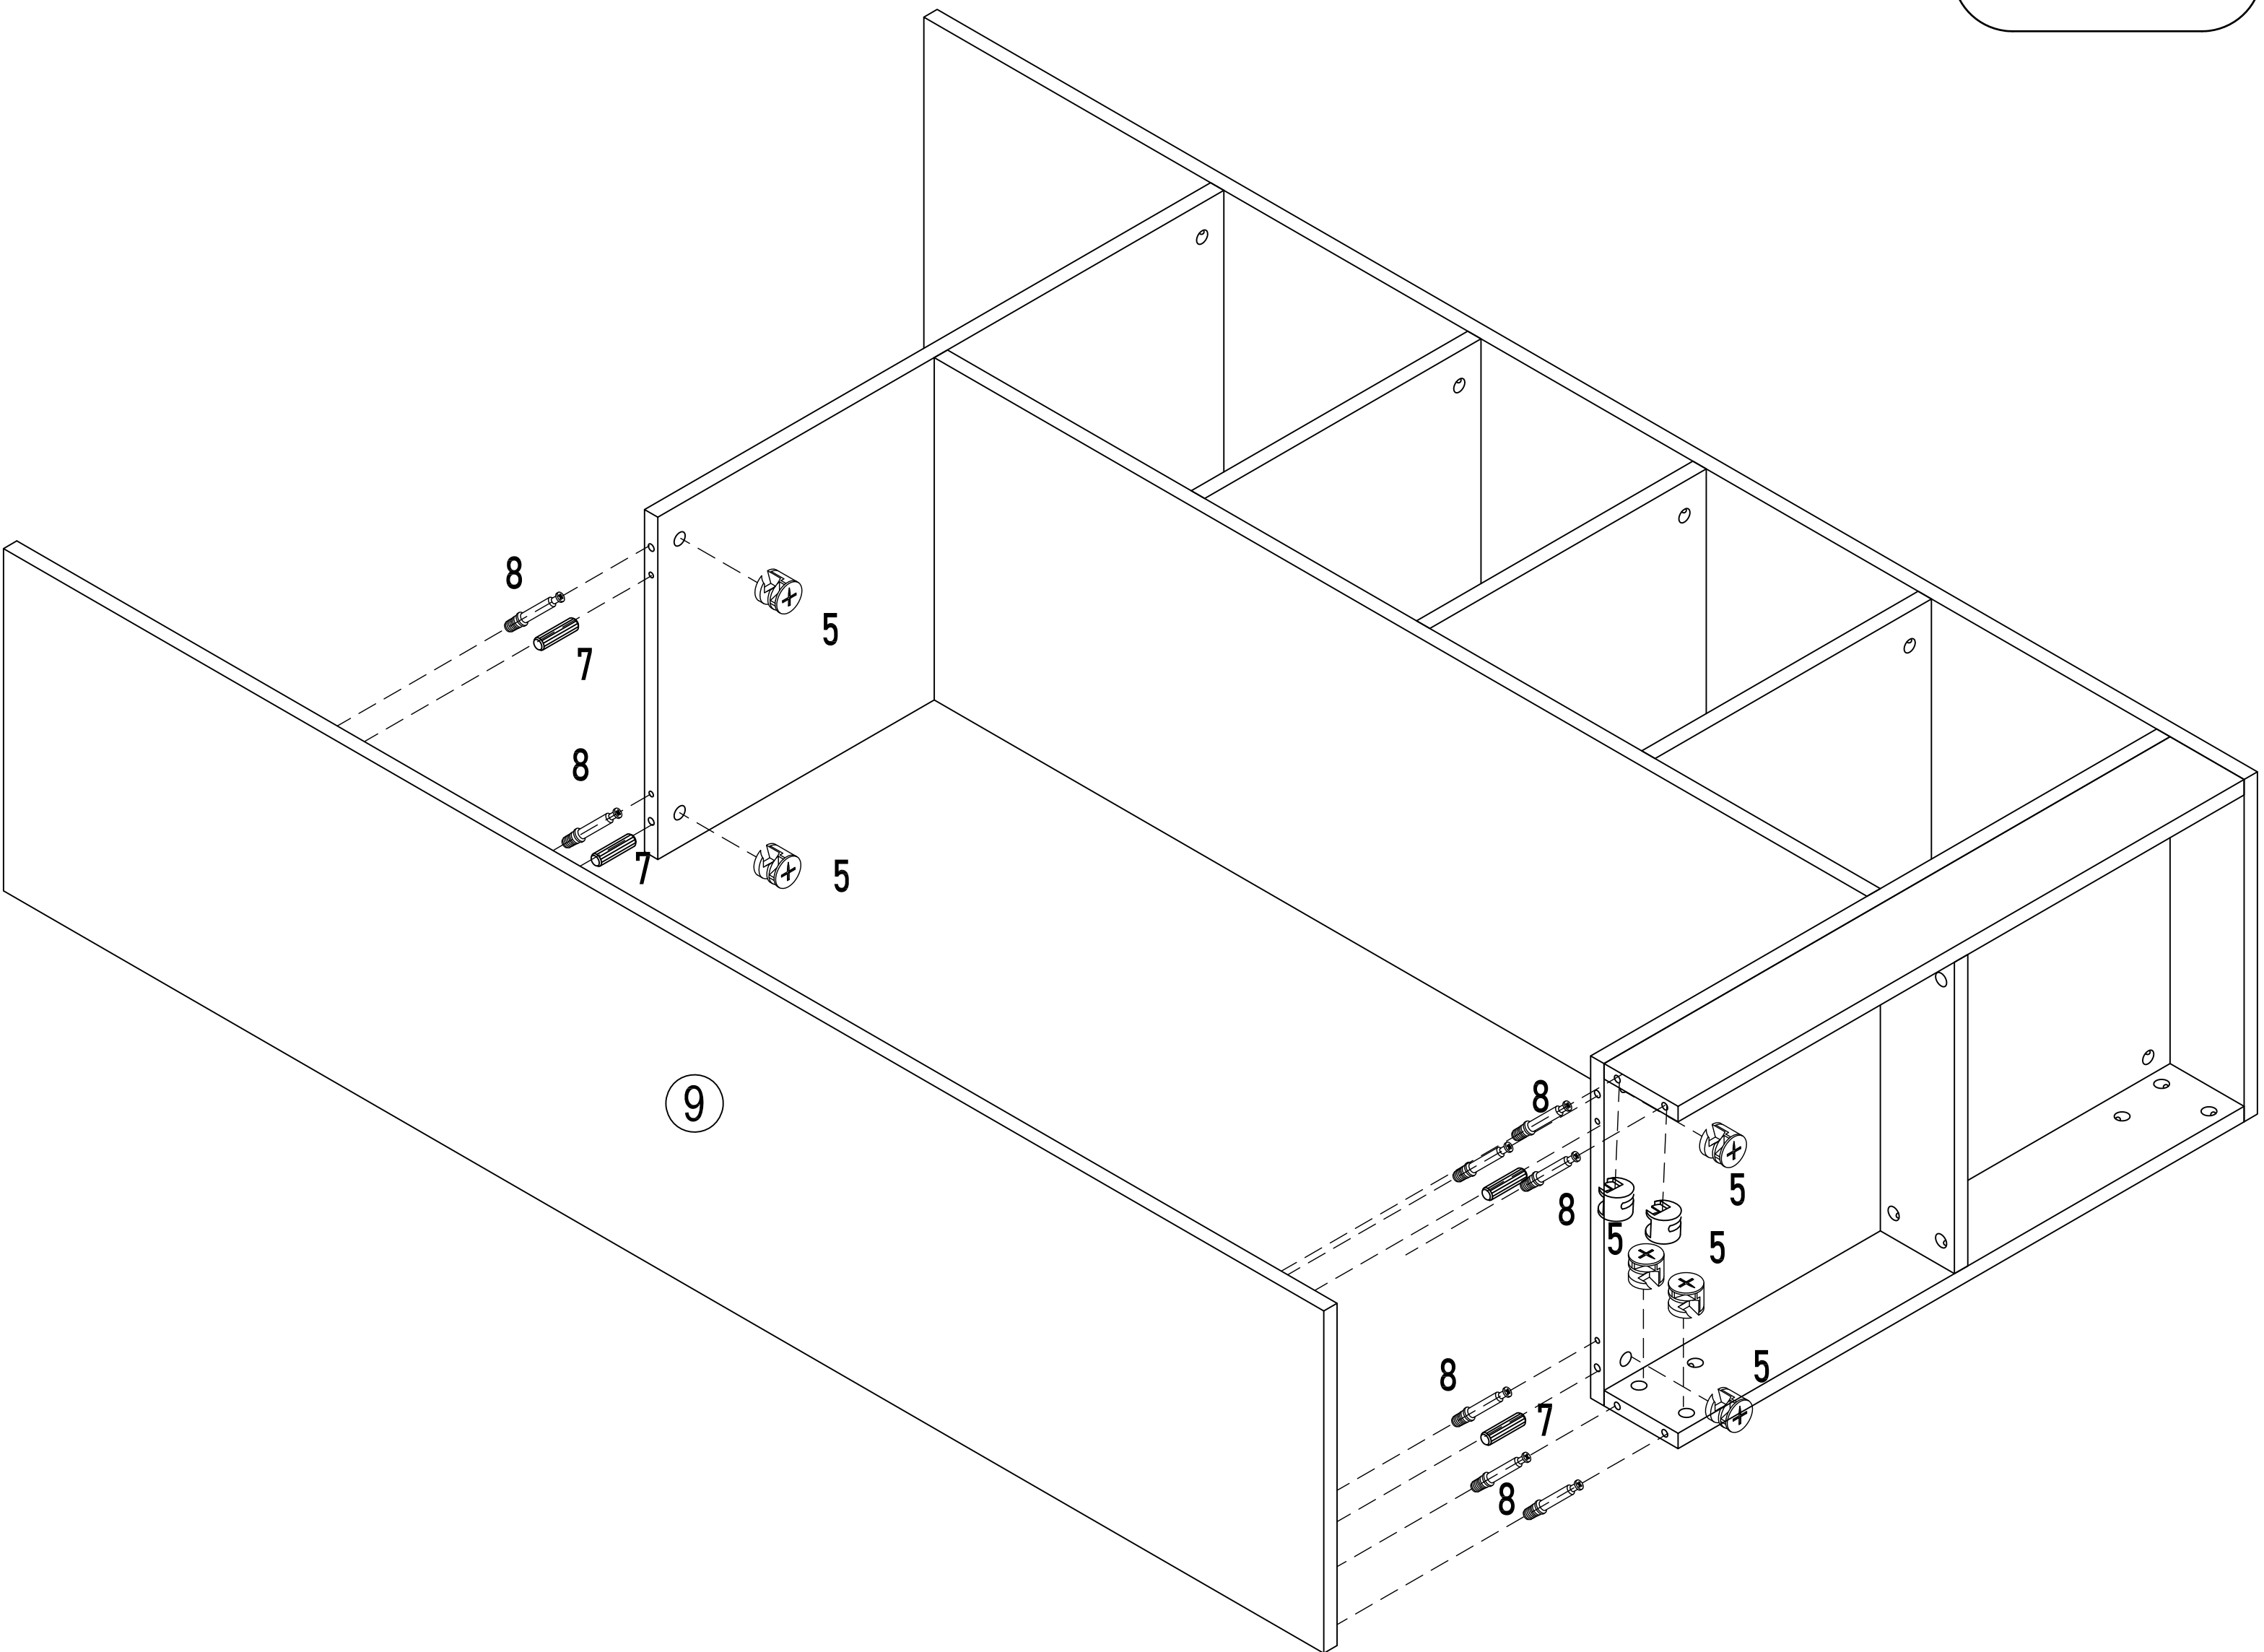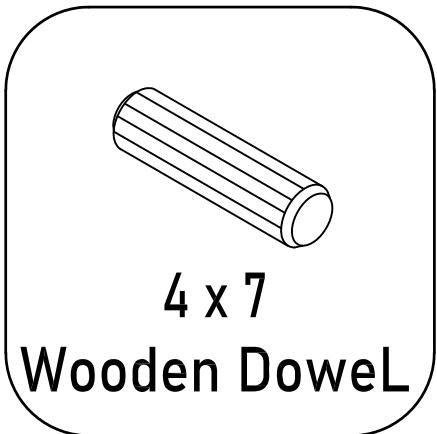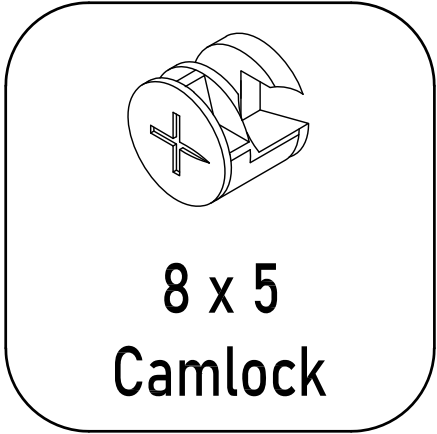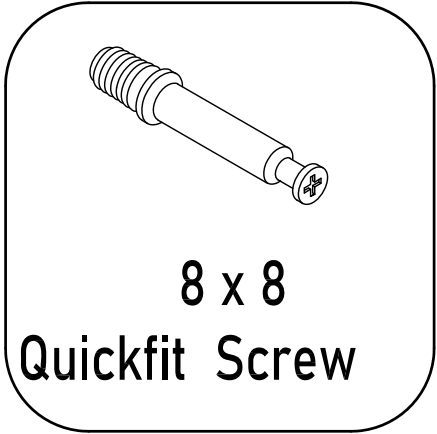


STEP 8

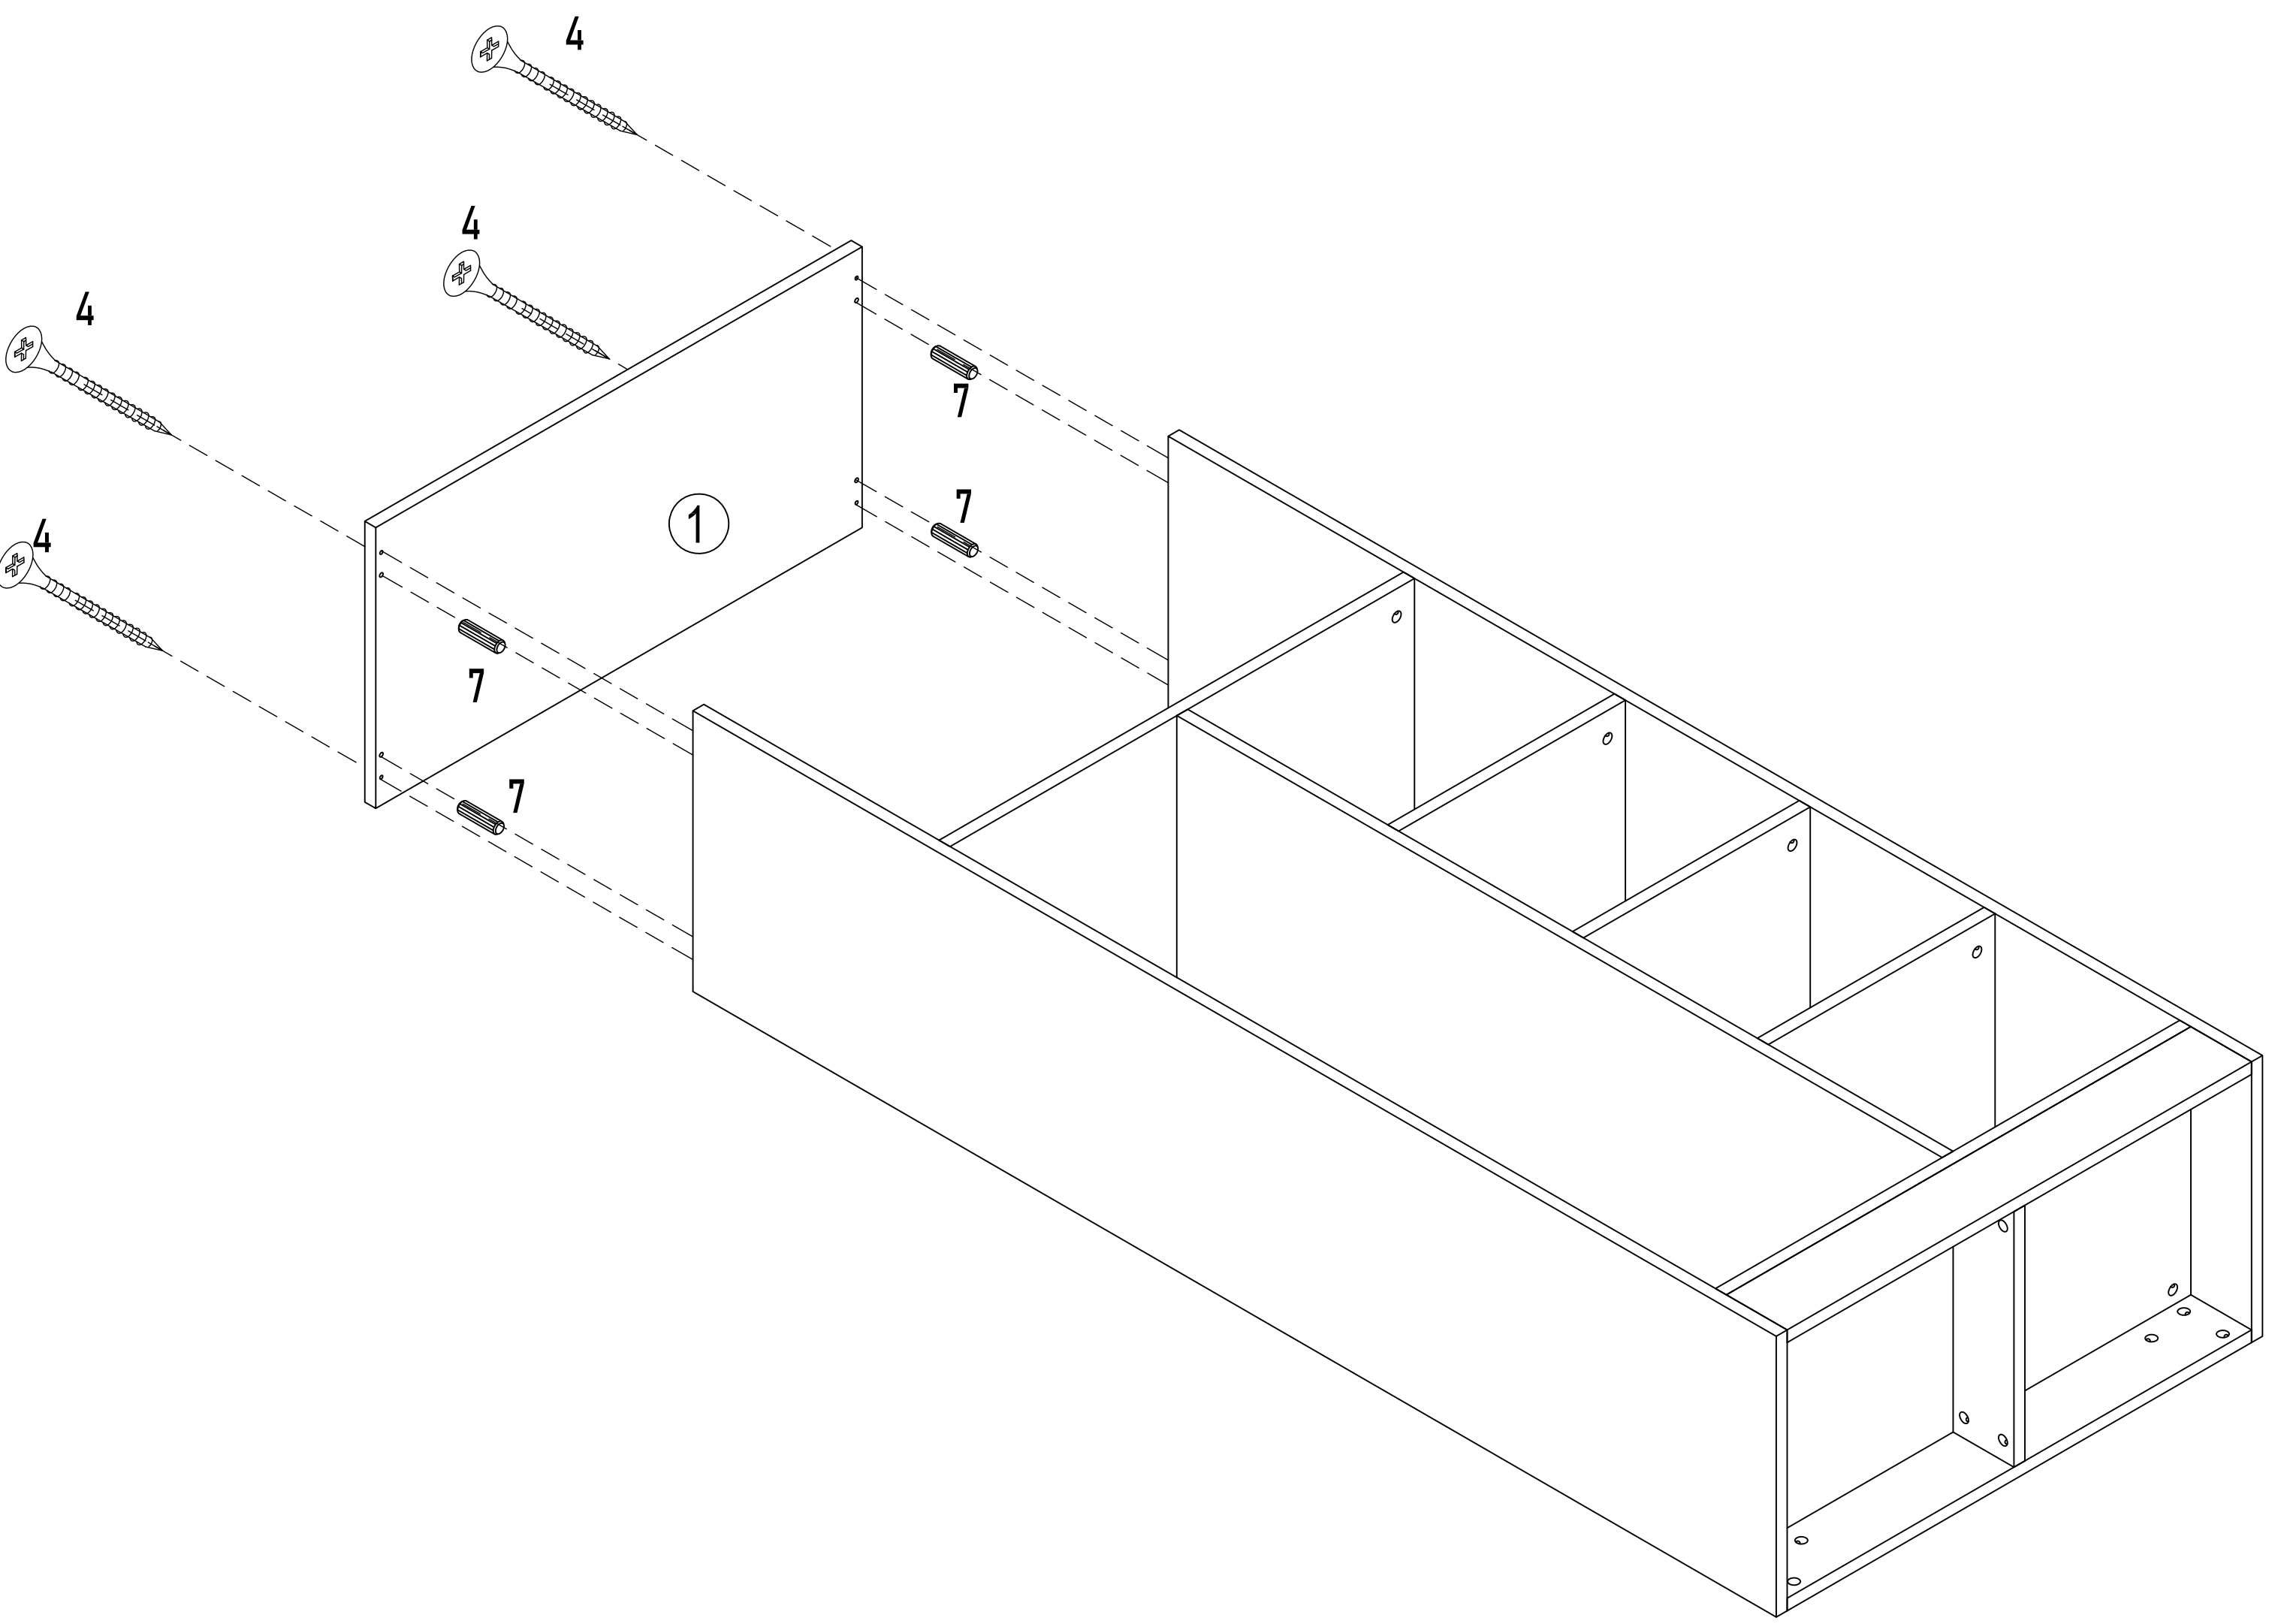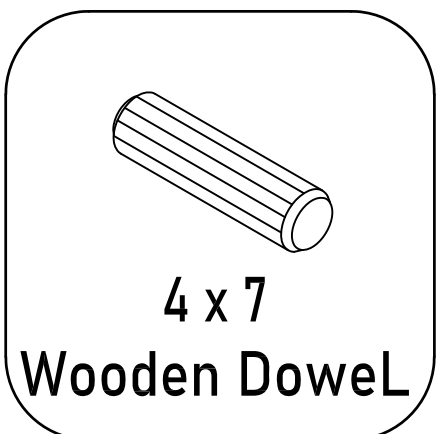

STEP 9

100 x 2
Backboard nail


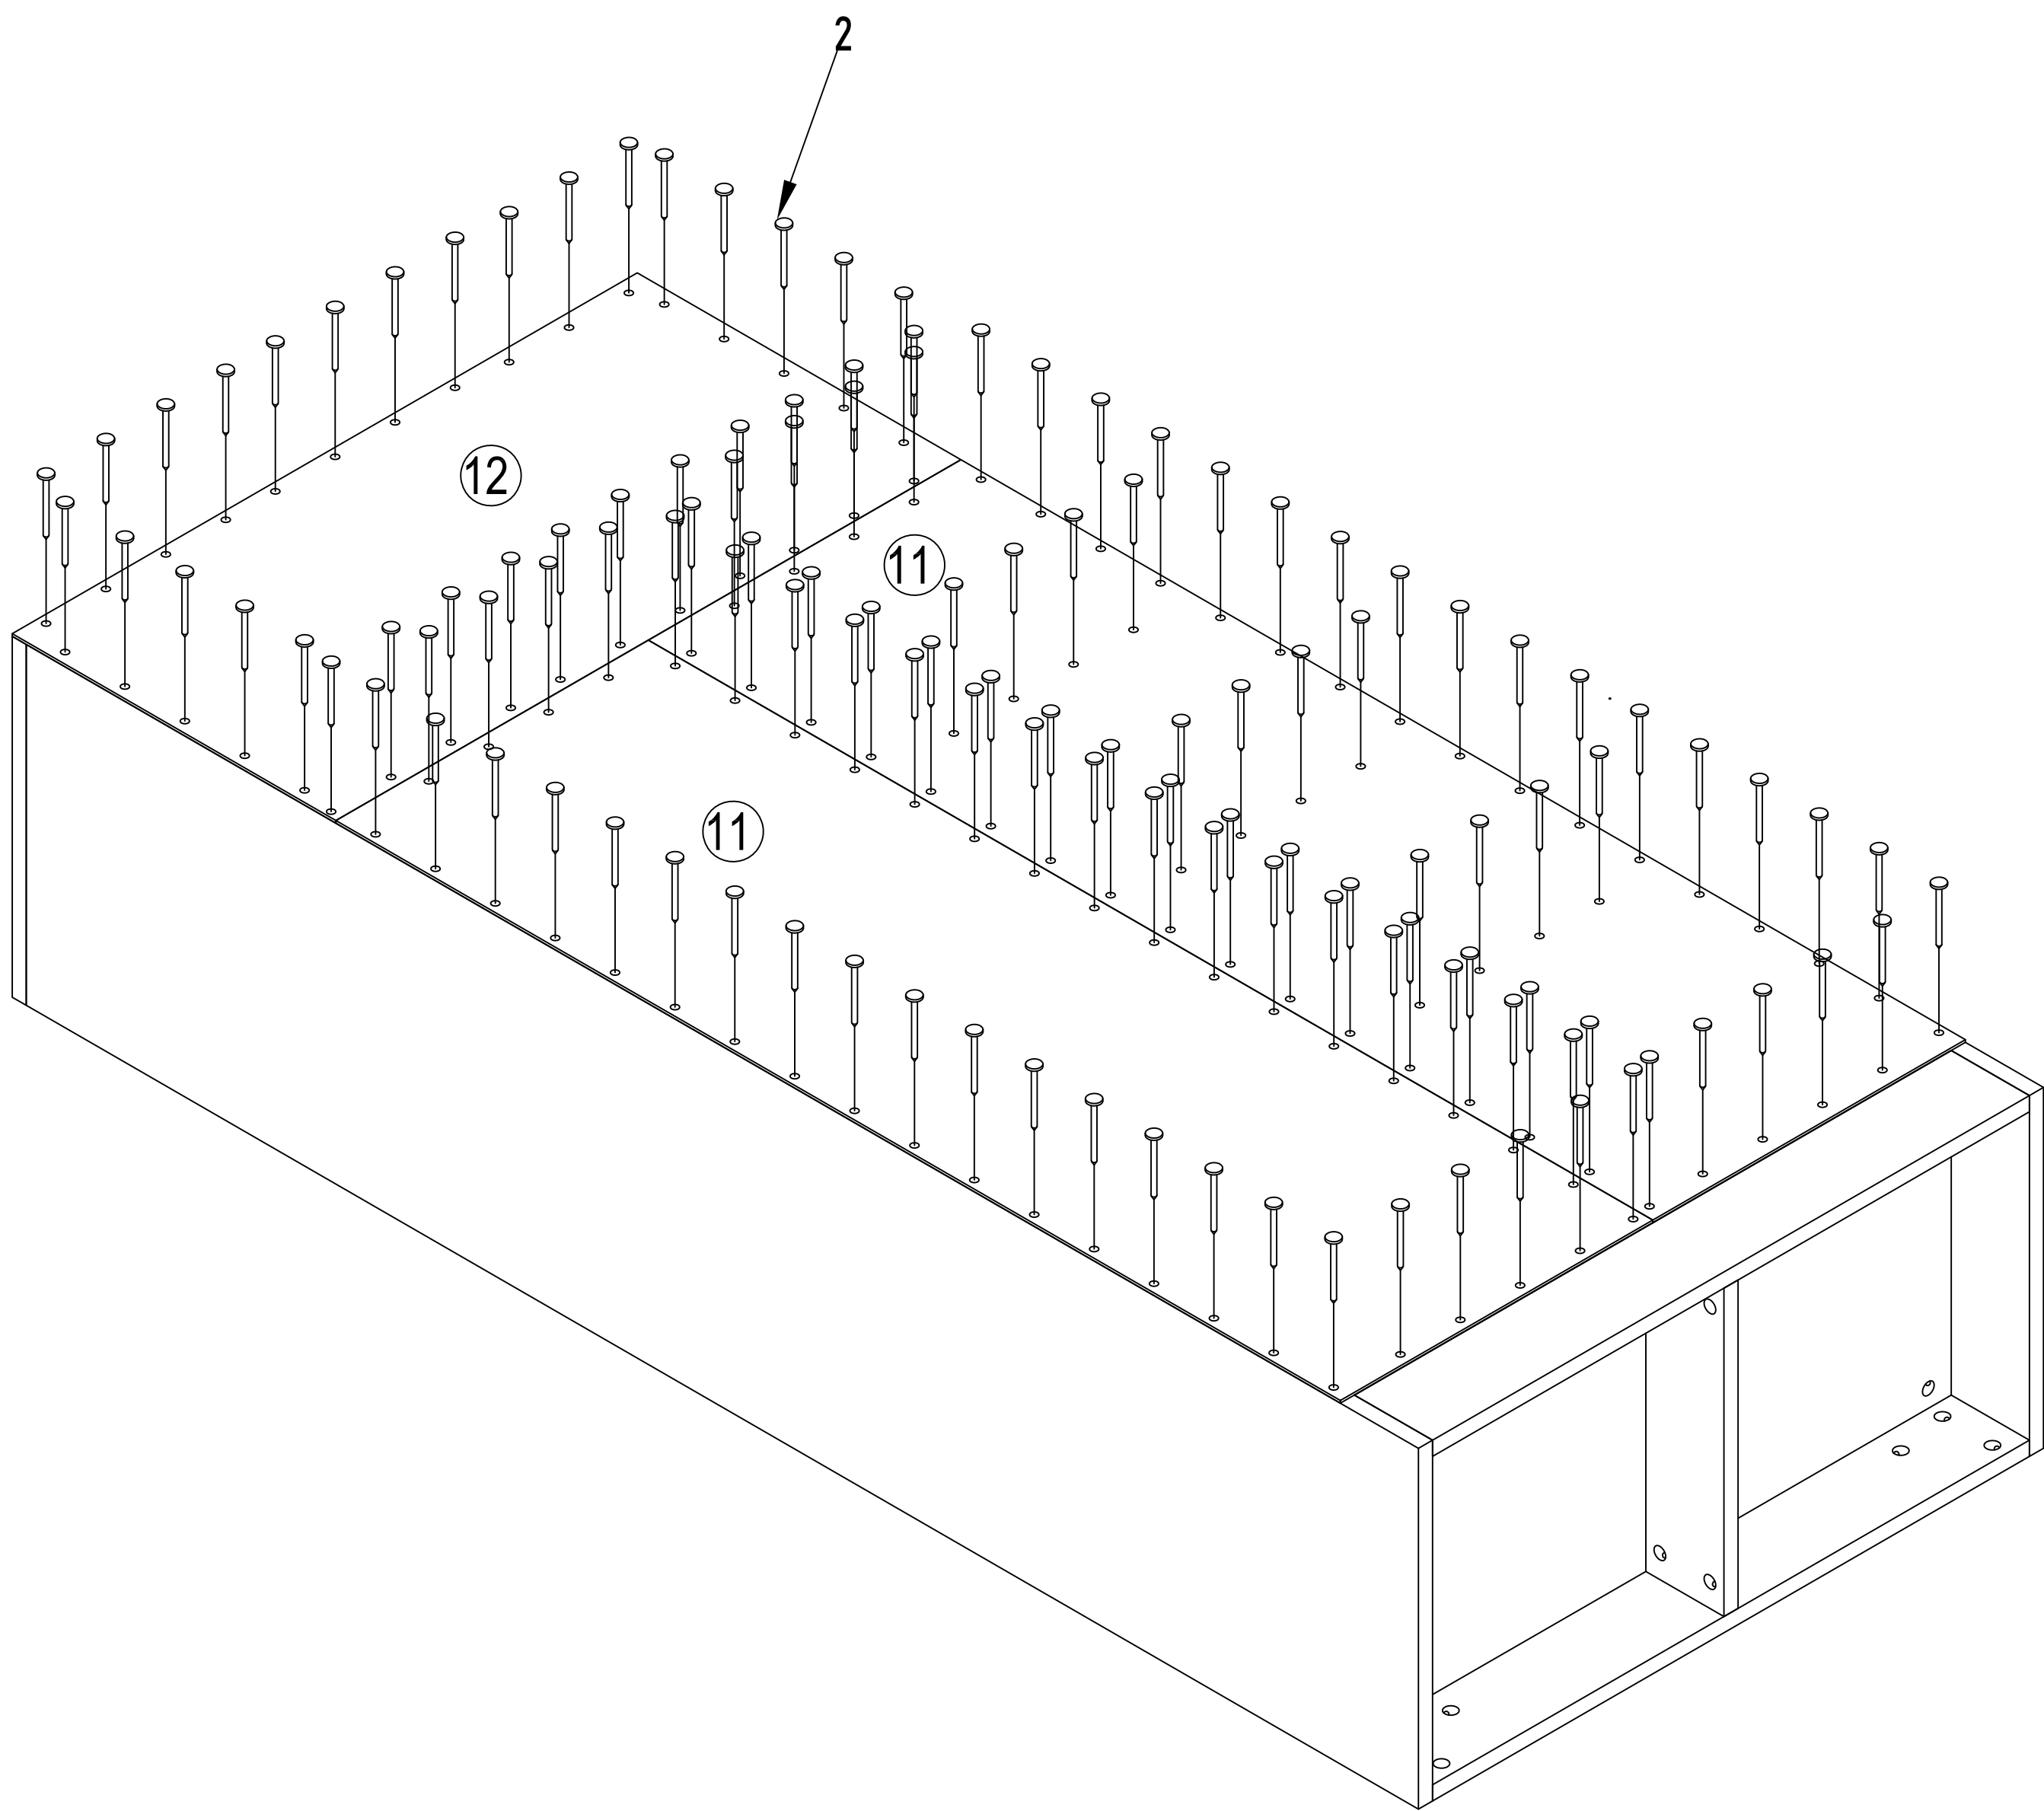


STEP 10



2 x 3
Coat Hanger

1 x 9
Clothes Hanger


4 x 6
Screw

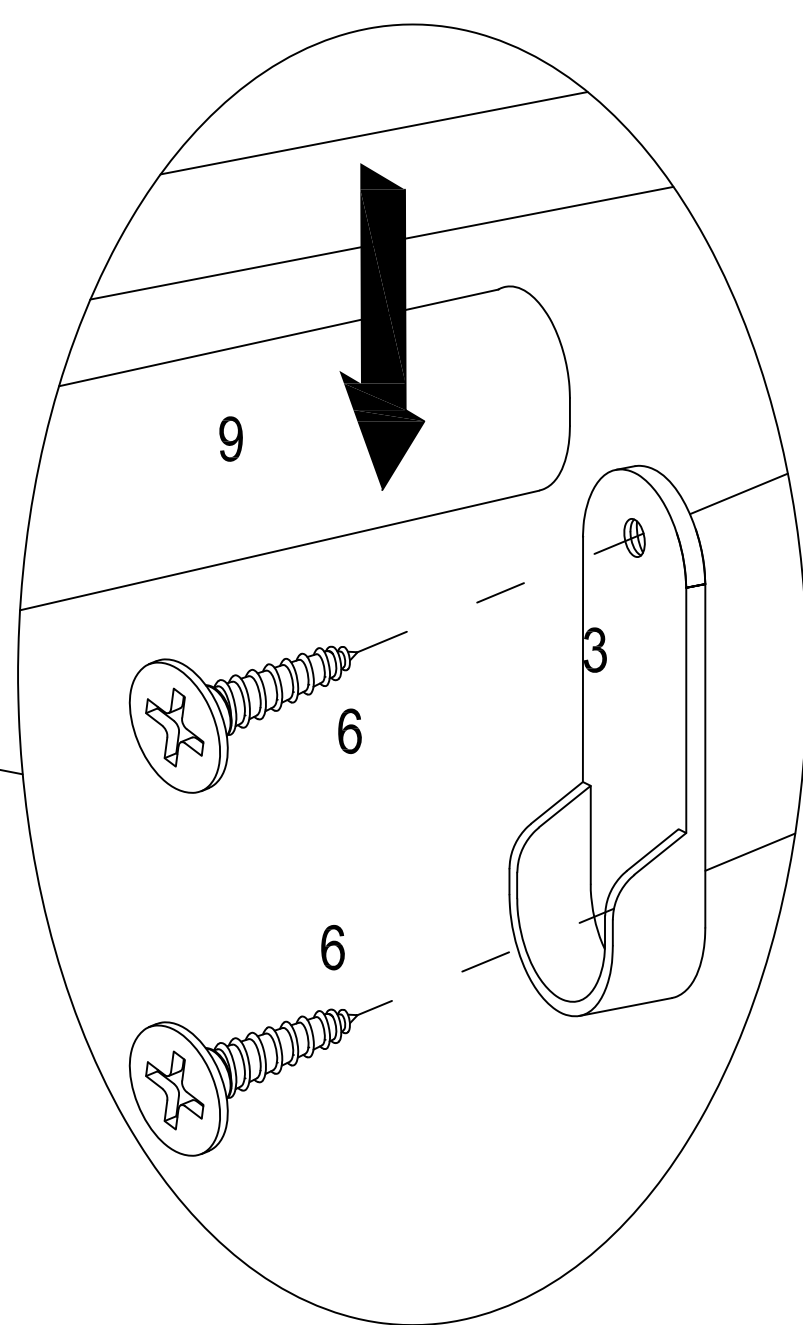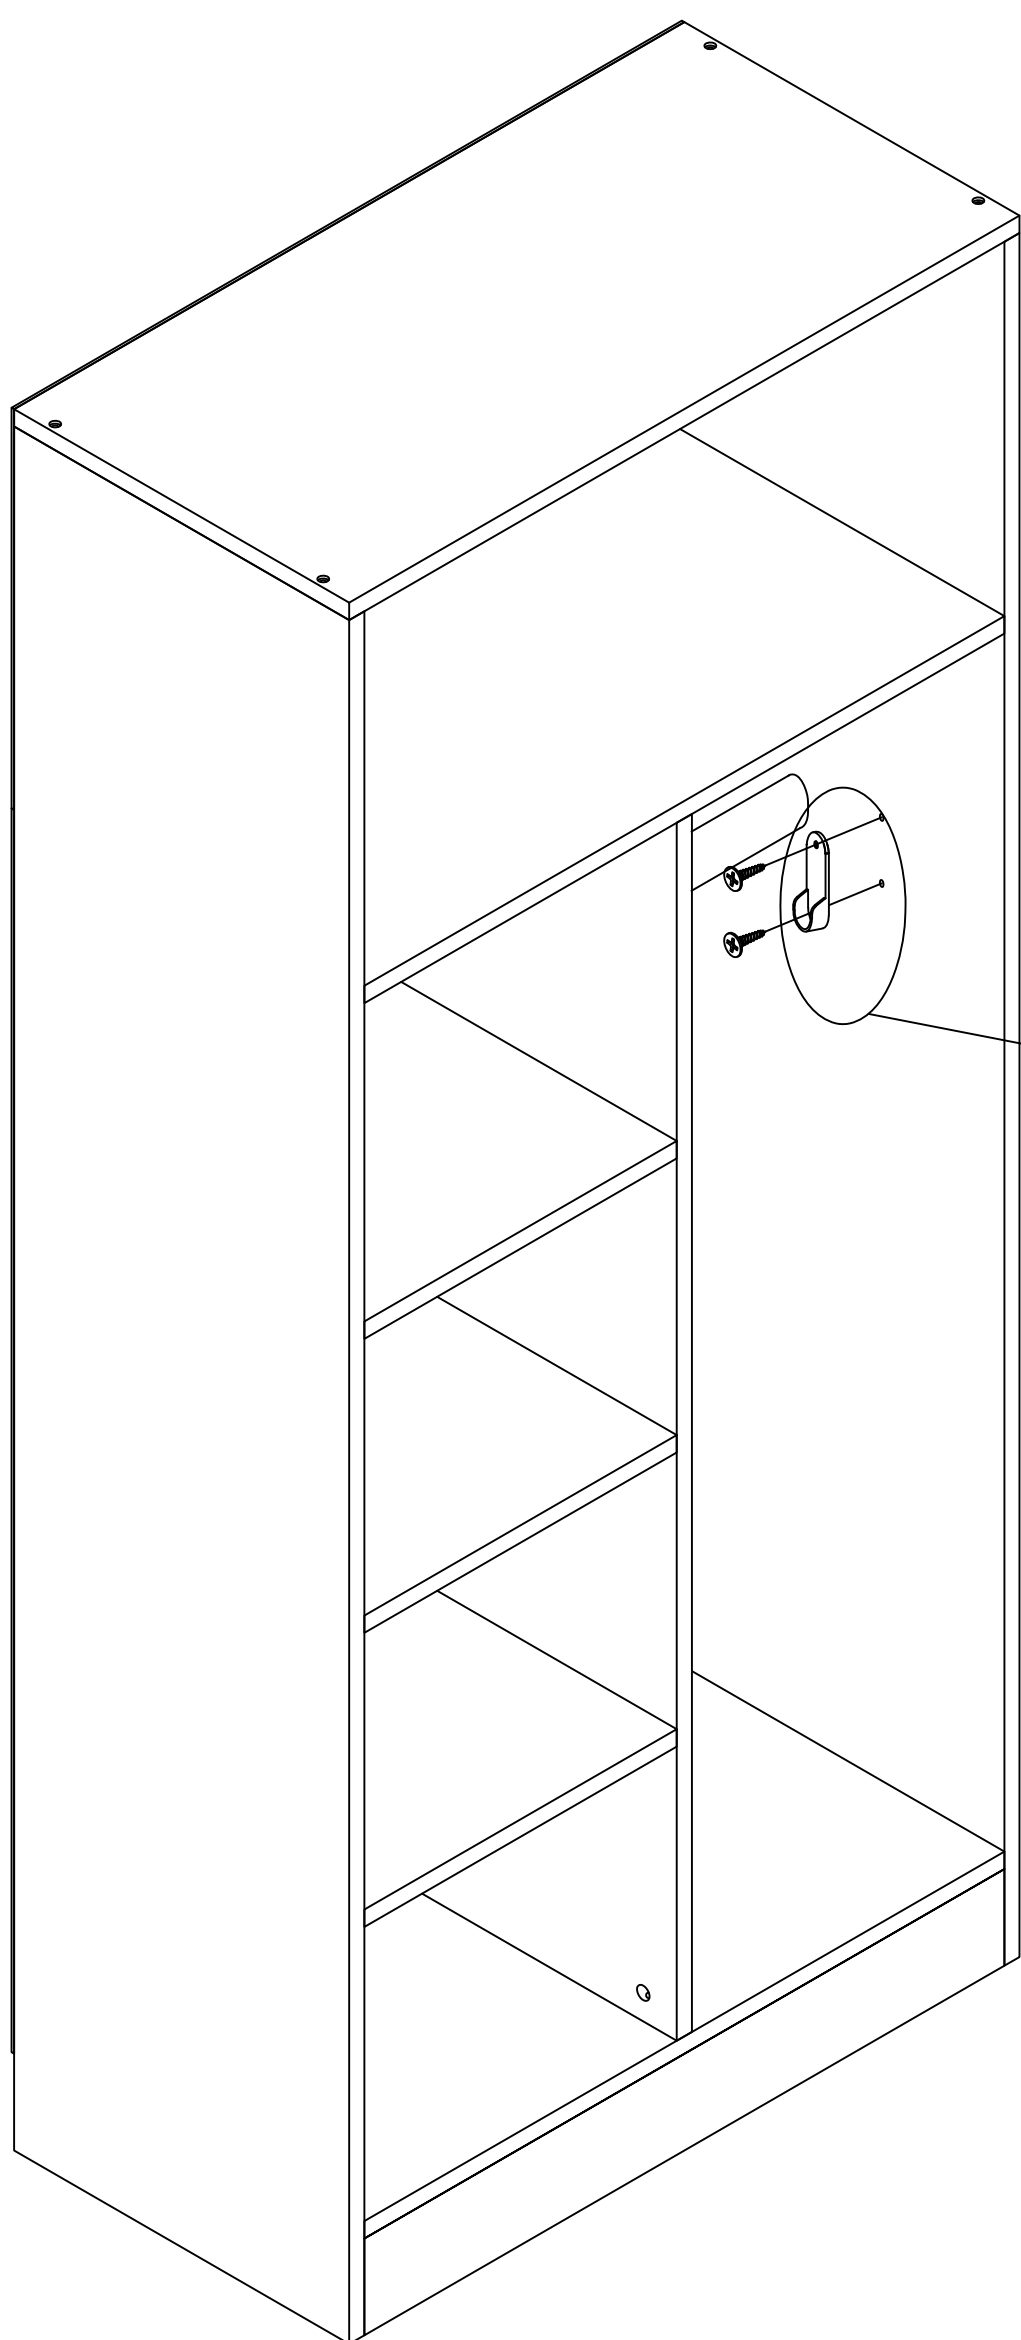


STEP 11

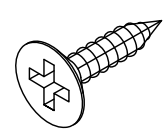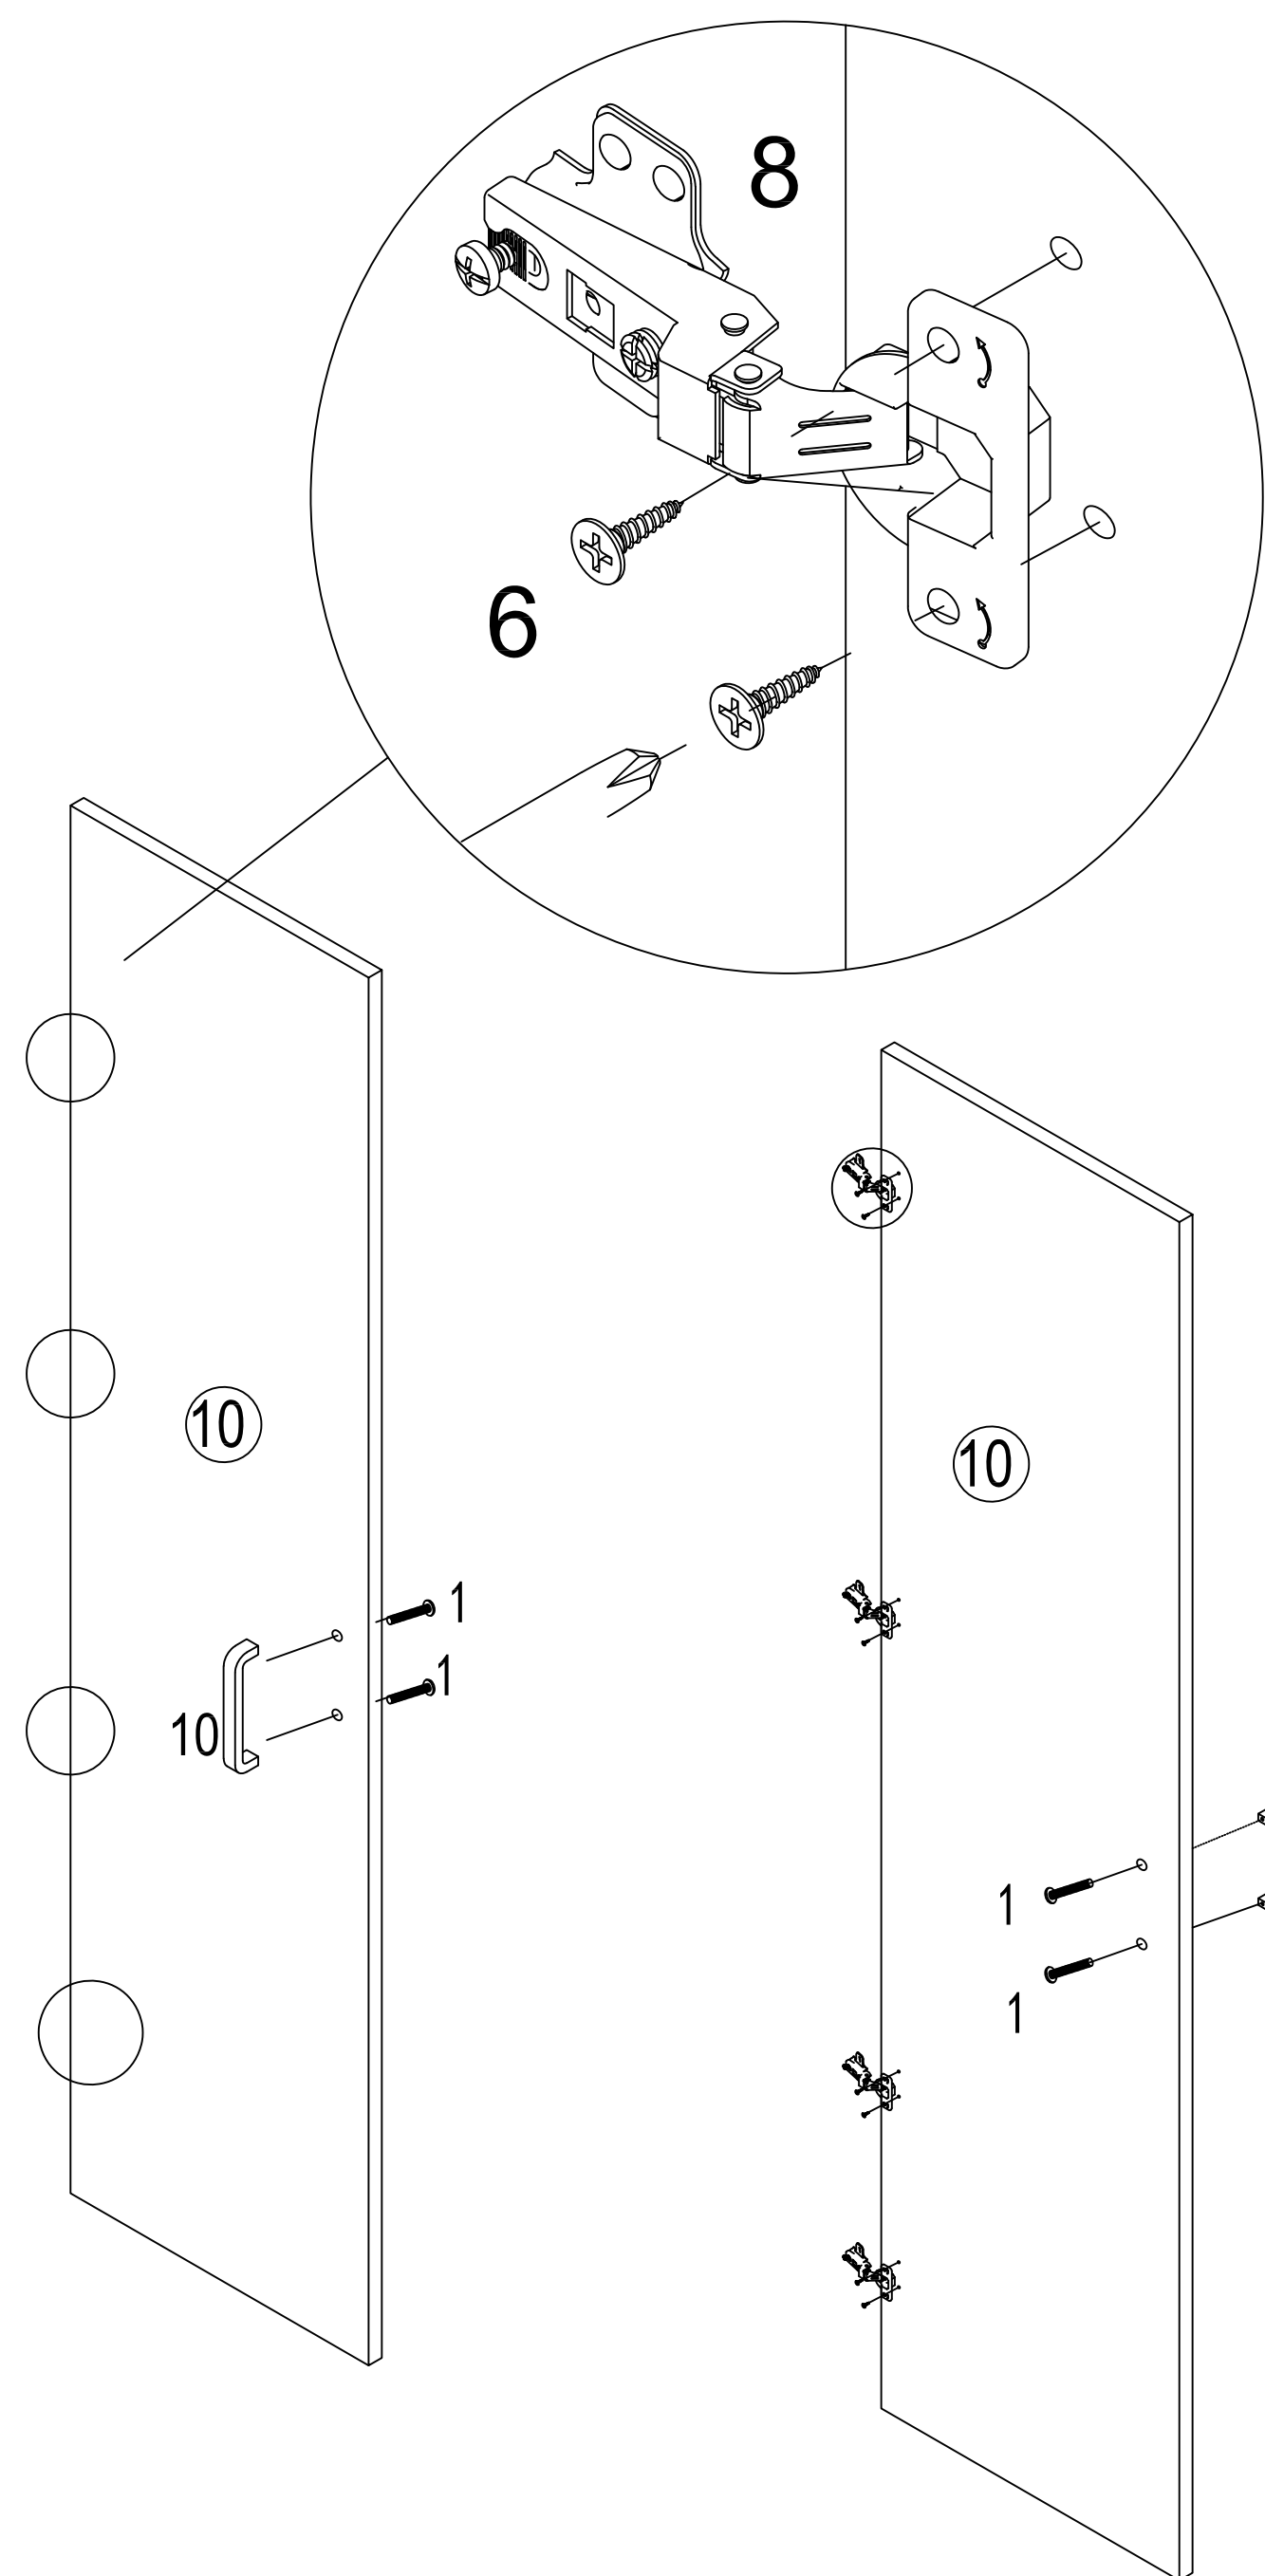


16 x 6
Screw

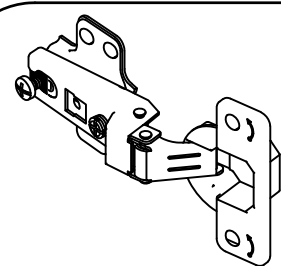


8 x 8
Hinge

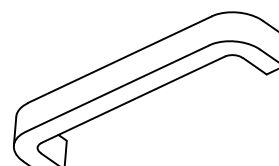



2 x 10
Handle

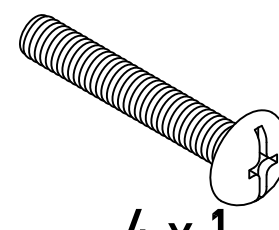

4 x 1
Screw

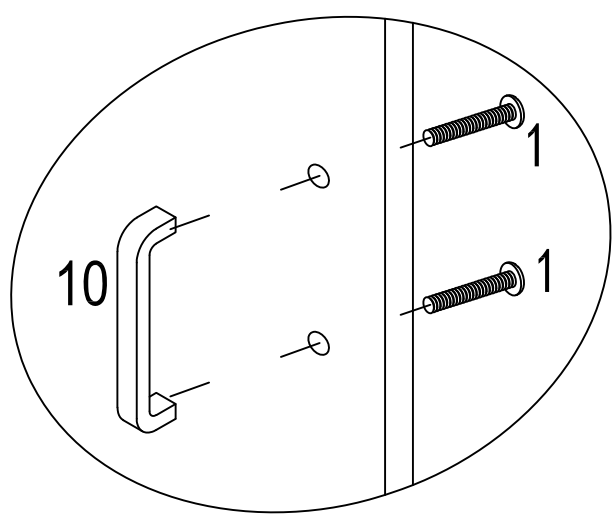

STEP 12

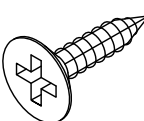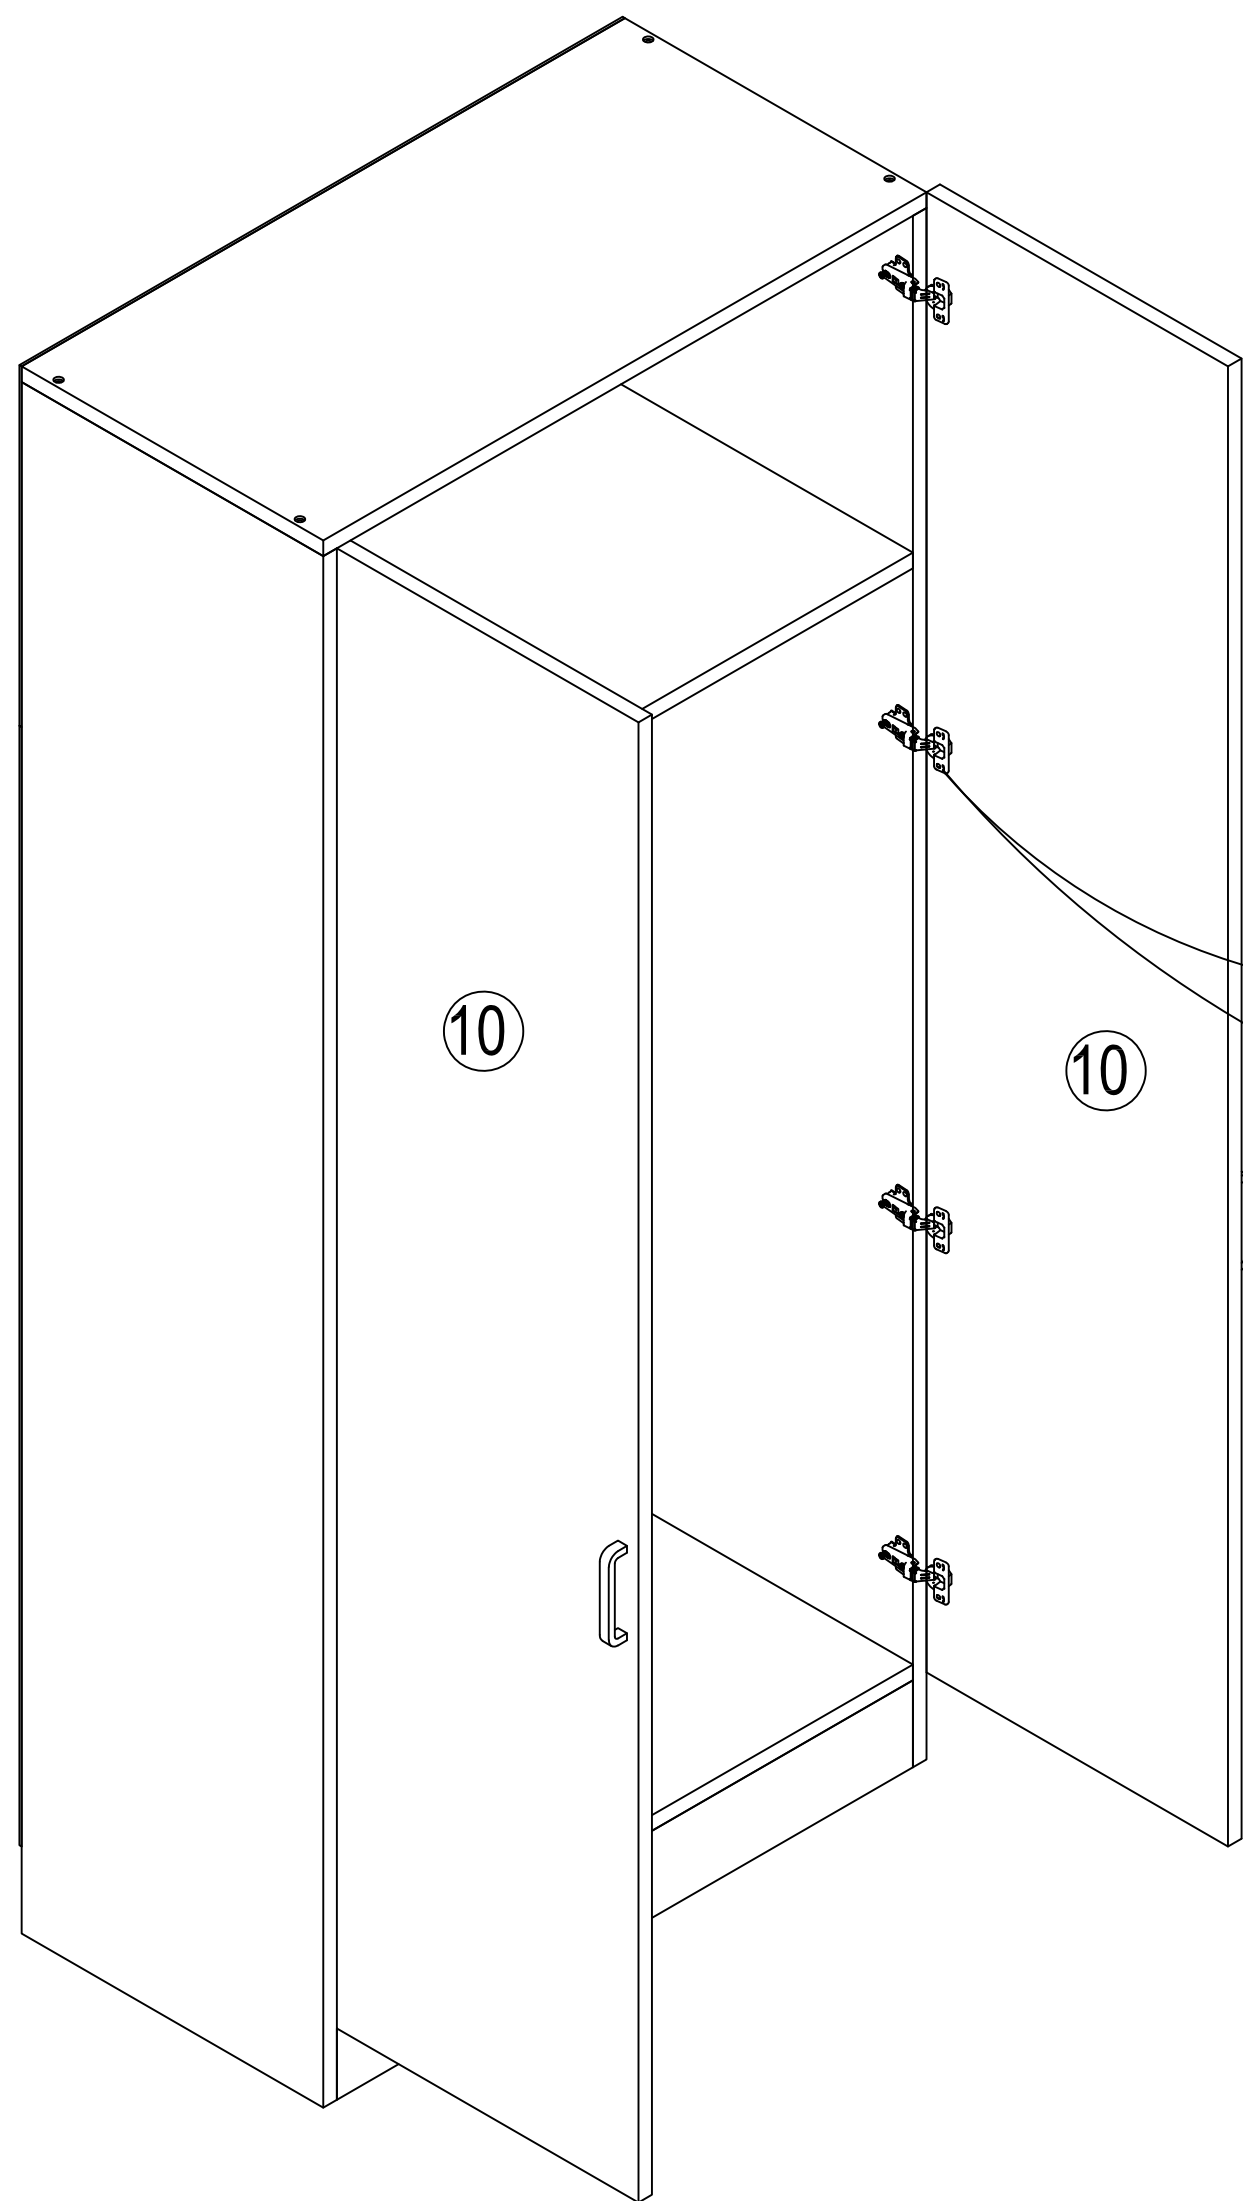

32 x 6
Screw

