## PR-2-16




## **INSTALLATION INSTRUCTIONS**

## Step 1: Drill holes in Wall for screw anchors

Determine your desired location for installation and make a mark for the location . Make 2 marks where mounting screws will be placed as shown below. Make sure shelf is level when marking for location of installation.Drill hole at each end of the marks.



Step 2: Attach Shelf to mounting Surface.

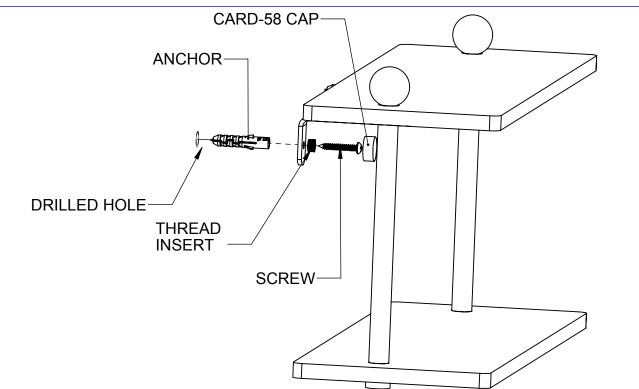

No portion of this document or any artwork contained herein should reproduced in any way without the written conset of ALLIED BRASS INC.