


Windsor Display




Bookcase Cabinet

2LC

Read to access Assembly Video

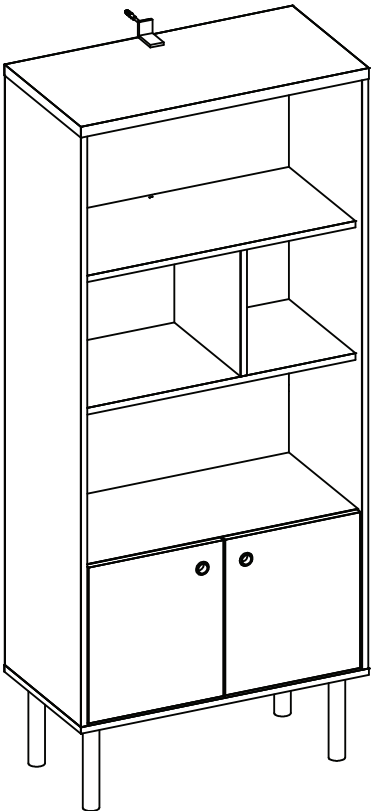


Dimensions

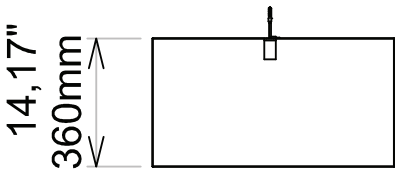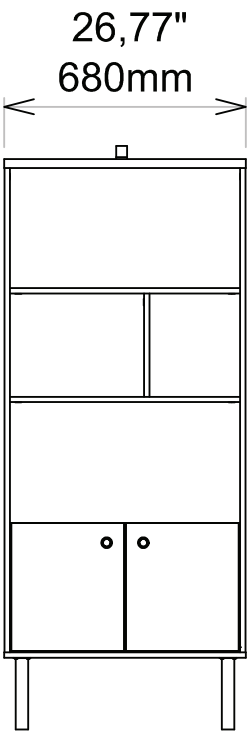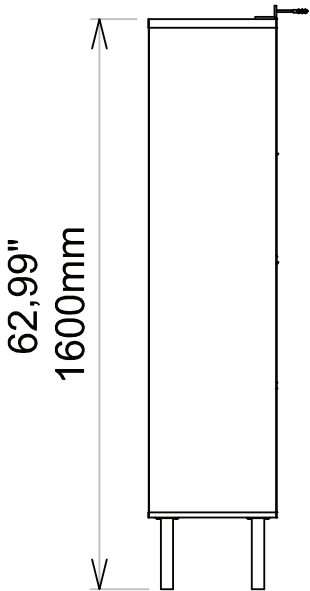

Assembly Instructions

Introduction


- *Read the manual and follow the steps for the perfect assembly.
- *Prepare the environment before you start. Leave the room completely clean to start the assembly. Use the carton of the box as a protection layer to separate and protect the parts in order to avoid damages. Image 01.
- *Don't install it in areas that may be damp, with infiltrations.
- *Observe cuidadosamente el manual y siga estrictamente los pasos de montaje.

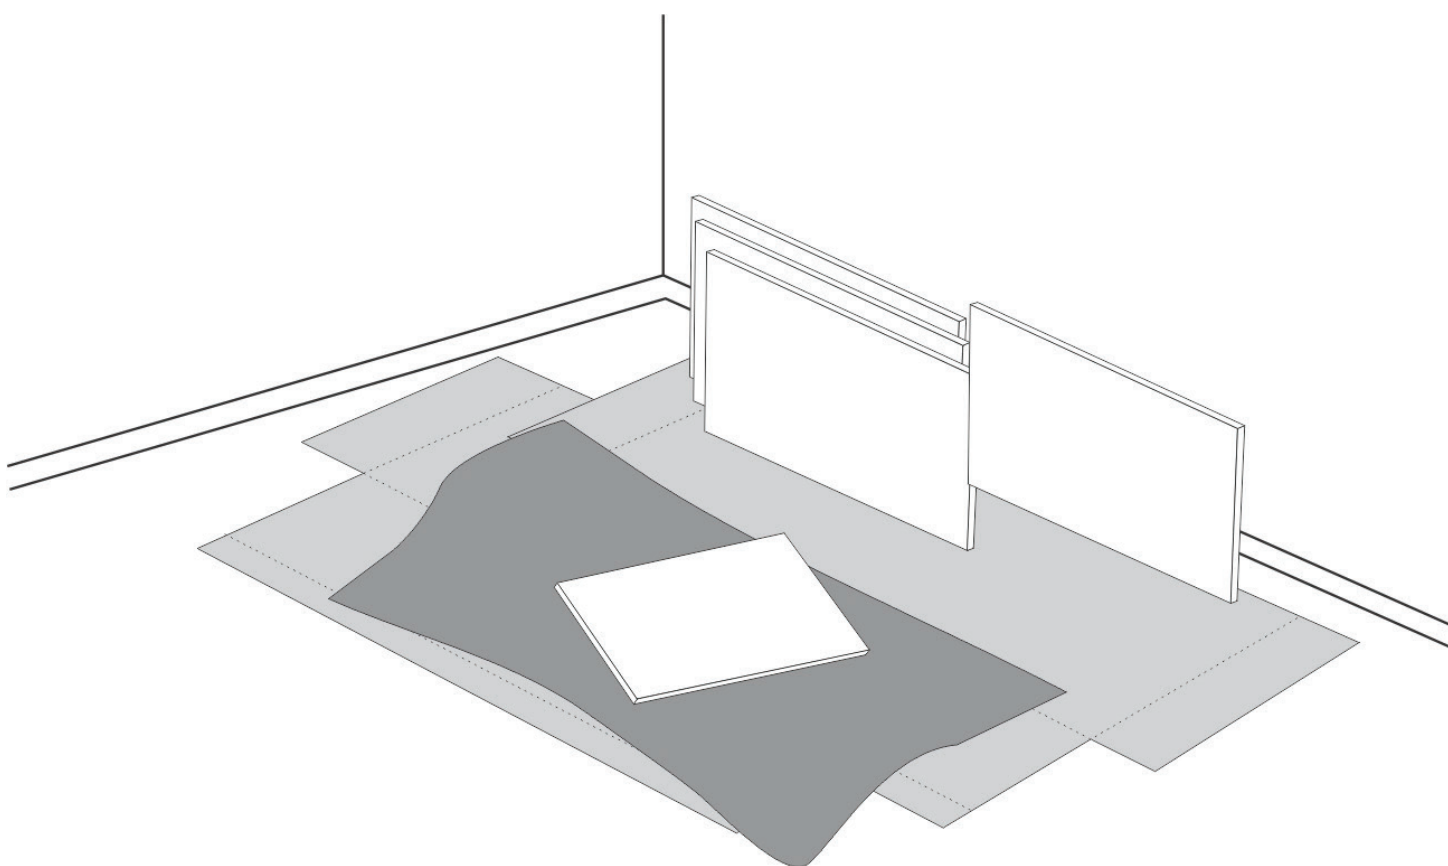



*Image 01 Separate the parts

* Before starting assembly, check all components.
parts list, separate accessories by type and
assemble the furniture lying down.

* The parts come with their code stamped on.

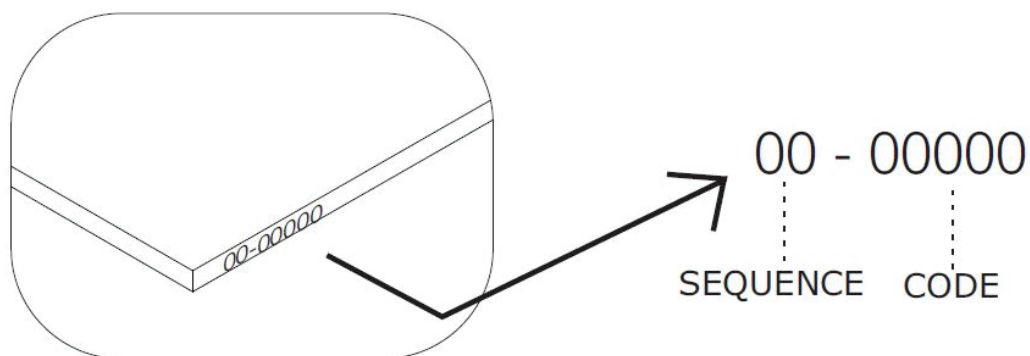

Tools

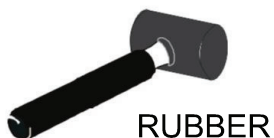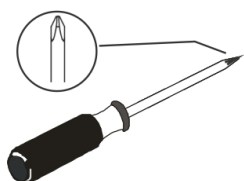

RUBBER



00:40 min



= X01

Accessories



Ⓐ = X24

+2 Extra




Ⓑ = X11



Ⓒ = X11


+2 Extra



Ⓓ = X4




Ⓔ = X16




Ⓕ = X32




Ⓖ = X2



Ⓗ = X16



Ⓘ = X4



Ⓙ = X4




Ⓚ = X2




Ⓛ = X1

SEQUENCE	CODE	DESCRIPTION	QTY
01	50971	RIGHT SIDE	1
02	50973	BOTTOM FIXED SHELF	1
03	50974	FIXED INTERMEDIATE SHELF	1
04	50975	DIVISION	1
05	50981	TOP FIXED SHELF	1
06	50969	BASE	1
07	50980	BOTTOM	1
08	50979	INTERMEDIATE BACKGROUND	1
09	50978	BACKGROUND	2
10	50972	LEFT SIDE	1
11	50970	TOP BOARD	1
12	MET0121	FOOT SUPORT	4
13	PES0370	CYLINDRICAL FOOT	4
14	50977	RIGHT DOOR	1
15	50976	LEFT DOOR	1

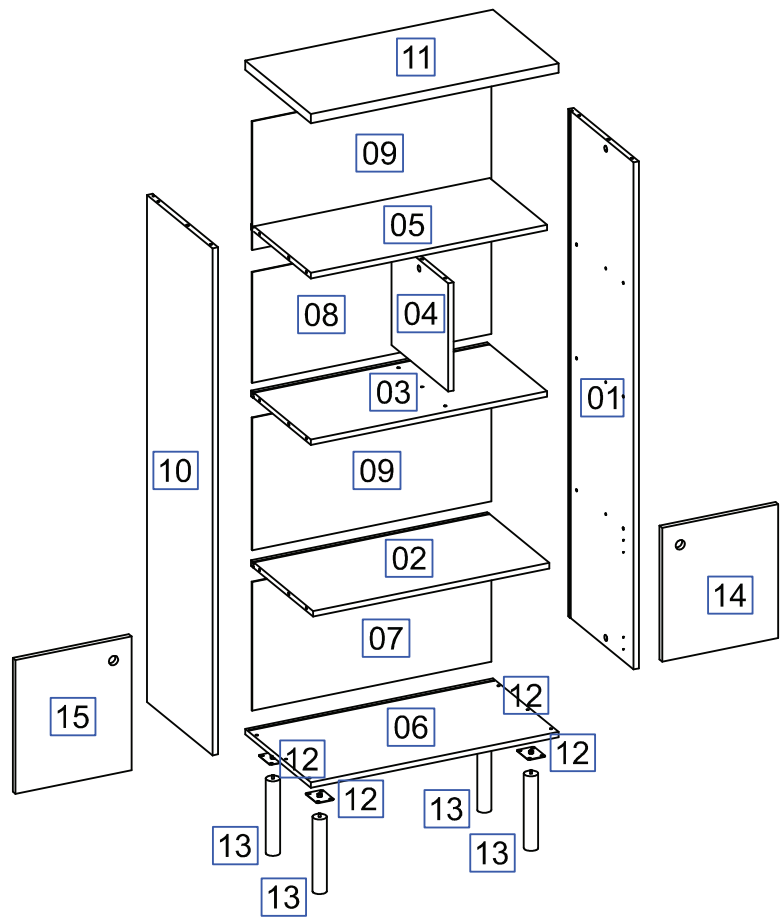


* Before starting, you have to know:


() You should always fix the dowel until the end using a rubber hammer.

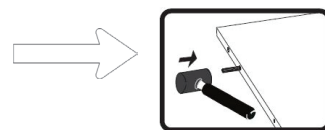

() You must screw thi hardware using an eletric drilling machine or phillips screwdriver only in the 0,236 inches hole (the smaller hole).

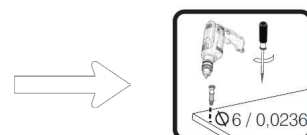

() Always fix this hardware with the arrow faced to the hole.




STEP 01

(A) * Insert accessory "A" into end of part 01.


(B) * Insert accessory "B" and
(C) "C" on the piece 01.

(F) * Insert the accessory "I",
(I) using the screw "F".

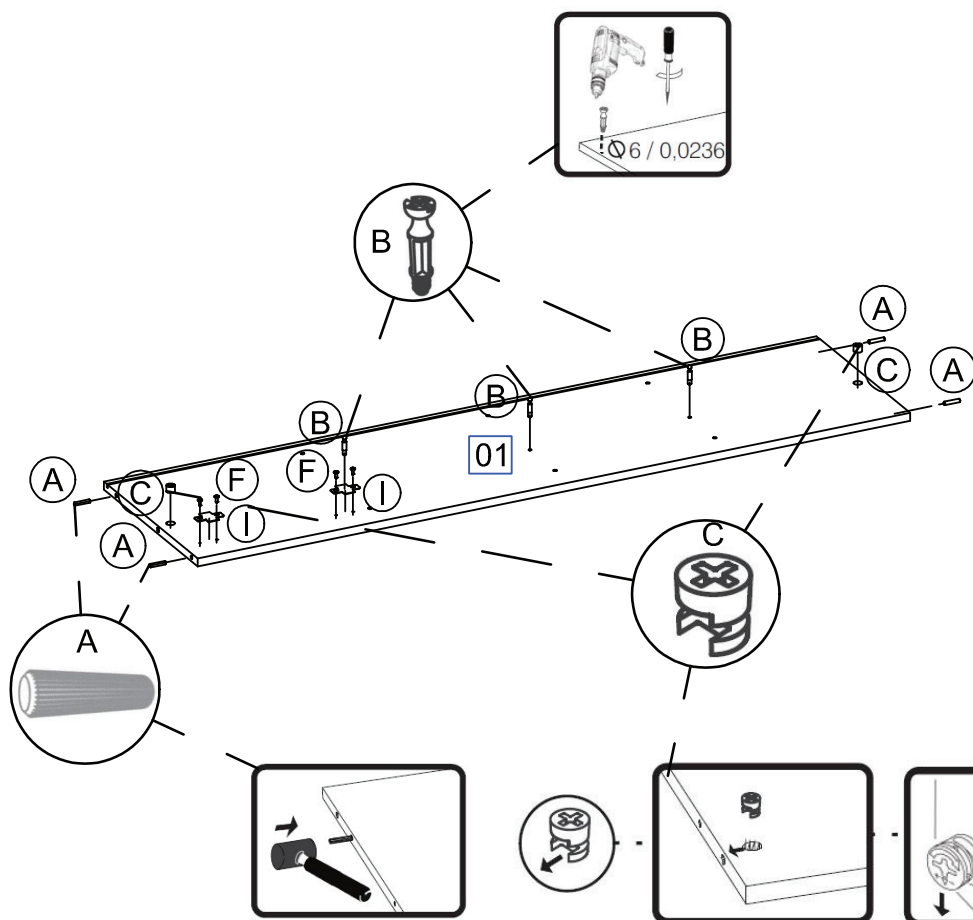


STEP 02

* Insert accessory "A" into ends of part 02 and accessory "C" on face of the piece.

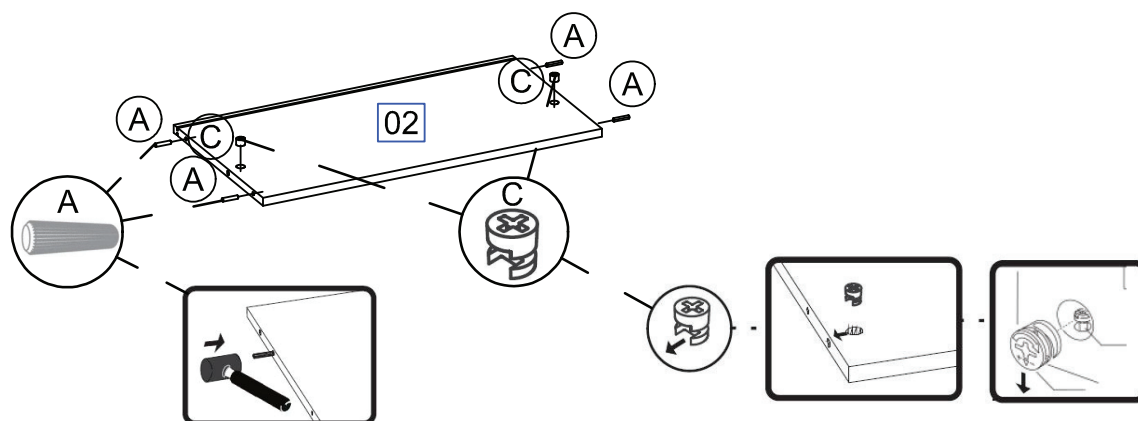


STEP 03

* Insert accessory "A" into ends of part 03 and accessory "C" on face of the piece.

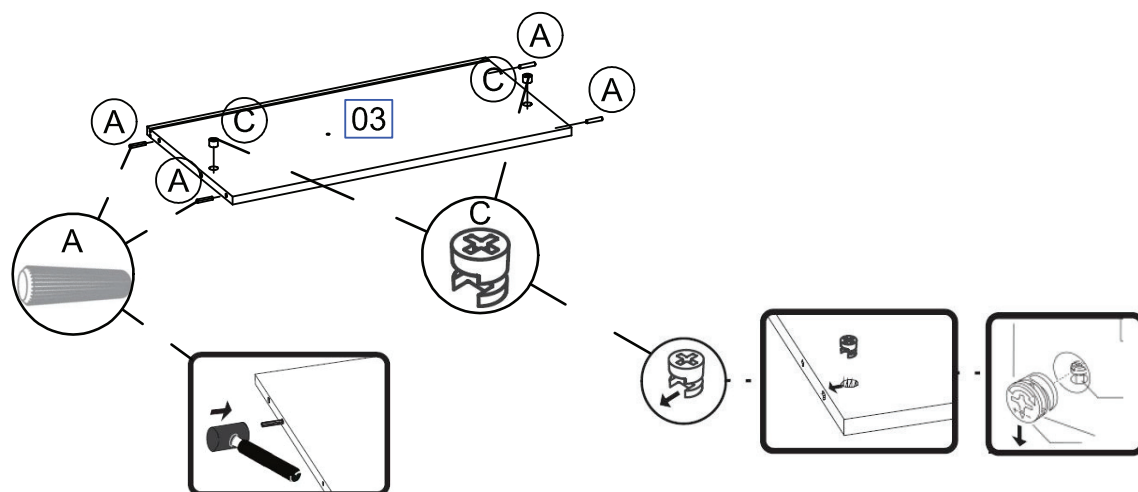


STEP 04

* Insert accessory "A" into the extremity of part 04.

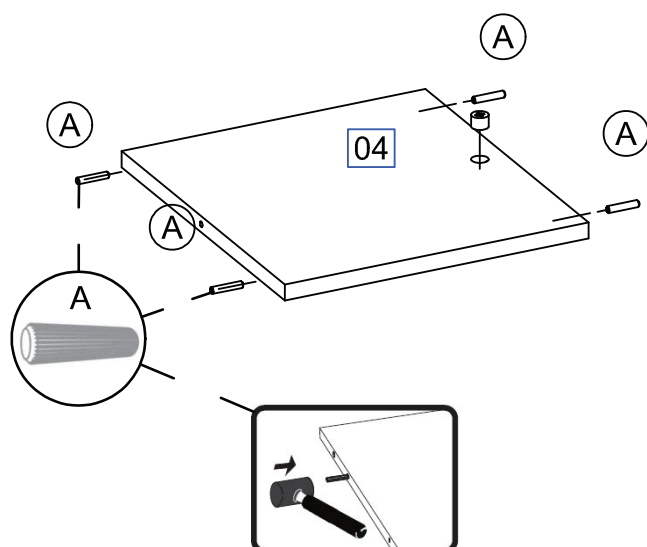


STEP 05

* Insert accessory "A" into piece ends 05 and the accessory "C" on the face.

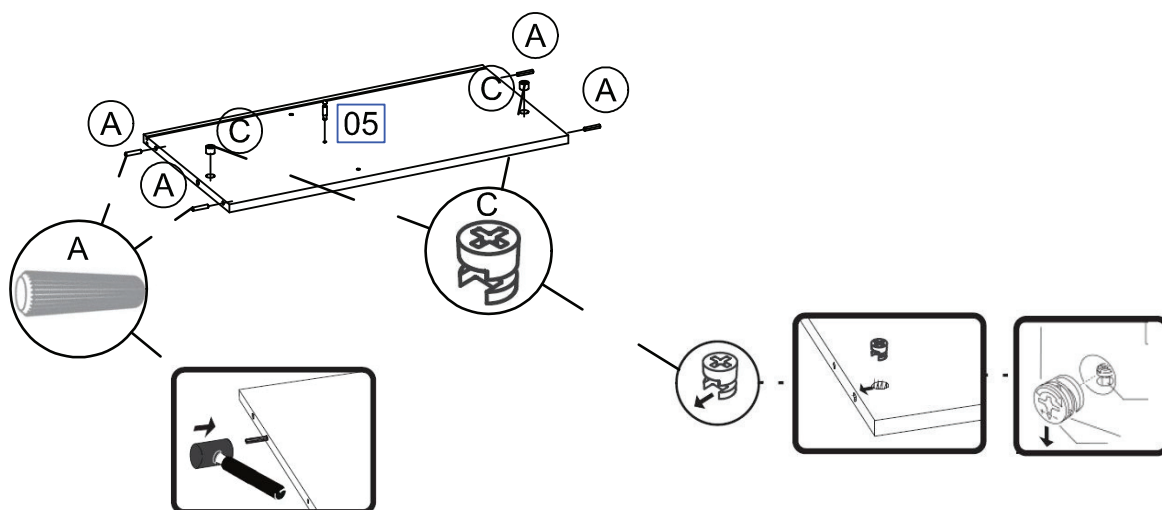


STEP 06

* Insert accessory "B" into surface of part 06.

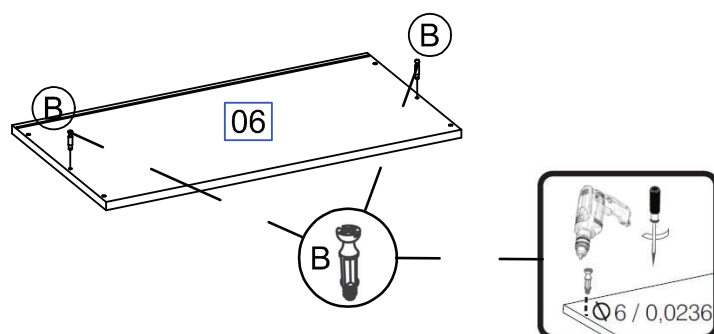


STEP 07


* Insert accessory "B" into surface of piece 11.

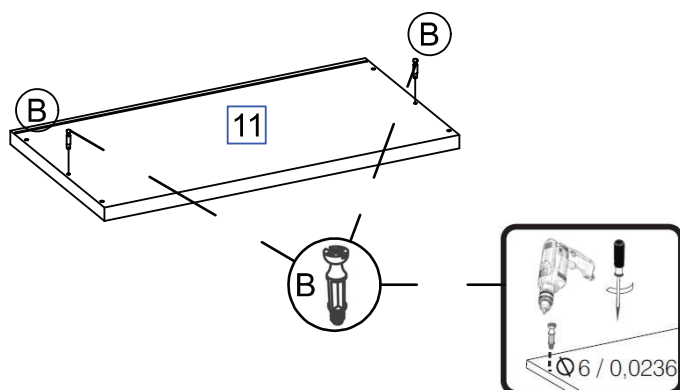

STEP08

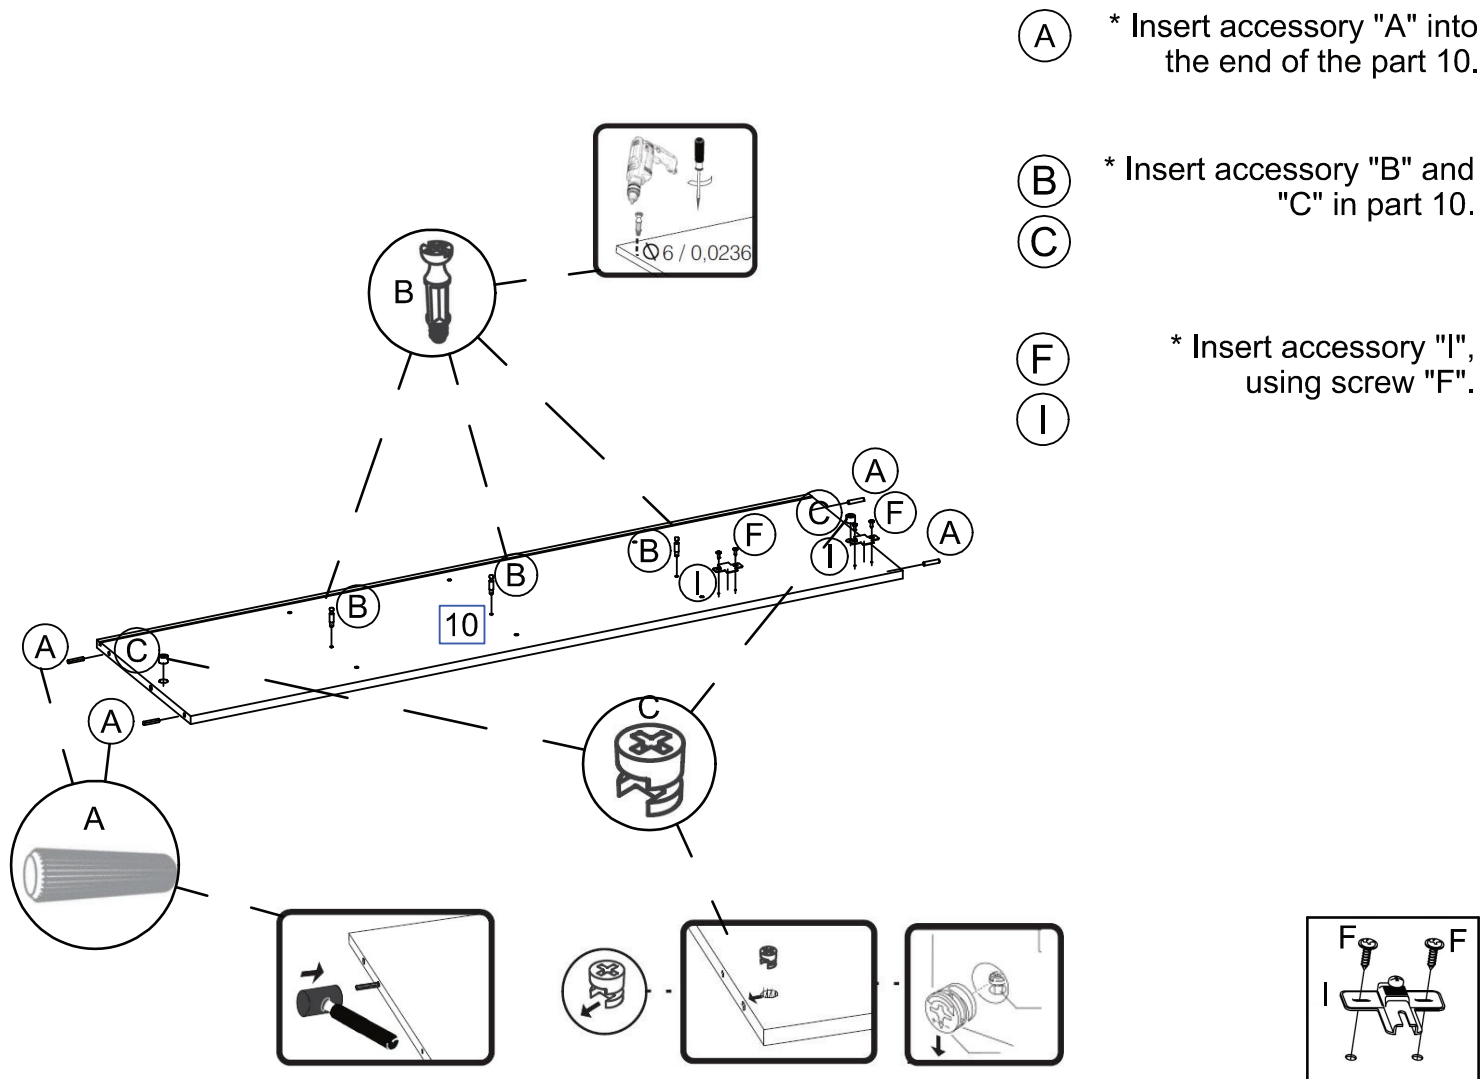


STEP09

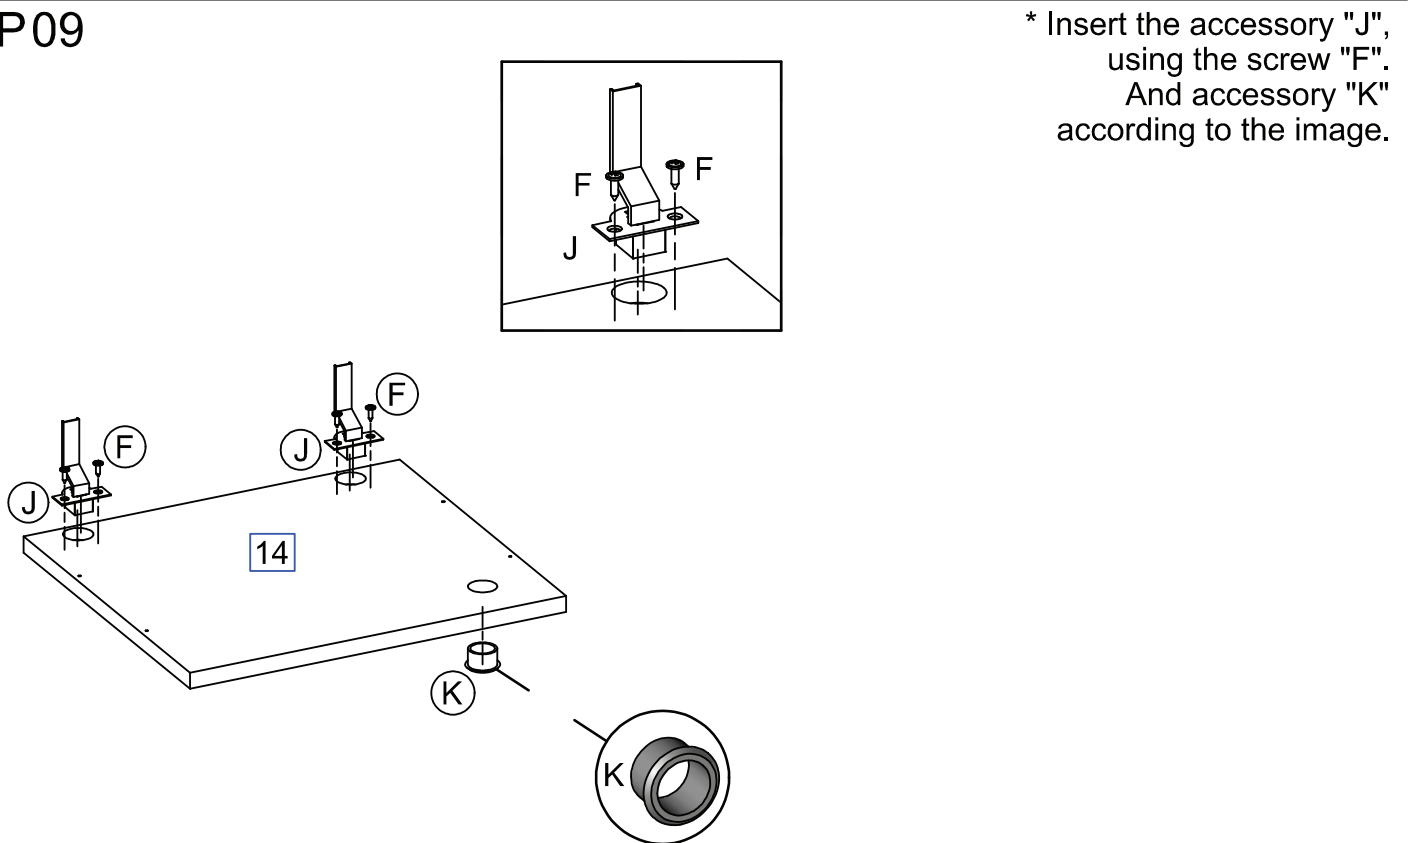


STEP 10

* Insert the accessory "J",
using the screw "F".
And accessory "K"
according to the image.

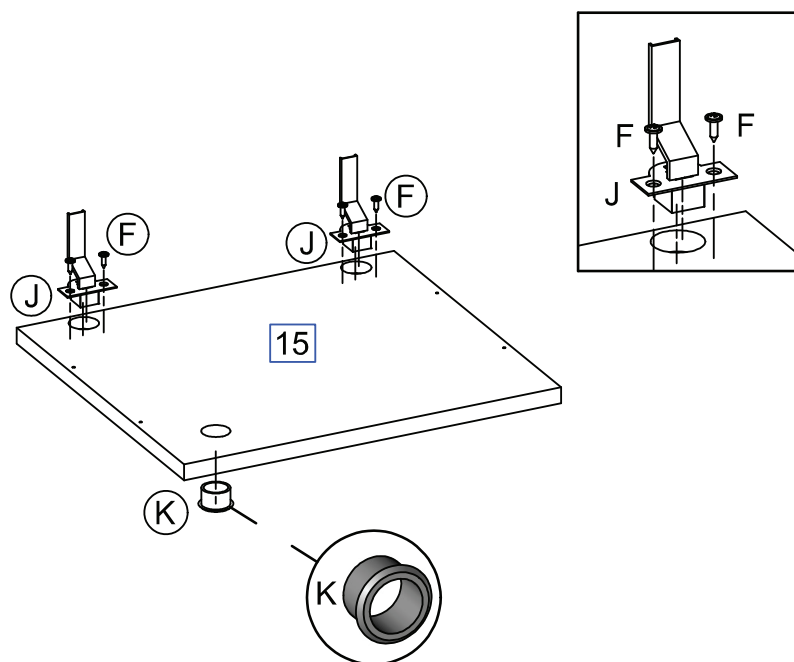


STEP 11

* Join part 02 to the part
01 according to the picture.
Then tighten them using the
drum "C".

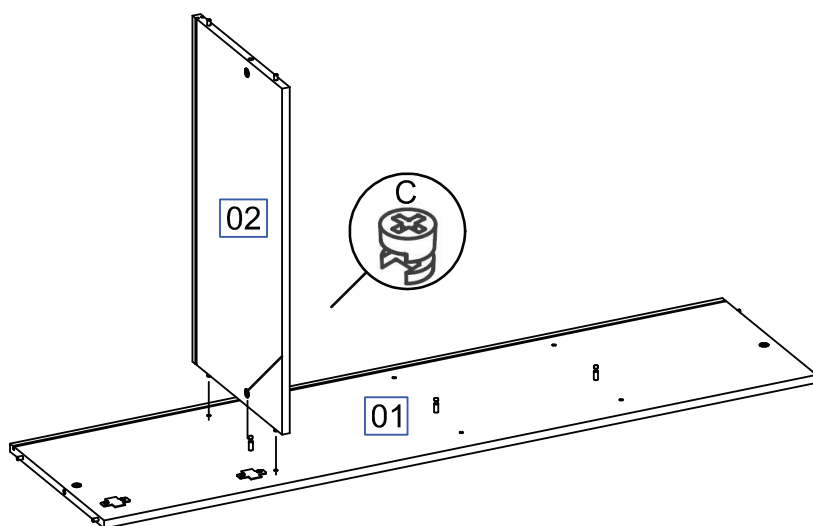


STEP 12

* Join piece 03 to the piece
01 according to the image.
Then screw them using the
drums "C".

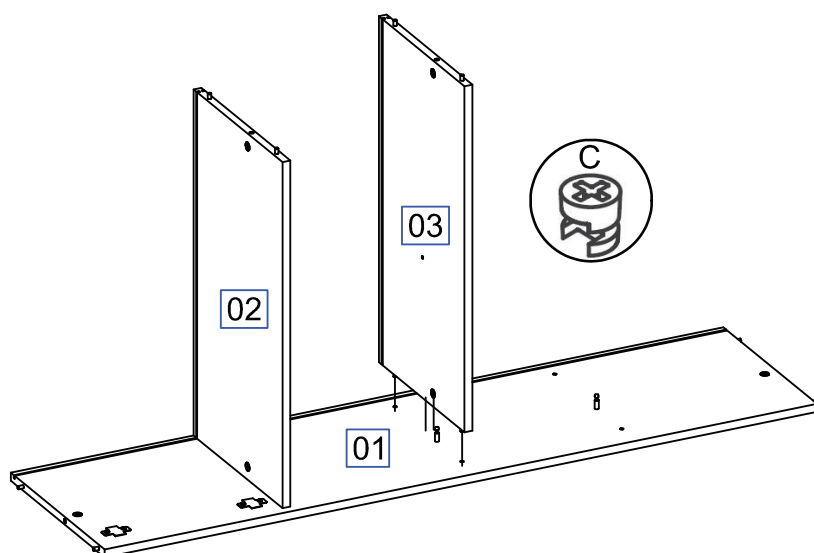



STEP 13

* Assemble part 04 accordingly.
with existing markings
in part 03. Use accessory
"L" for fixing.

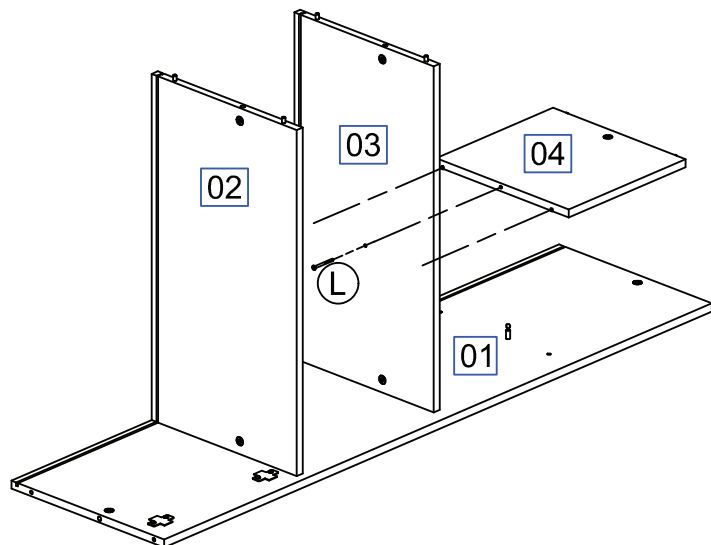



STEP 14

* Assemble part 05 on parts
01 and 04 according to
Image. Then screw
using the nuts "C".

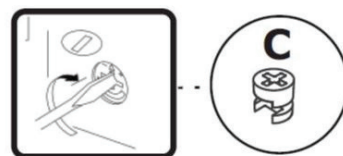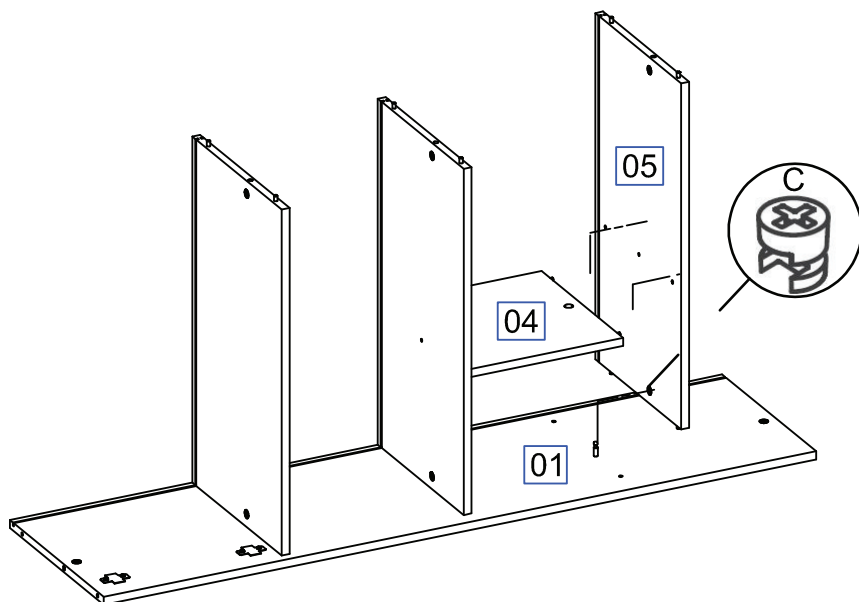


STEP 15

* Assemble part 06 to part
01 according to the picture.
Then tighten them using the
drum "C".

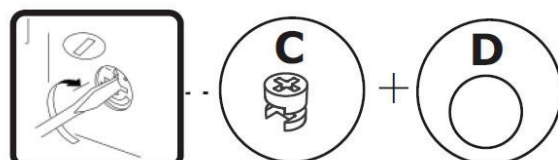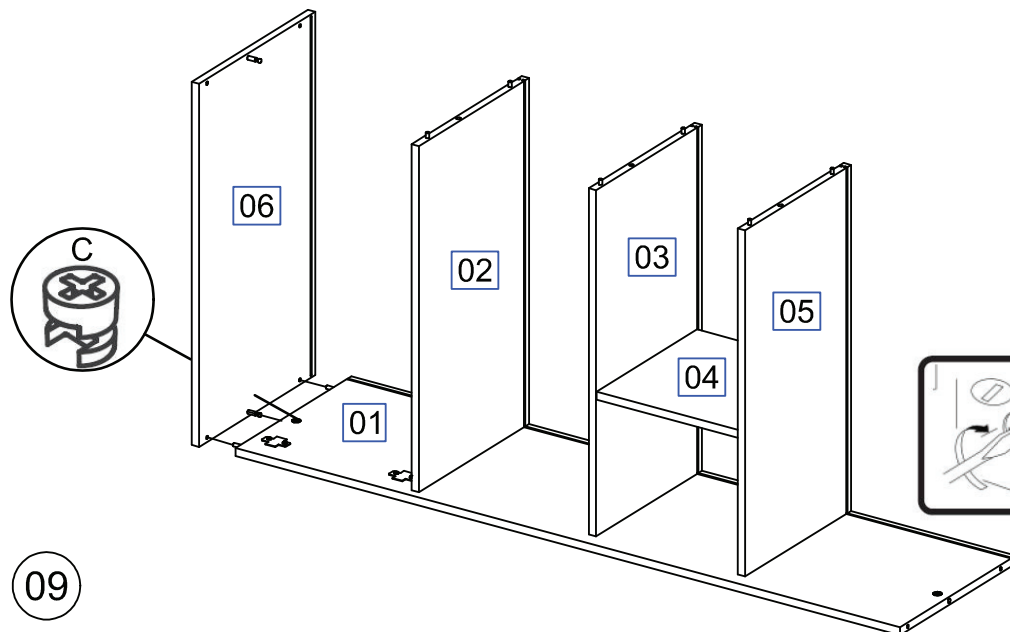


STEP 16

* Join piece 07 in pieces 02 and 06;
Join piece 08 into pieces 03 and 05
According to the picture.

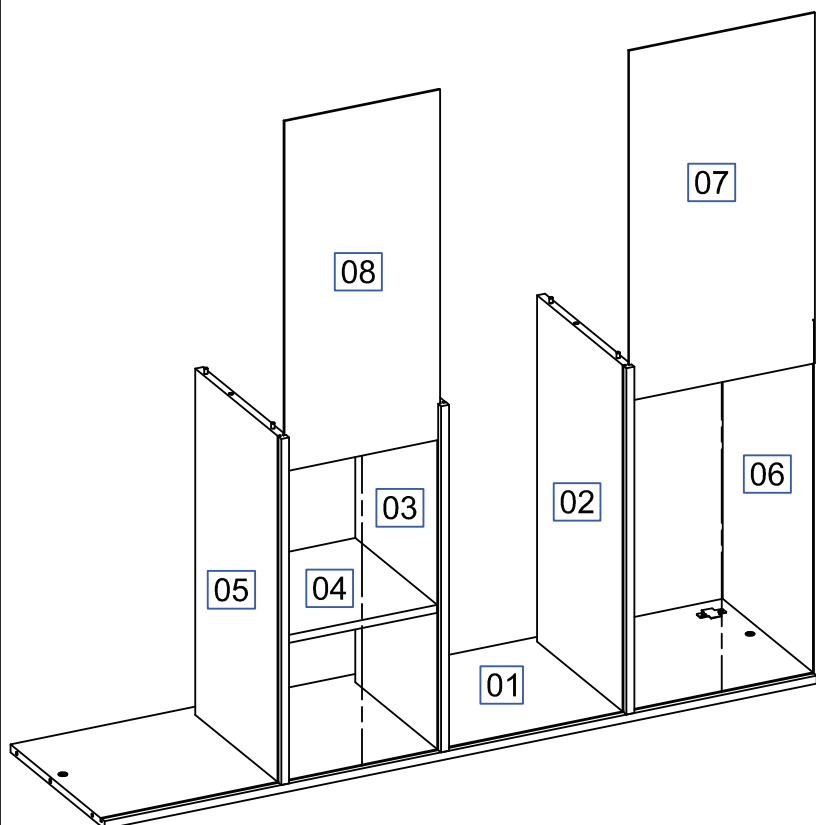


STEP 17


* Join piece 08 in pieces 02 and 03;
Join piece 07 into pieces 01 and 05
according to the picture.

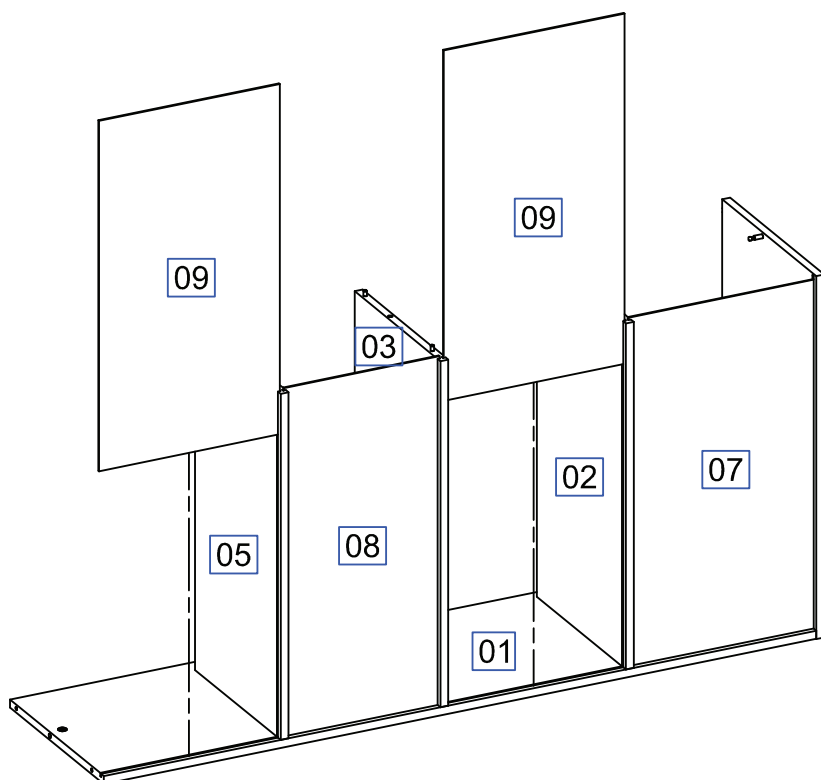

STEP 18



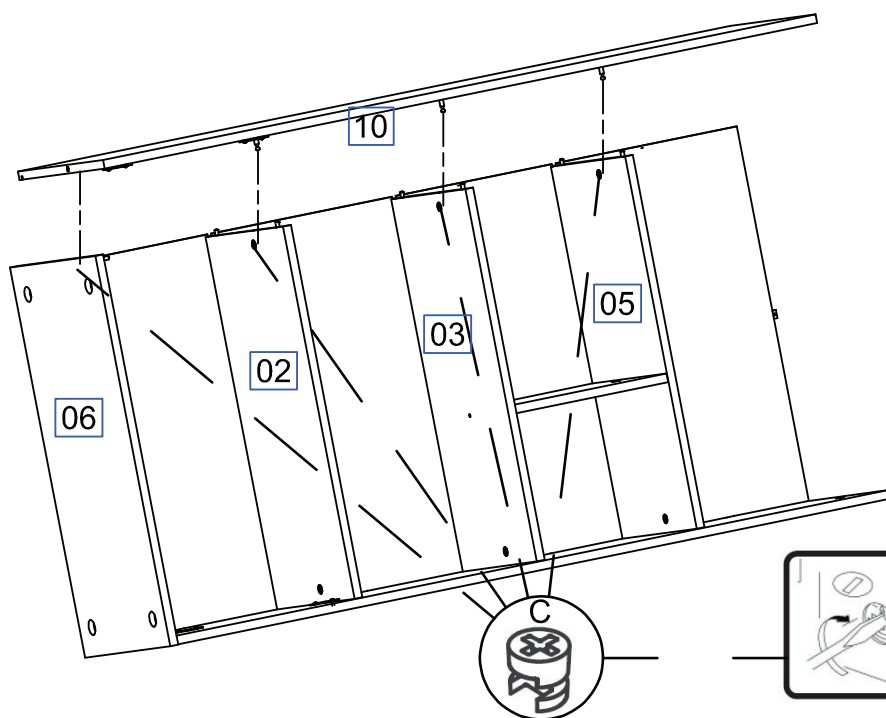


* Assemble part 10 on parts 02, 03, 05 and 06 according to the picture. Then tighten them using the drums "C".

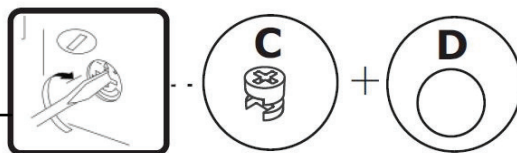



STEP 19

* Assemble part 11 on parts 01, and 10 according to the picture. Then tighten them using the "C" nuts. Insert accessory "H" using screw "E" to secure the bottom.

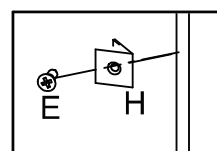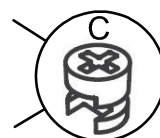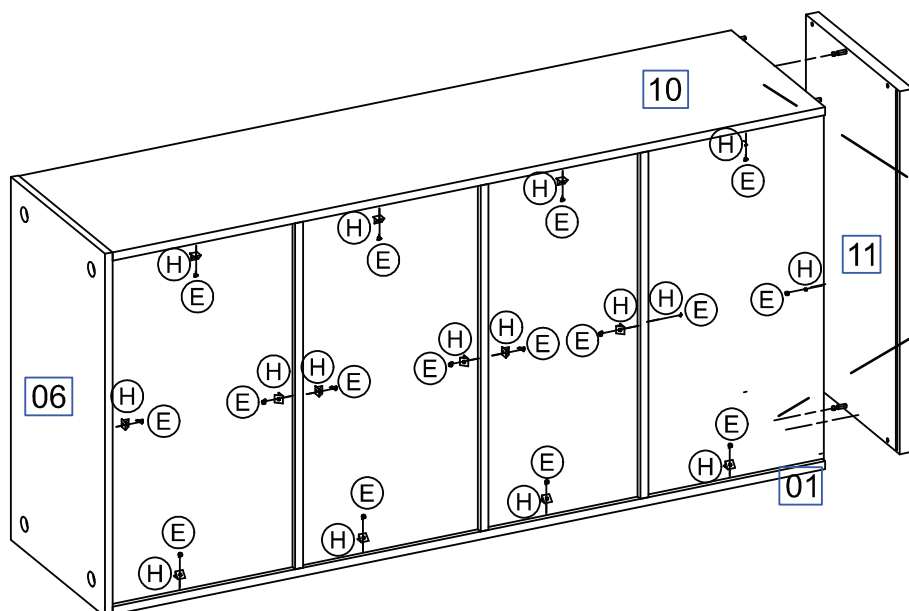


STEP 20

* Screw the part 12 using accessory "F" according to with existing markings from part 06.

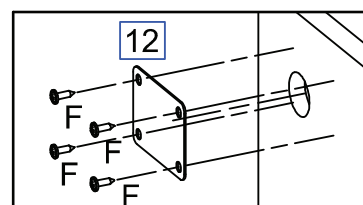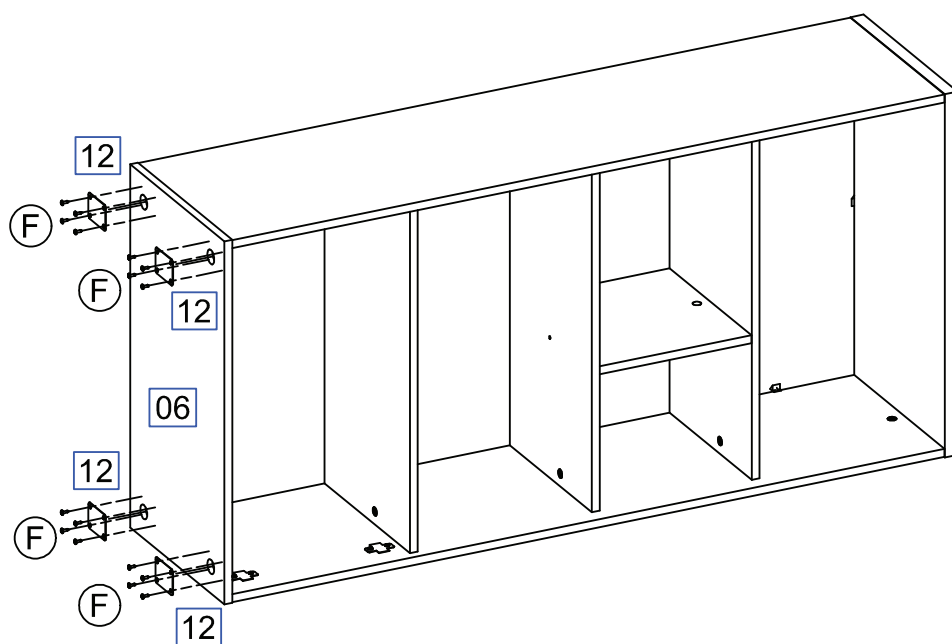



STEP 21

* Attach part 13 to the part 12 according to the image.

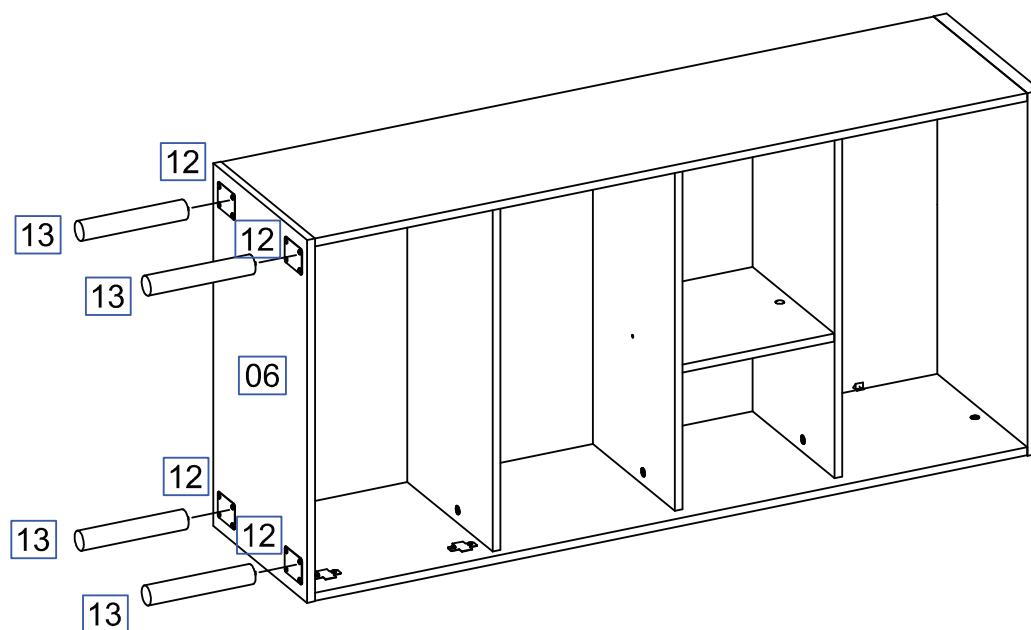


STEP 22

* Mount accessory "J" on ports 12 and 13 and the accessory "I" on sides 01 and 10.

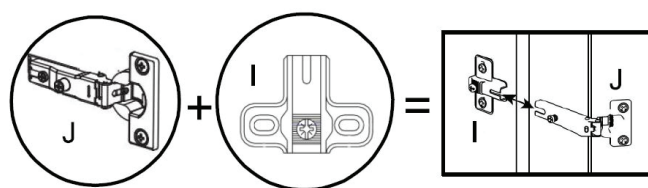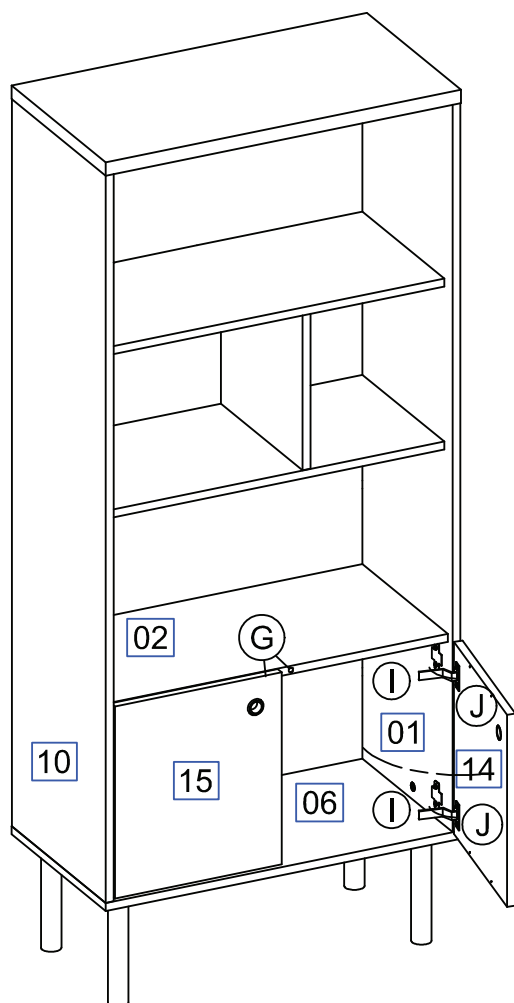


FINAL VIEW

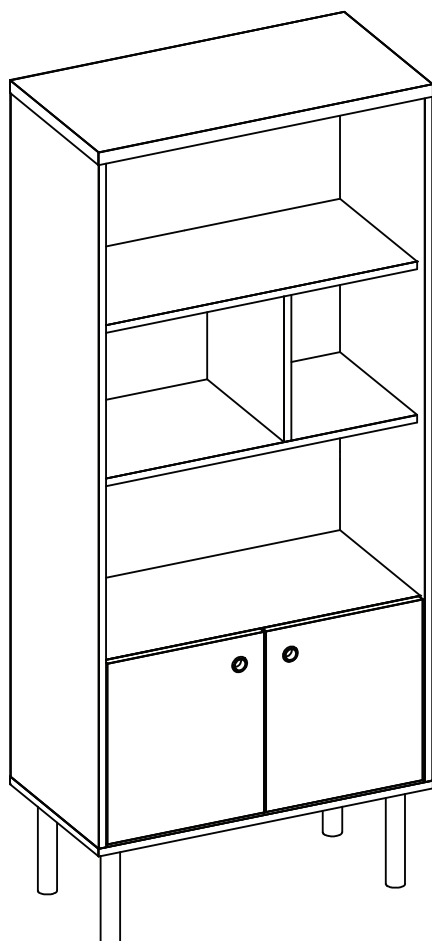

WARNING

TIPOVER SYSTEM


**Please attach the hardware(Z1) using screw (Z2) in the part11, according to the image.
Then, drill the wall to press the wings (Z3) into the hole.**

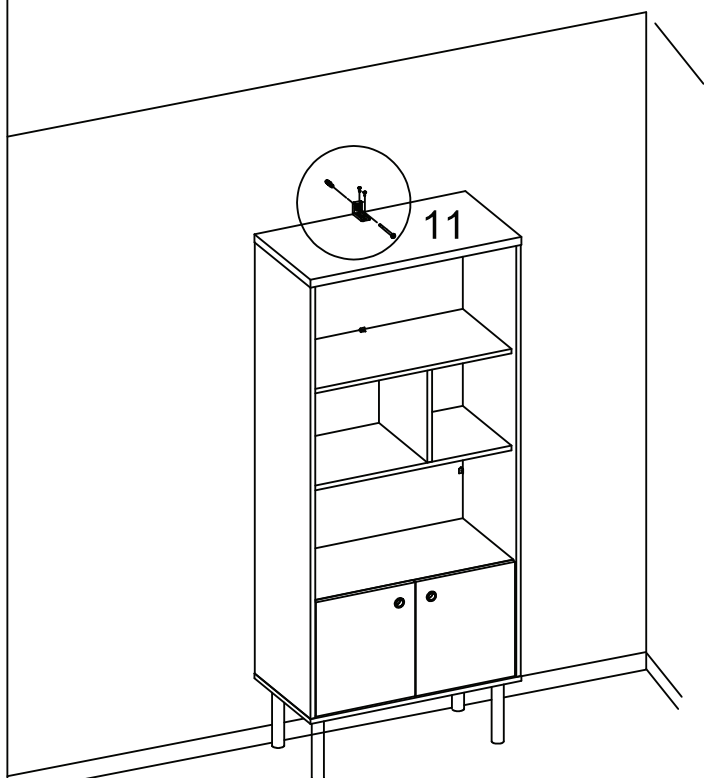


Hardware (Z3), plugged in the wall.

Now fix entertainment unit into the wall with hardware (Z1) and Screw (Z4)


WEIGHT



* Be aware about maximum weights shown in the assembly instruction.

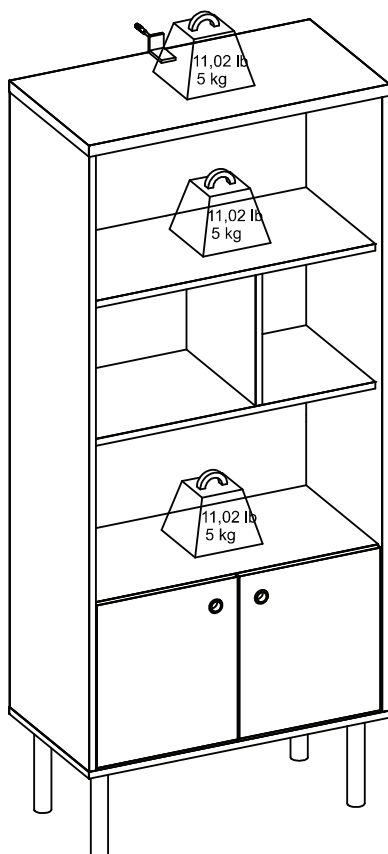

AVOID ACCIDENTS

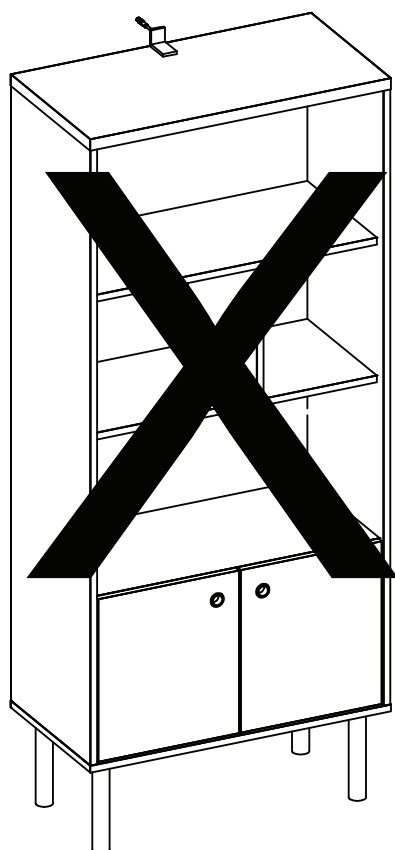

* Do not climb or stand on the furniture.

EDIÇÃO F

MAINTENANCE AND CLEANING

* For cleaning use only a slightly damp cloth.