



ASSEMBLY INSTRUCTION

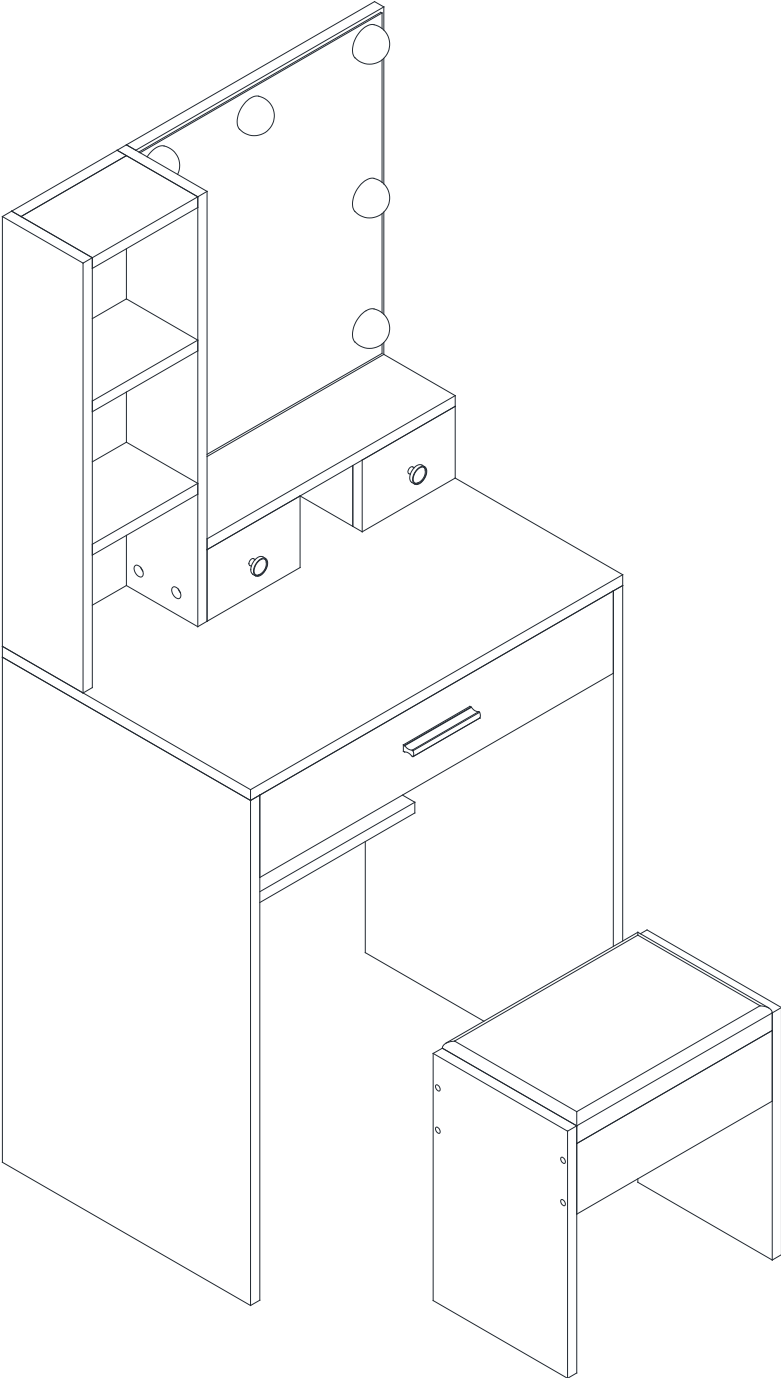

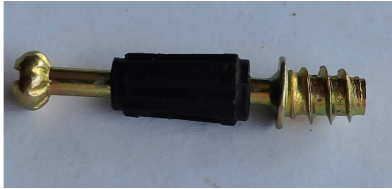

Ax60



Bx60



Cx13



Dx1



Ex4



Fx2




Your Handle will be one of them

Hx2



Lx14

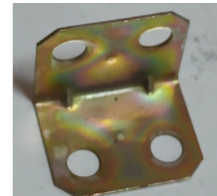


Mx2



Your Handle will be one of them







Nx1

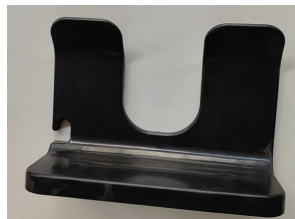


Ox1




Px1

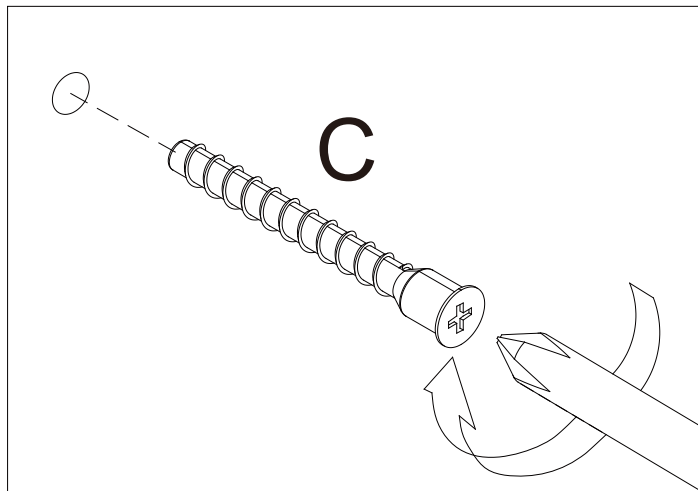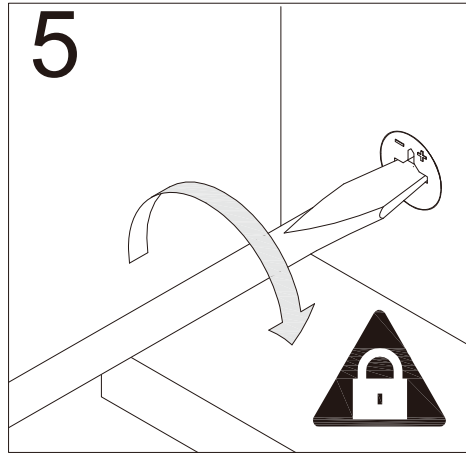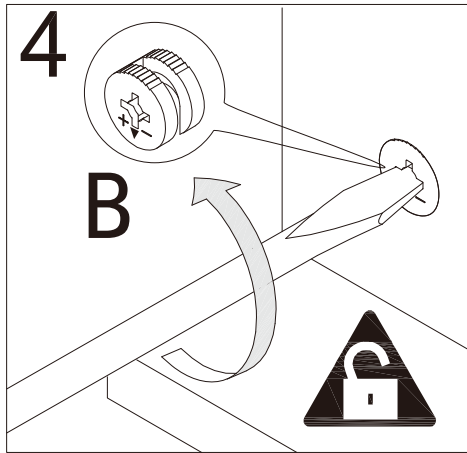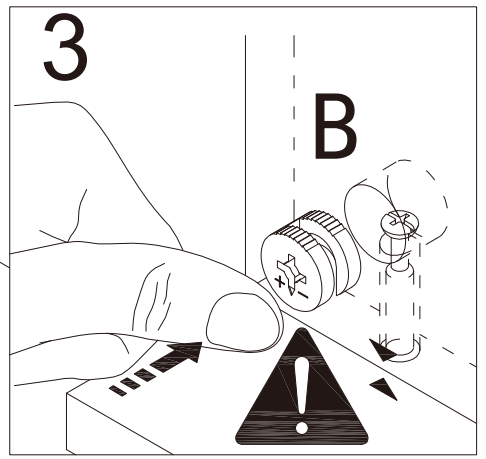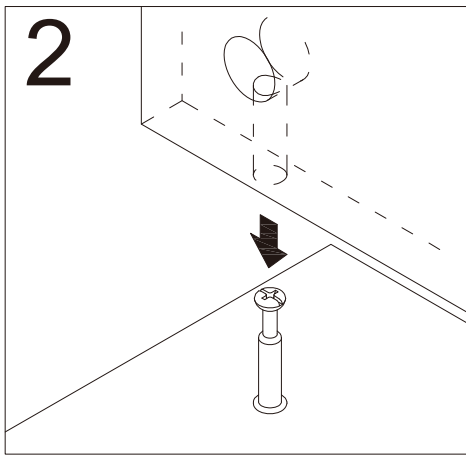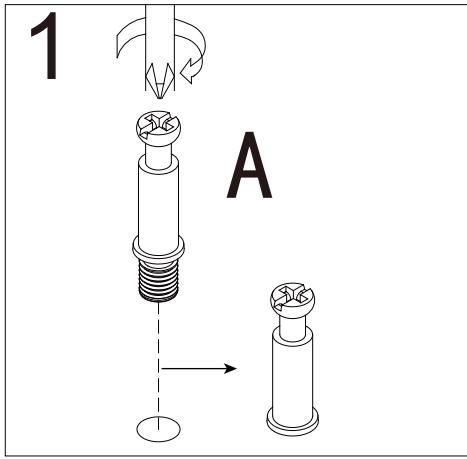

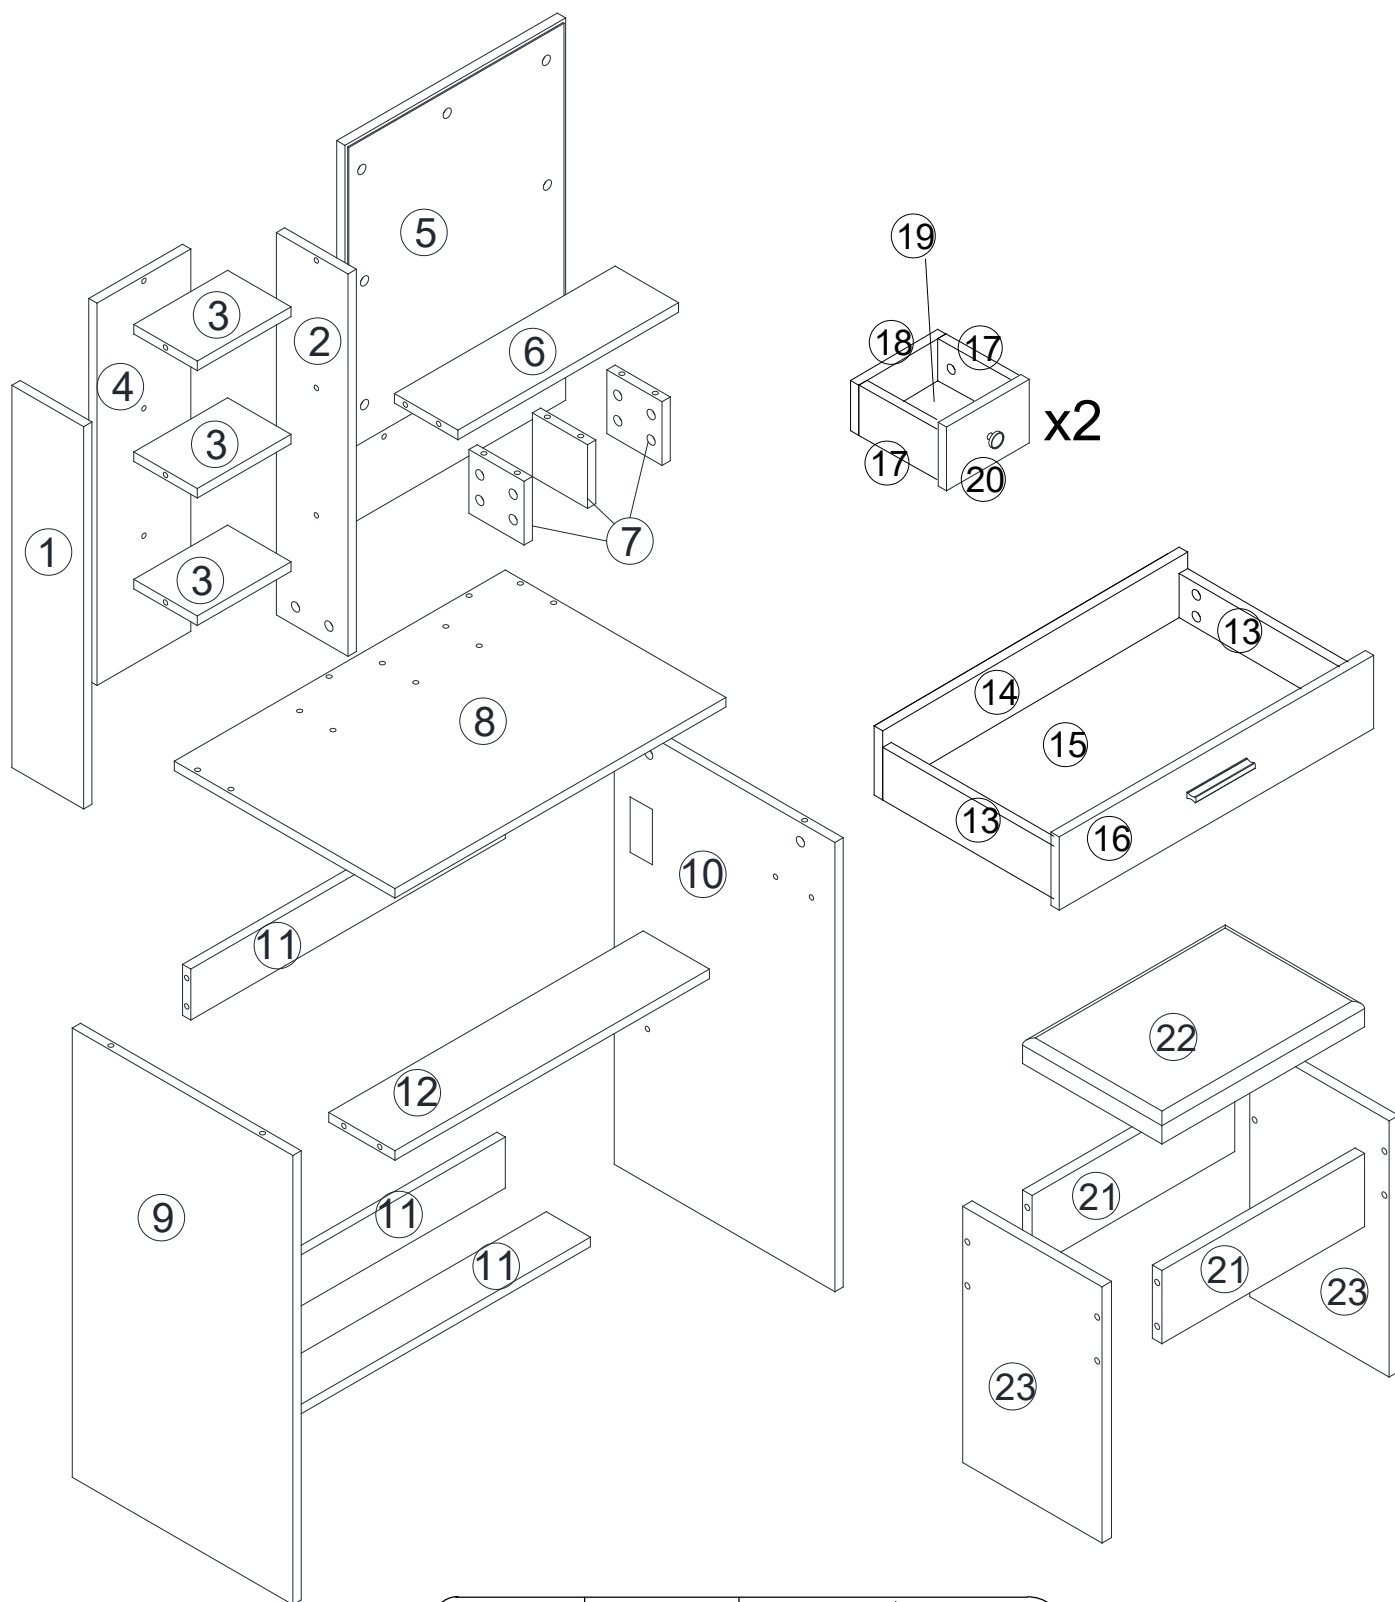


1 - x1	8 - x1	15 - x1	22 - x1
2 - x1	9 - x1	16 - x1	23 - x2
3 - x3	10 - x1	17 - x4	
4 - x1	11 - x3	18 - x2	
5 - x1	12 - x1	19 - x2	
6 - x1	13 - x2	20 - x2	
7 - x3	14 - x2	21 - x2	


STEP 1

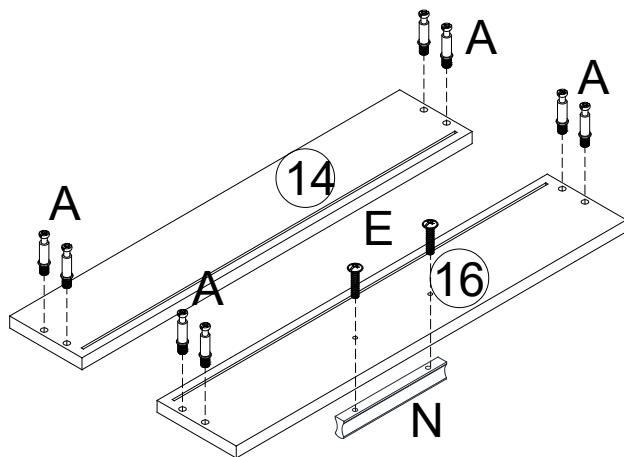

STEP 2

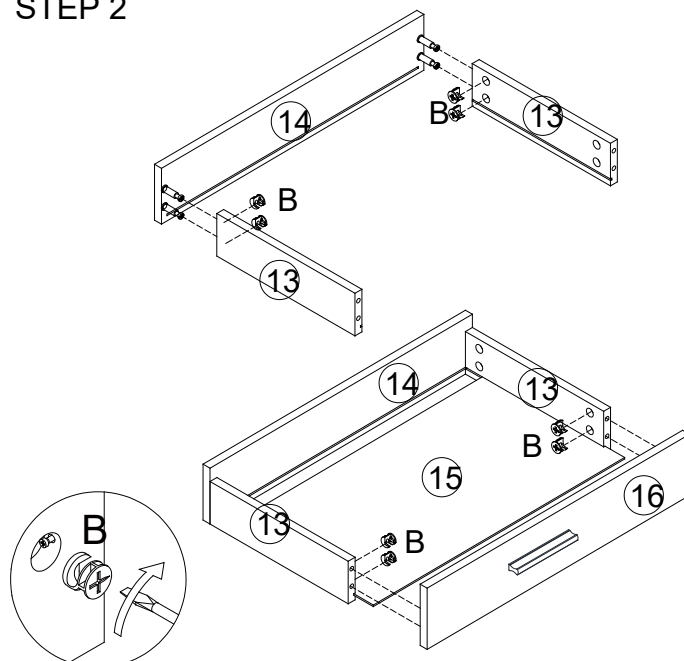


STEP 3

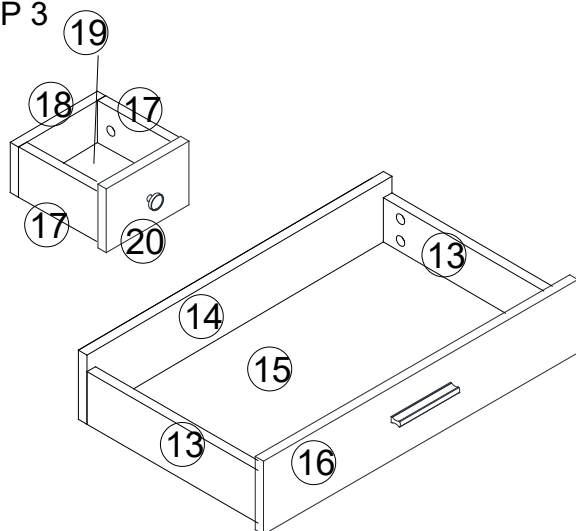


The three drawers are installed the same way


STEP 4

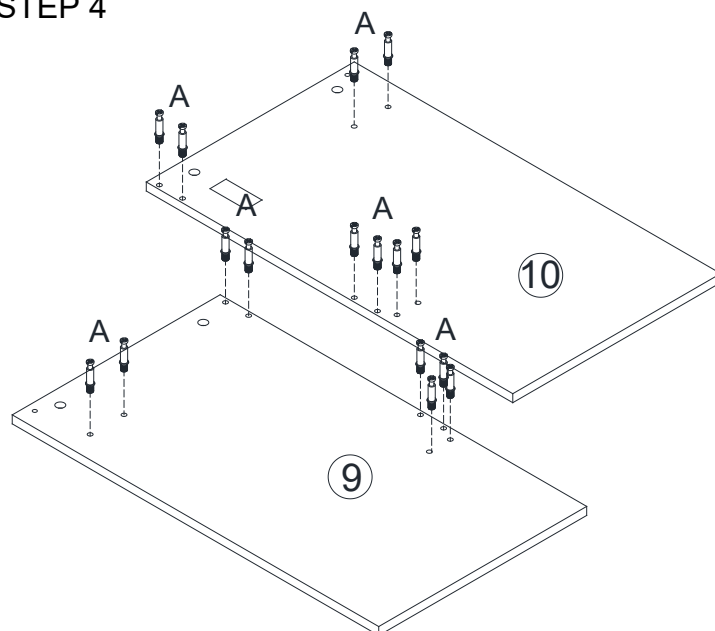


STEP 5

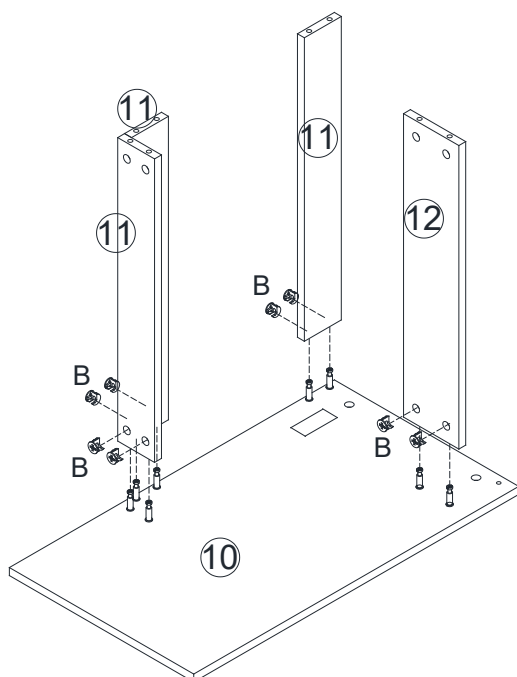


STEP 6

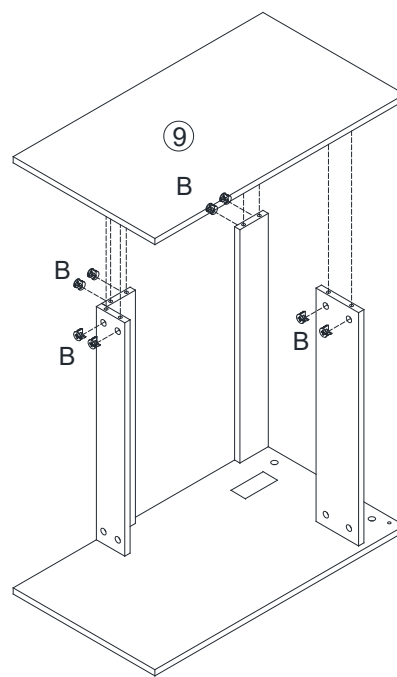


STEP 7

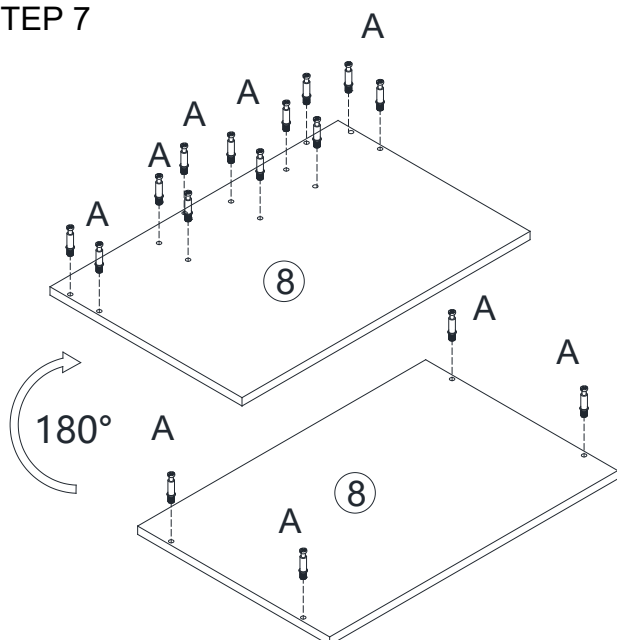


STEP 8

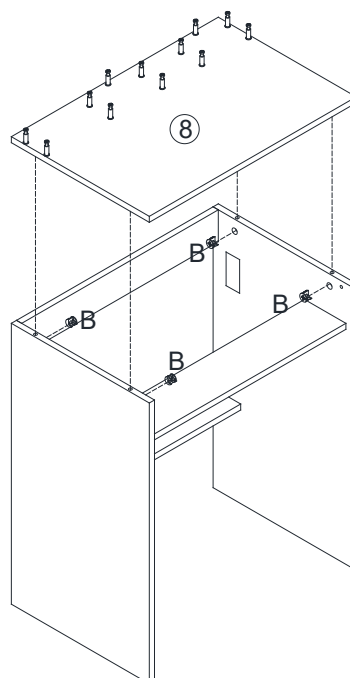


STEP 9

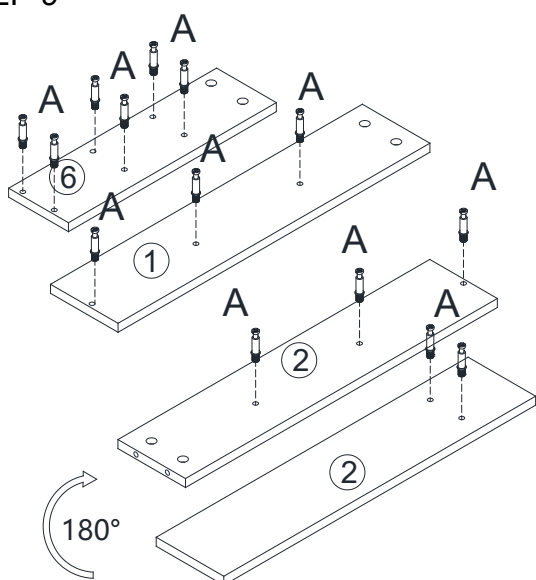


STEP 10

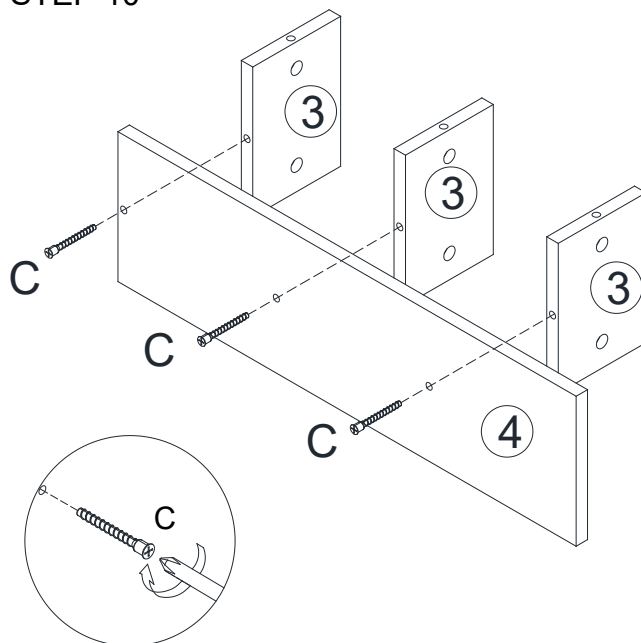


STEP 11

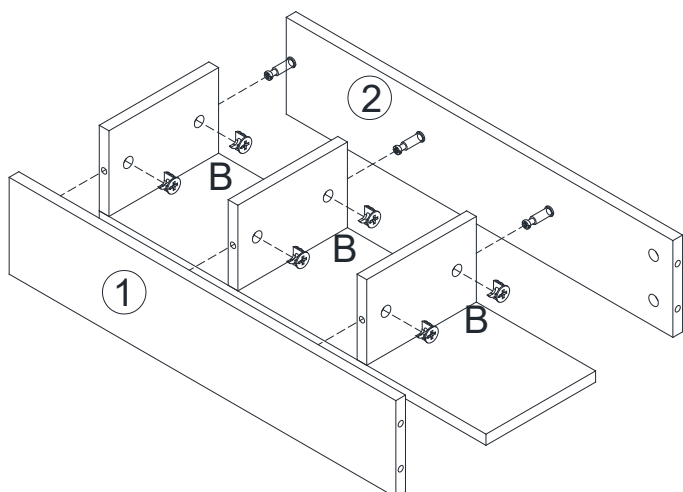


STEP 12

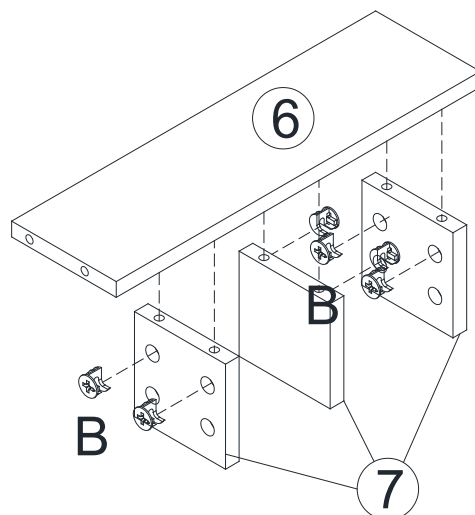


STEP 13

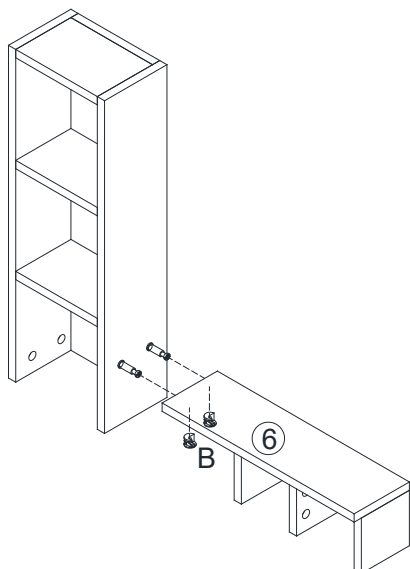


STEP 14

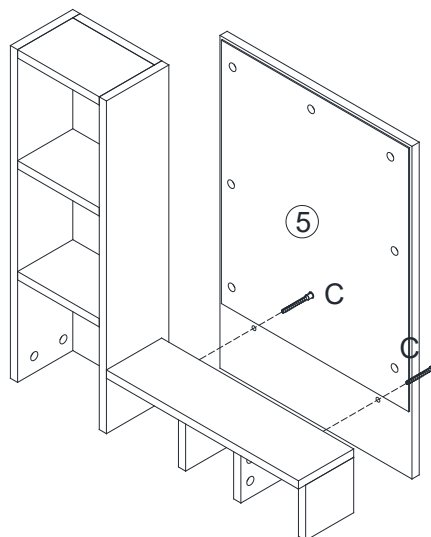


STEP 15

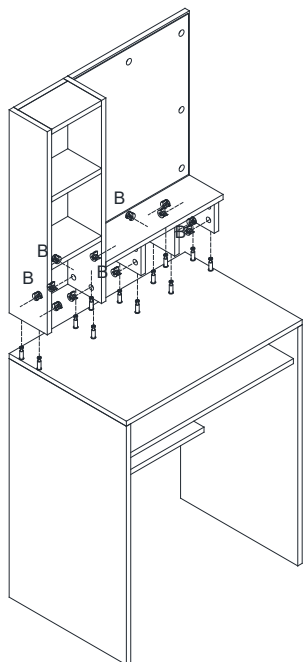



STEP 16

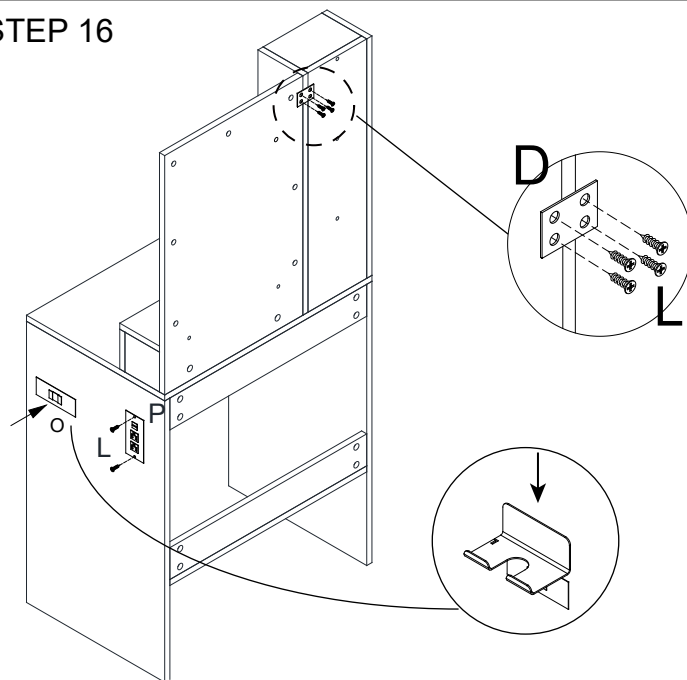






STEP 17

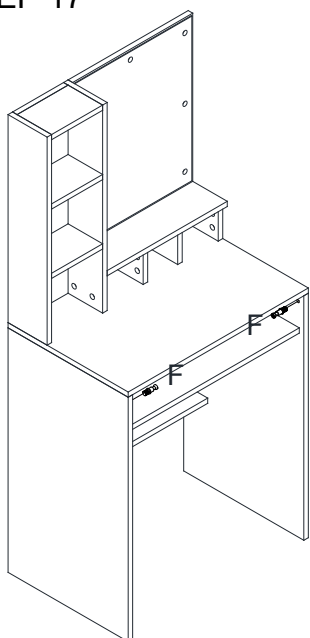


STEP 18

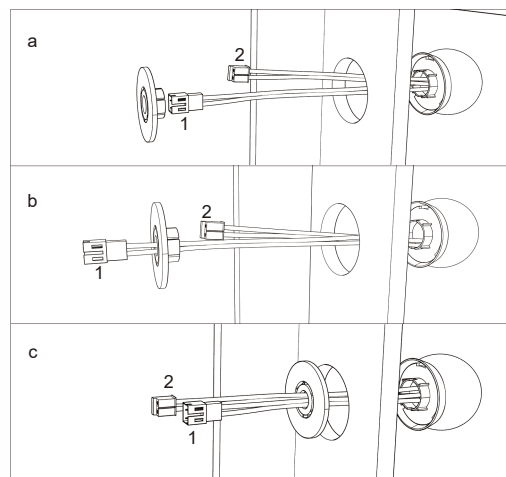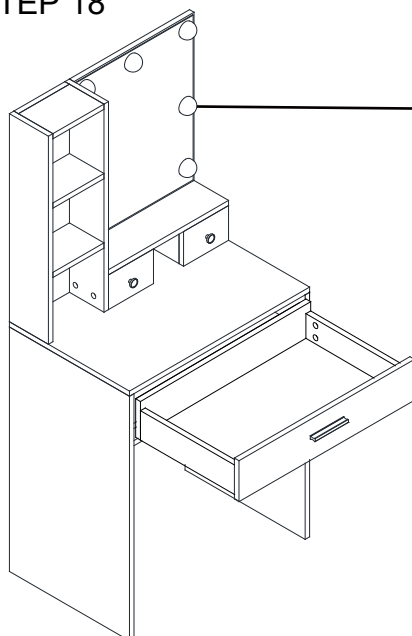


STEP 19

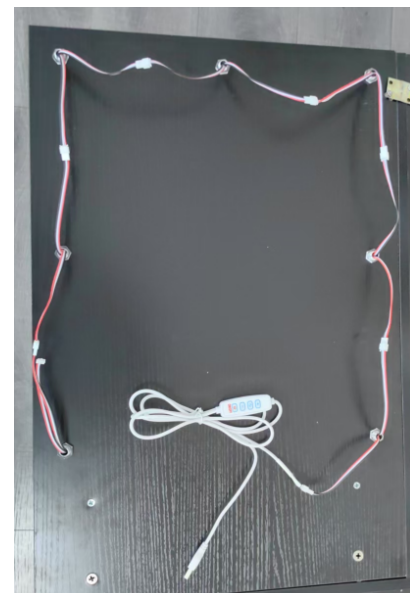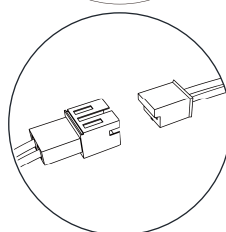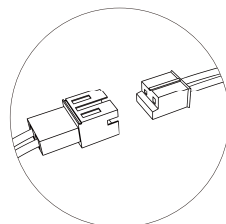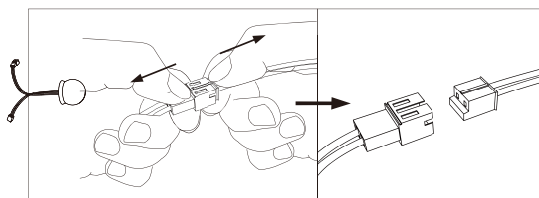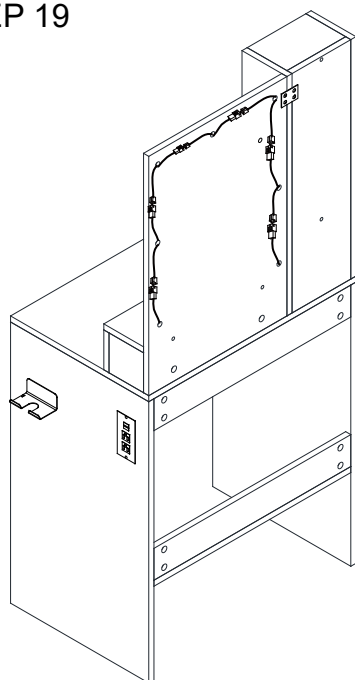

STEP 20

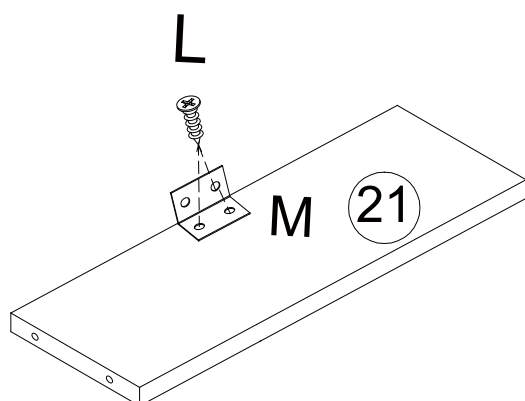

STEP 21

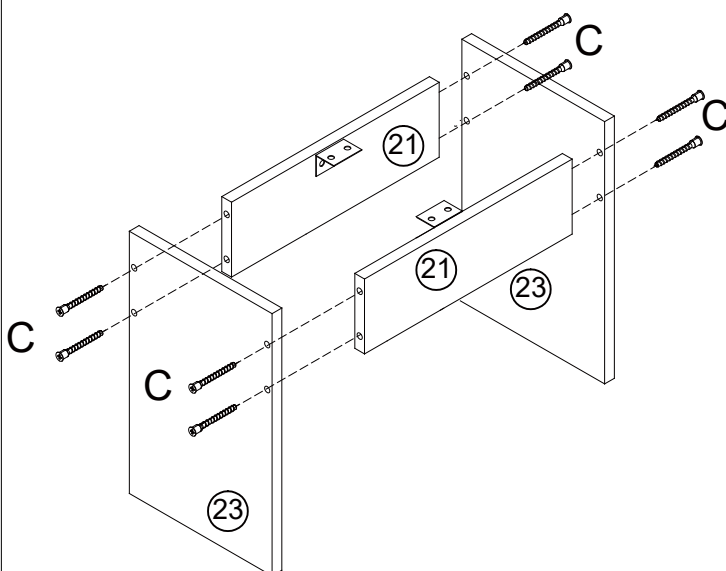

STEP 22

