



CABINET DRAWER KNOBS AND PULLS

SIZING GUIDE


13" x 5" Drawer

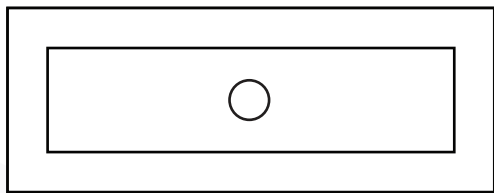


1-1/4" Knob

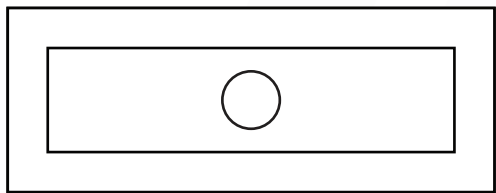


1-5/8" Knob

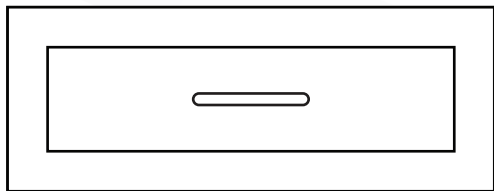


3" (76 mm) Pull

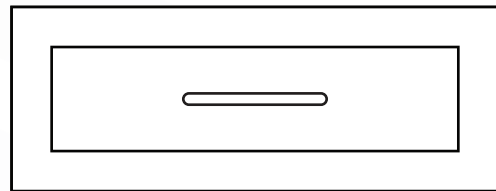

3-3/4" (96 mm)
Pull

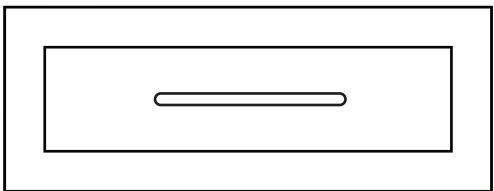


5" (128 mm) Pull


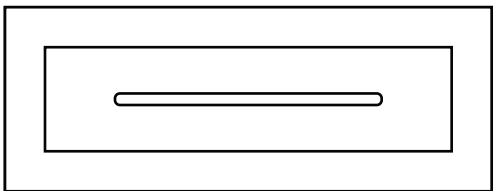


7" (160 mm) Pull



22" x 6" Drawer

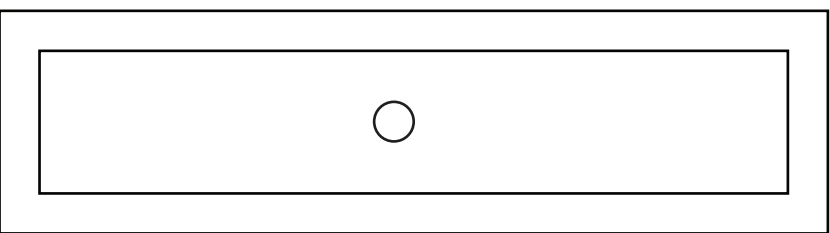



1-1/4" Knob

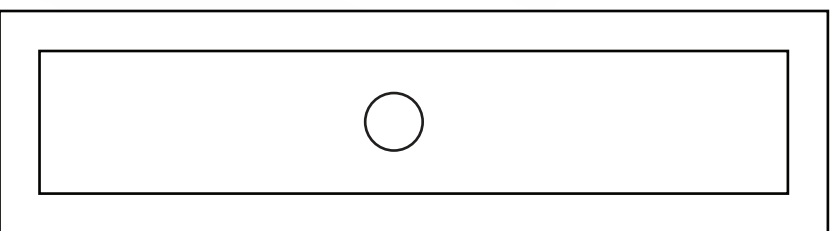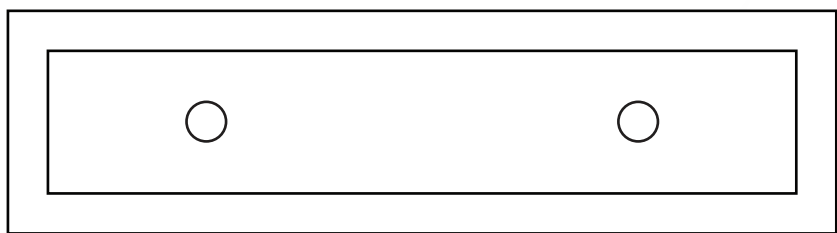



1-5/8" Knob

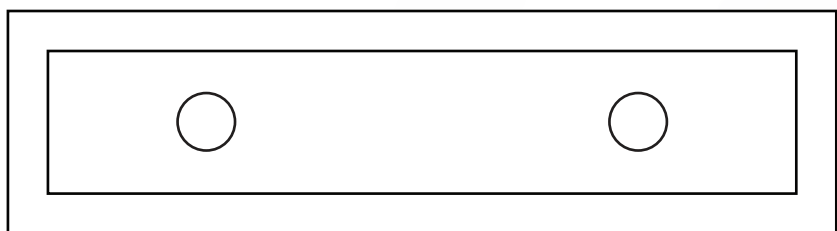



3" (76 mm) Pull

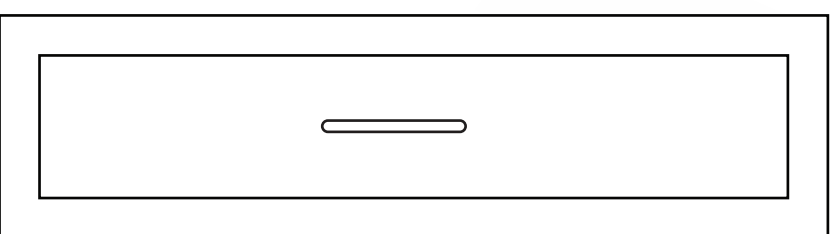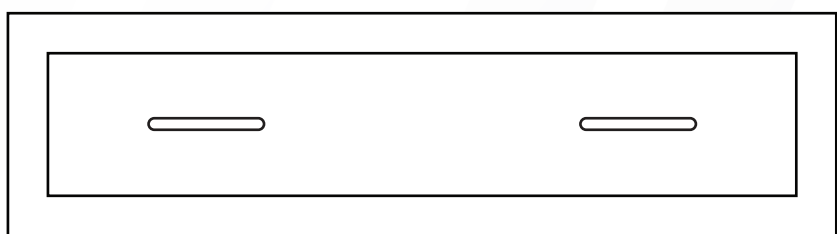

3-3/4" (96 mm) Pull

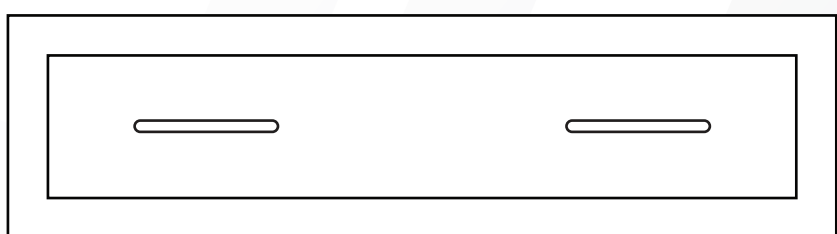


5" (128 mm) Pull

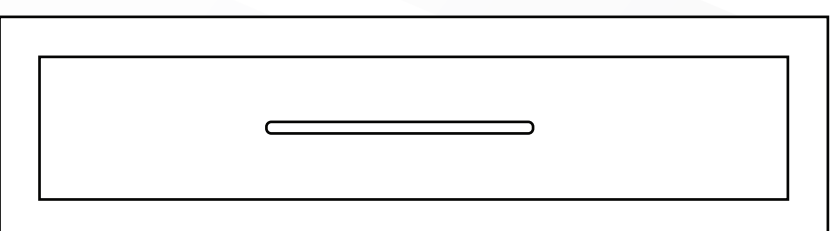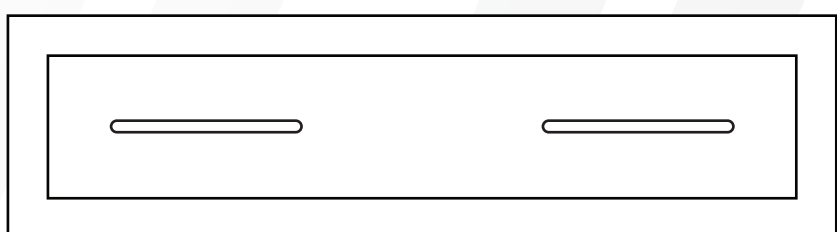

7" (160 mm)) Pull


Design Tip: When selecting cabinet pulls, use the 1/3 rule — the pull should measure approximately 1/3 the width of a drawer or 1/3 the height of a door.

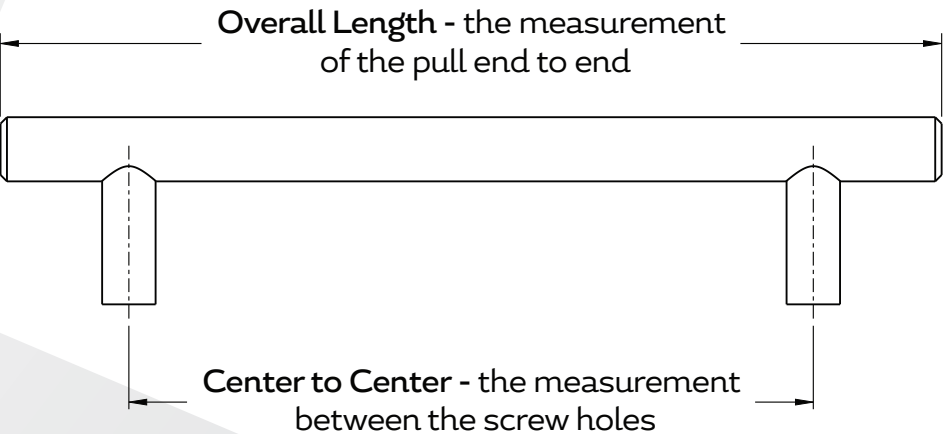


CABINET DOOR KNOBS AND PULLS

SIZING GUIDE


13" x 23" Door

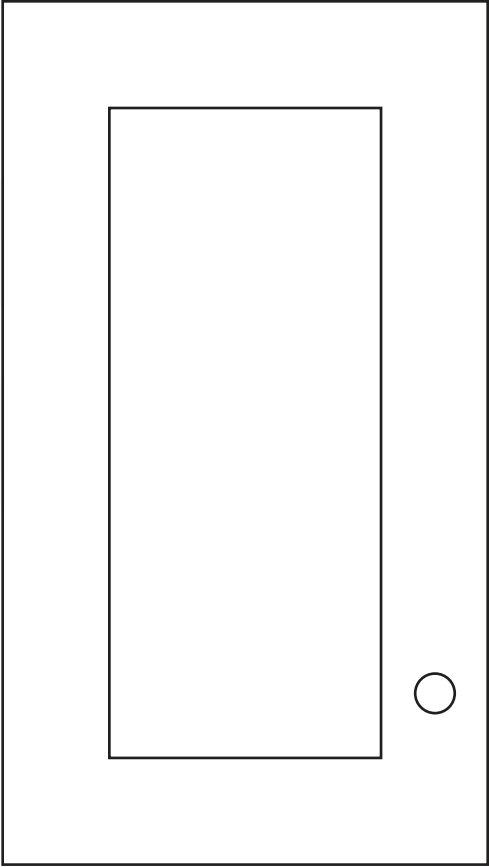


1-1/4" Knob

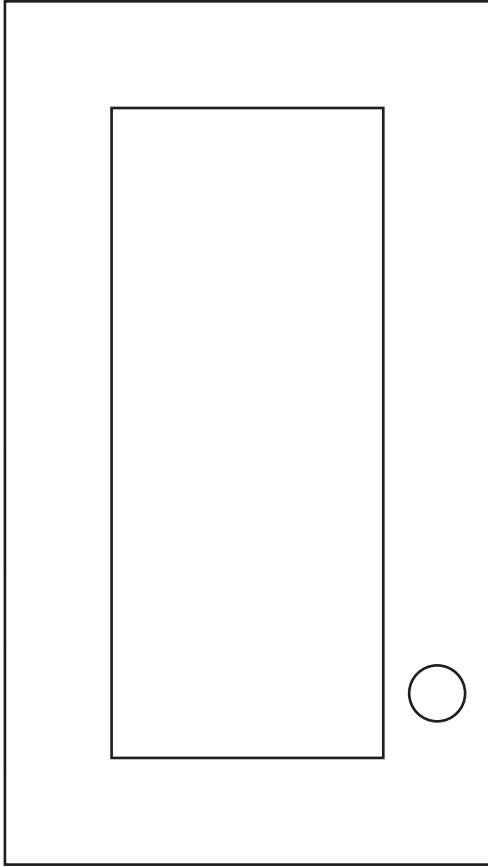


1-5/8" Knob

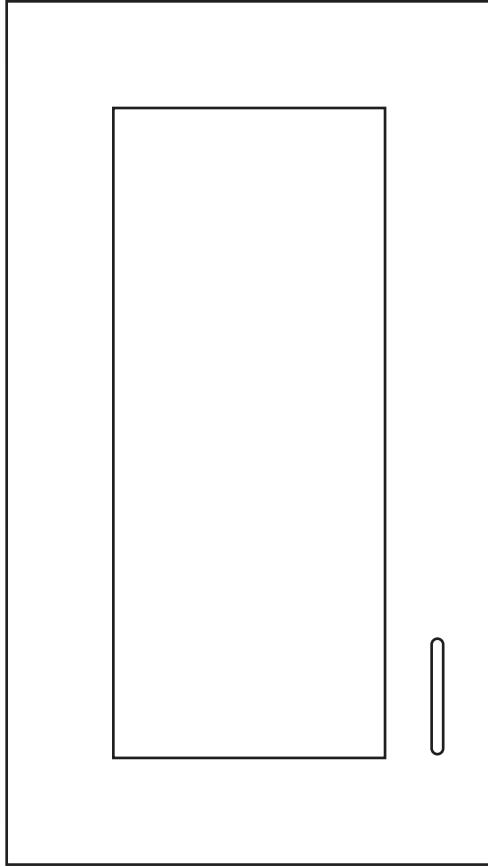

3" (76 mm) Pull

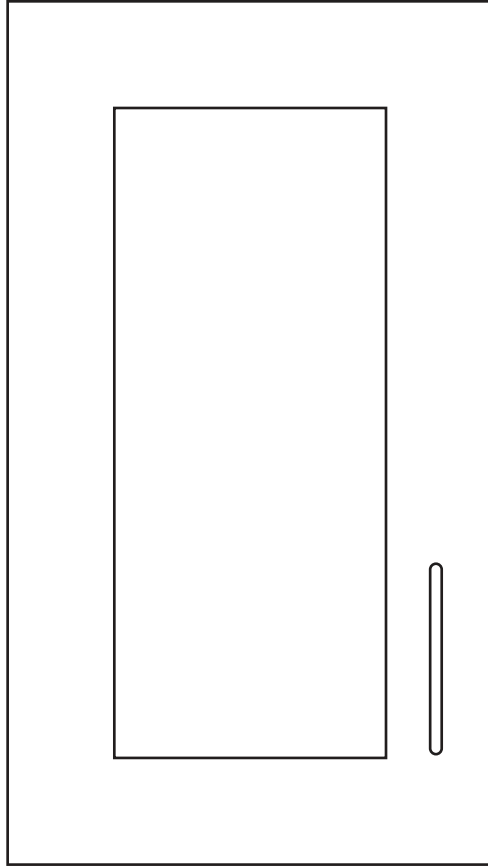


5" (128 mm) Pull

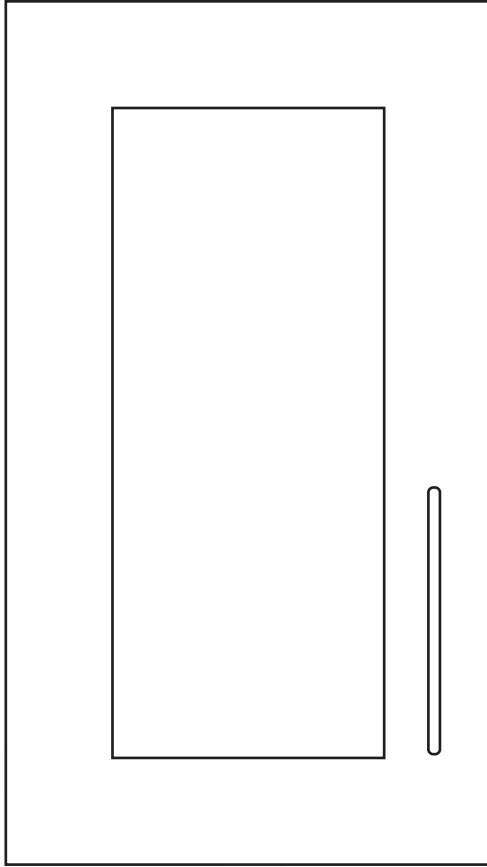


7" (160 mm) Pull


16" x 39" Door

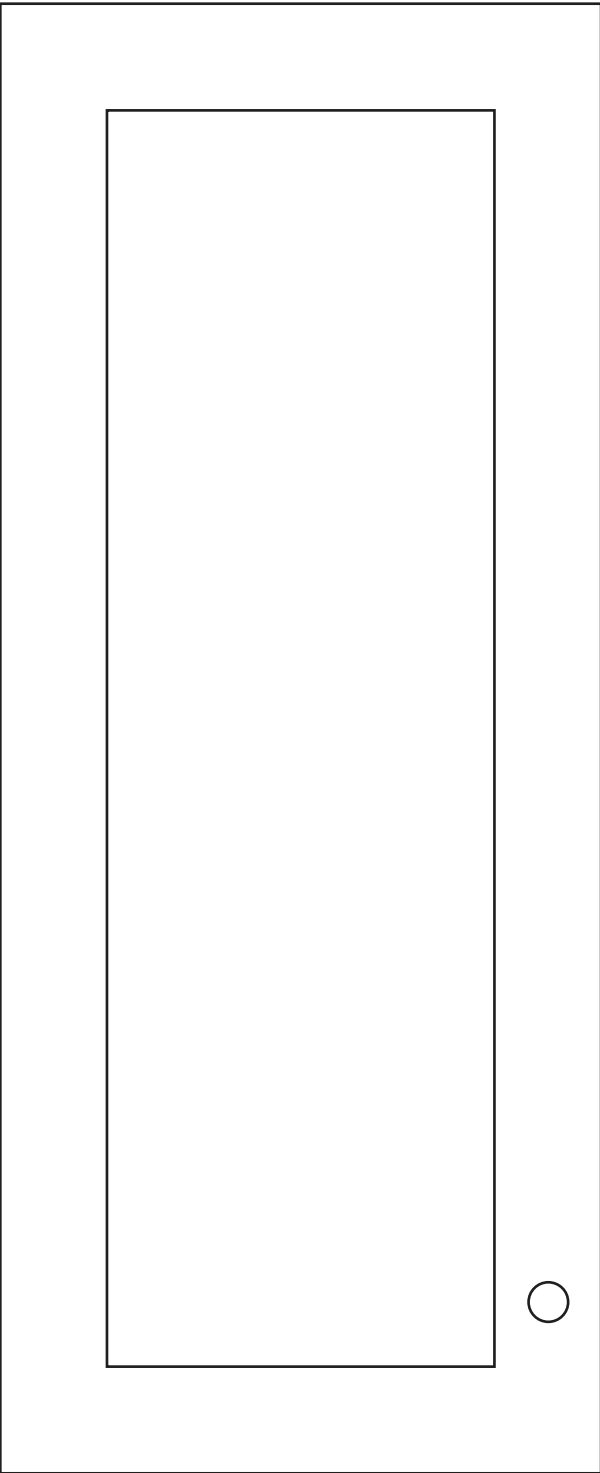


1-1/4" Knob

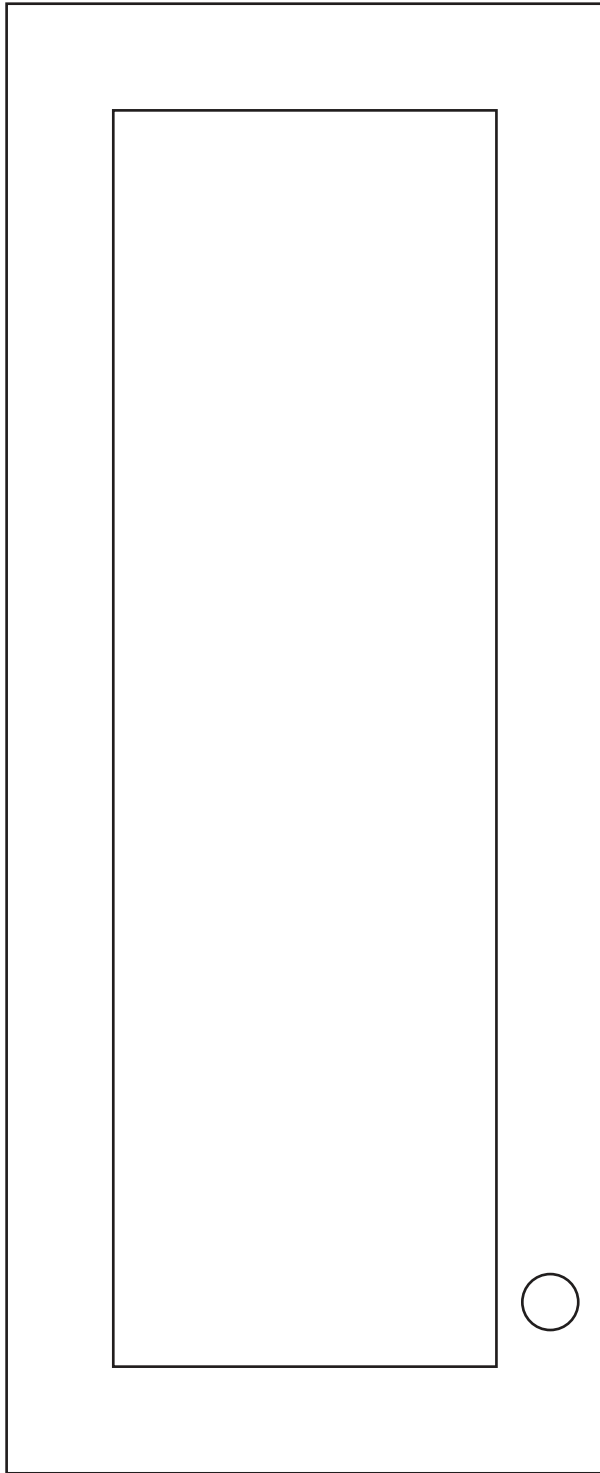


1-5/8" Knob

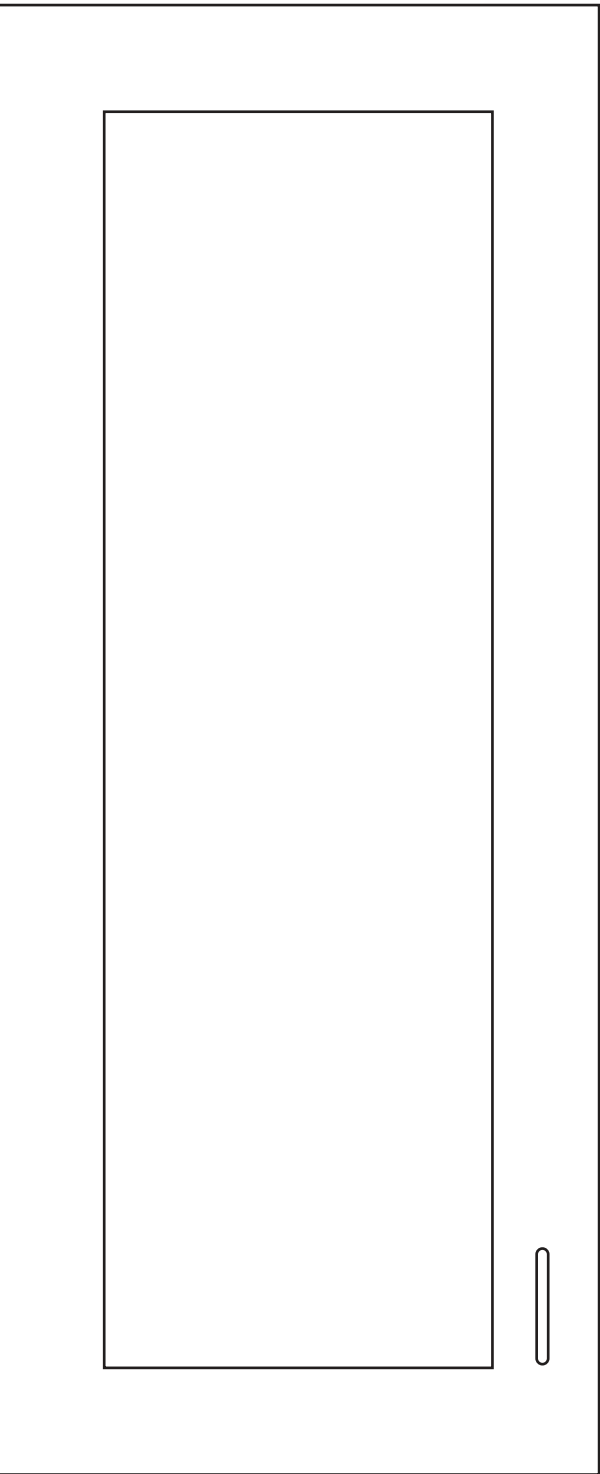

3" (76 mm) Pull

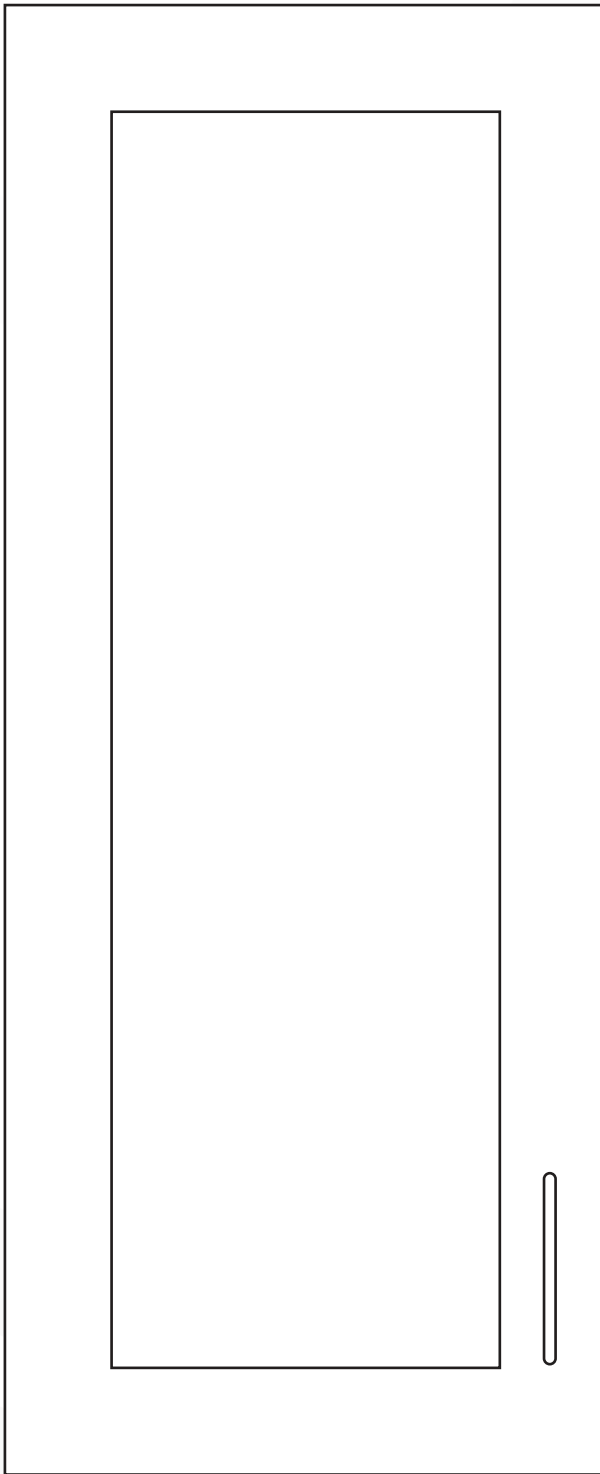

5" (128 mm) Pull

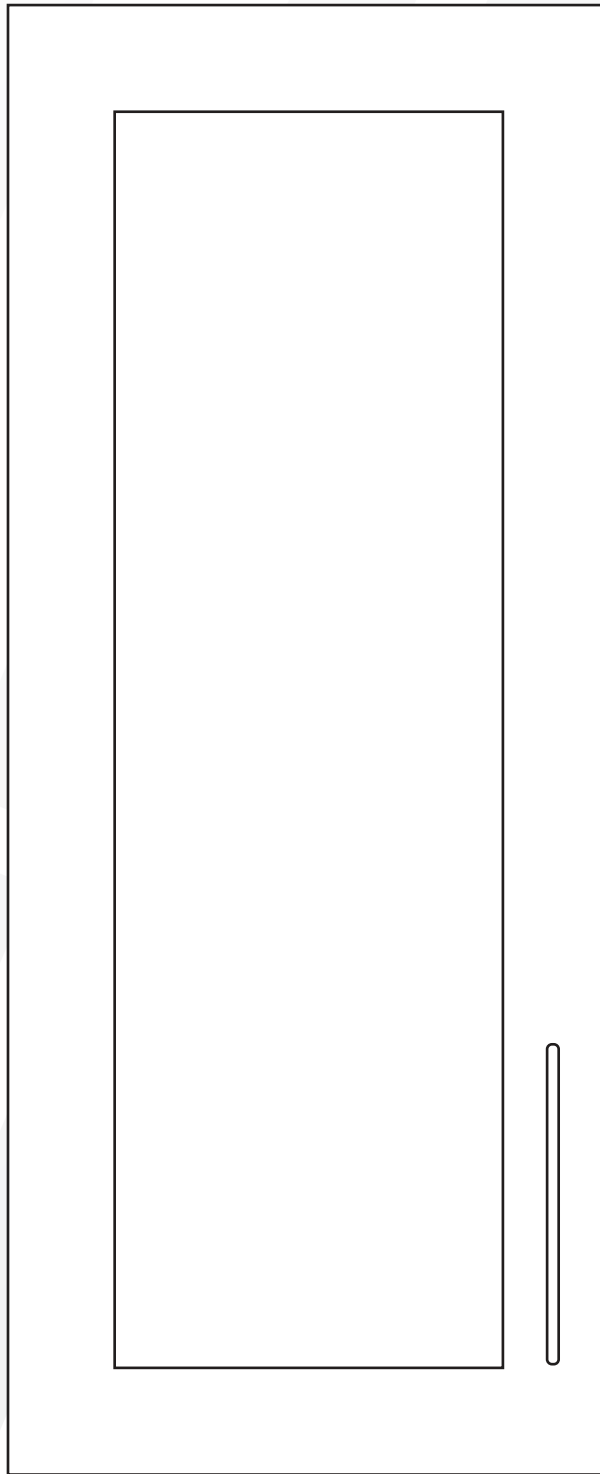

7" (160 mm) Pull

Design Tip: When selecting cabinet pulls, use the 1/3 rule — the pull should measure approximately 1/3 the width of a drawer or 1/3 the height of a door.

