


Carmel Drawer Dresser

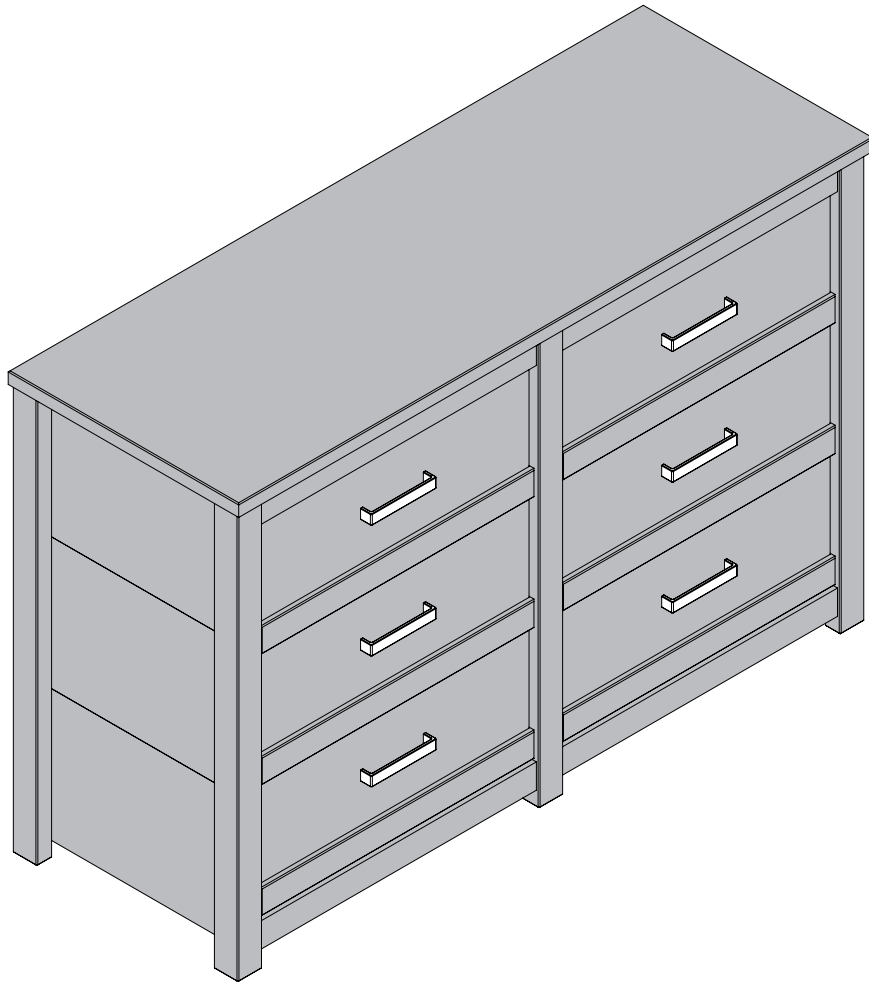

Assembly
02 person



Time
2 hour approximately




Tools
philips key, rubber hammer



Volume quantity
02 boxes









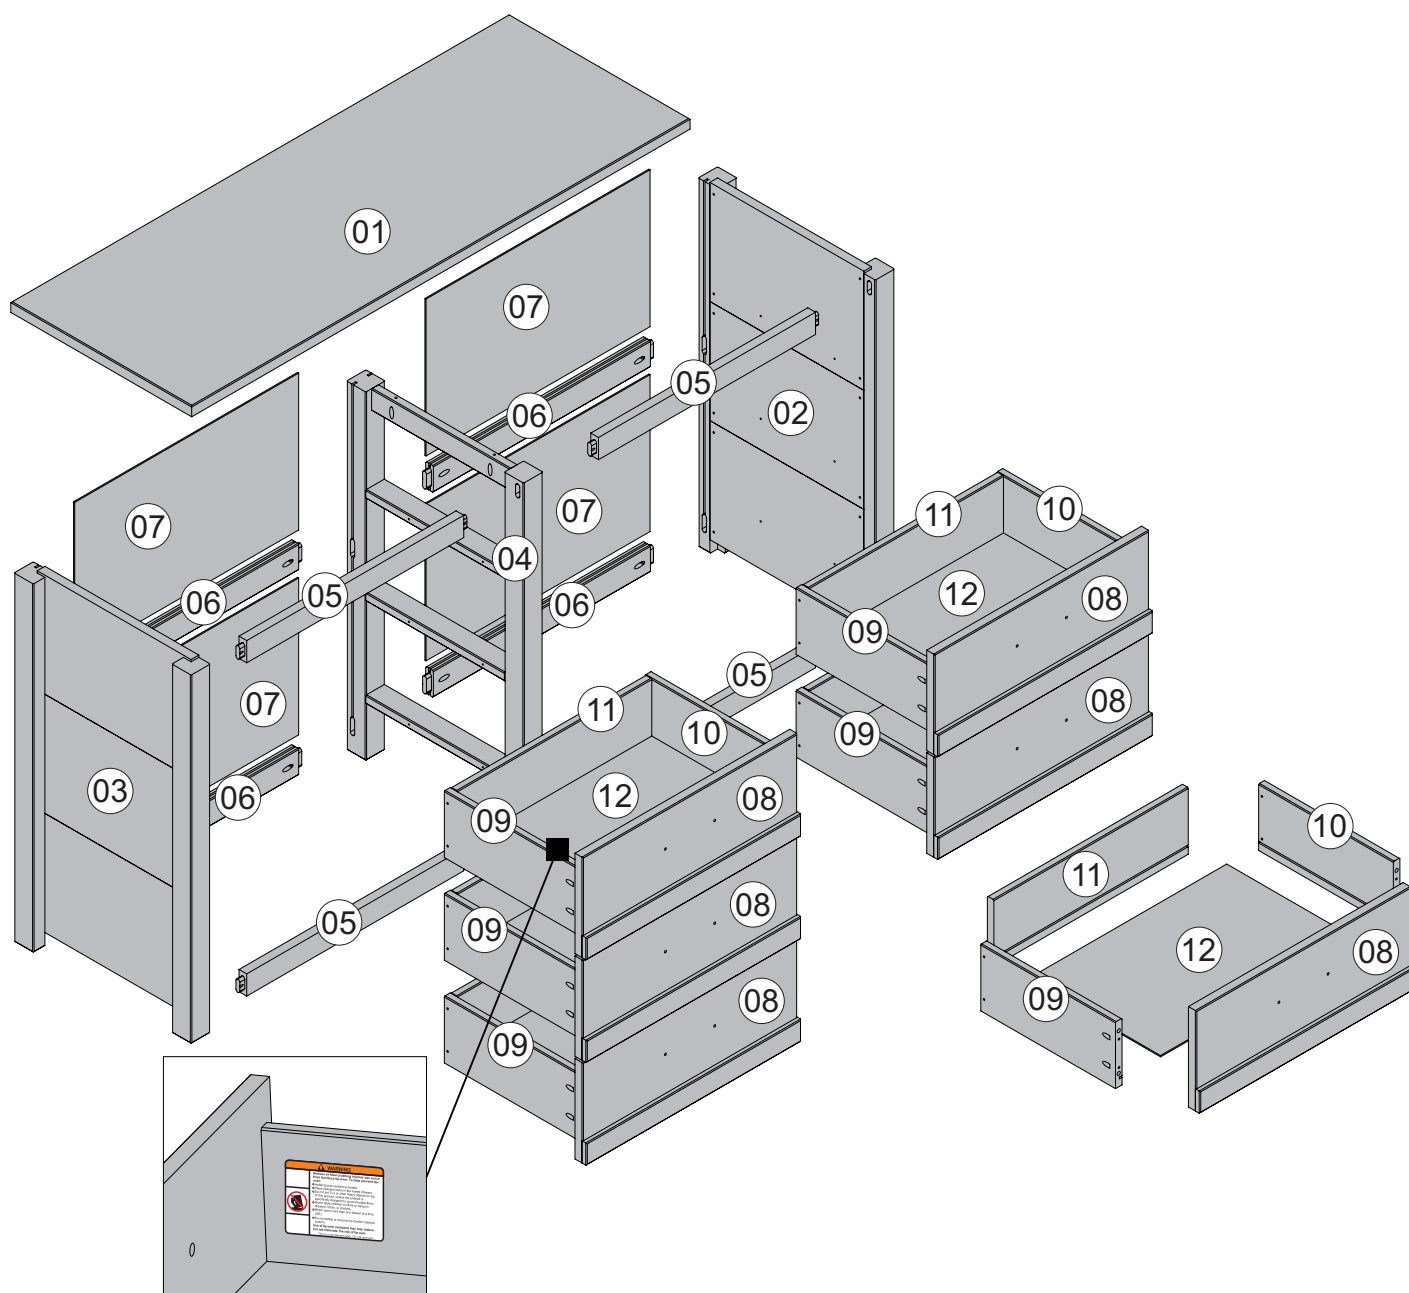
Parts list for assembly. Please confirm all parts available before assembly








ATTENTION


- * Read and observe carefully all the assembly instructions before beginning assembly.
- * The assembly of the product must be done on a clean and flat surface. We suggest to use the packaging to cover the floor to avoid damages.
- * The screws must be tightened periodically.
- * Avoid contact with sharp objects.
- * Avoid banging pieces together.

Hardware list for assembly.
Please confirm all hardware available before assembly


AP	 ø1/8" x 1' 3/8"	70x	+	SPARE 08x
BR	 ø5/16" x 1' 1/4"	24x	+	02x
BT	 M4 x 1"	12x	+	01x
BX		06x		
CB	 ø1/6" x 5/8"	48x	+	05x
CC	 13"	06x		
CD	 13"	06x		
CE	 13"	06x		
CF	 13"	06x		




Anti-Tip Kit

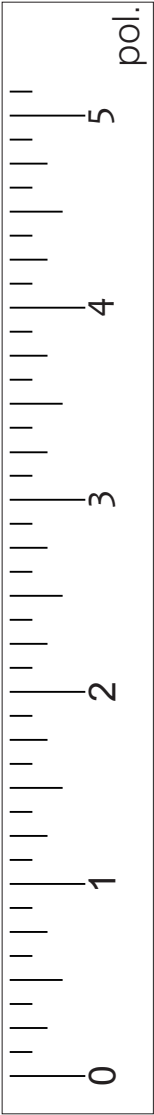	02x
	02x
	02x
	01x
	02x


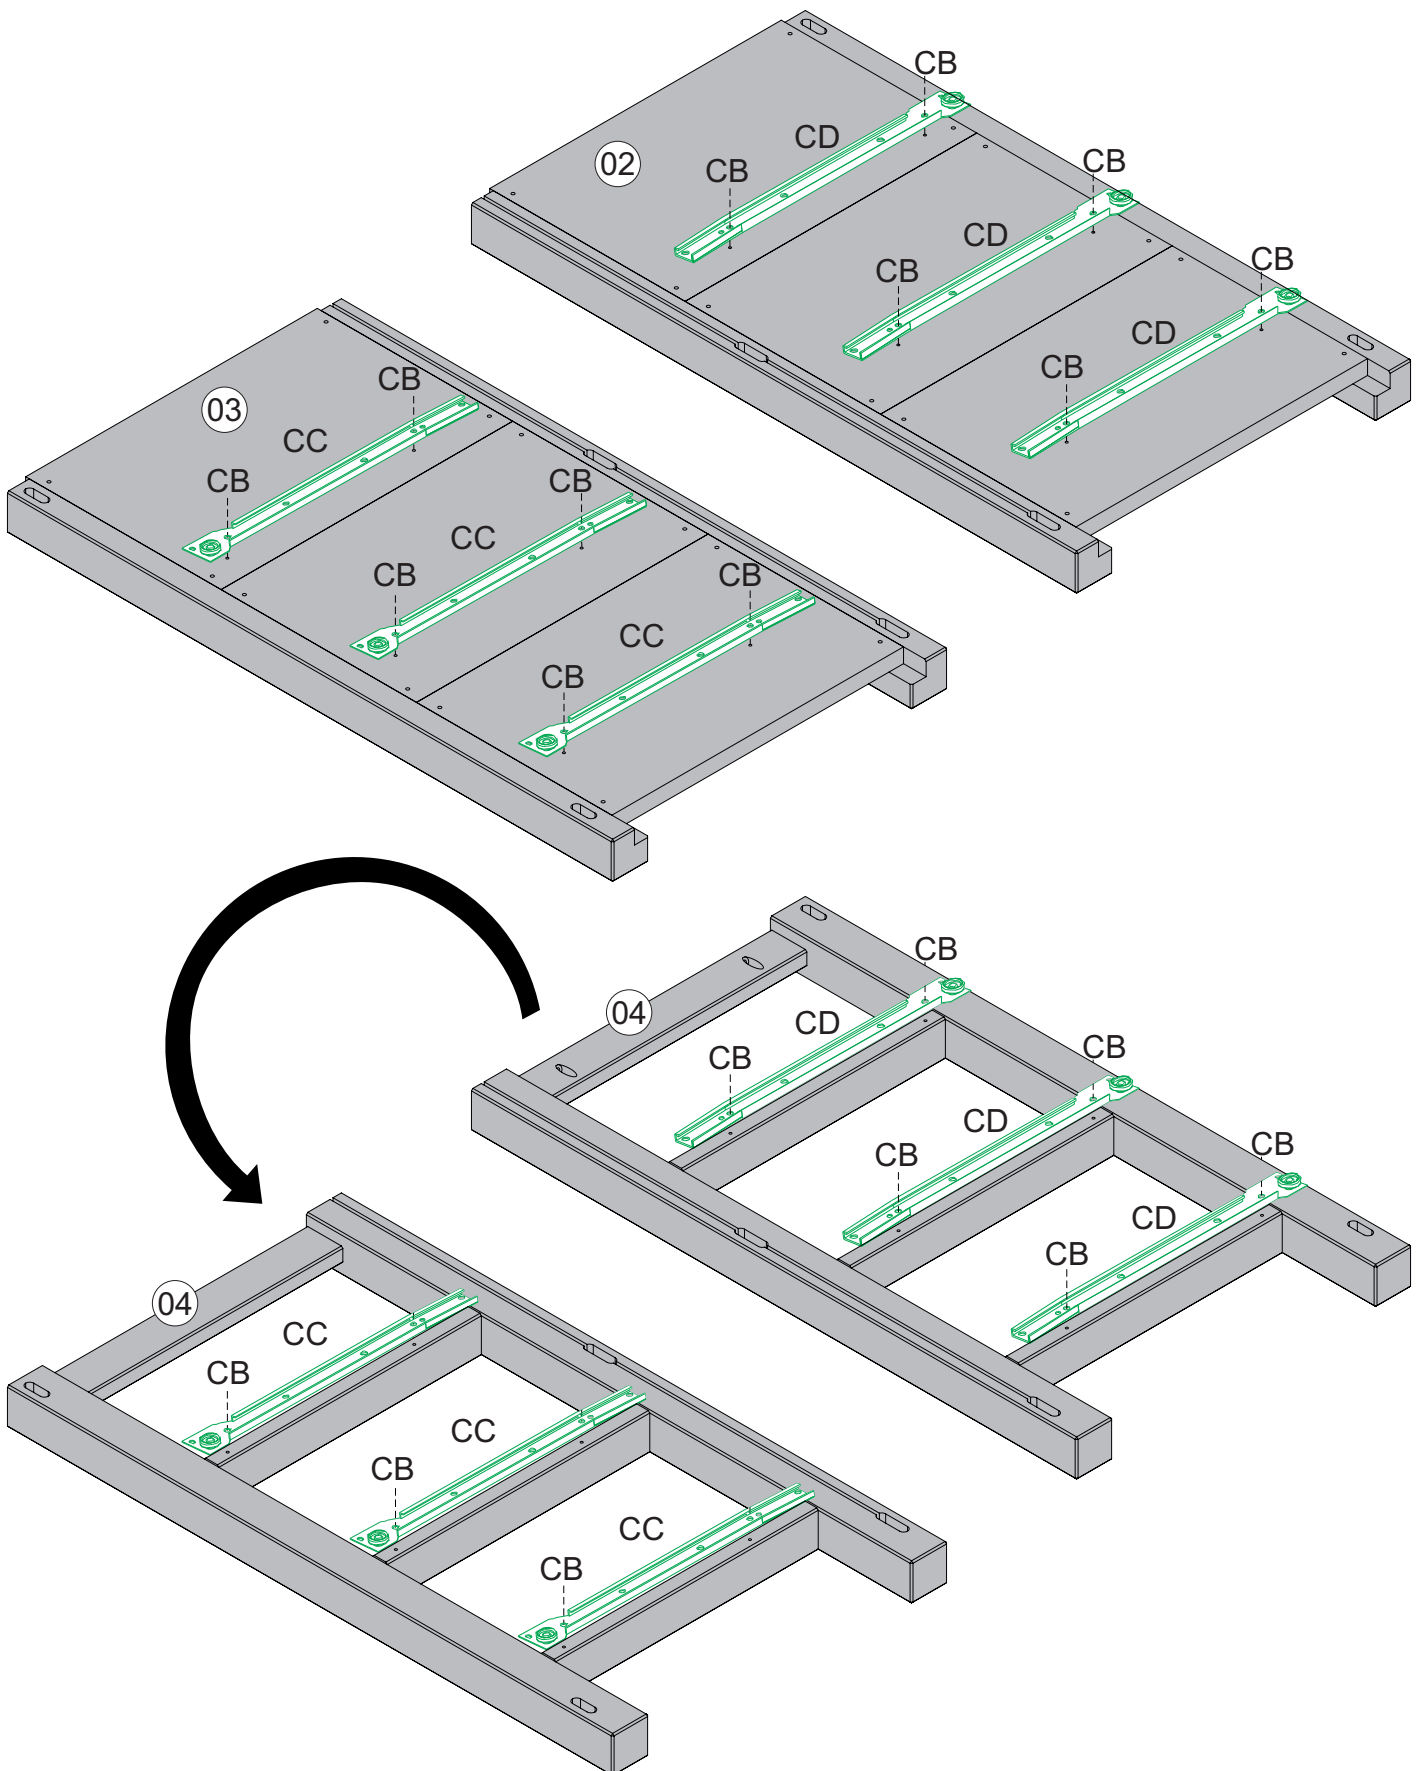


Step 01 - Attach inner metal drawer glides (Parts "CC" & "CD") to cabinet sides (Parts 02,03 & 04) using 12 x screws "CB". Be sure and line up screw holes of metal glides to the pilot screw holes indicated on cabinet sides.




CB	24x	CC	06x	CD	06x
					
ø1/6" x 5/8"		13"		13"	



Step 02 - Attach wood cross bars (Parts 05 & 06) to cabinet side No. "03" using screws "AP".

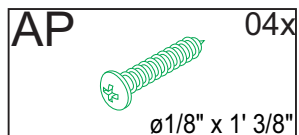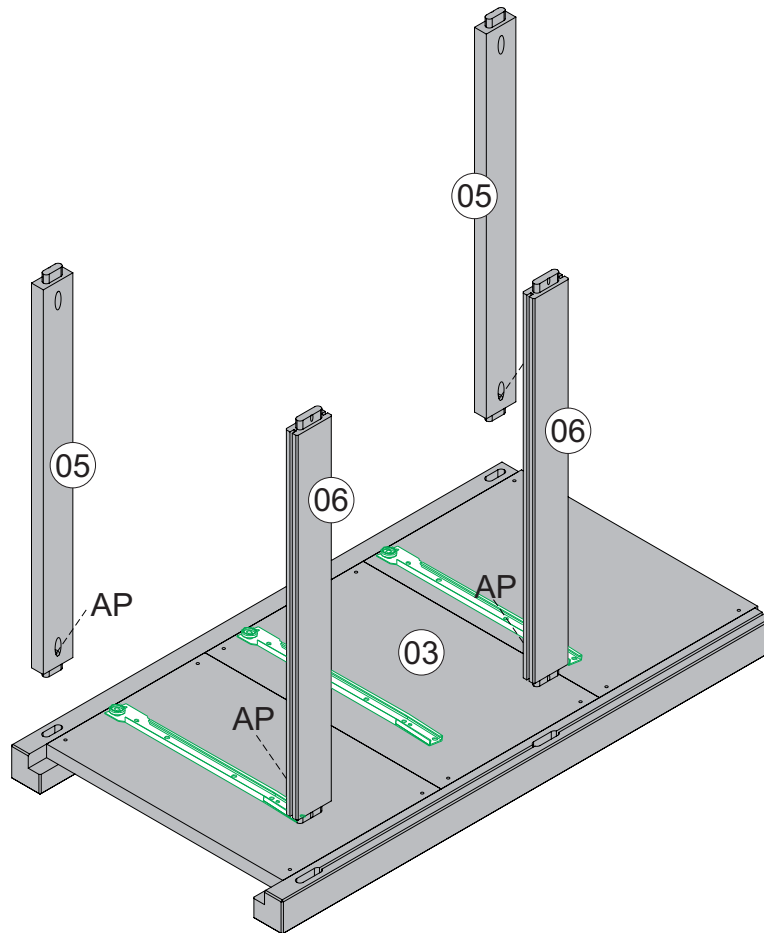



Step 03 - Slide back panel No. "07" in wood channels of already attached Parts "06" as shown in diagram.

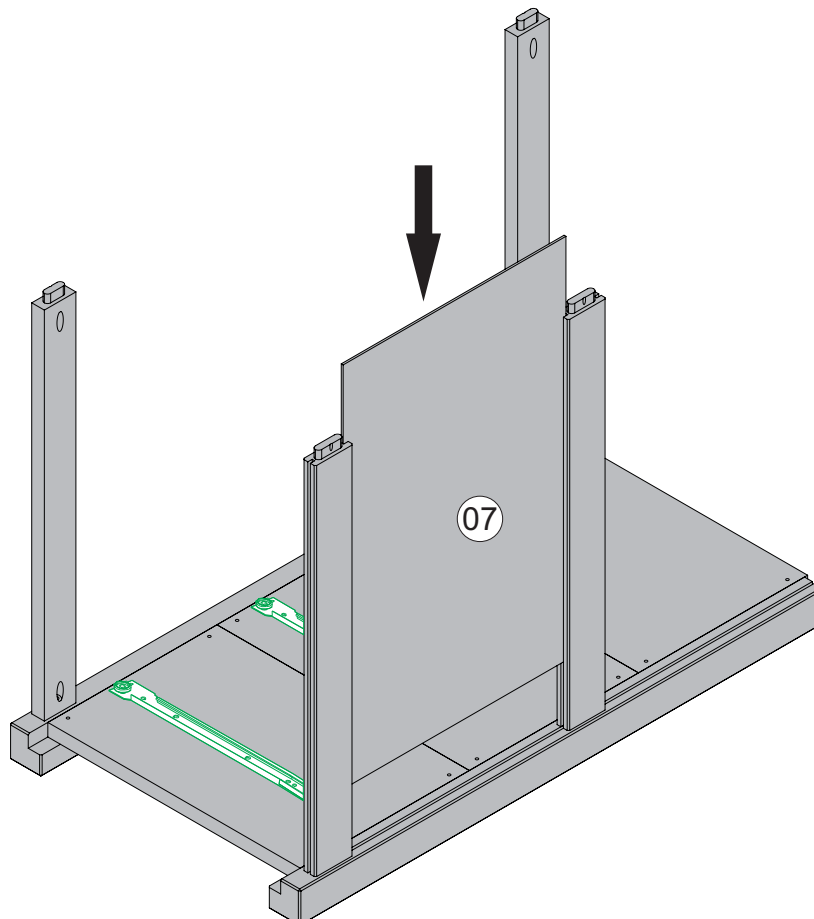


Step 04 - Attach Cabinet side No. "04" to cabinet side No. "03" using screws "AP" as shown in diagram.

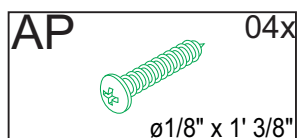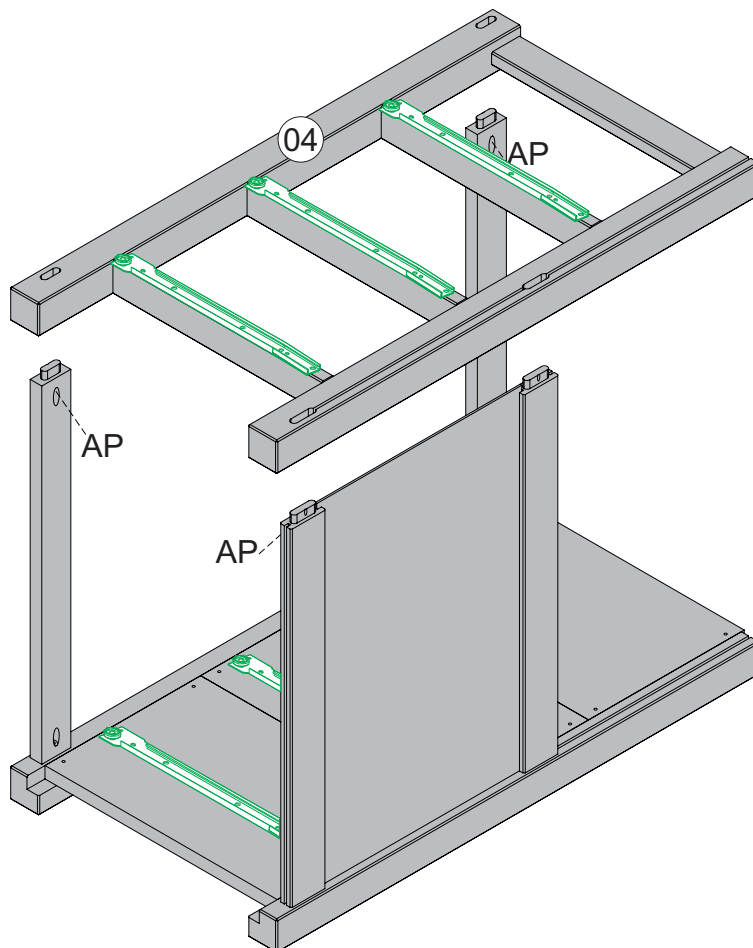



Step 05 - Attach wood cross bars (Parts 05 & 06) to cabinet side No. "04" using screws "AP".

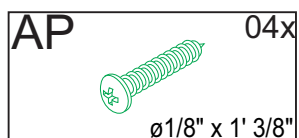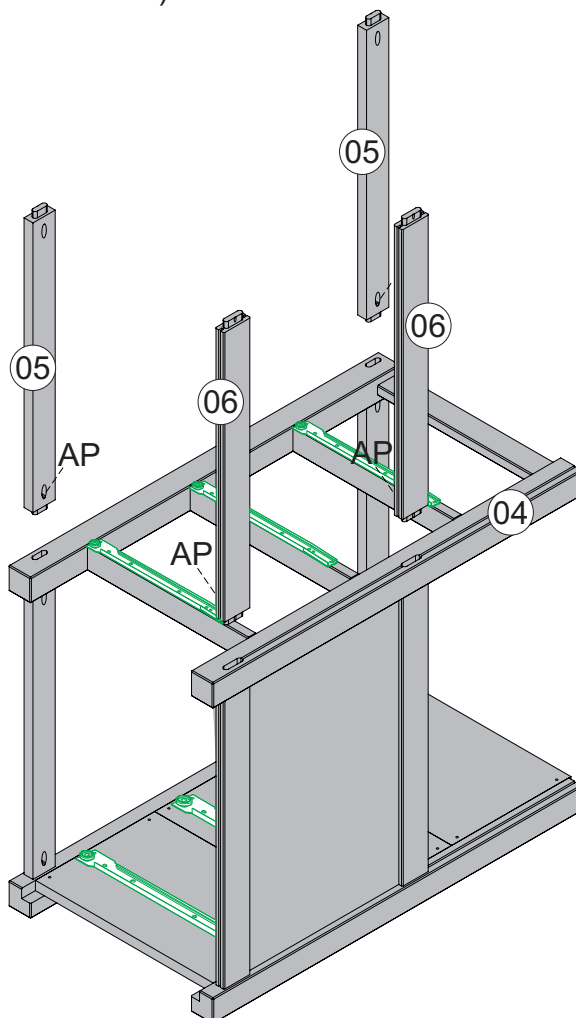


Step 06 - Slide back panel No. "07" in wood channels of already attached Parts "06" as shown in diagram.

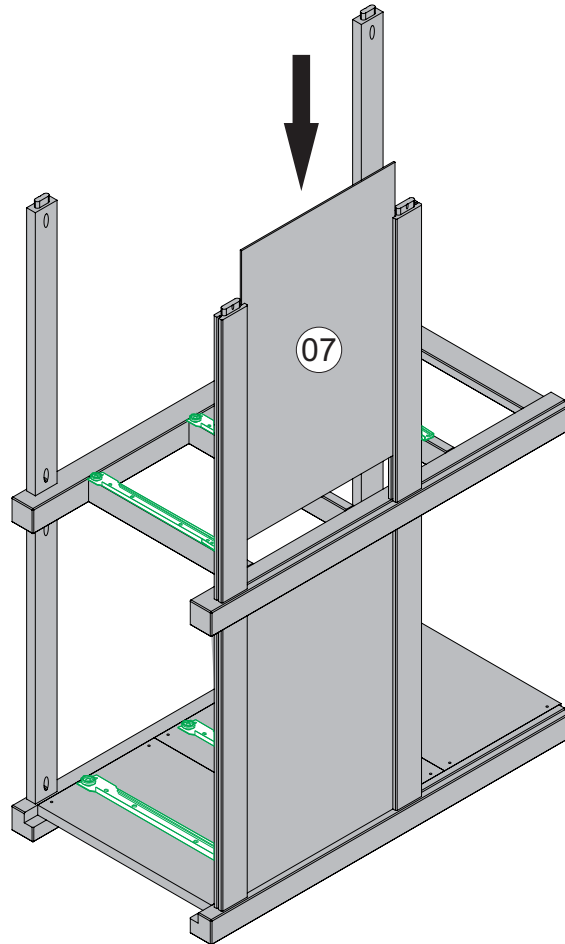



Step 07 - Attach Cabinet side No. "02" to cabinet side No. "04" using screws "AP" as shown in diagram.

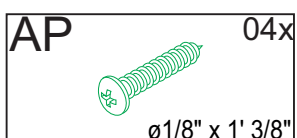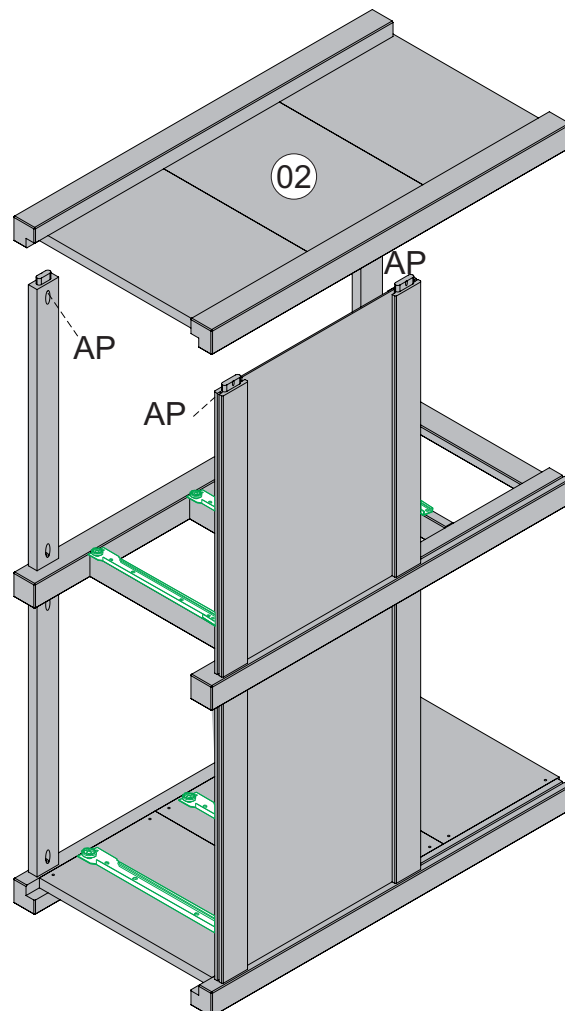


Step 08 - Slide back panel No. "07" in wood channels of already attached Parts "06" as shown in diagram.

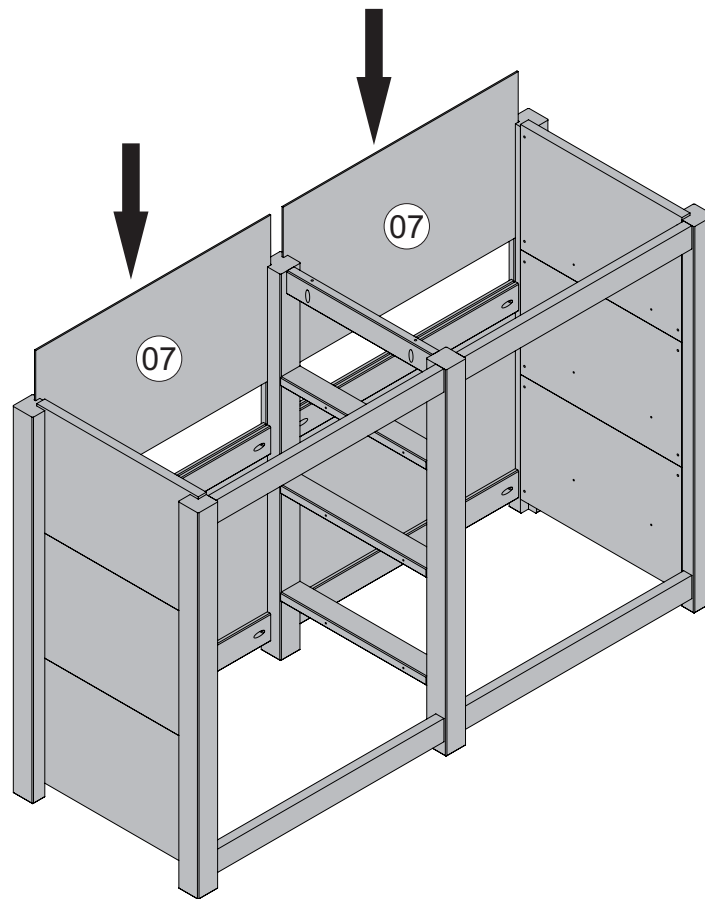

Step 09 - Attach top of cabinet (Part No. 01) using screws "AP" as shown in diagram.

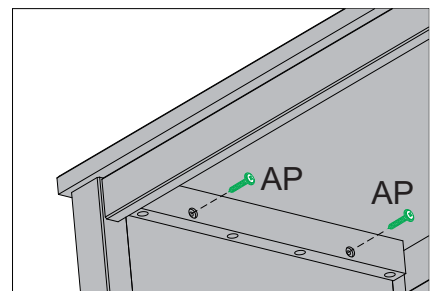
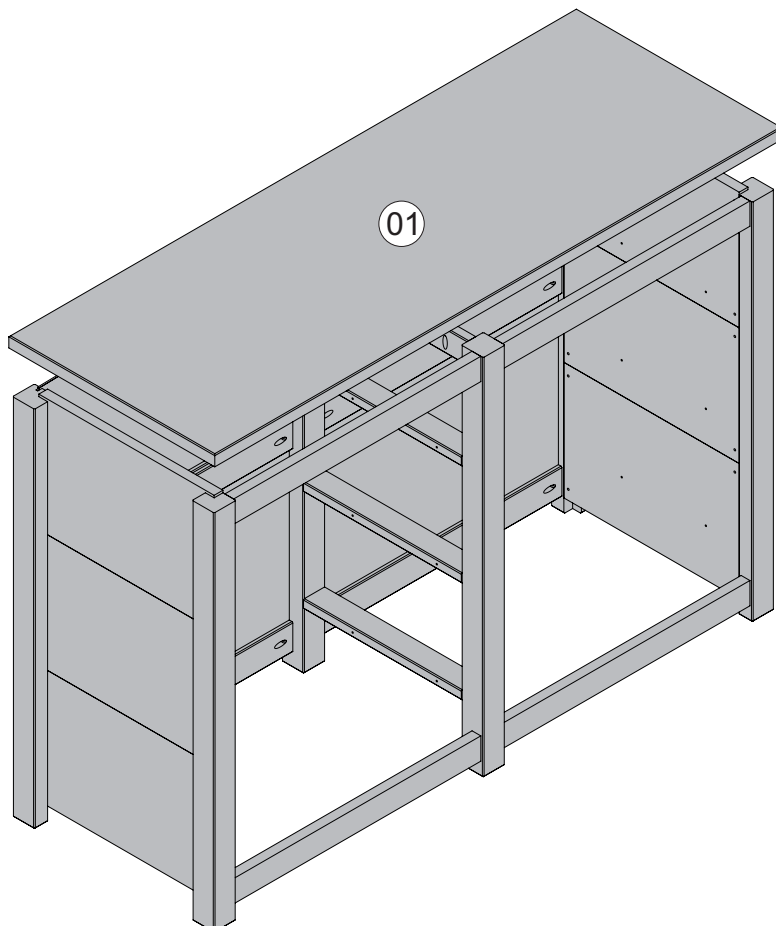


The body of your Drawer Dresser is now complete!


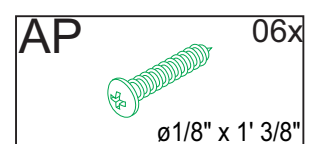


Instructions for Drawer Assembly:


Step 10 - Place wood dowels Part "BR" into holes of drawer side fronts (Part "09 & 10"), as shown.

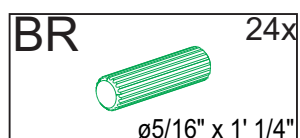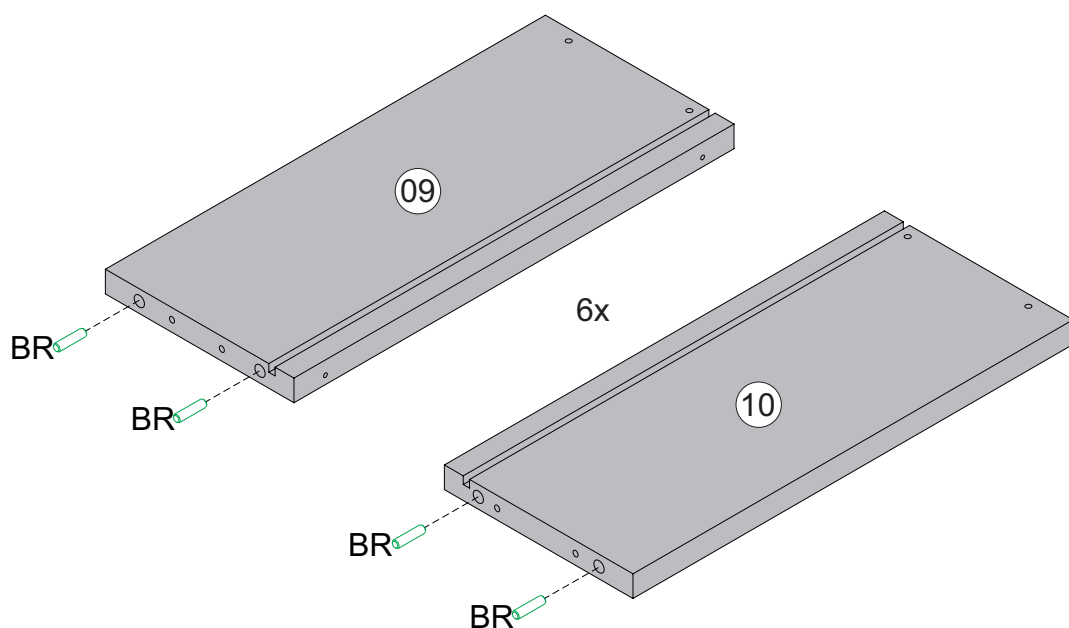



Step 11 - Attach drawer sides (Part "09 & 10") to drawer fronts (Parts No. "08") using screws "AP", as shown.

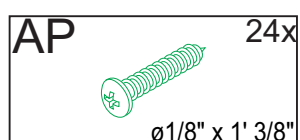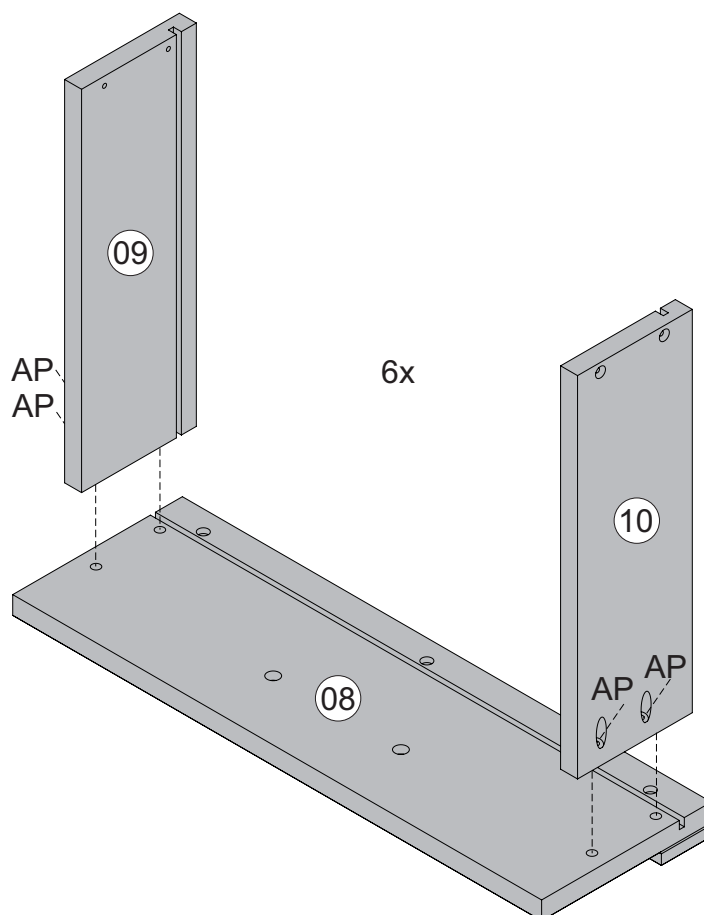


Step 12 - Slide drawer bottom panel (Part "12") into drawer side channels as indicated.

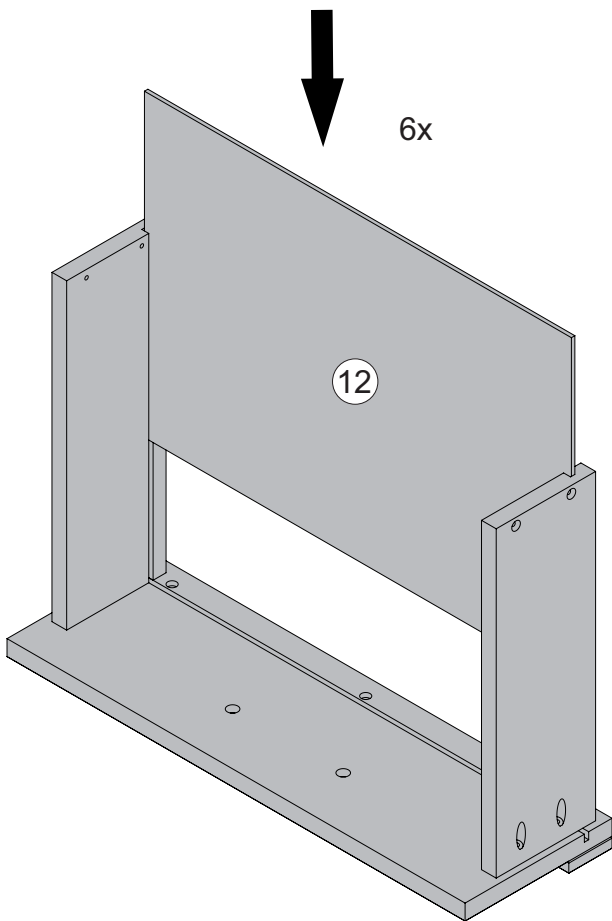




Step 13 - Attach drawer side back (Part 11) to drawer sides (Parts 09 & 10) as shown.

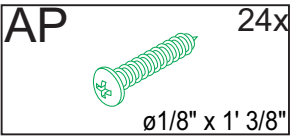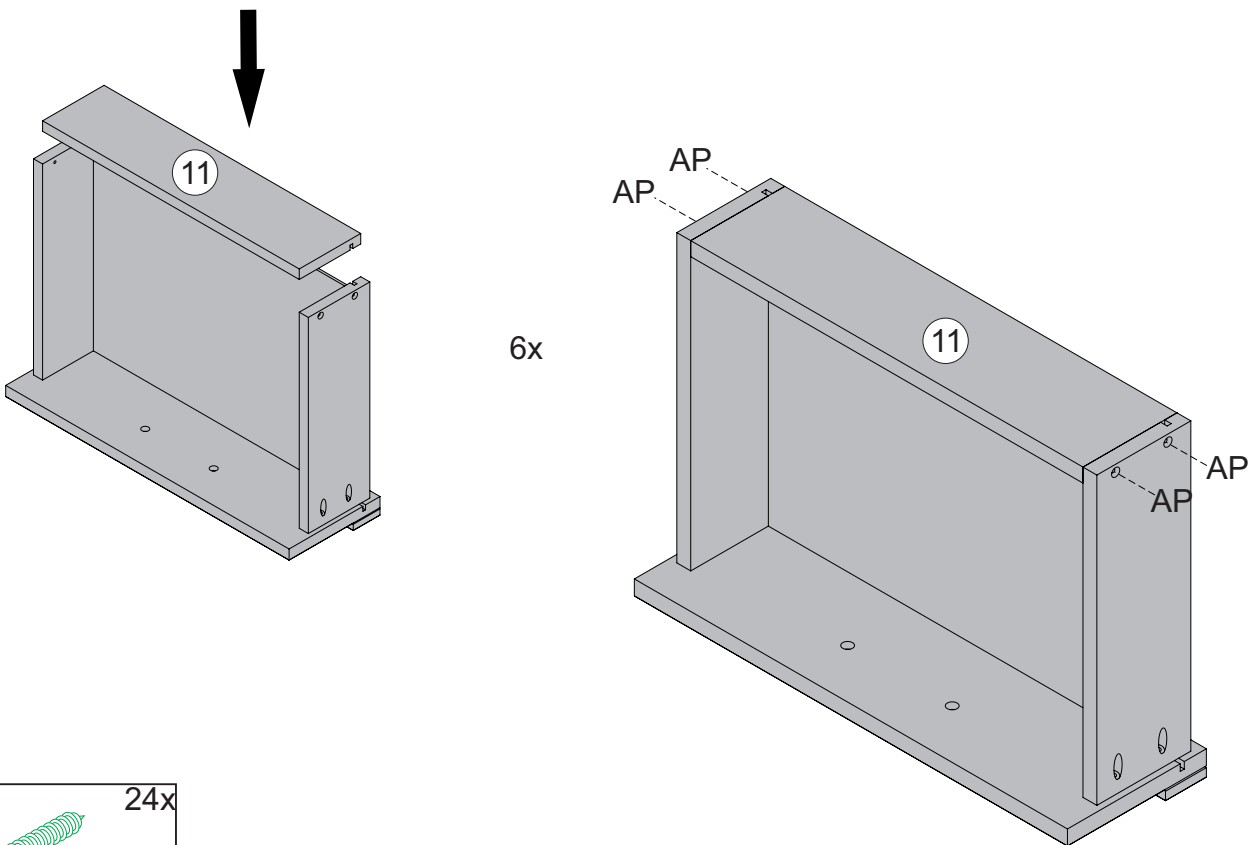


Step 14 - Attach outer metal drawer glides (Parts “CE” & “CF”) to drawer lateral, using screws “CB”, as indicated.

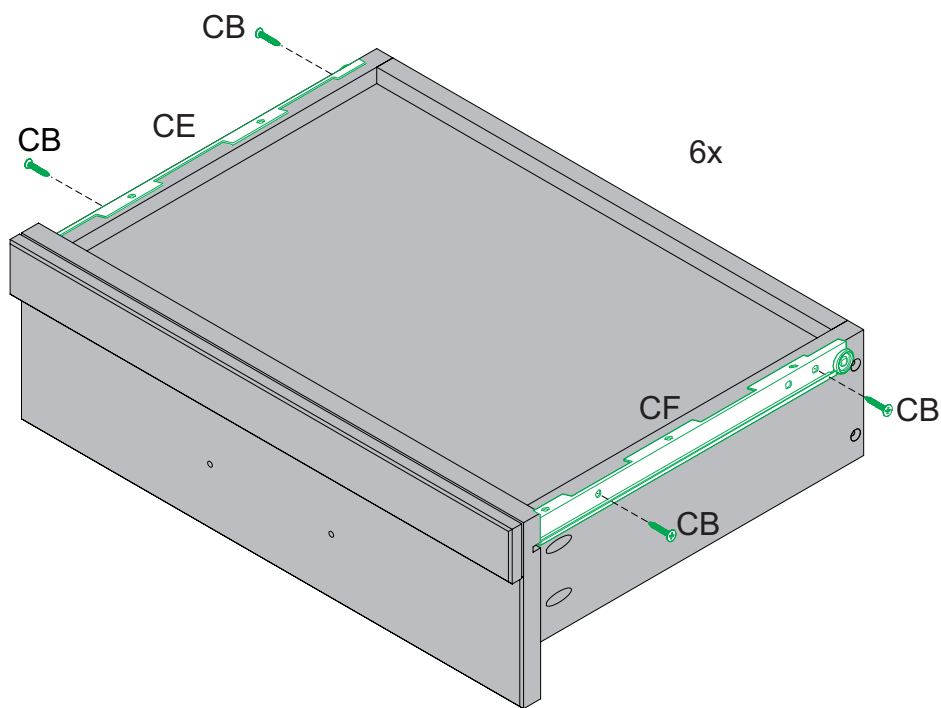


CB	24x	CE	06x	CF	06x
					
ø1/6" x 5/8"		13"		13"	


Step 15 - Attach drawer pulls (Part “BX”) to the drawer fronts using screws “BT” as shown in diagram.

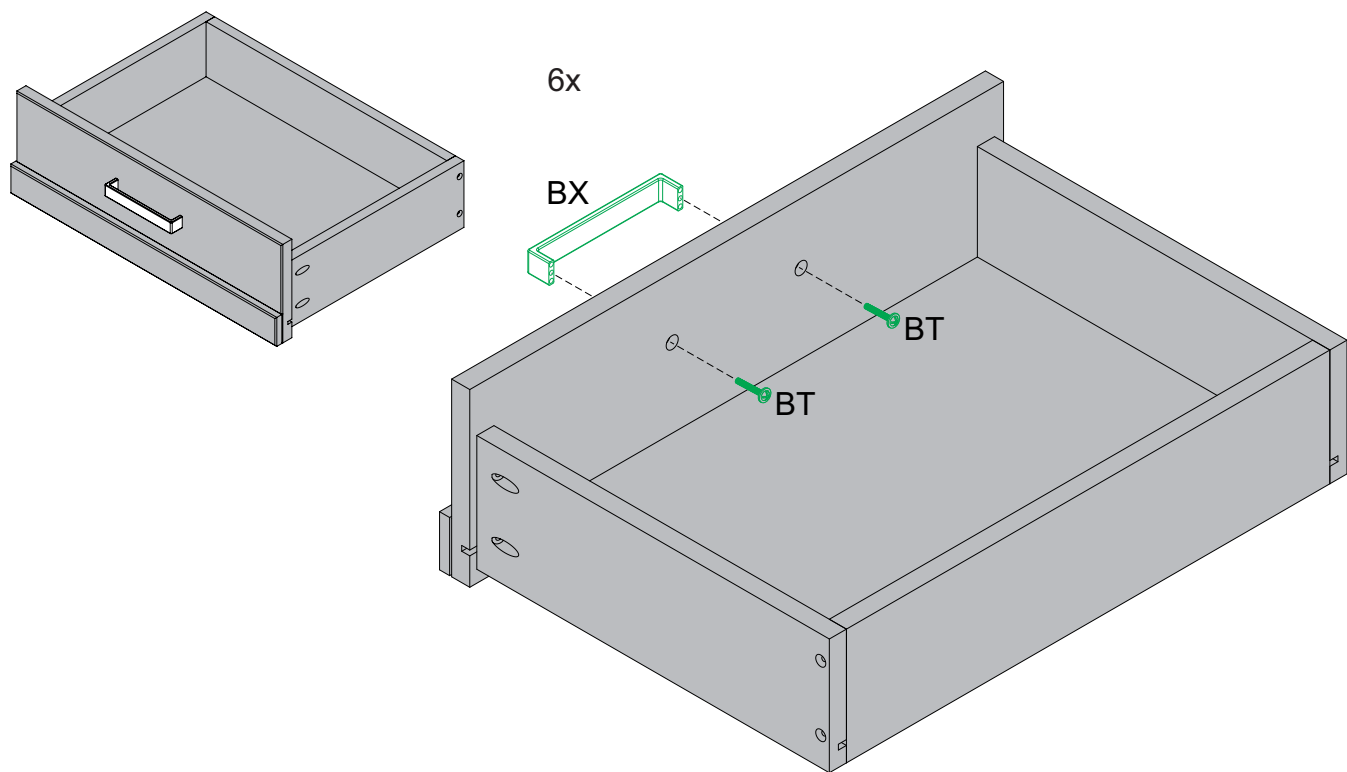

BX	06x	BT	12x
			
		M4 x 1"	

The drawers are now complete and ready to place inside your new Drawer Dresser!

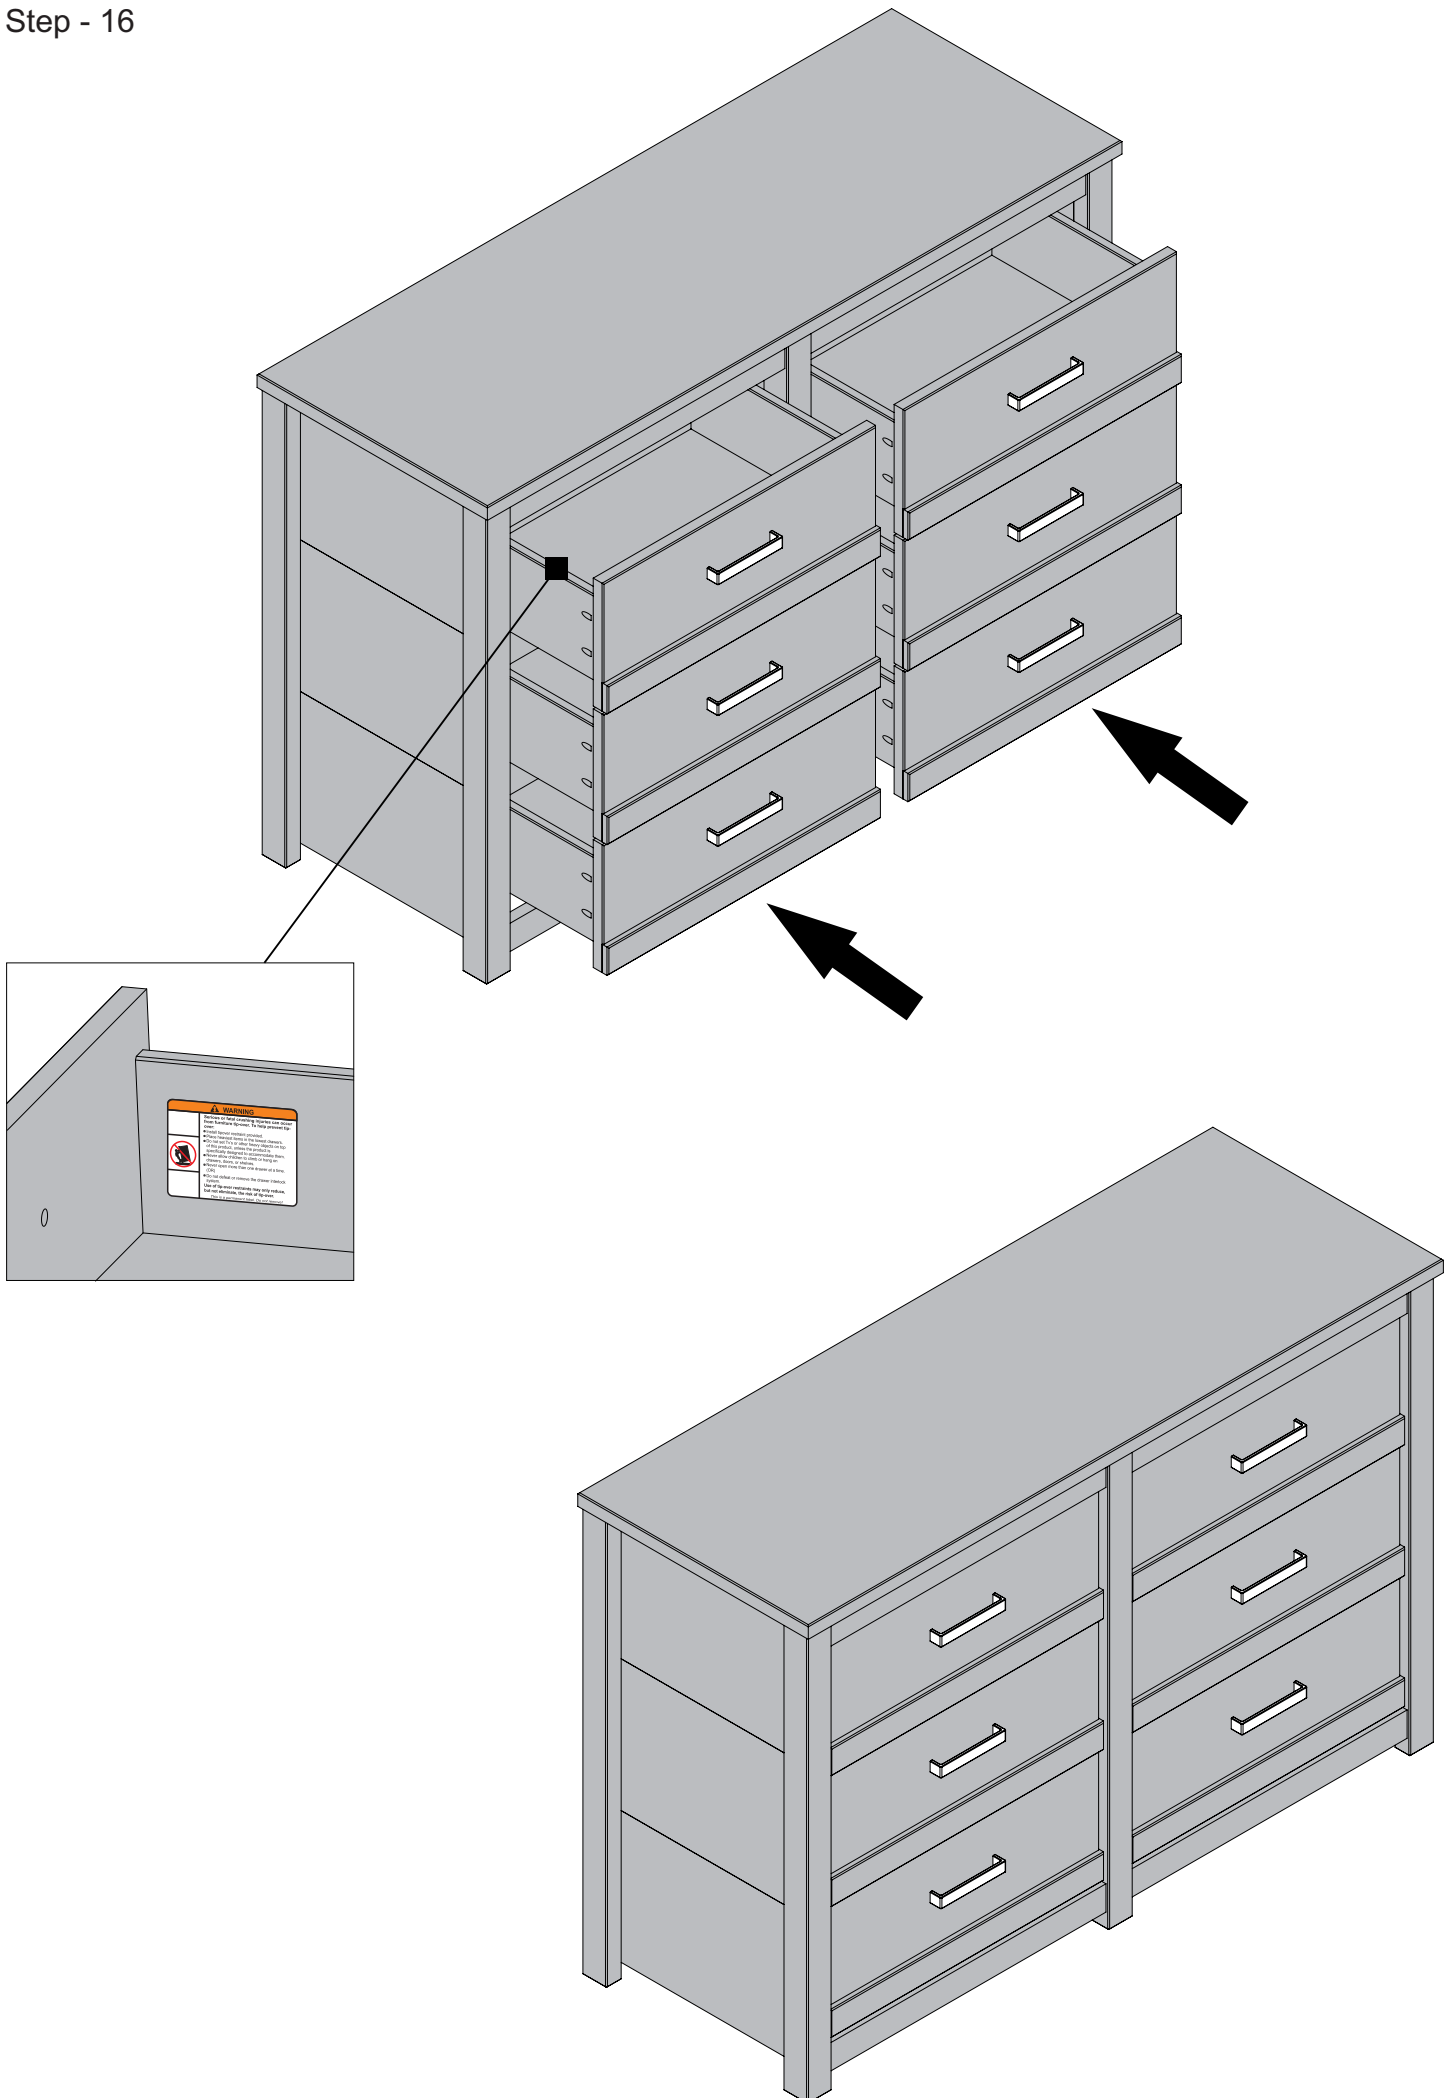

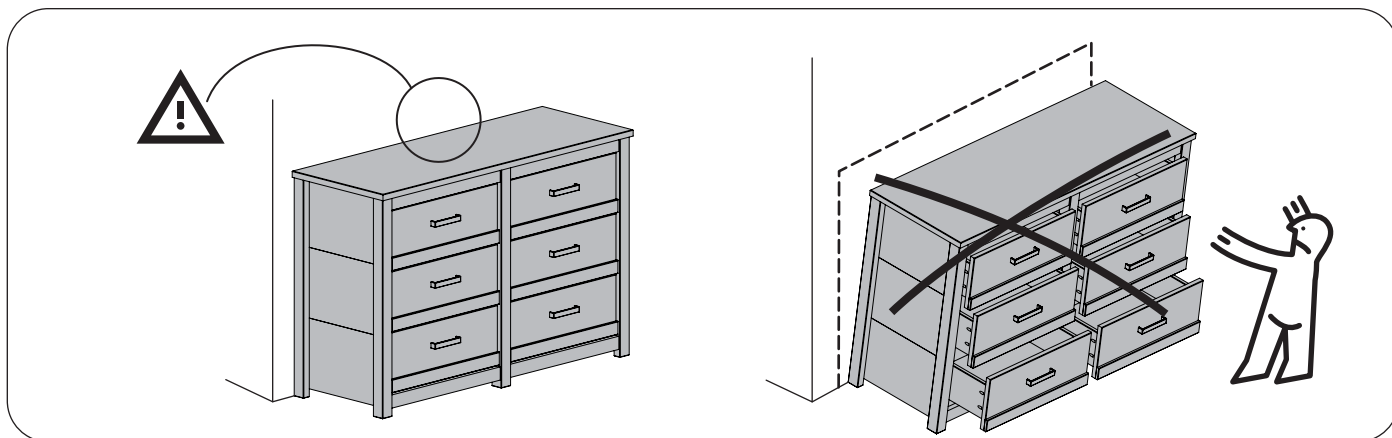

Anti-Tip Kit

