


10' × 13' LOUVERED PERGOLA

ASSEMBLY MANUAL

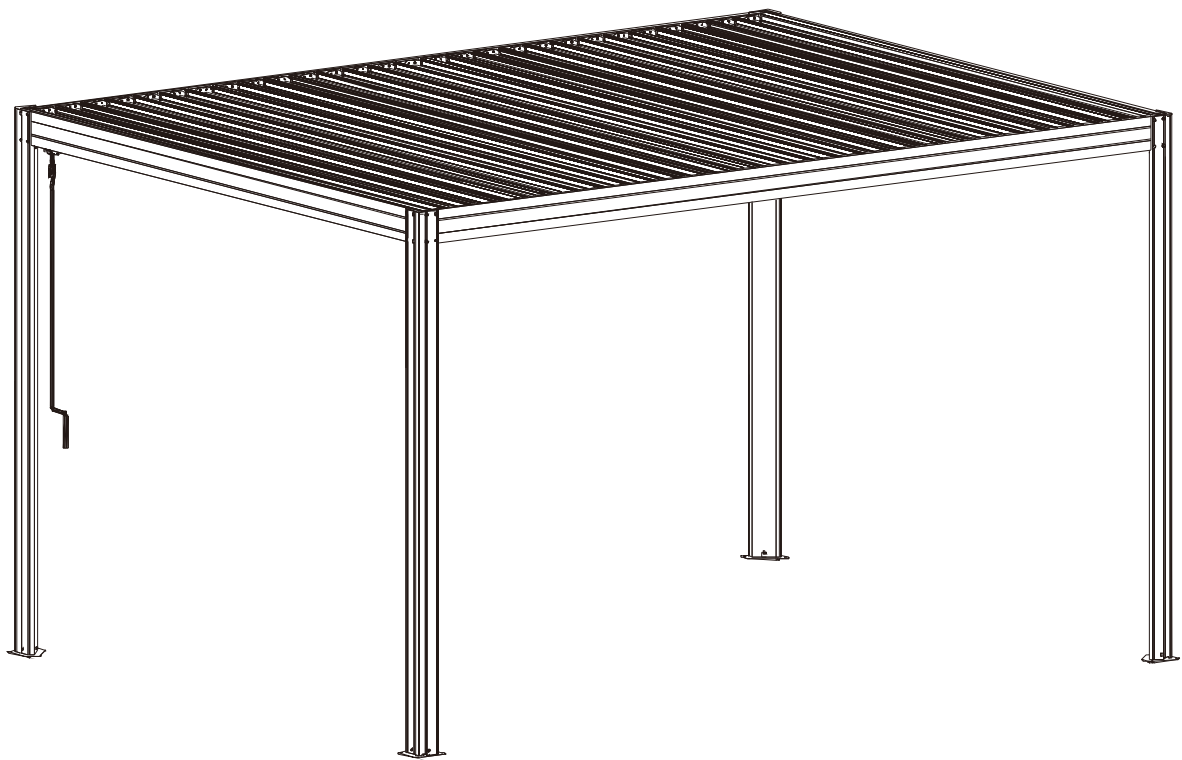

MODEL#: LGMF1631

Missing part? Damaged? Contact us via email at

service@domioutdoorliving.com

www.domioutdoorliving.com

READ ALL INSTRUCTIONS BEFORE USE

Warning&Attention

-This gazebo is not a toy.Children are not allowed to assemble or disassemble.Please take care of children,do not let them play around when assemble or disassemble.

-Adults only for assemble or disassemble this product.

-This product is constructed with heavy duty frame,please do not lean or climb before it finish assembling.

-Even though our hardtop gazebo is sturdy,please do not stand under the gazebo during a lightning storm.

-DO NOT use this gazebo if any parts show signs of instability or damage.

-Maximum weight capacity is 1000 pounds.

-If moderate to heavy snow is forecast, open the lovers to avoid snow accumulating.



Three or more people are needed for assembly.



Find out and use the hex keys in the box.



One or more ladders are necessary.



A phillips screwdriver is required.




Please wear protective glove before assembly.






Please don't fully tighten the screws prior to complete assembly.




Please wear a safety hat.




You may need prepare a drill.

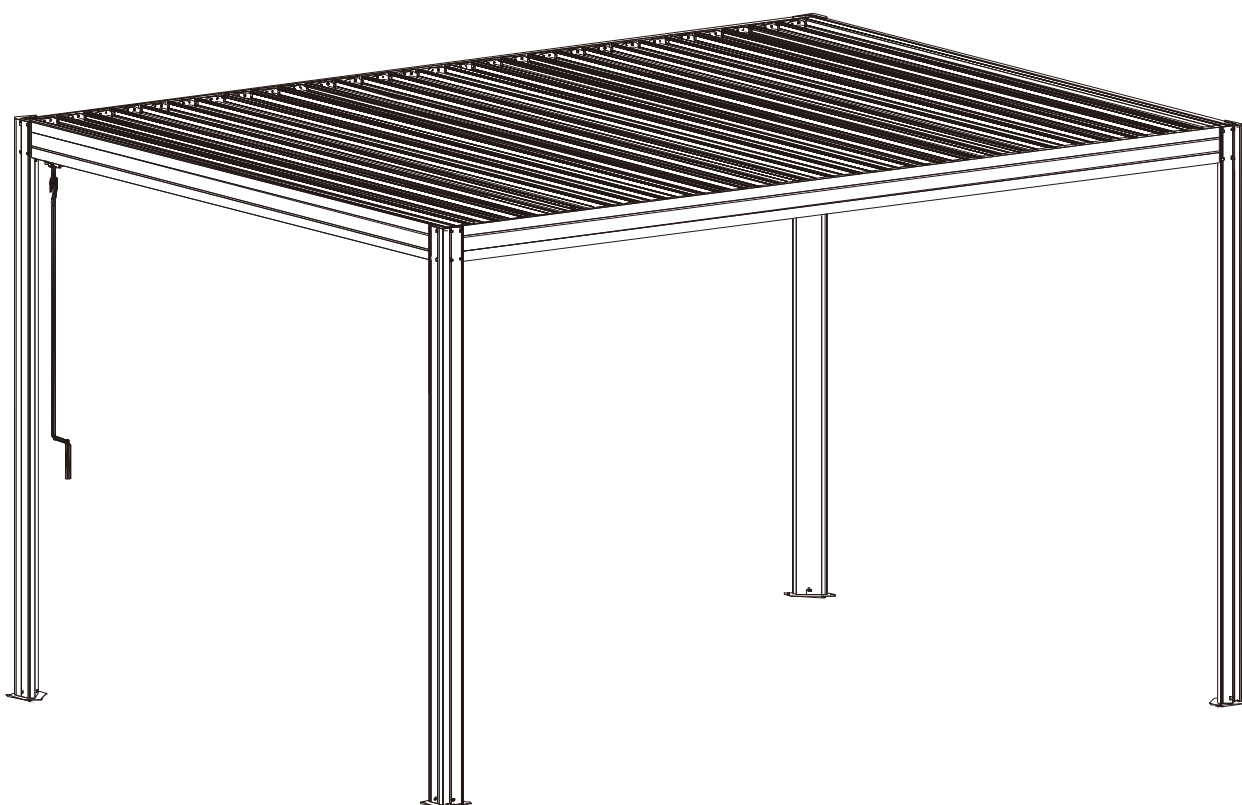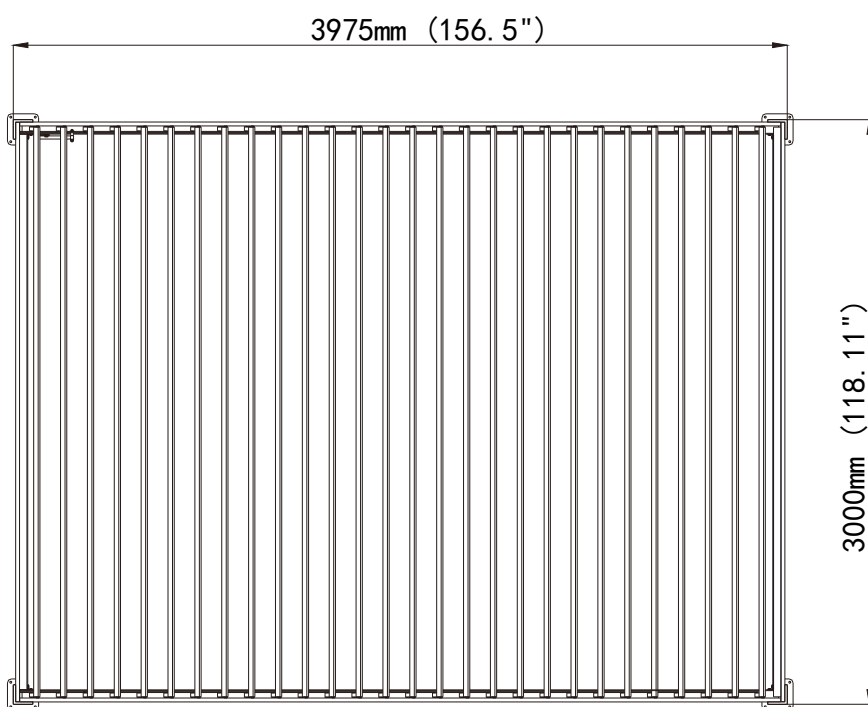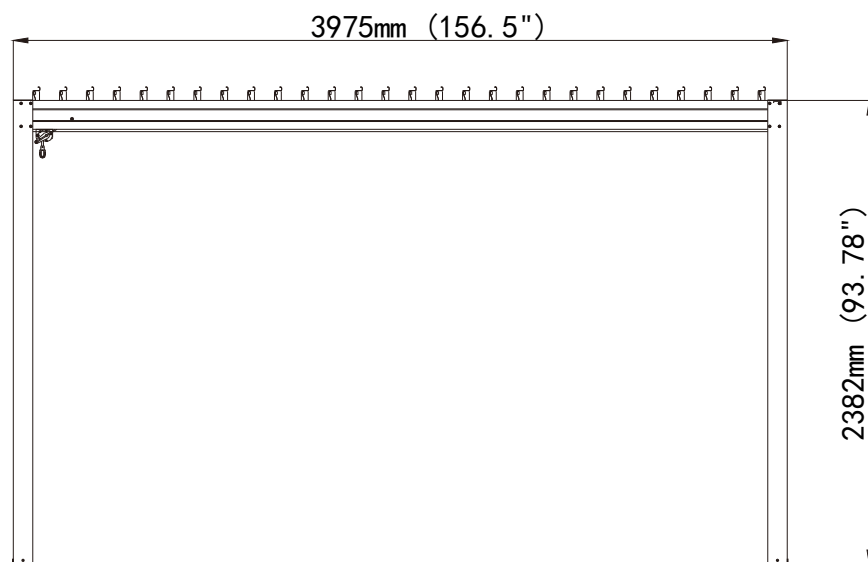


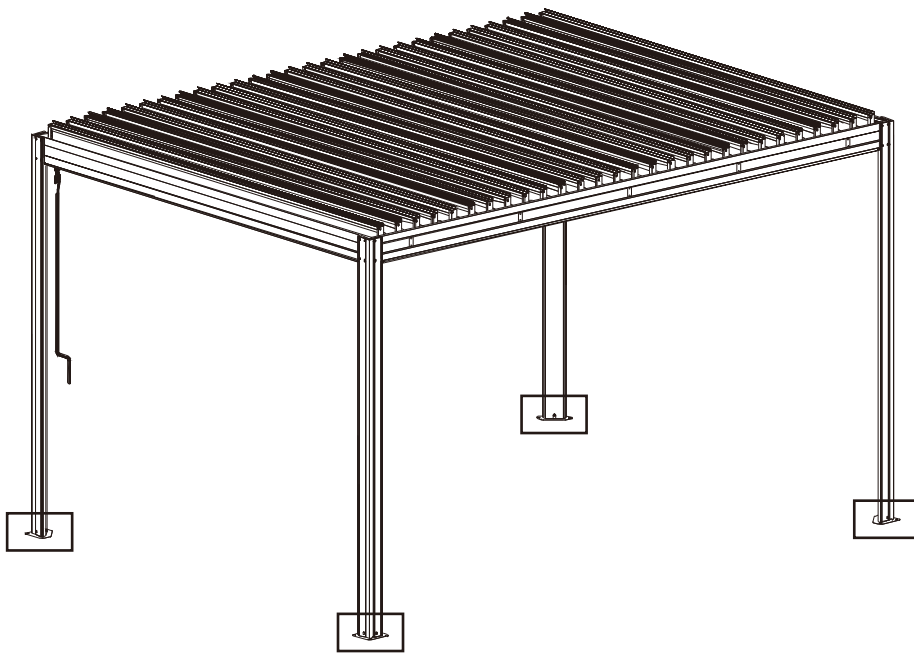


X12

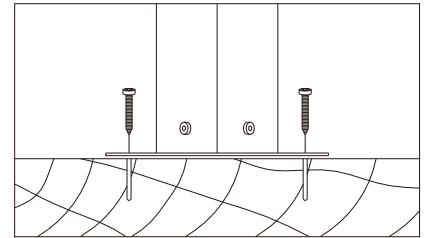

If the deck is hard wood and the depth of it is over 3 inch you can use **5/16 in. x4 in. Structural Wood Screw** to mount the pergola.

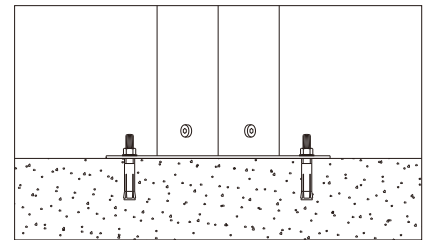


If the ground is concreted and the depth of it is over 3 inch you can use expansion bolts to mount the pergola.

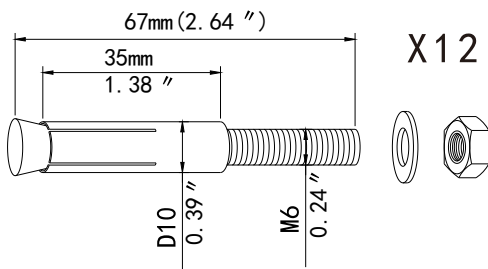


X12















Expansion Bolts


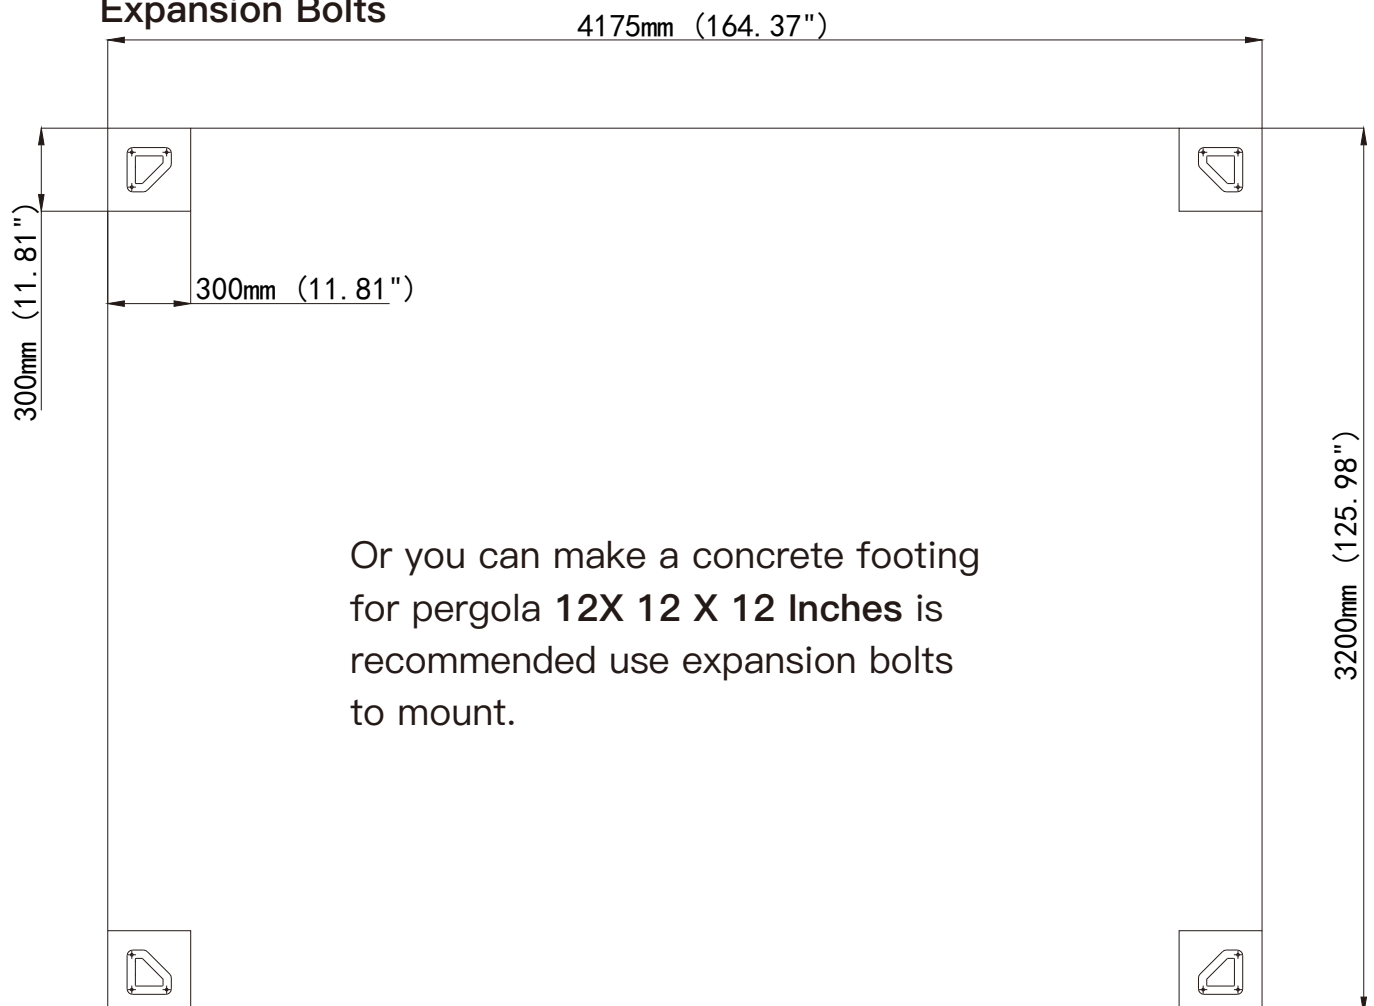


Or you can make a concrete footing for pergola **12X 12 X 12 Inches** is recommended use expansion bolts to mount.

MOUNTING BLUEPRINT Pergola 10' x 13'


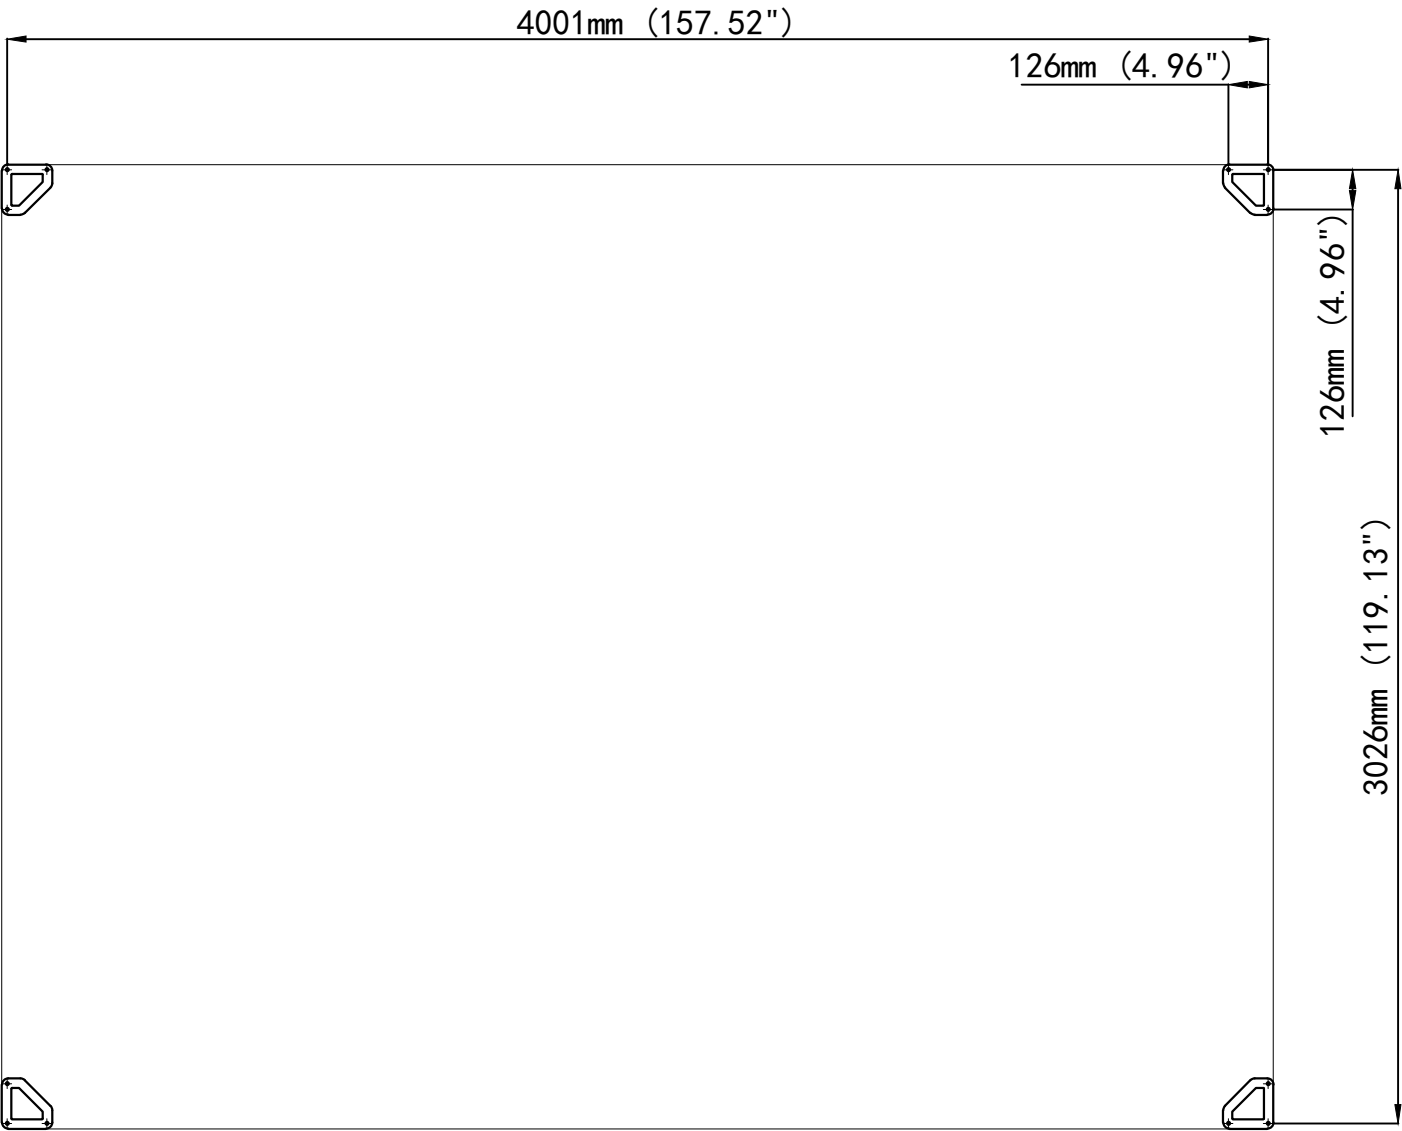


	 B1(x1)		
	 B2(x1)		
	 B3(x1)		
	 B4(x1)		
	 C(x28)		
	 D(x1)		
A(x4)			
 A1(x4)	 A2(x4)	 A3(x4)	
 A4(x4)	 F(x1)	 F1(x1)	
 G(x1)	 G1(x1)	 H(x56)	
 Z(x1)	 M6x16 1# x66	 M5x8 3# x14	
 M8x34 5# x2	 M6 6# x1	 M8 7# x1	
 ST3.5x16 8# x112	 4x6 9# x112		
 S6 x1	 S4 x1	 S10 x1	 S13 x2
 x1			

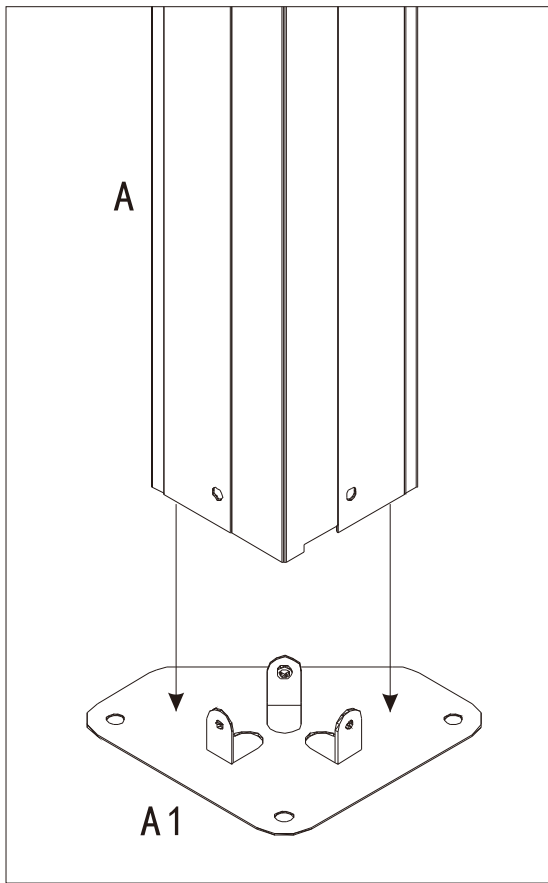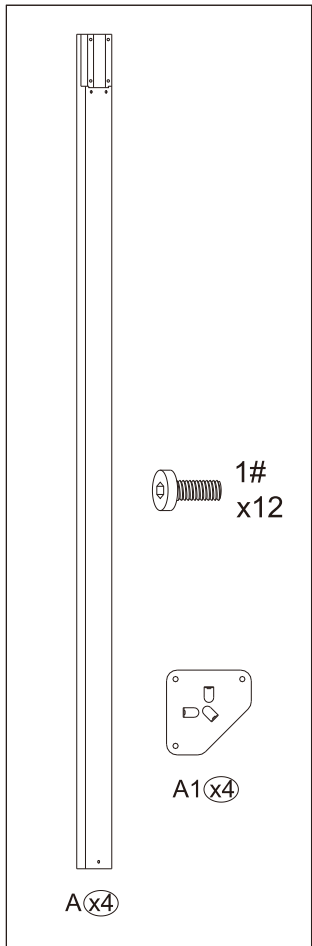


Step 1:

Connect Part #A and Part #A1 with 3 Bolts 1# as shown.

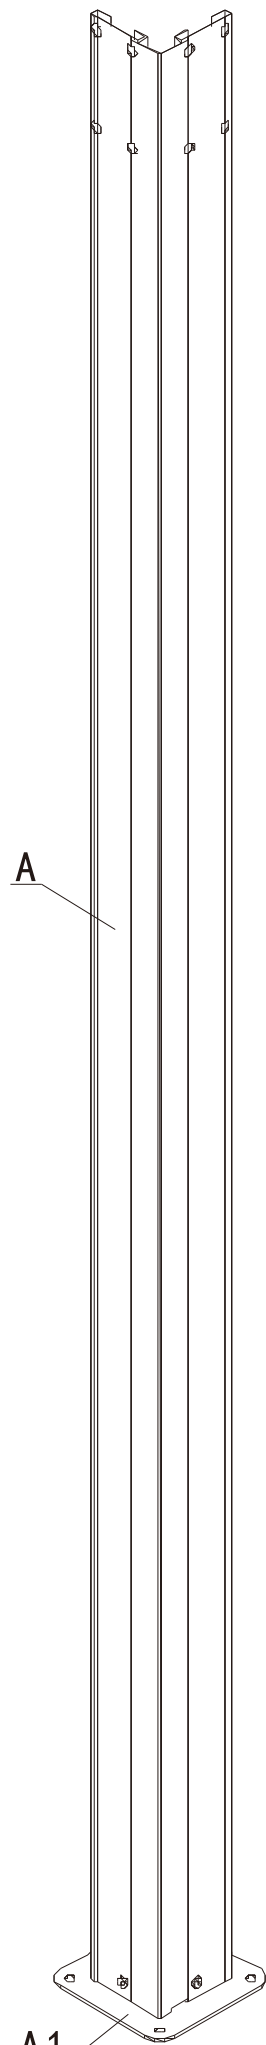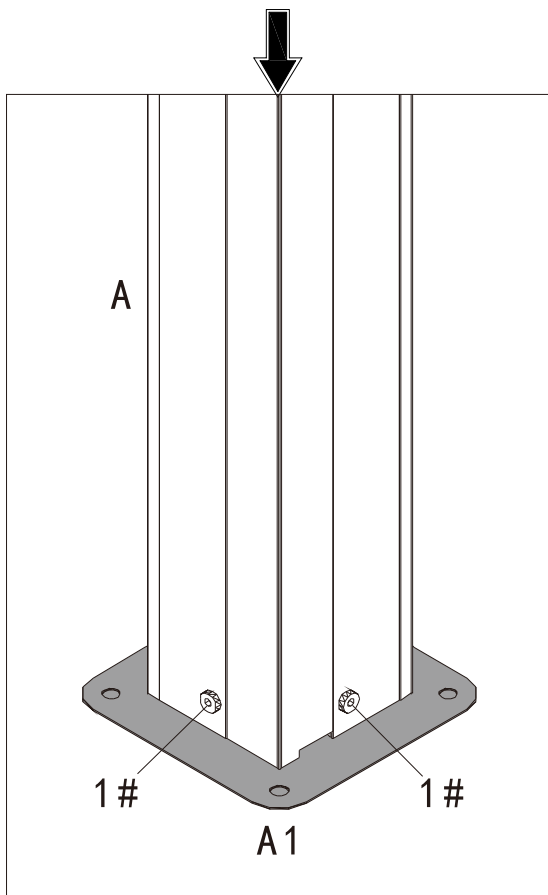

Repeat the above procedures to assemble the other 3 posts.





A3(x4)



1#
x8





A2(x4)

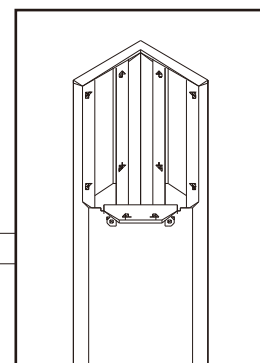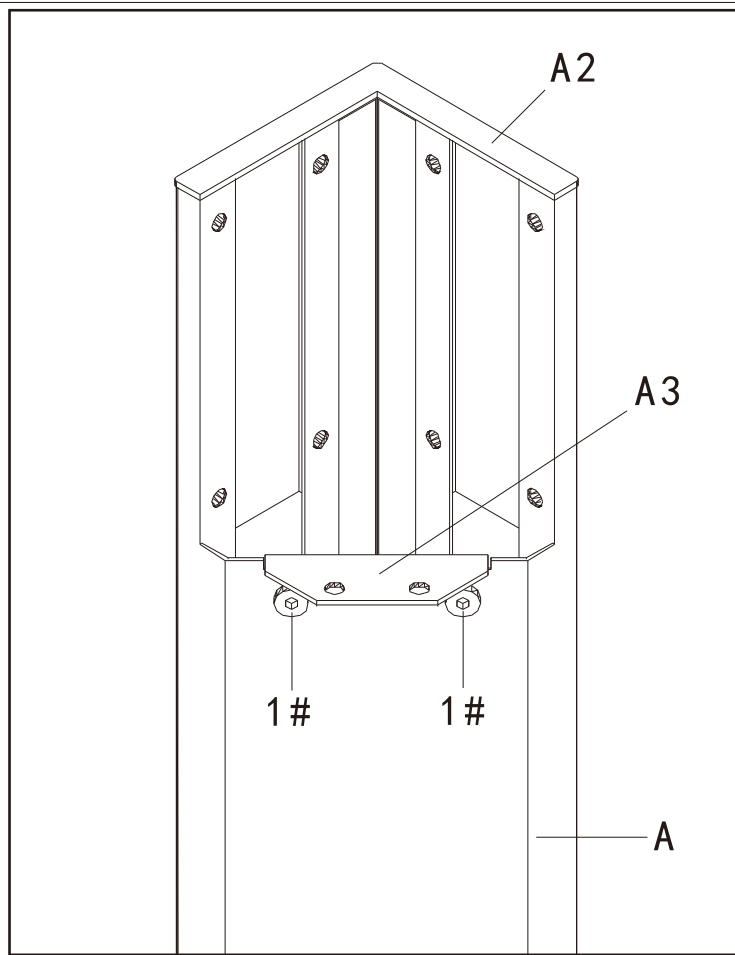










Step 2:

Insert part #A2, connect part #A3 with 2 bolts #1.

Insert

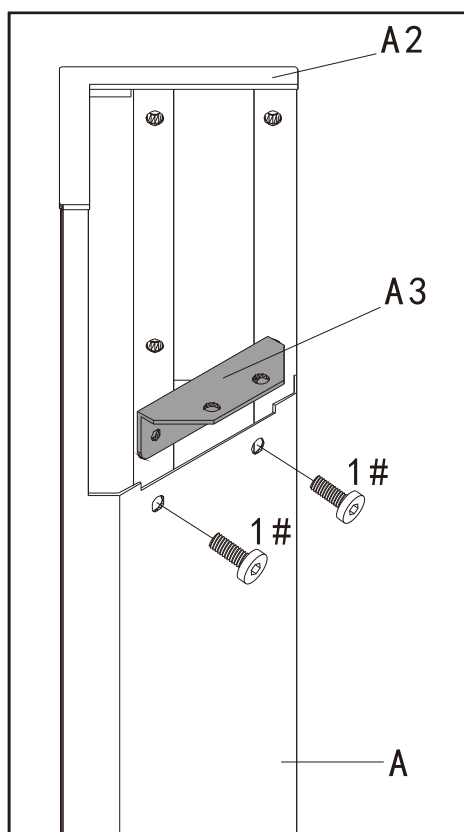
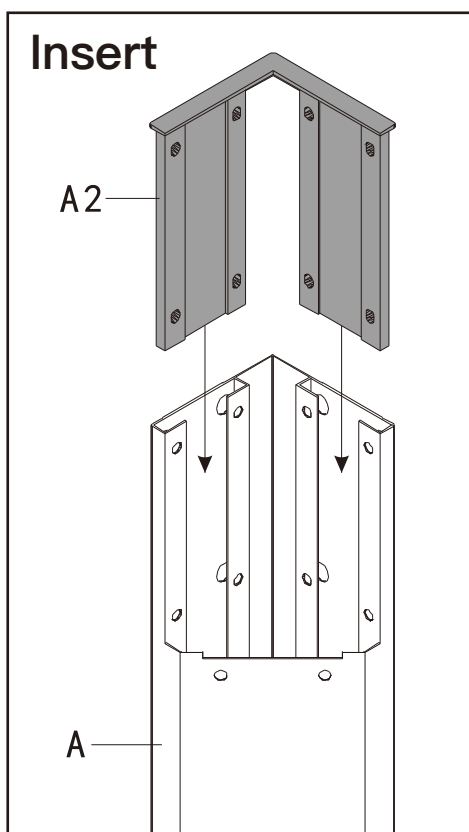


Repeat the above procedures to assemble the other 3 posts.

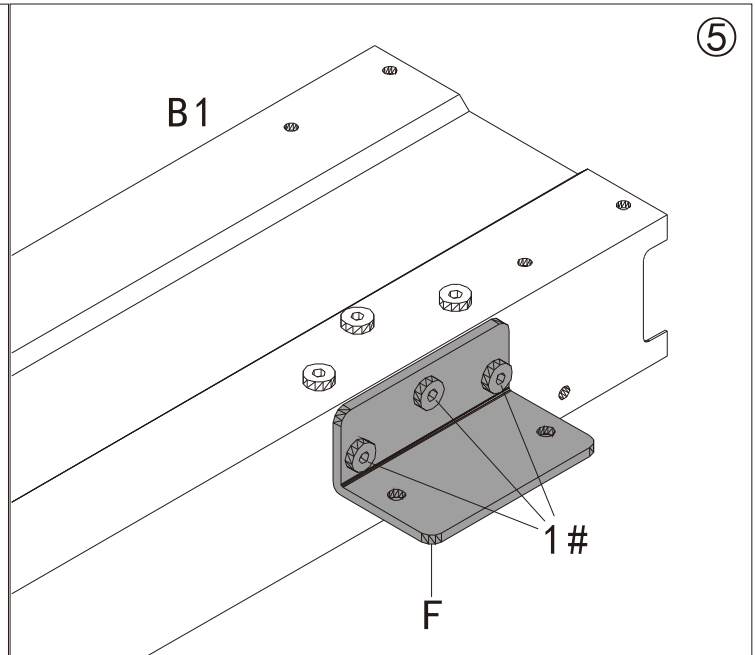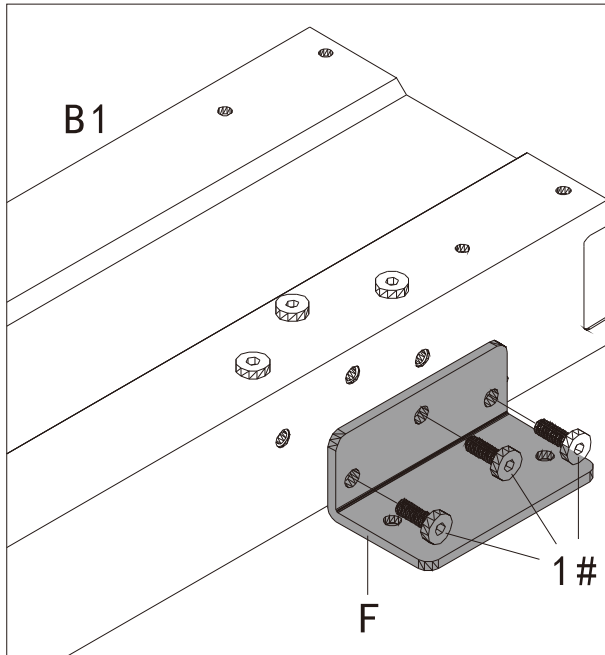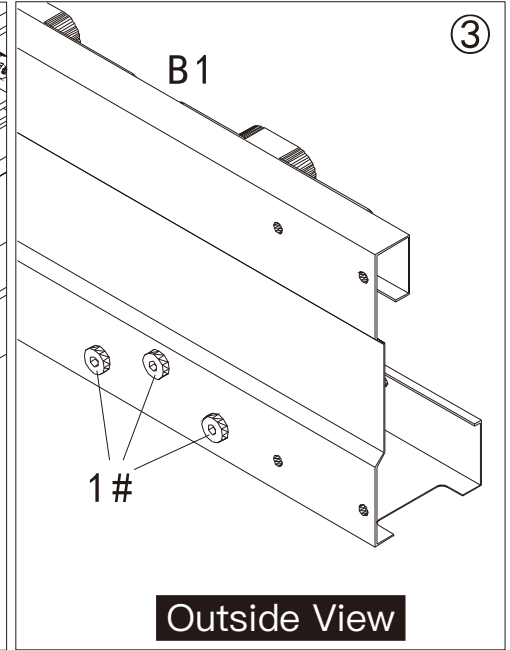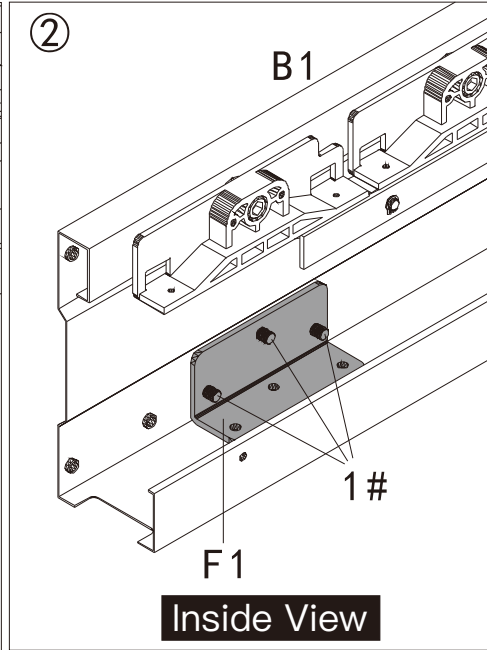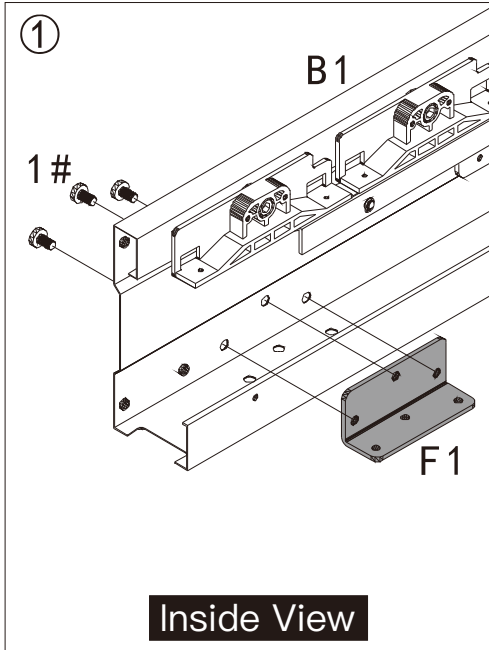


Step 3:

Insert Part #F1 into Part #B1. Secure with 3 Bolts 1# as shown.

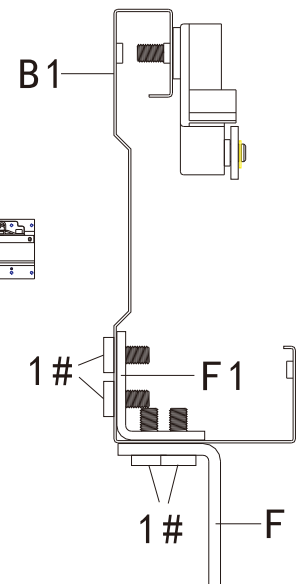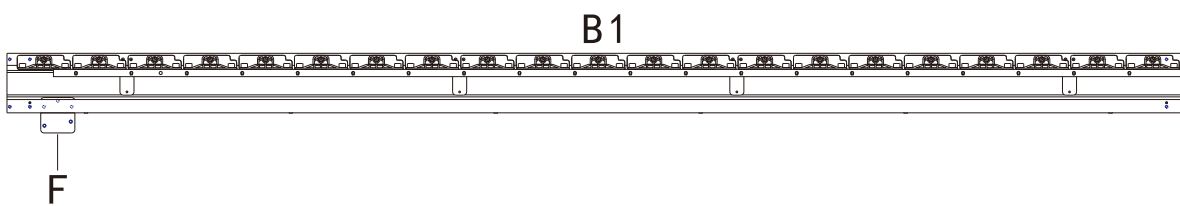


Secure Part #F with 3 bolts #1 as shown in ④, ⑤.



G1(x1)




6#
x1

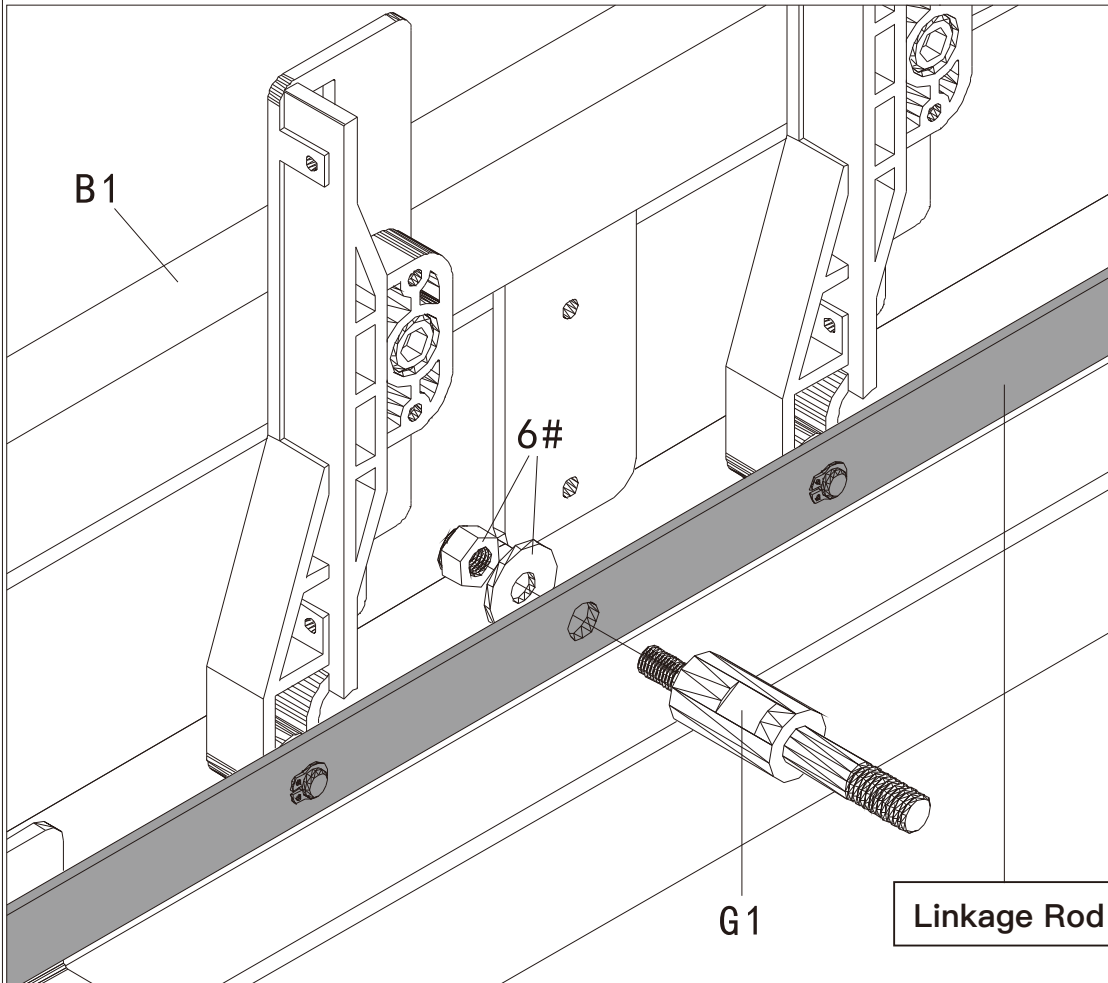

Step 4:

Insert Part #G1 into the hole on Linkage Rod of Beam #B1. Secure with Nut 6# and gasket as shown.

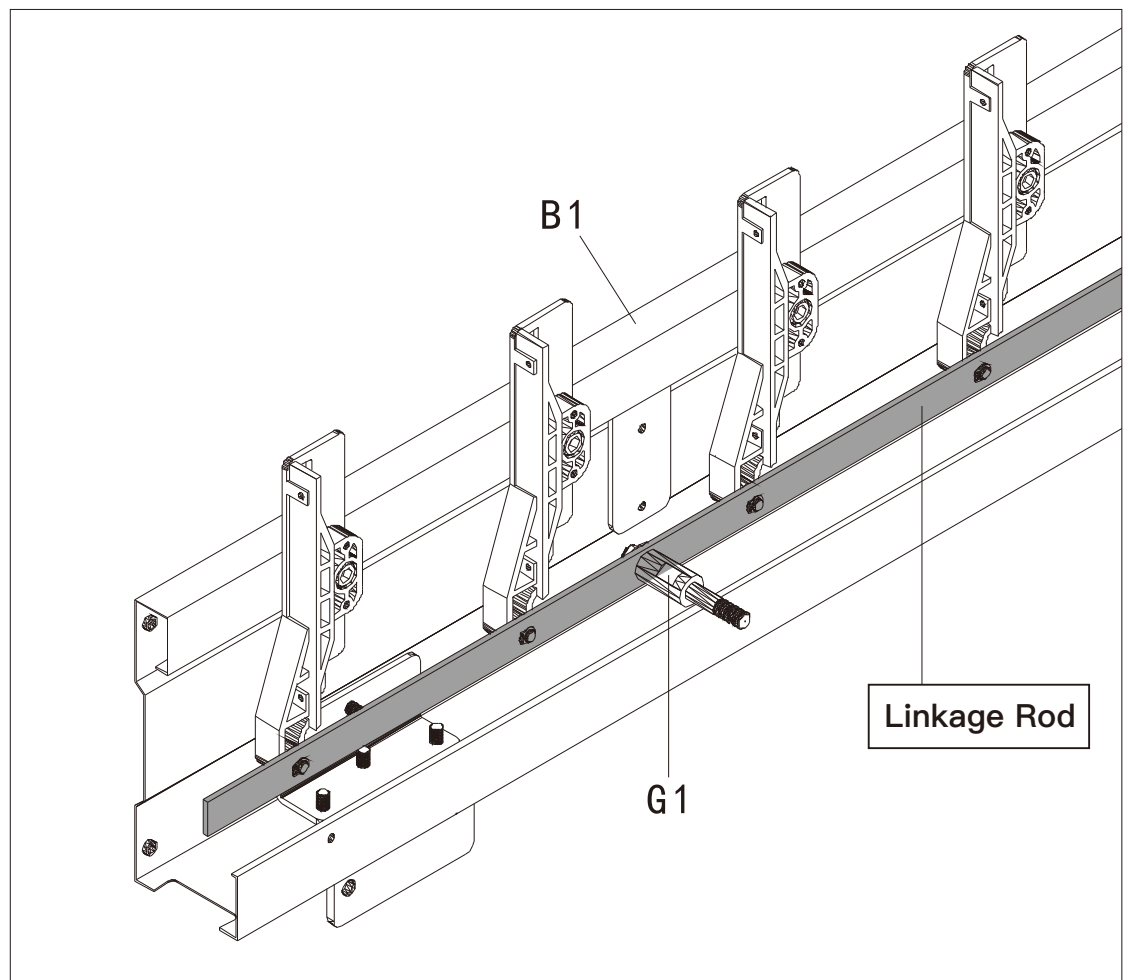



B2(x1)




B3(x1)



B4(x1)



1#
x32

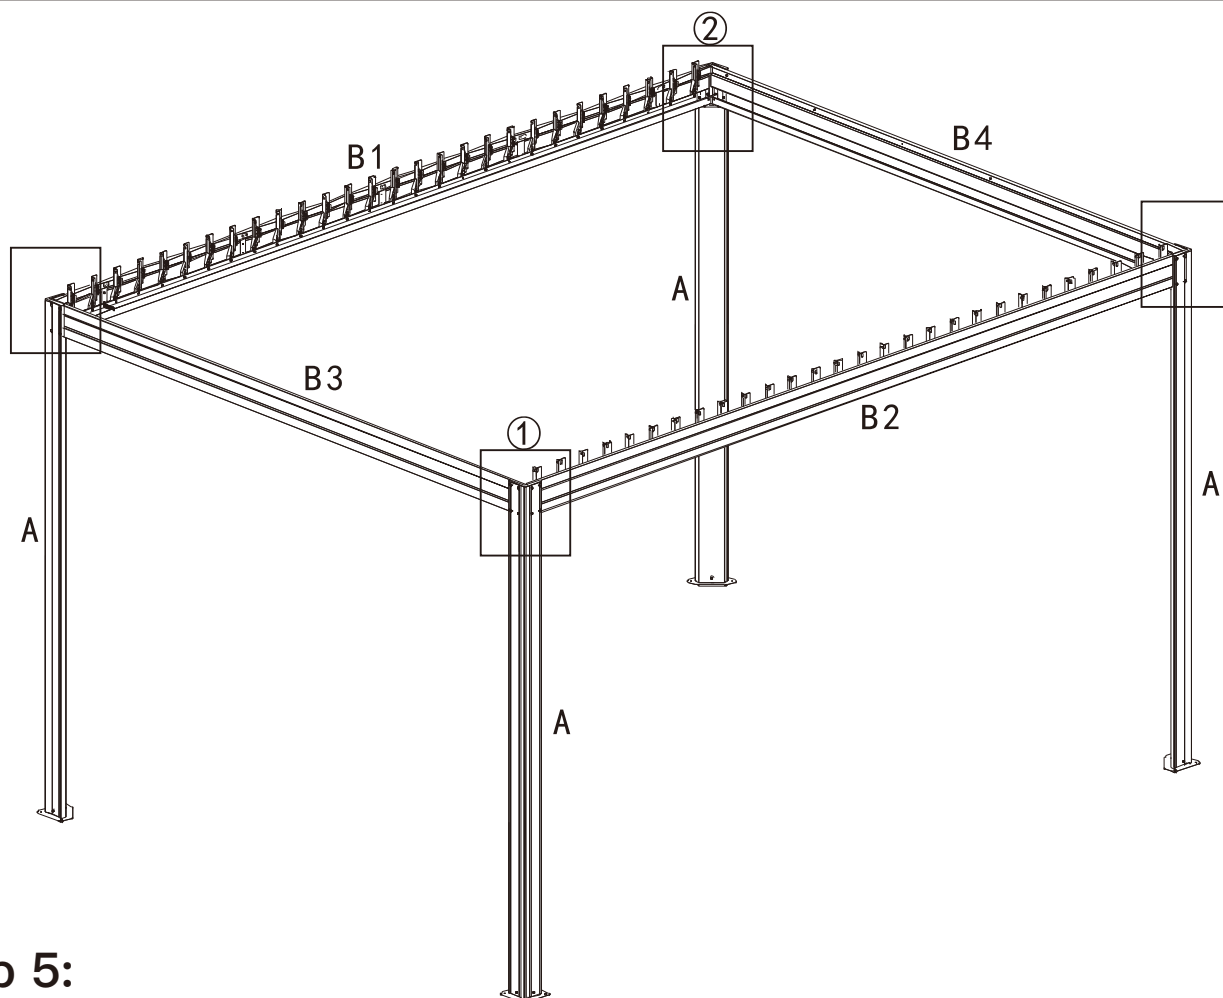


Step 5:

Install 8 Bolts #1 to secure Beam #B2 and Beam #B3 with Post #A.


Repeat the above procedures to assemble the other three sides.

⚠ ATTENTION: Don't tighten the bolts before all bolts are in the correct place.

Outside View

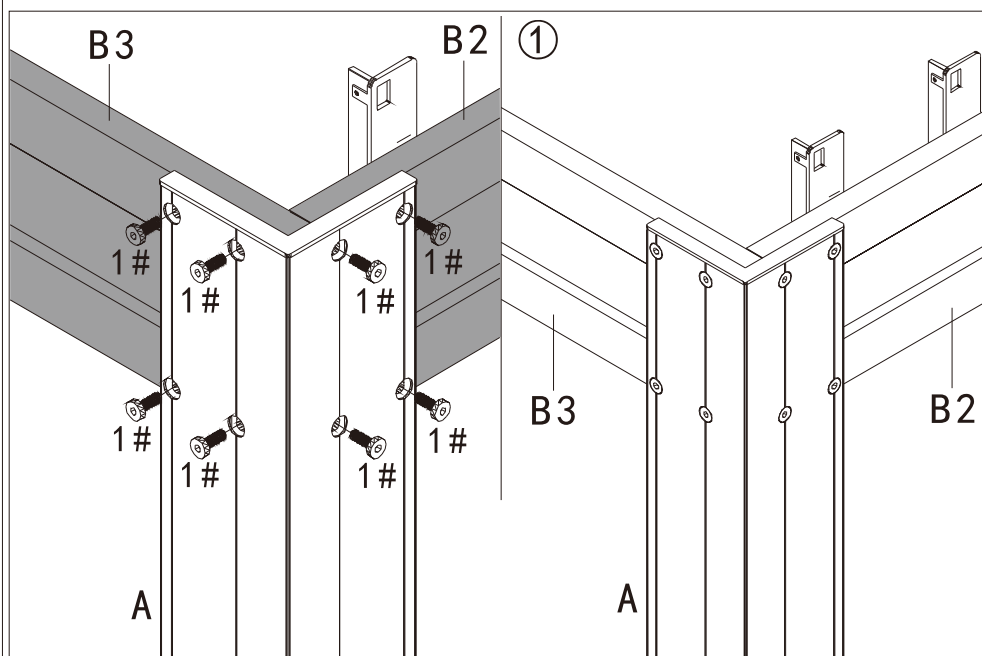

Inside View

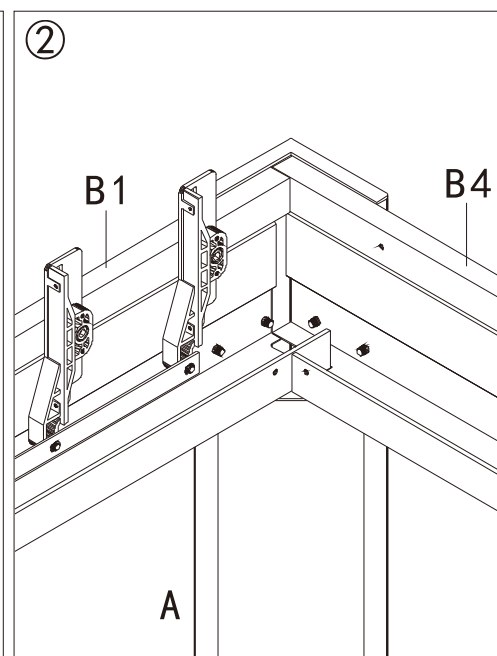




A4 (x4)



1#
x8



3#
x8

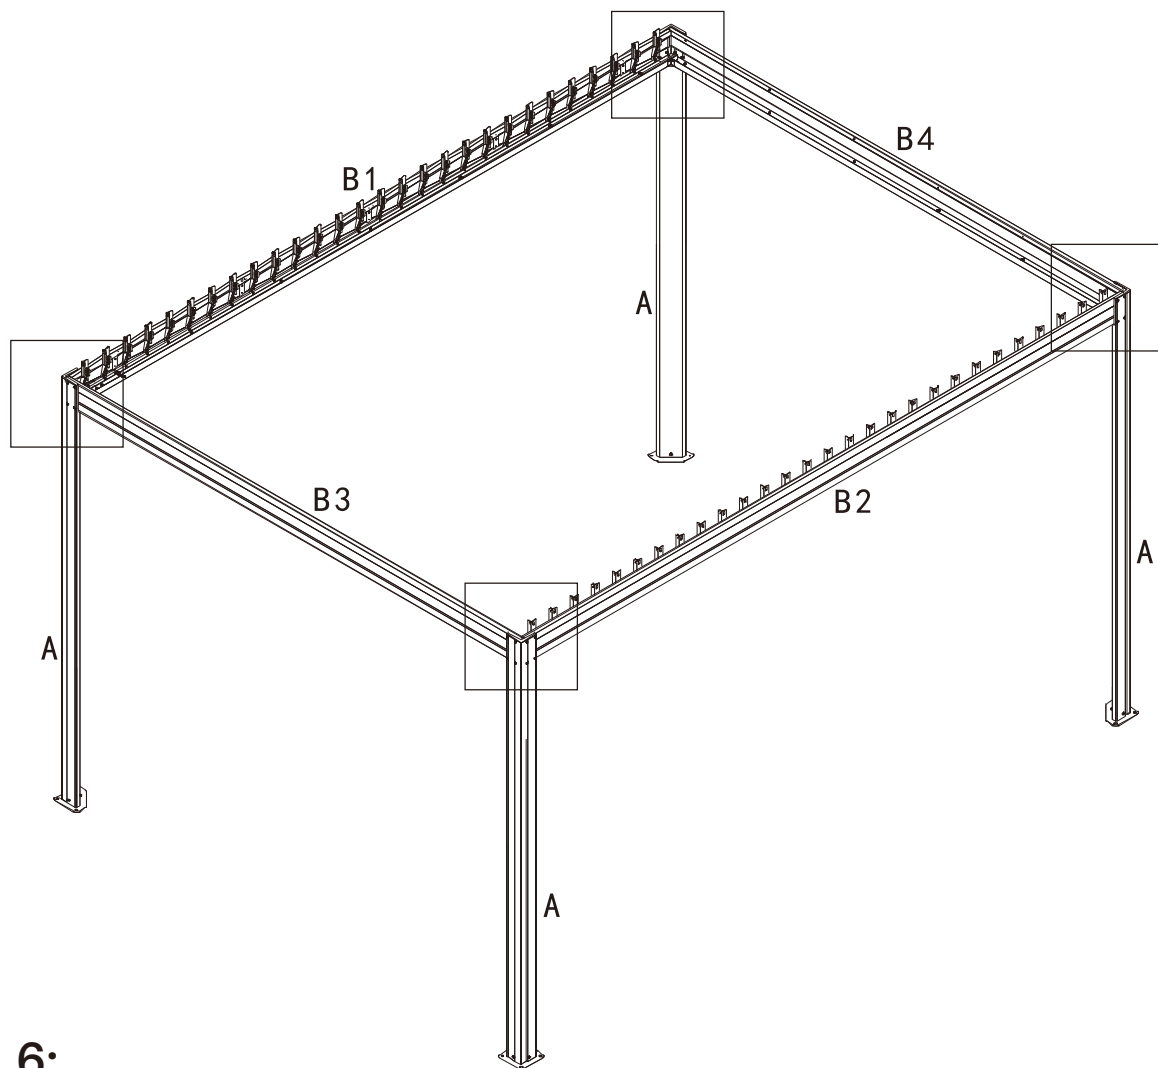




Step 6:

①: Use 2 bolts #1 to secure part #A3 with 2 beams.

②: Use 2 bolts #3 to secure part #A4 with 2 beams.


Repeat the above procedures to assemble the other three sides.

⚠ ATTENTION: Tighten all the bolts.

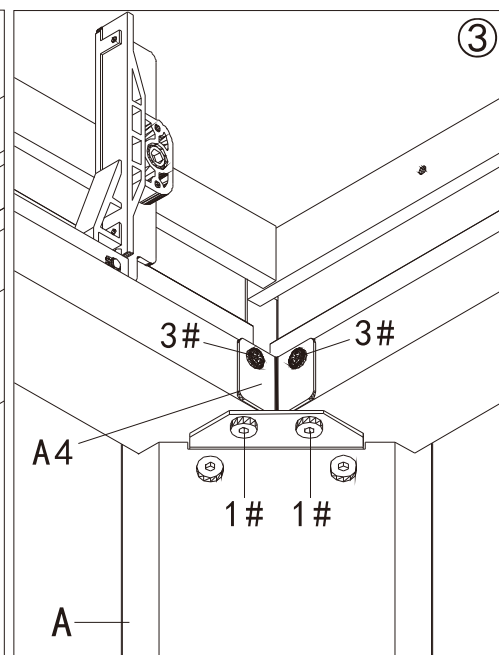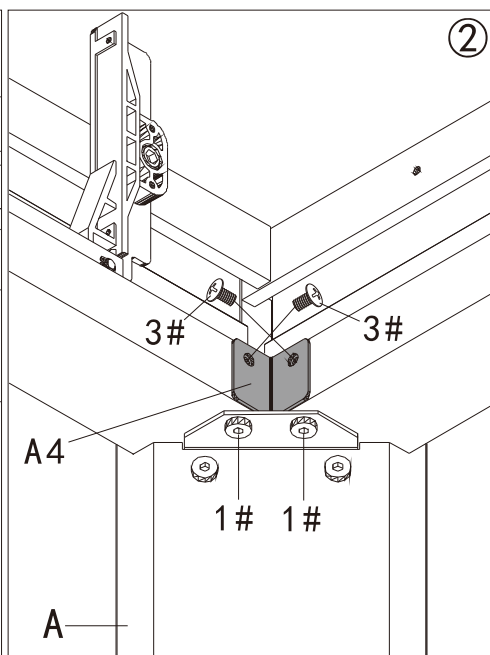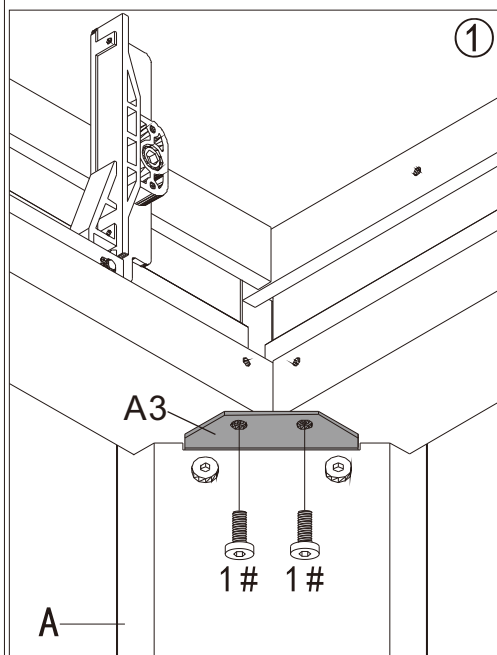


Inside View





Rain-proof Strip Assembly:

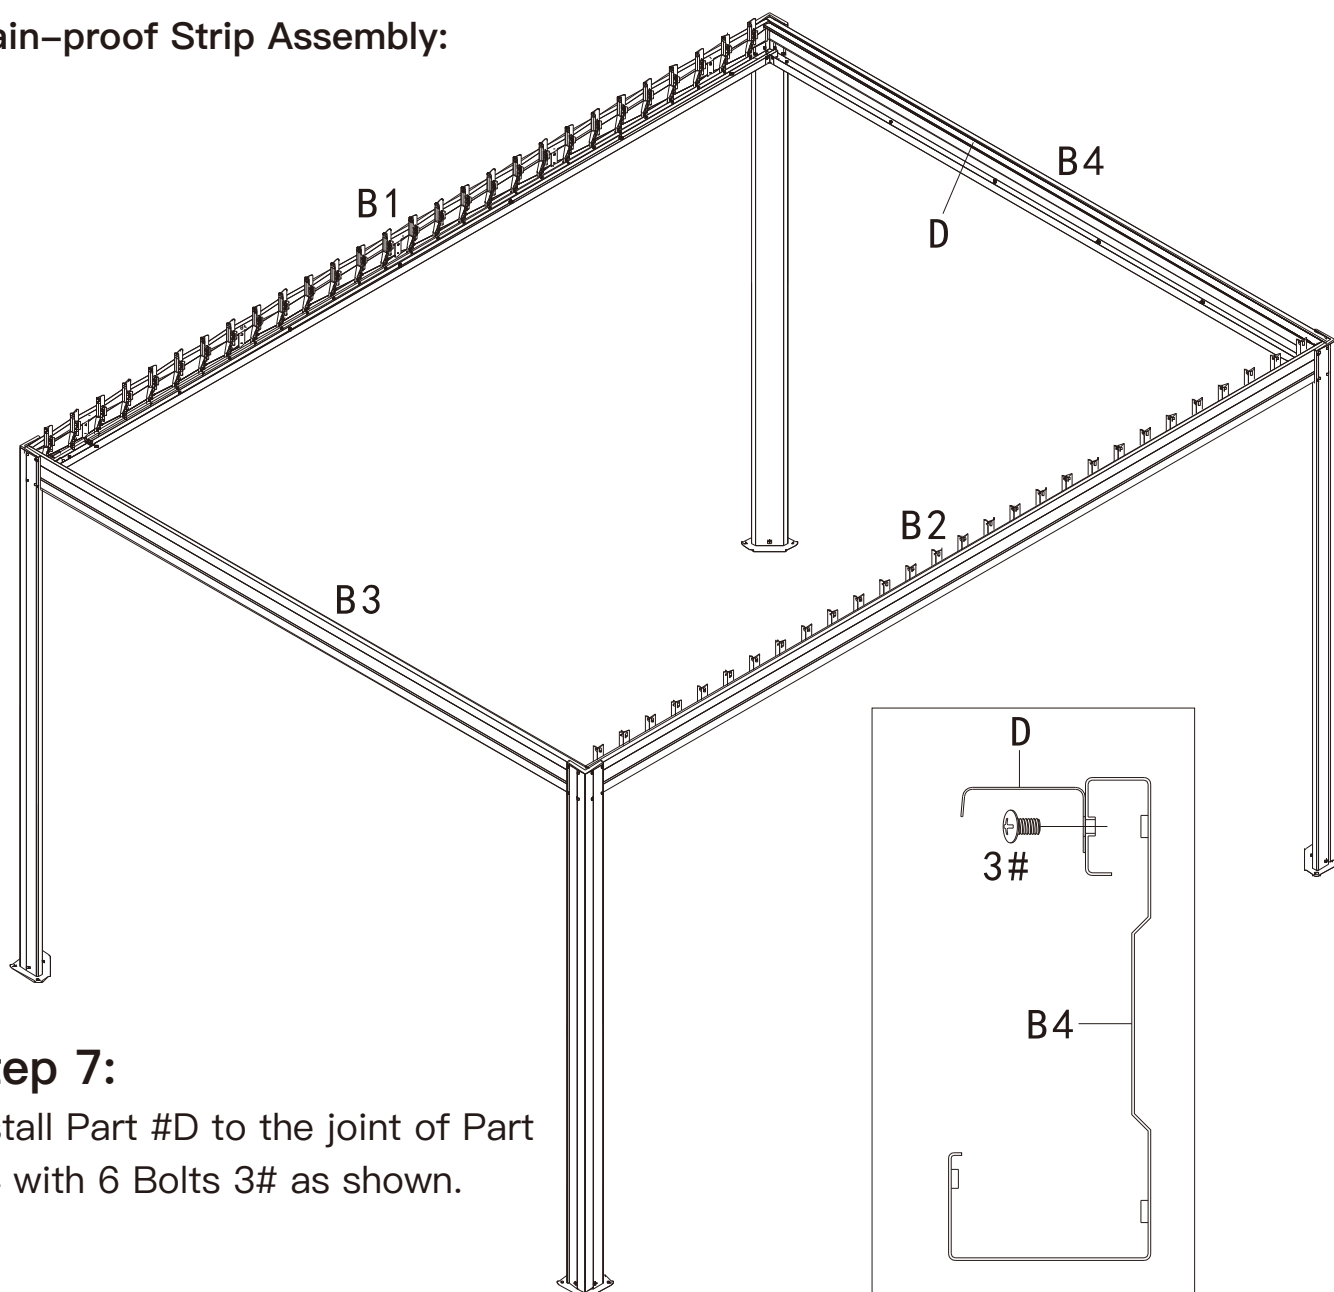


Step 7:

Install Part #D to the joint of Part B4 with 6 Bolts 3# as shown.

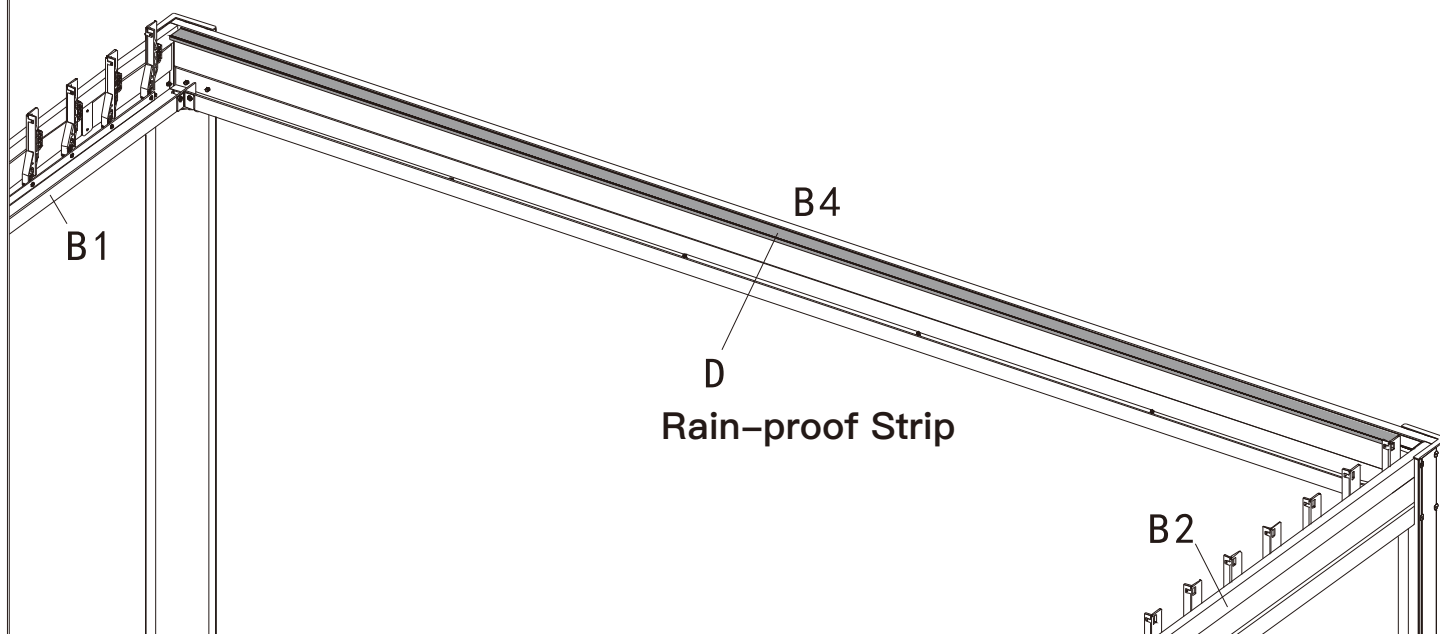


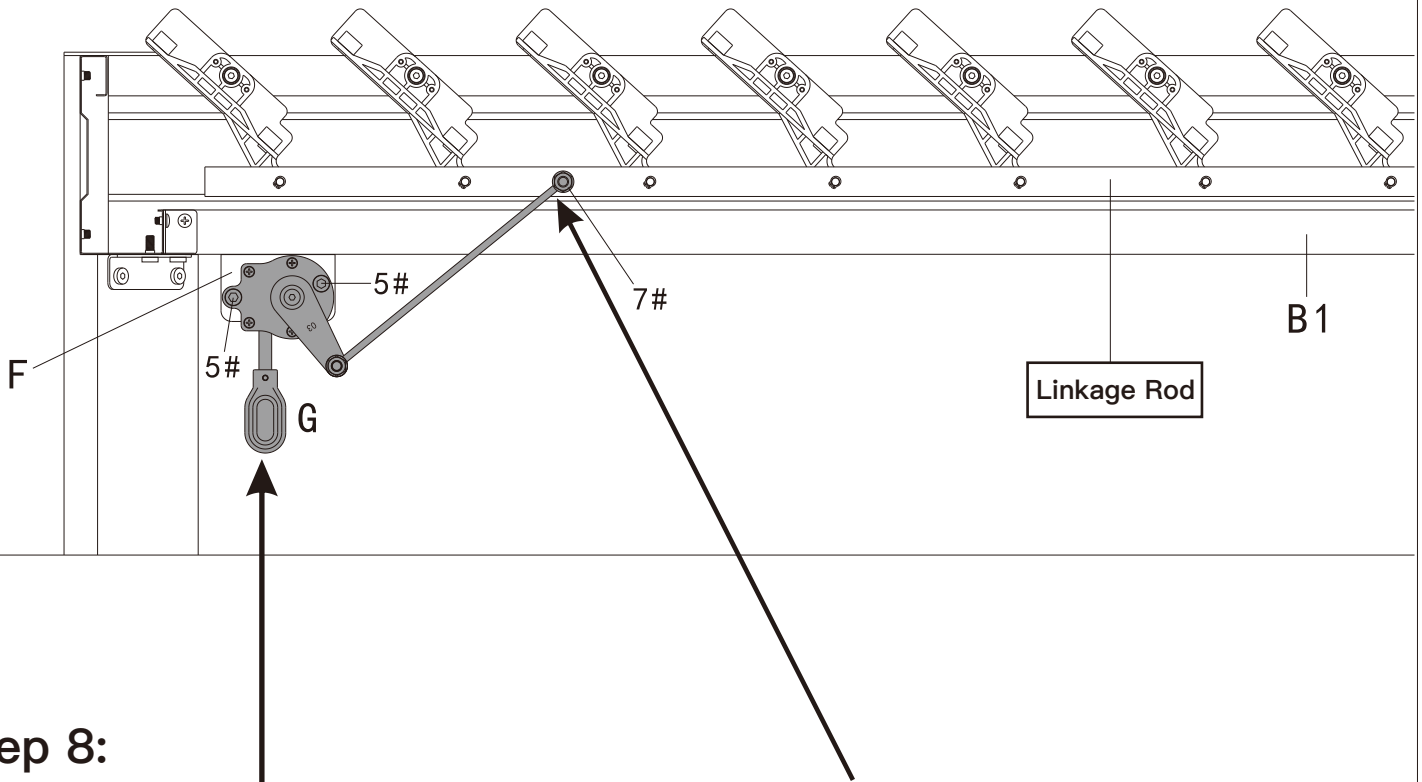

Step 8:

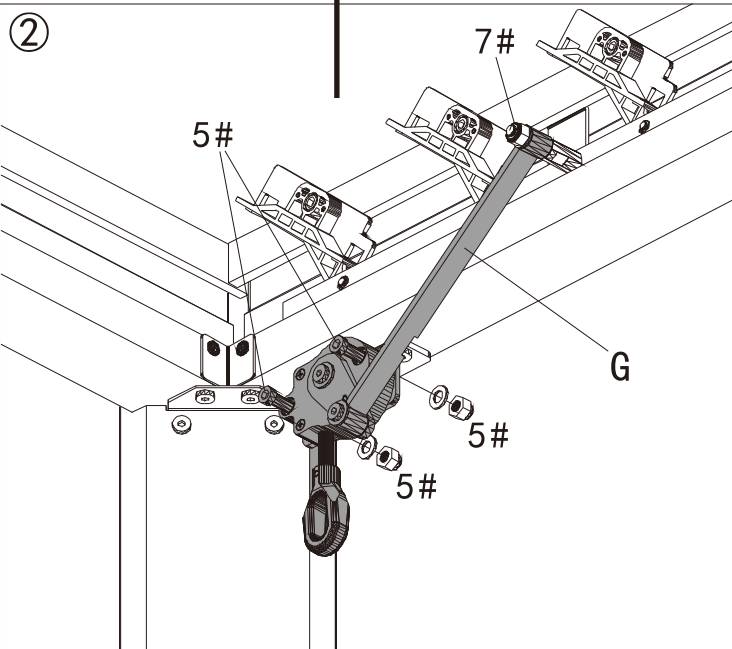

② Use 2 bolts #5, gaskets and nuts to fix part #G with bracket #F.

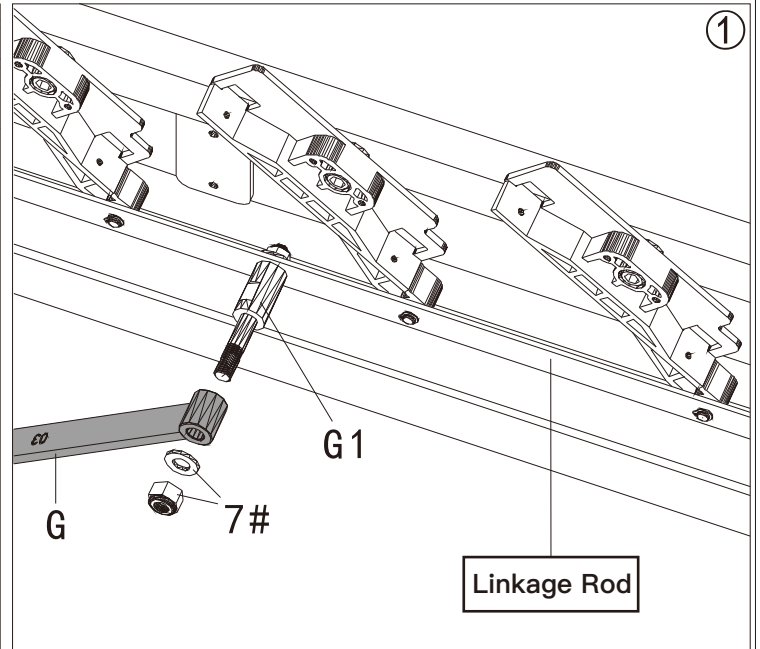

① Insert the connecting rod end of Part #G into Part #G1 and secure with 1 Nut 7# and gasket.


C(x28)




H(x56)

8#
x1129#
x112**Step 9:**


Place the roof panel, align the holes and fix with bolts #9.

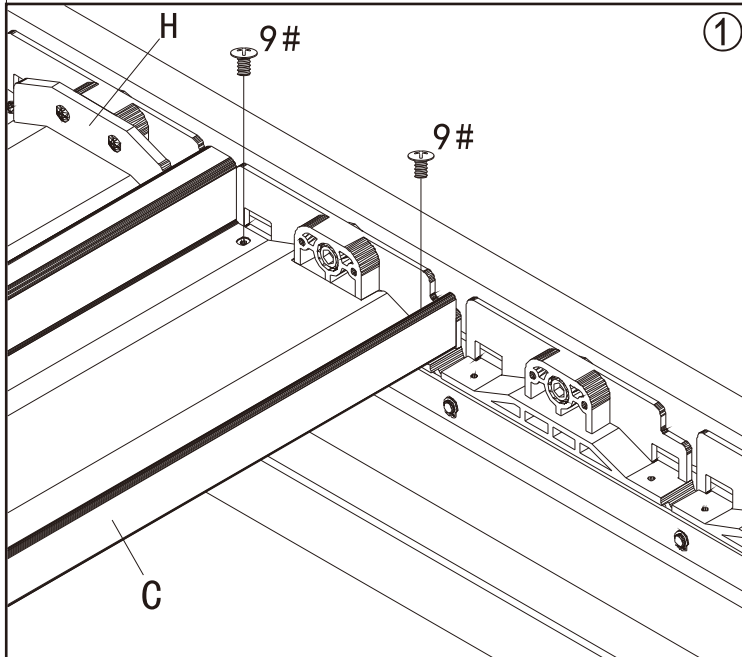
**Step 10:**

Insert part #H, and secure with self-tapping bolts #8.

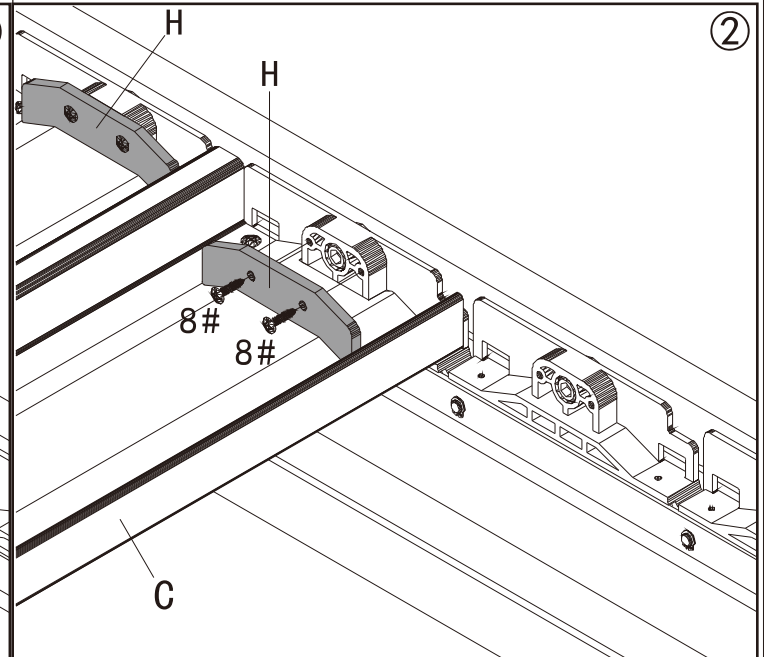

※ If moderate to heavy snow is forecast, pls open the louvers to avoid snow accumulating.

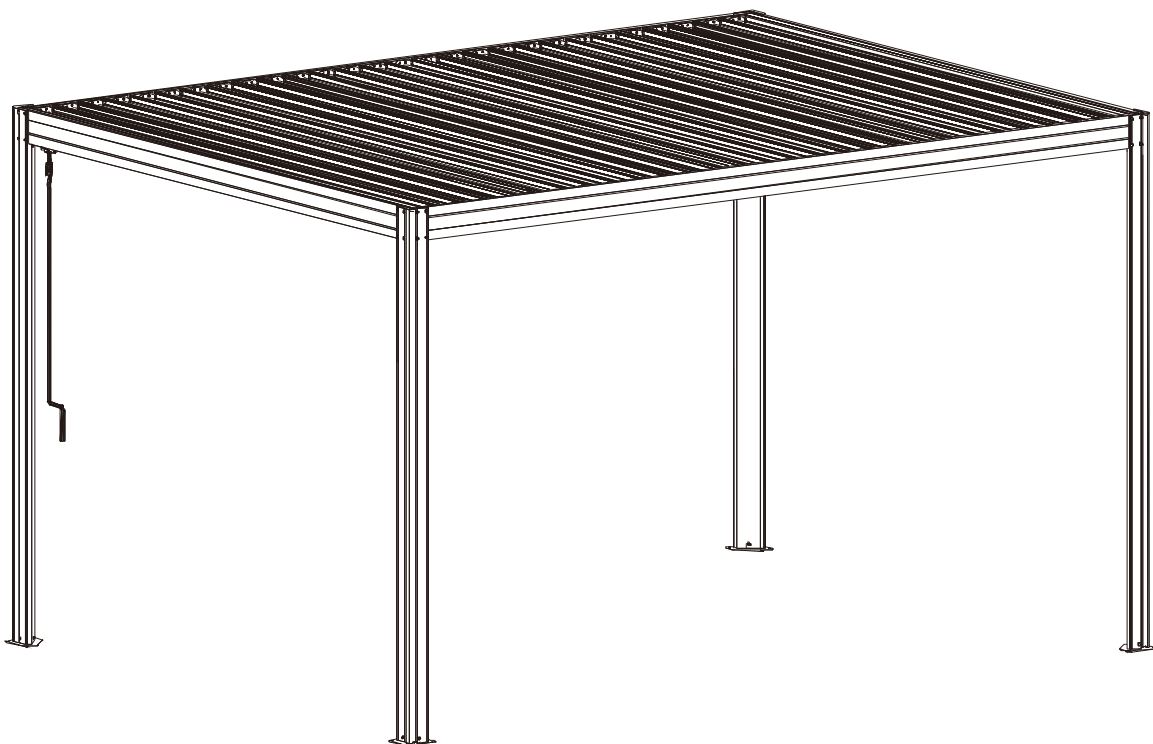


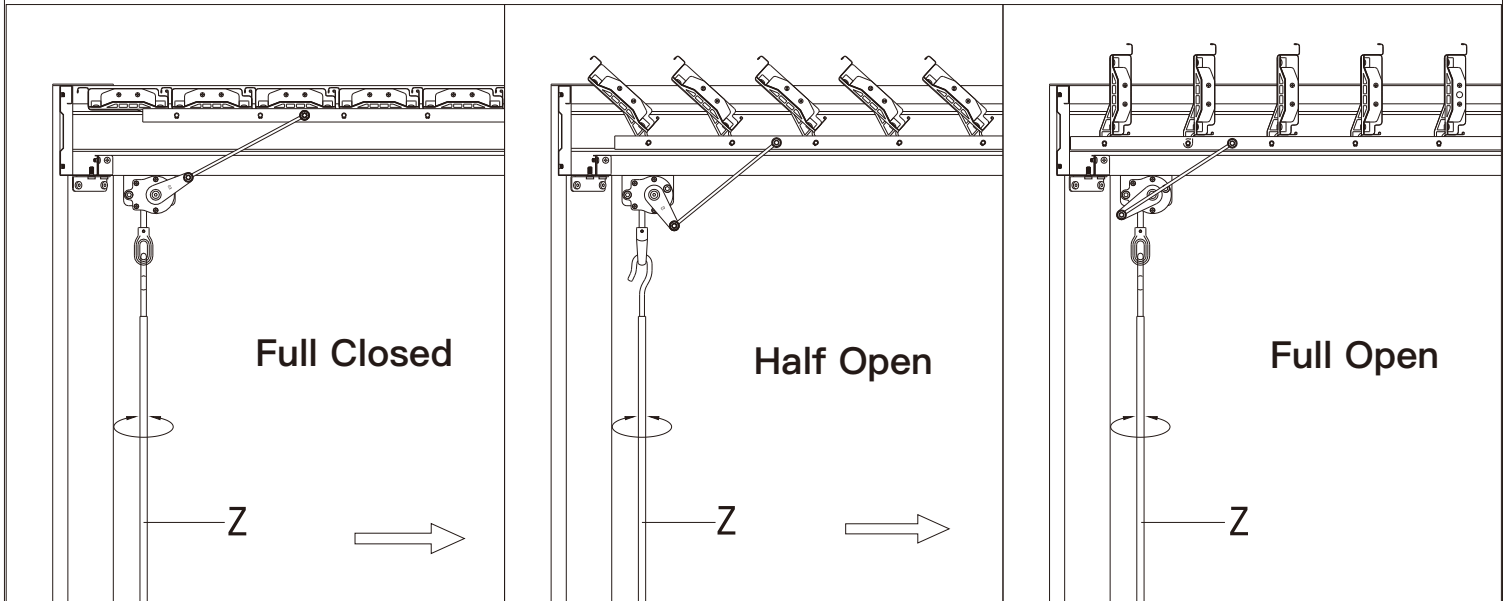

Step 11:

Just shake the roller rod anytime you want let the sun in or block the sunray.

⚠ (ATTENTION: Louvers can be opened and closed in cycles.)

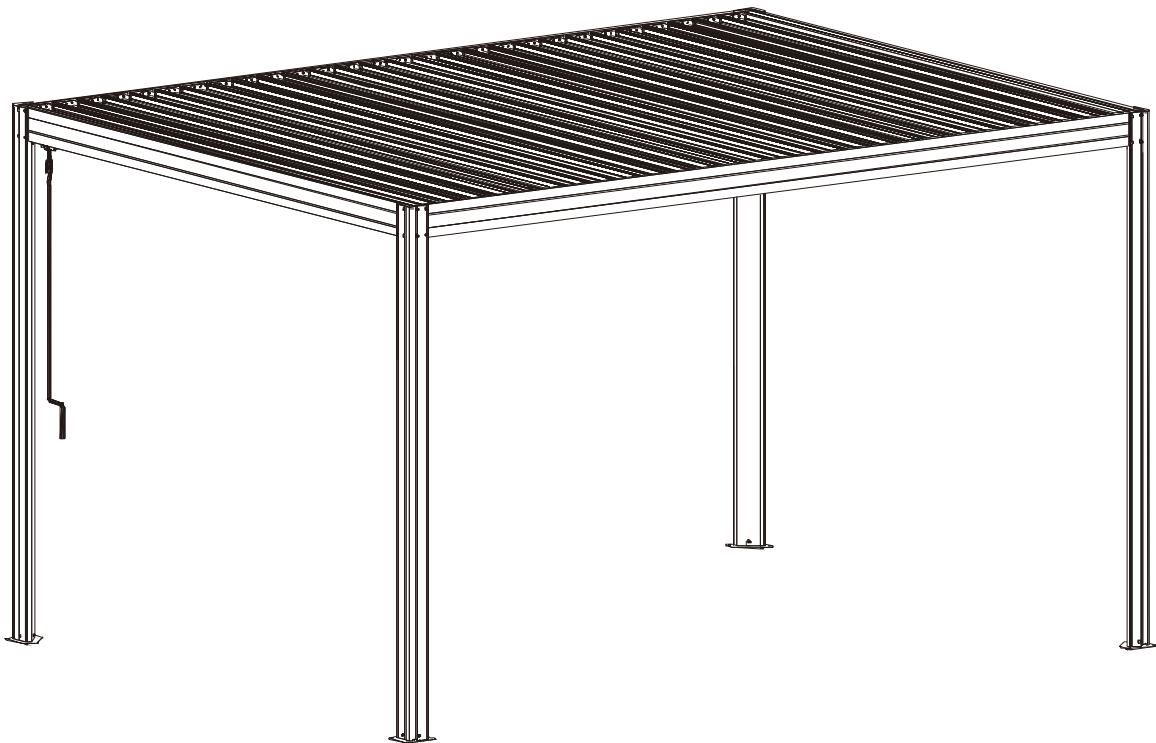

⚠ Please confirm the louvers can be fully closed for waterproofness.

Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So if you have any questions about our product and assembly, please feel free to contact us. We will be here for you.

Support:



After-sales contact email:

service@domioutdoorliving.com

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.