




MANHATTAN
COMFORT

Duane Sideboard SB-9GLF

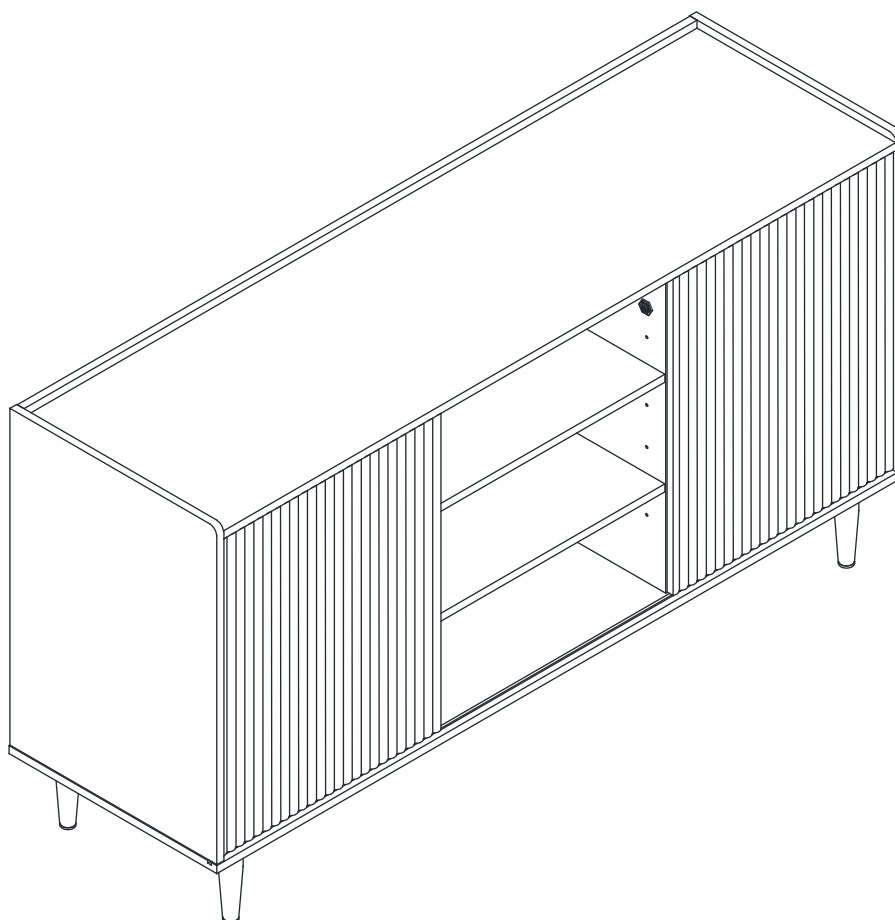




STOP!


Before beginning the assembly process, ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

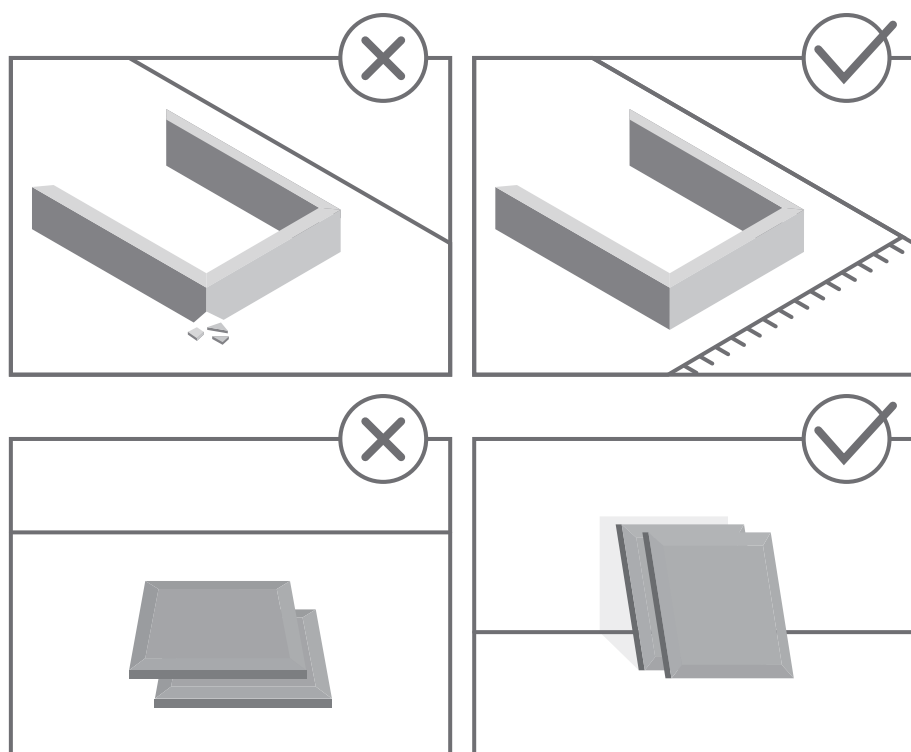

TOOLS REQUIRED

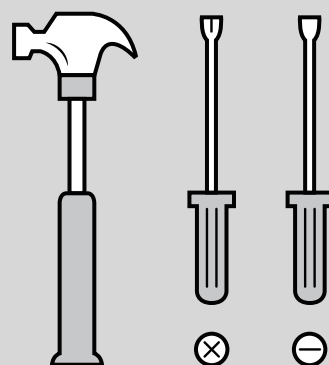


View our assembly video online:
WWW.MANHATTANCOMFORT.COM



Stuck? Question? We are here to help.
tel: 908-888-0818
e-mail: help@manhattancomfort.com


Included in this package:

- A. TOP(1)
- B. BOTTOM(1)
- C. LEFT END(1)
- D. RIGHT END(1)
- E. LEFT UPRIGHT(1)
- F. RIGHT UPRIGHT(1)
- G. UPPER BACK(1)
- H. LOWER BACK(1)
- J. SHELF(2)
- K. MIDDLE SHELF(2)
- N. LEG(2)
- O. DOOR(2)
- P. BRACE(2)

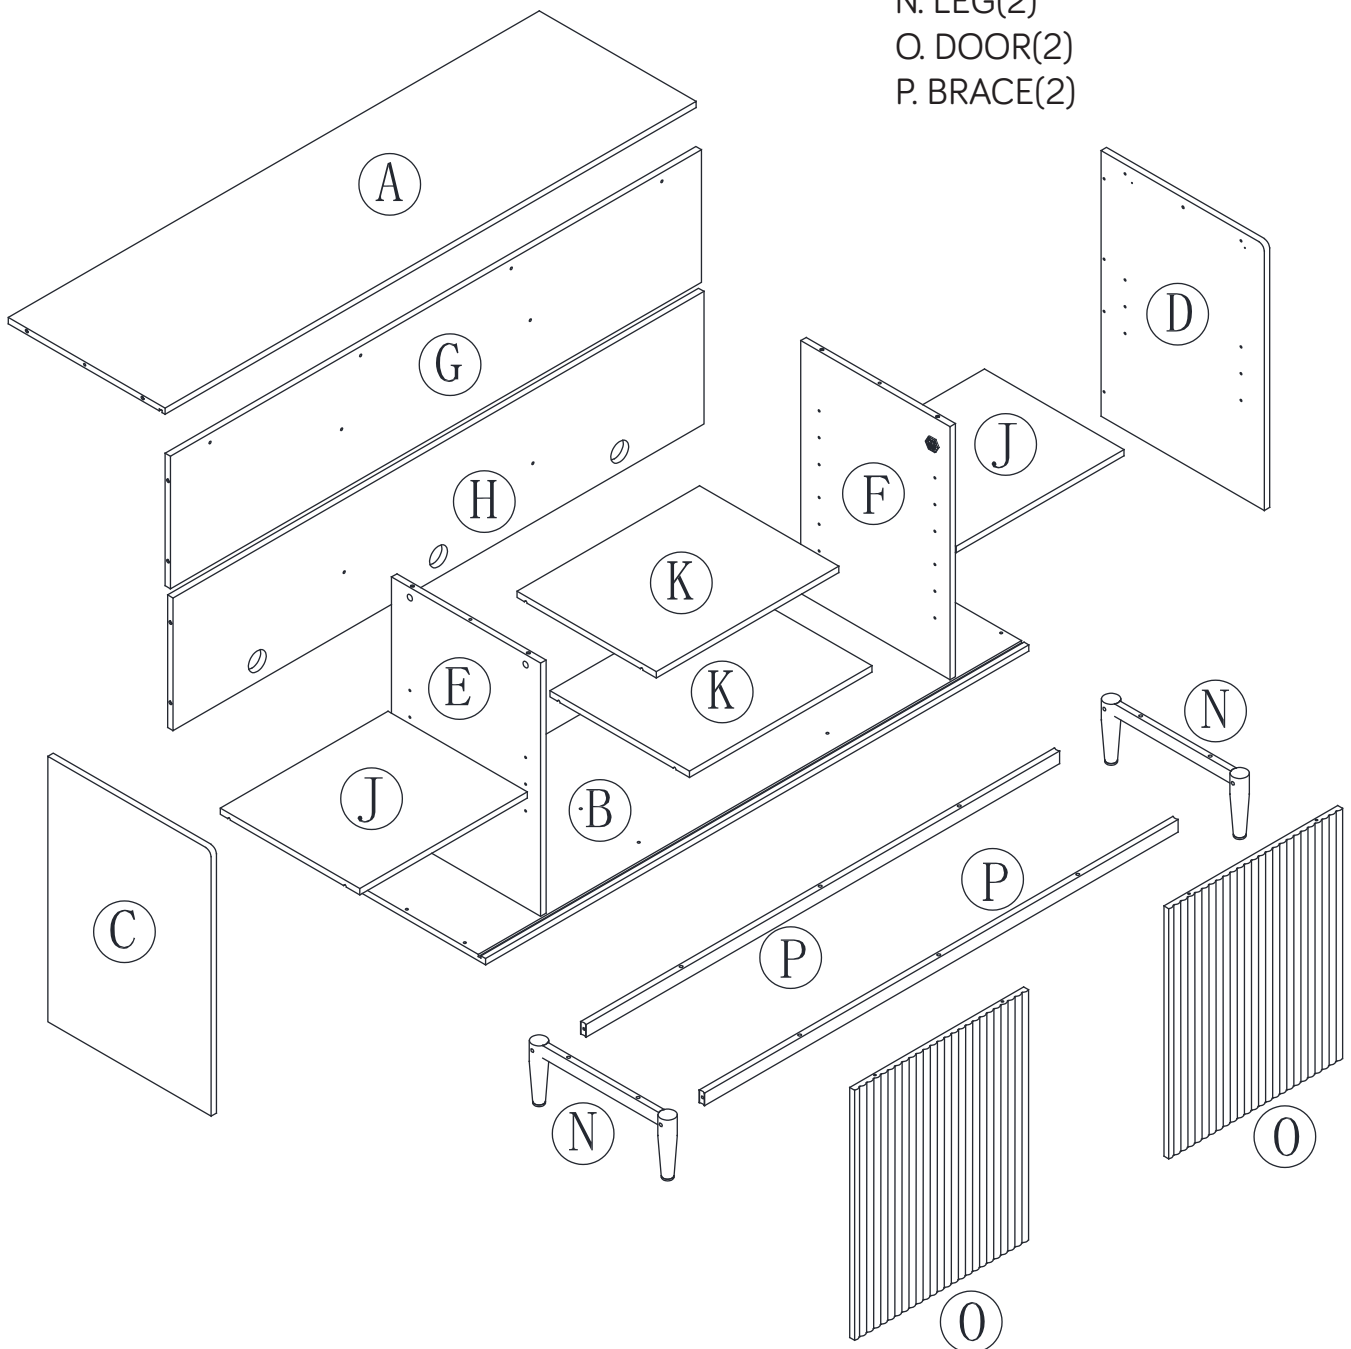


Hardware Identification


① CAM SCREW - 16pcs

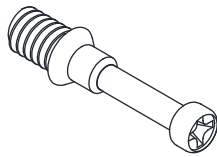


② HIDDEN CAM - 16pcs

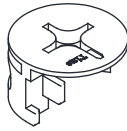


③ WOOD DOWEL - 8pcs

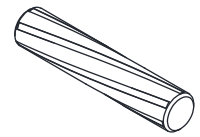


④ LOWER DOOR BRACKET - 4PCS

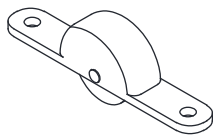


⑤ APPLIQUE CARD - 3pcs

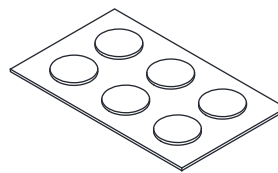


⑥ BOLT - 4pcs

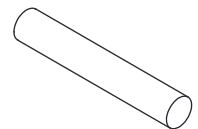


⑦ BUMPER CARD - 4pcs

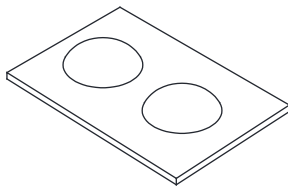


⑧ L-WRENCH - 1pc




⑨ METAL PIN - 16pcs




⑩ GROMMET WITH CAP - 3pcs

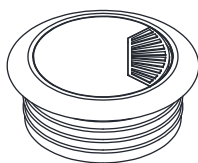


⑪ HEX HEAD SCREW
M6*55mm - 4pcs




⑫ HEX HEAD SCREW
M6*40mm - 10pcs




⑬ FLAT HEAD SCREW
M5*35mm - 20PCS




⑭ FLAT HEAD SCREW
M3*15mm - 8PCS



⑮ BRACKET - 4pcs

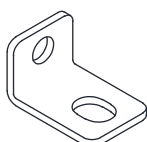

⑯ PAN HEAD SCREW
M4*12MM - 8pcs





MANHATTAN COMFORT

WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.


THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.





319 Ridge Rd. Dayton, NJ 08810

908-888-0818

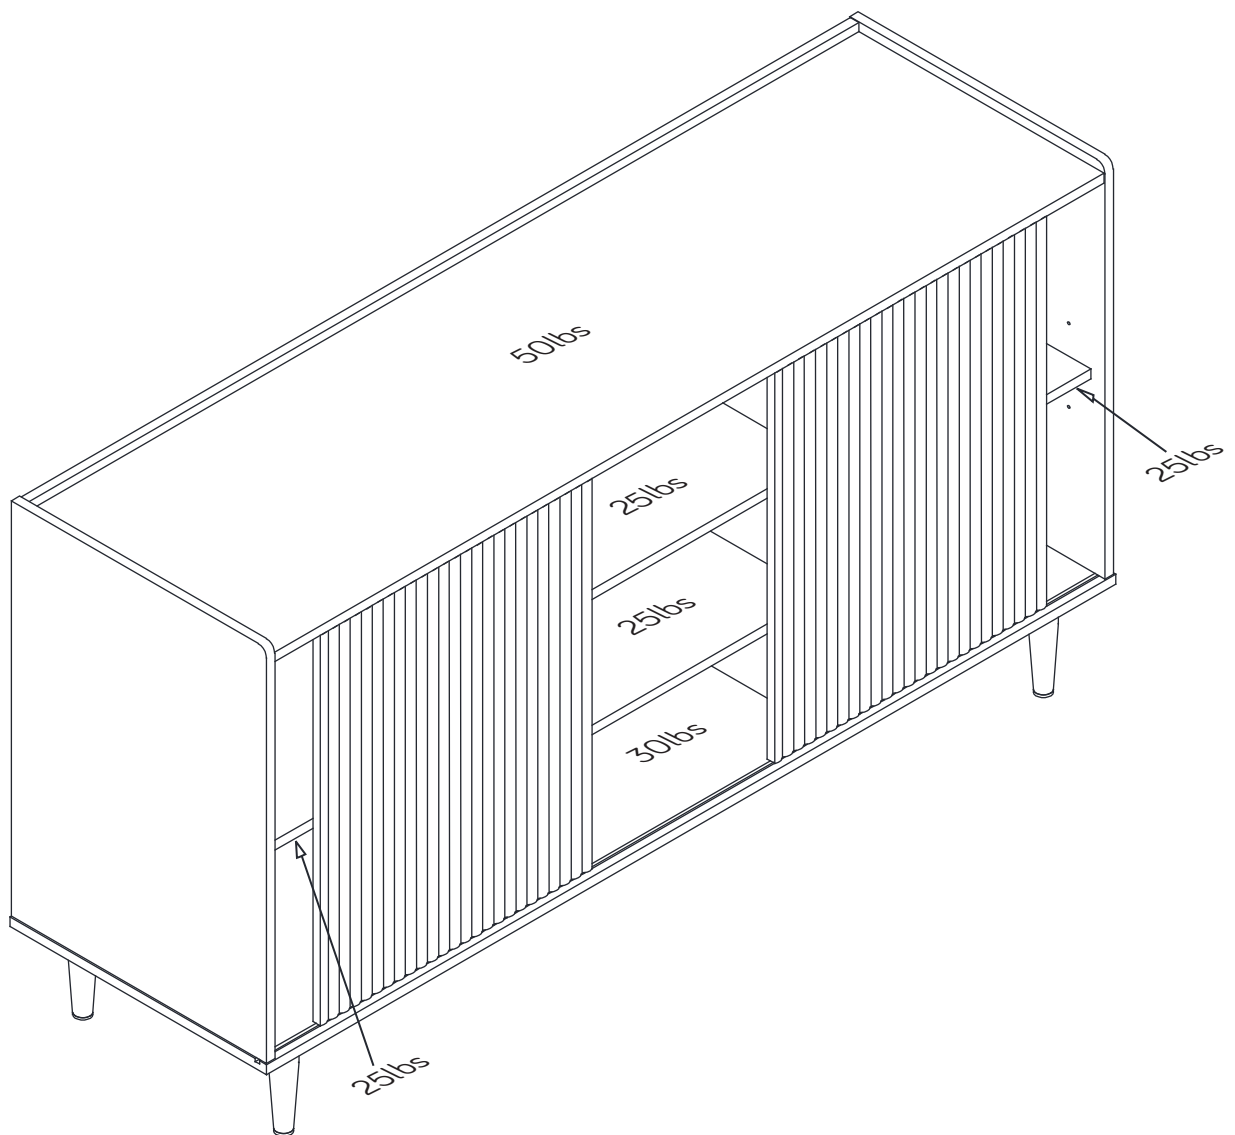


Step 1

- ◆ Insert sixteen CAM SCREWS (1) into the TOP (A), ENDS (C and D).

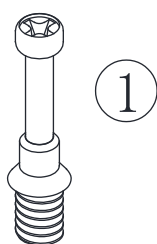
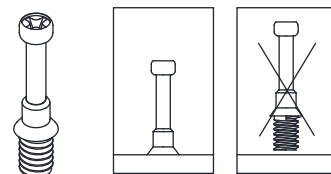


(16 PCS)

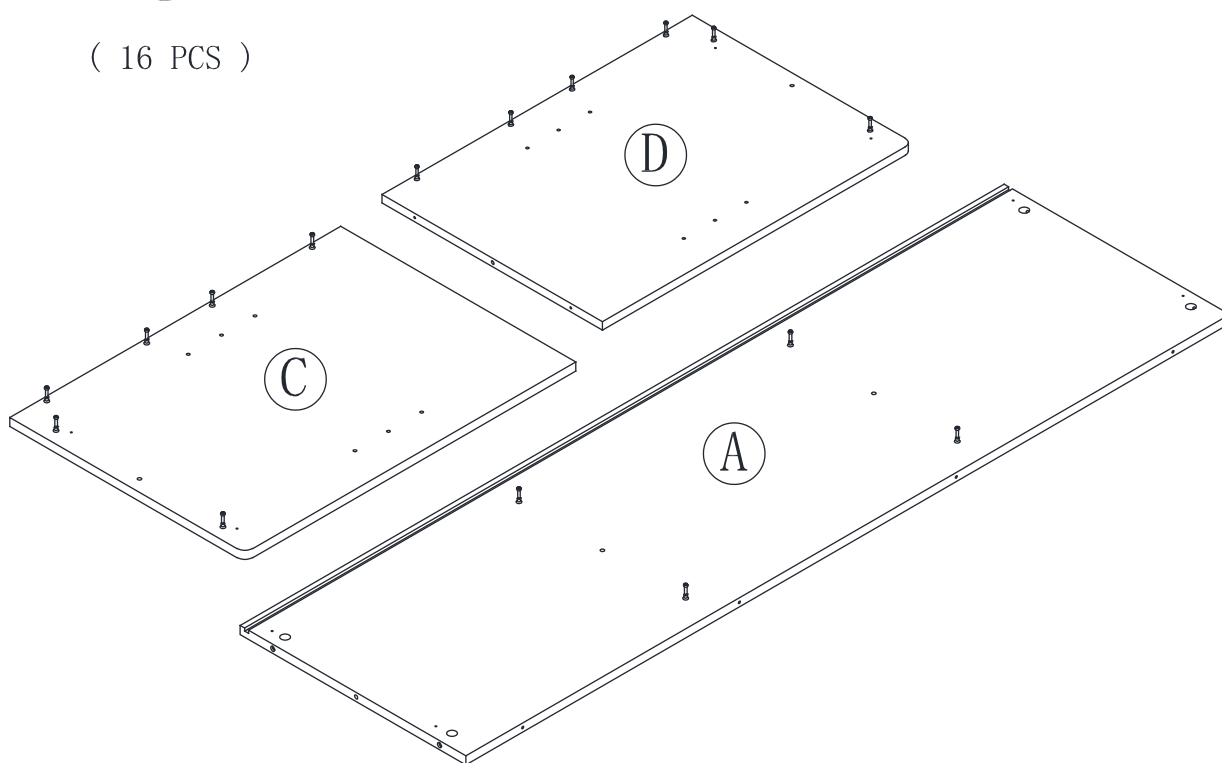



Step 2

- ◆ Push sixteen HIDDEN CAMS (2) into the TOP (A), UPRIGHTS (E and F), BACKS (G and H).

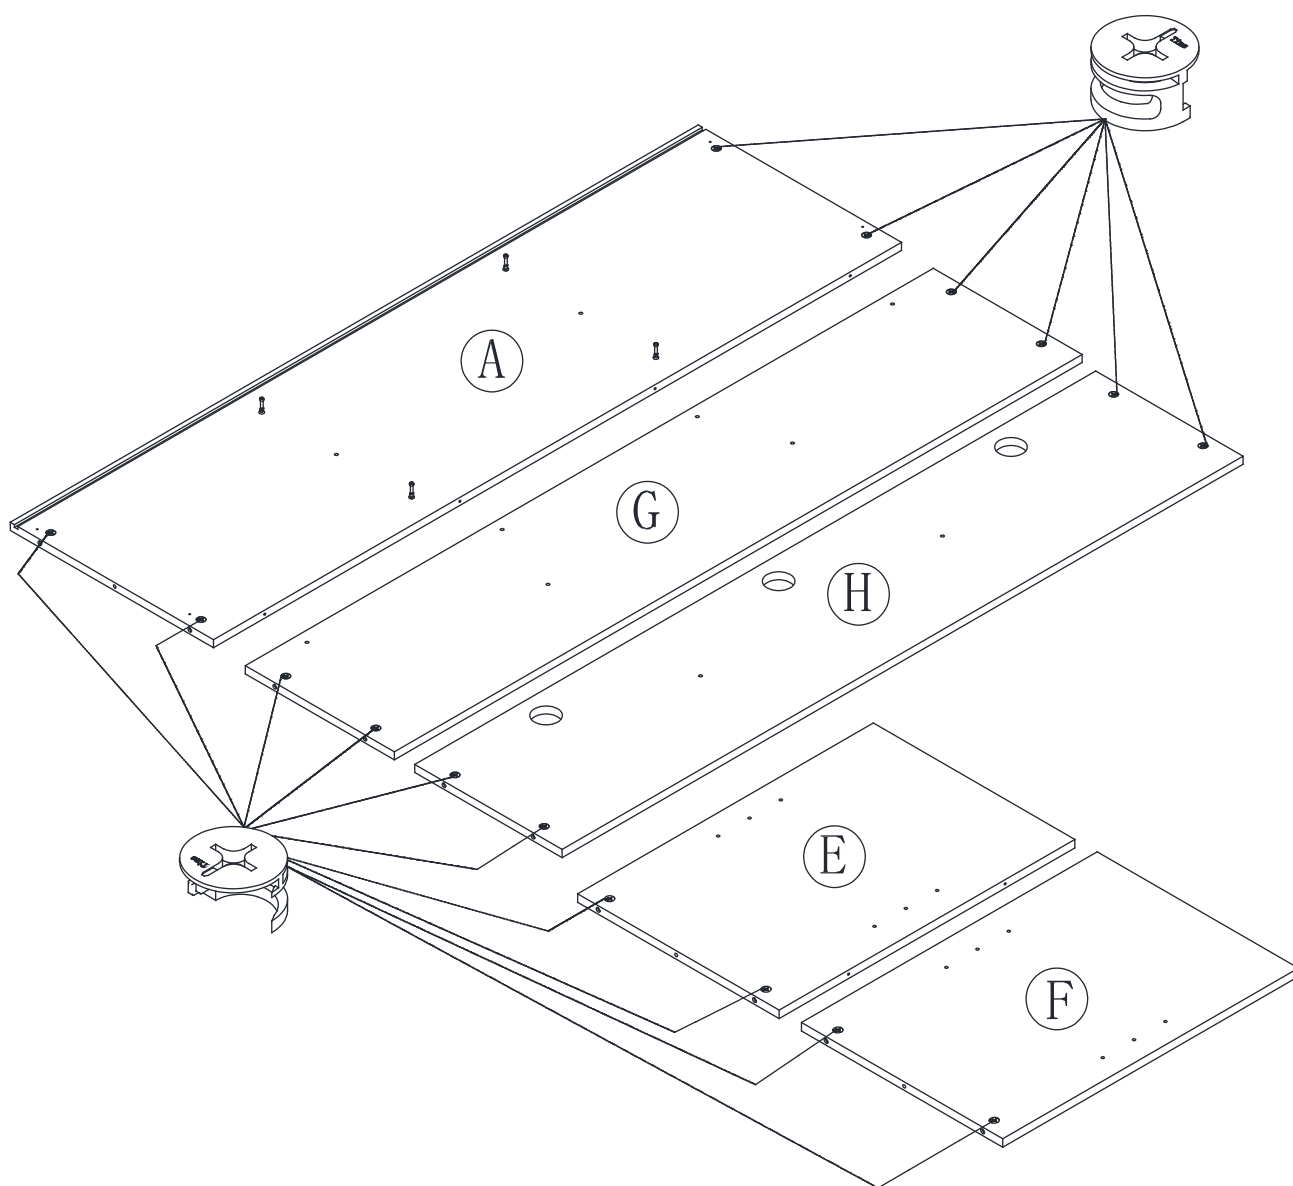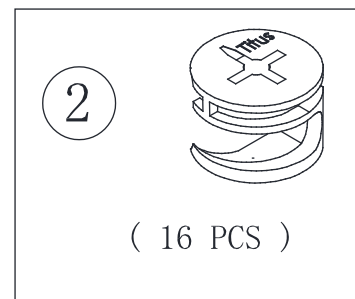






Step 3

- ◆ Fasten four L BRACKETS (15) to the ENDS (C & D). Use four PAN HEAD SCREWS (16).

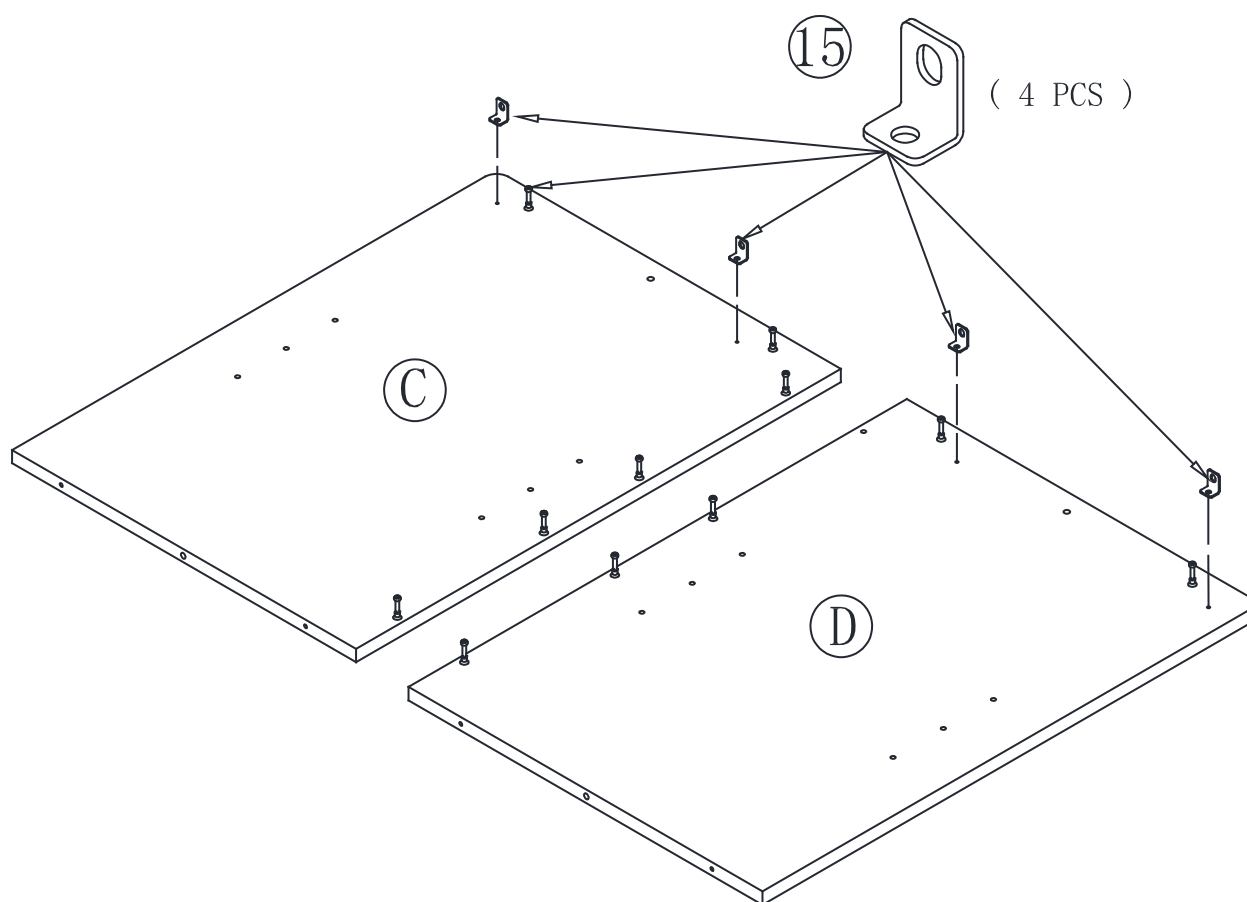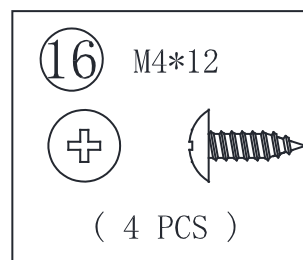

Step 4







- ◆ Insert two WOOD DOWEL (3) into the TOP (A)
- ◆ Fasten the UPPER RIGHTS (E and F) to the TOP (A). Tighten four HIDDEN CAMS.

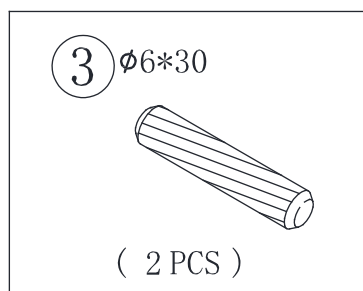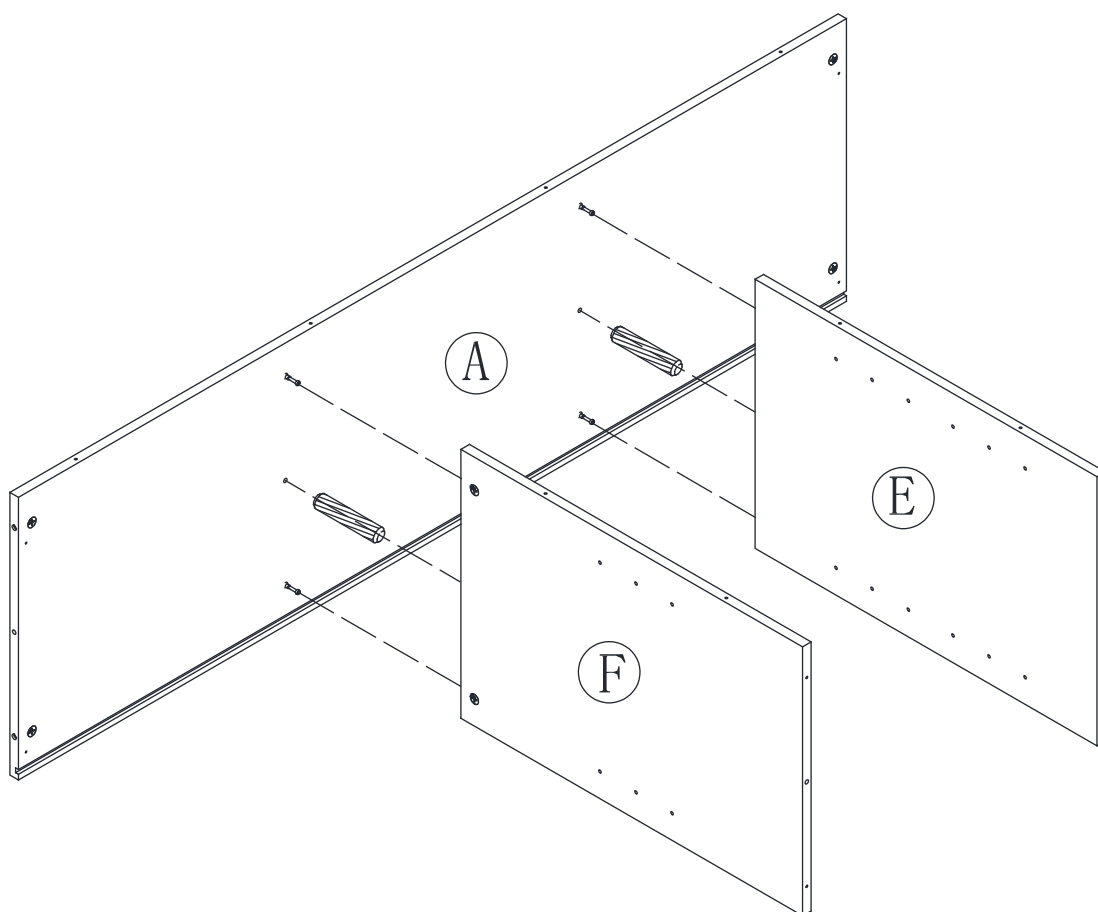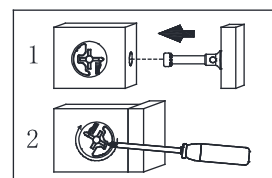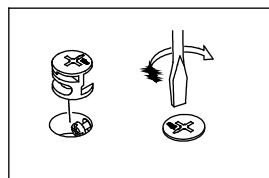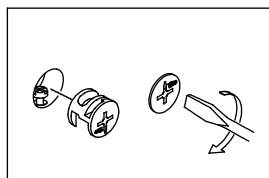

Step 5





◆ Insert one WOOD DOWEL (3) to the TOP (A).

◆ Fasten the END (D) to the TOP (A). Use two PAN HEAD SCREWS (16), and tighten two HIDDEN CAMS.

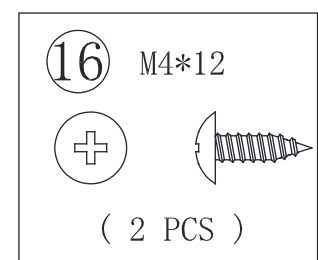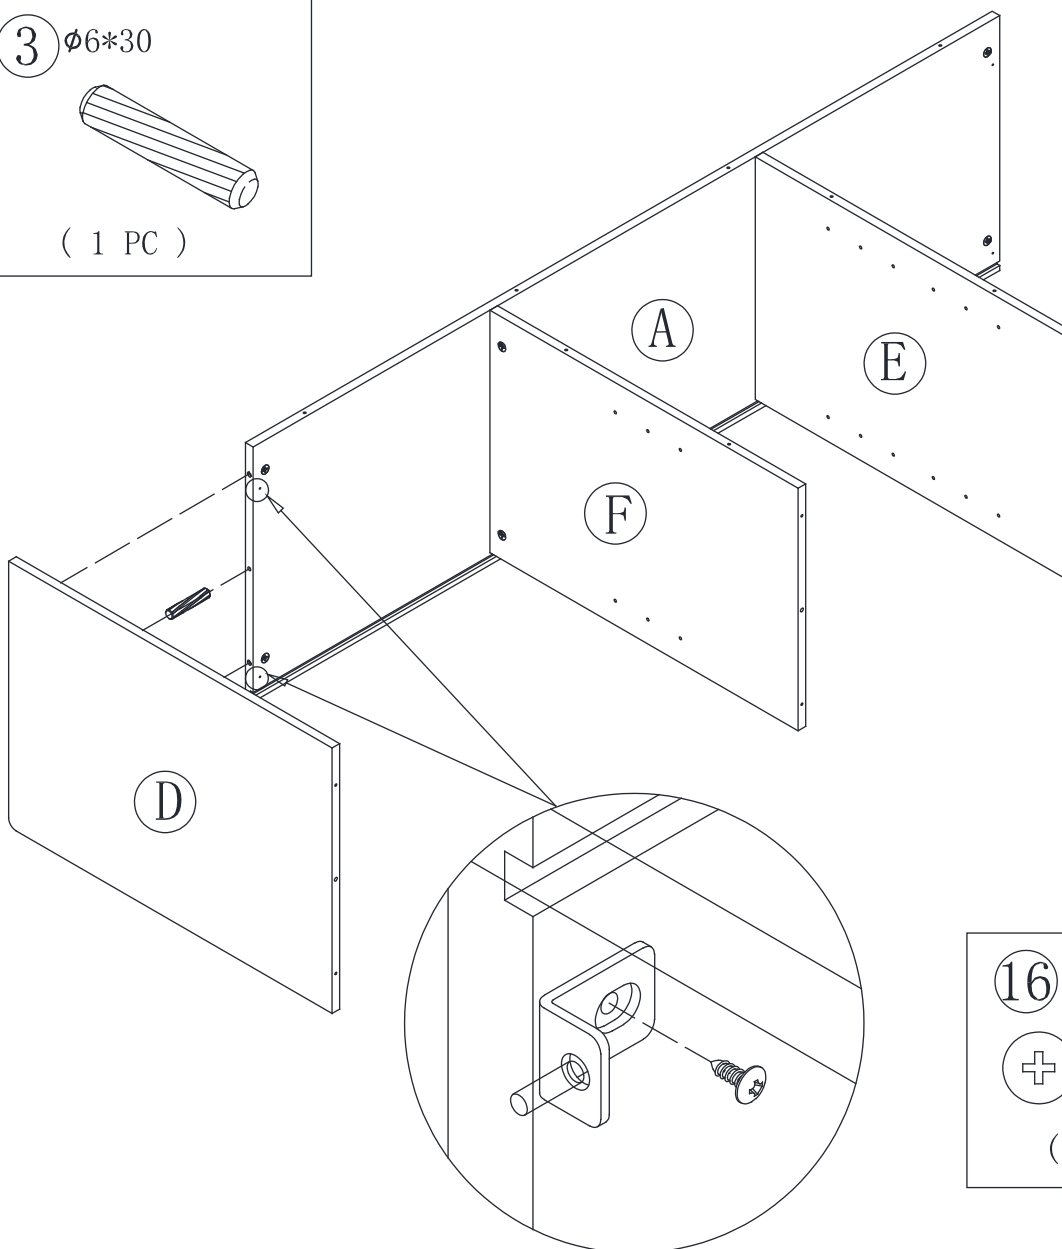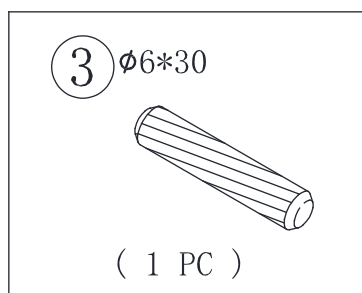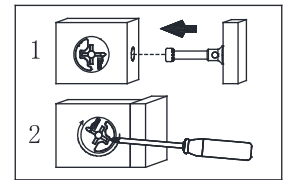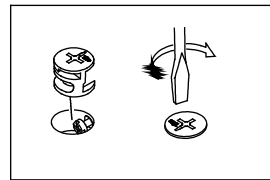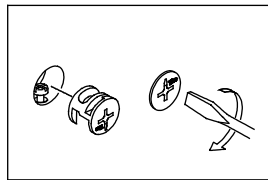








Step 6

◆ Fasten the BACKS (G and H) to the RIGHT END (D). Tighten four HIDDEN CAMS

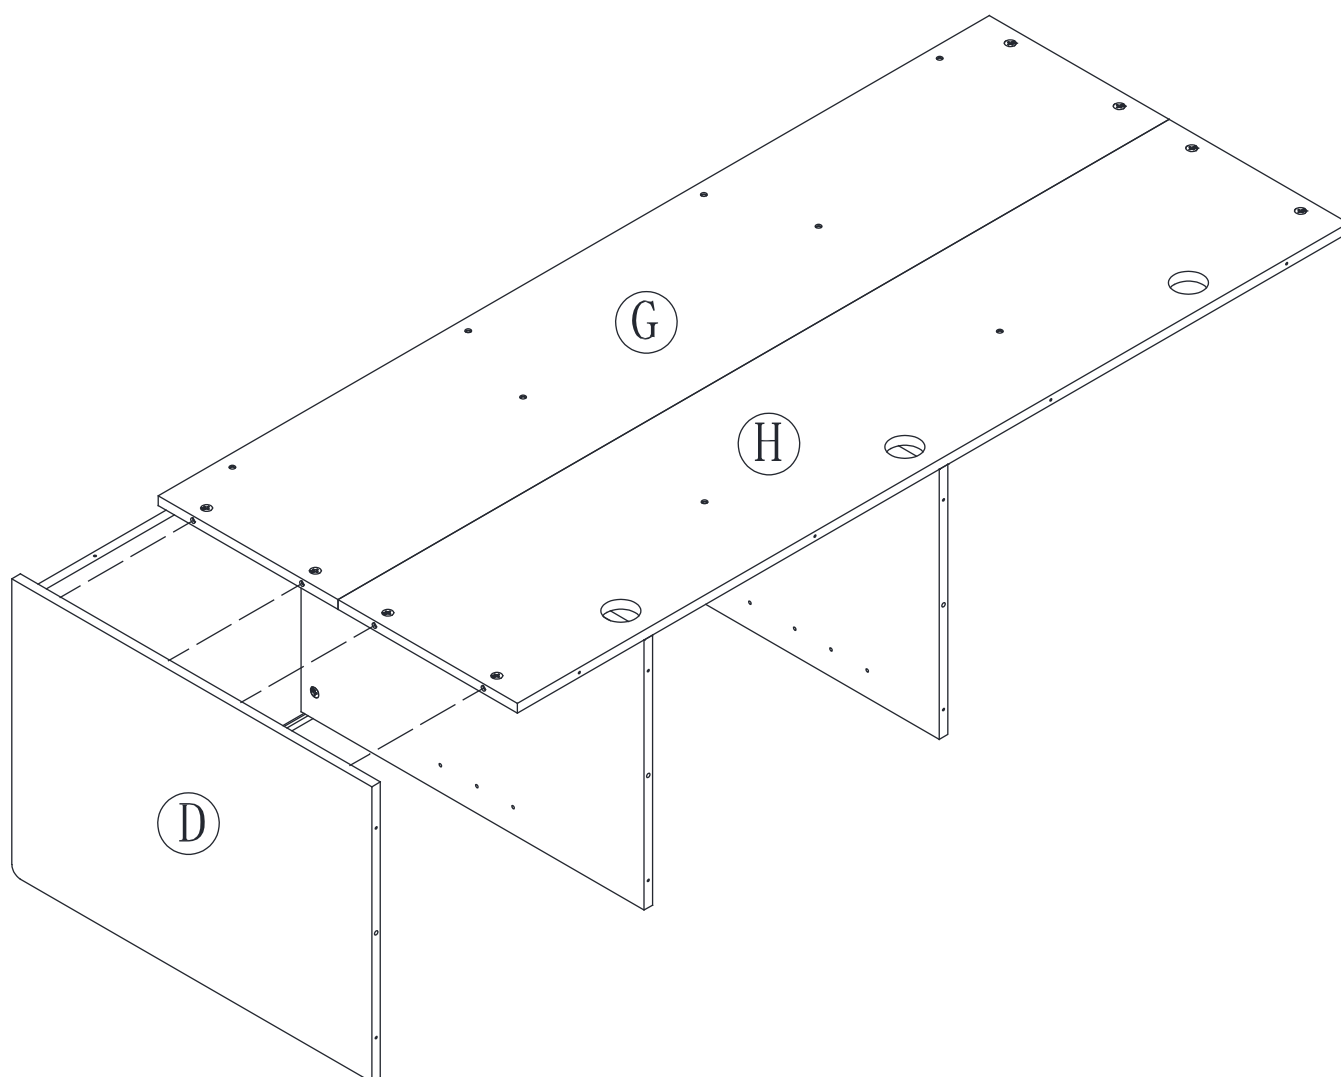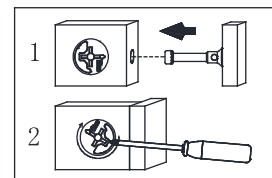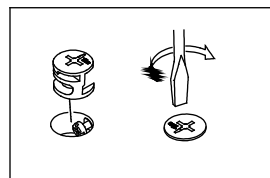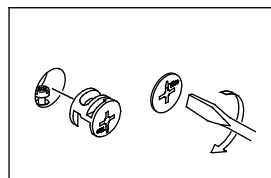

Step 7


- ◆ Fasten the BACKS (G and H) to the TOP (A) and UPRIGHTS (E and F). Use eight FLAT HEAD SCREWS (13).
- ◆ Insert one WOOD DOWEL (3) to the TOP (A).
- ◆ Fasten the LEFT END (C) to the TOP (A) and BACK (G and H). Use two PAN HEAD SCREWS (16), and tighten six HIDDEN CAMS.

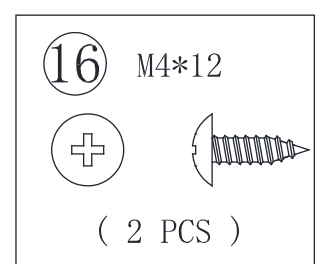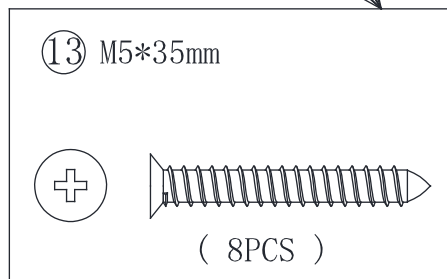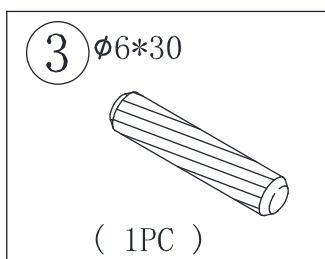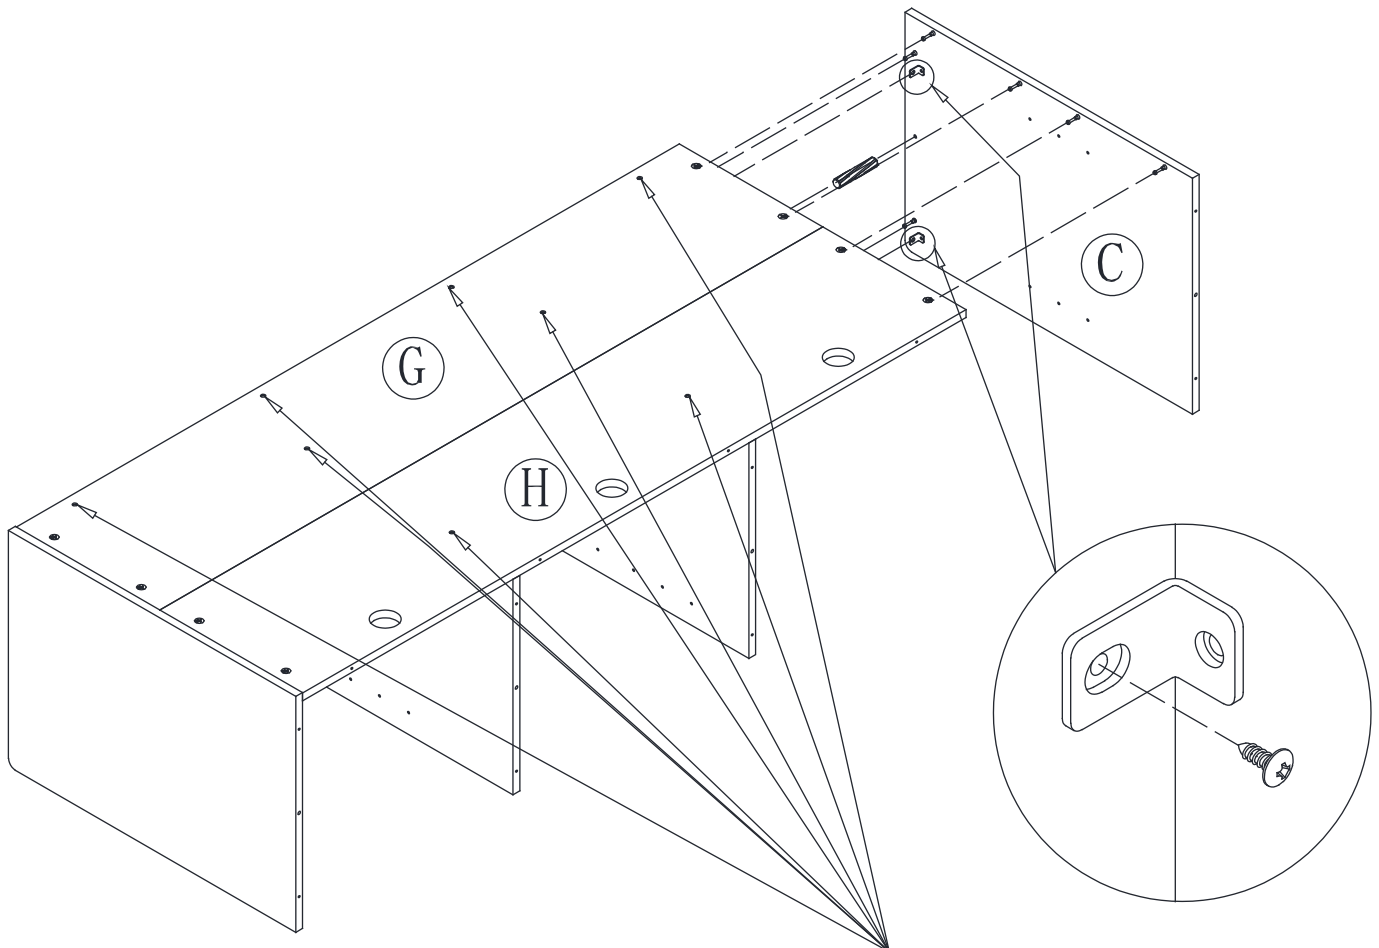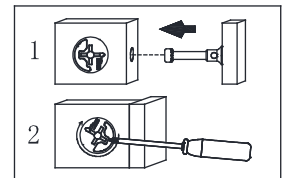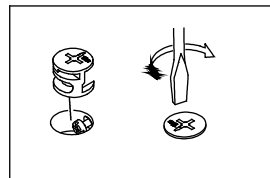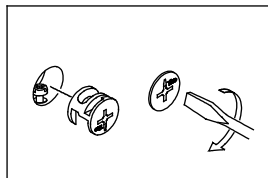


Step 8

- ◆ Push three GROMMET (10) into the LOWER BACK (H).

⑩


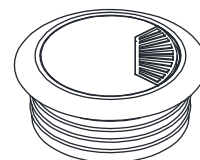


(3 PCS)

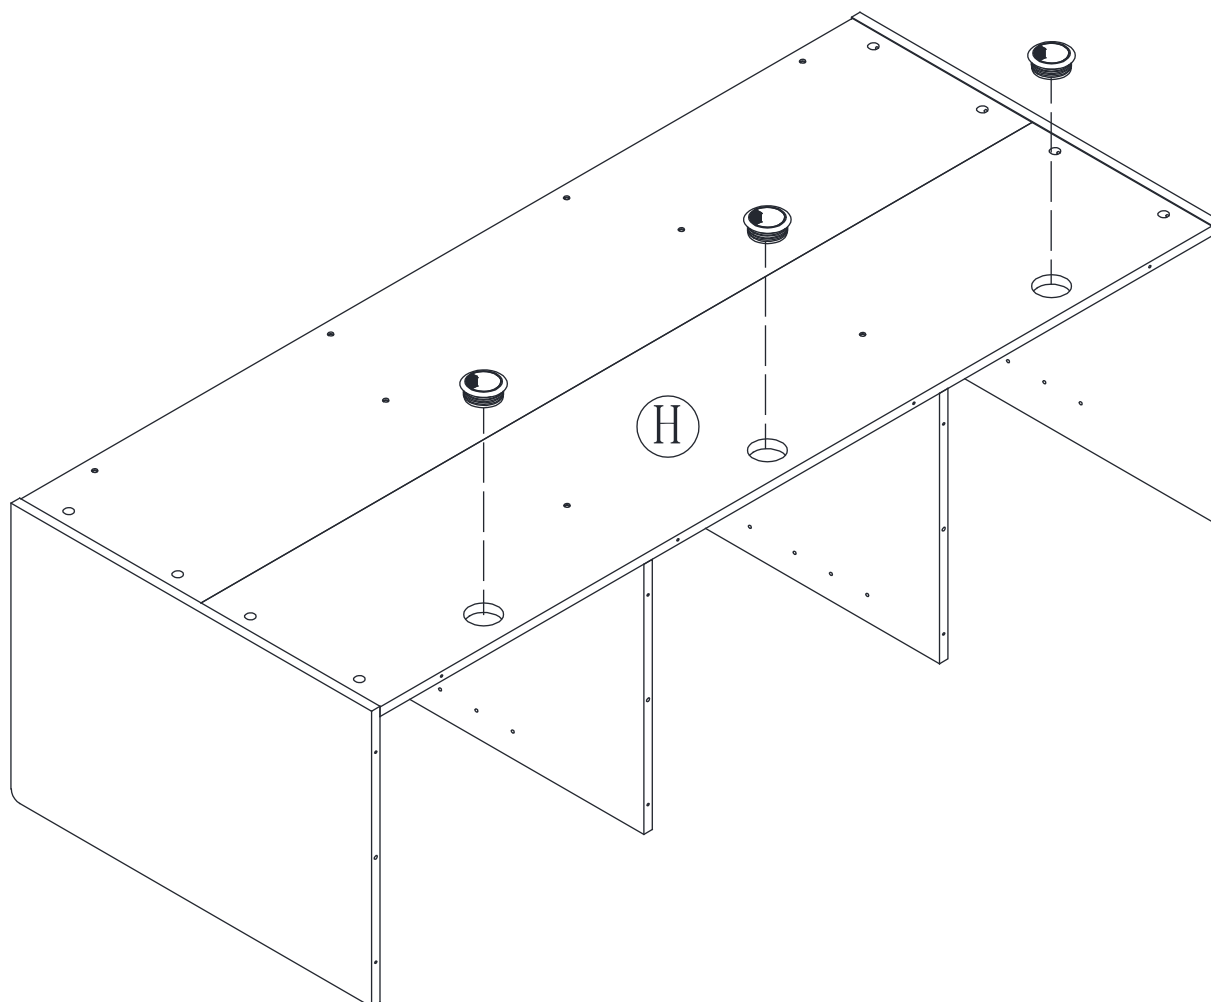

Step 9




- ◆ Insert four BOLT (6) into the holes of the DOORS (0).
- ◆ Fasten the LOWER BRACKETS (4) to the bottom of the DOORS (0). Use eight FLAT HEAD SCREWS (14).

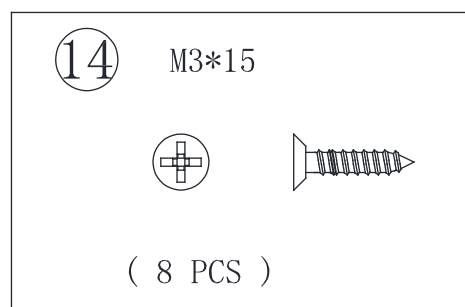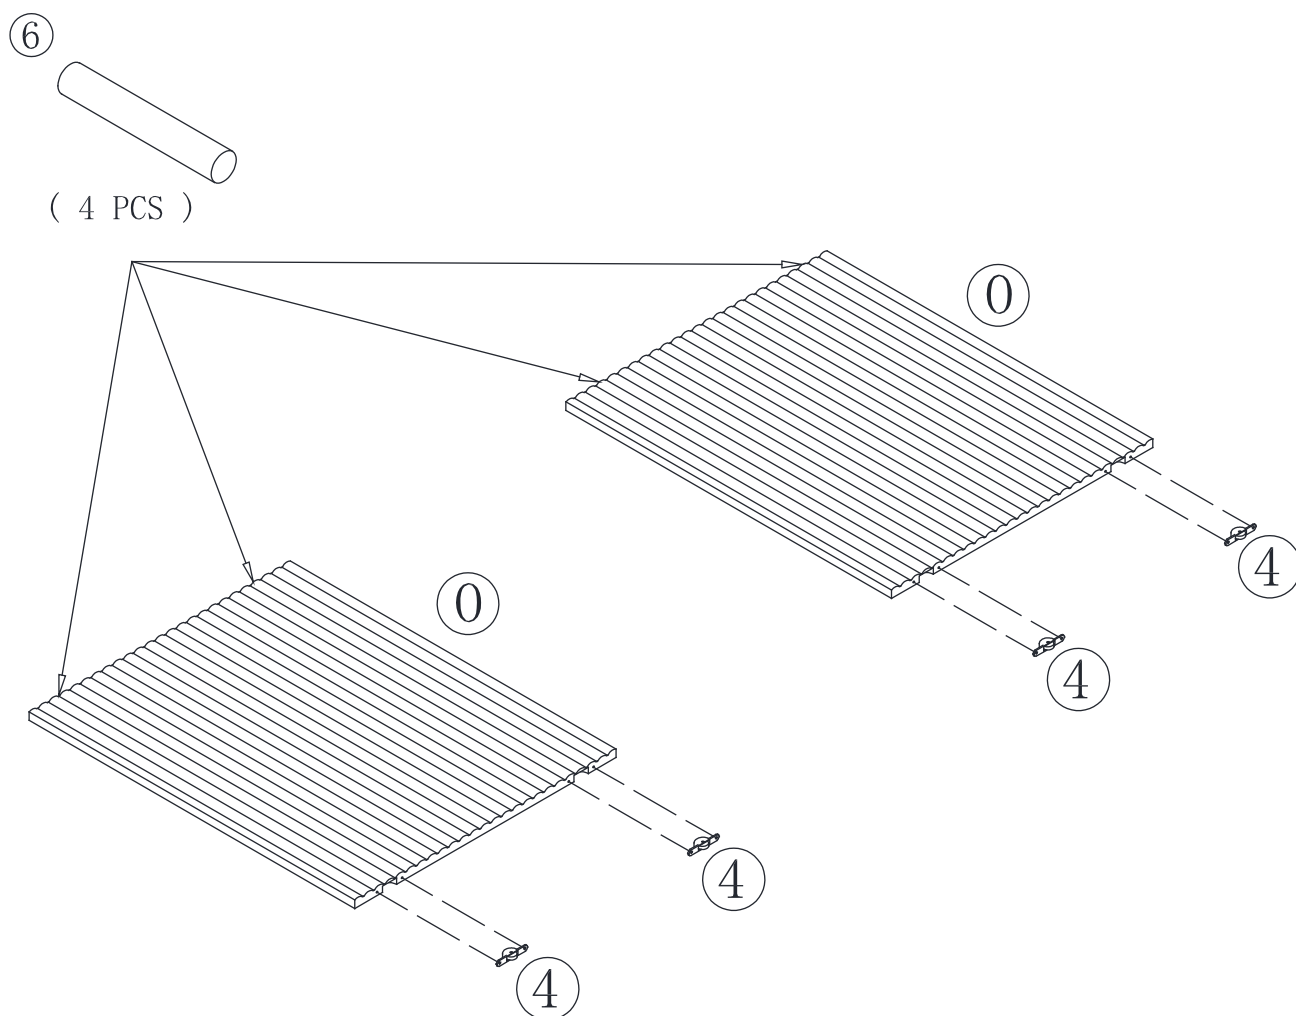

Step 10

- ◆ Place the bolts of the DOOR (O) to the groove on the TOP (A).
- ◆ Insert four WOOD DOWELS (3) into the ENDS (C and D) and the UPRIGHTS (E and F).
- ◆ Fasten the BOTTOM (B) to the ENDS (C and D), UPRIGHTS (E and F) and the BACK (H). Use twelve FLAT HEAD SCREWS (13).


Note : Be sure the LOWER DOOR BRACKETS into the groove on the BOTTOM (B).

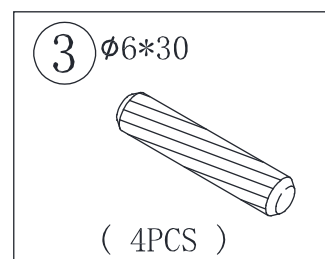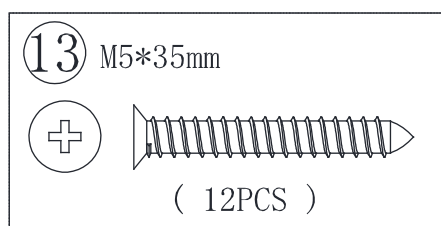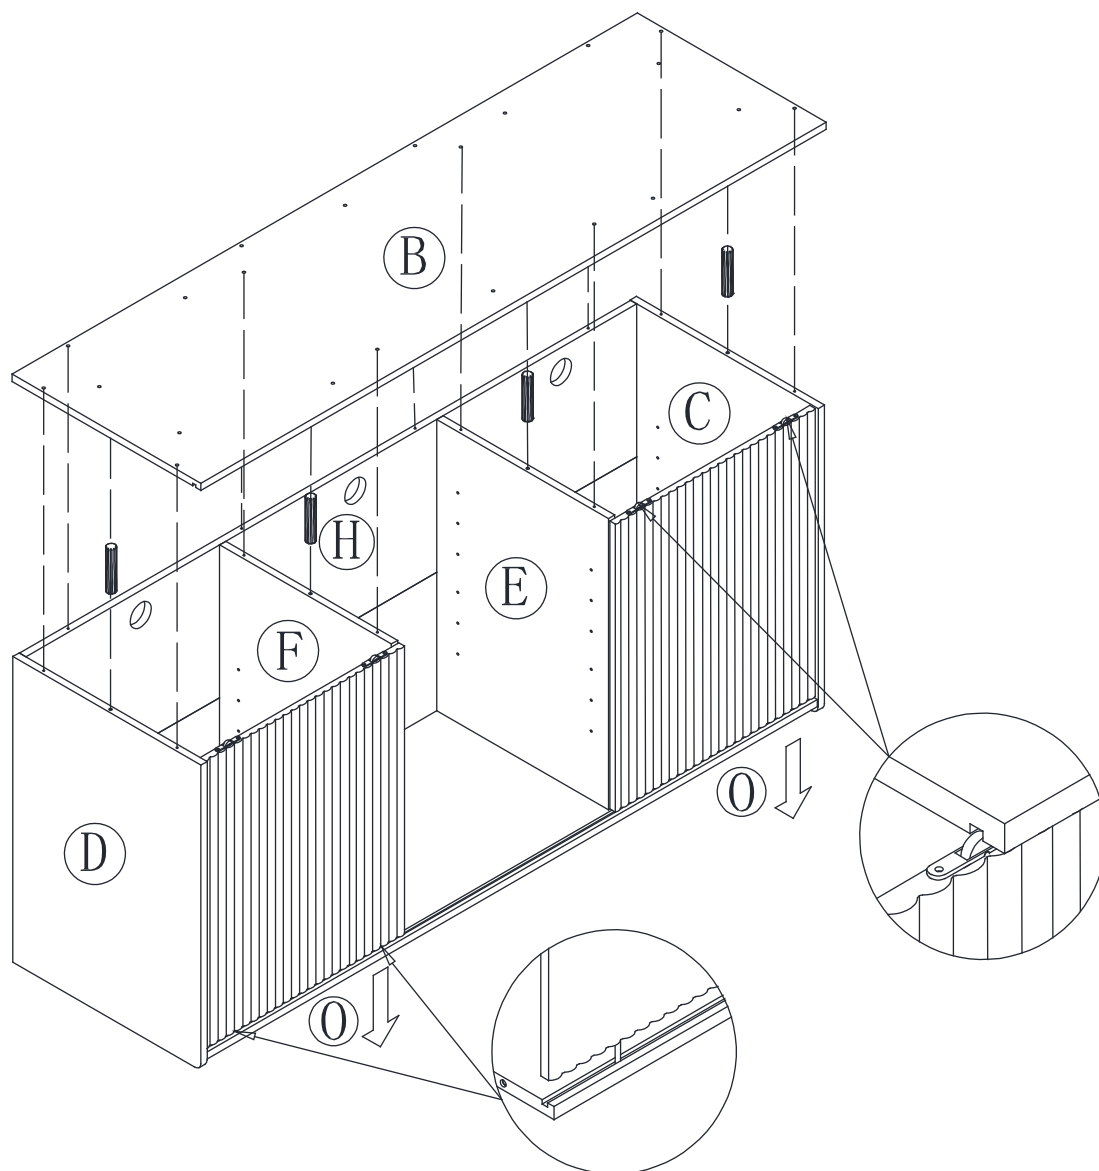


Step 11

- ◆ Fasten the BRACES (P) to the LEGS (N). Tighten four HEX HEAD SCREWS (11) using the L-WRENCH (8).

NOTE: You should start each SCREW a few turns before completely tightening any of them.

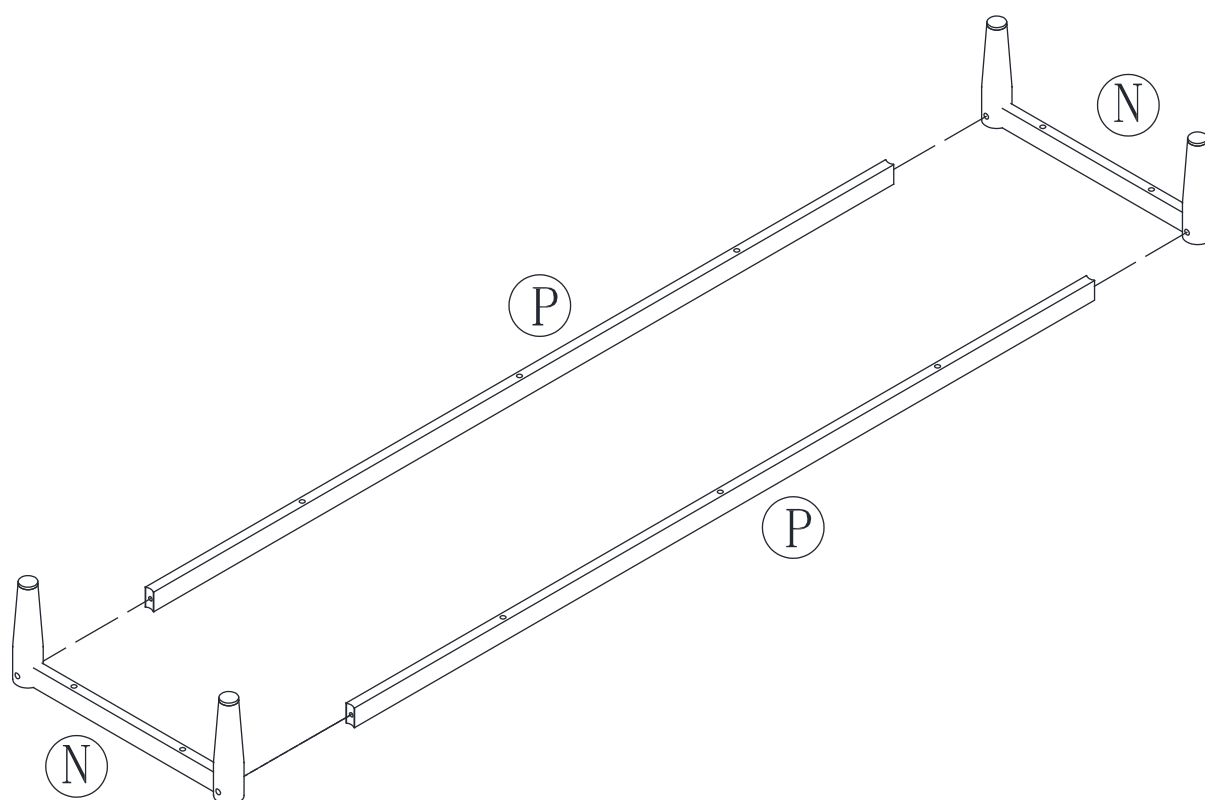


8



11


M6*55




(4 PCS)

Step 12

- ◆ Fasten the LEG to the BOTTOM (B). Tighten ten HEX HEAD SCREW (12) using the L-WRENCH (8).

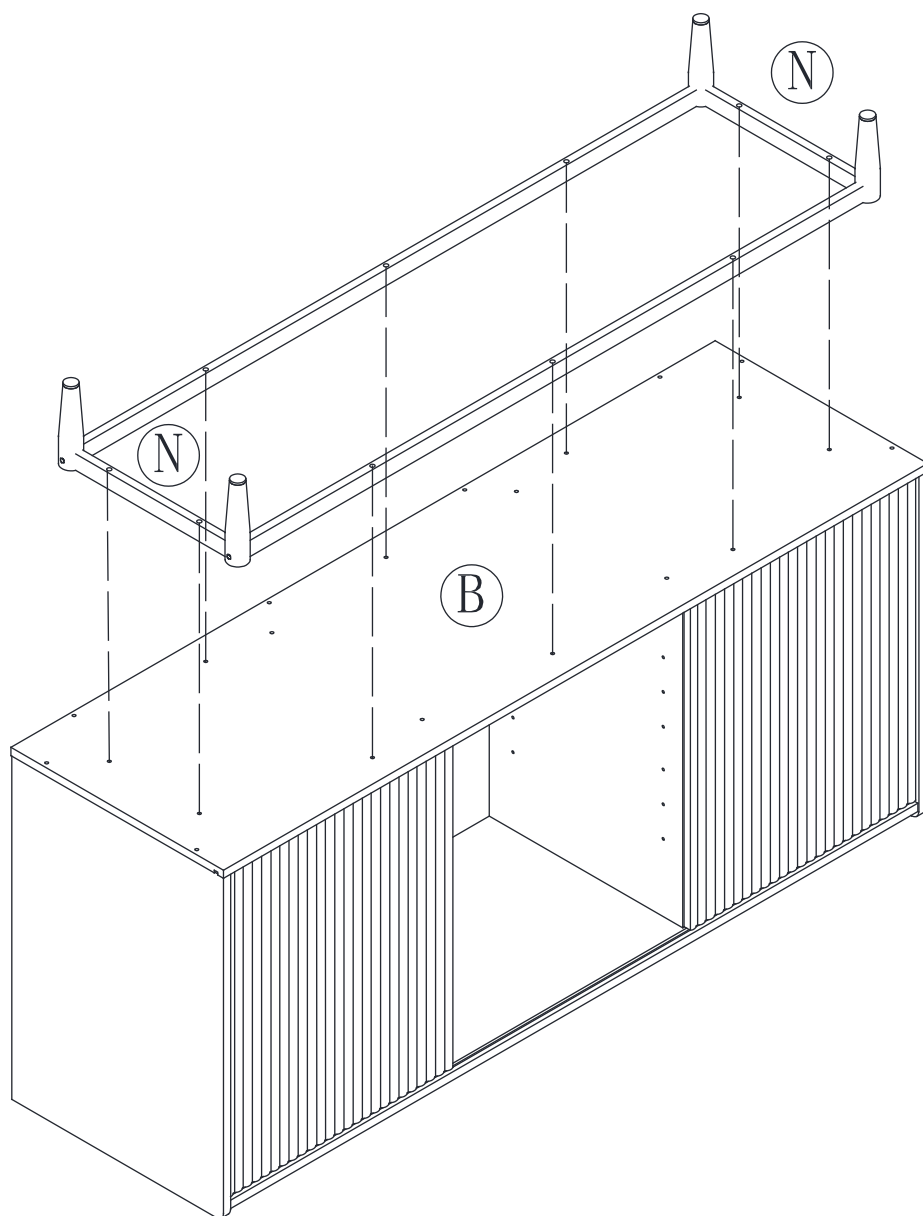


8



12



M6*40



(10 PCS)


Step 13

- ◆ Insert eight METAL PINS (9) into the hole locations of your choice in the UPRIGHTS (E and F).
- ◆ Set the SHELVES (K) onto the METAL PINS in the UPRIGHTS (E and F).

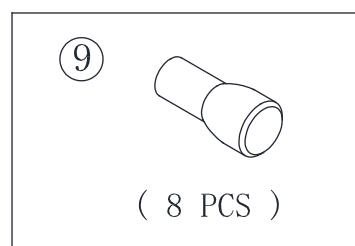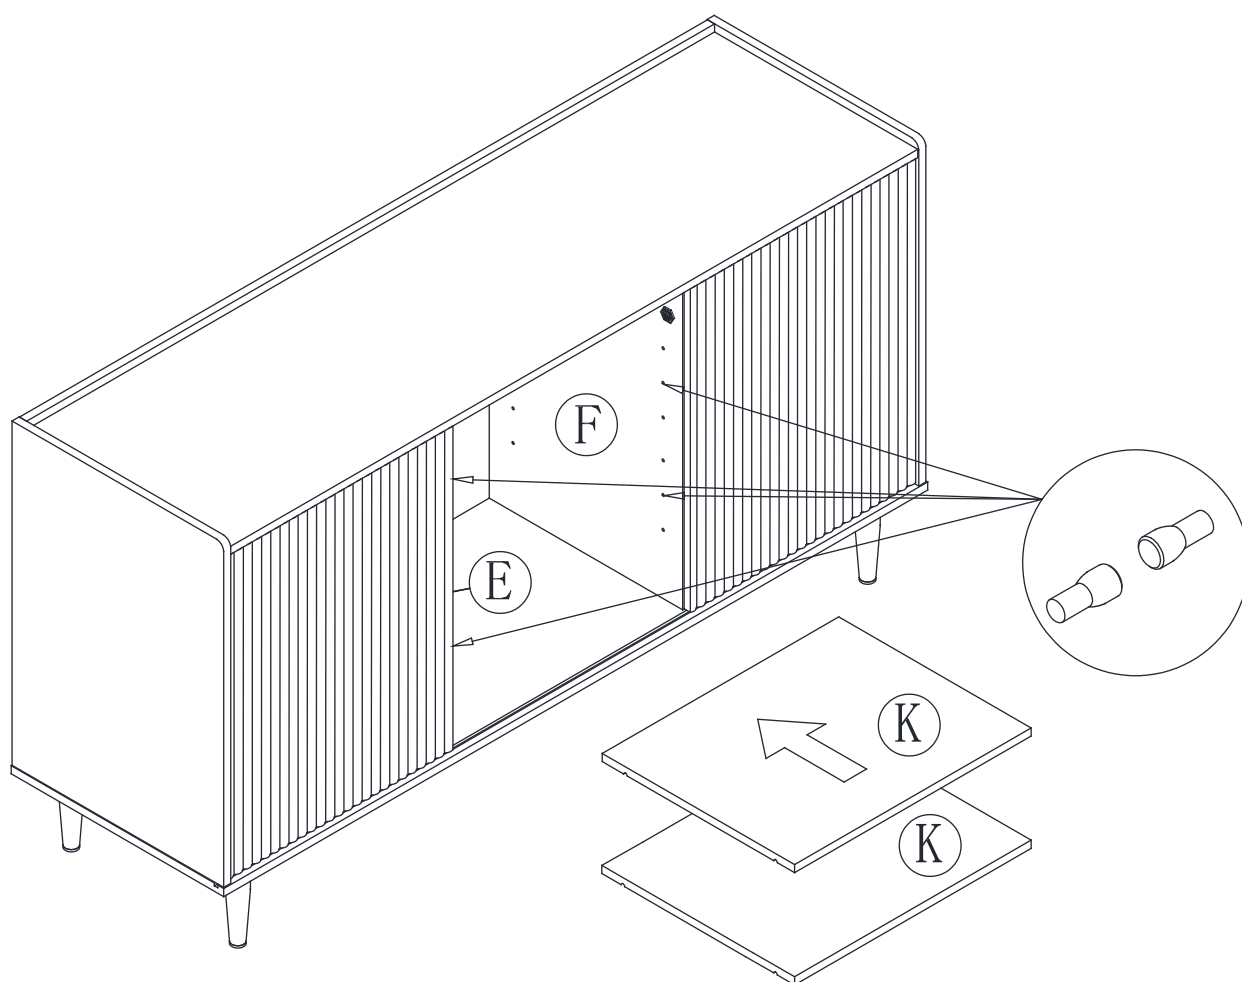

Step 14

- ◆ Insert eight METAL PINS (9) into the hole locations of your choice in the ENDS (C and D) and UPRIGHTS (E and F).
- ◆ Set the SHELVES (J) onto the METAL PINS in the ENDS (C and D) and UPRIGHTS (E and F).

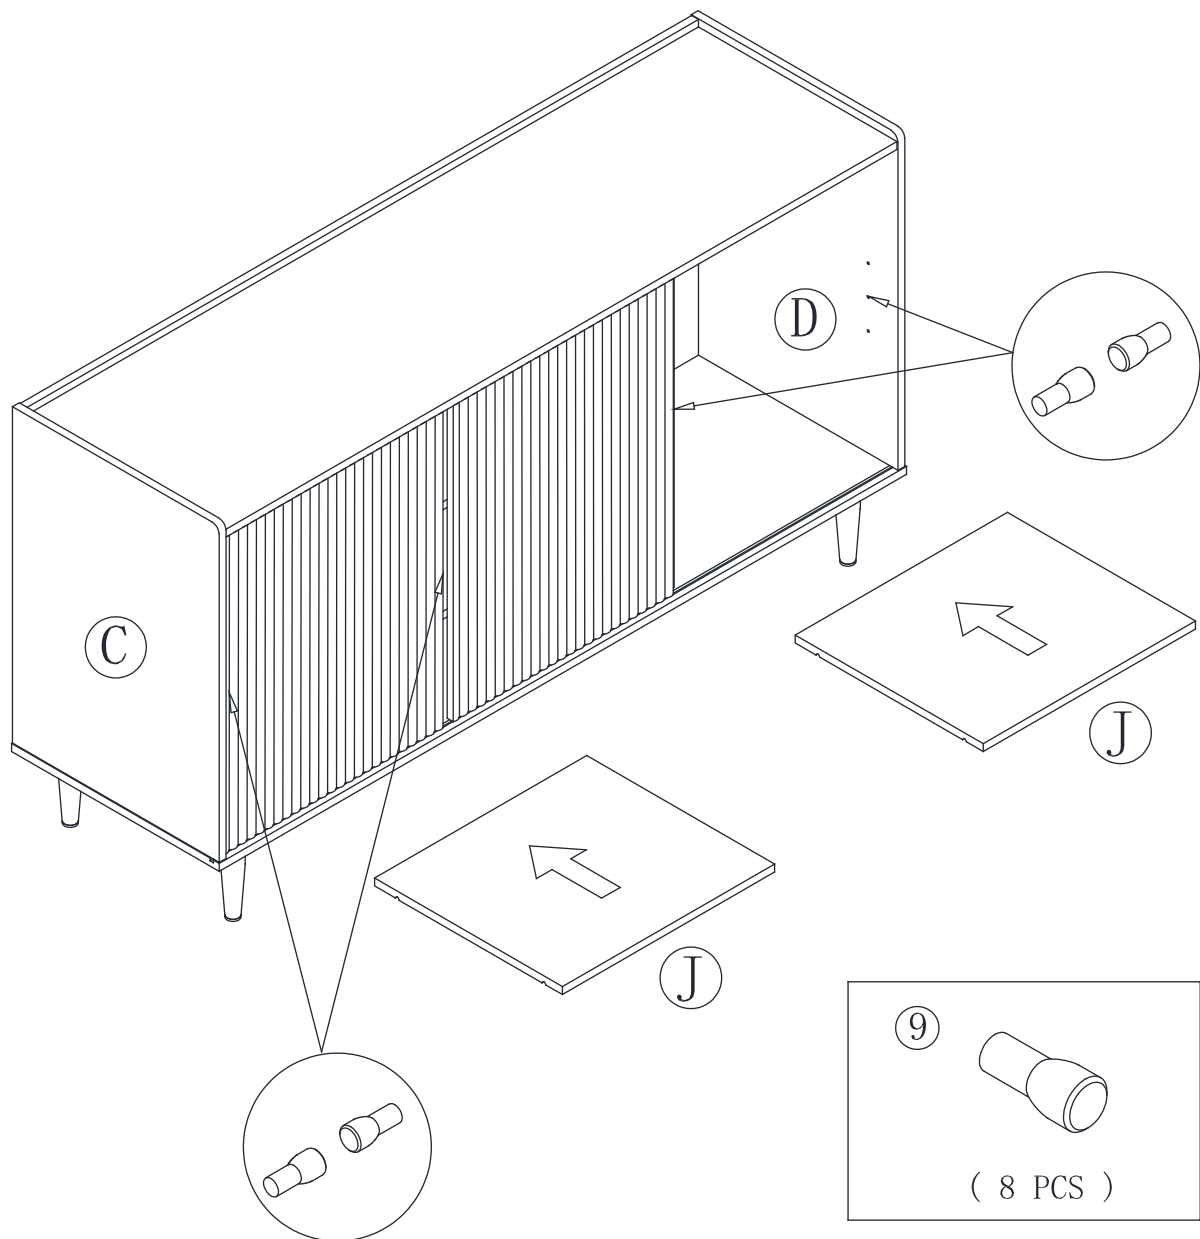

Step 15

- ◆ Peel APPLIQUES from the APPLIQUE CARDS (5) and stick them onto each visible HIDDEN CAM.
- ◆ Peel the BUMPERS from the BUMPER CARDS (7) and stick them onto the edges of the DOORS (O).

