




















Product Name:	Farmhouse White MDF Bathroom Wall Cabinet
SKU #:	WHIF961


Thank you for purchasing this Luxen Home product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

Hardware:


①×12	②×12	③×6	④×2	⑤×2	⑥×1
					
⑦×4	⑧×2	⑨×8	⑩×2	⑪×2	⑫×2
					
⑬×6	⑭×1	⑮×1	⑯×2	⑰×1	⑱×12
					
⑲×12					
					

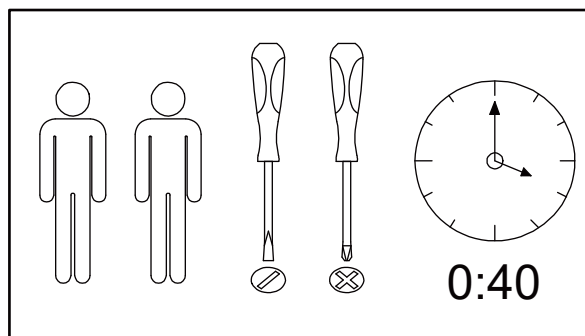

Tools required for assembly: Philips screwdriver and Flathead Screwdriver (if using power tools, use with care)

Product Name:	Farmhouse White MDF Bathroom Wall Cabinet
SKU #:	WHIF961


Panels:

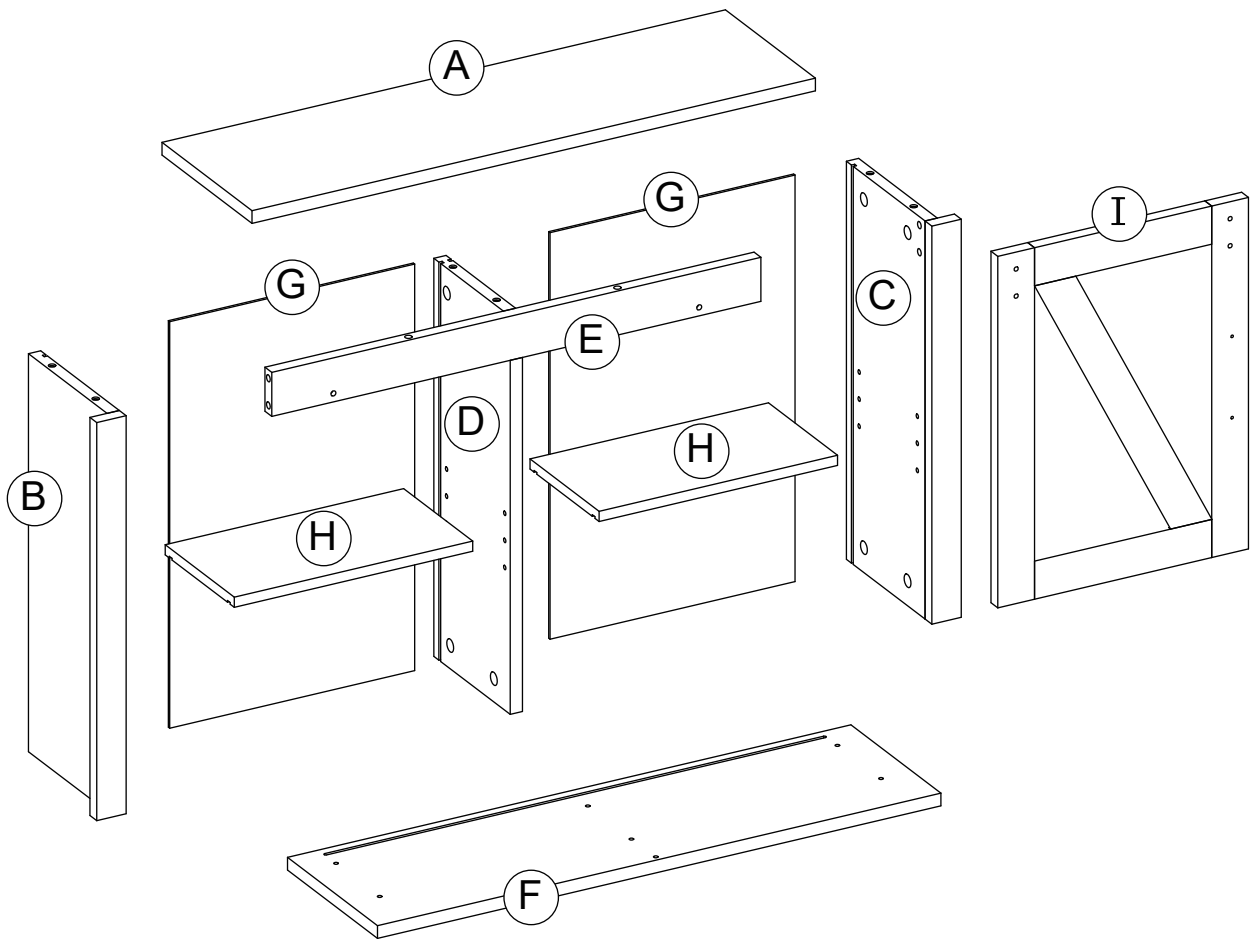


Product Name:	Farmhouse White MDF Bathroom Wall Cabinet
SKU #:	WHIF961

Step 1



Make sure the pins are installed correctly as shown with the “check mark” below:

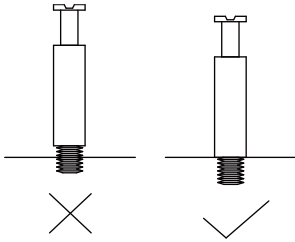

Below shows how the pins are used to assemble the panels together.

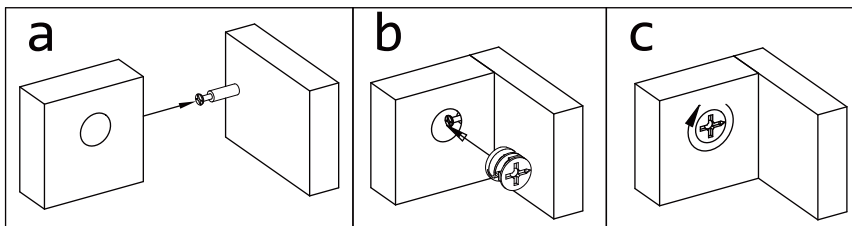

Screw cam bolts (1) onto (F), attach panel (D) as shown, tighten the cam lock (2) clockwise to secure.


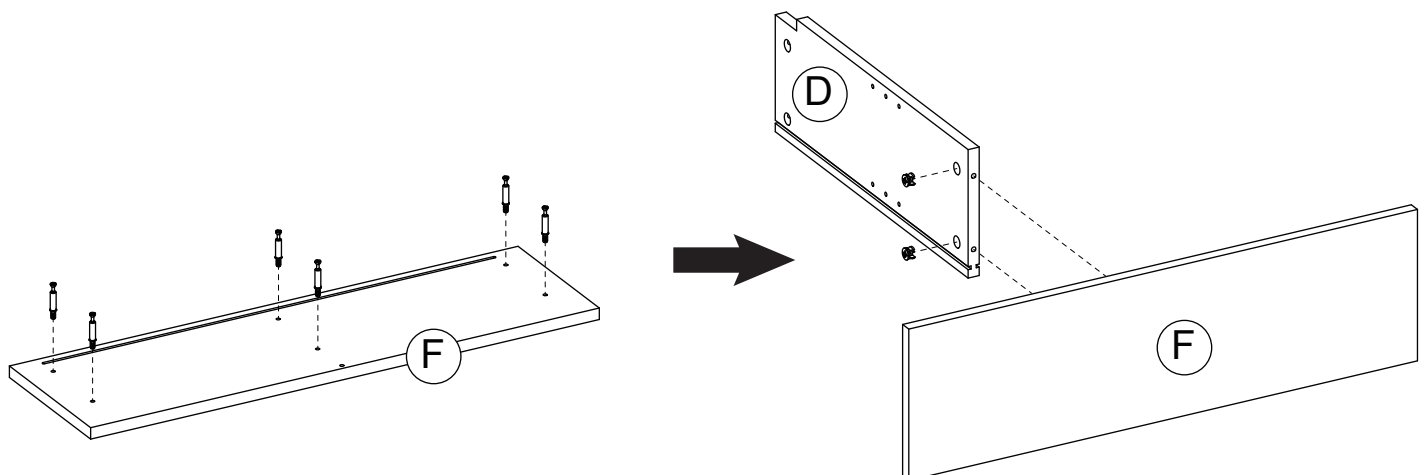
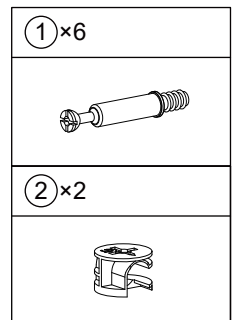


Product Name:	Farmhouse White MDF Bathroom Wall Cabinet
SKU #:	WHIF961

Step 2

Insert wooden dowel (3) onto (E), attach it to (B)&(C) .



Attach assembled two unit as shown,tighten the cam lock (2) clockwise to secure.

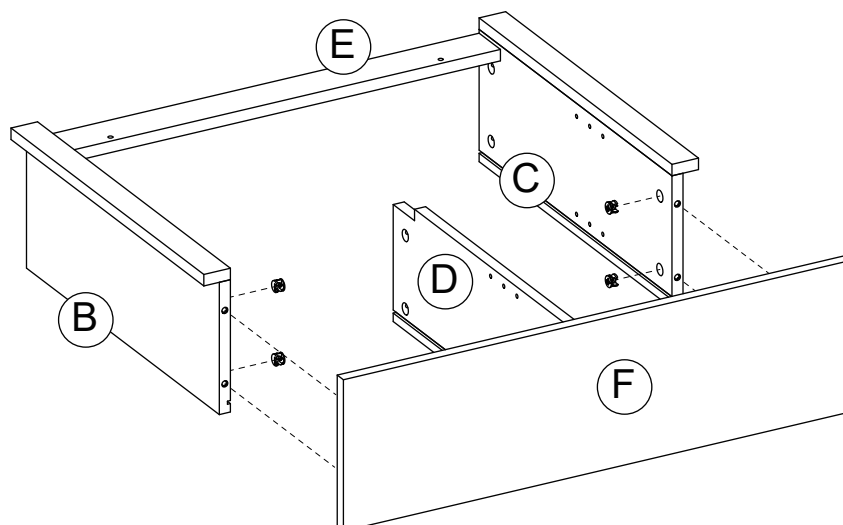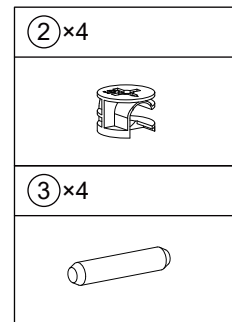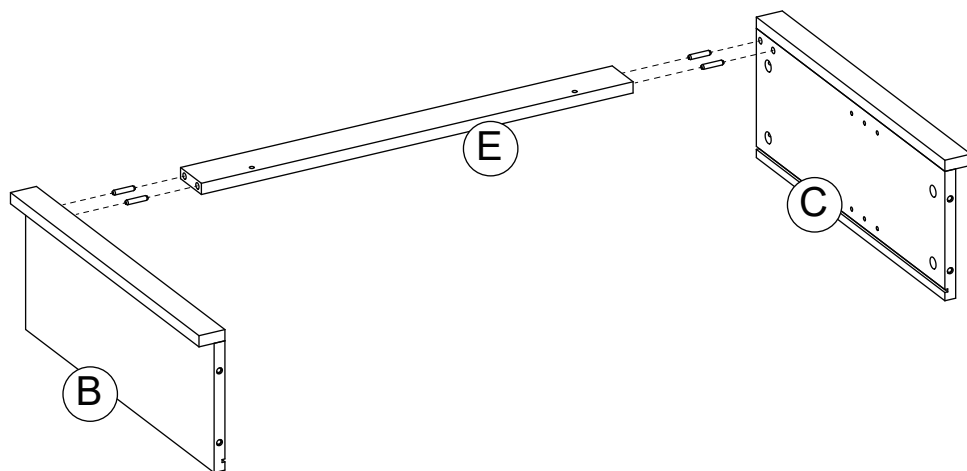

Product Name:	Farmhouse White MDF Bathroom Wall Cabinet
SKU #:	WHIF961

Step 3

Screw cam bolt (1) onto top panel (A), Insert back panels (G) onto unit,
Insert wooden dowel (3) onto (E),
tighten the cam lock (2) clockwise to secure.

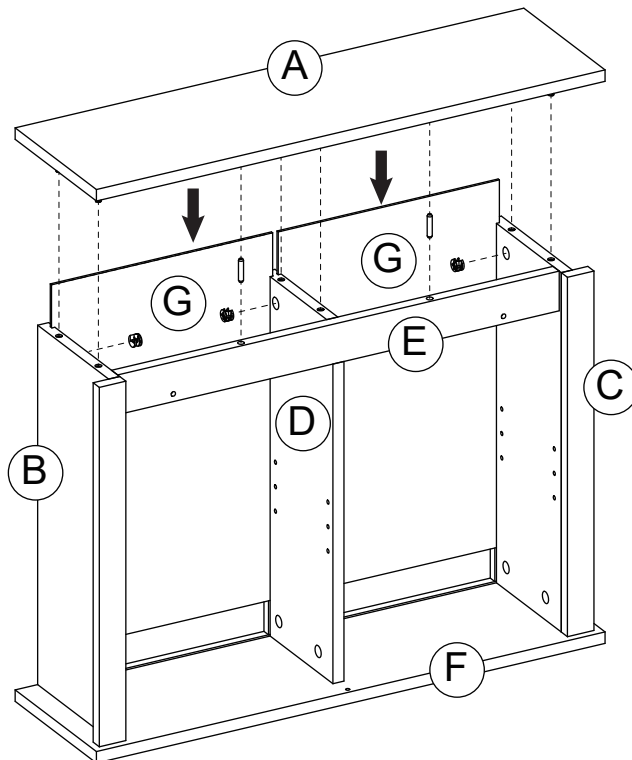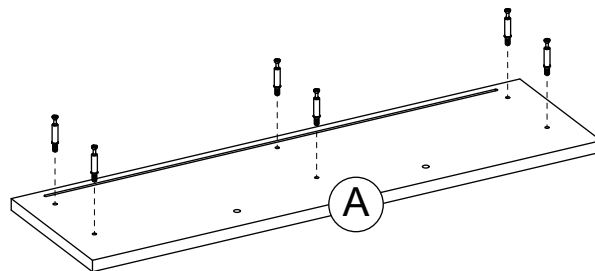




①×6
②×6
③×2

Product Name:	Farmhouse White MDF Bathroom Wall Cabinet
SKU #:	WHIF961

Step 4

The triangular pieces (18) are added to make the cabinet more stable. Attach the triangular pieces (18) to the back of the cabinet using the screws (19). Use a screwdriver to tighten the screws (19).


(18)×12

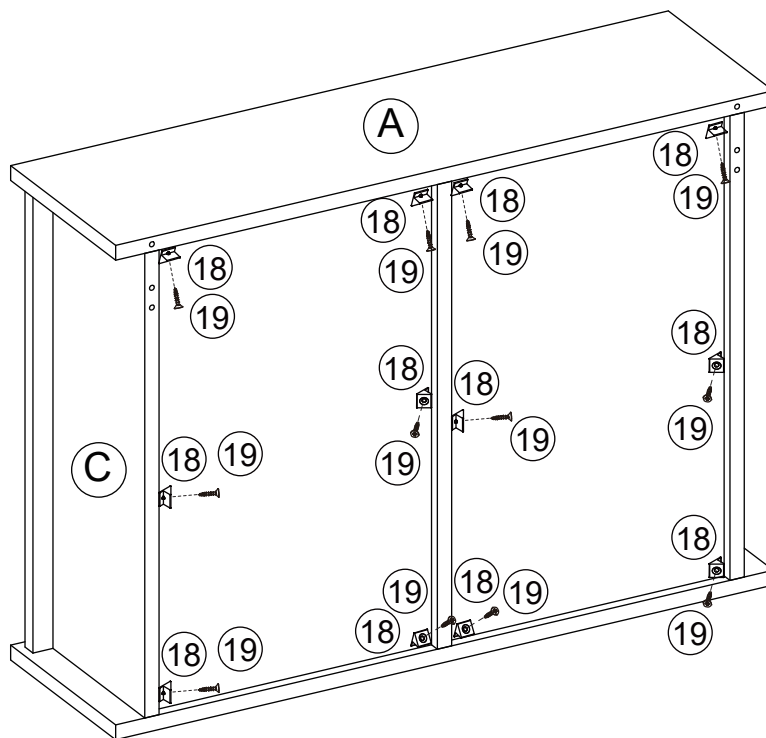(19)×12




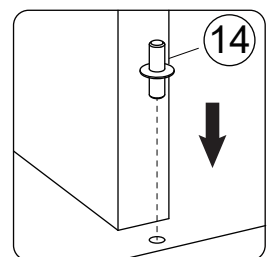
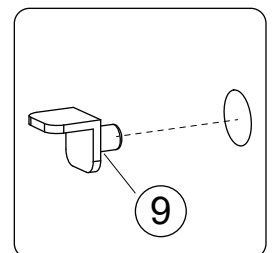
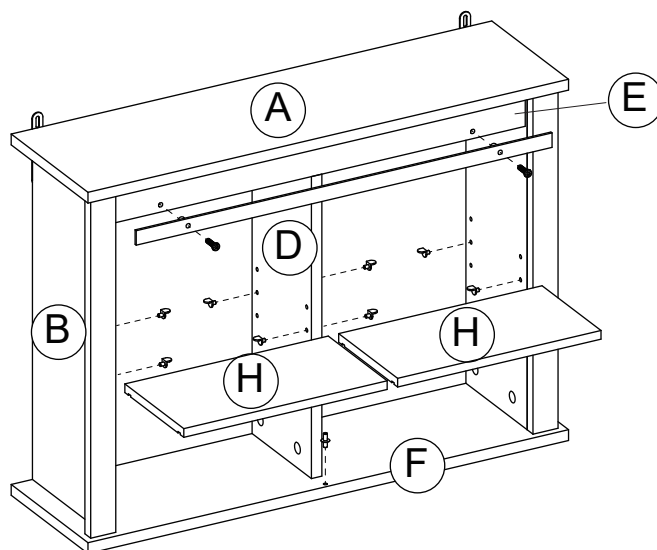
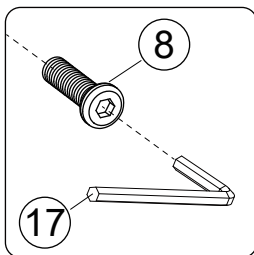
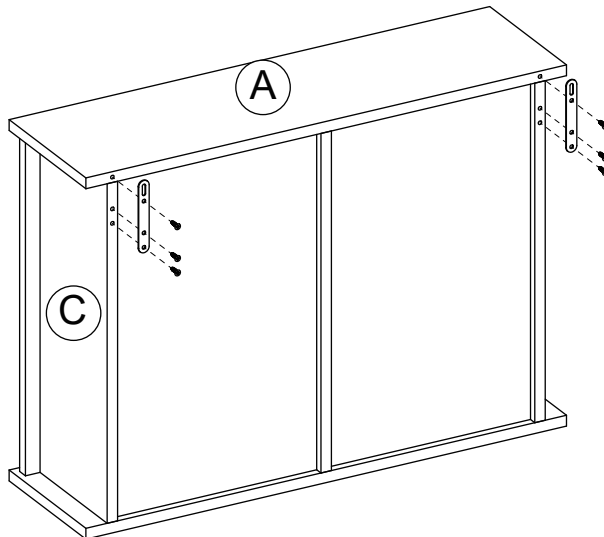
Product Name:	Farmhouse White MDF Bathroom Wall Cabinet
SKU #:	WHIF961

Step 5

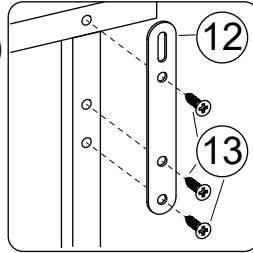Attach (12) to (B)&(C) with screws (13)
 Attach metal runner(15) onto unit with bolt (8)
 as shown with tool (17).
 Insert layer supports (9) into unit,
 then put on the adjustable shelves.
 Insert (14) onto panel (F) as shown.



(8)×2	(9)×8
(12)×2	(13)×6
(14)×1	(15)×1
	(17)×1








Product Name:	Farmhouse White MDF Bathroom Wall Cabinet
SKU #:	WHIF961









Step 6

Fix the handle (6) on the door (I) with bolts (4).

Insert the door (I) into the bolt (14), pull up the door a little to hang the wheels (16) onto the metal runner (15).

Screw bolts (5) into the hole as shown.

④×2	⑤×2
	
⑥×1	⑦×4
	
	⑬×2
	

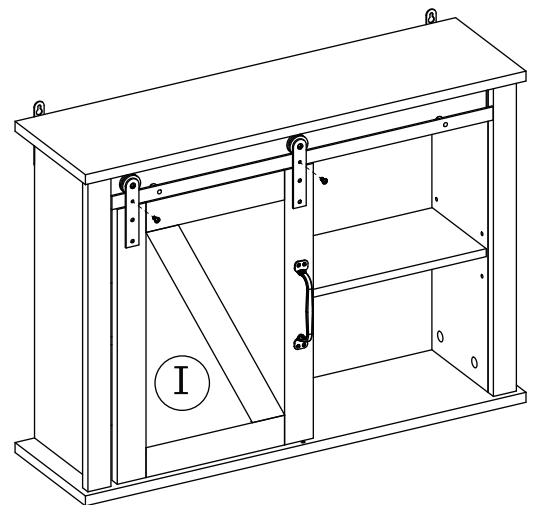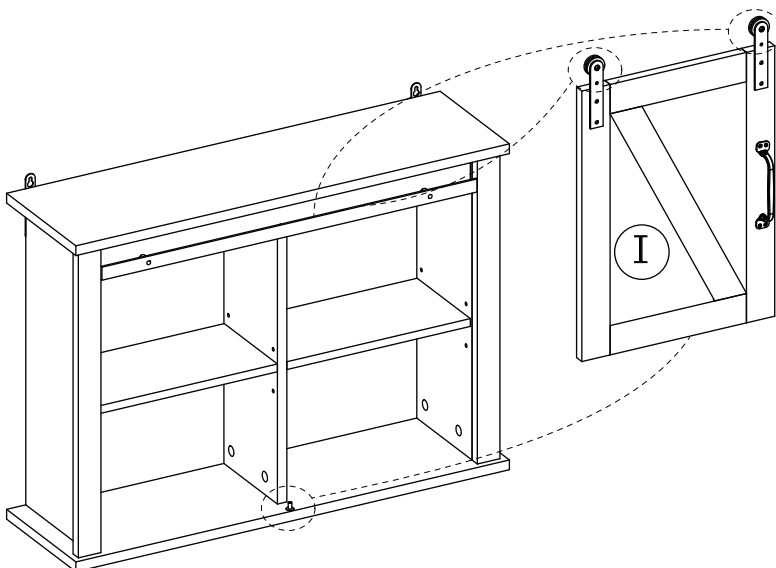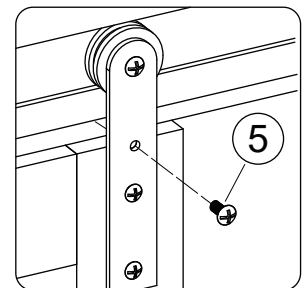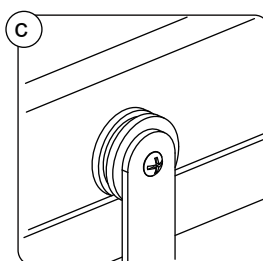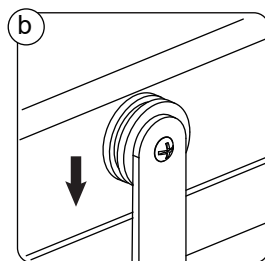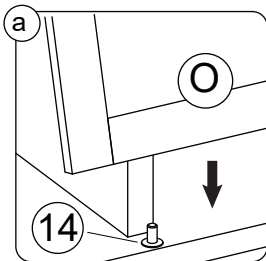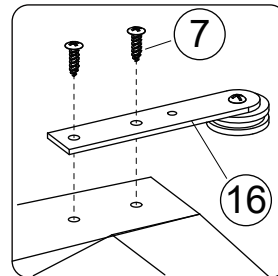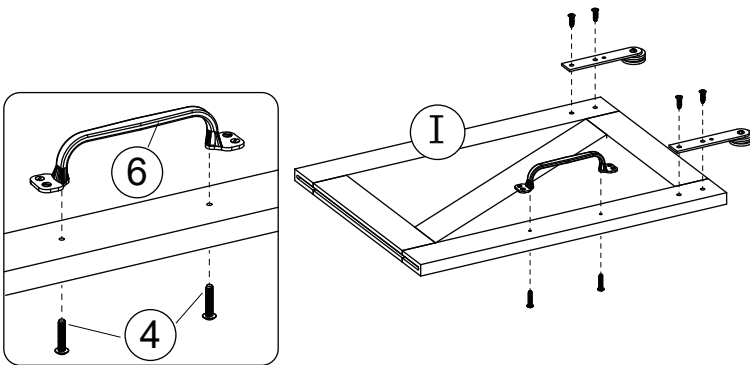

Product Name:	Farmhouse White MDF Bathroom Wall Cabinet
SKU #:	WHIF961

Step 7

Drill holes on the wall to input Wall plug (11).

Fix the unit to the wall with Screw (10) and through (12) as shown.

