



Assembly Instruction

MB2301K-LED

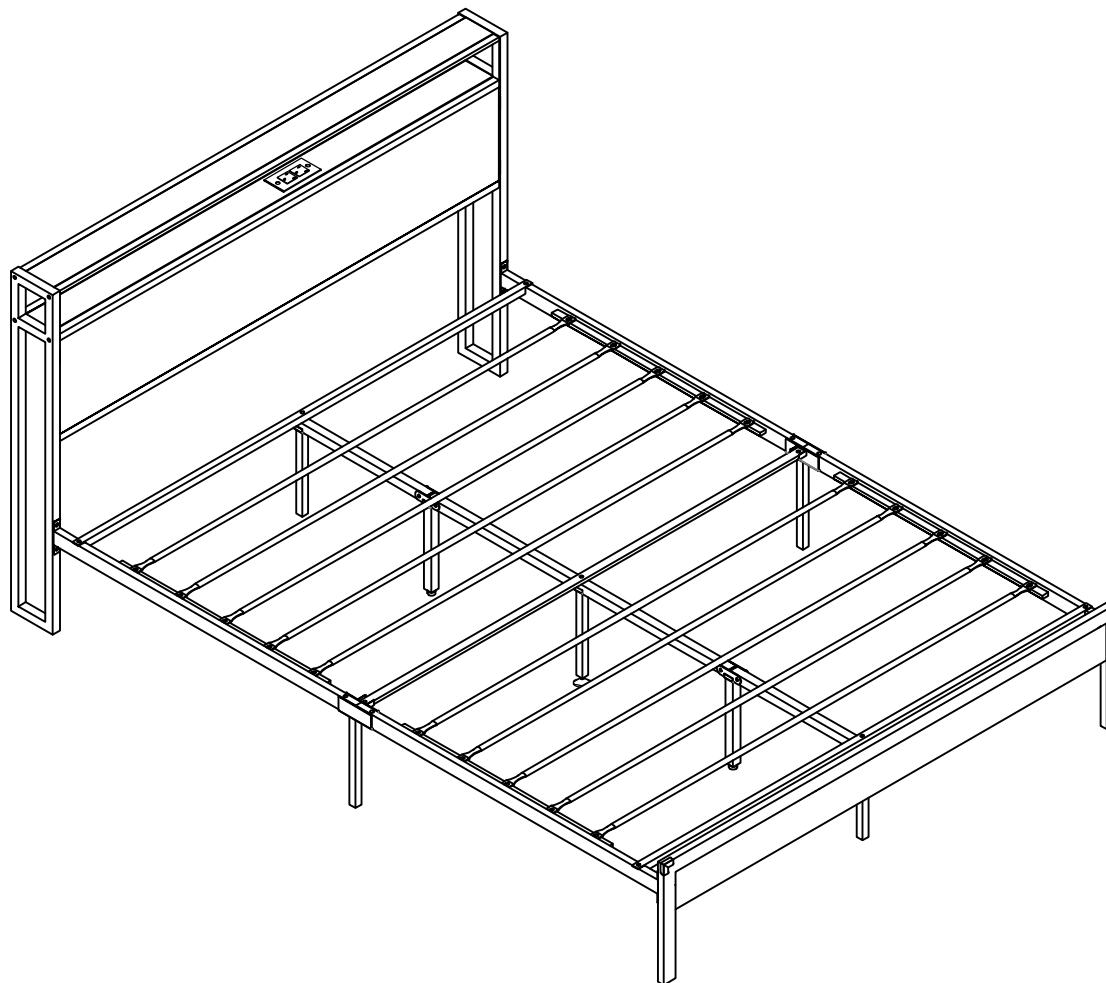

Attention: Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other. If the screws are tightened initially, subsequent hole positions may be misaligned.

If you have product questions, you may contact manufacturer at: lizevinchelp@outlook.com

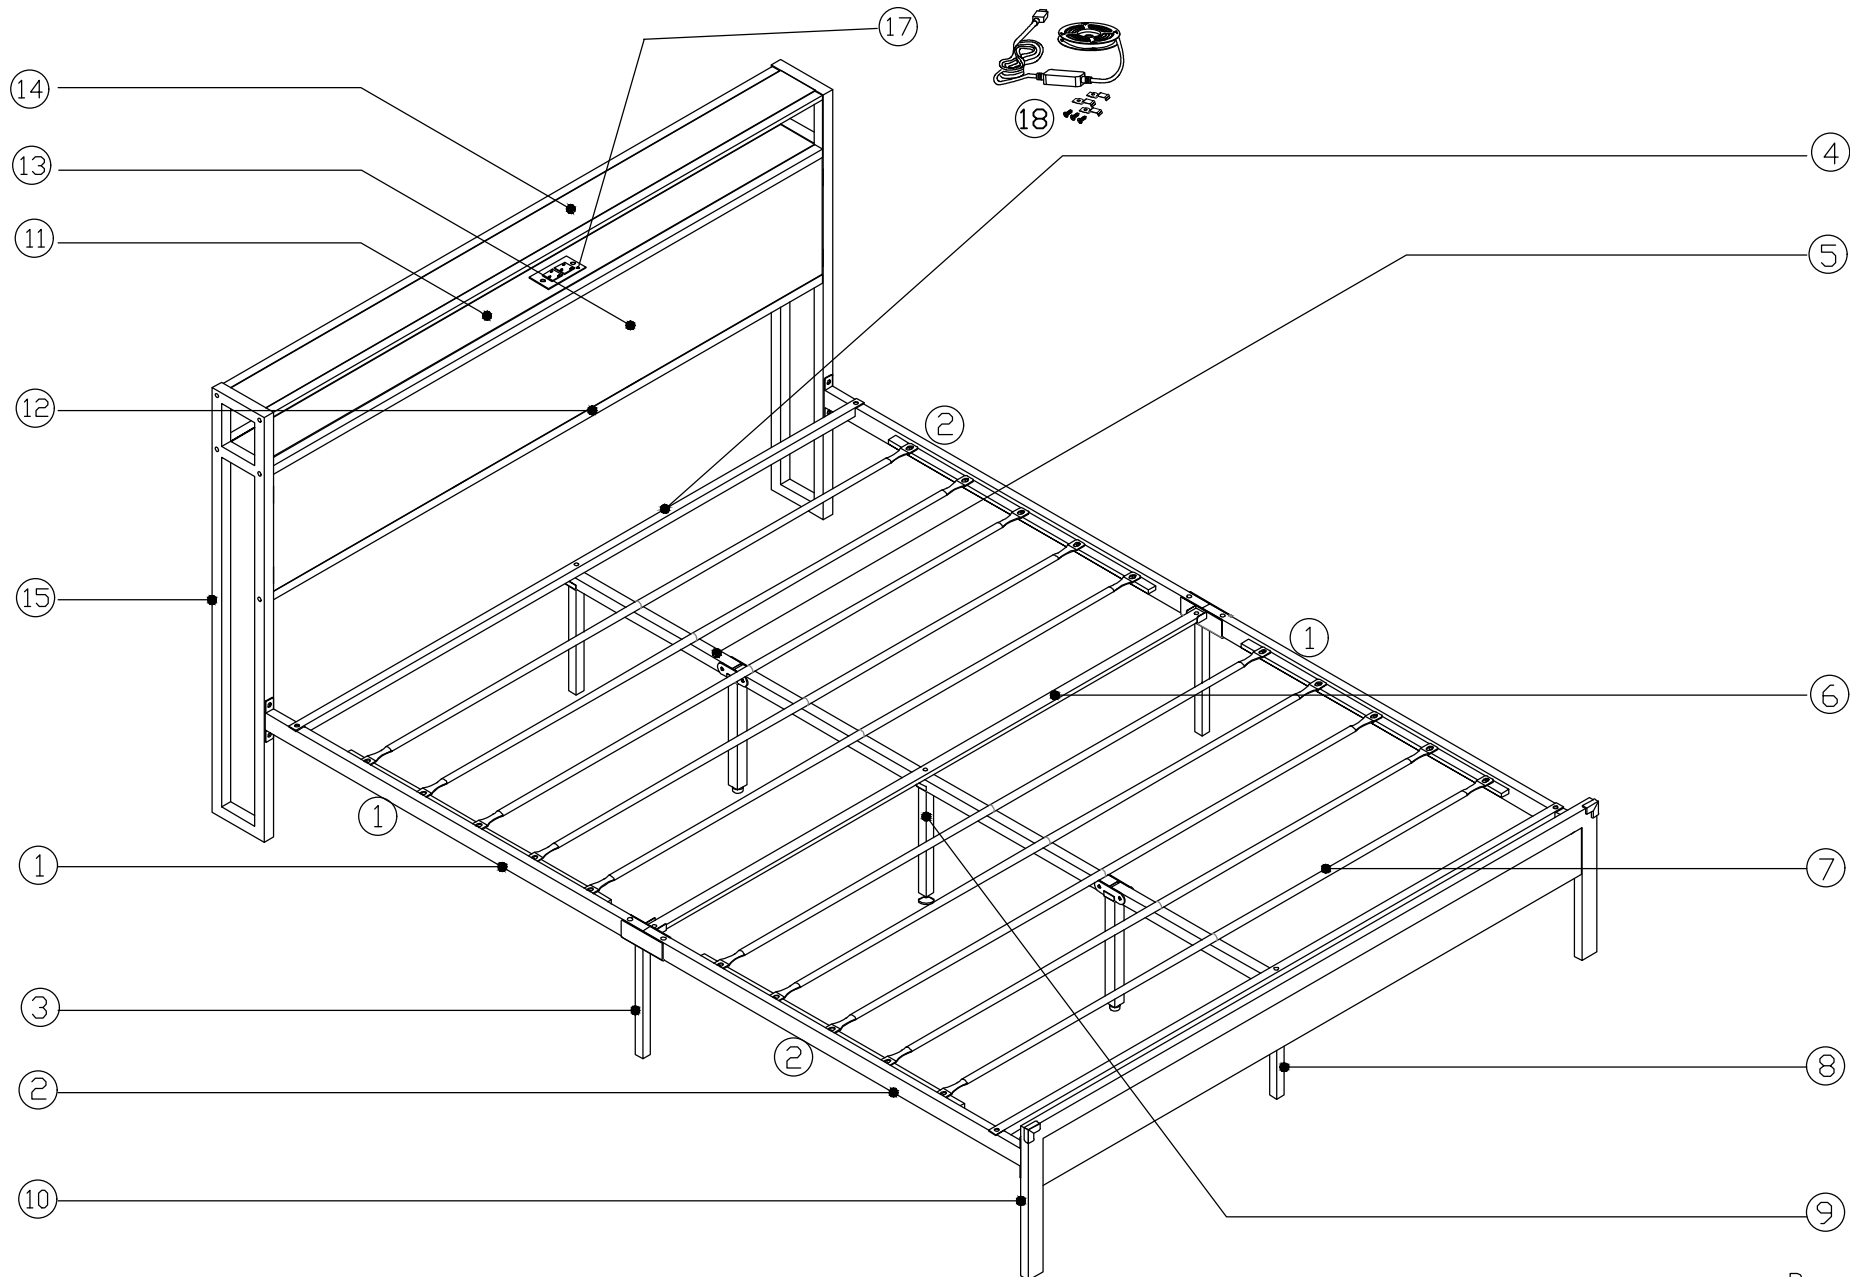

Hardware arts



M6*15

(A) 20PCS



M6*45

(B) 10PCS



M6*10

(C) 8PCS



M8*20

(D) 14PCS



M8*55

(E) 7PCS




M4*16

(F) 2PCS



4#


(G) 1PC




5#

(H) 1PC


Part list

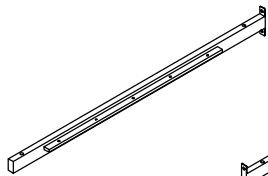


(1) 2PCS

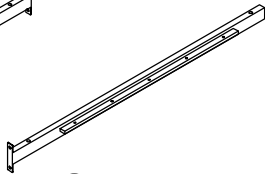


(2) 2PCS




(3) 2PCS

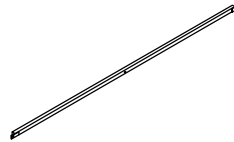


(4) 2PCS

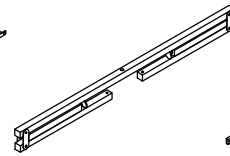


(5) 1 PC

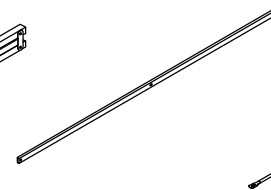

(6) 1PC

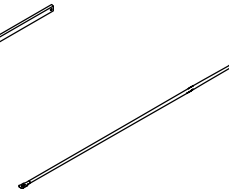


(7) 10PCS




(8) 2PCS




(9) 1PC

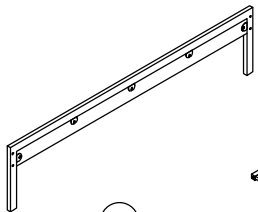


(10) 1PC

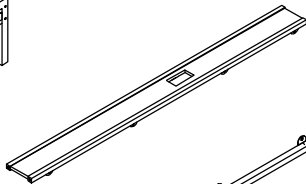


(11) 1PC

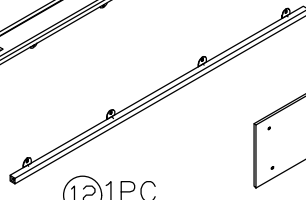

(12) 1PC

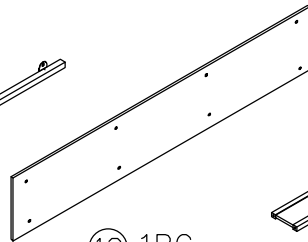

(13) 1PC

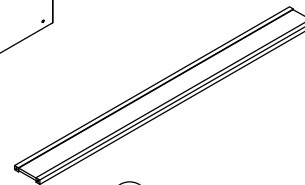

(14) 1PC



(15) 2PCS



Crash pads

(16) 2PCS



(17) 1PC



(18) 1PC

Step: 1


M6*45 (B) X 6PCS

4# (G) X 1PC

M4*16 (F) X 2PCS

5# (H) X 1PC


**No pre-drilled holes in board!!
Please directly screw F
(self-drilling screws)
into the board**

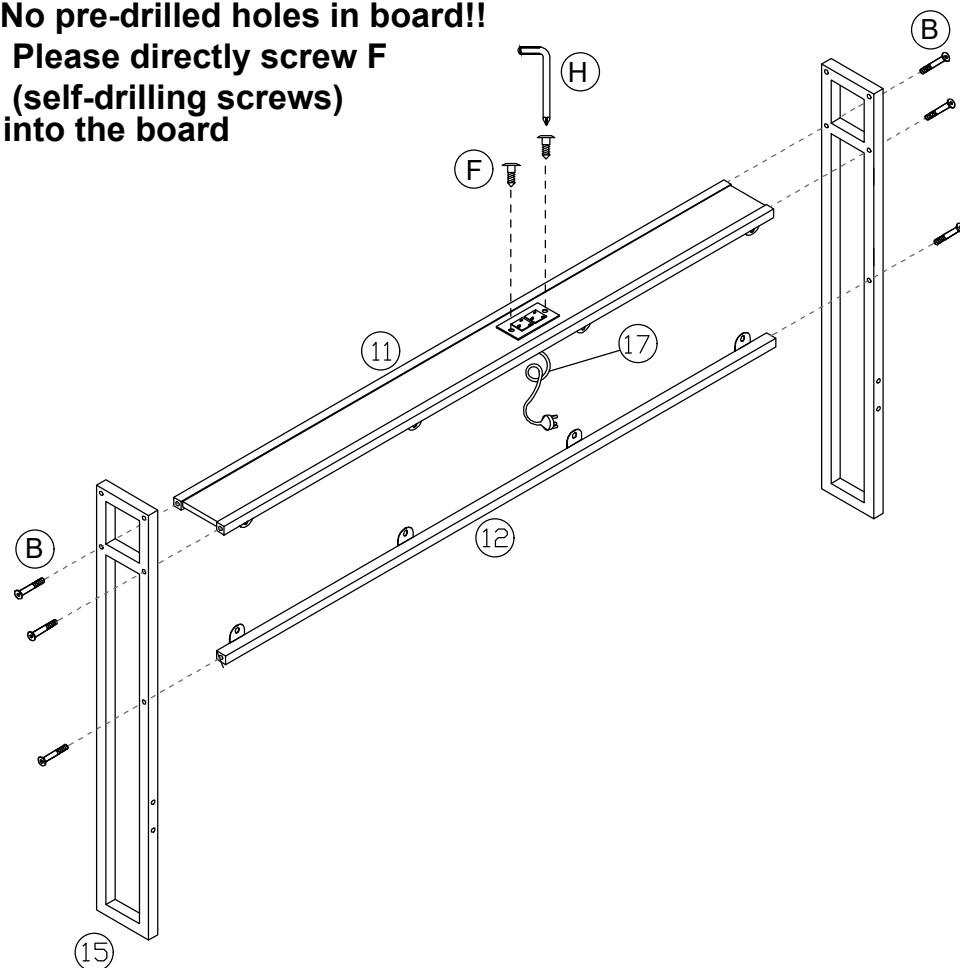

Step: 2


M6*10 (C) X 8PCS

5# (H) X 1PC

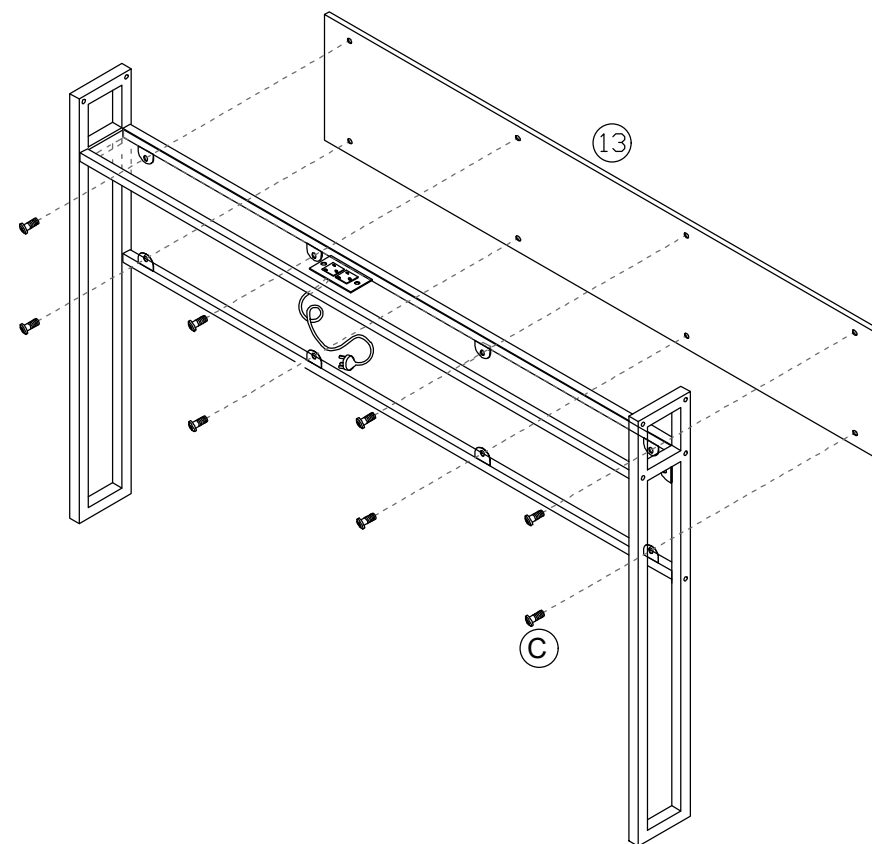


Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

Step: 3

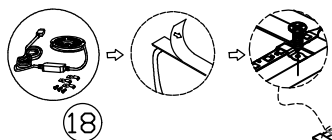

M6*45 (B) X4PCS

4# (G) X 1PC

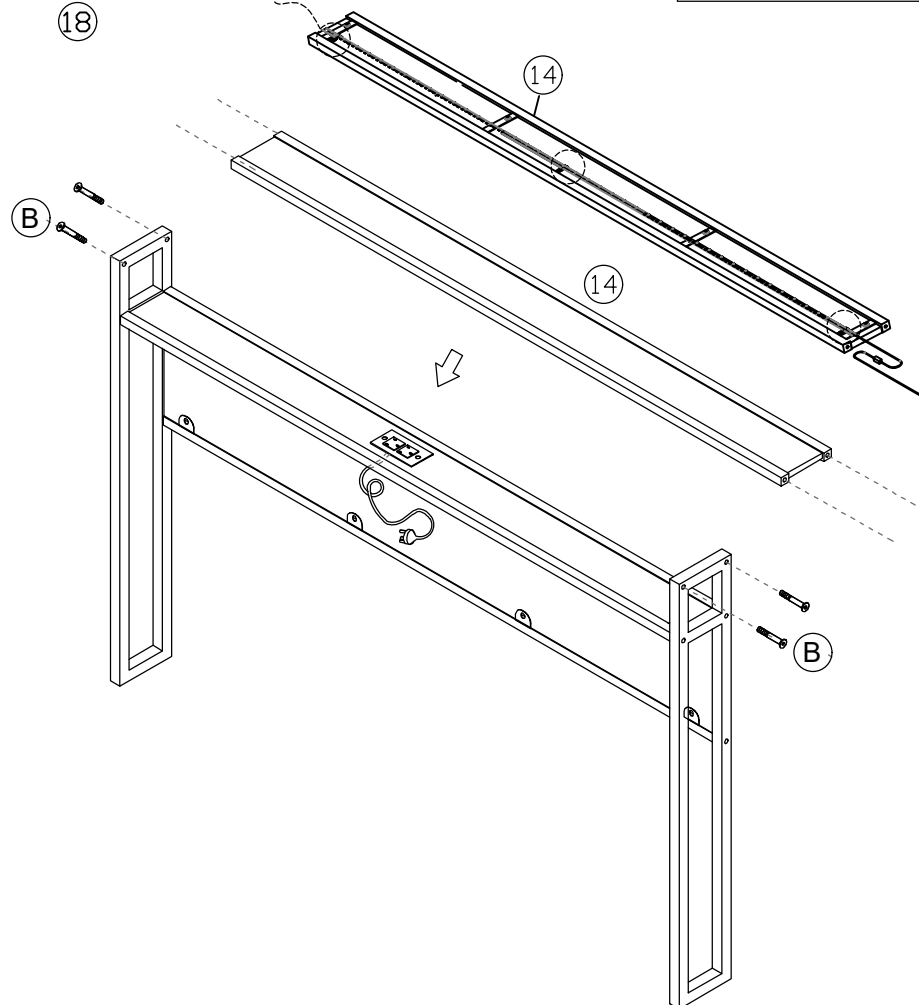


Step: 4

M8*55 (E) X 4PCS

5# (H) X 1PC



Please pay attention to the direction arrow in the illustration to avoid reverse installation

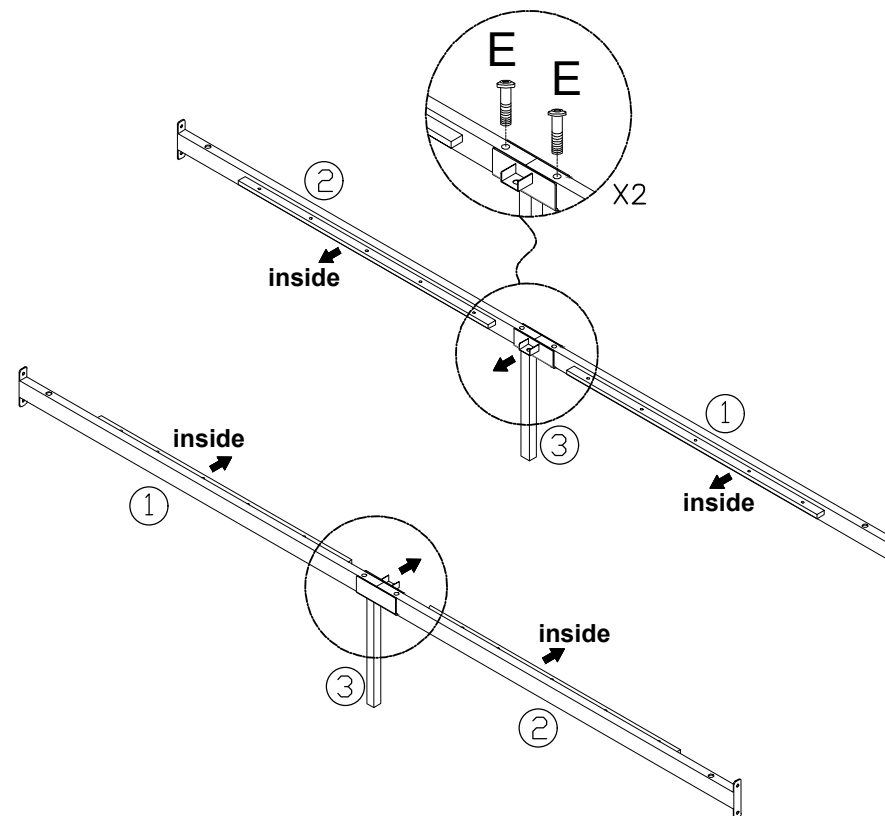


Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

Step: 5

 M8*20 **(D)** X8PCS


 5# **(G)** X 1PC

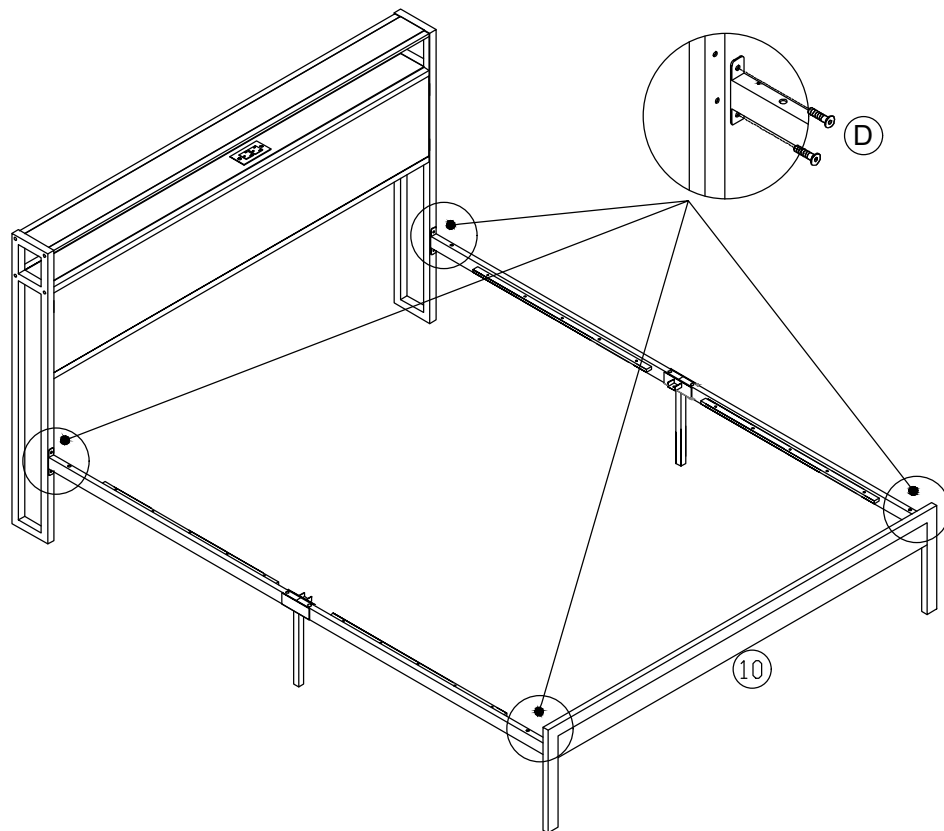

Step: 6


 M8*20 **(D)** X6PCS

 5# **(G)** X 1PC

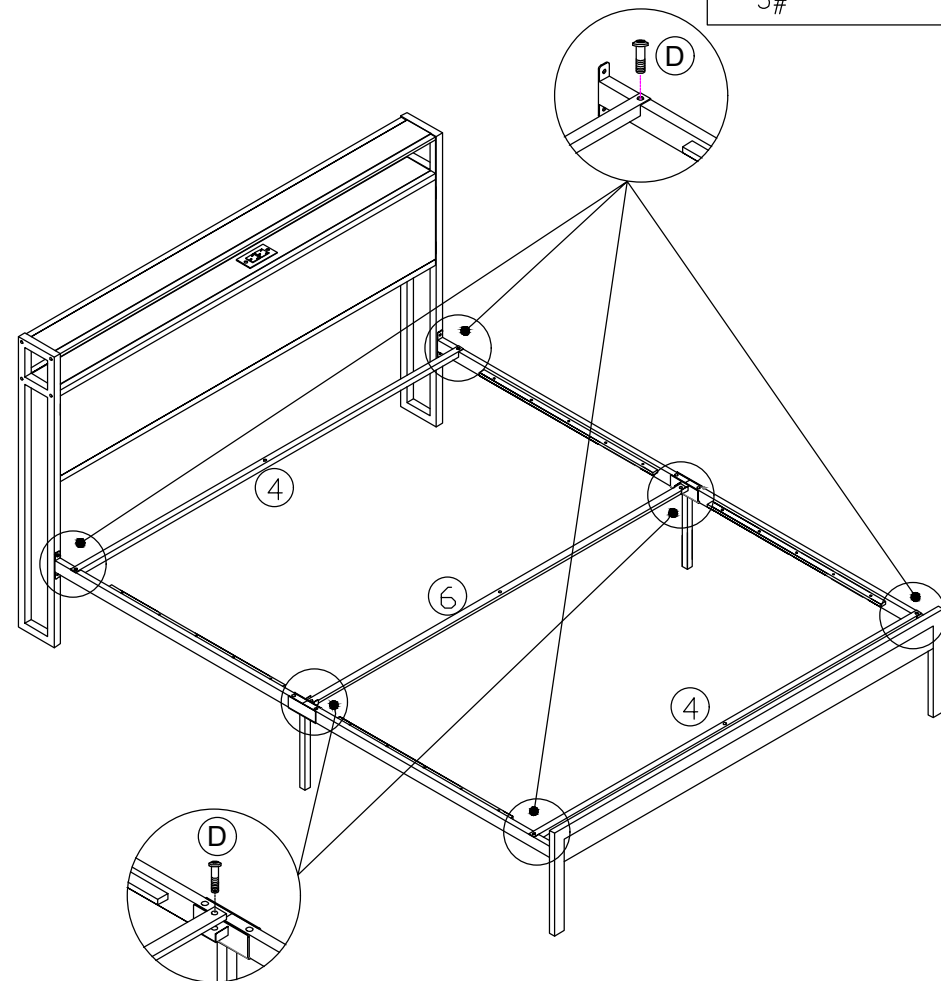


Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

Step: 7

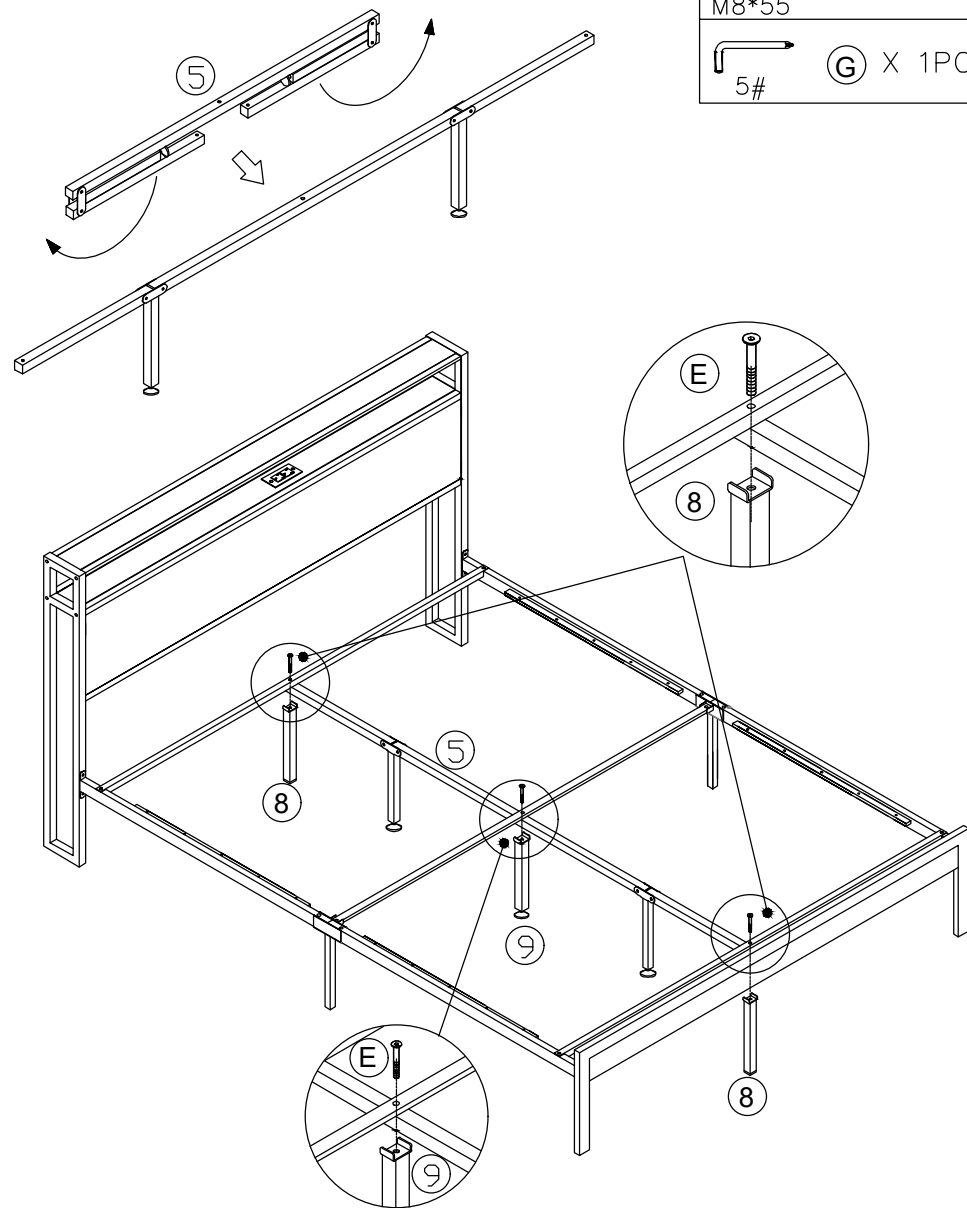


Step: 8

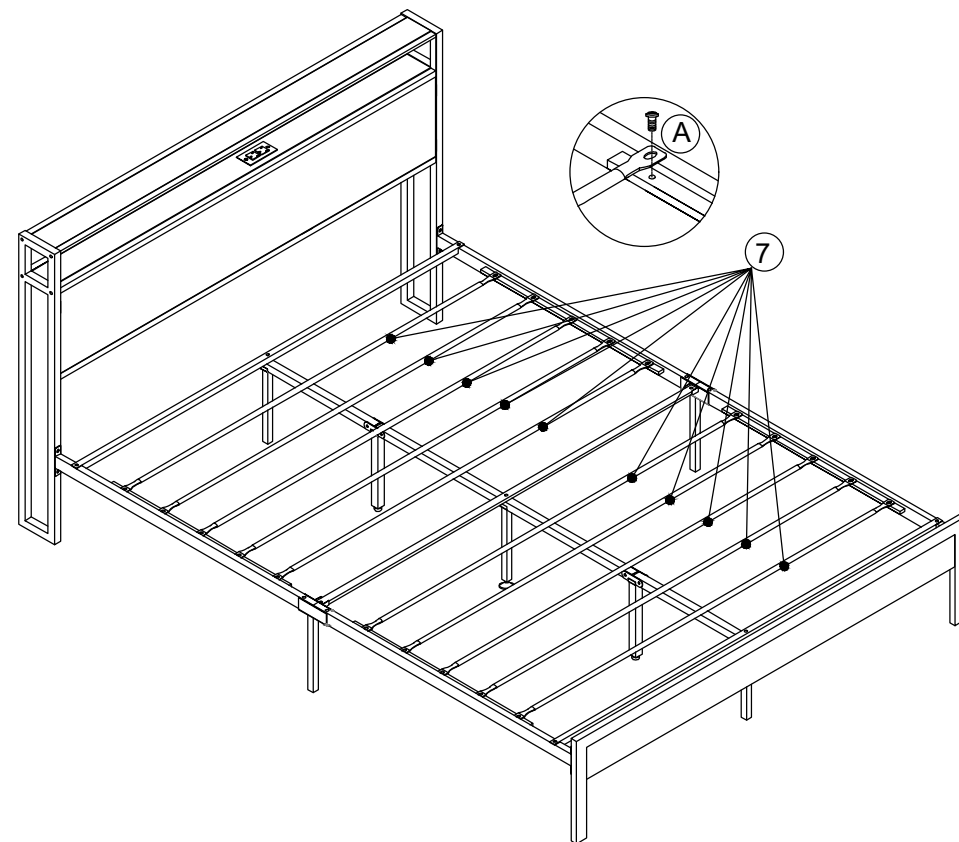


Step:9

There is a small sealing pocket in the package. There are two crash pads in the sealing pocket. As shown in the figure below.

Crash pads



16 2PCS

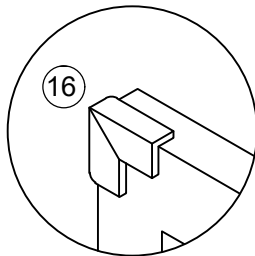

Please tear off the surface anti sticking sheet and stick the anti-collision cushion on it

