

CARE AND MAINTENANCE

Wipe clean with a soft, dry cloth. Test the cleaning method on a hidden area before using them over the entire area.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- * This item may require periodic tightening.
- * Do not tighten bolts until completely assembled.


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Cushion		1x
B	Seat Cushion		1x
C	Iron Base		1x
D	Iron Frame		1x
HW1	Hex Socket Bolt	 1/4"-20 x 5/8"	4x
HW2	Hex Socket Bolt	 1/4"-20 x 1-1/4"	4x
HW3	Flat Washer	 1/4"x1/2"	4x
HW4	Allen Key	 M4	1x

 **SAFAVIEH**
F U R N I T U R E

Model# ACH6202

Product Dimensions: 26-1/4"W x 31-3/4"D x 34"H

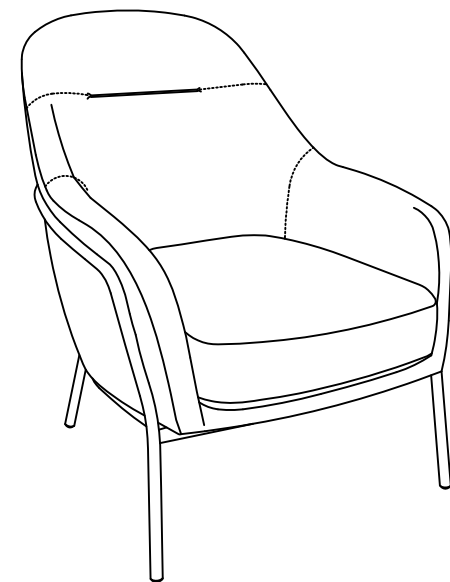

Weight capacity : 275 lbs
WARNING : DO NOT STAND ON THE PRODUCT
WARNING : DO NOT OVER TORQUE BOLTS


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 20 minutes.

Tools Required for Assembly (included): Allen Key

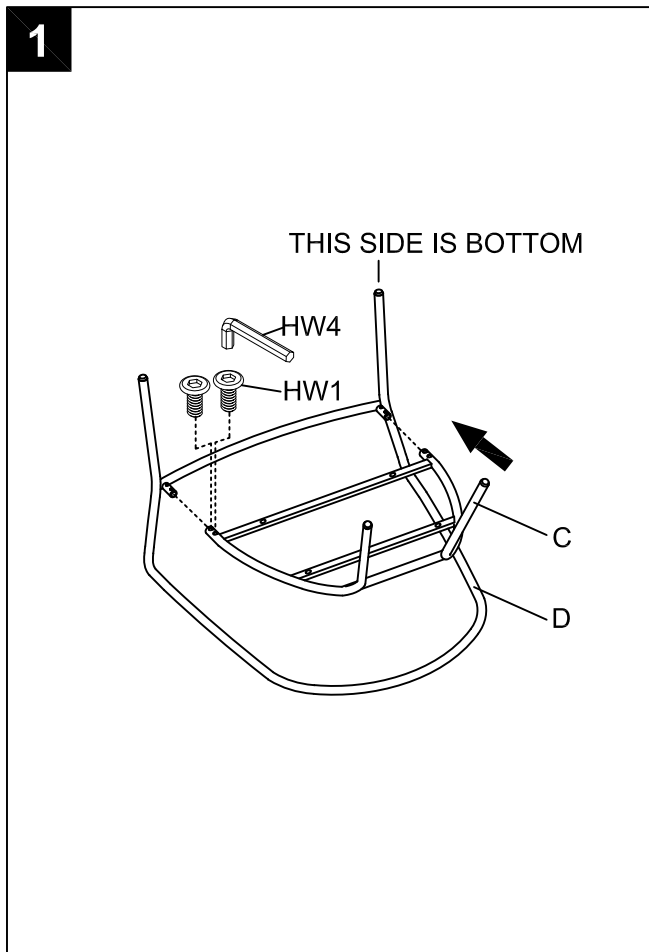


Step 1 :

Turn the Iron Base (C) & the Iron Fame (D) upside down, Insert the protrusions on the Iron Frame (D) into the tube of Iron Base (C). Using the Allen Key (HW4) to lock with 4*Hex Socket Bolts (HW1).

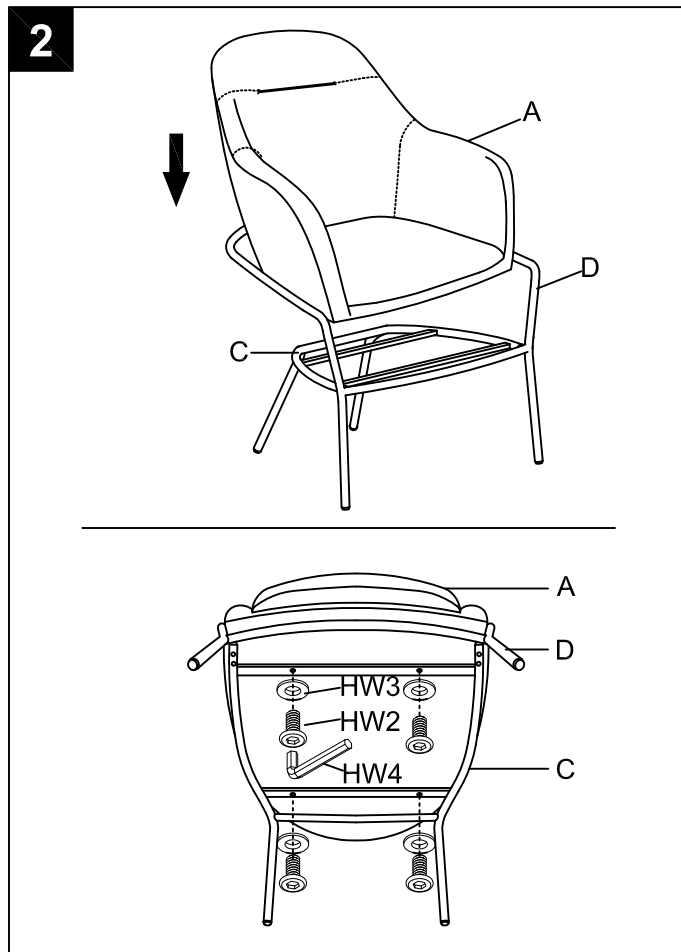

Step 2 :

Place the upholster cushion (A) on the assembled iron base (C&D), then put the bottom up and aligning screw holes on iron base & upholster cushion, Using the Allen Key (HW4) to lock with 4*Hex Socket Bolts (HW2) with 4*Flat Washers (HW3).

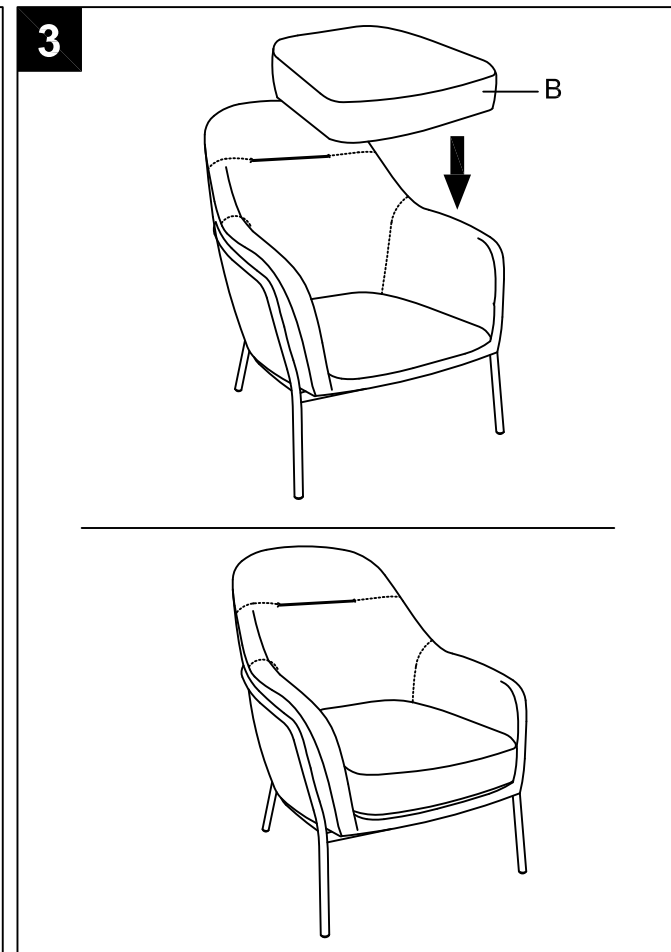

Step 3 :

Straighten up the assembled product, then place the Seat Cushion (B) on. Assembly is completed.