


# SAFAVIEH LIGHTING

## Assembly Instruction

**CAUTION: Read instruction carefully and turn electricity off at main circuit breaker panel before beginning installation.**

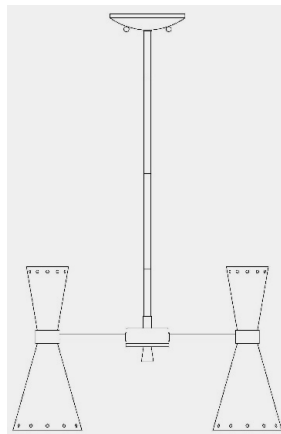

**ITEM#: PND4010B**

### Care and Cleaning















To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.

To clear the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the interior surface of the fixture.

Do not use any cleaners with chemical, solvents or harsh abrasives. Use Only a dry soft cloth to dust or wipe carefully.

Estimated Assembly Time: 30 minutes


### Part List and Hardware List

A	Wire Nut	X3		H	Finial	X2	
B	Mounting Plate	X1		I	Tube 6"	X2	
C	Mounting Screw	X2		J	Tube 12"	X2	
D	Outlet Box Screw	X2		K	Small Shade	X3	
E	Green Ground Screw	X1		L	Fixture Body	X1	
F	Hex Nut	X2		N	Large shade	X3	
G	Canopy	X1		M	Bulb	X3	

# Installation


## Step 1

Attach the Mounting Plate (B) to the junction box using the Outlet Box Screw (D) on the ceiling wall.

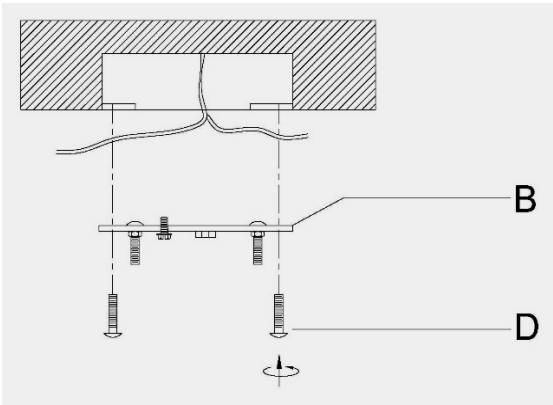


## Step 2

Thread Tube (I, J) to the Fixture Body (K), then thread the Tube (I) to bottom of the Canopy (G).

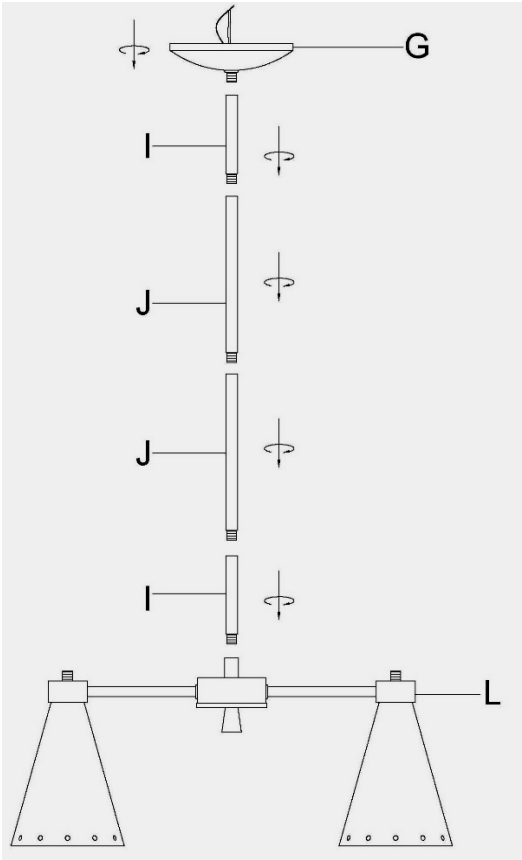


## Step 3

Using the Wire Nut (A) connected the positive electrode and the negative pole of the fixture body carefully into the positive electrode and the negative pole in junction box.

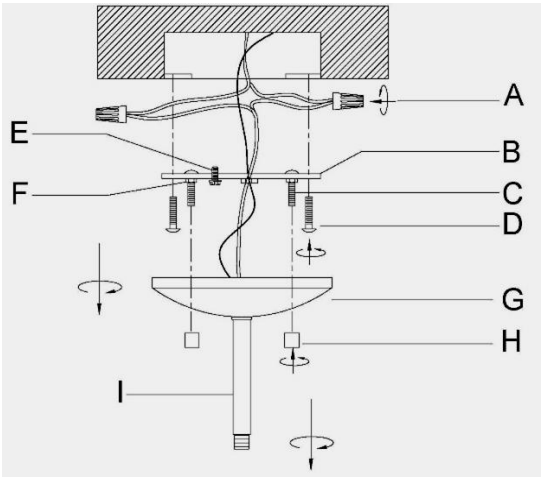


## Step 4 Wire connection

Connect,Hot,Black or Red outlet Supply Wire to:	Connect,Neutral,White Outlet Supply Wire to:
Black	White
*Parallel Cord(round&smooth)	*Parallel Cord(square&ridged)
Clear,Brown,Gold or Black without Tracer(colored stripes)	Clear,Brwn,Gold or Black without Tracer(colored stripes)
Insulated Wire(not green)with copper metal conductor	Insulated Wire(not green)with Silver metal conductor

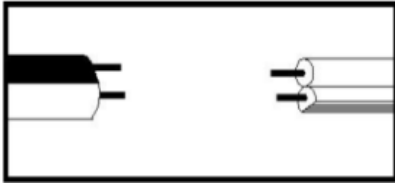

\*Note: When parallel wire(SPTI&SPTII)is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth.(See illustration on left)

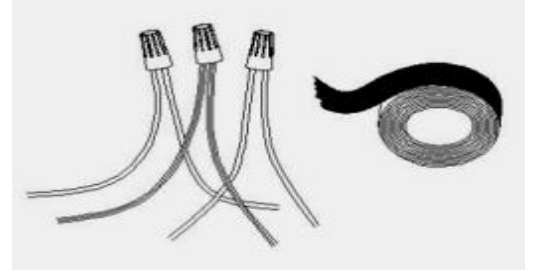

## Grounding Instructions:

a) For installation in the United States: Wrap ground wire from outlet box around green ground screw on mounting bracket, no less than 2" from wire end. Tighten ground screw. If fixture is supplied with a ground wire, connect to outlet ground wire with a wire connector.

b) For installation in Canada: If fixture is supplied with ground wire, wrap ground wire around green grounding screw on mounting bracket. Tighten ground screw.


## Step 5

Attach the Canopy (G) through Mounting Screw (C), secure Canopy (G) with Finial (H) to Mounting Screw (C).

Thread the Small shades (K) to top of the Fixture Body (L),

Install (3) Bulbs (M) into sockets in Large Shades (N).

**PLEASE USE ON/OFF TYPE "B" BULB MAX 40-WATT OR CFL BULB MAX 13-WATT OR LED BULB MAX 9-WATT  
THERE ARE 3PCS TYPE "B" 25-WATT BULB IN THE BOX.**

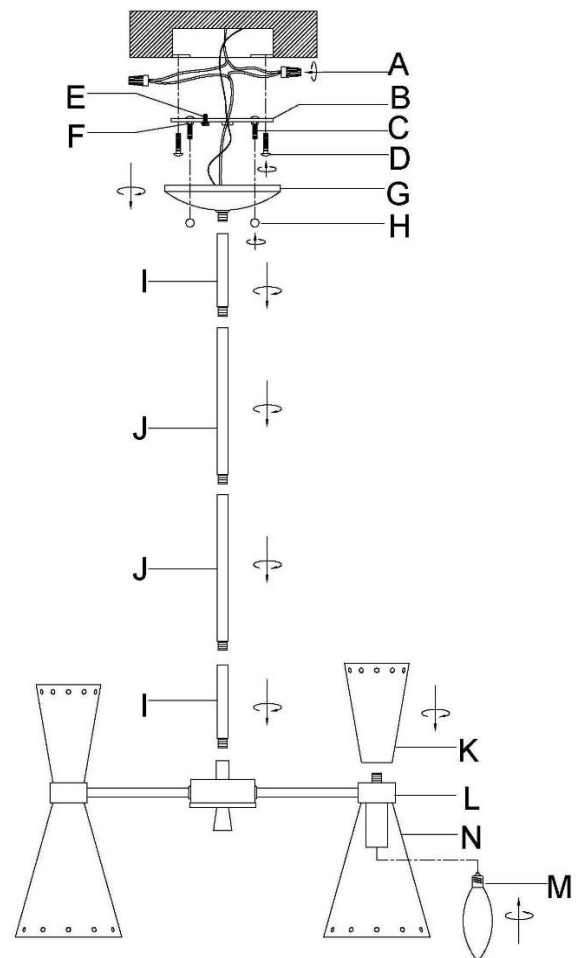

## Step 6

Consult a qualified electrician to ensure correct branch circuit conductor.

ENJOY YOUR LAMP