




MANHATTAN
COMFORT

Assembly Guide

Model: 11GMC1 / 11GMC2 / 11GMC3 / 11GMC4



Double Cabinet

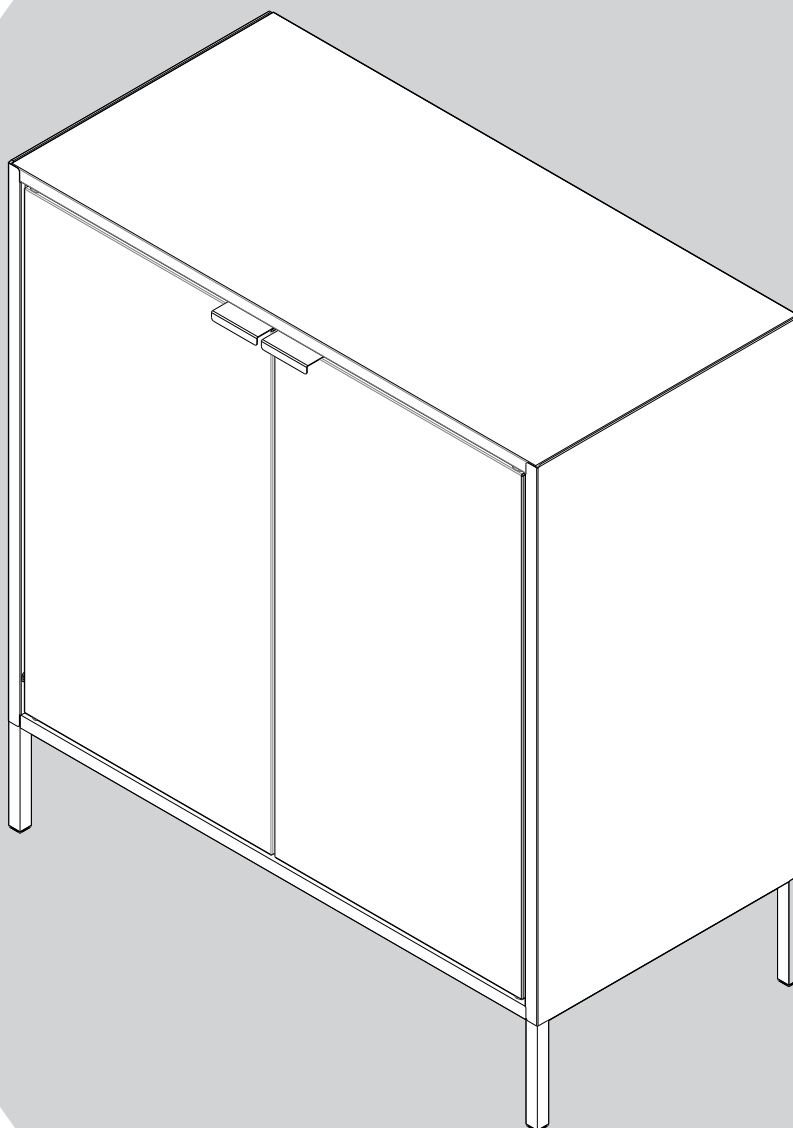



Stuck? Questions? We are here to help.

1-888-230-2225

help@manhattancomfort.com

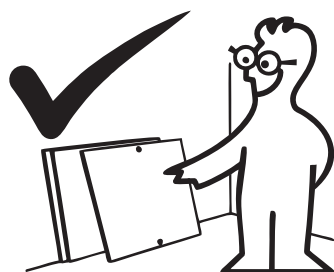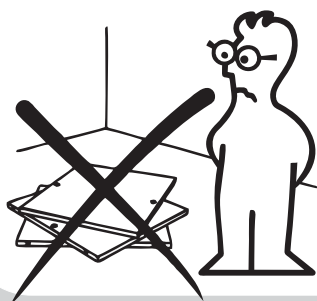

In order to ease the assembly,
you should separate and identify the parts first

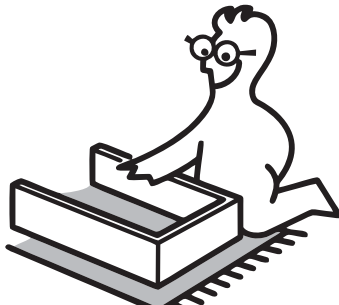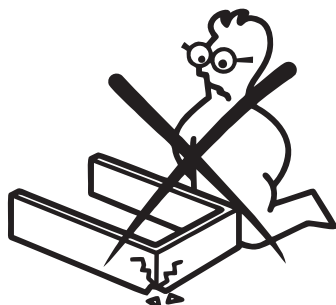

Do not place the parts directly onto the floor.
Use a cardboard sheet or a mat to place the
parts, during the separation and assembly.

IMPORTANT

In order to avoid severe or even fatal injuries, follow the
instructions carefully.

**Tools Needed (not supplied)*




IDENTIFICATION OF PARTS


IDENTIFY THE COLOR OF YOUR CABINET

DIMENSION


N°	DESCRIPTION	BLACK MATT	WHITE MATT	BLUE	GRAY	MATERIAL	QUANTITY		LENGTH	WIDTH	THICKNESS
P1	LEFT SIDE SMART	3000009260	3000009313	3000009263	-	STEEL	1	PC	25,31"	13,74"	0,67"
P2	RIGHT SIDE SMART	3000009261	3000009314	3000009265	-	STEEL	1	PC	25,31"	13,74"	0,67"
P3	CEILING 2 DOORS SMART	3000009397	3000009393	3000009395	-	STEEL	1	PC	27,48"	13,70"	0,94"
P4	REAR 2 DOORS SMART	3000009397	3000009330	3000009284	-	STEEL	1	PC	27,48"	13,43"	1,26"
P5	SHELF SMART	3000009203	3000009335	3000009285	-	STEEL	1	PC	27,52"	12,76"	0,63"
P6	TOP BACK 2 DOORS SMART	3000009215	3000009336	3000009286	-	STEEL	1	PC	26,65"	11,85"	0,67"
P7	BOTTOM BACK 2 DOORS SMART	3000009216	3000009337	3000009287	-	STEEL	1	PC	26,65"	12,17"	0,67"
P8	DOOR RIGHT SMART	3000009338	3000009357	3000009288	3000009208	STEEL	1	PC	23,70"	12,91"	0,63"
P9	DOOR LEFT SMART	3000009340	3000009359	3000009290	3000009211	STEEL	1	PC	23,70"	13,23"	0,63"
P10	FRAME SMART FRONT	3000009224	3000009331	3000009292	-	STEEL	2	PC	27,52"	8,74"	0,59"

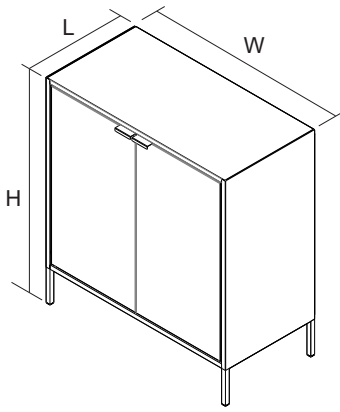


ASSEMBLED PRODUCT:
H: 29.92" W:27.55" L:13.77"




*Maximum weight
supported distributed*

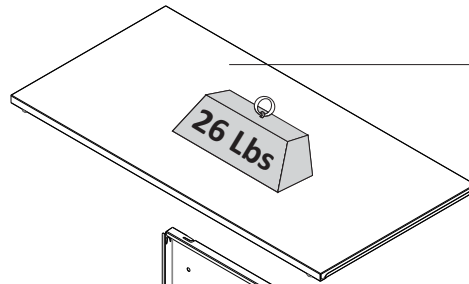


P3
CEILING

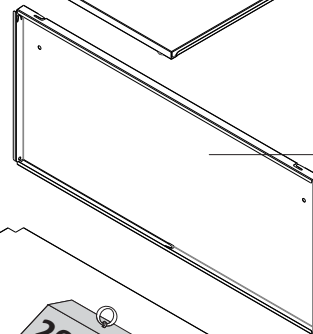


P6
TOP BACK

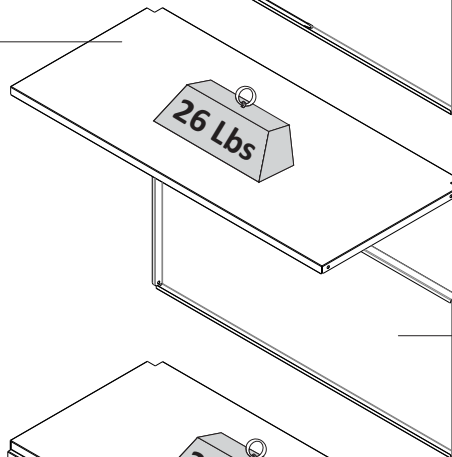

P5
SHELF

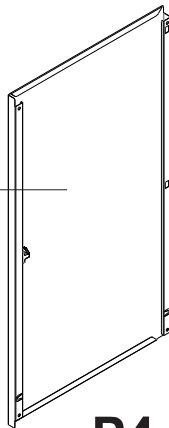


P1
LEFT SIDE

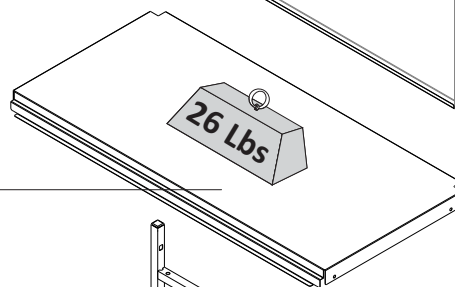



P7
BOTTOM BACK

P4
REAR

P9
DOOR LEFT

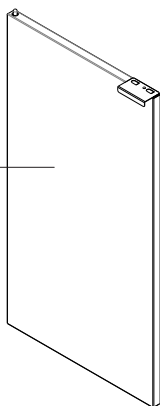


P8
DOOR RIGHT

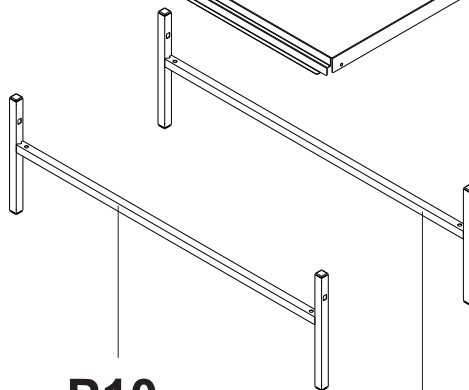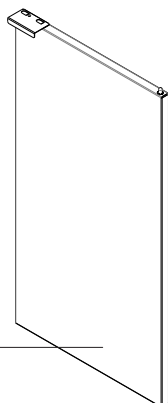

P10
FRAME

P10
FRAME

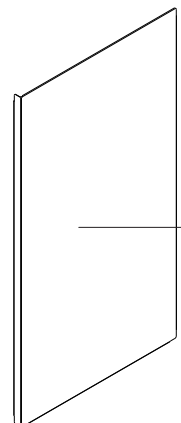

P2
RIGHT SIDE

Hardware list

F1


1000008297



Qty. 2

F2


1000008616

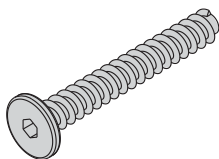

Qty. 2

F3


1000009033

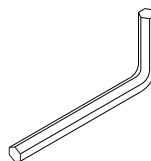

Qty. 1

F4


1000000281 - WHITE
1000007352 - BLACK
1000010221 - BLUE



Qty. 2

F5


1000010136



Qty. 2

F6


1000008285



Qty. 4

F7

3000009645 - WHITE
3000009643 - BLACK
3000009649 - BLUE
3000009647 - GREY



Qty. 2


F8

1000008285





Qty. 1


1 - Attach the **FRAME** part on the **LEFT SIDE** and **RIGHT SIDE** parts in the indicated direction.

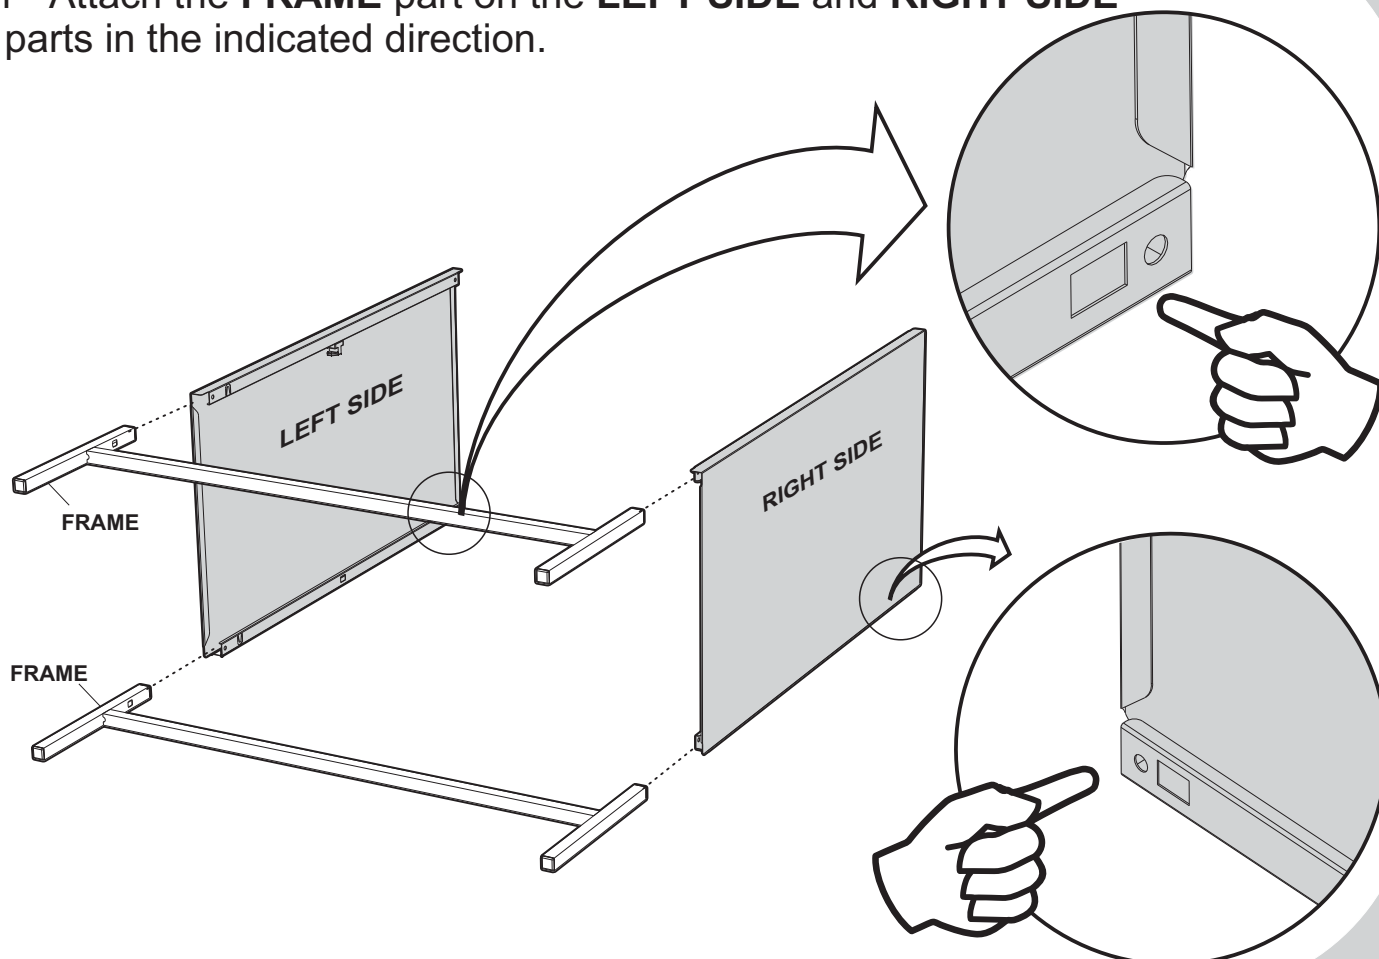



- 1 - Check the alignment of the holes on the fitted parts.
- 2 - The hole in the horizontal bar of part **FRAME**, should be up.

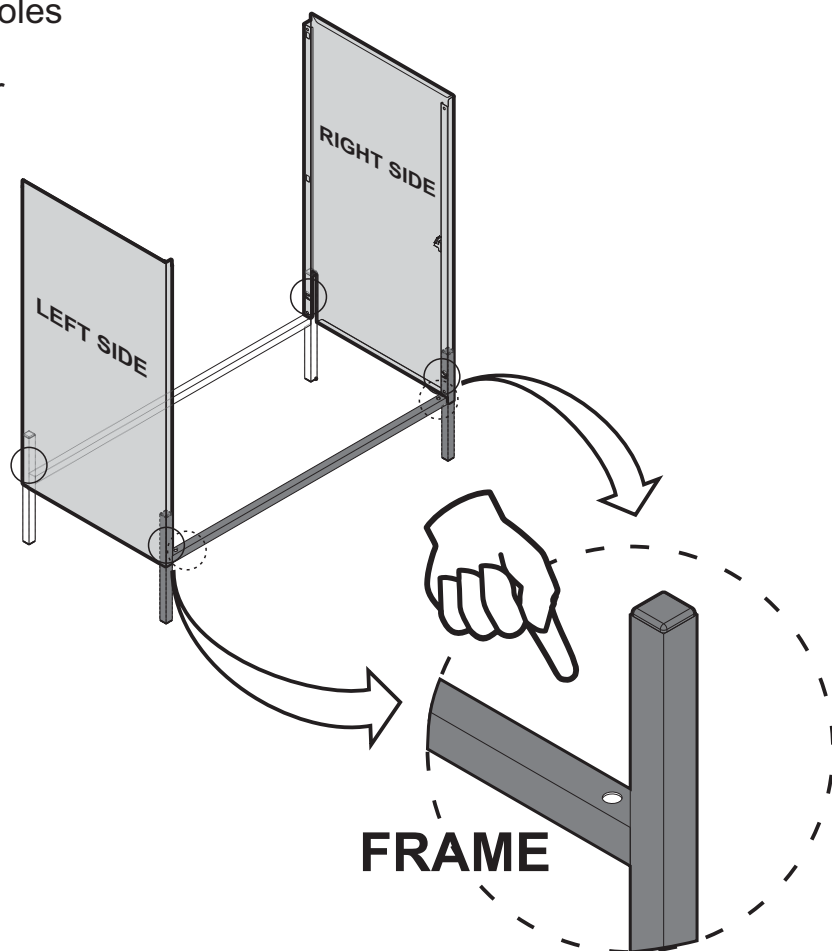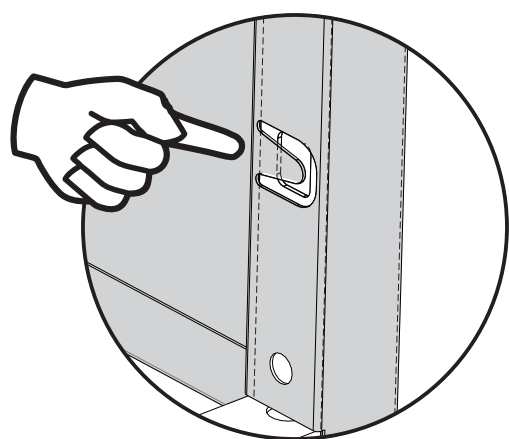

02

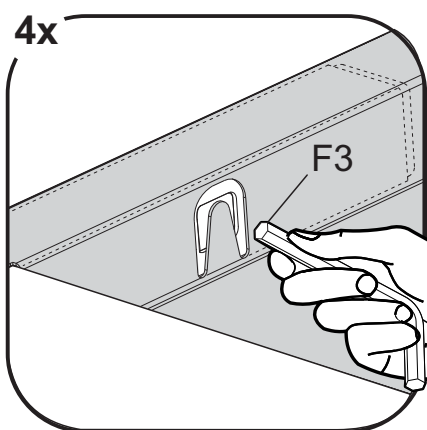


- 1 - With the end of **F3**, smash the safety claw, locking part **FRAME** to part **LEFT SIDE** and **RIGHT SIDE**.

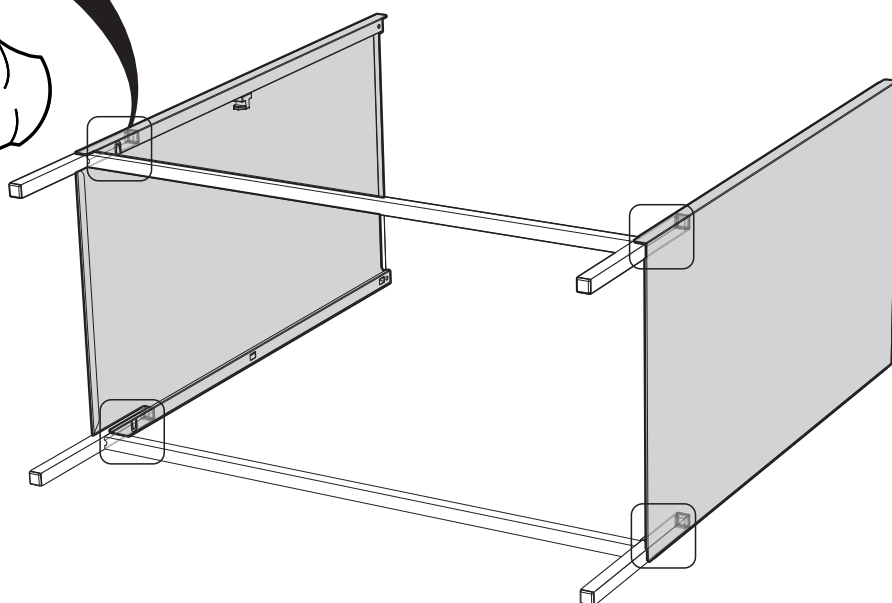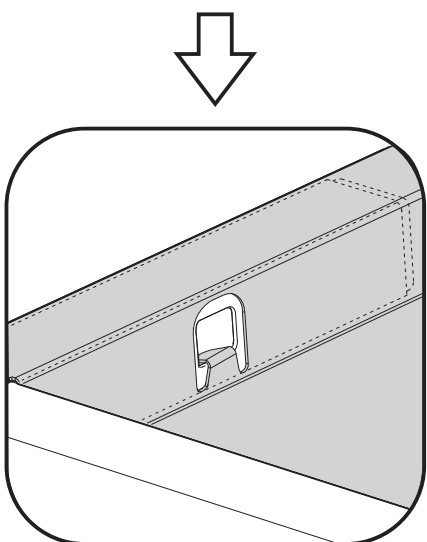

03


1- Identify the cutout on the top end of the **BOTTOM BACK** part.

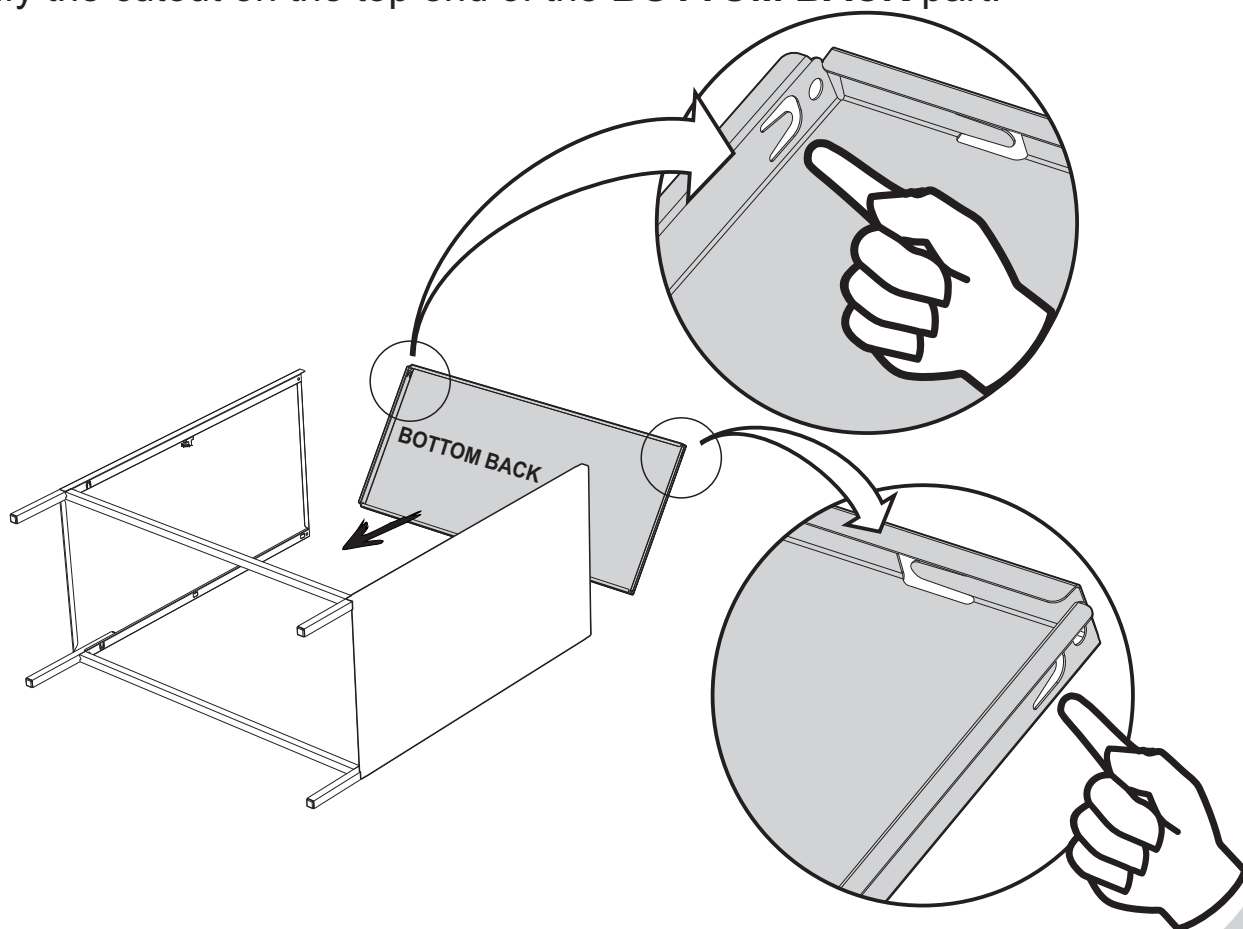

04



1 - Attach the **BOTTOM BACK** part, on the **LEFT SIDE**, **RIGHT SIDE** and **FRAME** parts.

2 - Slide part **BOTTOM BACK** to support on parts **LEFT SIDE** and **RIGHT SIDE**.

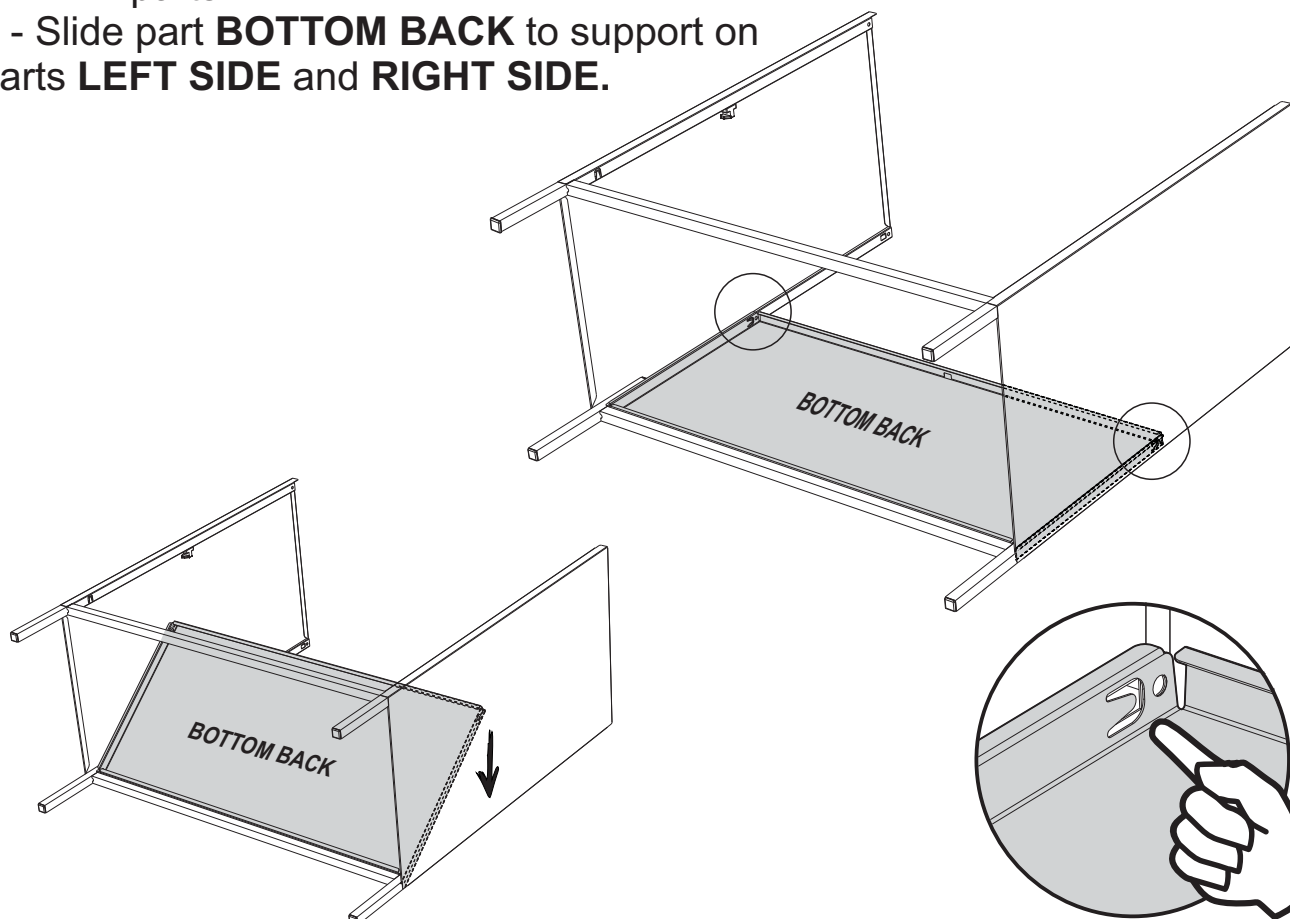



05

1 - With the end of **F3**, smash the safety claw, locking part **BOTTOM BACK** to part **LEFT SIDE** and **RIGHT SIDE**.

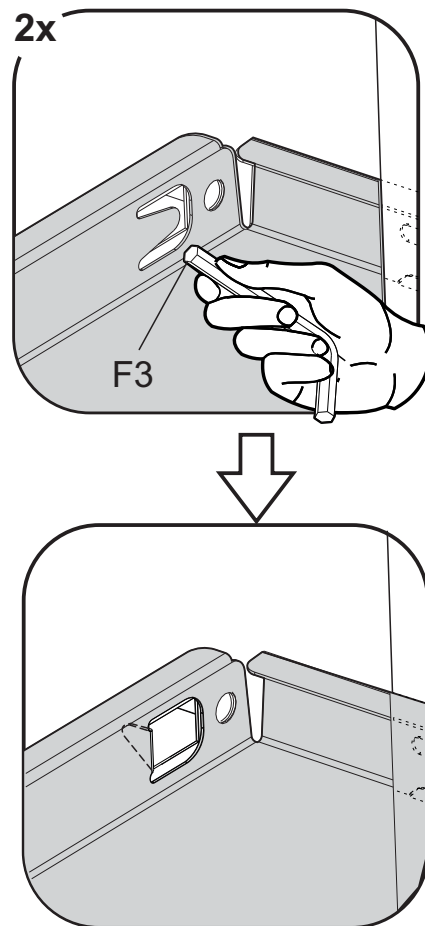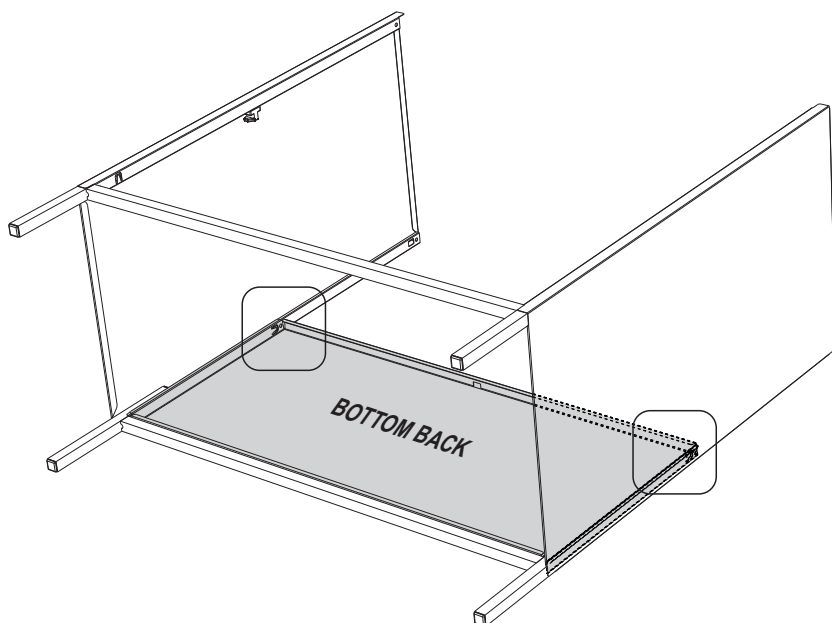


06

1 - Attach the joint of the front of the **REAR** part under the **BOTTOM BACK** part.
2 - Lower the **REAR** part as indicated.

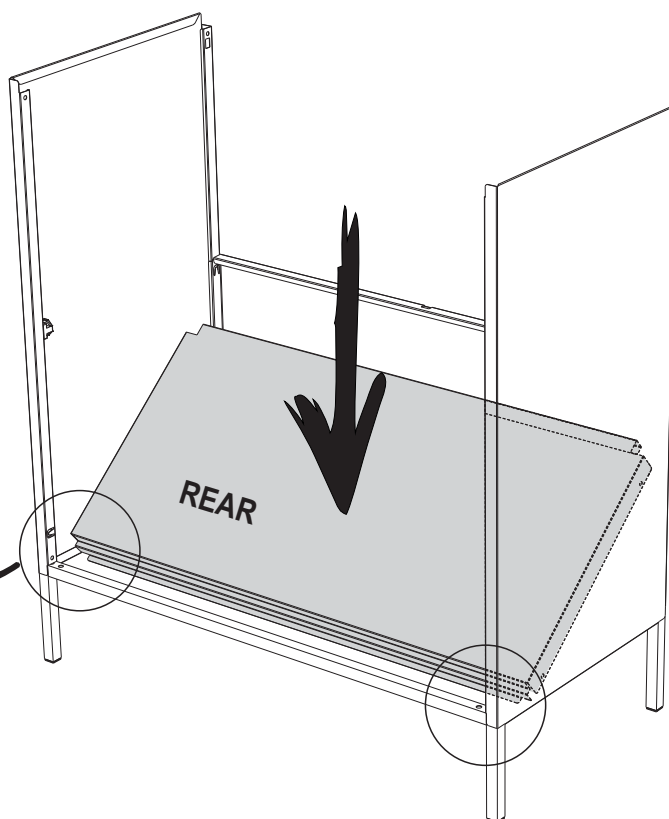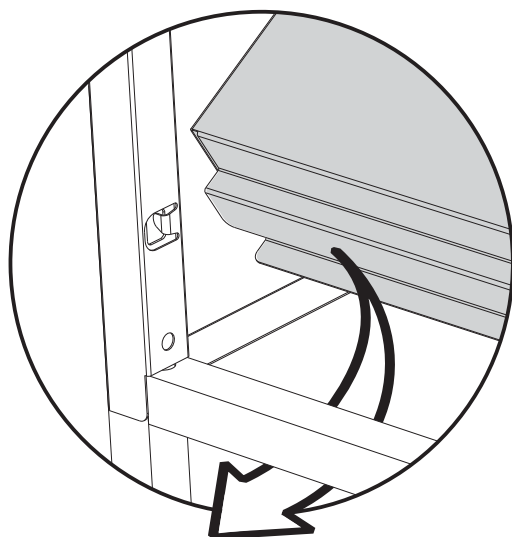

07


1 - Check all the fittings before moving forward.

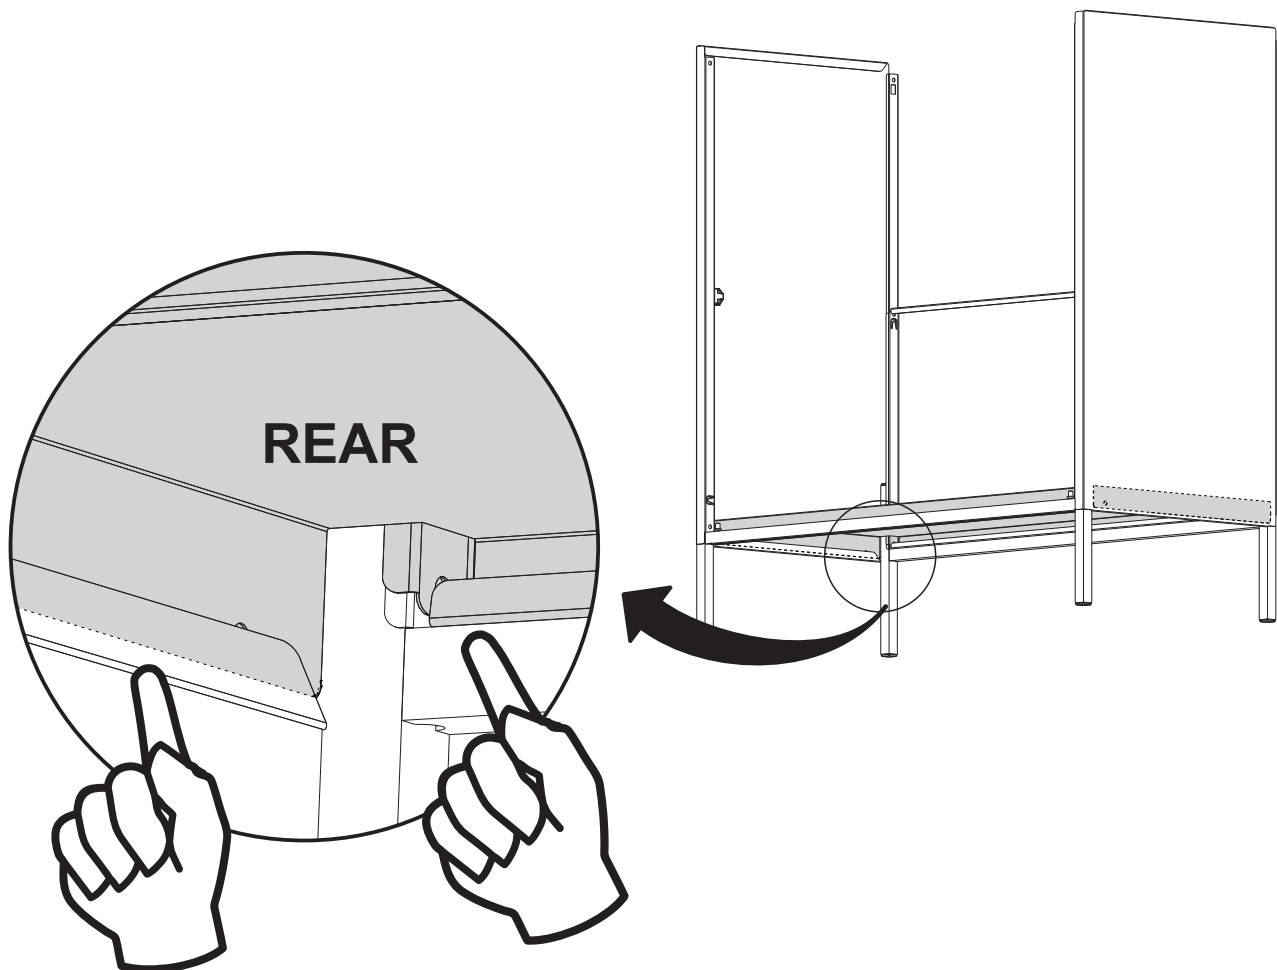

08


1 - Attach the **TOP BACK** part with both cutouts facing up, on parts **LEFT SIDE** and **RIGHT SIDE**.

2 - Attach the **TOP BACK** part onto the **BOTTOM SIDE** part.

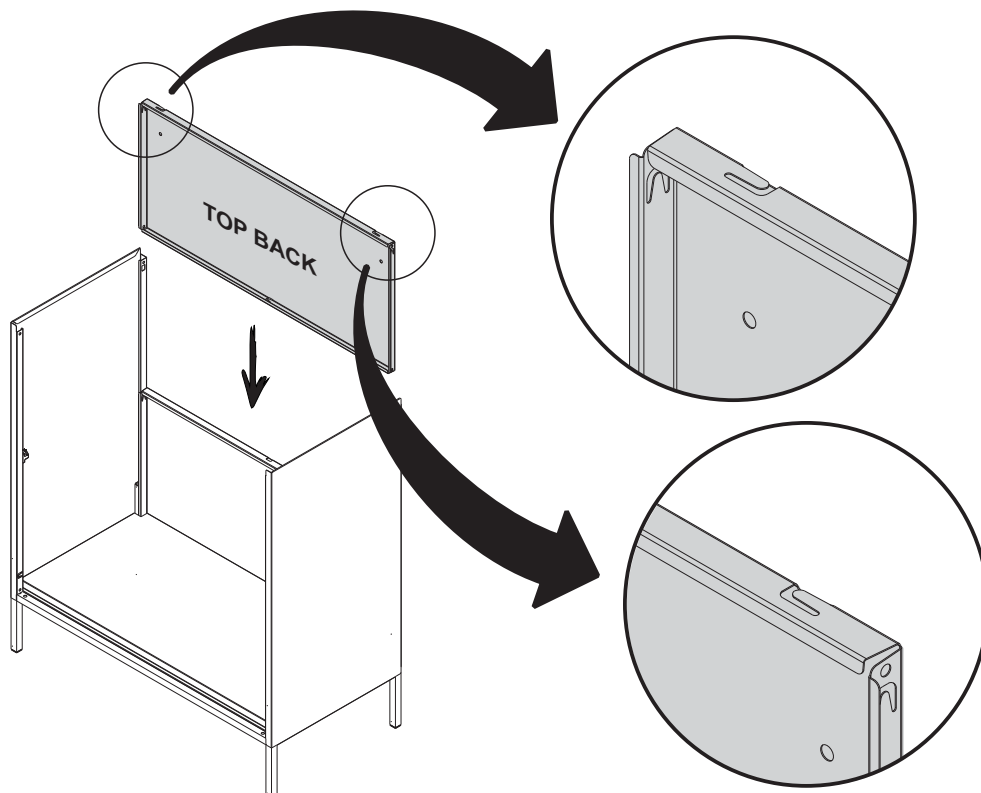


09



1 - With the end of **F3**, smash the safety claw, locking part **BOTTOM BACK** to part **LEFT SIDE**, **RIGHT SIDE** and **BOTTOM BACK**.

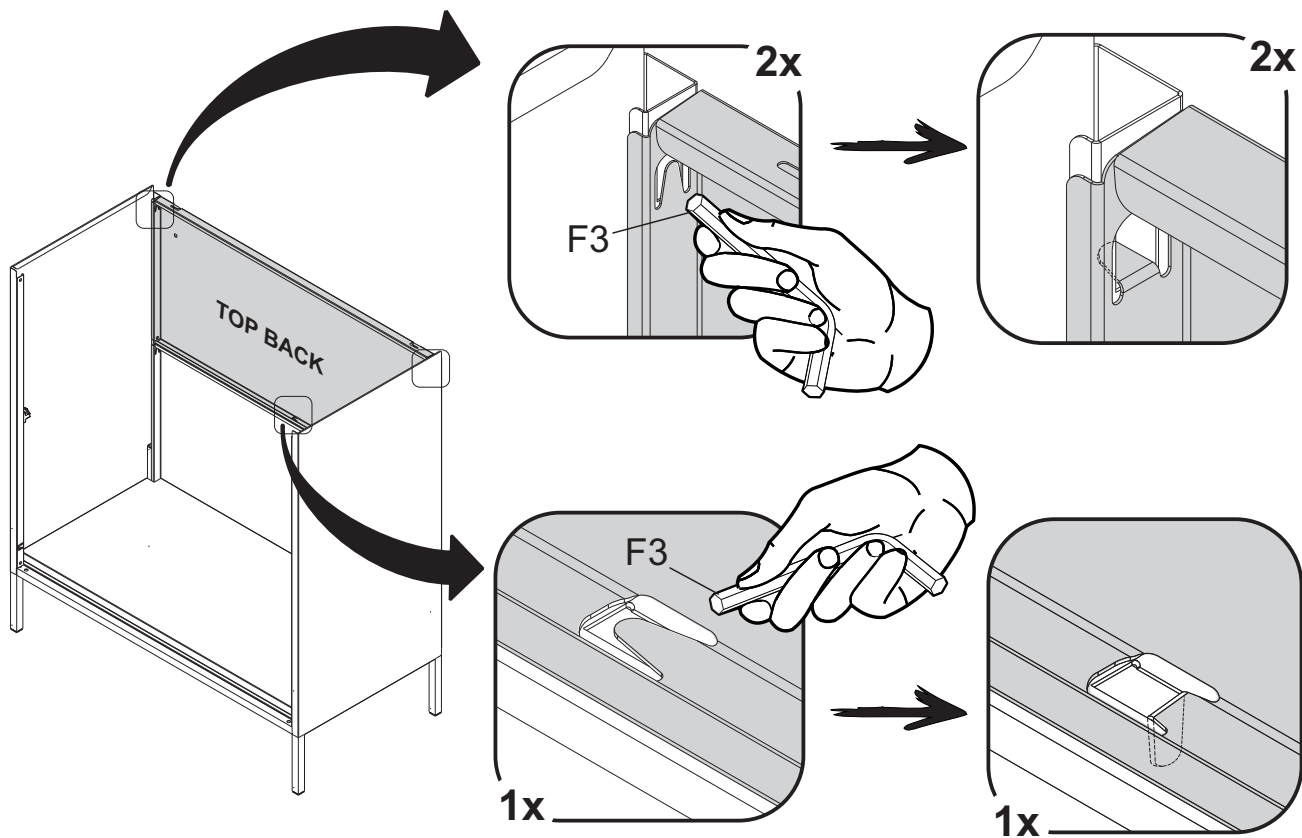





1 - Attach the **CEILING** part on the parts **LEFT SIDE** and **RIGHT SIDE**.

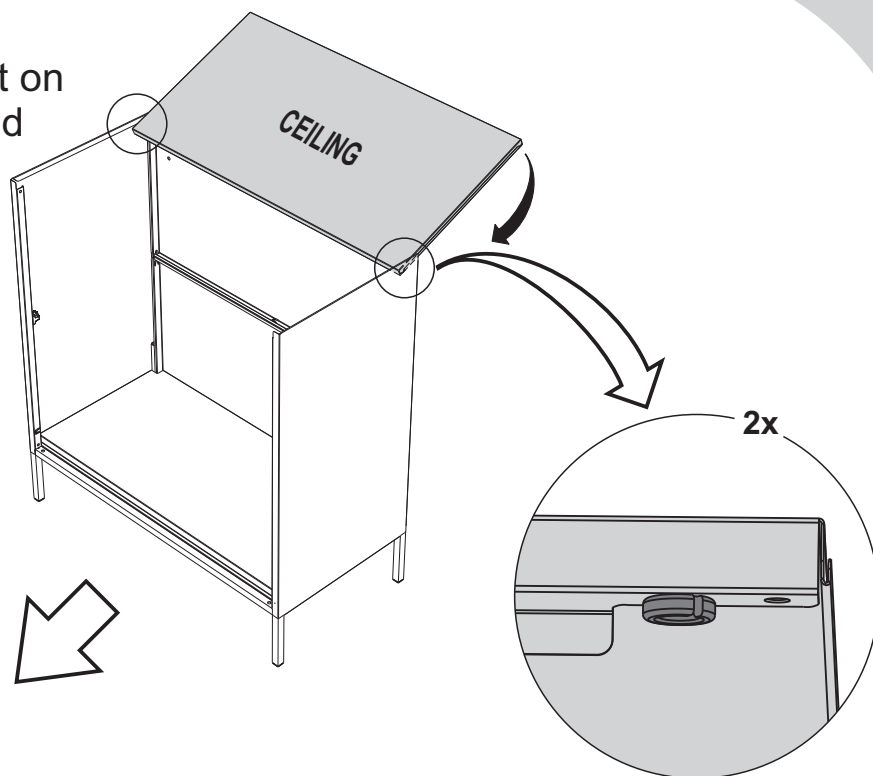

2 - Pull the front of the **CEILING** part.




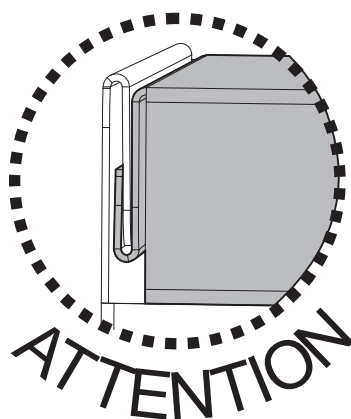
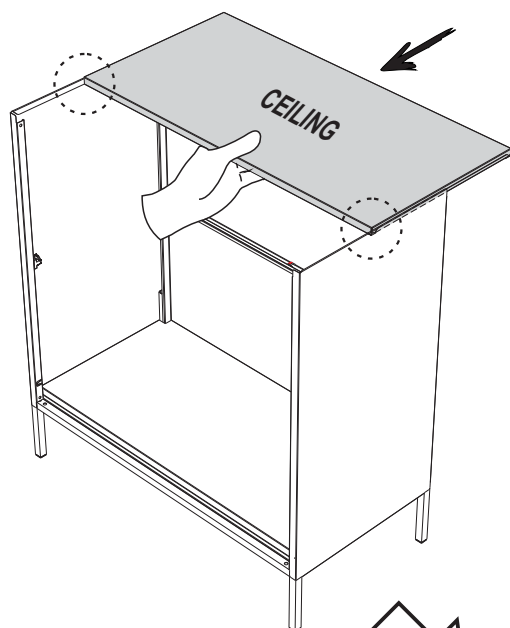


1 - With the end of **F3**, smash the safety claw, locking part **TOP BACK** to part **CEILING**.

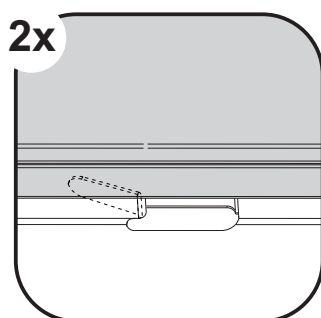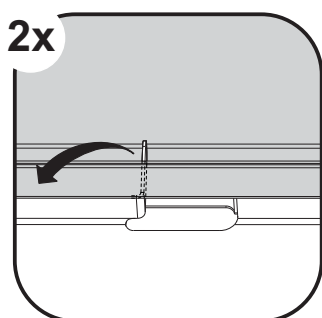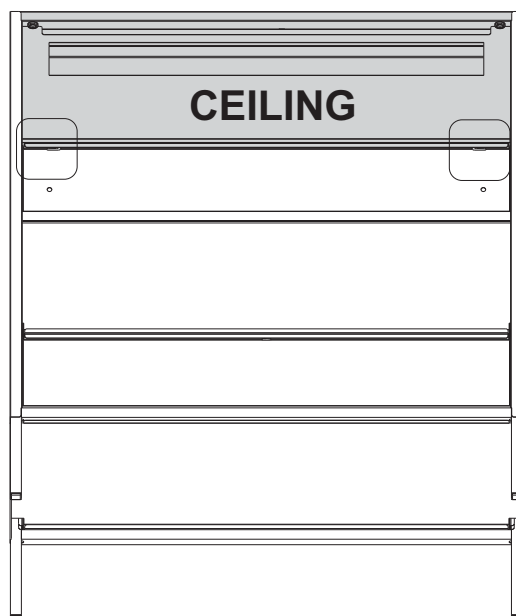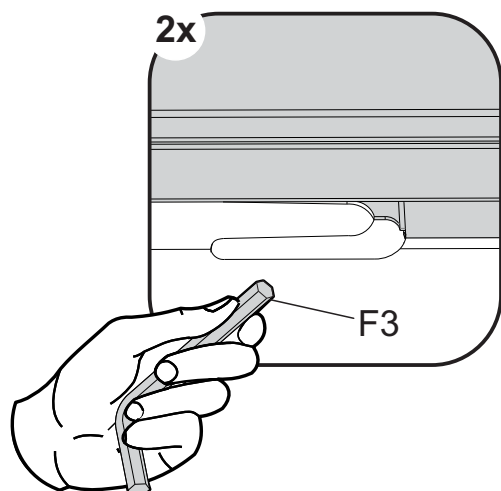

12

1- Slightly turn the **SHELF** part and place it inside the cabinet, as indicated.
2- Check all the fittings before continuing.

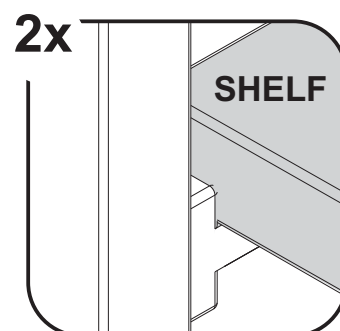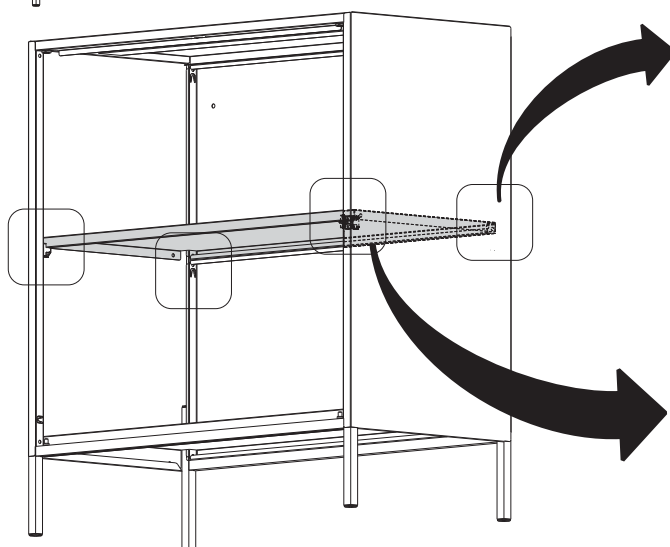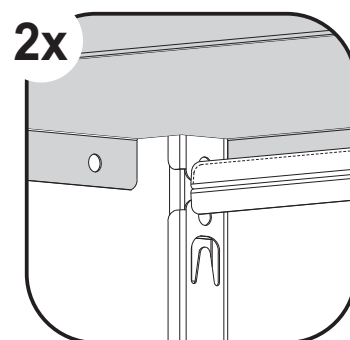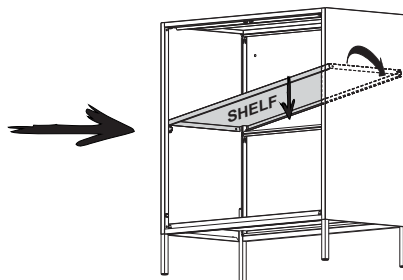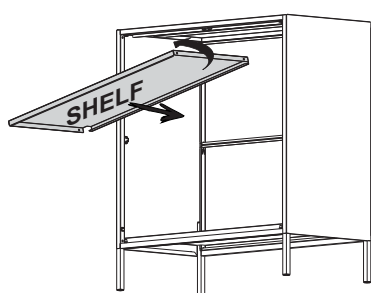


13




IMPORTANT: CABINET MUST BE ATTACHED TO THE WALL


2x

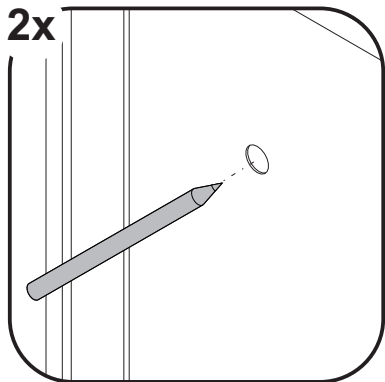


1 - Lay the cabinet against the wall and mark the hole.

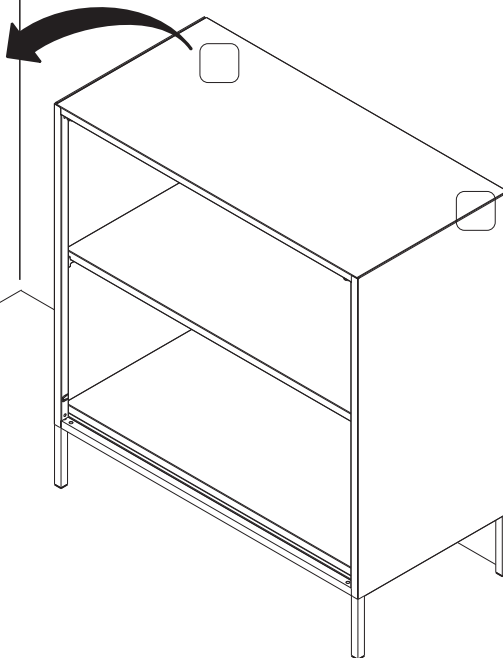

14

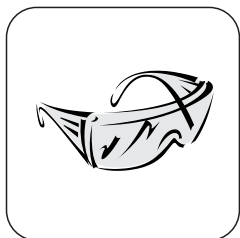


1 - Drill the wall on the marked point, using a 1/2" drill bit.

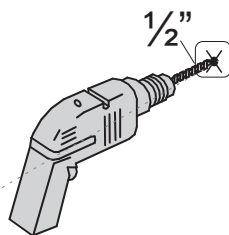

2 - Insert the metal part of the bushing into the hole until it overcomes the wall.

WALL

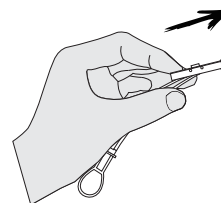

0


F1



2X


15

3 - Pull the bushing driving it against the wall and then push the plastic ring until it leans close to the wall


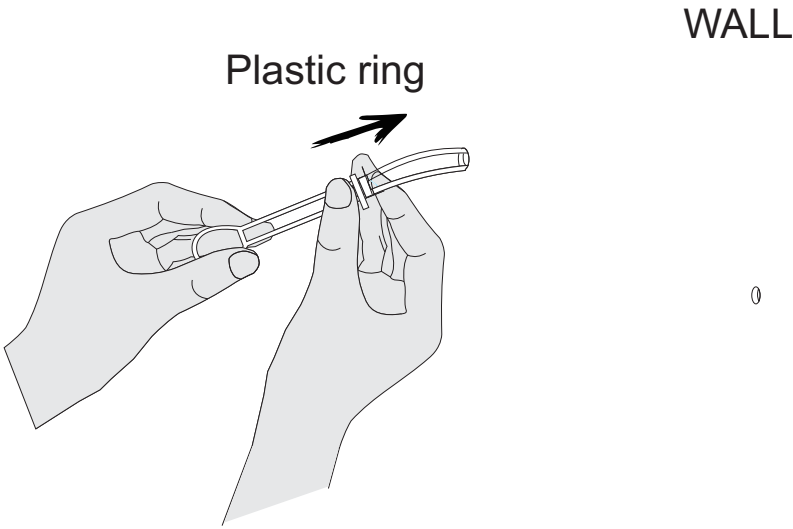


0


4 - Break the bushing's rods

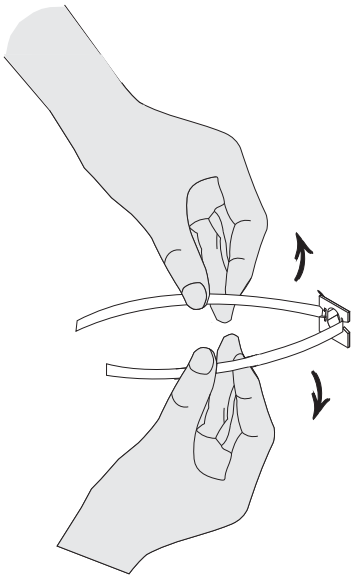

WALL

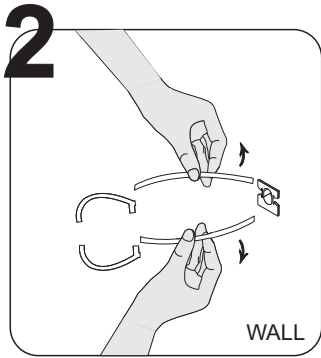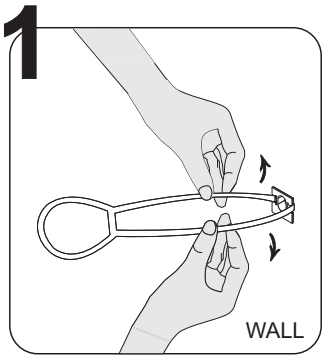


- 1 - Insert the screw **F2** into the hole of part **TOP BACK**.
- 2 - Turn screw **F2** with part **F3** clockwise.
- 3 - Press part **F4** against the heads of the **F2** screws.
- 4 - Attach the **F5** into the **FRAME** part.

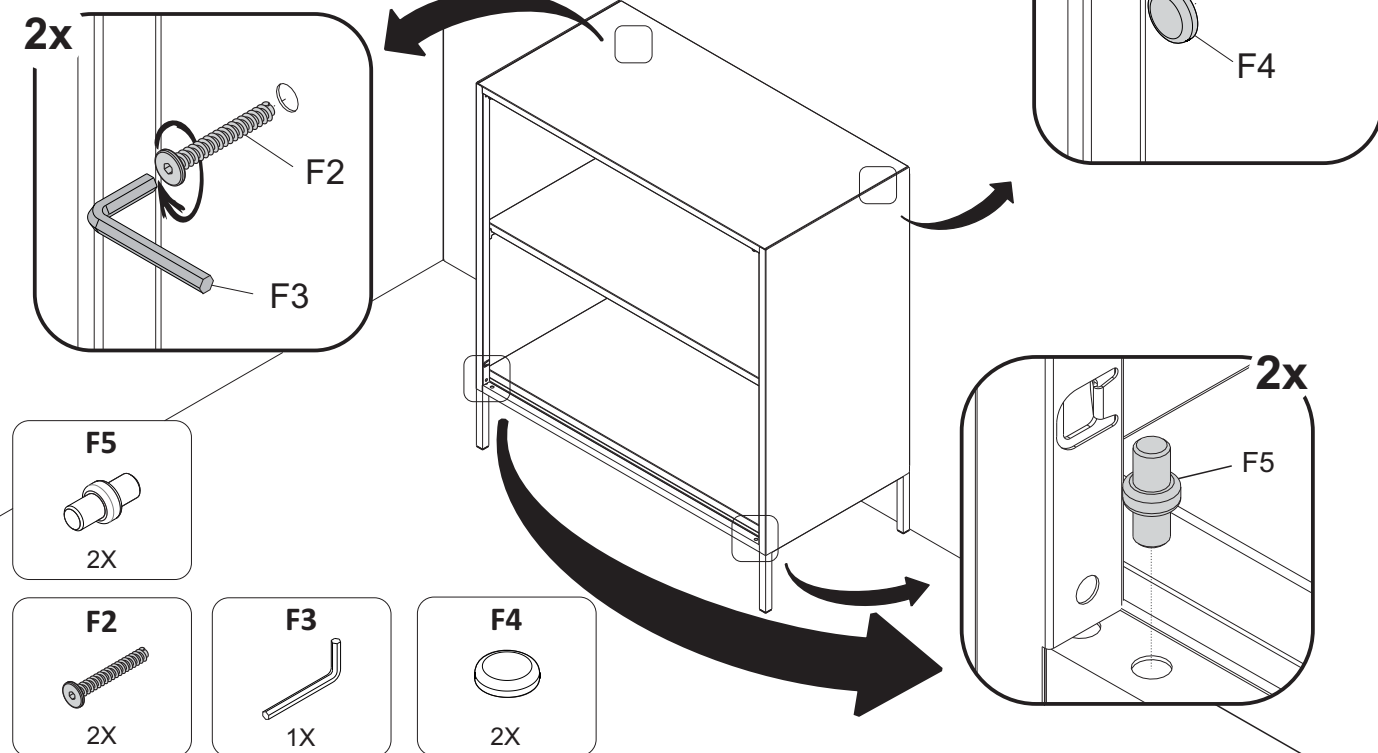


17

- 1 - Attach the **F7** handle to the doors **DOOR LEFT** and **DOOR RIGHT** as indicated below

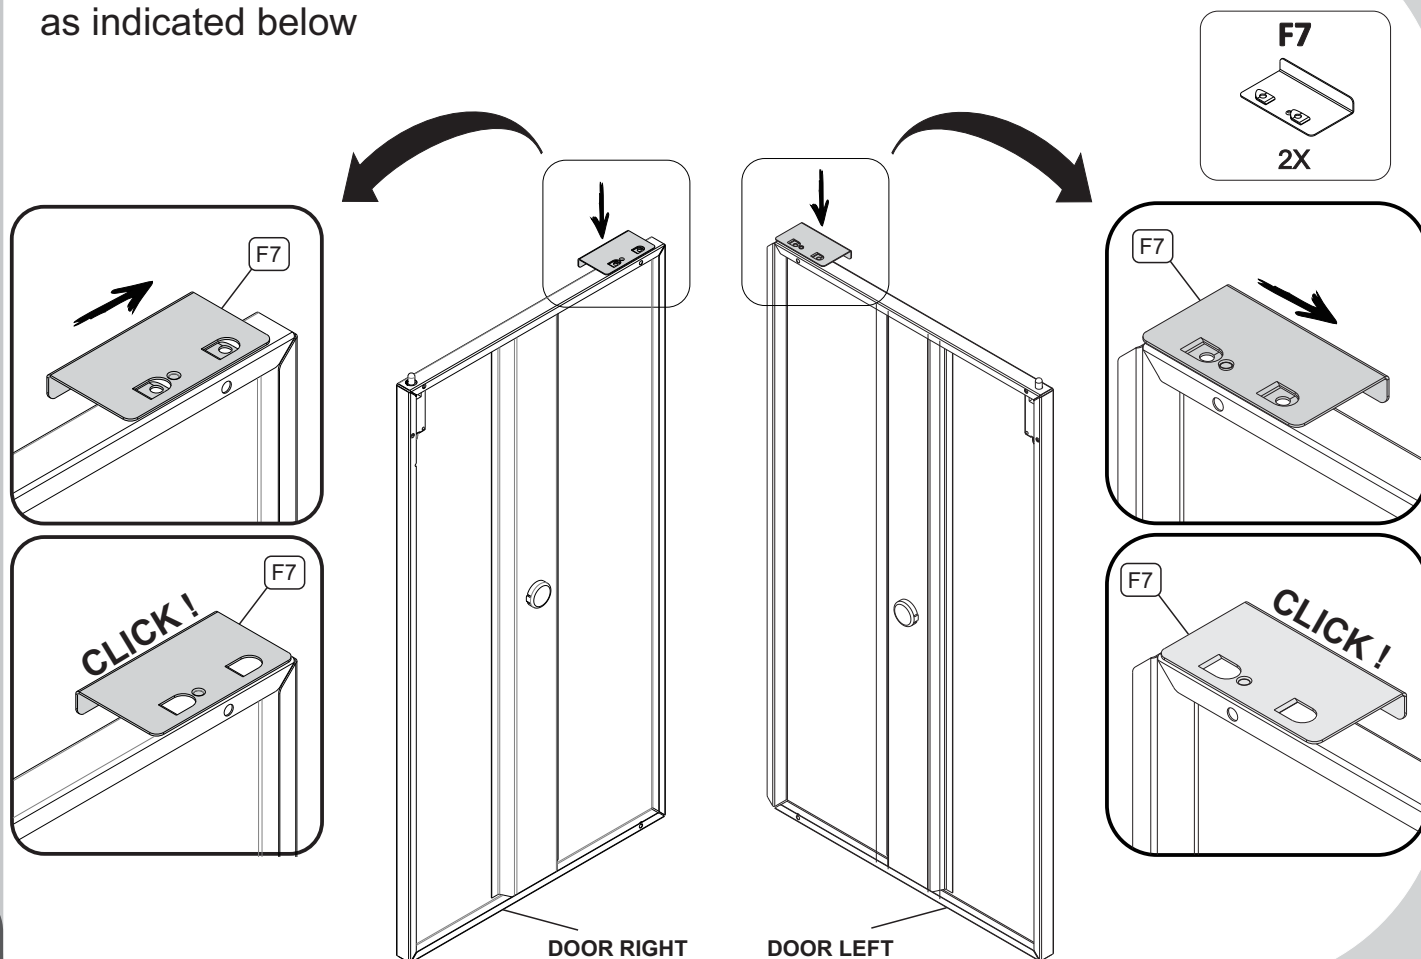


18

- 1 - Attach the **F6** into the **DOOR LEFT** and **DOOR RIGHT** holes.
- 2 - Glue **F8** to part **DOOR RIGHT** in the indicated area..

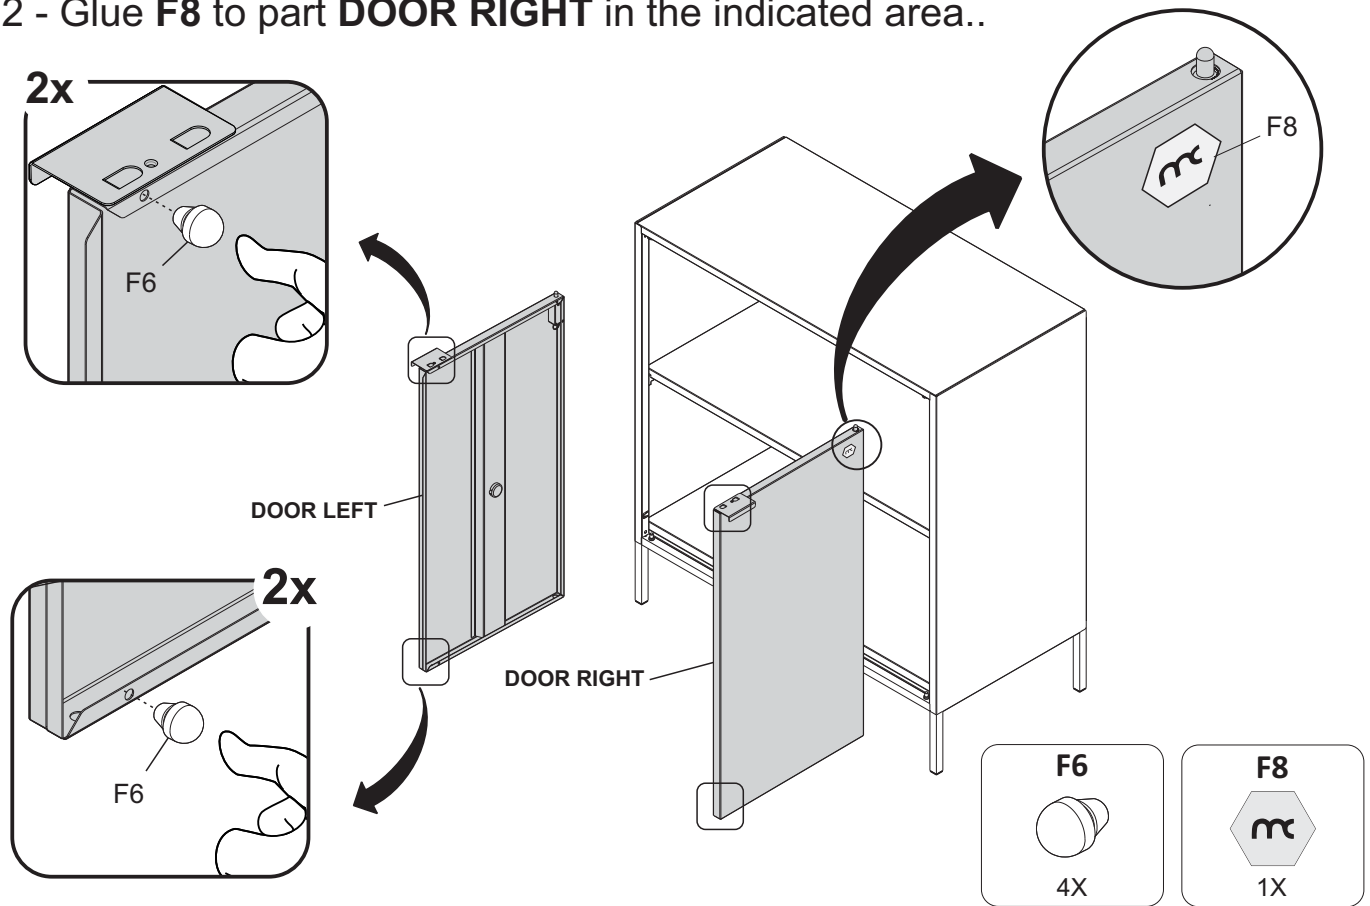

19

- 1 - Attach part **DOOR RIGHT** to the right side of the enclosure on parts **F5** and **FRAME**.
- 2 - Attach part **DOOR LEFT** to the left side of the enclosure on parts **F5** and **FRAME**.

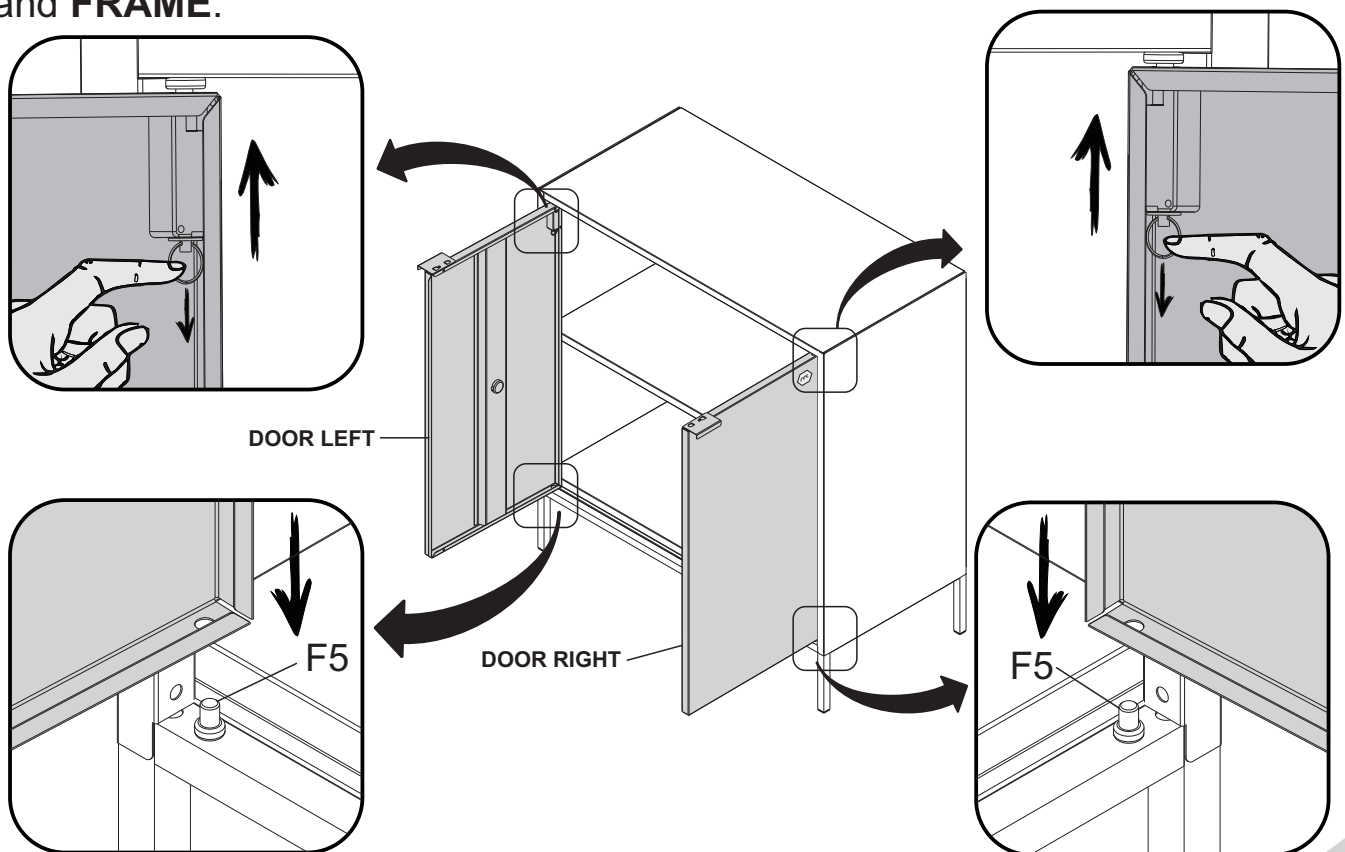

20

TAKING GOOD CARE OF YOUR CABINET

Cleaning and caring instructions:

- Avoid dragging objects on top of the cabinet. They might scratch the finishing.
- Only non-abrasive natural chemical products are recommended to clean your cabinet. Simply wipe the cabinet down with a wet cloth to remove the cleaning product excess.
- Never clean the cabinet with scouring powders, steel scrubber pads or any other product which can scratch its surface.
- Chemical products are not recommended.
- Cabinet surfaces should not be covered with colored plastic or paper sheets.
- Acid substances like salt, onion, ketchup and mustard must remain properly stored in sealed containers.
- Avoid the direct contact of water with other surfaces than the sink, as the humidity can affect the durability of the cabinets.
- Avoid cabinets exposure to direct Sun light. Drapers suggested.
- For technical assistance outside Brazil, please, contact the store where you purchased your product.
- This guidance should be saved for future reference, if necessary.

BEWARE: Do not use a damp cloth to clean the cabinet. Excessive moisture can damage its surface.

ATTENTION

To avoid serious or irreparable damage to the product, follow the instructions carefully.



WARRANTS TERMS

This product has the guarantee for a period of twelve (12) months, this limited warranty is effective from the date of the original consumer purchase. Proof of original purchase date is required to obtain service or replacement under this limited warranty. Once the defect of manufacture has been verified, the consumer should contact the store where he purchased the product. In the warranty period, any defective parts will be replaced free of charge by another of the same line and model. The installation and assembly in the residence of the customer is not the responsibility of the factory or the store. The assembly must correctly follow the instructions inside the packaging of each module.

ITEMS EXCLUDED FROM WARRANTIES

This limited warranty does not cover:

1. In-home service including, but not limited to, service calls to correct the installation of any Manhattan Comfort Smart Diy products or to instruct the consumer on how to use or install them.
2. Damage resulting from improper handling or shipping of products, or products damaged by accident, alteration, misuse, abuse, fire, flood, improper installation, acts of God, neglect, corrosion, modification or mishandling.
3. All travel, transportation, shipping or freight fees to deliver replacement products or to return defective products.
4. Factory specified replacement parts or product replacement when your product is used in other than normal, single-family household use, such as a commercial environment or handled in a manner contrary to published user or operator instructions and/or installation instructions.
5. Aesthetic damages including scratches, dings, dents or cracks that do not affect the structural or functional capability of the product.
6. Any labor costs during the limited warranty period.
7. Damage resulting from improper loading beyond the specified maximum weight capacity outlined in the assembly instructions provided with the product including overloading of hooks, baskets, shelves, cabinets, and other Manhattan Comfort Smart Diy accessories used with the product.
8. Surfaces damaged due to chemical interaction resulting in corrosion of paint or metal.

The cost of repair or replacement under these excluded circumstances shall be borne by the customer.

DISCLAIMER OF IMPLIED WARRANTY

Implied warranties, including any implied warranty of merchantability or implied warrant of fitness for a particular purpose, are limited to one year or shortest period allowed by law.

LIMITATION OF REMEDIES; EXCLUSION OF INCIDENTAL AND CONSEQUENTIAL DAMAGES

Your sole and exclusive remedy under this limited warranty shall be product repair as provided herein. Manhattan Comfort Smart Diy shall not be liable for incidental or consequential damages.