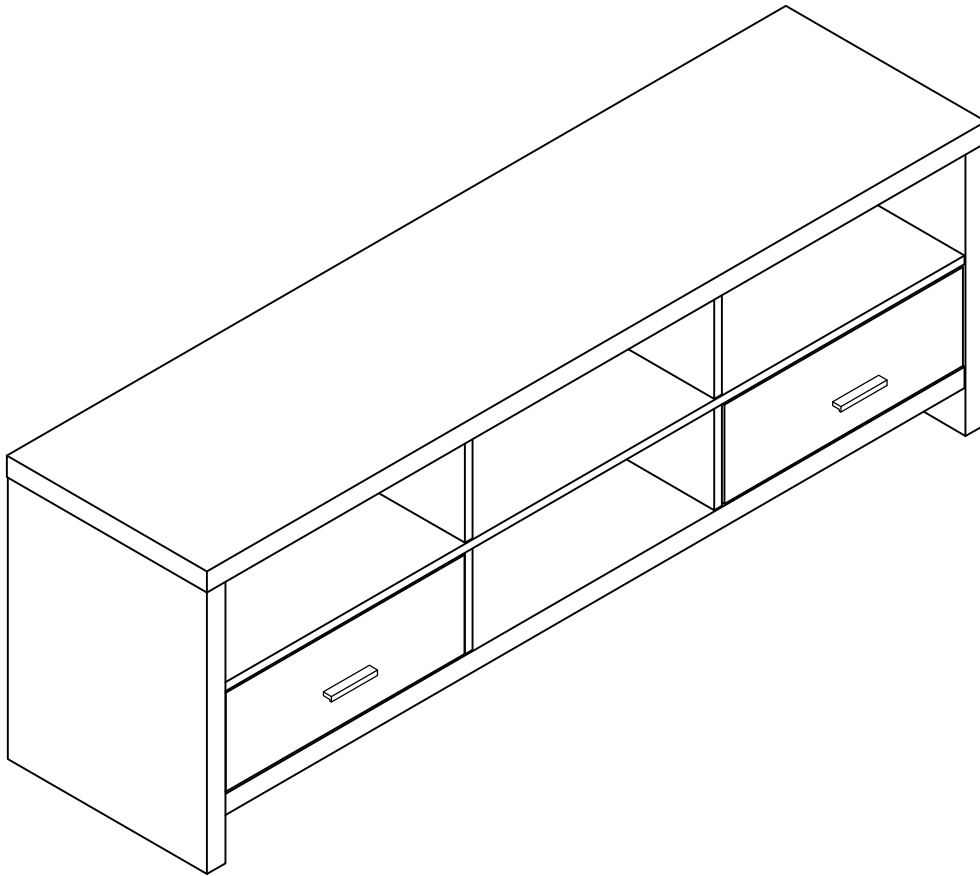


CONVENIENCE CONCEPTS

KEY WEST 60"TV STAND

131124WW 131124ES



Assembly instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish.

Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.



Please do not return to the store

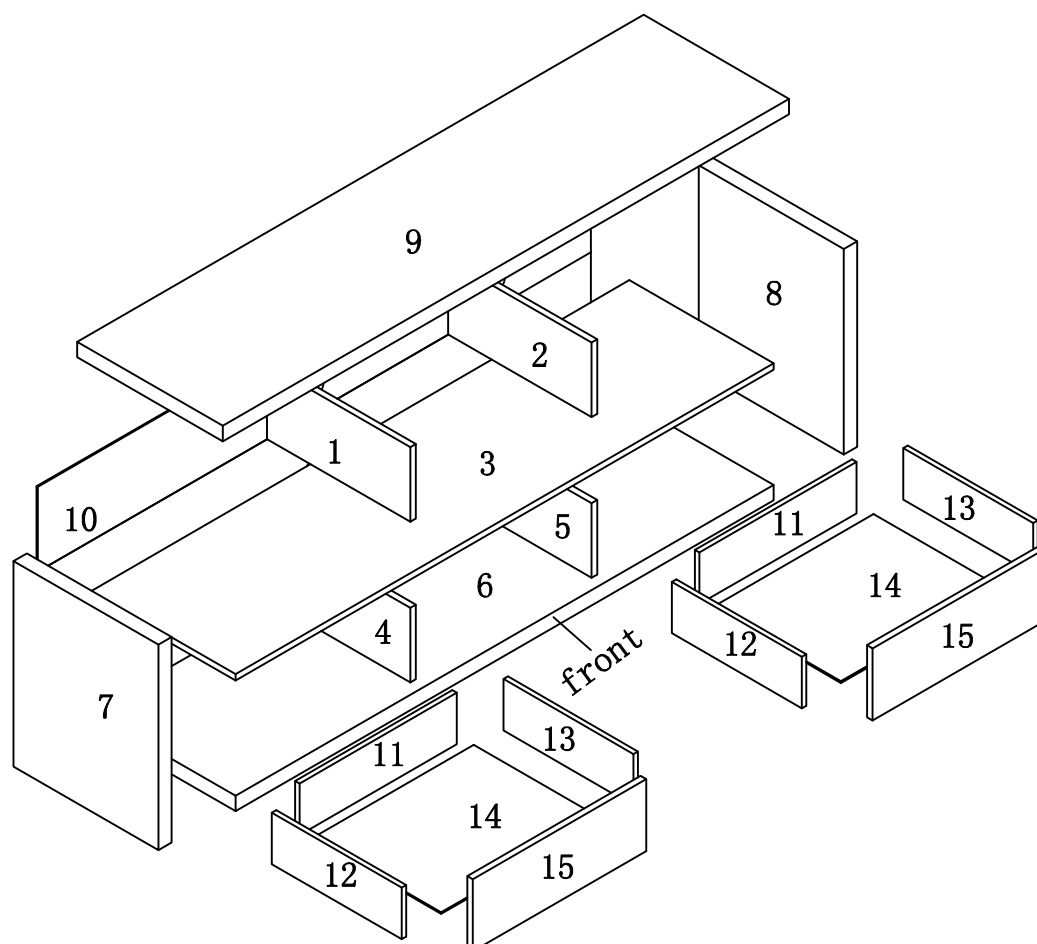
Broken or missing Hardware?

Need help with Assembly?

If you have any questions just call 1-800-468-6447 or email us at
parts@convenience-concepts.com

PARTS IDENTIFICATION

ITEM#:131124WW 131124ES









Please count and verify all parts befort assembly

1.Left upper support	(1pc)
2.Right upper support	(1pc)
3.Shelf	(1pc)
4.Left lower support	(1pc)
5.Right lower support	(1pc)
6.Base panel	(1pc)
7.Left side panel	(1pc)
8.Right side panel	(1pc)






9.Top panel	(1pc)
10.Back panel	(1pcs)
11.Drawer back panel	(2pcs)
12.Drawer left side panel	(2pcs)
13.Drawer right side panel	(2pcs)
14.Drawer base	(2pcs)
15.Drawer front	(2pcs)

HARDWARE IDENTIFICATION

ITEM#:131124WW 131124ES

A		Medium self tapping screw	ø4 x 30	12pcs
B		Large cambolt	L29	20pcs
C		Large camlock	ø15	20pcs
D		Dowel	ø8 x 25	14pcs
E		Large self tapping screw	ø4 x 50	4pcs
F		Small cambolt	L20	8pcs
G		Small camlock	ø12	8pcs
H		Handle	#96	2pcs
I		Handle screw	M4x22	4pcs
J		Small self tapping screw	ø4 x 16	4pcs
K		Foot pin	ø16	4pcs
L		Nail		30pcs
M		Sticker	ø18	12pcs
N		Metal leg	80x25x82	2pcs
O		Glue	Glue: For securing please apply to wood dowel first before inserting into panel.	1pc

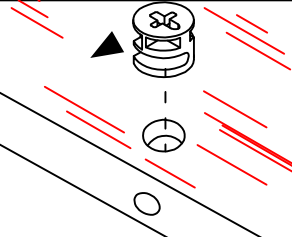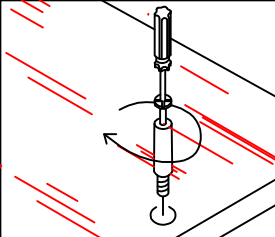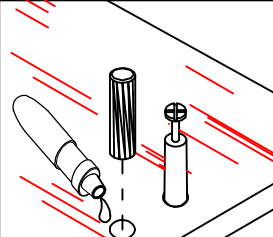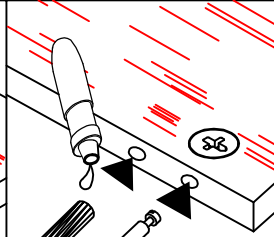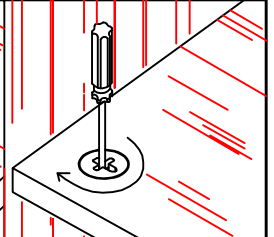
Assembling the unit with camlocks and wood dowels.

				
Insert camlock, camlock must face bolt hole	Gently screw cam bolt into the threaded anchor	lightly glue one end of wood dowel and tap into hole.	lightly glue dowel and connect to second panel by inserting dowels into holes	Gently turn the cam clockwise into locked position. Do not overtighten.

Step1

1. Insert **medium** self tapping screw (A) through left and right side panel (12,13) into drawer back (11) and gently tighten them.

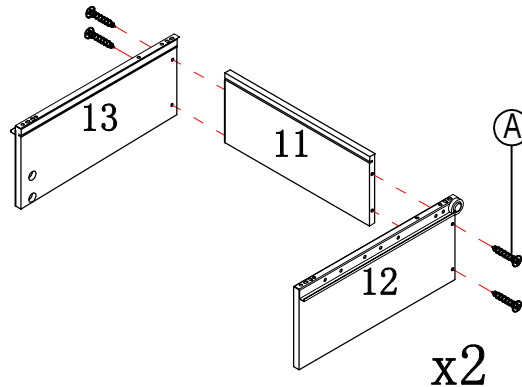
2. Repeat for second drawer.



Step2

1. Insert drawer base (14) into the grooves of left and right side panel (12,13).

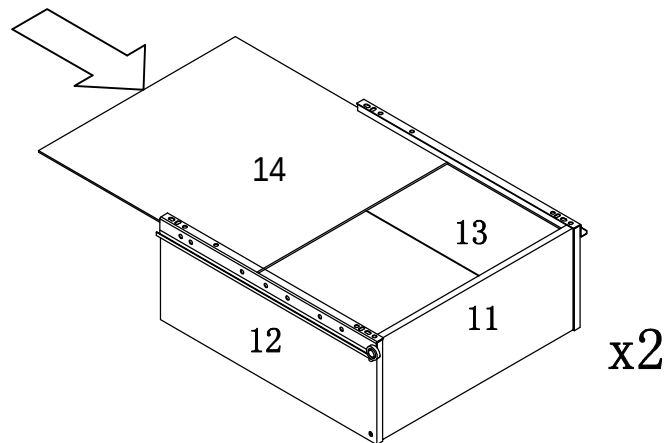2. Repeat for second drawer.




Step3

1. Attach handle (H) to drawer front using handle screws (I).

2. Attach all camlocks/cambolts to pieces as shown. Refer to page 3 for camlock usage instructions.

3. Attach drawer front (15) to assembly and gently tighten camlocks.

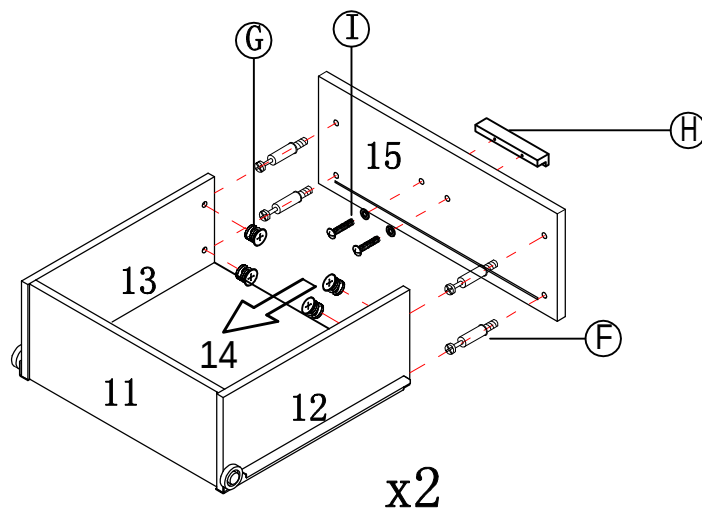
4. Repeat for second drawer.



Step4


PAGE: 5 of 7

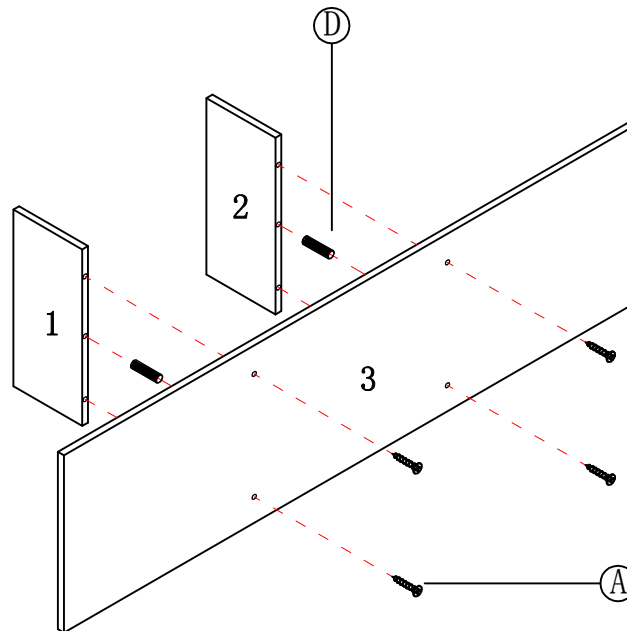1. Insert dowels (D) into shelf (3). Attach upper support (1, 2) to shelf (3).
2. Secure unit using large self tapping screws (E) as shown.



Step5

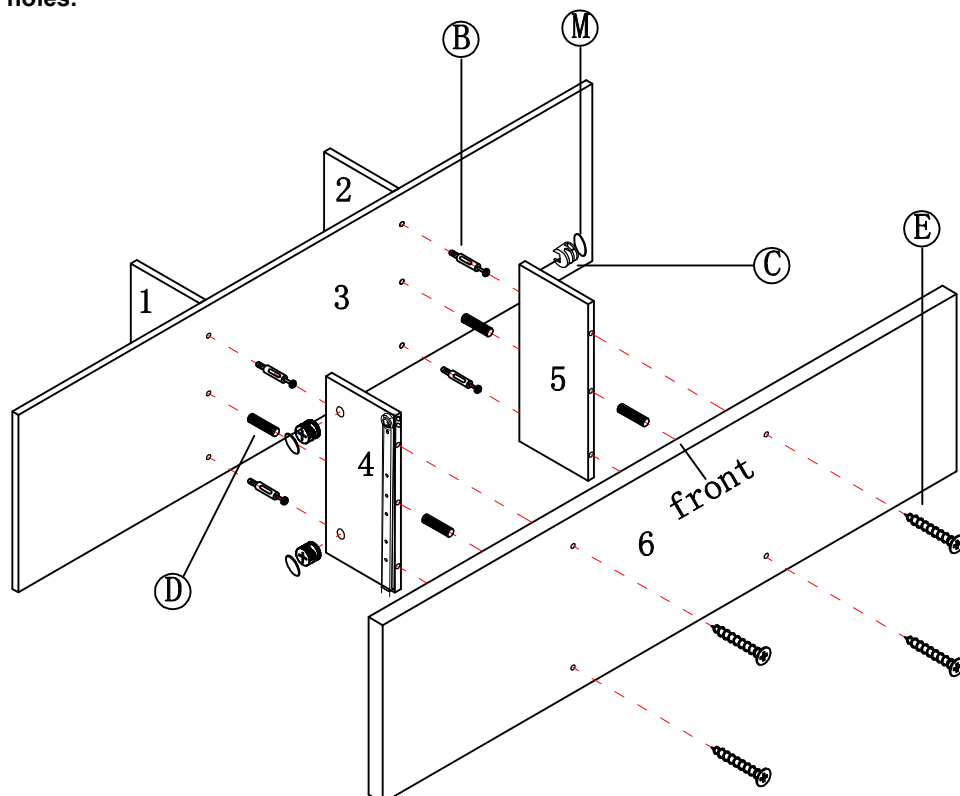
1. Screw Large Cambolts(B) and insert Dowels (D) into bottom of shelf(3).
2. Attach lower supports (4&5) to assembly, gently tighten camlock s.
3. Attach base panel (6) to assembly with large screws (E).
4. Place stickers over holes.



Step6


PAGE: 6 of 7

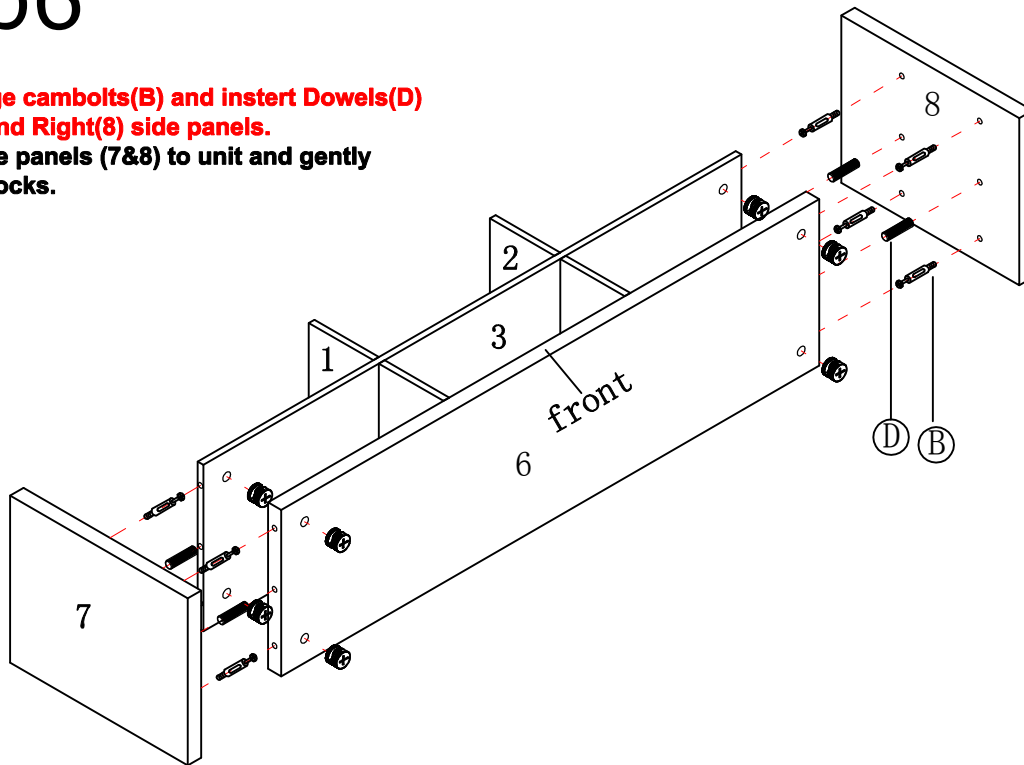- 1.Screw Large cambolts(B) and instert Dowels(D) into Left (7)and Right(8) side panels.
2. Attach side panels (7&8) to unit and gently tighten camlocks.



Step7

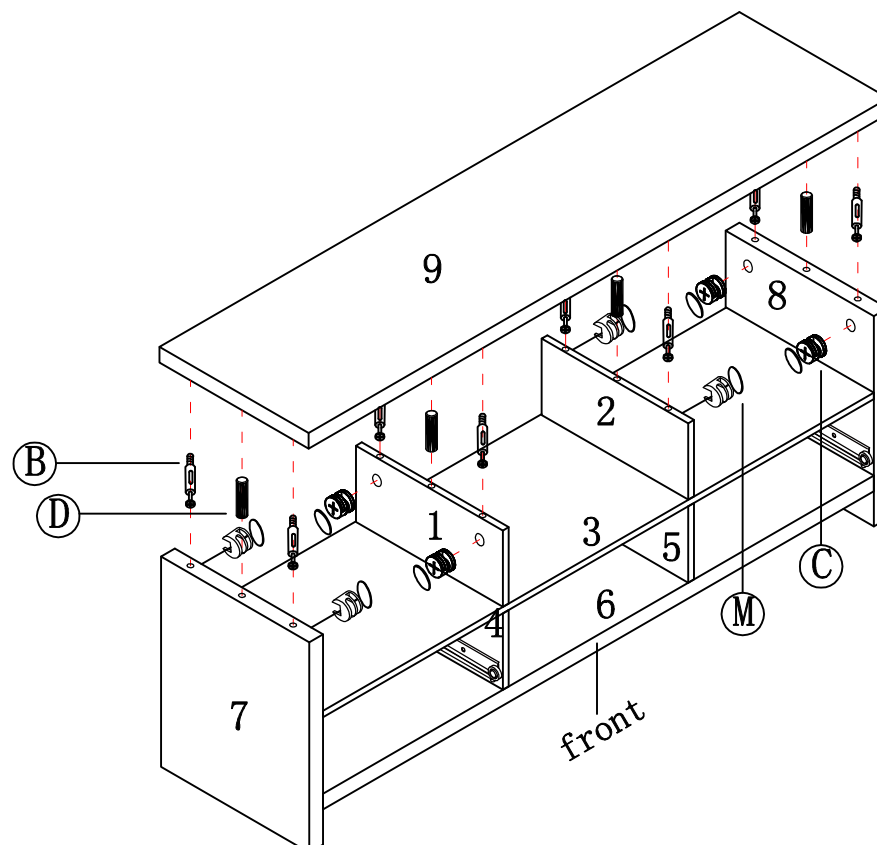
- 1.Screw Large cambolts(B) into top panel(1).
- 2.Insert Dowels (D) and camlocks(C) into panels (1).(2).(7)and (8)as shown.
3. Place top panel (9) onto unit and gently tighten camlocks.



Step8

PAGE: 7 of 7

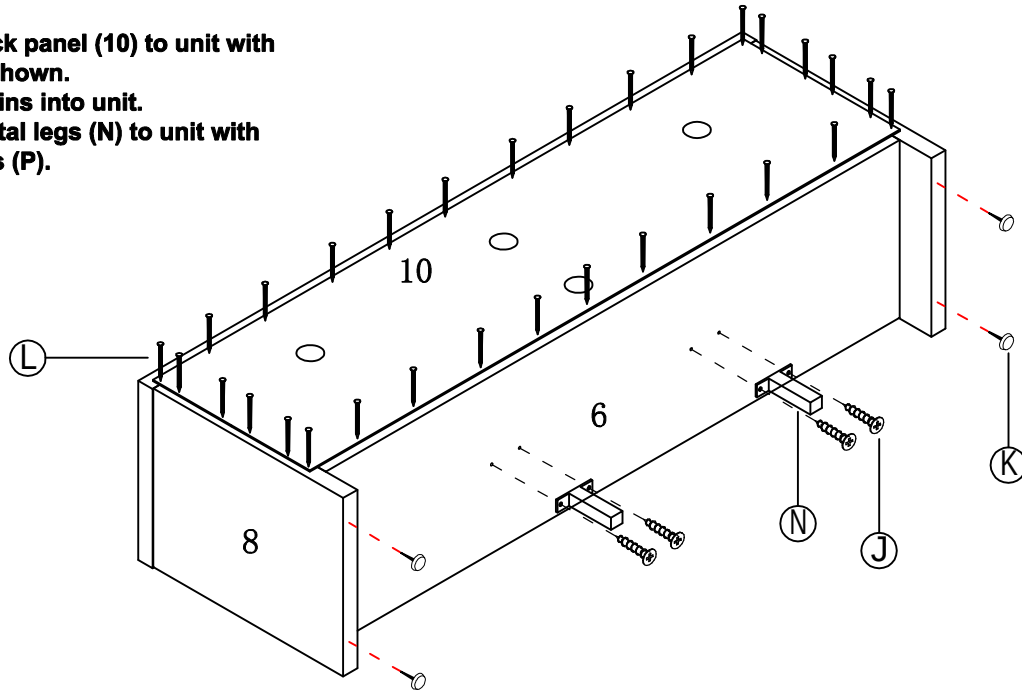1. Attach back panel (10) to unit with **nails** (L) as shown.
2. Tap foot pins into unit.
3. Attach metal legs (N) to unit with small screws (P).



Step9

1. Place the drawers into unit and enjoy!

