

Metal Walk-in Chicken Coop Run

Instruction manual
For specification:2m(L)*3m(W)*2m(H)



Please read this manual carefully before assembly

SAFETY AND CARE ADVICE

PLEASE READ THESE INSTRUCTIONG CAREFULLY AND
KEEP FOR FUTURE REFERENCE

Warning:

Do not fully tighten all screws until the step or process has finished.

Check you have all the components and tools listed.

Remove all fittings from the plastic bags and separate them into their groups.

Keep children and animals away from the work area, small parts could choke if swallowed.

Make sure you have enough space to layout the parts before starting.

Do not stand or put weight on the product, this could cause damage.

Assemble the item as close to its final position (in the same room) as possible.

Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton) .

We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.

Dispose of all packaging carefully and responsibly.

The brown spot on the tube is not corrosion but the residue of passivation fluid which is used to protect the tube. It can be removed easily with hot soapy water but doing so would weaken the tube's corrosion resistance.



1 x2pcs



3 x4pcs



5 x2pcs



D1 x1pcs



D2 x1pcs



2 x5pcs



4 x4pcs



6 x1pcs



D3 x2pcs



D4 x1pcs




D5 x1pcs



D6 x1pcs



D7 x1pcs

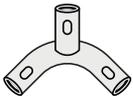

A x6pcs




C x4pcs



D x1pcs



E x1pcs

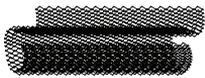

F 24mx1



H x10pcs



I x2pcs




J x1pcs Roof



K x8pcs



D8 x1pcs

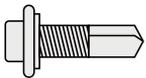

L x10pcs



M x7pcs



N x100pcs




O x22pcs





P x1pcs



Step 1

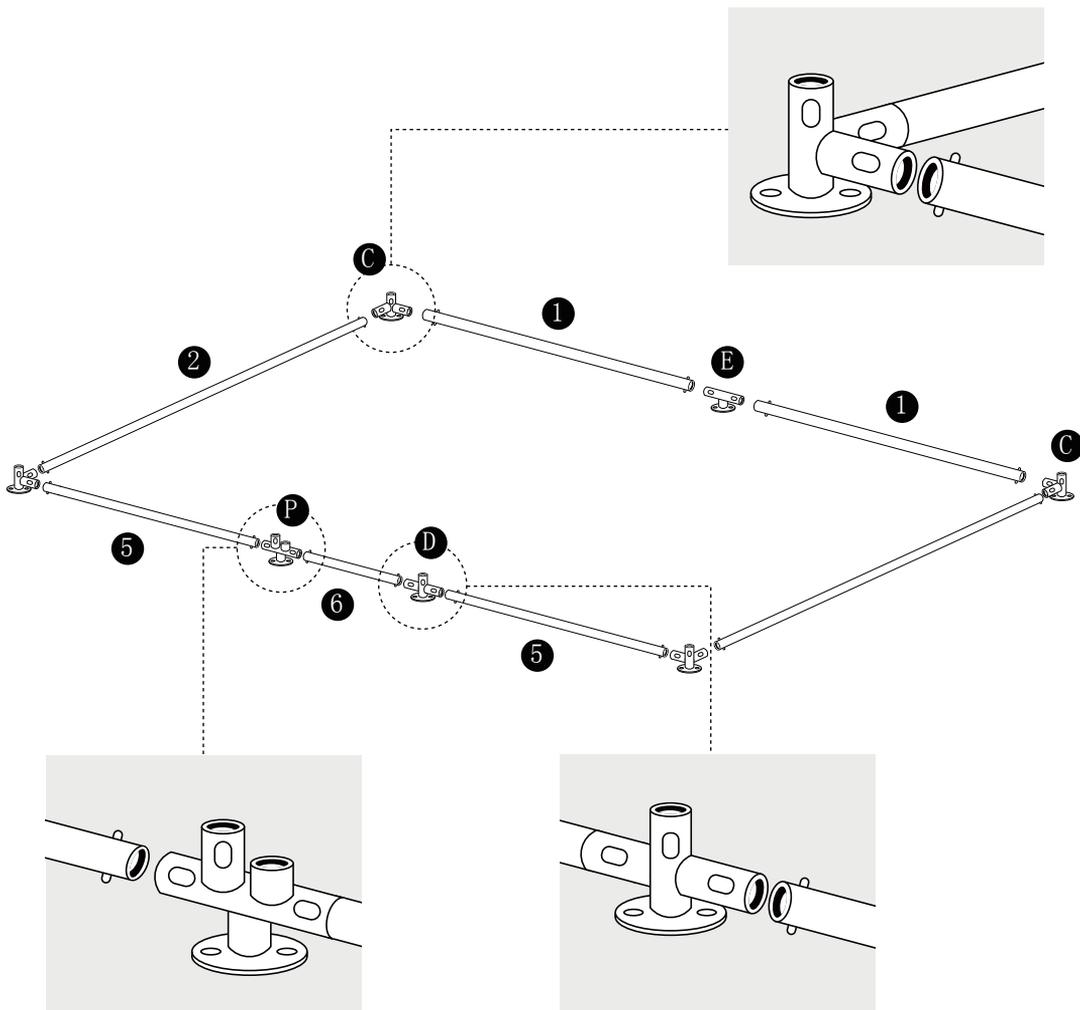



Step 2

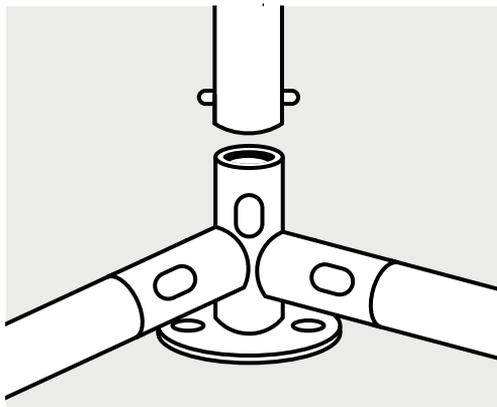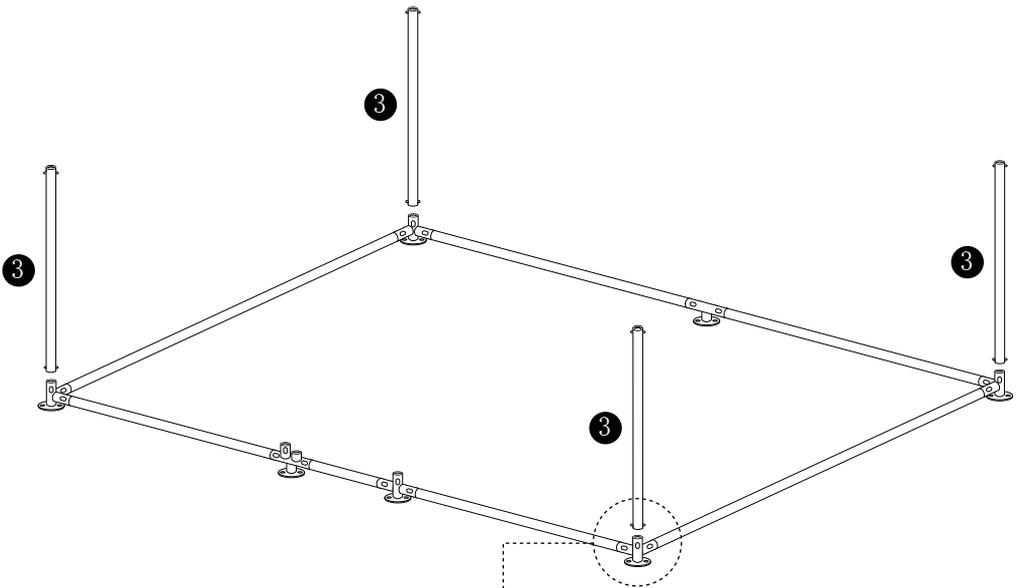





Step 3

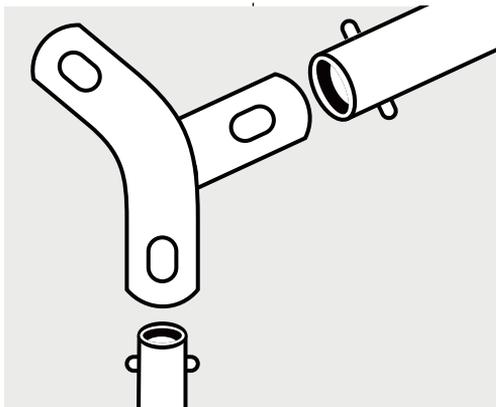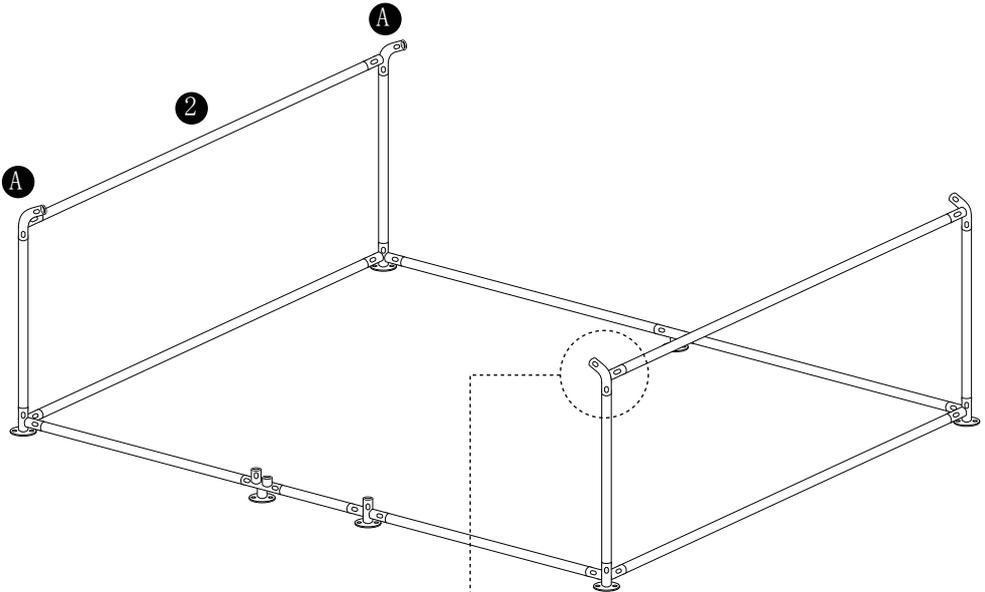


Step 4

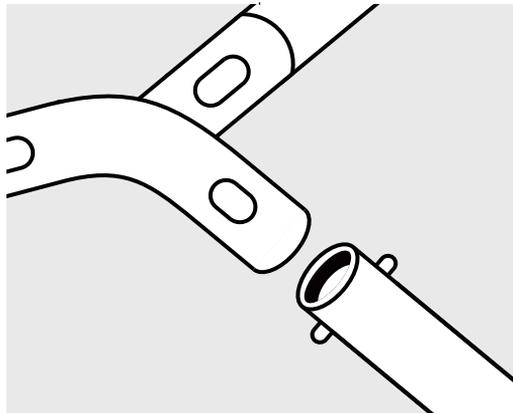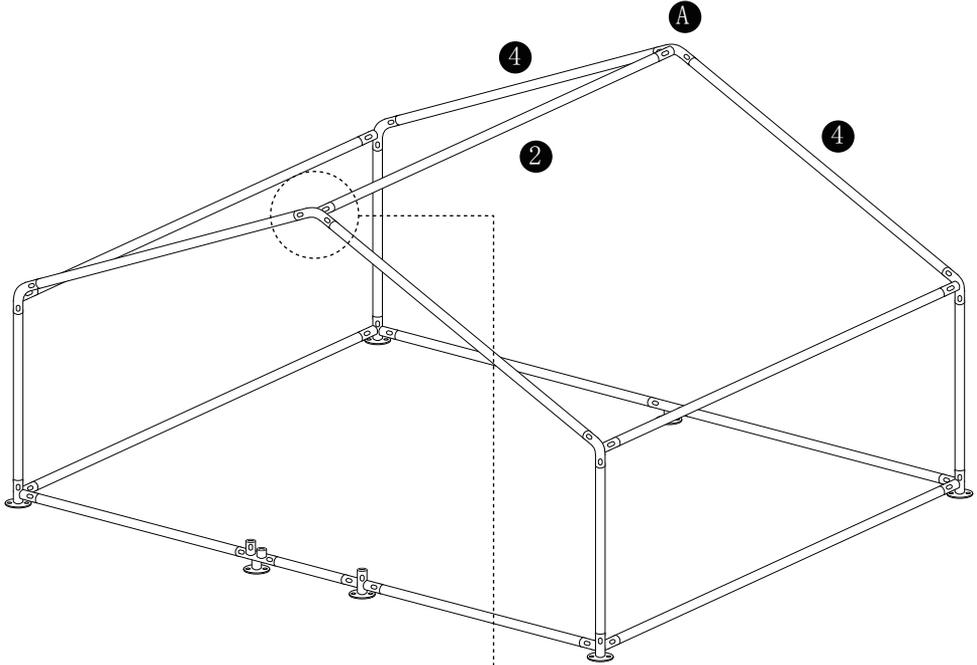



Step 5

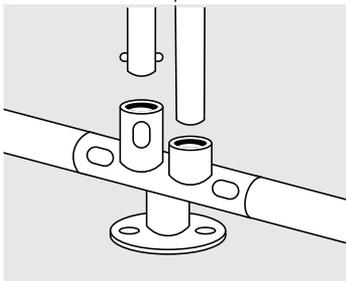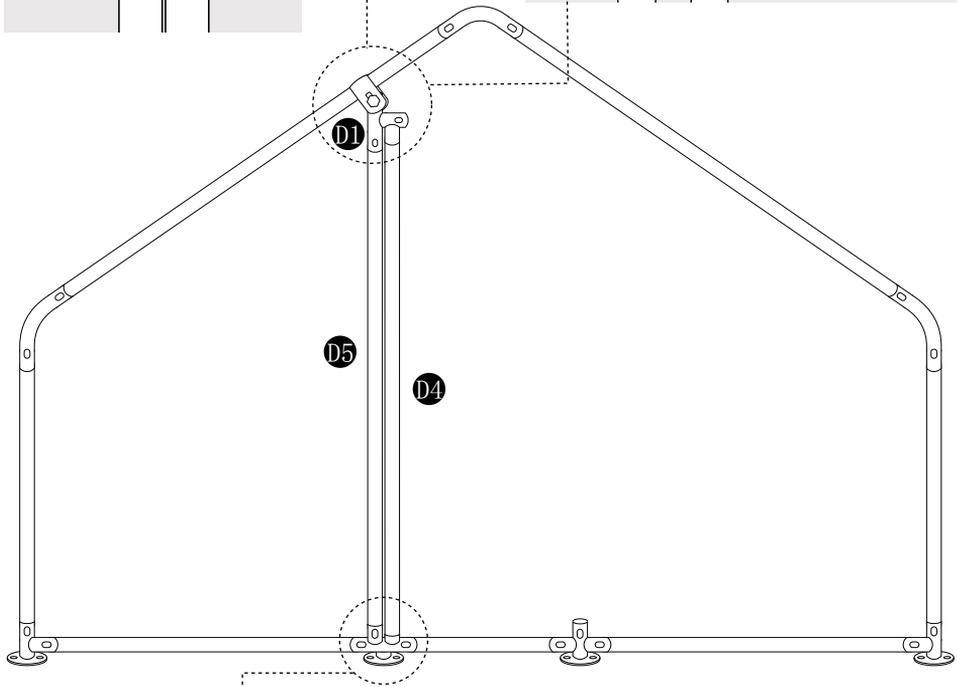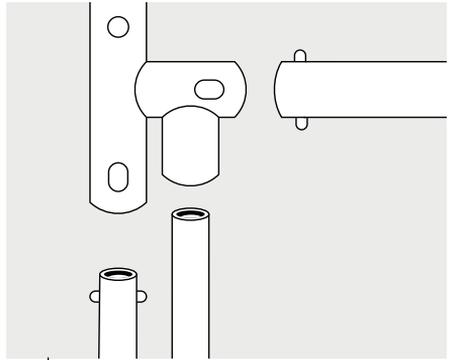
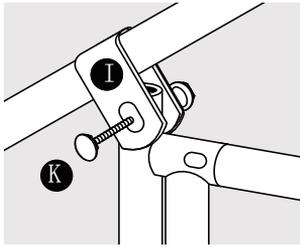


Step 6

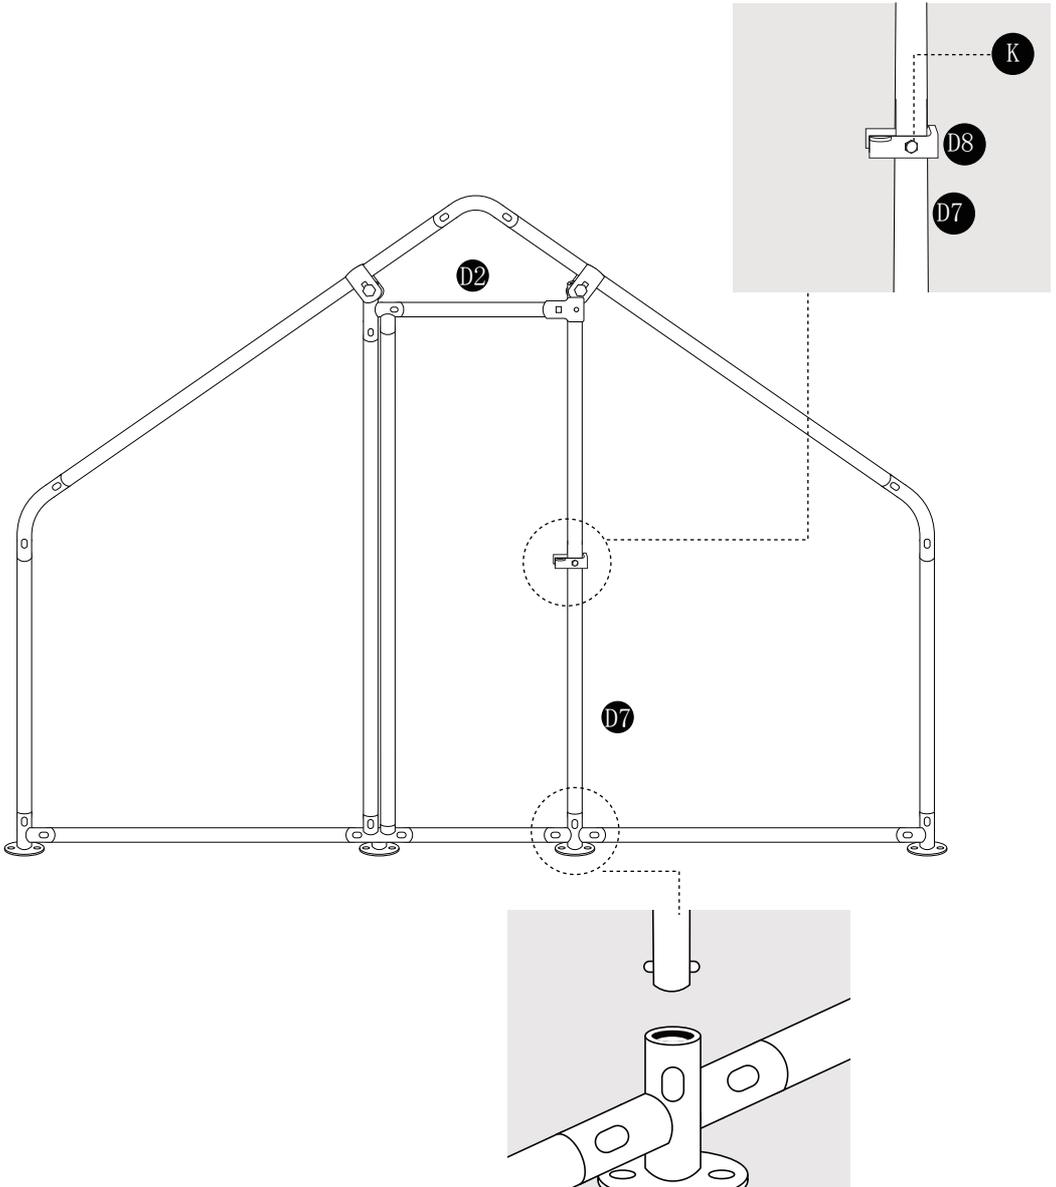

Step 7


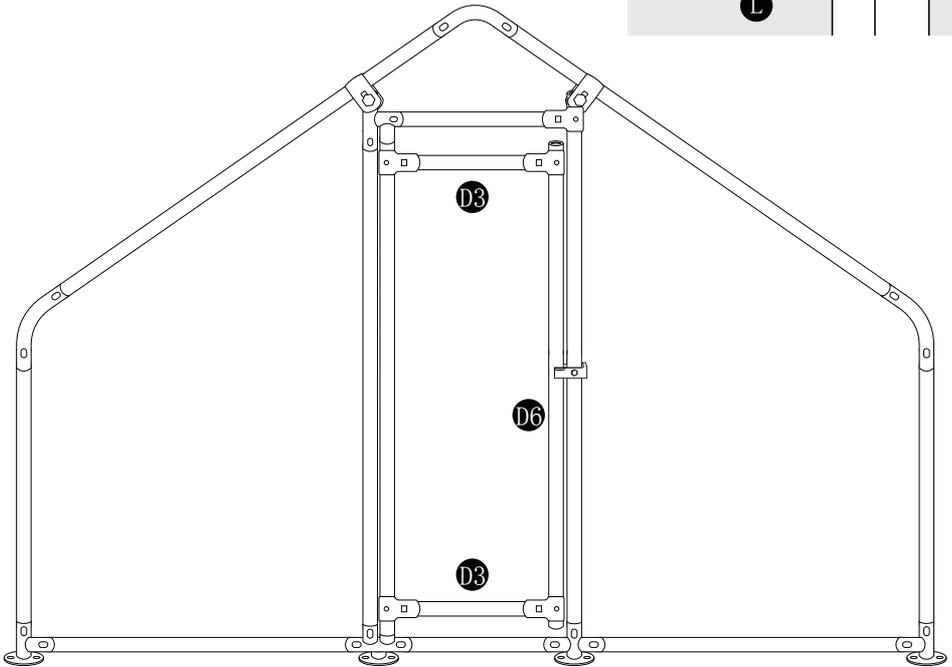
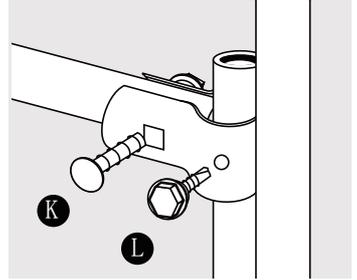


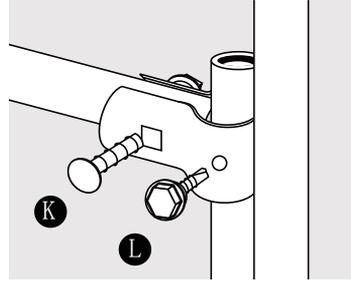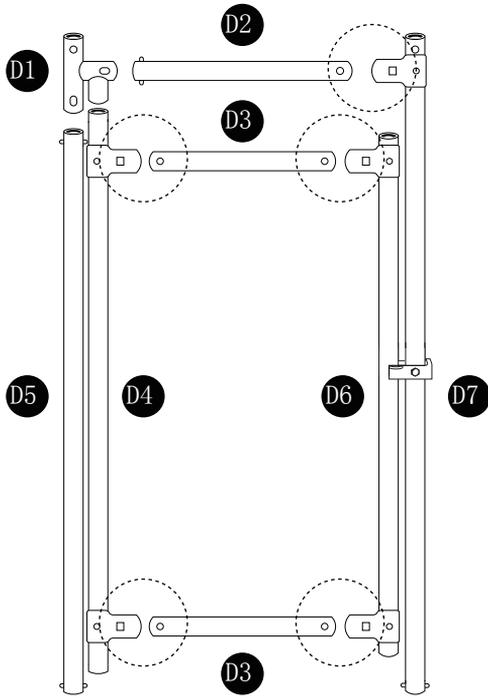

Step 8

NO PRE-CUT!


Cover around the house, then cut off finally

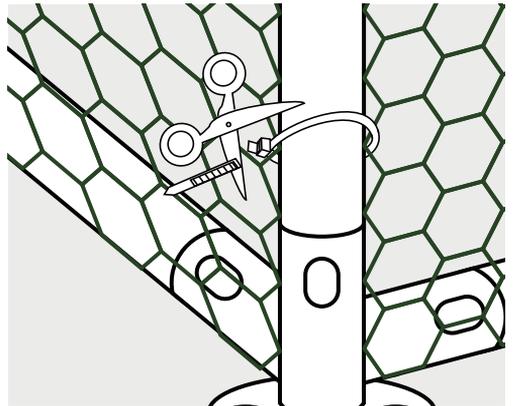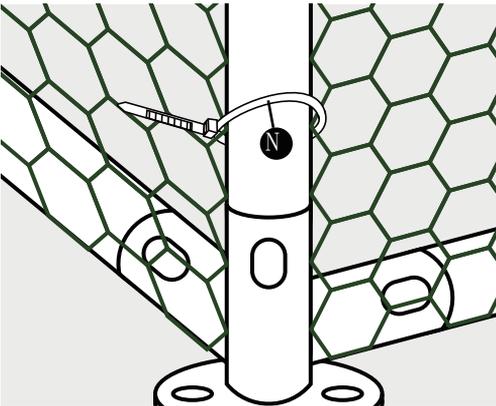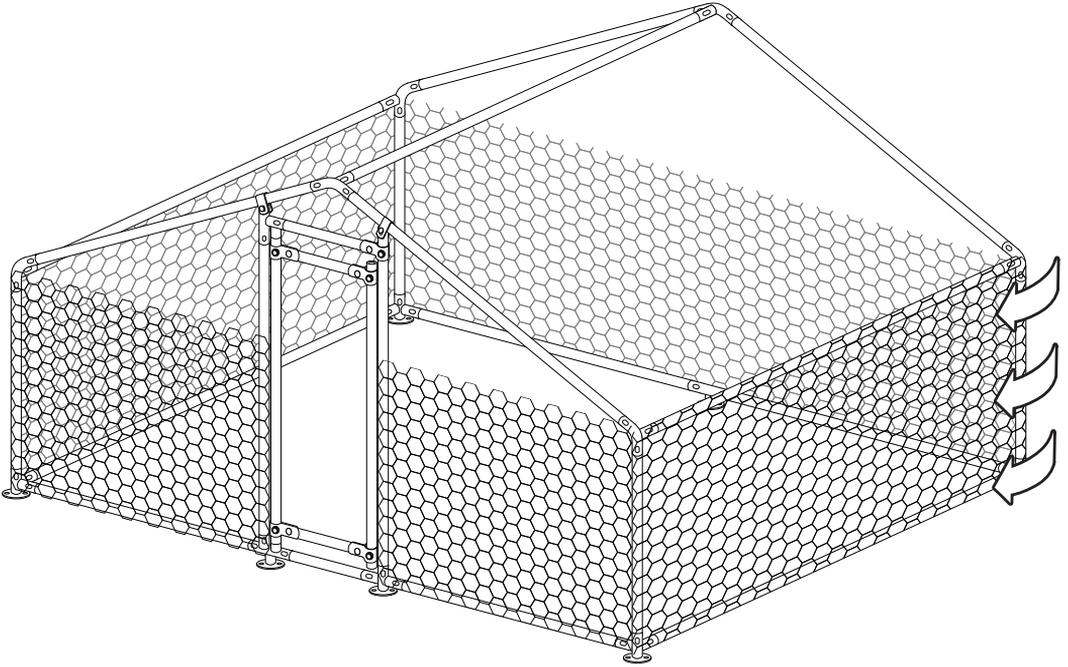

Step 9


NO PRE-CUT!

Cover the top, finally cut off

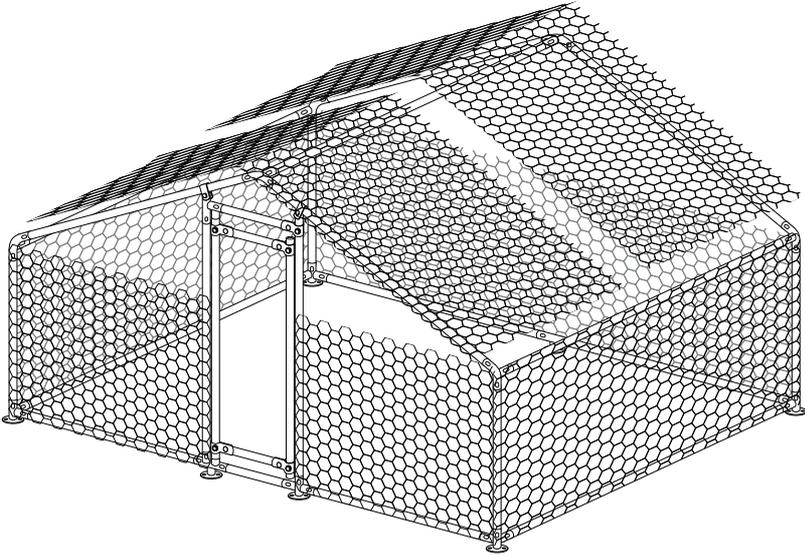


Step 10

Measure the Δ parts of front and back sides,
Pre-cut the wire mesh for covering

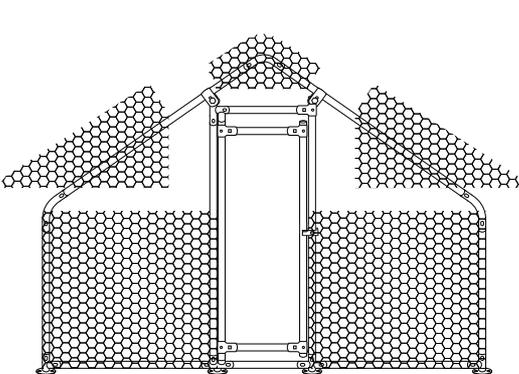

(Front)

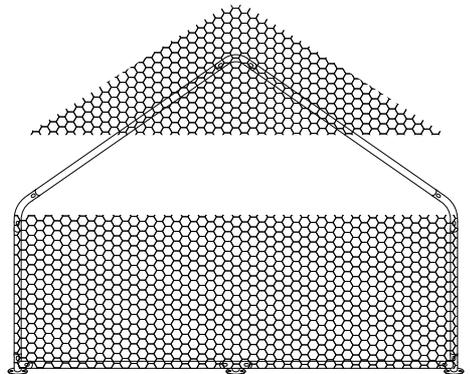


(Back)



Step 11

Measure the door size

Pre-cut the wire mesh for covering

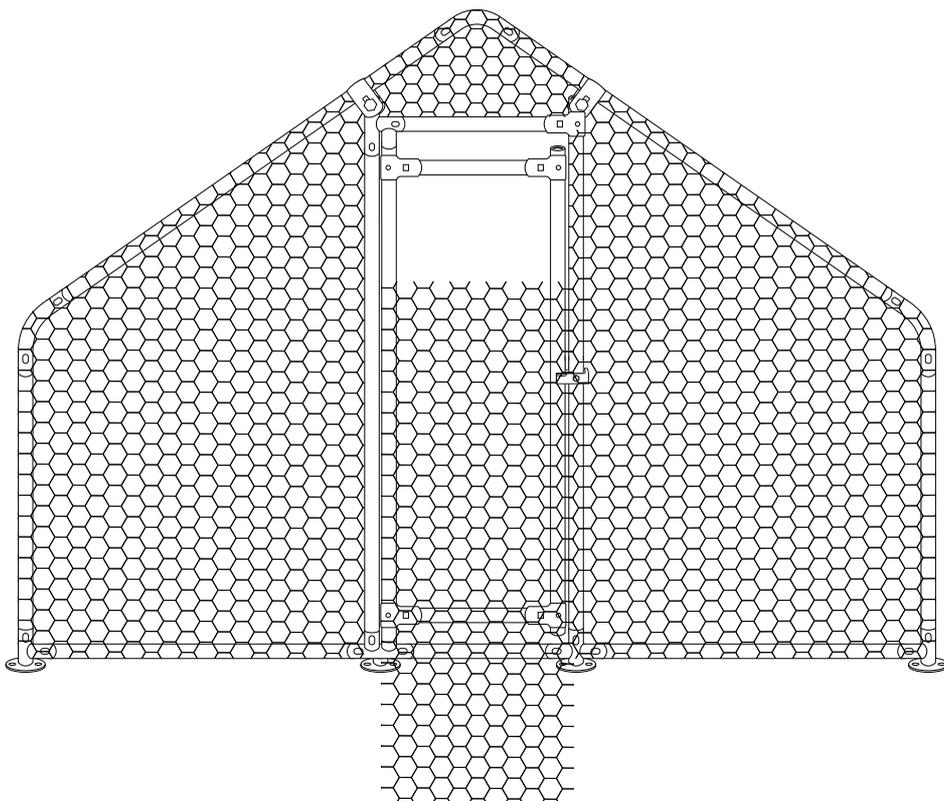

Step 12

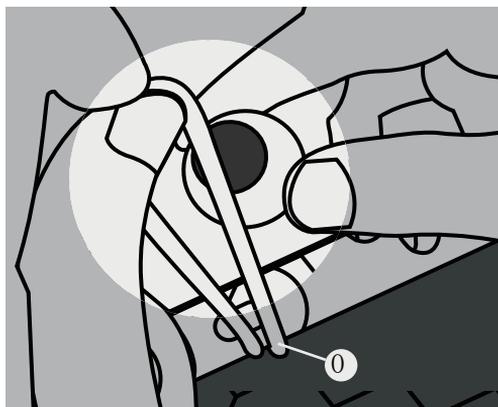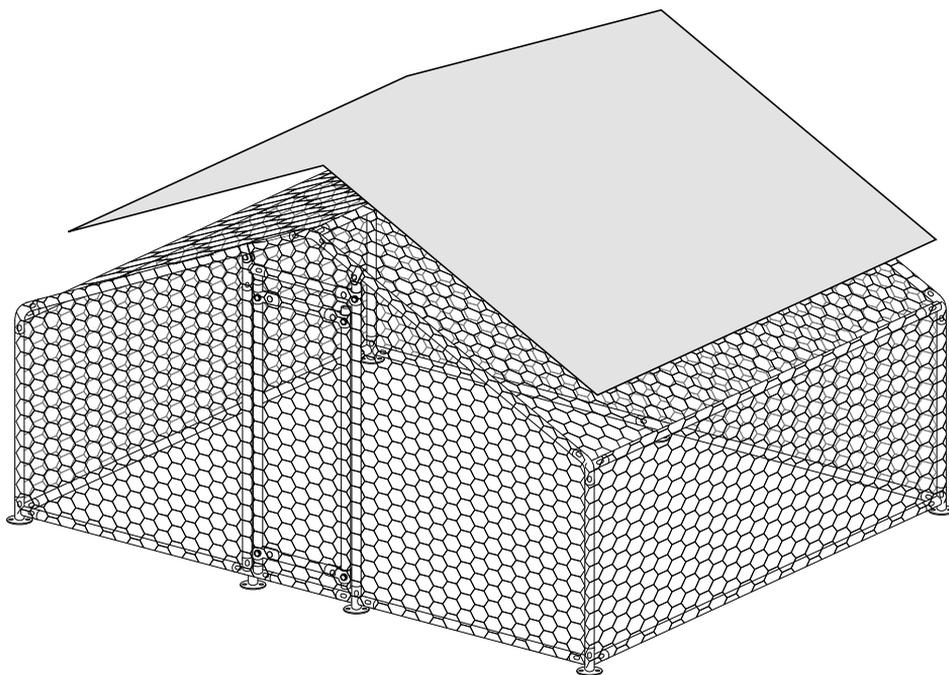

Step 13

