



ZIPPITY

Easy Does It!

WASHINGTON VINYL PICKET FENCE KIT 2-PACK (30"H X 42"W)


ASSEMBLY INSTRUCTIONS ZP19048

45 MIN

*Approximate assembly time for two
fence panels*

*Want to see a video on how to
assemble this product?*

Scan the QR code

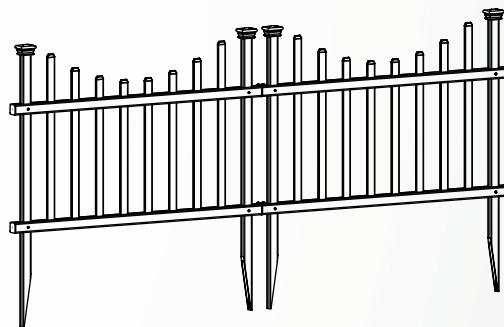

GENERAL INFORMATION



IMPORTANT

- ⊕ Check the inside of the larger pieces in your box for other materials packed inside.
- ⊕ When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- ⊕ We recommend an area approximately 5'x 8' for unobstructed assembling.
- ⊕ You should not need to use excessive force when assembling components.

MISSING OR DAMAGED PARTS?

VISIT OUR WEBSITE FIRST, SO WE CAN HELP YOU RIGHT AWAY!

Although great care has been taken to ensure proper packaging and handling of this product, occasionally problems occur. If you discover any missing, damaged or defective parts, please visit our website to order replacement parts. If you experience any further trouble with your product, please contact our customer service department.

🌐 parts.nychbrands.com

✉ support@zippity-outdoor.com

📞 **704-892-5222 / 877-234-6196**

Customer service agents are available to take calls weekdays from 9am-5pm EST. If you call outside of business hours, please leave a voicemail.

To help you quickly and accurately, please have reference item number **ZP19048** and the specific part name which can be found on page 4. It is helpful if you can provide the batch lot which is a stamped number inside the box.


NEED ASSEMBLY HELP?

If you are having problems with the assembly or installation of this product, we are happy to assist you with the process, **so please give us a call at 704-892-5222 / 877-234-6196.**


NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

Detailed Product Dimensions & Specifications

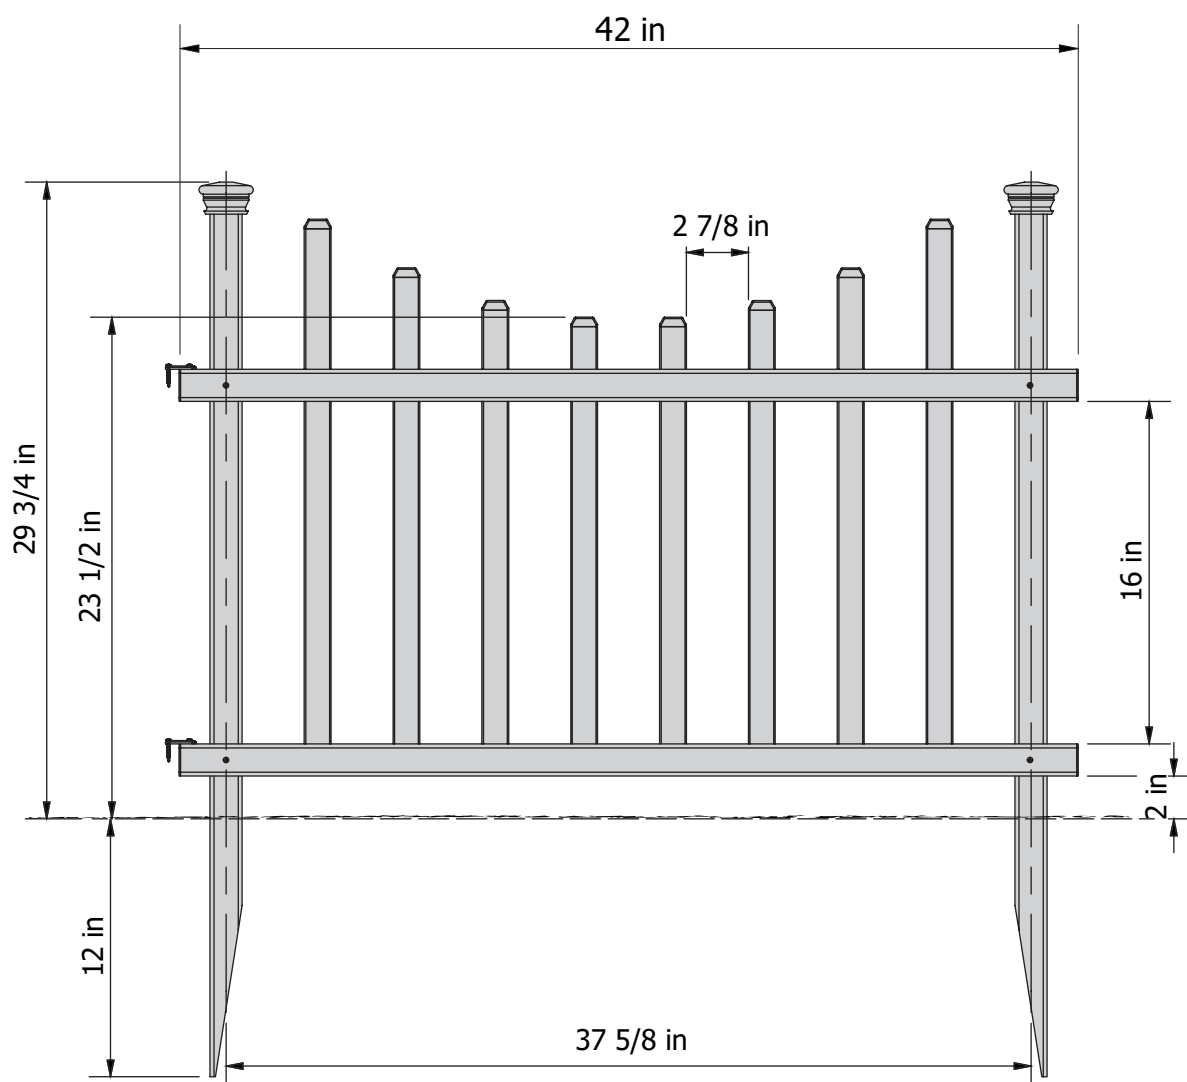


STEP 1: LAY OUT MATERIALS

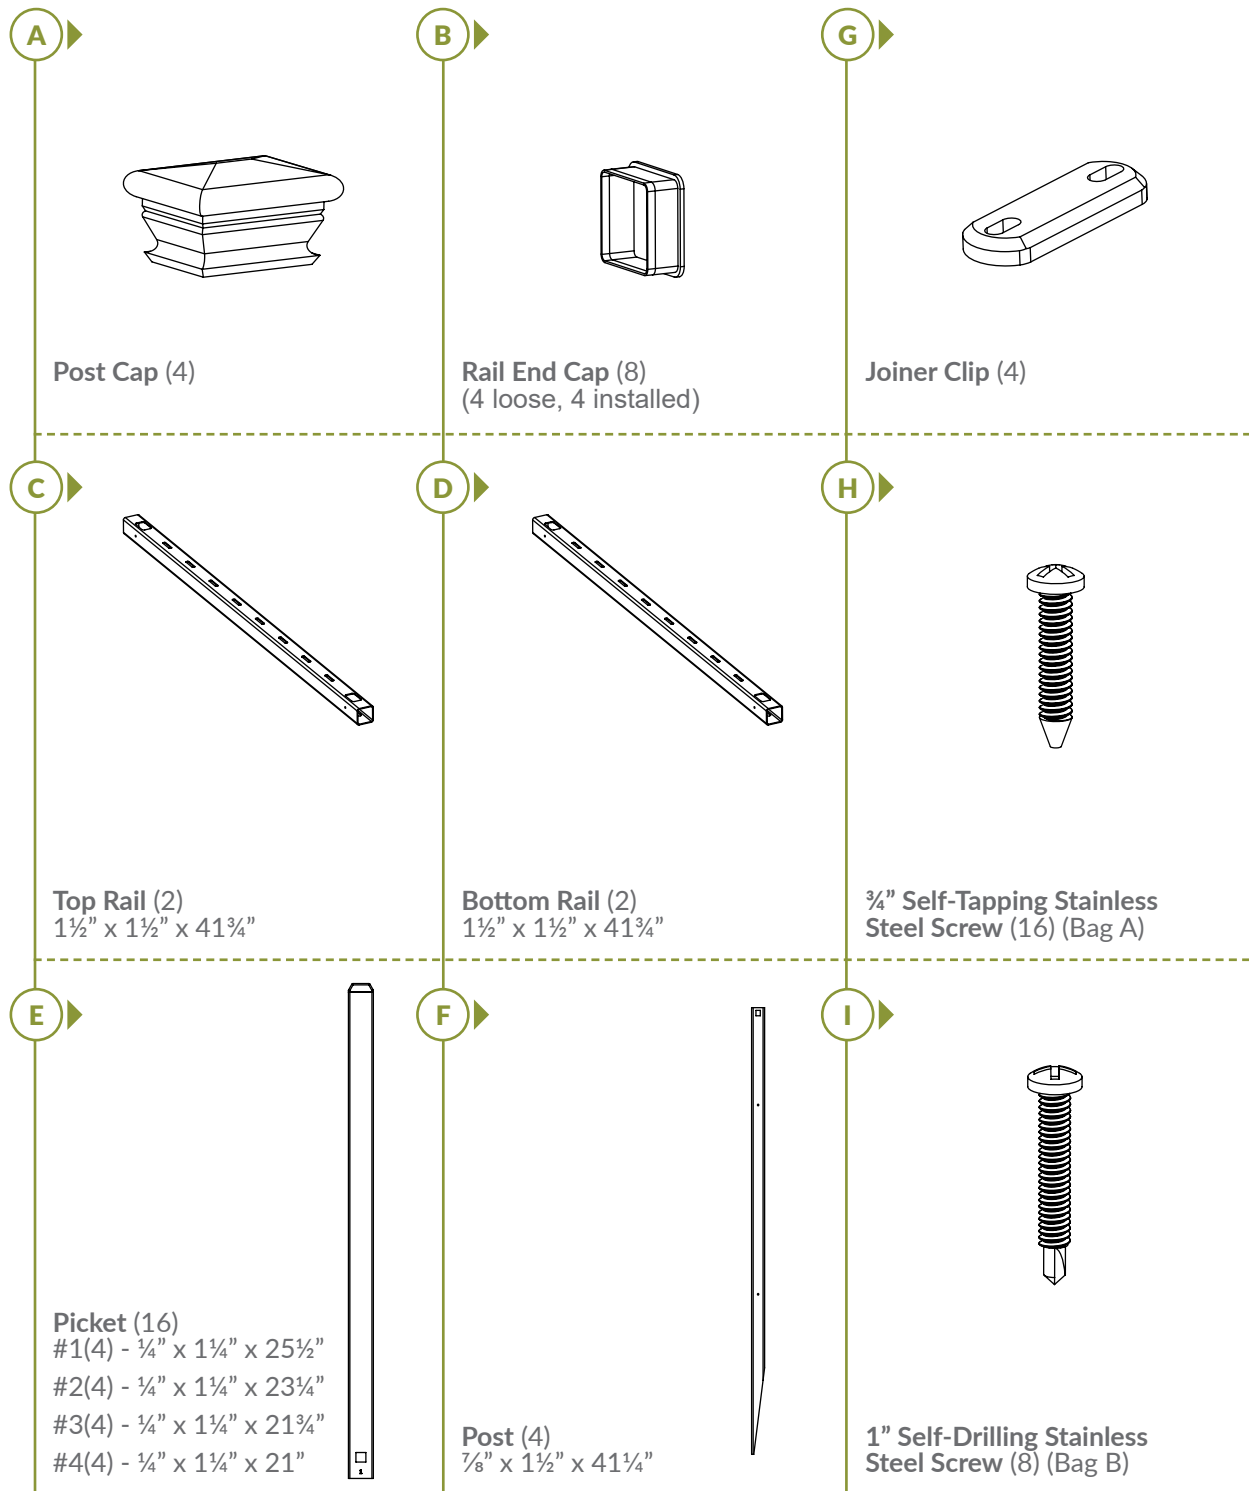

STEP 2: ASSEMBLE THE FENCE FRAME


STEP 2.1 ▶

► Identify the Top Rail (C) and the Bottom Rail (D) and position them as shown below. Pressure fit (2) loose Rail End Caps (B) into the ends of each rail.

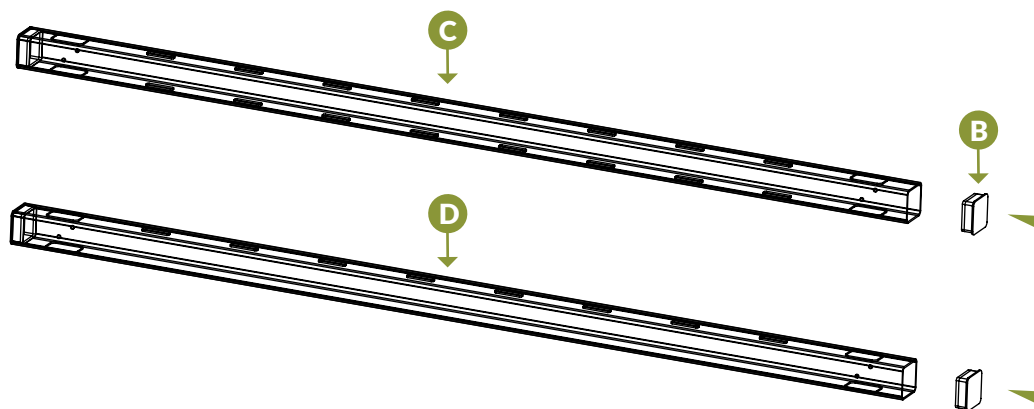


STEP 2.2 ▶

► Slide (2) Posts (F) down into the routed holes in the top and bottom rails.

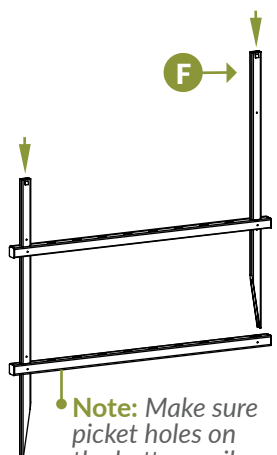


Note: Make sure picket holes on the bottom rail are facing up.

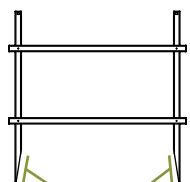

Orient the bottoms of the posts as shown.

STEP 2.3 ▶



► Align the pre-drilled holes in the posts and the top and bottom rails. Screw the top and bottom rails into the front and back of the posts using (8) 3/4" Self-Drilling Stainless Steel Screws (H).

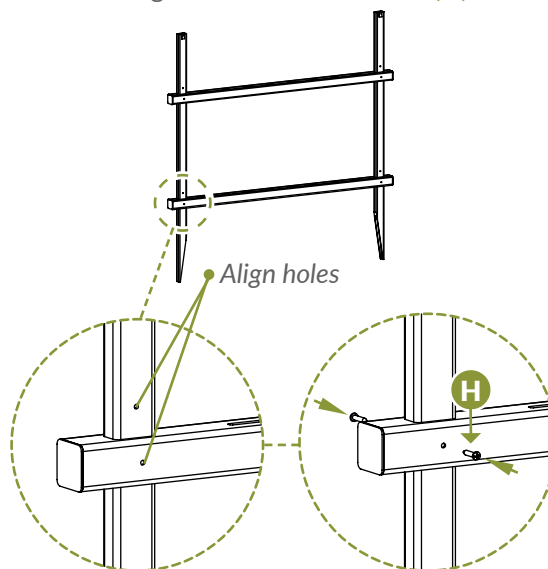

STEP 3: INSERT PICKETS

STEP 3.1

- The Pickets (E) are numbered at the bottom 1, 2, 3, and 4 to create a scallop pattern. Insert the pickets into the top and bottom rails as illustrated.

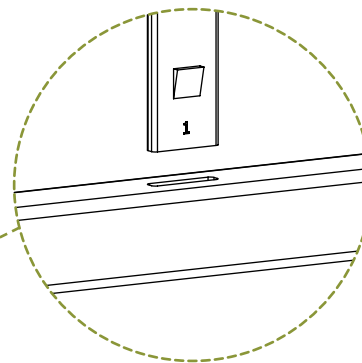
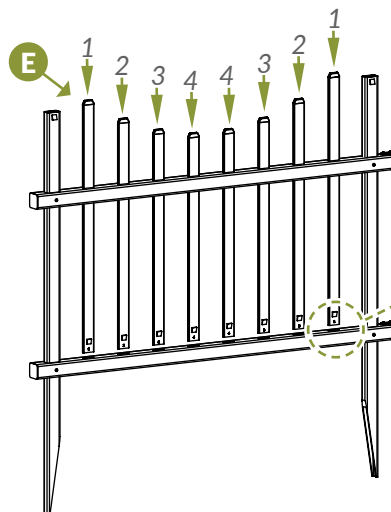


Note: The tabs on the bottom of the pickets go into the bottom rail to lock the picket into place.

STEP 4: ASSEMBLE THE SECOND FENCE PANEL

STEP 4.1


- Repeat steps 2 and 3 to assemble the second fence panel.

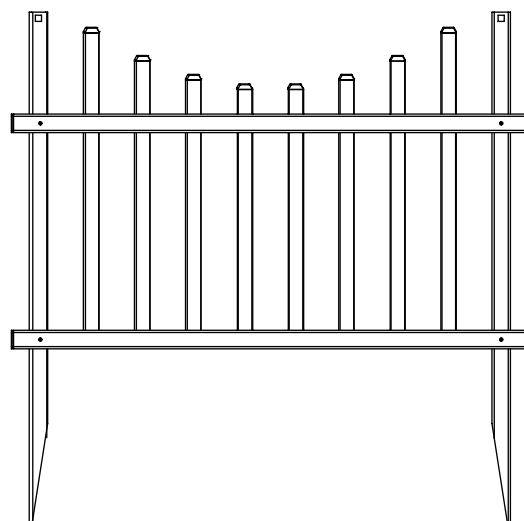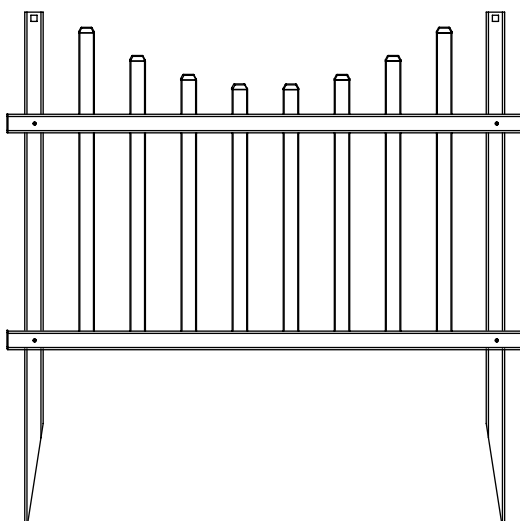

STEP 5: INSTALL FENCE INTO THE GROUND

STEP 5.1

- Move the fence to its final location and identify the location of the posts.

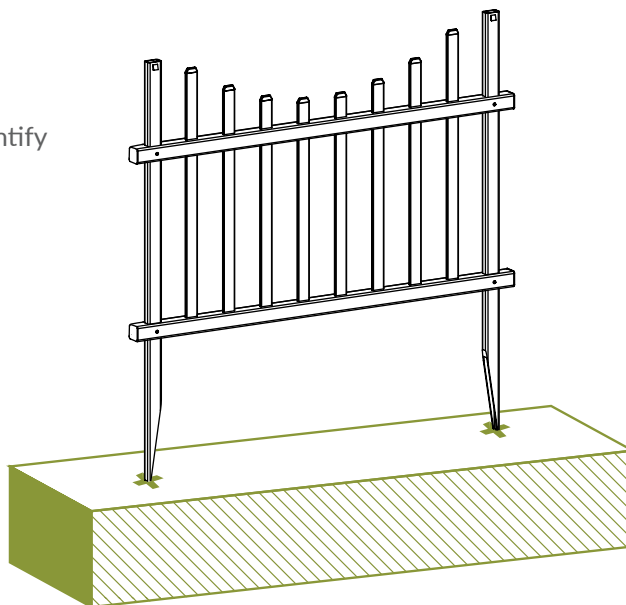

STEP 5.2


- Attempt to push the unit into the ground as illustrated.

1. If your ground is too hard, loosen the top 6" or 7" of the ground with a claw hammer as illustrated.


2. Add water to loosened soil.

3. Use a block of wood to protect the top of the post and gently hammer the post into the ground.



1

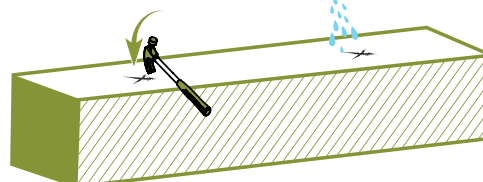

2

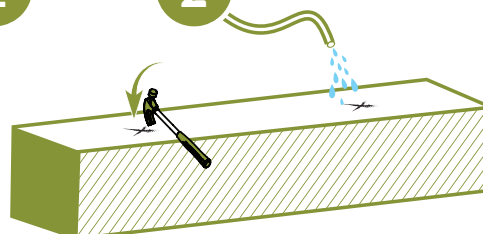

3


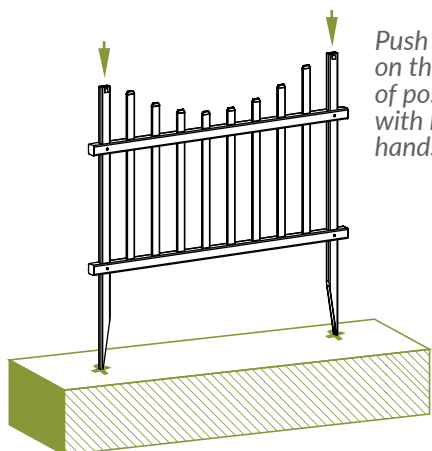
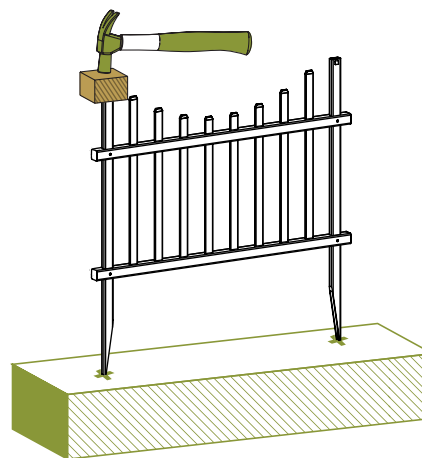


Push down on the top of posts with both hands.

STEP 5.3 ▶


► **Optional in hard ground:** If your ground is too hard, or you have more than 3 or 4 panels to install, please consider these options:

1. Use a 1¼" diameter auger bit (commonly used for planting tulips) as illustrated (\$15-\$20 on Amazon.com).
2. Drill a hole about 12" to 16" deep at the desired location, and fill the holes with water as illustrated.
3. Push the fence posts into the holes.


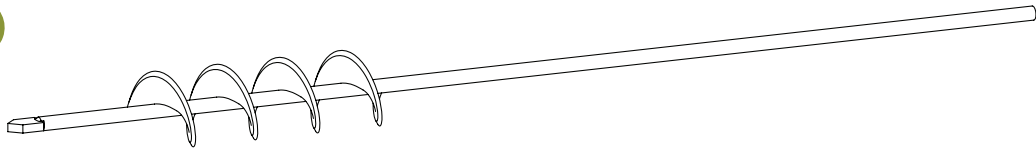
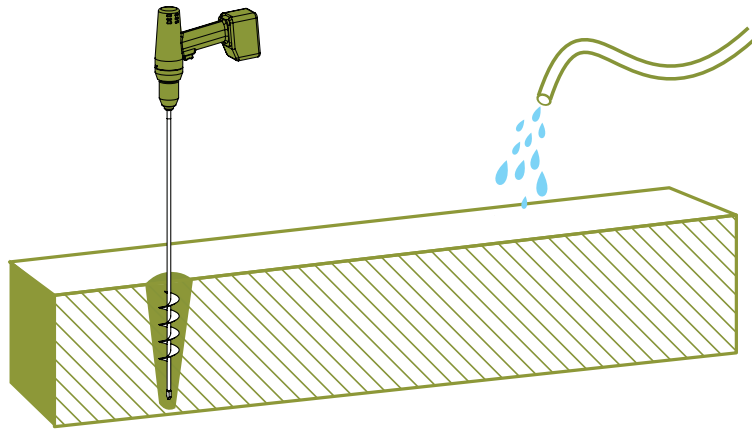
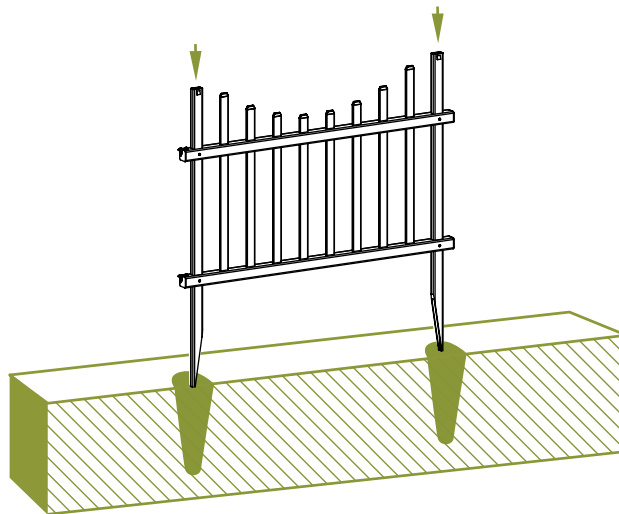
1**2****3**

STEP 5.4 ▶



- ▶ Level the assembled unit, backfill, and compact dirt around the base of each post to strengthen the unit.

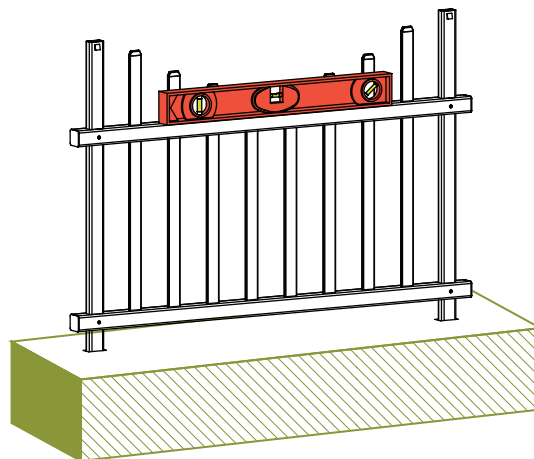**STEP 6: FASTEN JOINER CLIPS****STEP 6.1** ▶

- ▶ Fasten the fence panels together using (2) Joiner Clips (G) and (4) 1" Self-Drilling Stainless Steel Screws (I) as illustrated. Extra joiner clips and screws are included if you intend to attach the unit to other fence panels.

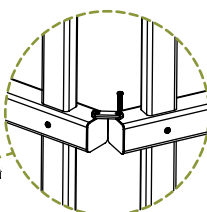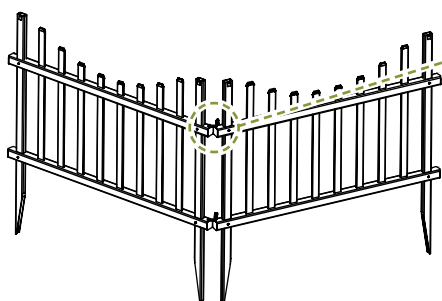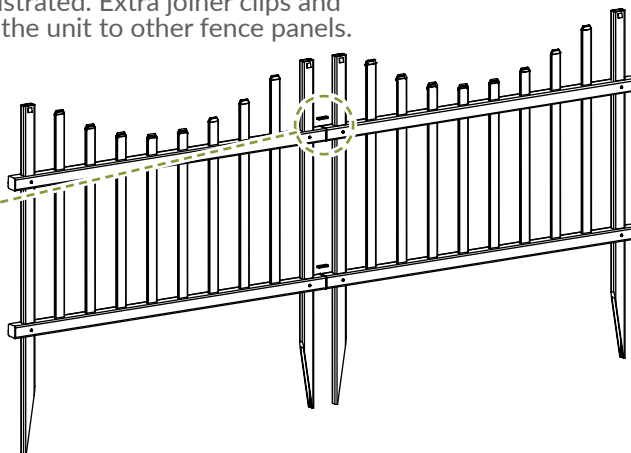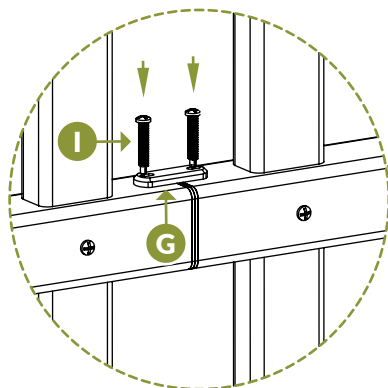

45° installation

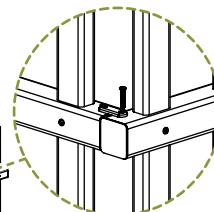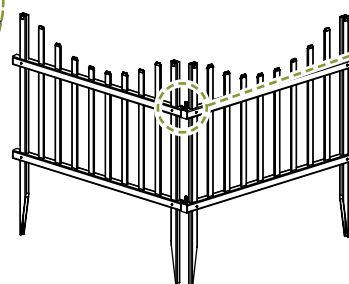


90° installation

STEP 7: INSTALL POST CAPS

STEP 7.1 ▶

- ▶ Push the Post Caps (A) over the top of the posts to complete the assembly. The post caps will lock into place when pushed over the posts.

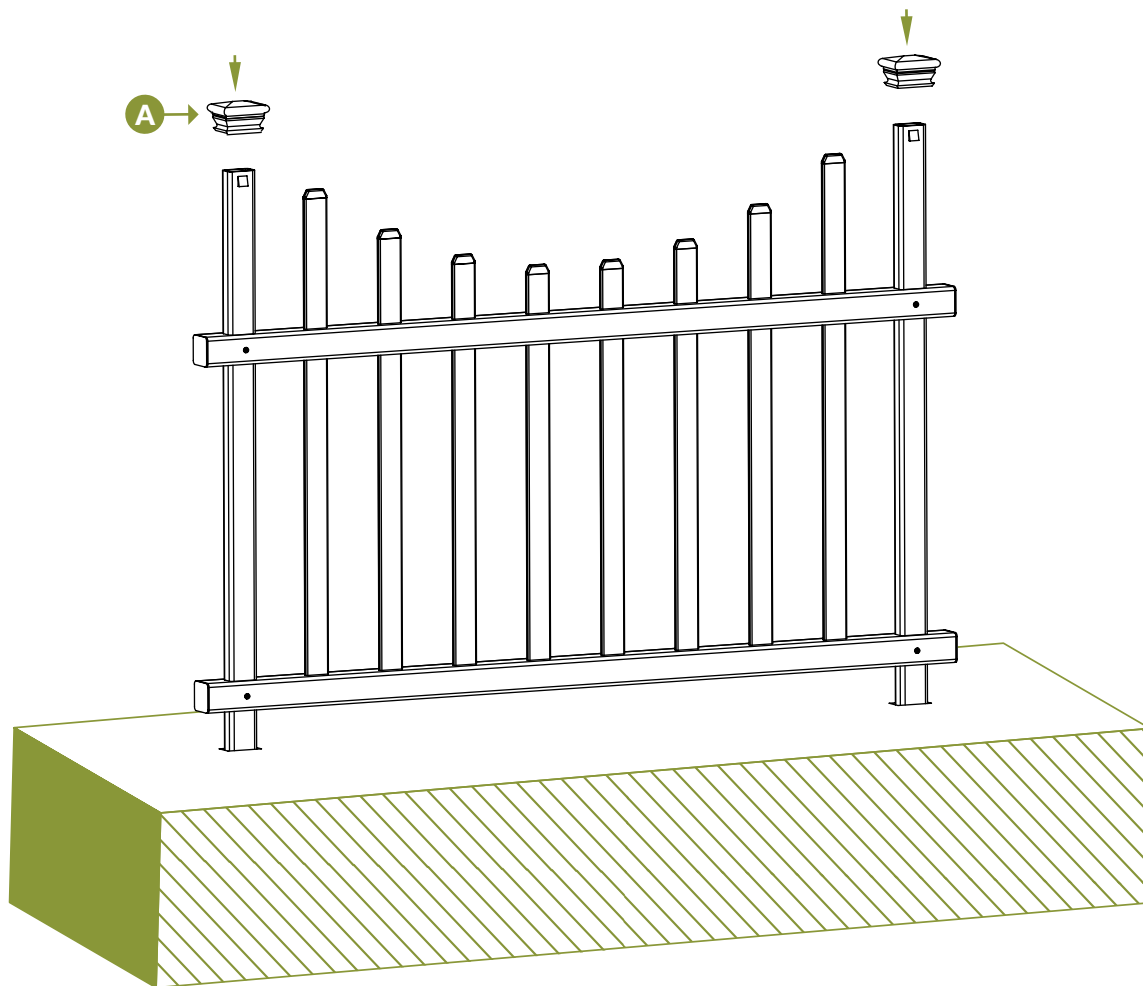



ZIPPITY

Easy Does It!



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



support@zippity-outdoor.com

704-892-5222
877-234-6196



WWW.ZIPPITY-OUTDOOR.COM