


## OUTDOOR FOLDING POLY ADIRONDACK CHAIR

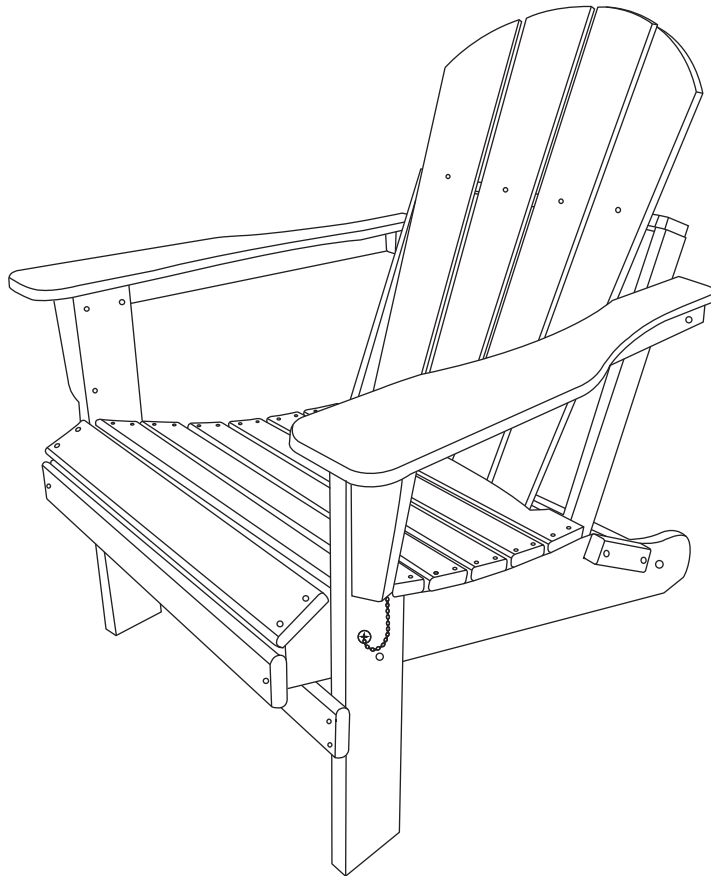










### Assembly Consideration











- Do not overtighten screws(Insert All screws before tighten screws)
- Follow Assembly Instructions Step by Step
- Do not discard original packaging if your received items damaged or with missing parts
- Count all Hardware parts before starting assembly
- Assemble items in a clear area and away from clutter to avoid misplacing assembly items


### Safety Precautions

- Be very careful when folding chair to avoid smashing your hands or fingers
- Avoid Using strong powertools to help prevent wood from cracking when assembly


# Assembly Instructions

<b>A</b>		<b>1pc</b>
<b>B</b>		<b>1pc</b>
<b>C</b>		<b>1pc</b>
<b>D</b>		<b>1pc</b>
<b>E</b>		<b>1pc</b>
<b>F</b>		<b>1pc</b>
<b>G</b>		<b>1pc</b>
<b>H</b>		<b>1pc</b>
<b>I</b>		<b>2pcs</b>


<b>1</b>	 <b>M6.3X50</b>	<b>4pcs</b>
<b>2</b>	 <b>M6X80</b>	<b>2pcs</b>
<b>3</b>	 <b>M6X60</b>	<b>4pcs</b>
<b>4</b>	 <b>M6X50</b>	<b>2pcs</b>
<b>5</b>	 <b>M4.2X40</b>	<b>4pcs</b>
<b>6</b>	 <b>M6</b>	<b>8pcs</b>
<b>7</b>		<b>8pcs</b>
<b>8</b>		<b>1pc</b>
<b>9</b>		<b>1pc</b>
<b>10</b>		<b>1pc</b>

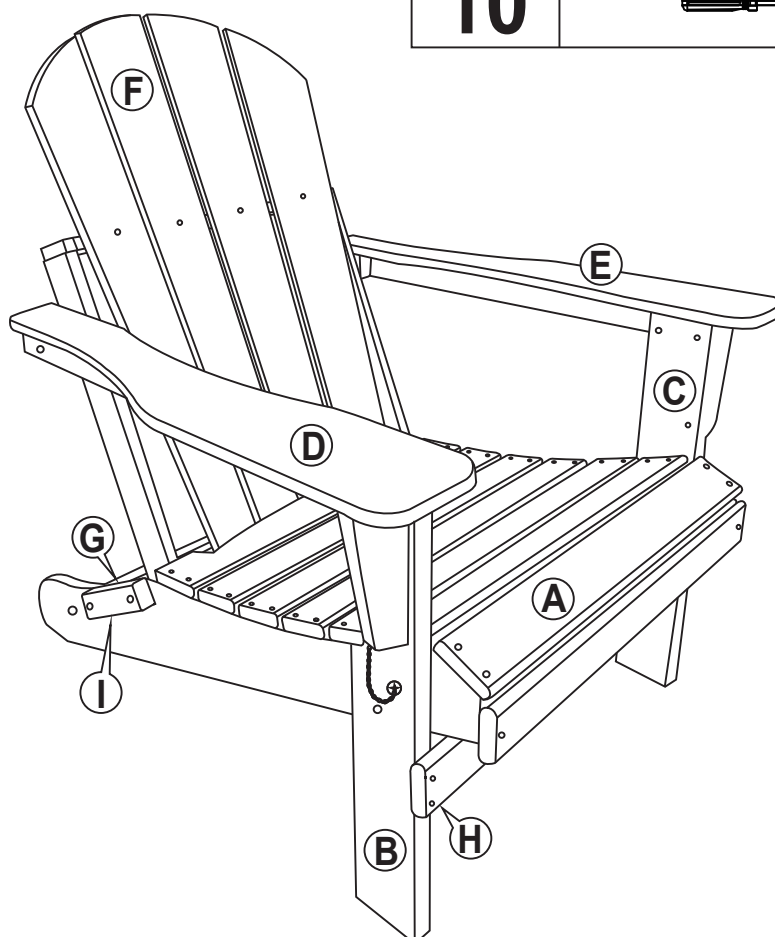


## STEP: 1

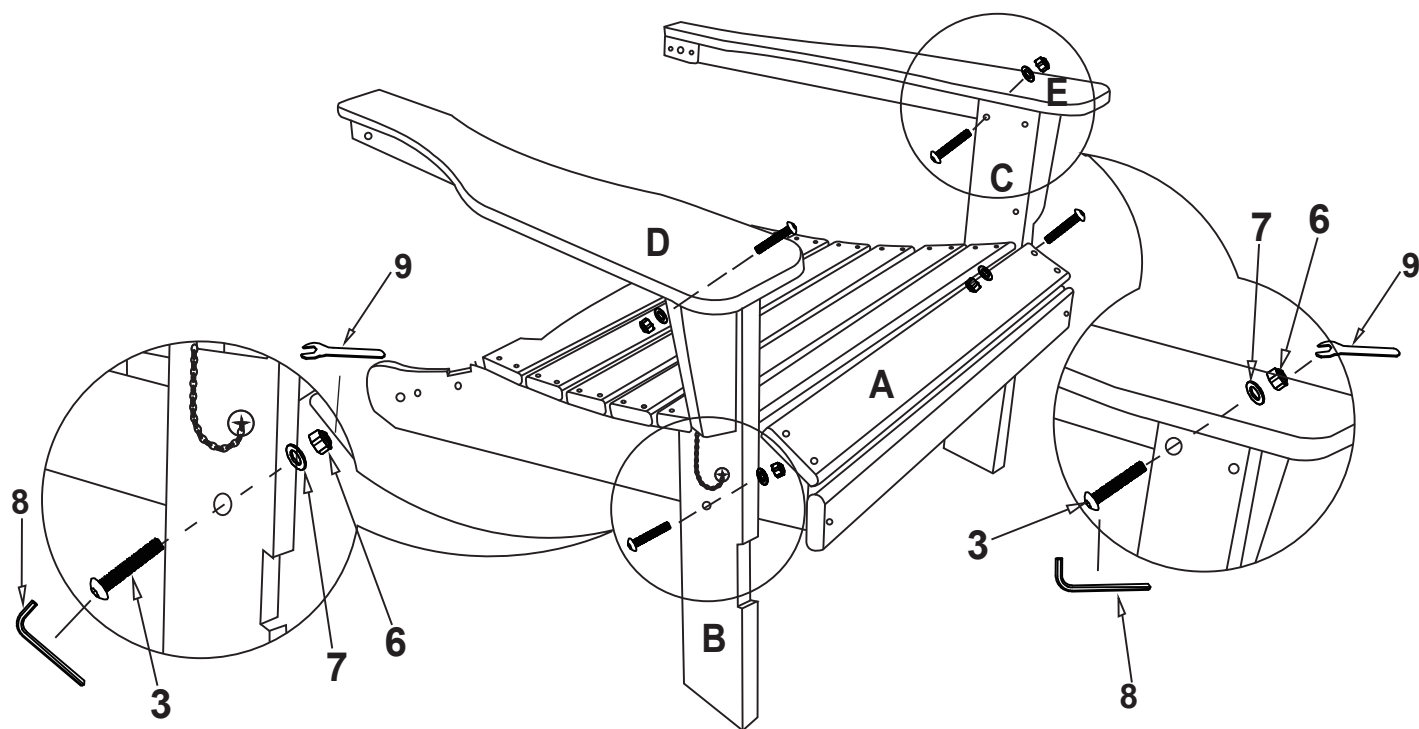

## STEP: 2

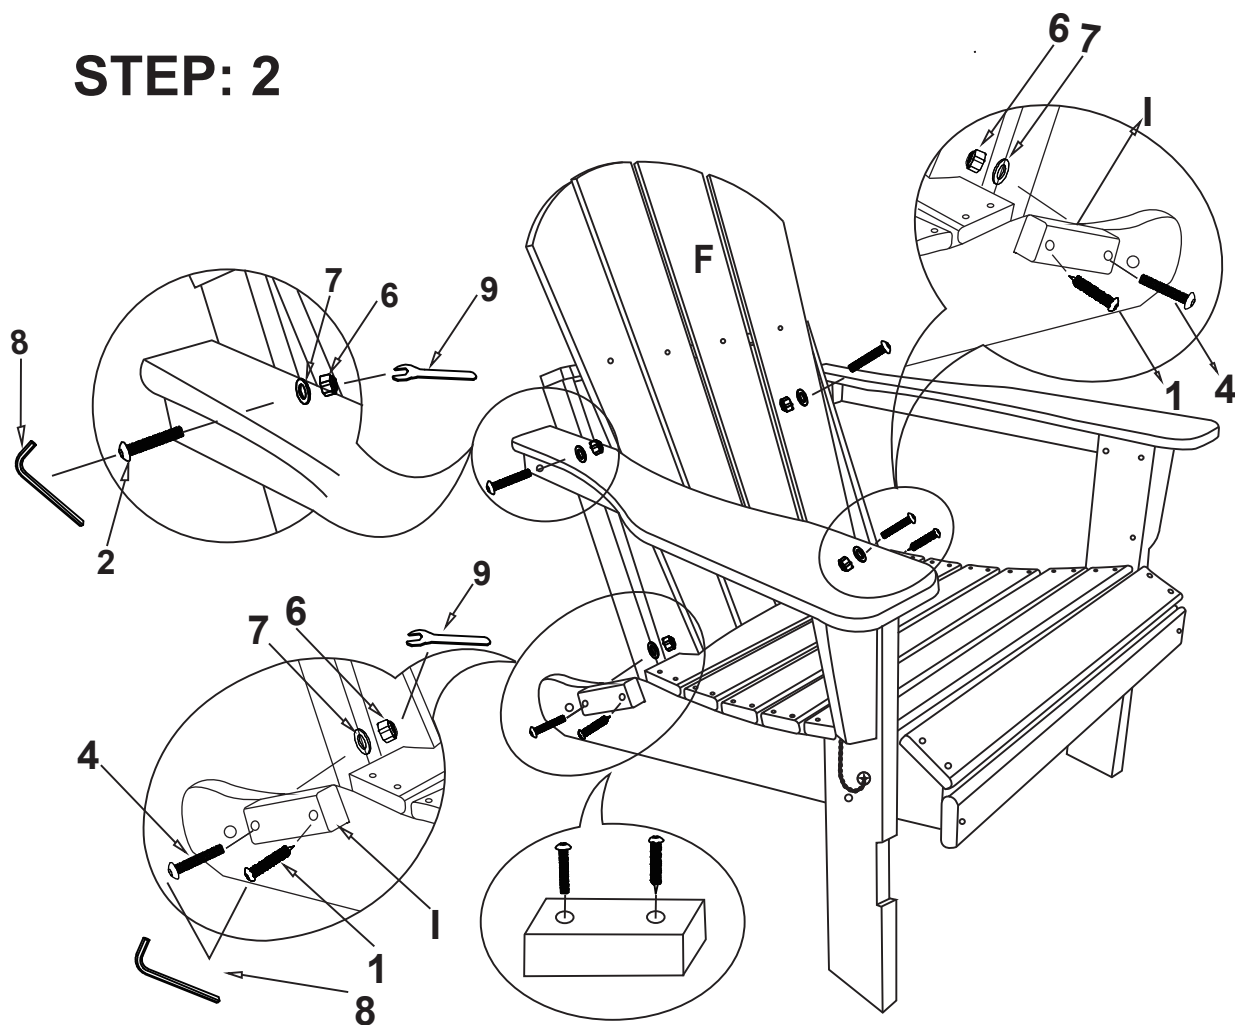

## STEP: 3

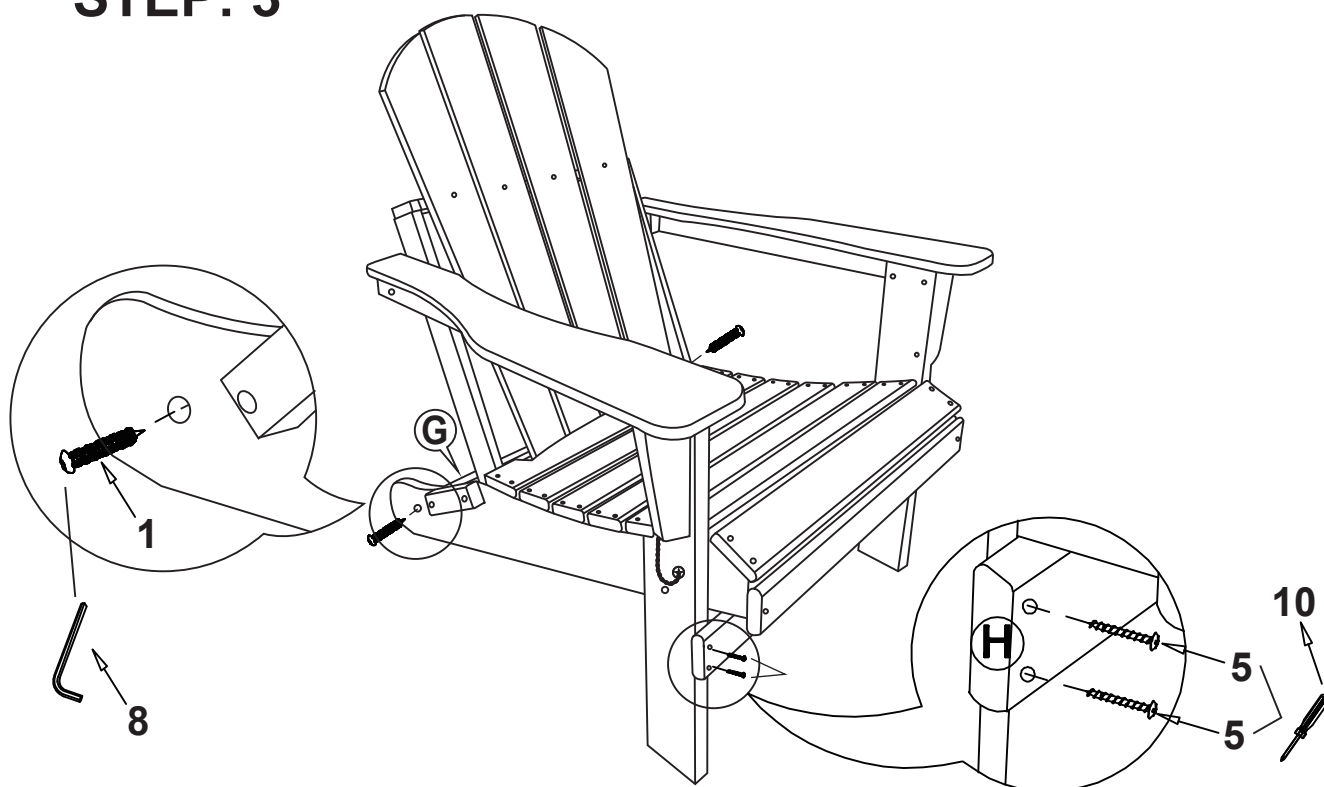

## STEP: 4

