




INSTALLATION GUIDE
TRADITIONAL PICKETS


TRADITIONAL PICKET FENCE INSTALLATION GUIDELINE

BEFORE YOU BEGIN

1. Verify the location of all underground utilities.
2. Locate property lines.
3. Consult with HOA, if applicable follow CC&Rs Guidelines
4. Consults local and regional building codes.
5. Obtain all necessary permits as required by building codes.
6. Always wear appropriate safety equipment.
7. Store pickets horizontally in a dry place away from moisture.

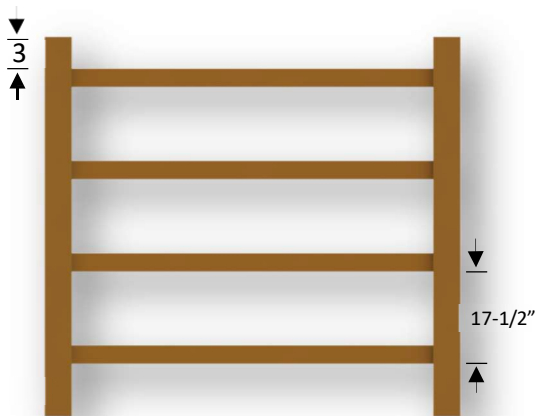

**Based upon the ground clearance of your bottom rail, your bottom picket should be flush with your bottom rail.*

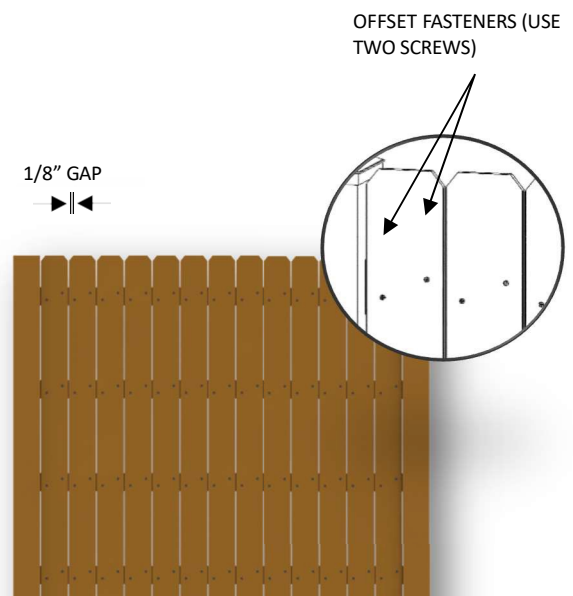

RAIL INSTALLATION

1. Always use four evenly spaced rails to avoid board damage.
2. After posts are set, fasten stringers to the posts
3. Space the Bottom Rail 8" from the ground and the Top Rail 6" from the top of the picket placement. Continue spacing Rails at least every 17-1/2".
4. Note: If deflection occurs add additional Rails.

Color fading will occur over time due to natural weathering and sun exposure.

POST INSTALLATION

1. Fasten the first picket to rails next to post with two (2) composite screws per rail per picket, spacing pickets at least 1/8" from the post. Always use two screws to avoid damage to boards.
 - a. Offset fasteners, place screws at least 1/2" from the edge of the picket.
 - b. Based upon the ground clearance of your bottom rail, your bottom picket should be flush with your bottom rail.
2. Continue installing pickets, equally spaced in the remaining area (at least 1/8" spacing and offset screws).

For any further information or questions please visit www.naturescomposites.com or call us at (307) 3382608.

Our products and/or processes are protected by the following patents, as well as other patents that are pending: US 11,053,707; US 12,110,703; US 12,084,880