




ASSEMBLY INSTRUCTION




install video




4-layer screw-free sideboard Accessories list																	
Illustration																	Notes
Accessories Specifications	Upper left frame	Upper right frame	Lower left frame	Lower right frame	Back cross pipe	Lower front cross pipe	Upper top plate	Lower upper and lower plates	Lower inner plate	Back plate	Hole back plate	Lower cabinet door	Foot pad	Handle	Plastic hook	Shelf iron buckle	
4layer 140	1	1	1	1	4	2	1	2	1	3	2	3	4	3	10	4	
4layer 120	1	1	1	1	4	2	1	2	1	3	2	3	4	3	10	4	
4layer 100	1	1	1	1	4	2	1	2	1	3	2	3	4	3	10	4	
4layer 80	1	1	1	1	4	2	1	2	1	3	2	2	4	2	10	4	
4layer 60	1	1	1	1	4	2	1	2	1	3	2	2	4	2	10	4	


4-layer screw-free sideboard installation steps

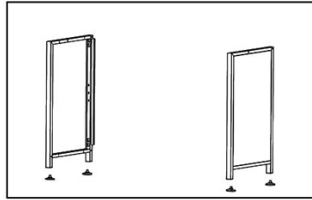


1. Install the foot pads of the lower side frame (or wheel)

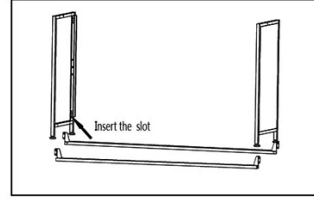


2. Install the front and rear transverse tubes of the lower body.

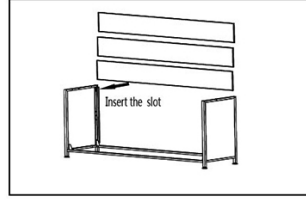


3. Install the lower body back plate

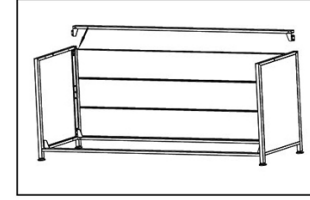


4. Install the upper back transverse tube of the lower body

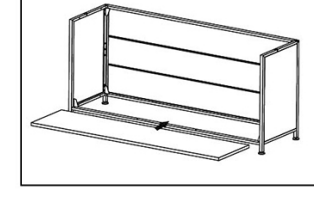


5. Install the lower body bottom plate.

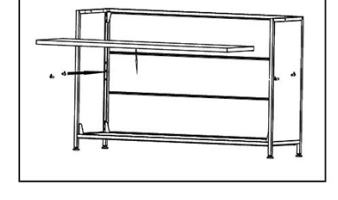


6. Insert the layer plate buckle into the corresponding hole of the side frame and tighten it before inserting it into the lower body inner layer plate

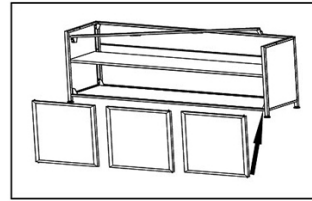


7. Align the upper and lower pins of the lower body cabinet door with the holes of the lower body front transverse tube and install and fix the front upper transverse tube.

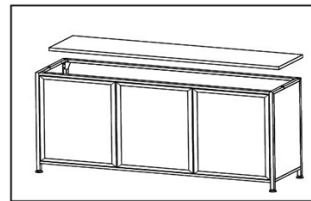


8. Install the upper layer plate of the lower body.

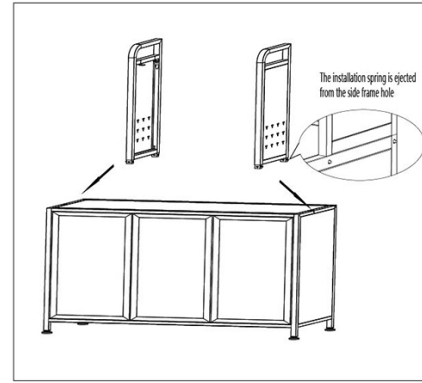


9. Insert the left and right side frames of the upper body from top to bottom into the lower body side frame tube and make the spring clip inside the tube joint pop out and fix it.

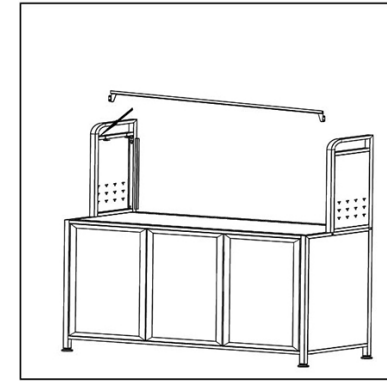


10. Install the front transverse tube of the upper body.

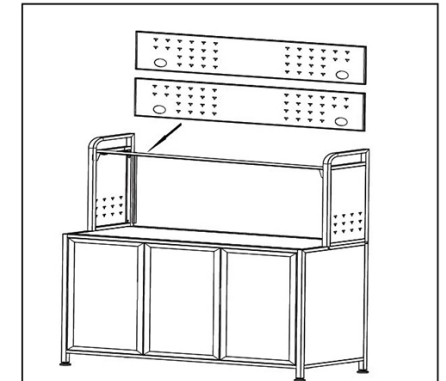


11. Install the hole back plate and back plate into the upper body back plate slot in sequence (Note: the hole position of the hole back plate is installed downward)

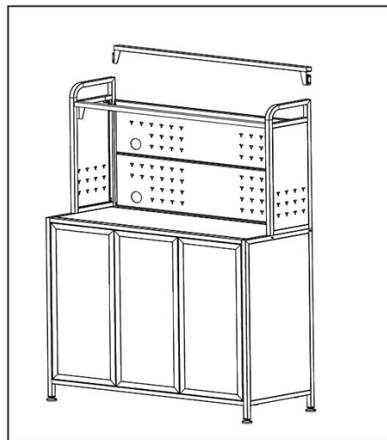


12. Align the upper cabinet door pins with the holes of the upper body front transverse tube and insert them, and install the upper front transverse tube of the upper body.

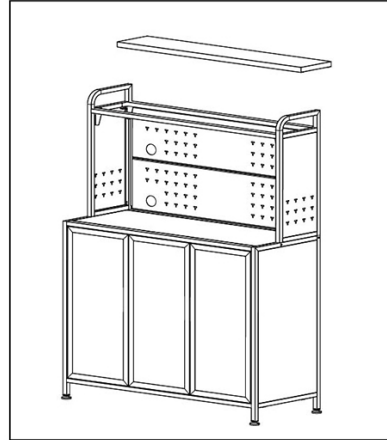

13. Install the upper body top layer plate.

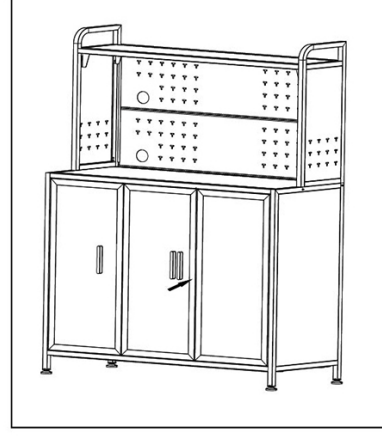

14. Install all cabinet door handles.

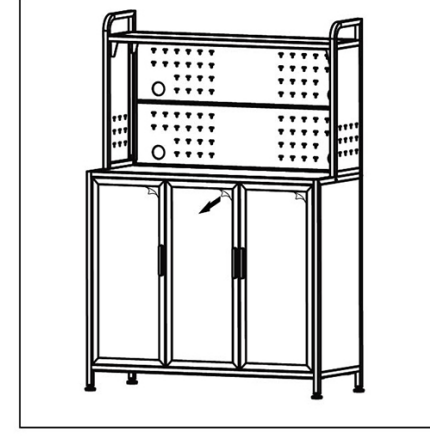

15. Remove the cabinet door protective film and the installation is complete.