



**COUNT AND INSPECT ALL PARTS CONFIRMING ALL
WERE RECEIVED AND ARE IN GOOD CONDITION.**

**FOR ANY REPLACEMENT PARTS OR HARDWARE,
AND/OR HELP WITH ASSEMBLY;**

CONTACT US AT:


info@camaflexi.com

OR CALL US AT:





(347)844-9307

**PLEASE HAVE THE MODEL NUMBER and/or PART
NUMBER NEEDED AS SHOWN IN THE PACKAGING OR
ASSEMBLY MANUAL**


ASSEMBLY INSTRUCTIONS

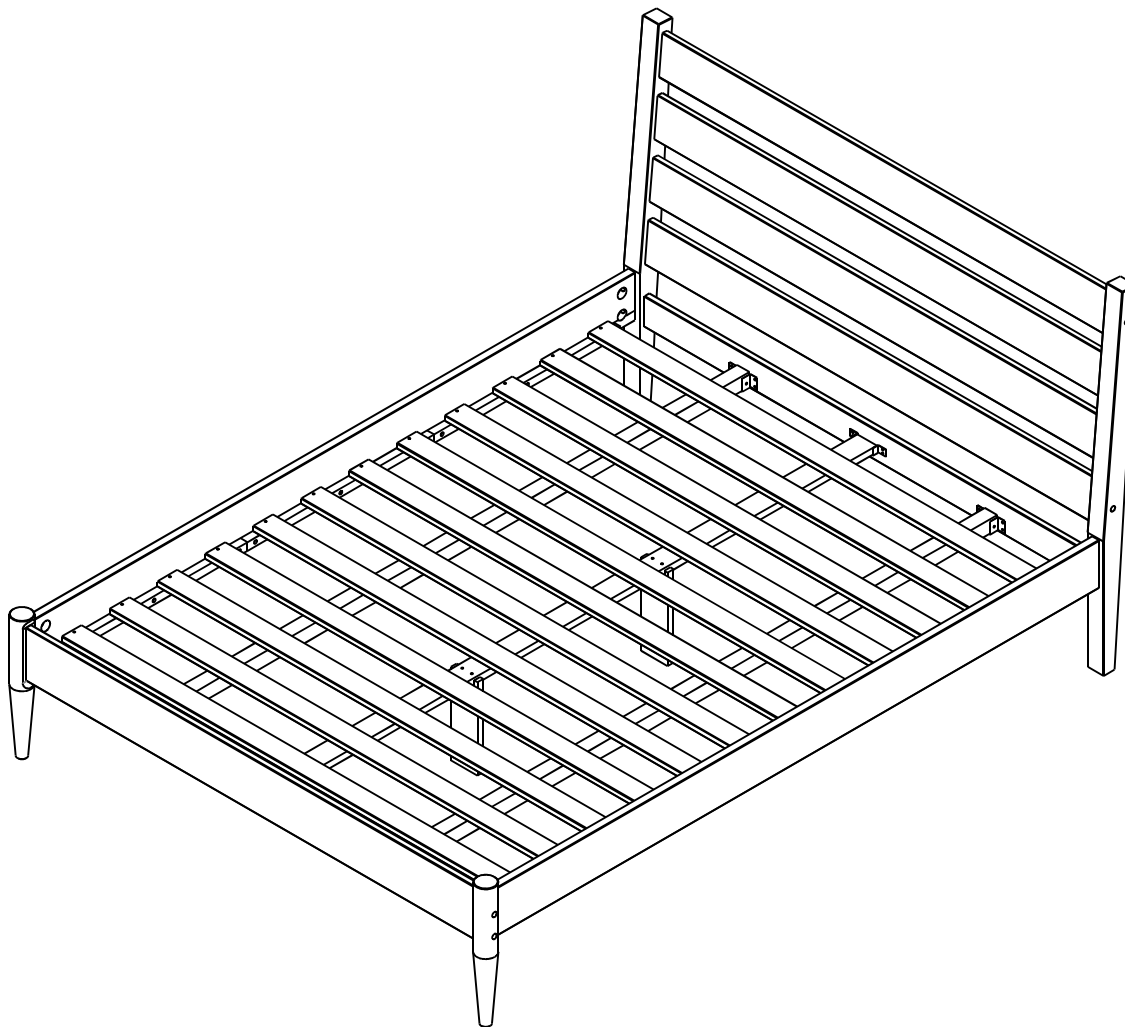

00:40 Hs

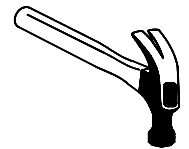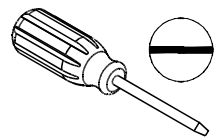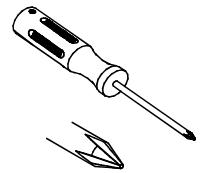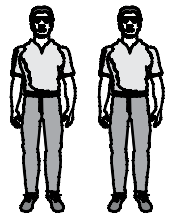

HARDWARE INCLUDED



A - 10,0x40
Qty. 26




B - 1/4x120
Qty. 04



C - 1/4x80
Qty. 08



D - 1/4x50
Qty. 04




E - Cylindrical nut
Qty. 08




F - Clog
Qty. 04



G - Half moon nut
Qty. 04




H - 4,0x45
Qty. 04



I - 3,5x30
Qty. 24




J - 3,5x16
Qty. 36




K - Allen key
Qty. 01




L - Hole plugs
Qty. 08



M - Metal bracket
Qty. 02




N - Metal bracket
Qty. 04




O - Space wooden
Qty. 02

PARTS INCLUDED

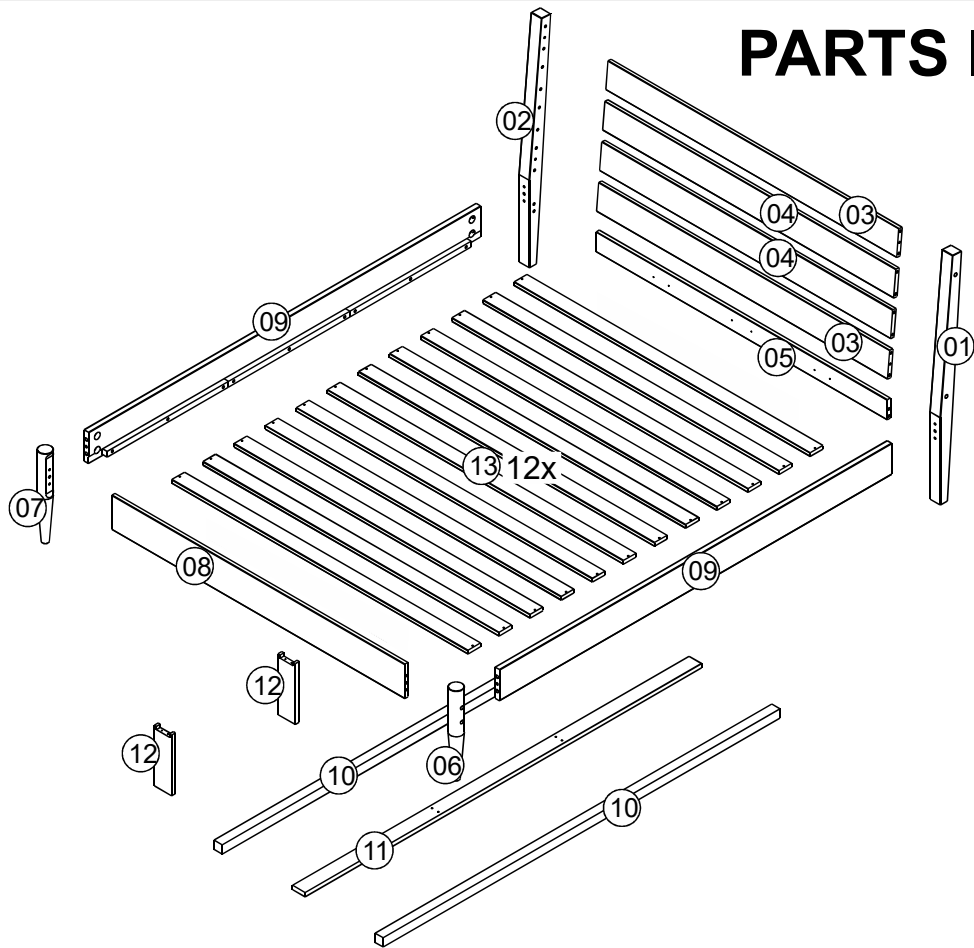


STEP 1

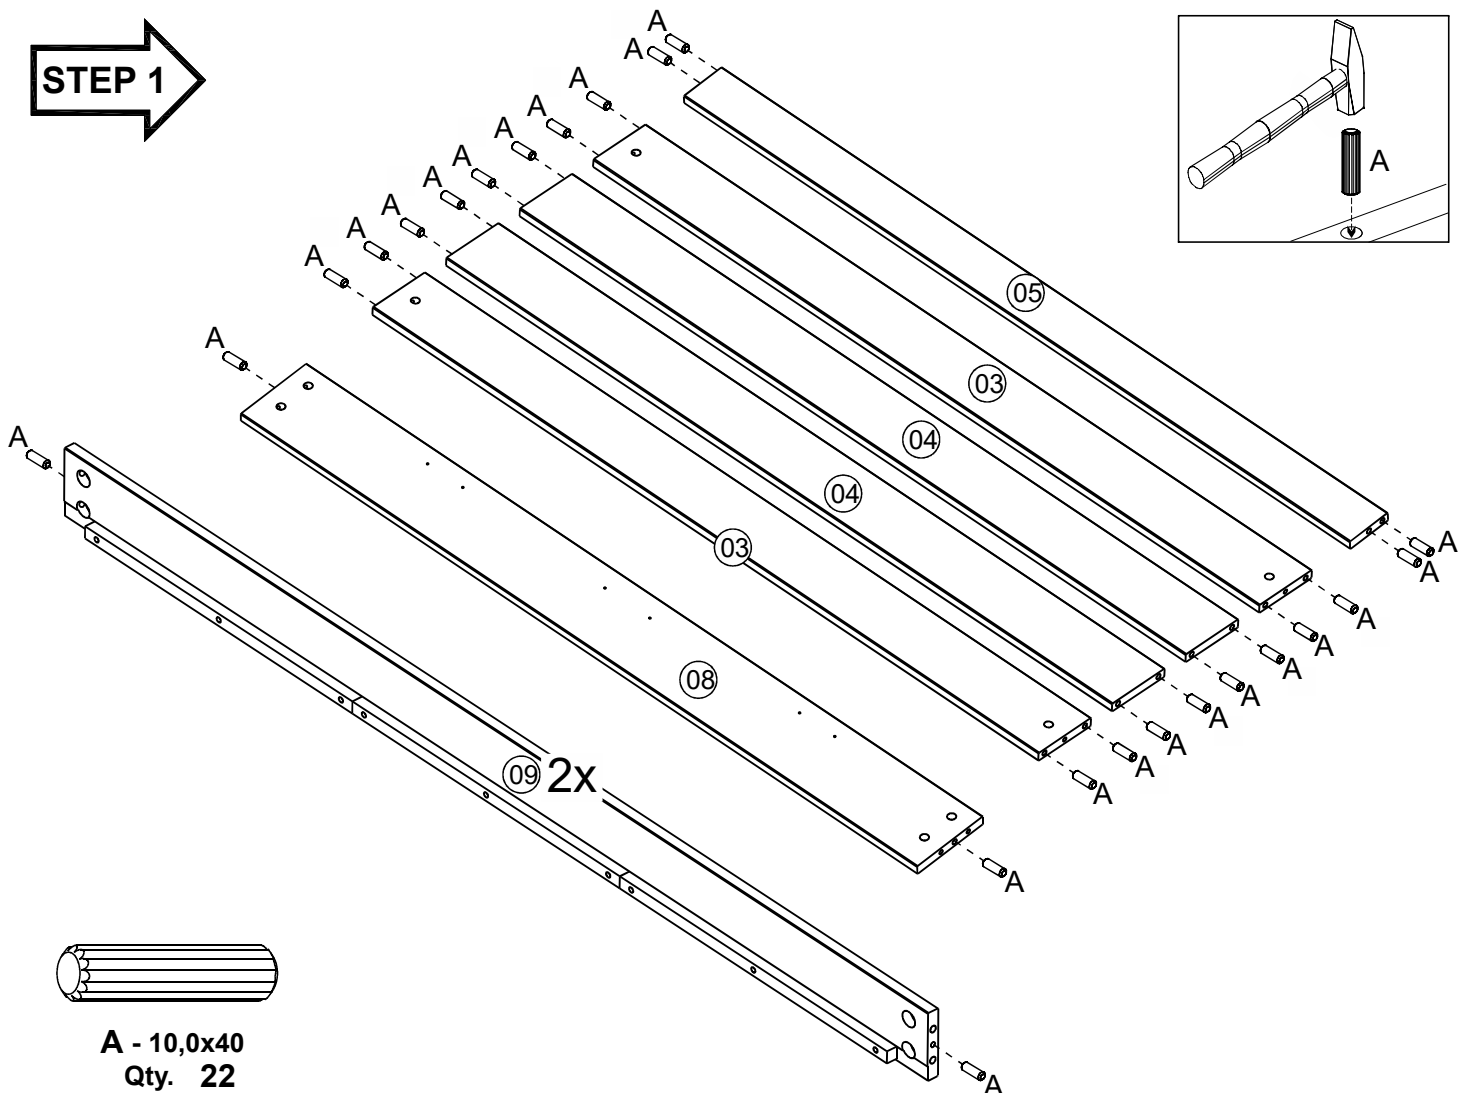


A - 10,0x40
Qty. 22


STEP 2

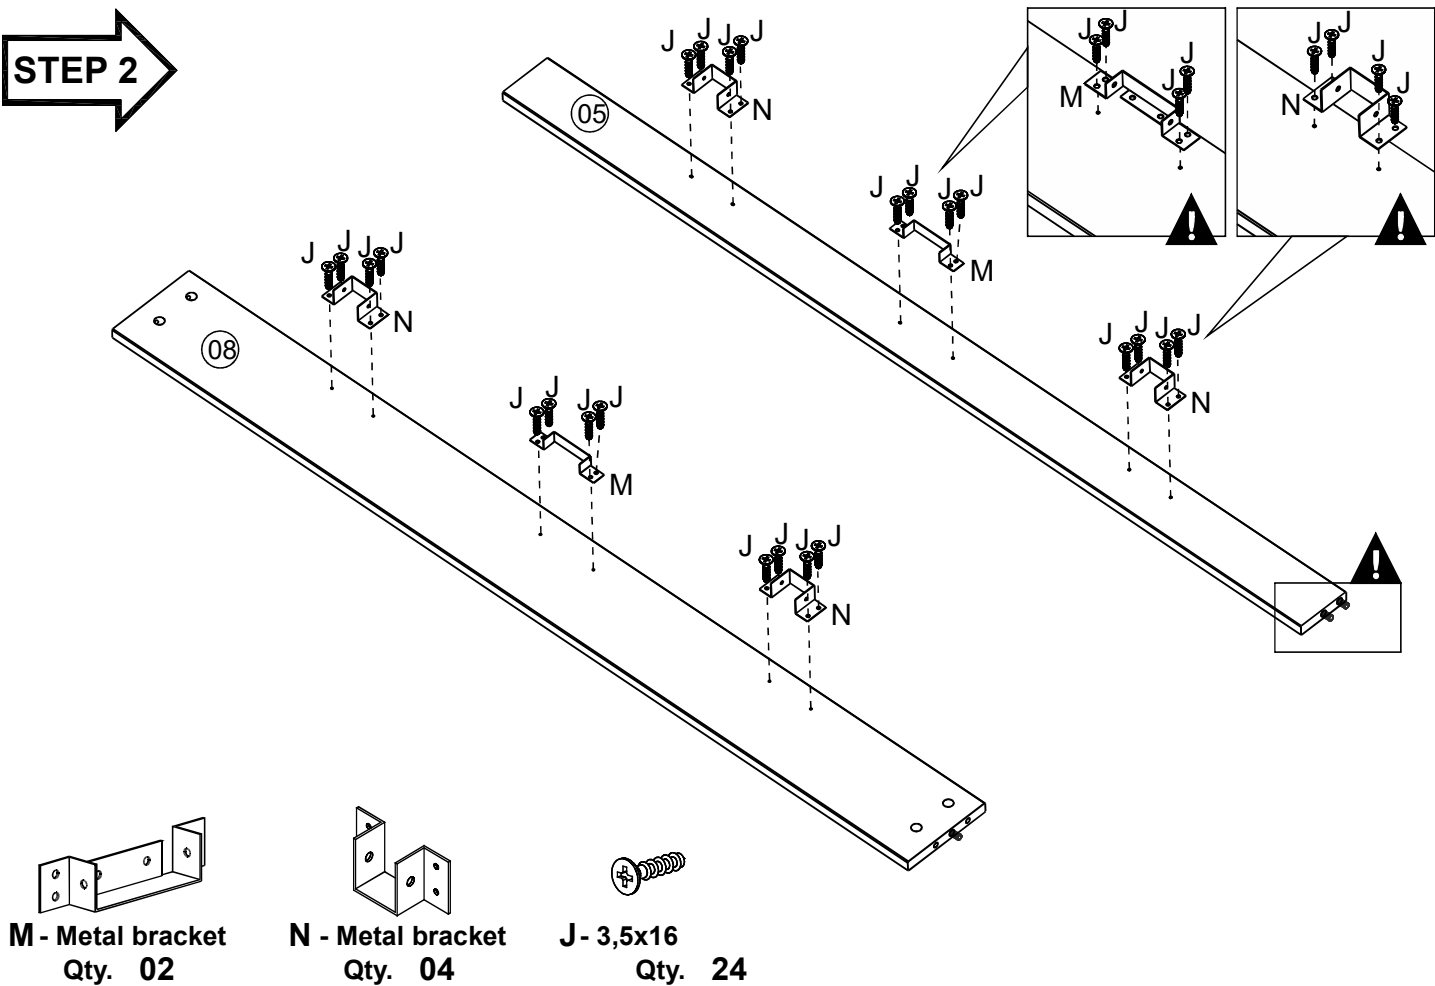


STEP 3

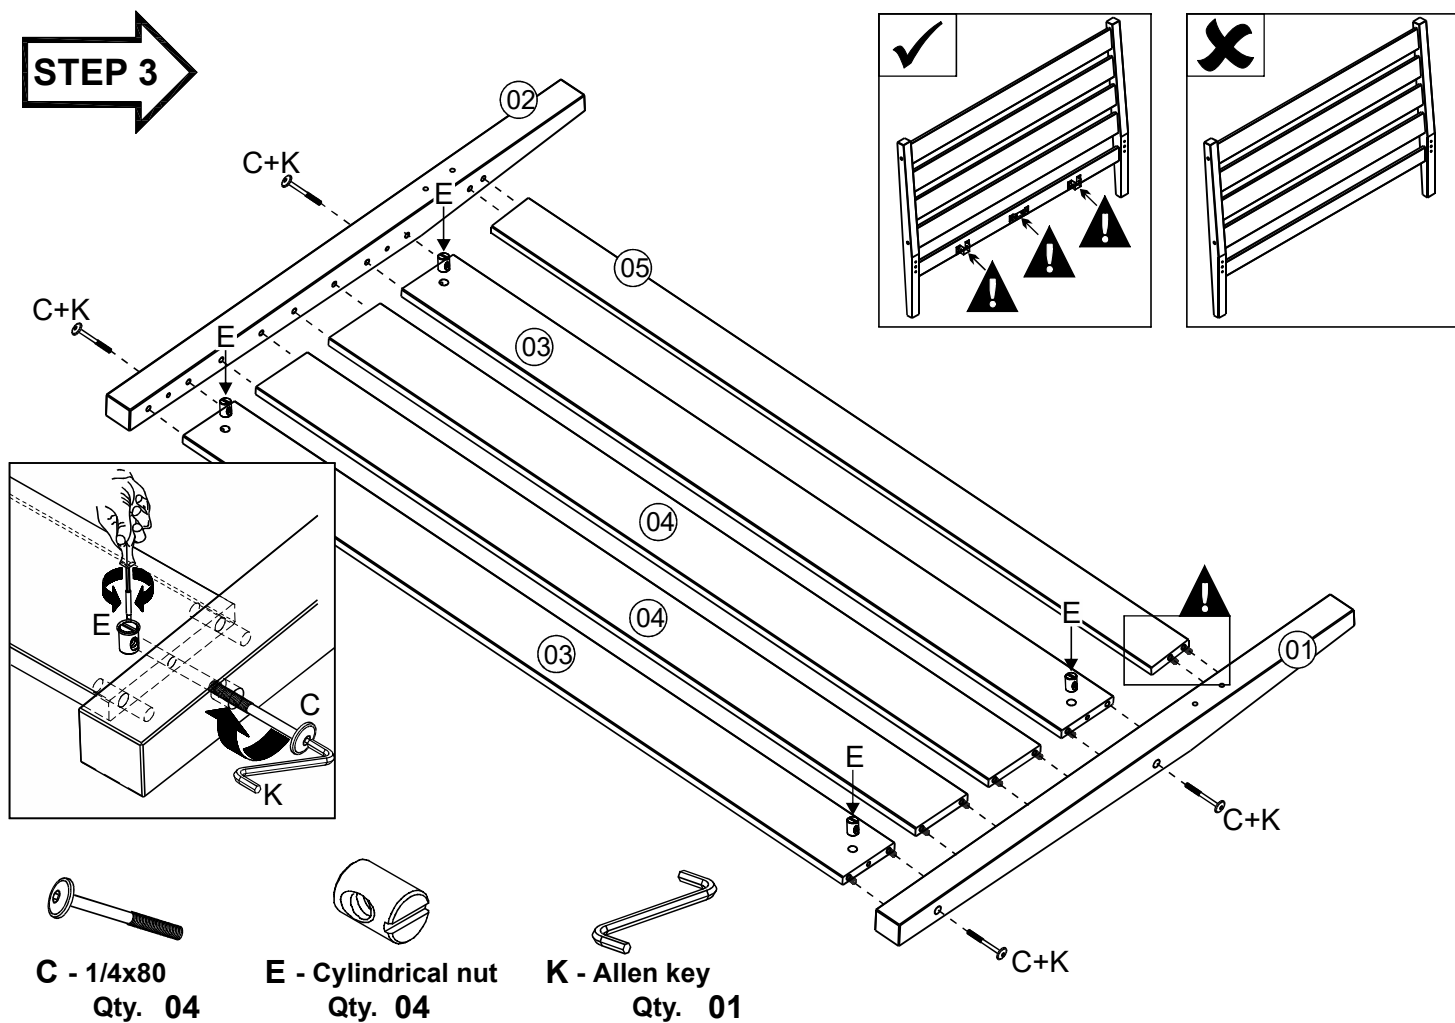


STEP 4

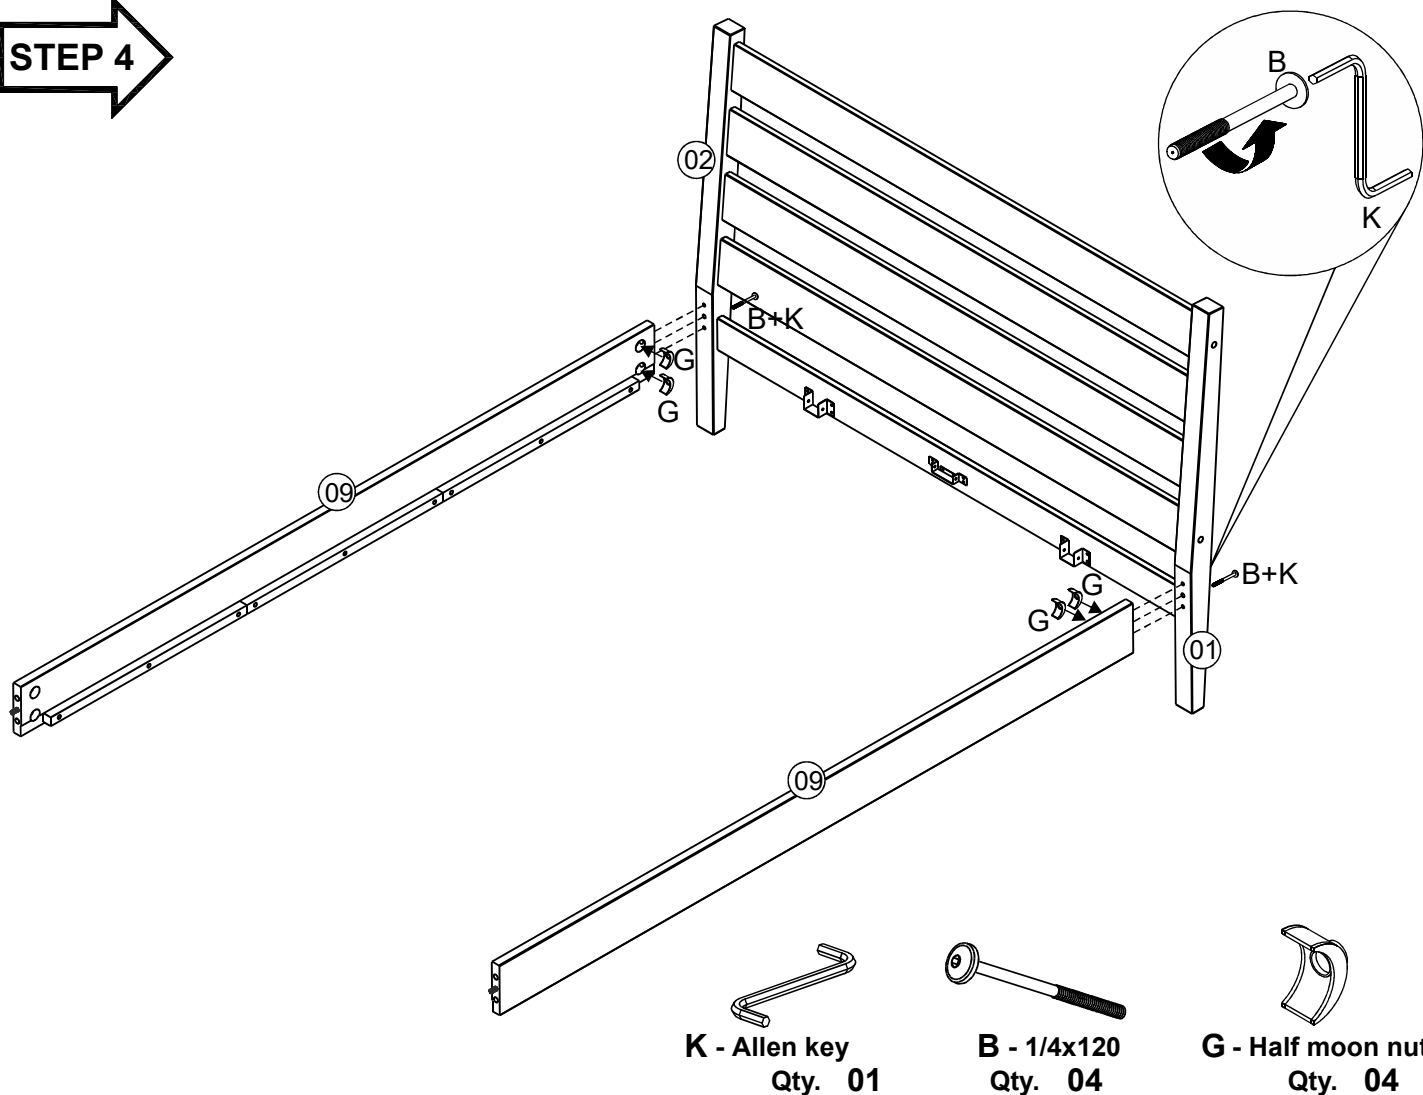

STEP 5


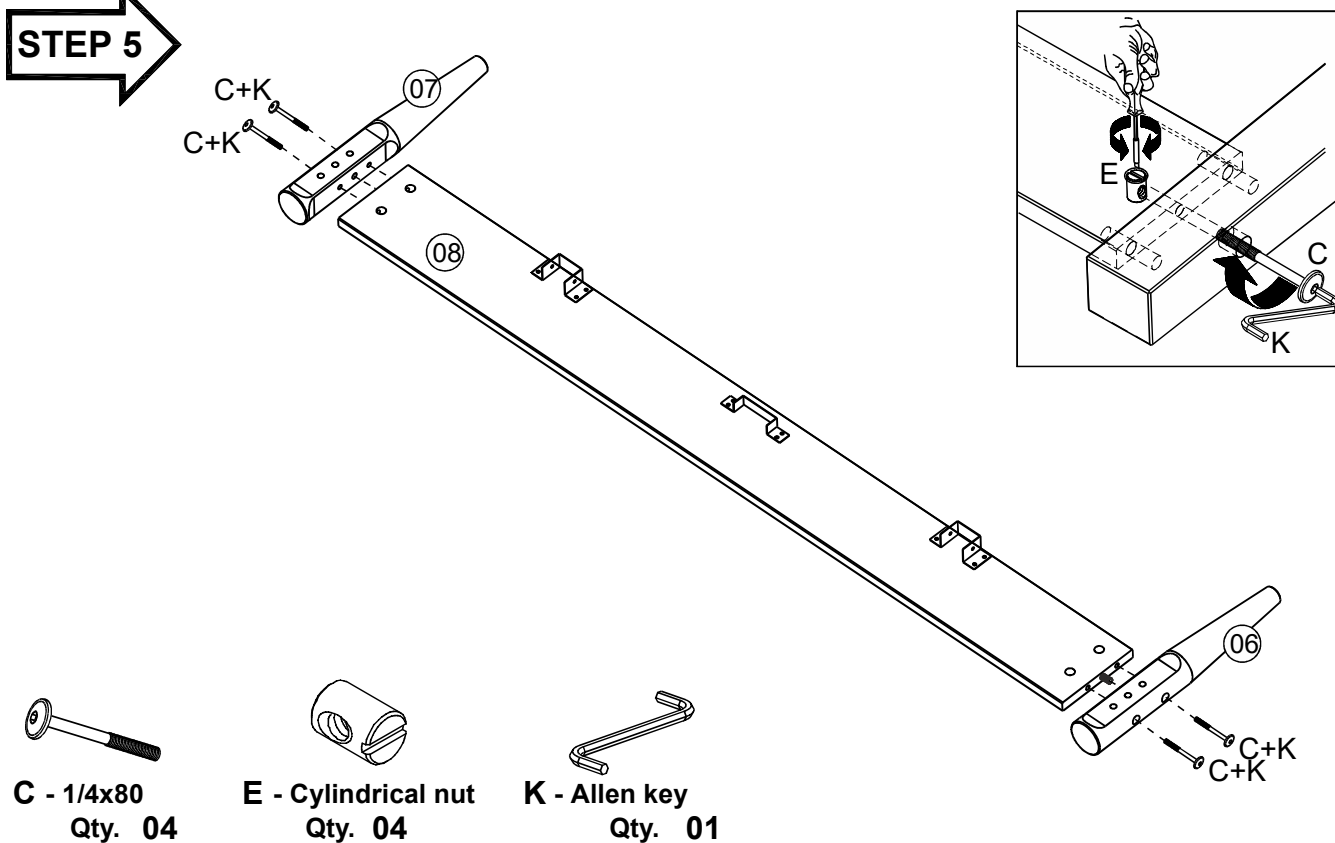


STEP 6

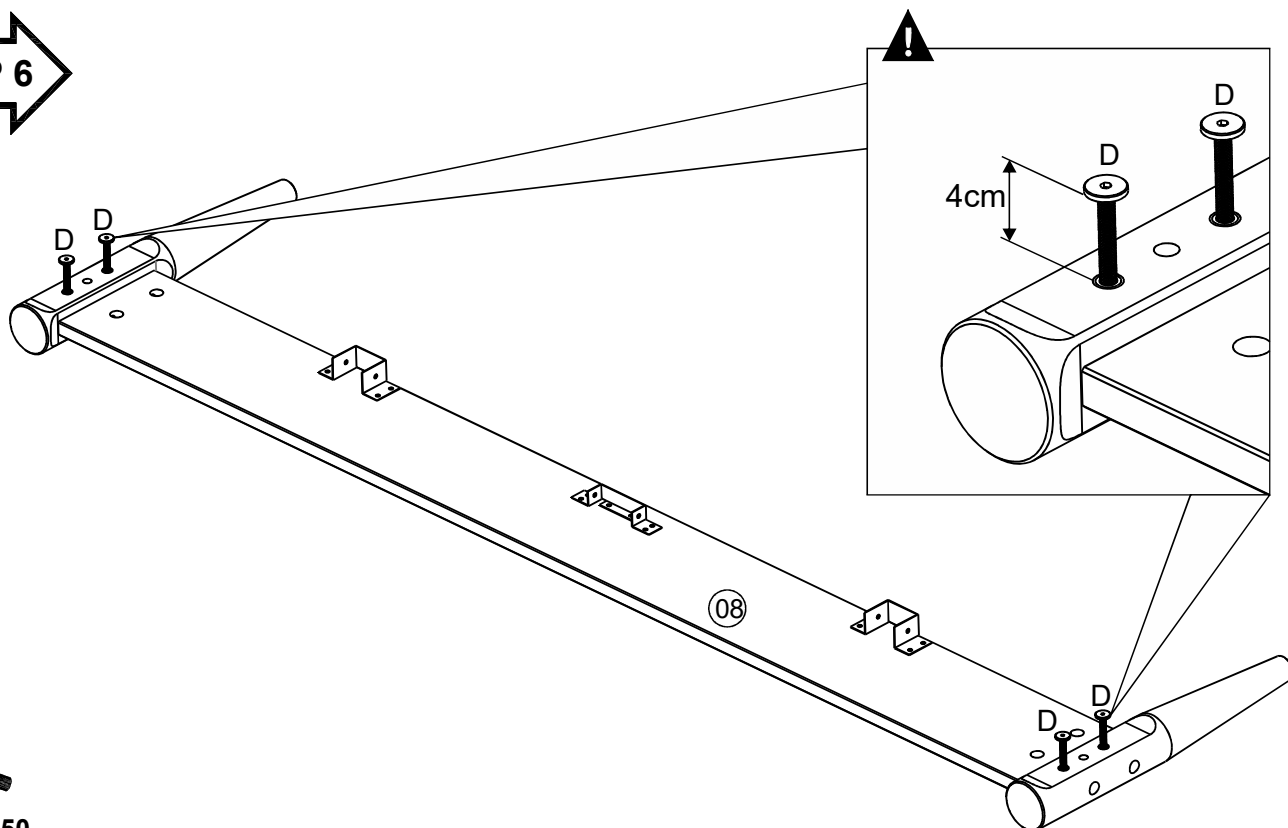

D - 1/4x50
Qty. 04

STEP 7

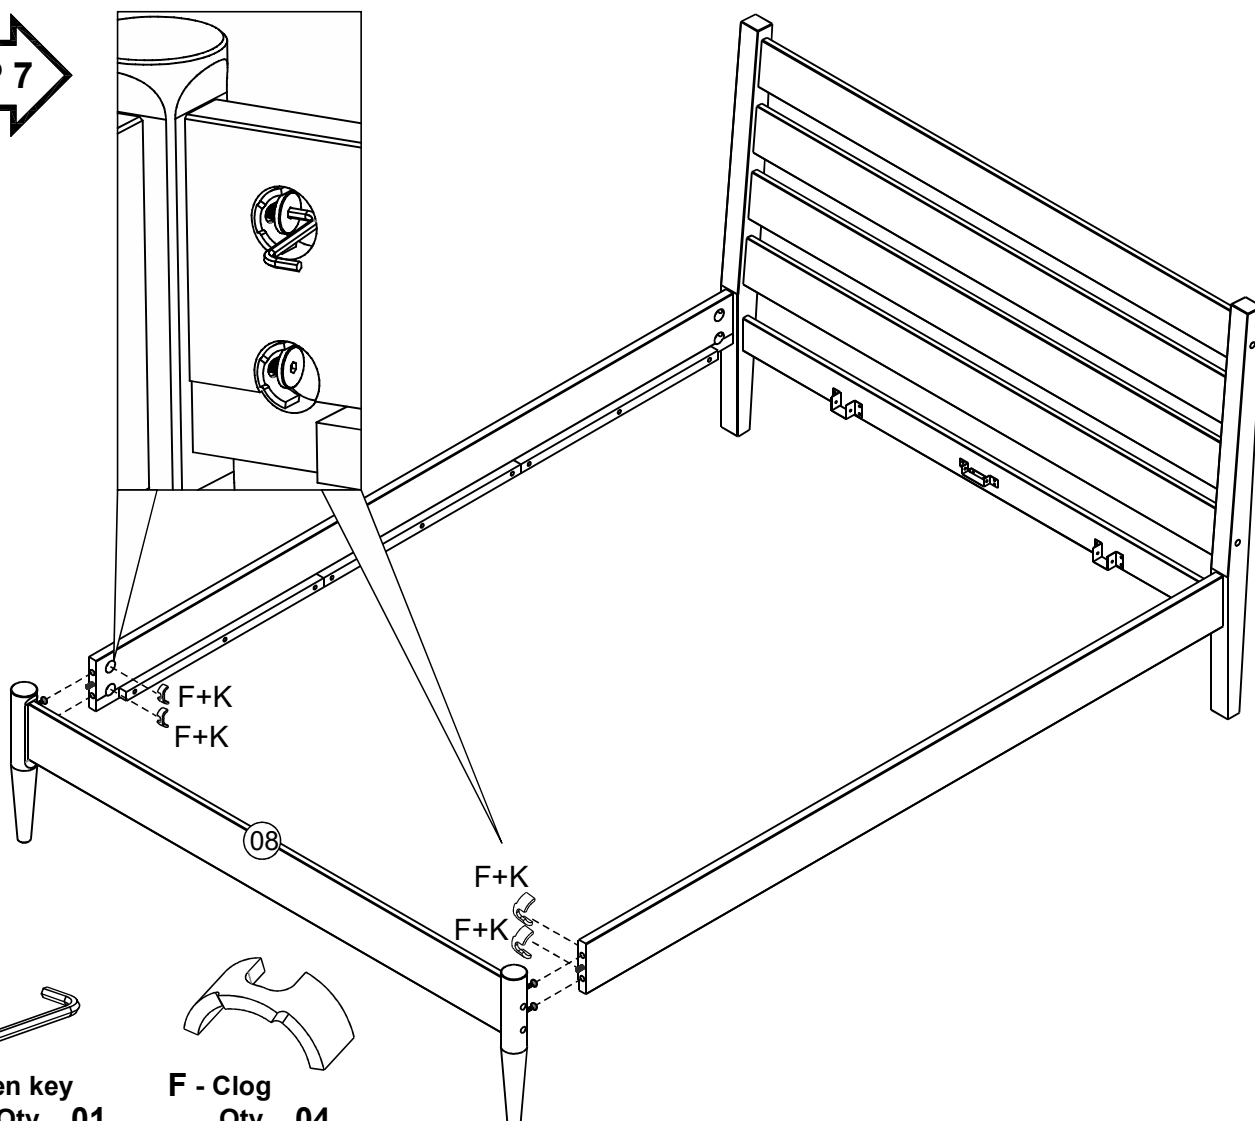


K - Allen key
Qty. 01




F - Clog
Qty. 04





STEP 8



H - 4,0x45
Qty. 04


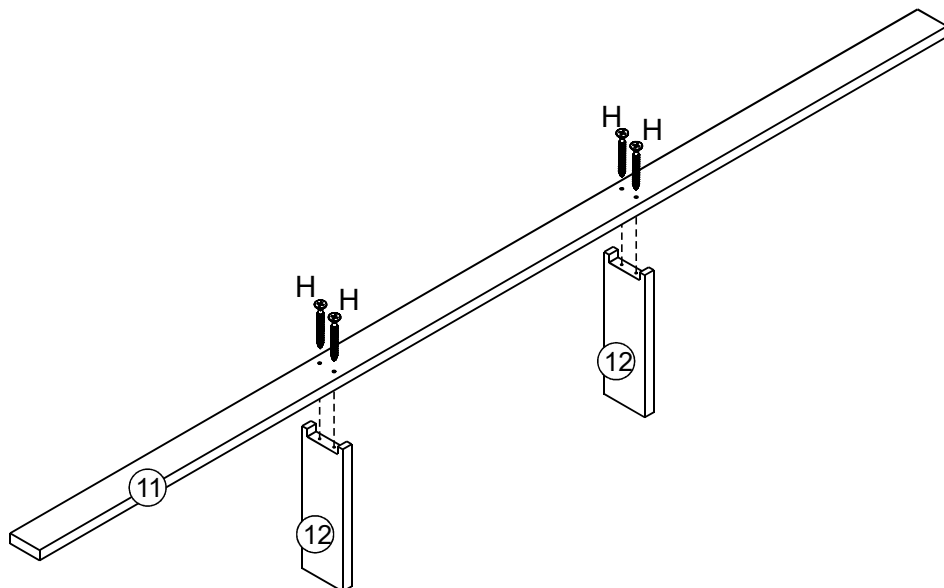


STEP 9

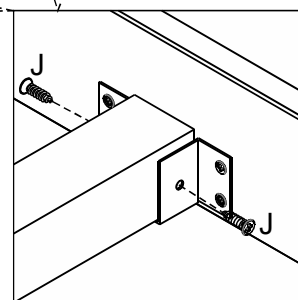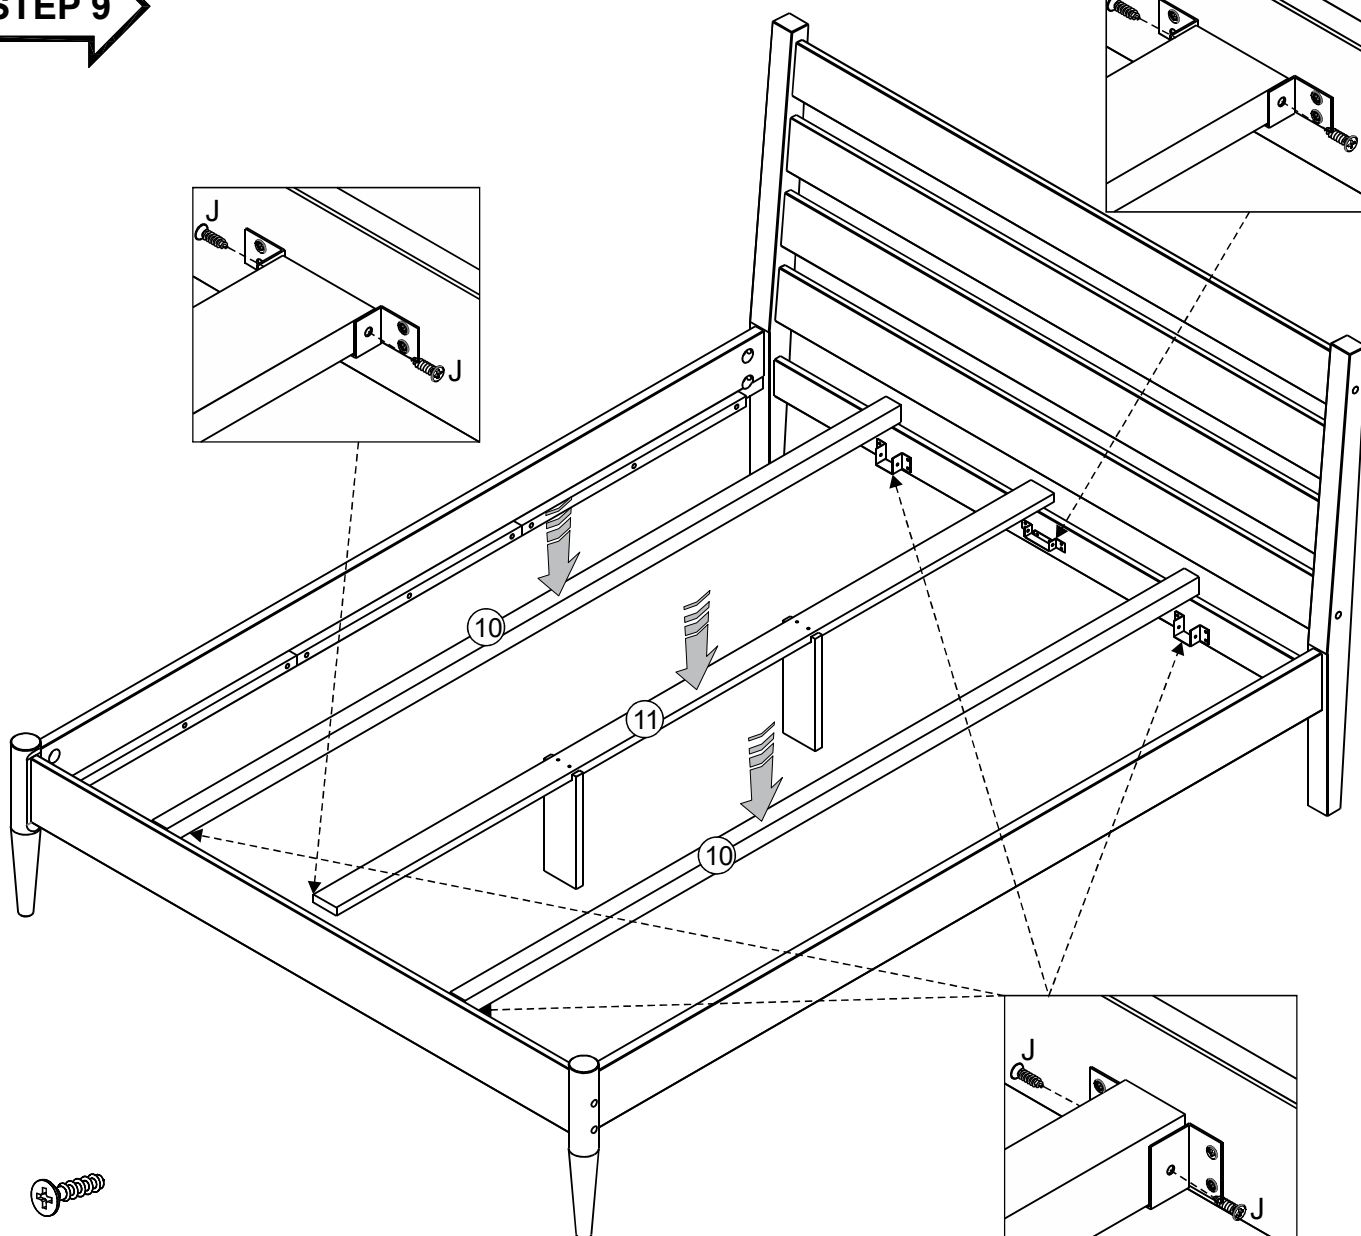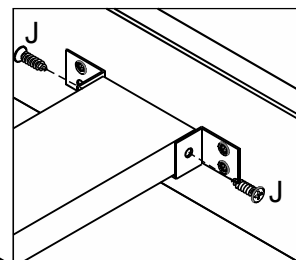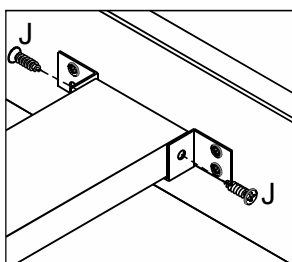

J - 3,5x16
Qty. 12


STEP 10

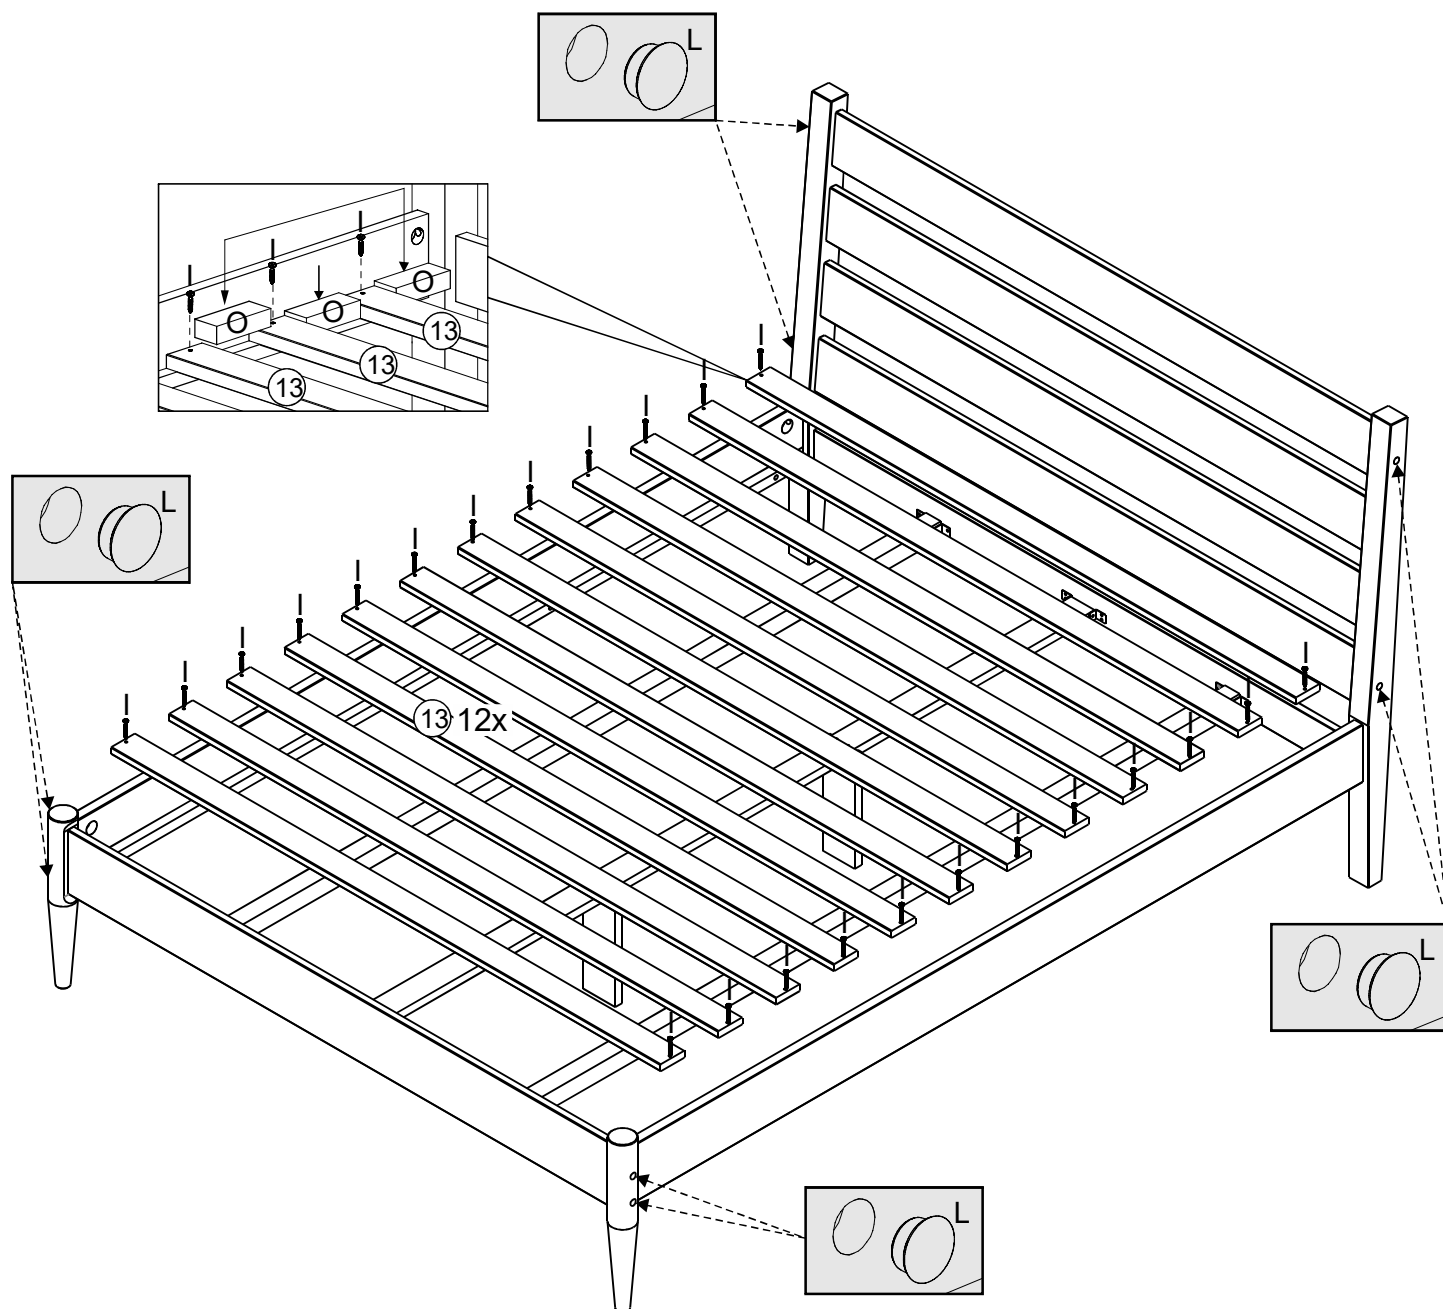

I - 3,5x30
Qty. 24



L - Hole plugs
Qty. 08



O - Space wooden
Qty. 02