


ASSEMBLY INSTRUCTIONS

TWIN LOFT BED WITH DESK AND STAIR

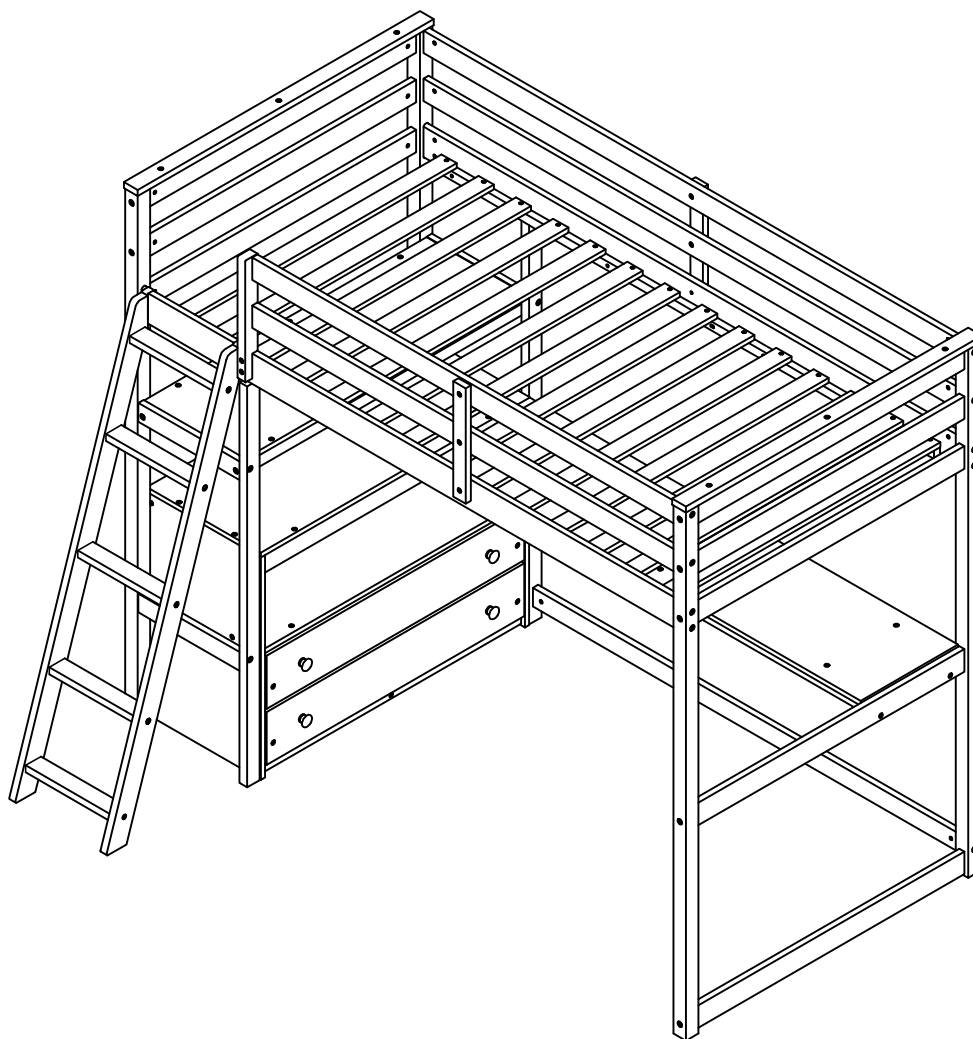

If you have any questions, please feel free to contact us.

Email: service@qualfurn.net

WF295508/WF295509

SAFETY WARNINGS AND GENERAL NOTES:

Follow the information on the warnings on the loft bed end structure and on the carton. Do not remove the warning label from the bed. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.

The top surface of the mattress must be at least 5*inch (127mm) below the upper edge of the guardrail.

Do not allow children under 6 years of age to use the upper bunk.

Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.

Do not allow horseplay on or under beds.

Always prohibit jumping on the bed.

Prohibit more than one person on upper bunk.

Always use the ladder for entering and leaving the upper bunk.

Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

Use of a night-light may provide added safety precaution for a child using the upper bunk.

Always use guardrails on both long sides of the upper bunk.

If the loft bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

STRANGULATION HAZARD-Never attach or hang items to any part of the loft bed that are not designed for use with the bed.

Keep these instructions for future reference.

We recommend assembling your loft bed on the shipping carton to protect your floor or carpet.

Be certain all staples are out of the box before beginning assembly on the shipping carton.


USE ONLY MATTRESSES WHICH ARE 74"-75" LONG AND 38 1/2" WIDE ON UPPER AND ON LOWER BUNKS. ENSURE THICKNESS OF MATTRESS DOES NOT EXCEED 6".

SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.

Replacement Parts:


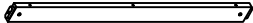
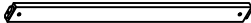
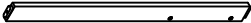
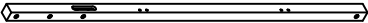
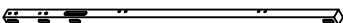
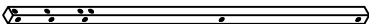
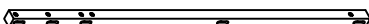
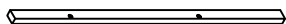
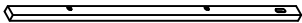




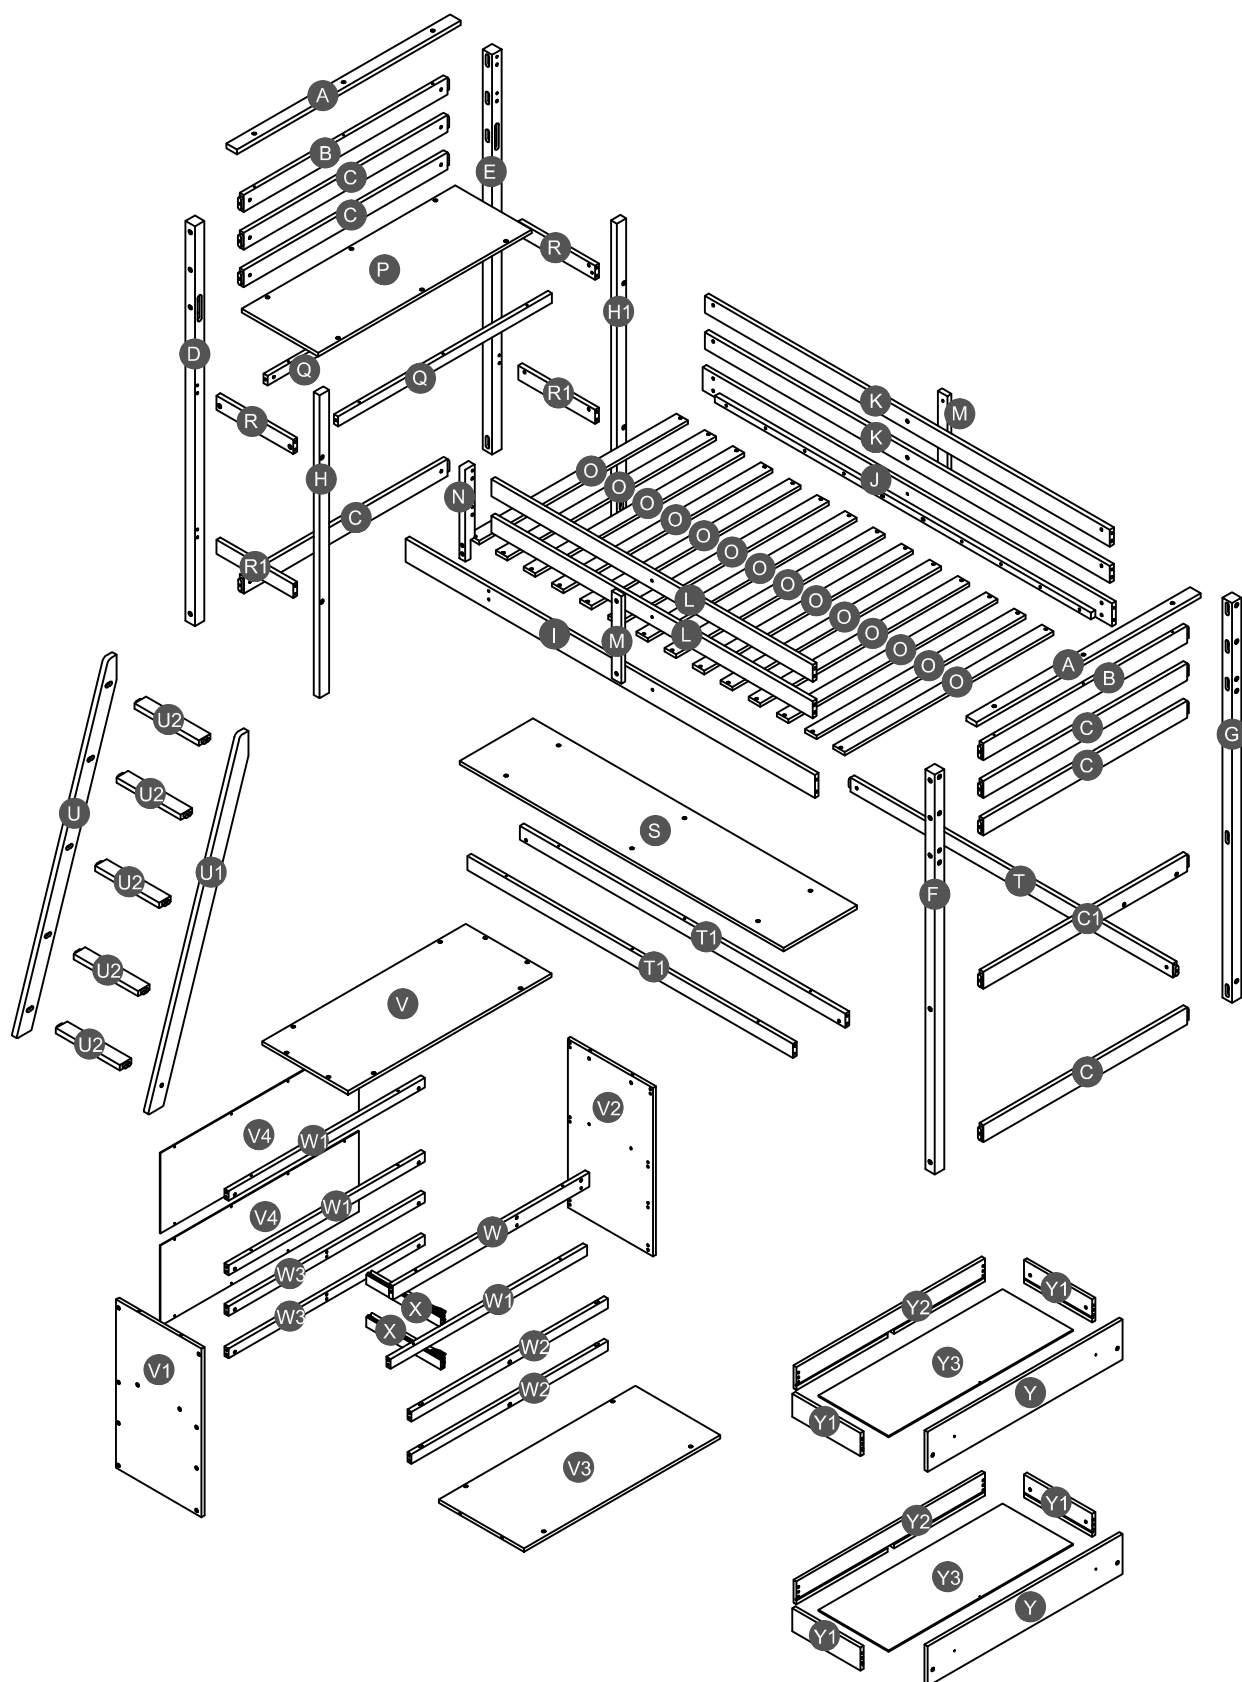







Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC. 18961 ARENTH AVENUE, CITY OF INDUSTRY , CA, 91748.) dealers

Detail View





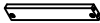






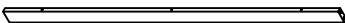

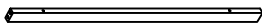


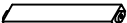
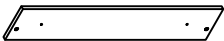



Part List

WF295508

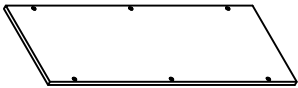

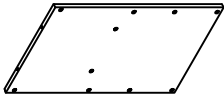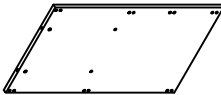
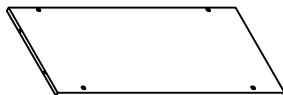
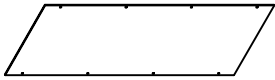












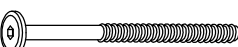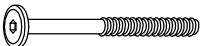
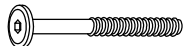

A  Cap for upper HB/FB - 2pcs	B  Horizontal bar HB/FB - 2pcs	C  Horizontal bar HB/FB - 6pcs
C1  Horizontal bar FB - 1pc	D  Leg (Left Front) - 1pc	E  Leg (Left Back) - 1pc
F  Leg (Right Front) - 1pc	G  Leg (Right Back) - 1pc	H  Leg short (Front) - 1pc
H1  Leg short (Back) - 1pc	I  Side rail (front) - 1pc	J  Side rail (back) - 1pc
K  Long guard rail - 2pcs	L  Short guard rail - 2pcs	M  Vertical guard rail - 2pcs
N  Support guard rail(Left) - 1pc	O  Slat - 14pcs	T  Lower horizontal bar (back) - 1pc
T1  Horizontal bar (Front/Back) - 2pcs	U  Left side ladder - 1pc	U1  Right side ladder - 1pc
U2  Step ladder - 5pcs		

Part List

Hardware List WF295509


P  Top panel HB - 1pc	Q  Horizontal bar HB - 2pcs	R  Horizontal bar HB (Front/Back) - 2pcs
R1  Lower horizontal bar HB (Front/Back) - 2pcs	S  Top panel (Back) - 1pc	V  Top panel - 1pc
V1  Side panel (Left) - 1pc	V2  Side panel (Right) - 1pc	V3  Shelf panel - 1pc
V4  Back panel - 2pcs	W  Upper horizontal bar (front) - 1pc	W1  Divider horizontal bar (front/back) - 3pcs
W2  Lower horizontal bar (front) - 2pcs	W3  Lower horizontal bar (back) - 2pcs	X  Support drawer - 2pcs
Y  Drawer front - 2pcs	Y1  Drawer (left/right) - 4pcs	Y2  Drawer back - 2pcs
Y3  Drawer bottom - 2pcs		

Hardware List WF295509

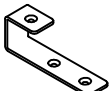1  $\varnothing 10 \times 40 \text{mm}$ Wood dowel (8pcs)	2  $\varnothing 8 \times 30 \text{mm}$ Wood dowel (44pcs)	3  $(\varnothing 15) 1/4" \times 100 \text{mm}$ Hex-Head bolts (14pcs)
4  $(\varnothing 15) 1/4" \times 80 \text{mm}$ Hex-Head bolts (25pcs)	5  $(\varnothing 12) 1/4" \times 60 \text{mm}$ Hex-Head bolts (59pcs)	6  $(\varnothing 12) 1/4" \times 35 \text{mm}$ Hex-Head bolts (2pcs)
7  $(\varnothing 12) 1/4" \times 30 \text{mm}$ Hex-Head bolts (6pcs)	8  $1/4" \times 15 (9.5 \text{mm})$ Horizontal-Hole bolts (98pcs)	9  $\varnothing 4 \times 30 \text{mm}$ Wood screws (28pcs)
10  $(1/4") 4.5 \times 58 \text{mm}$ Allen key (1pc)	11  $\varnothing 38 \times 31 \text{mm}$ Pine Knob (4pcs)	12  $3/16" \times 25 \text{mm}$ Ph zinc(Knob) (4pcs)
13  $340 \times 30 \text{mm}$ Upper slider drawer (2pcs)	14  $\varnothing 3.5 \times 15 \text{mm}$ Wood screws (10pcs)	15  $\varnothing 4 \times 19 \text{mm}$ Wood screws (6pcs)
16  $\varnothing 3.5 \times 15 \text{mm}$ Wood screws (24pcs)	17  $(\varnothing 12) 1/4" \times 40 \text{mm}$ Hex-Head bolts (26pcs)	18  $24 \times 28 \times 28 \times 2 \text{mm}$ Metal bracket (4pcs)
19  $81 \times 26 \times 21 (2.5 \text{mm})$ Hooks (2pcs)	20  $21 \times 21 \times 17 \times 1.7 \text{mm}$ Metal bracket (2pcs)	






ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !

STEP 1:


4		8	
8PCS		8PCS	

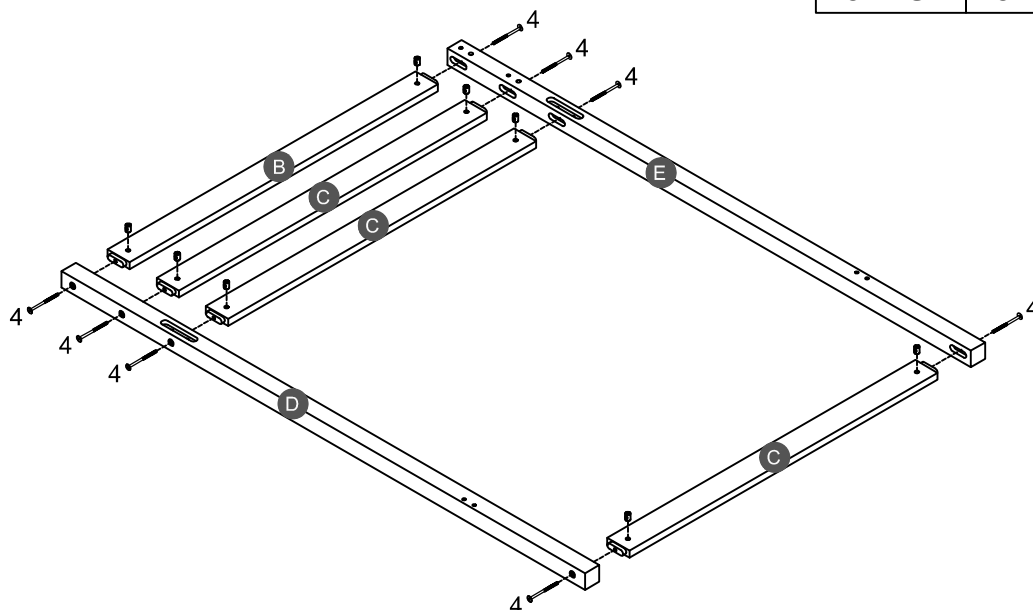


Note: Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened

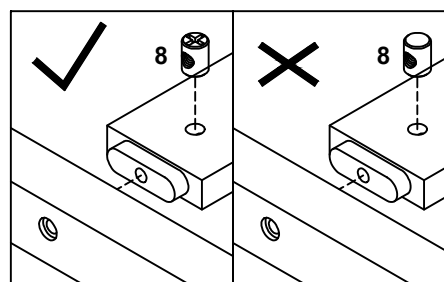




STEP 2:

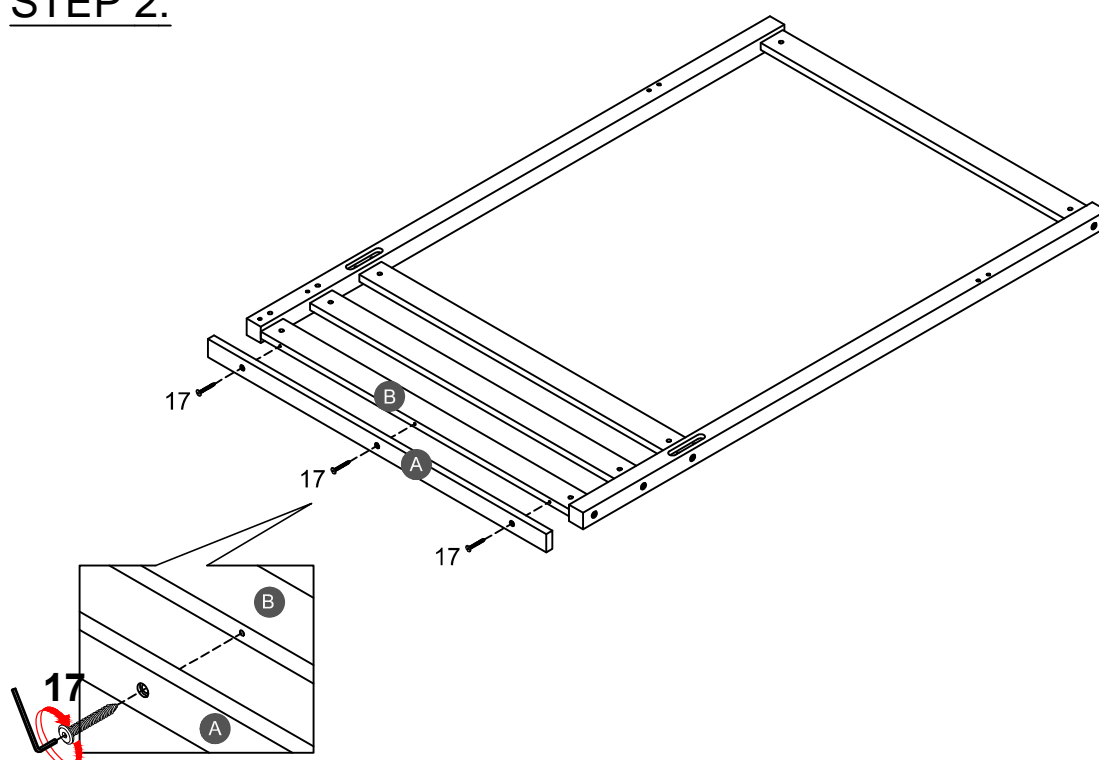17	
3PCS	




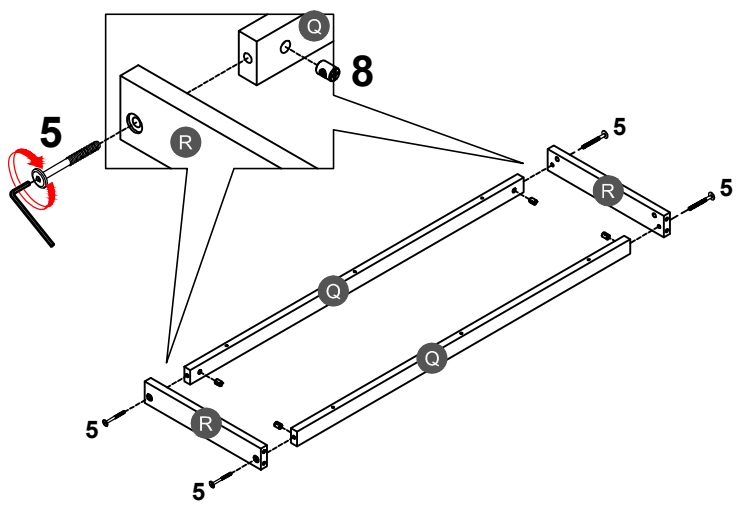



STEP 3:

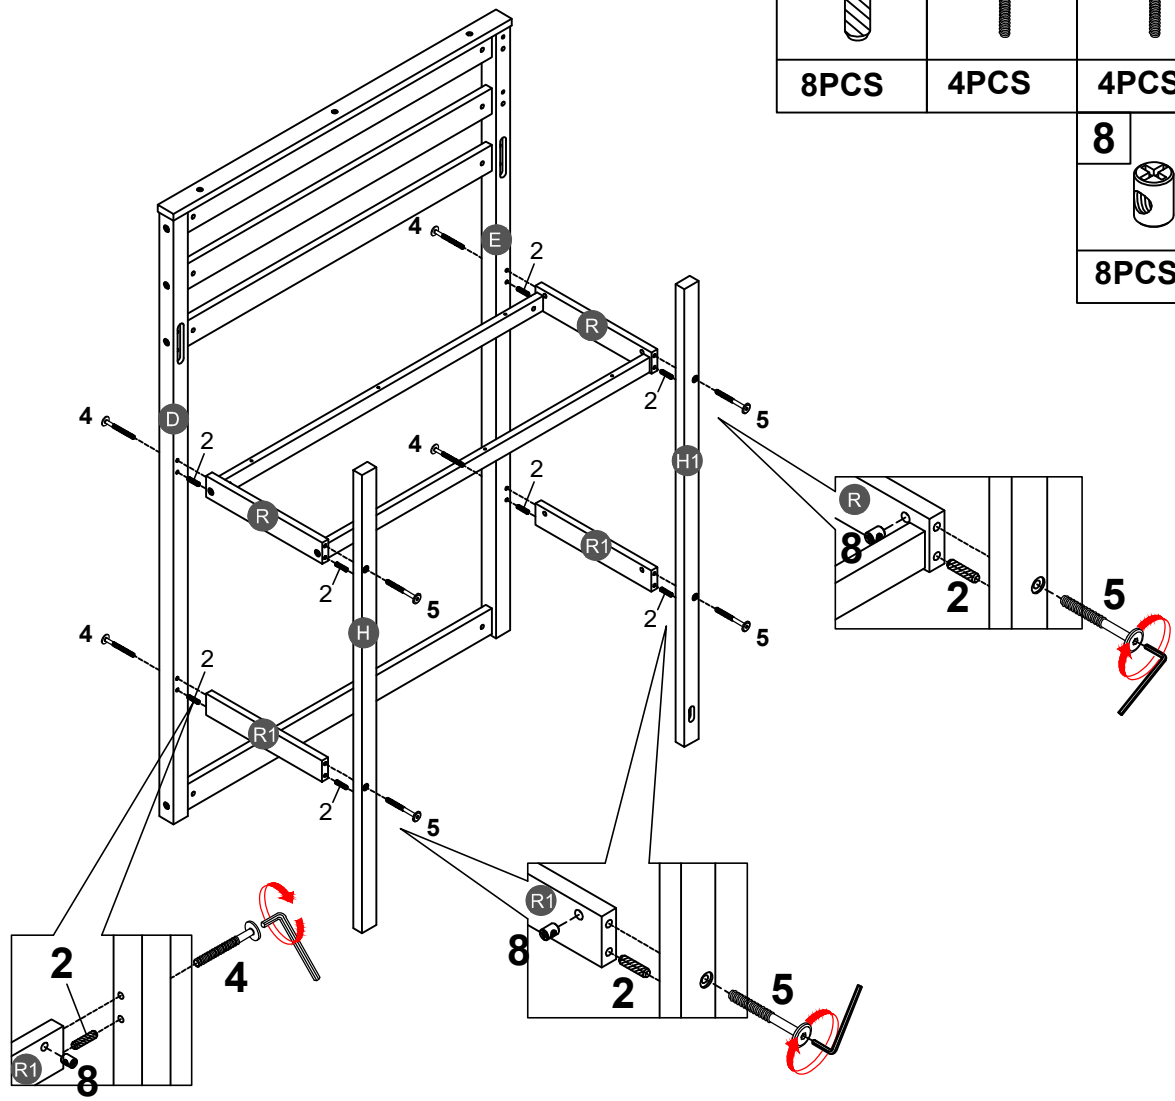


5		8	
4PCS		4PCS	


STEP 4:




2		4		5	
8PCS		4PCS		4PCS	
					8
					
					8PCS

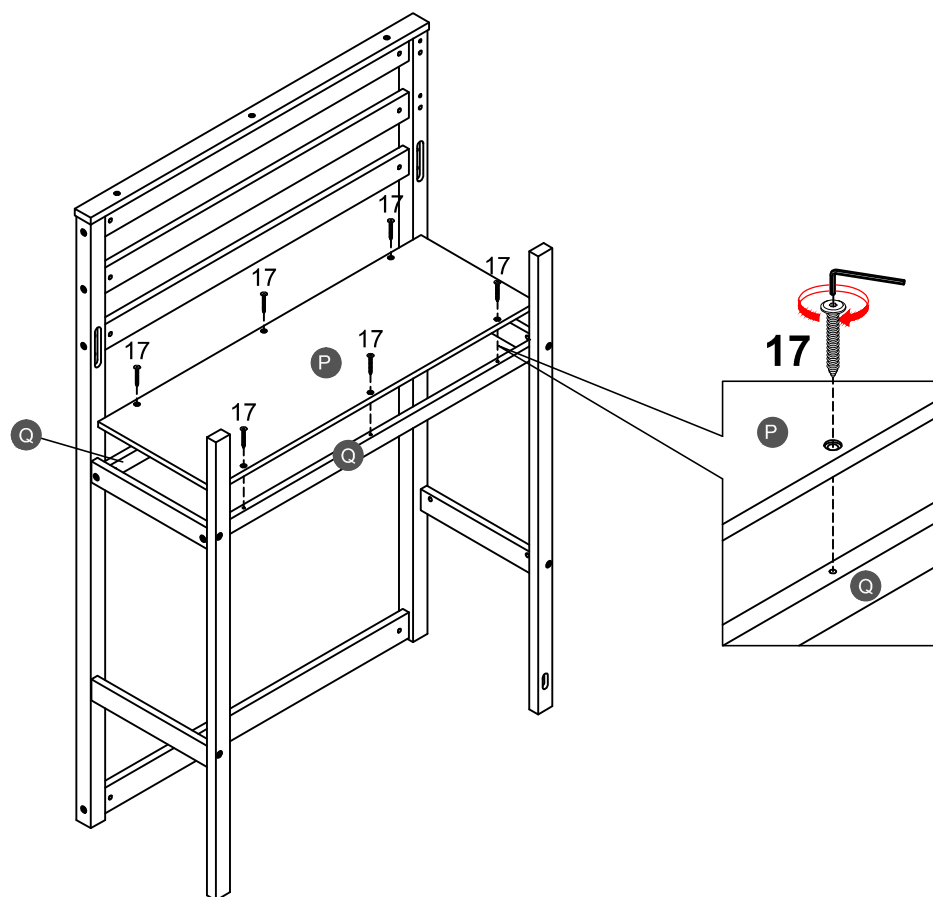

STEP 5:




17

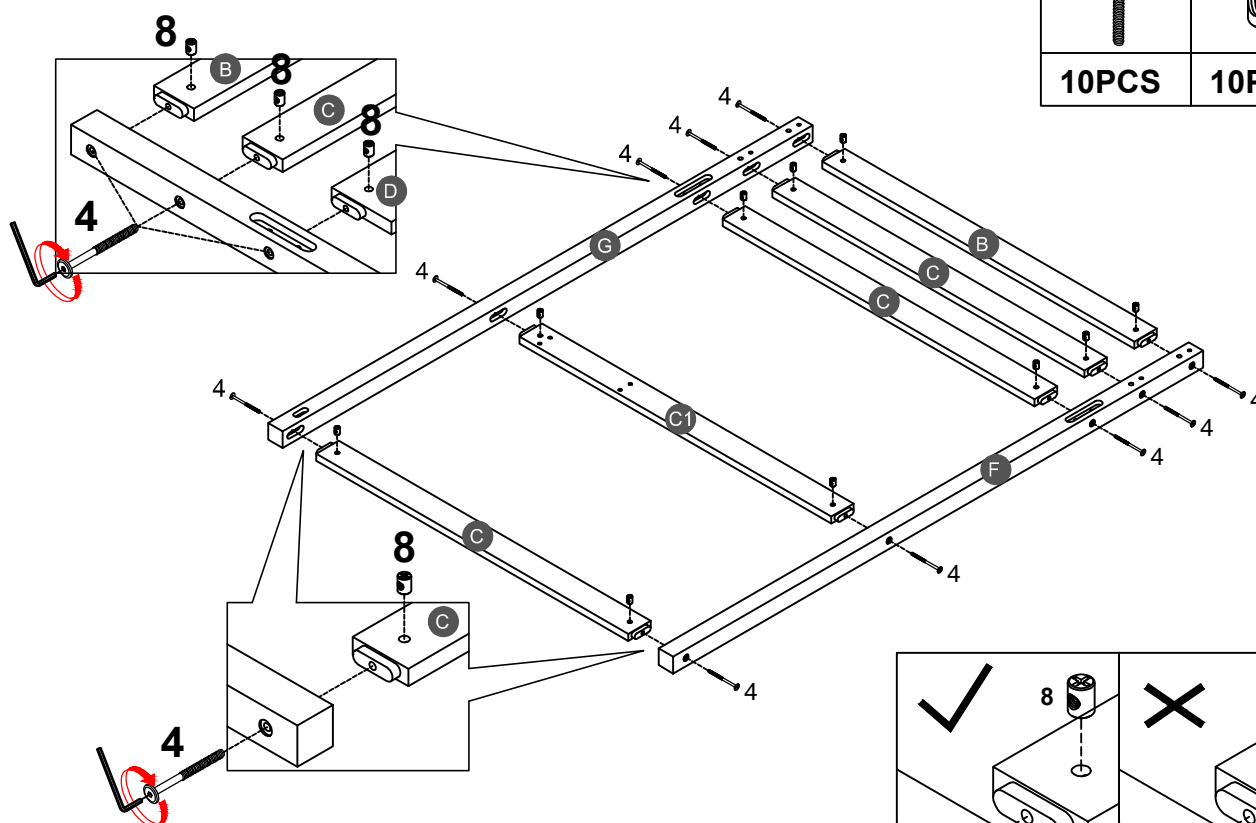6PCS

STEP 6:



4	8
	
10PCS	10PCS

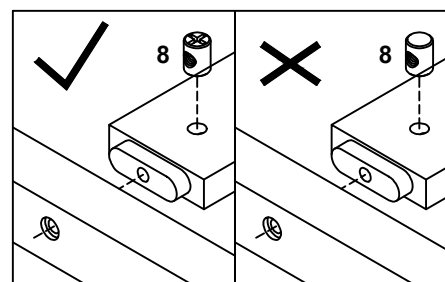Note: Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened




STEP 7:

17




3PCS

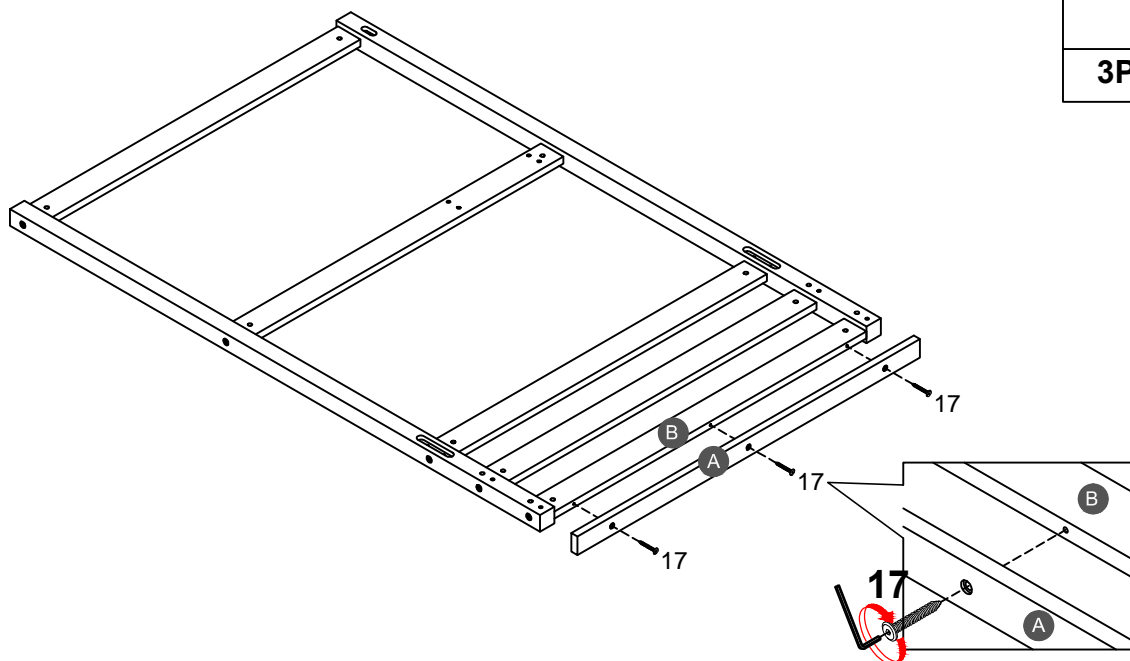

STEP 8:

1	3	5
4PCS	12PCS	1PC
	4	8
	1PC	14PCS

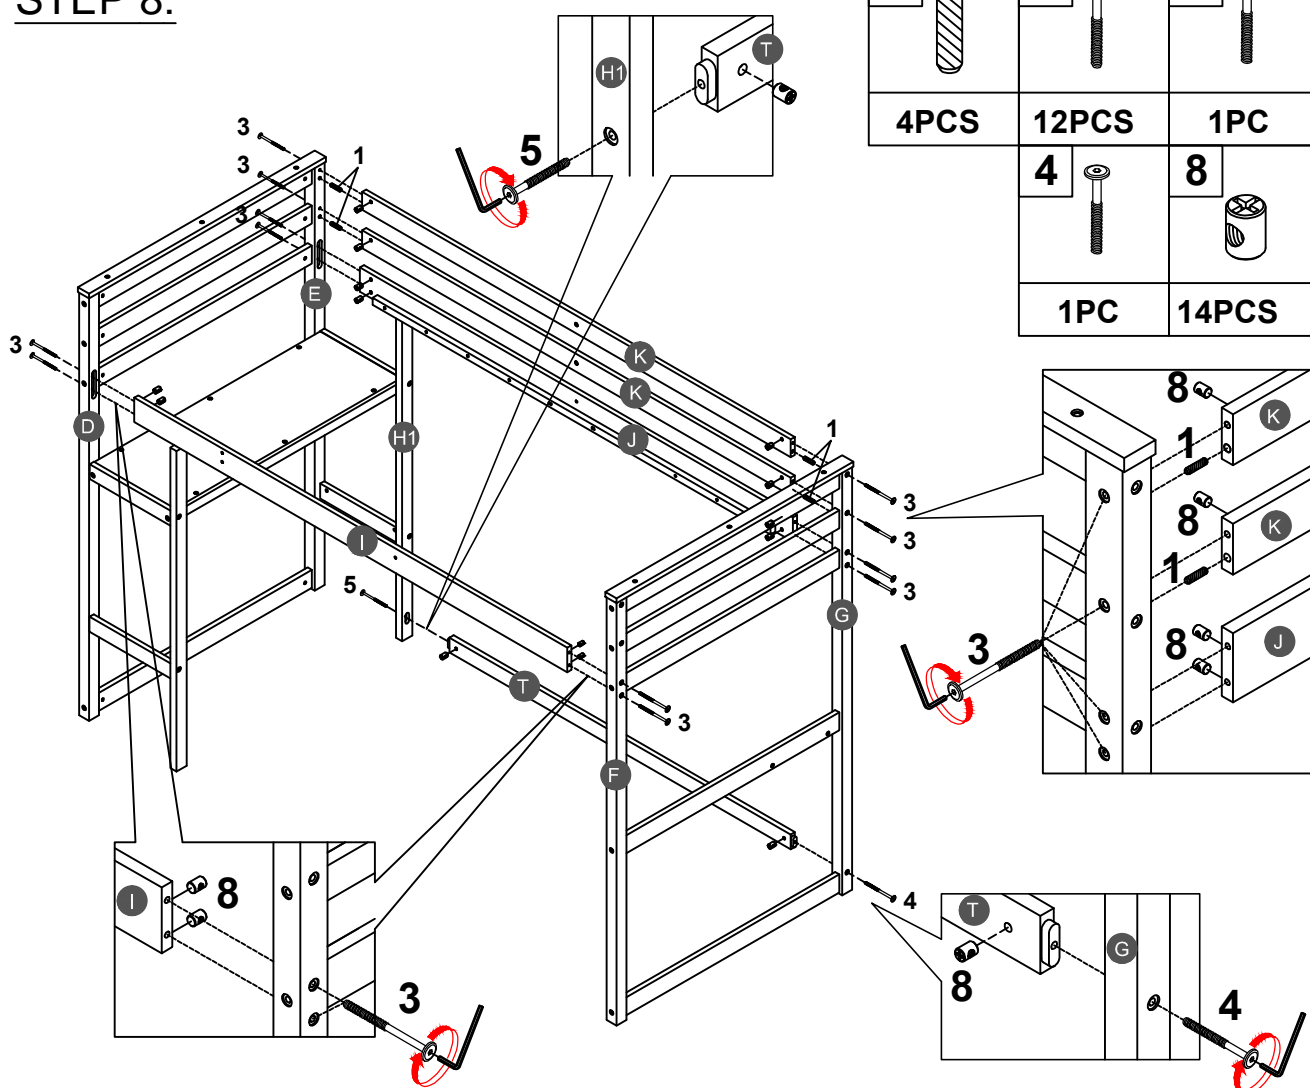


STEP 9:

7



3PCS

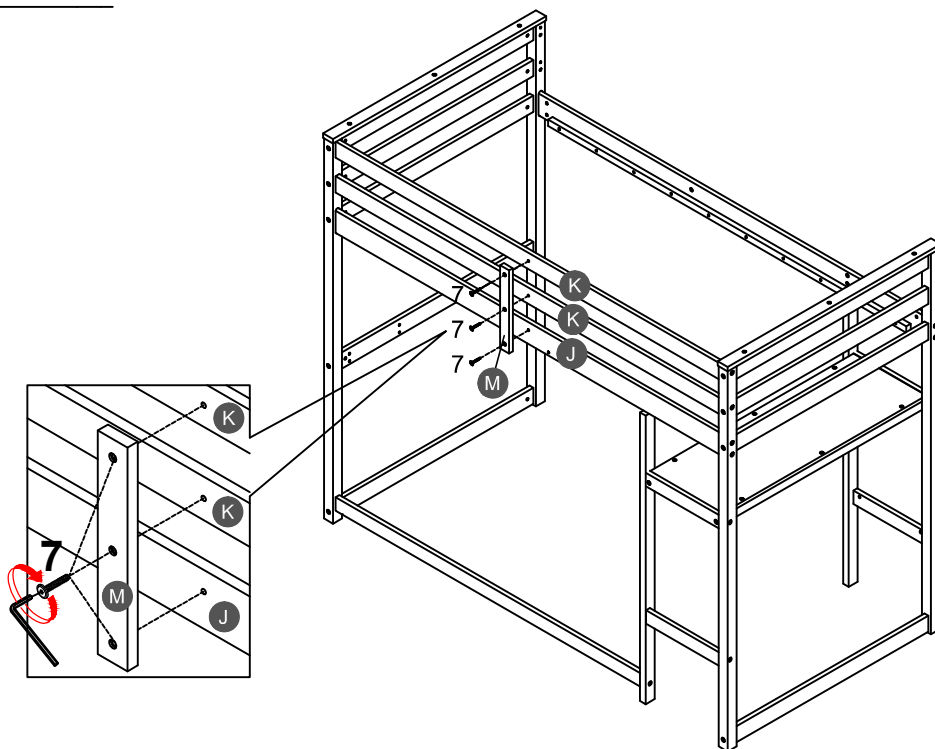

STEP 10:

1



4PCS

3



2PCS

4



2PCS

6




2PCS


8



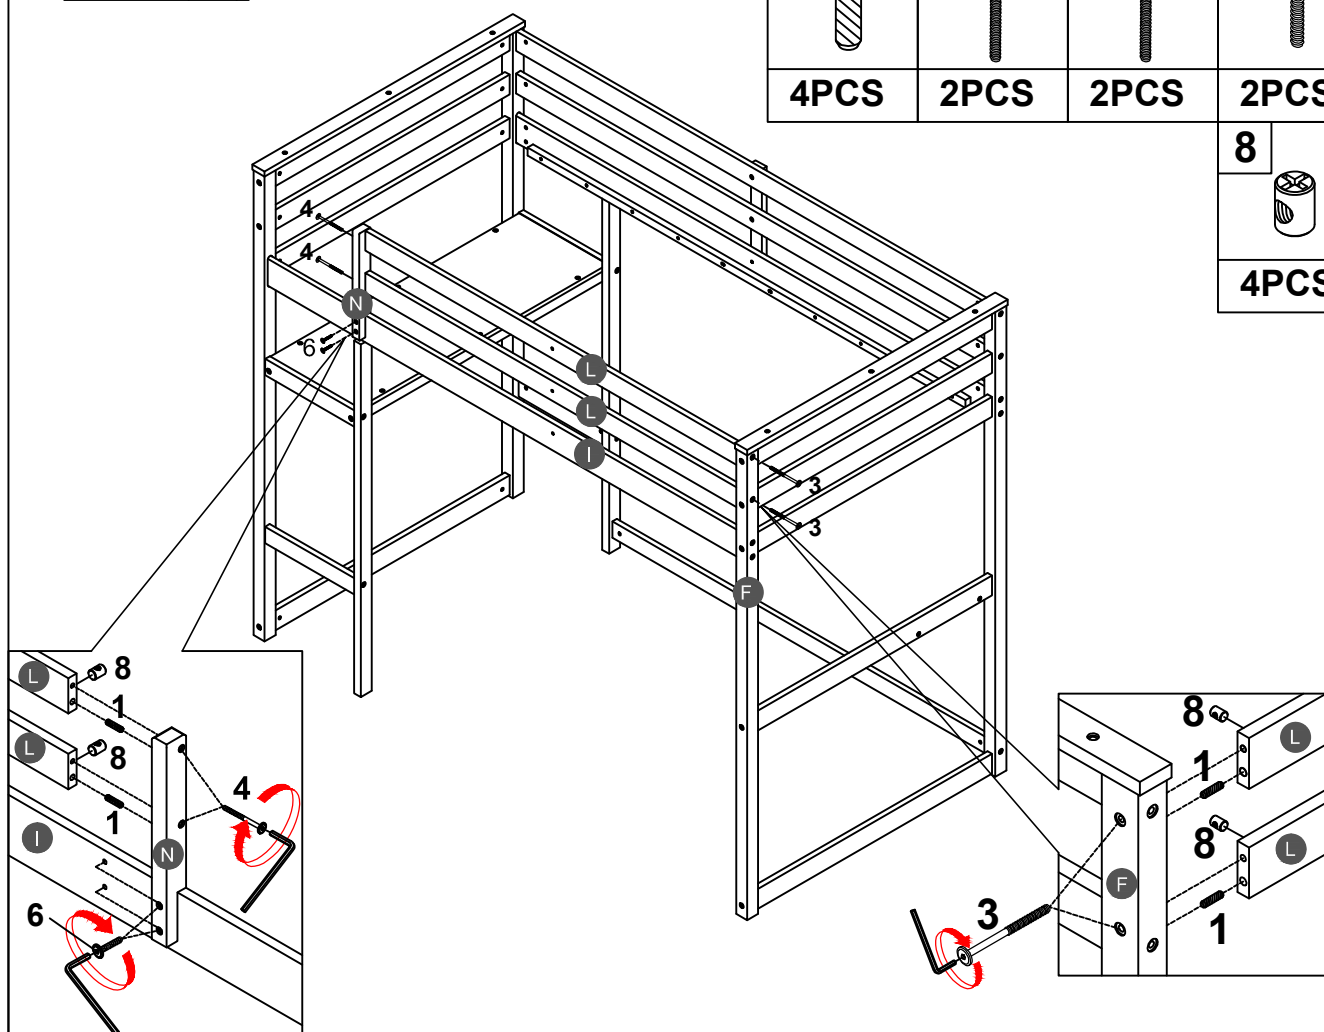


4PCS




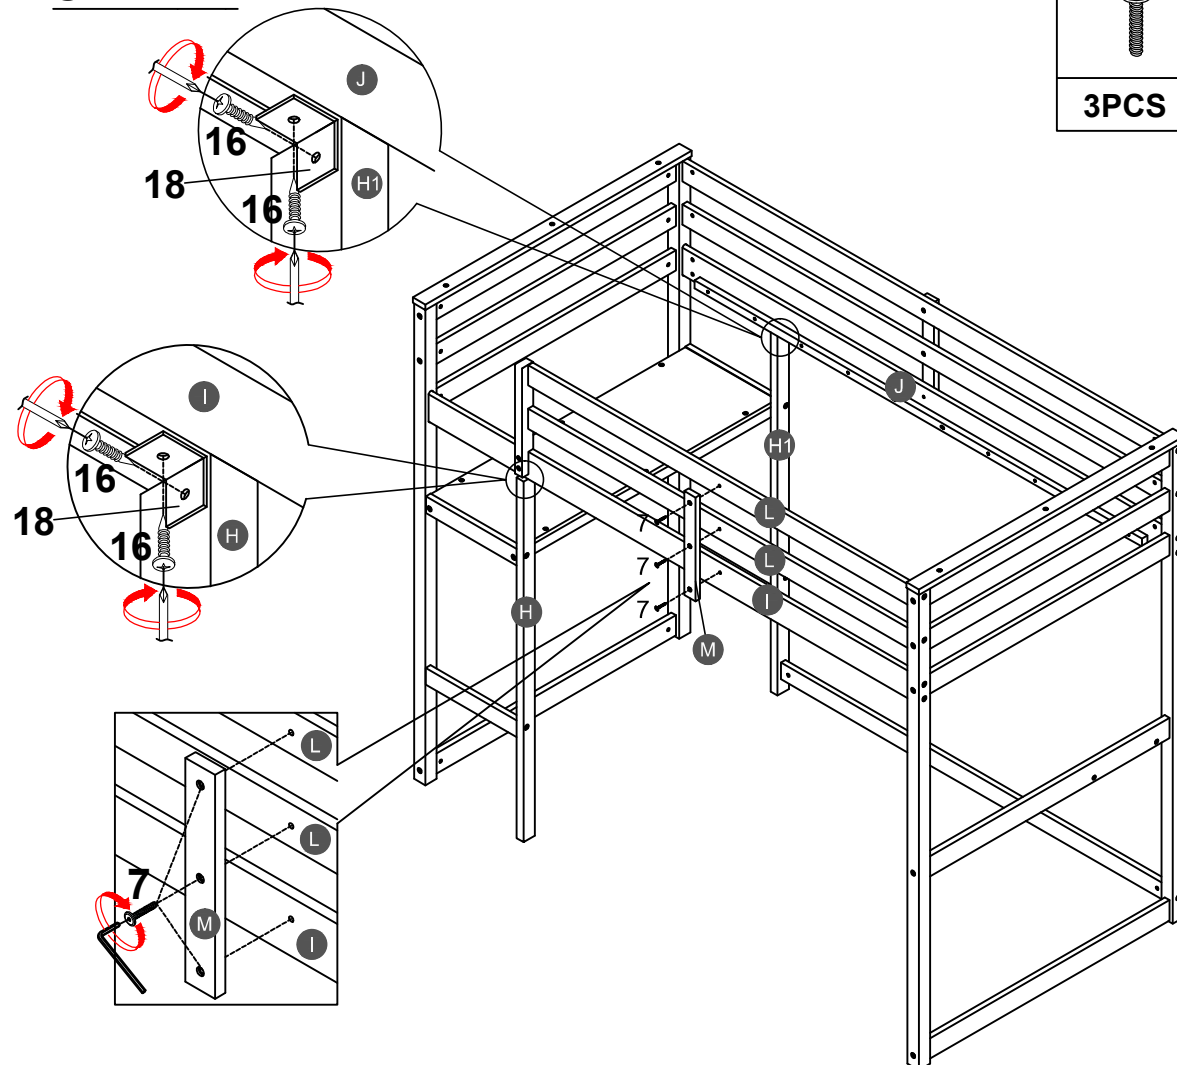

STEP 11:




7		16	
3PCS		4PCS	
		18	
		2PCS	

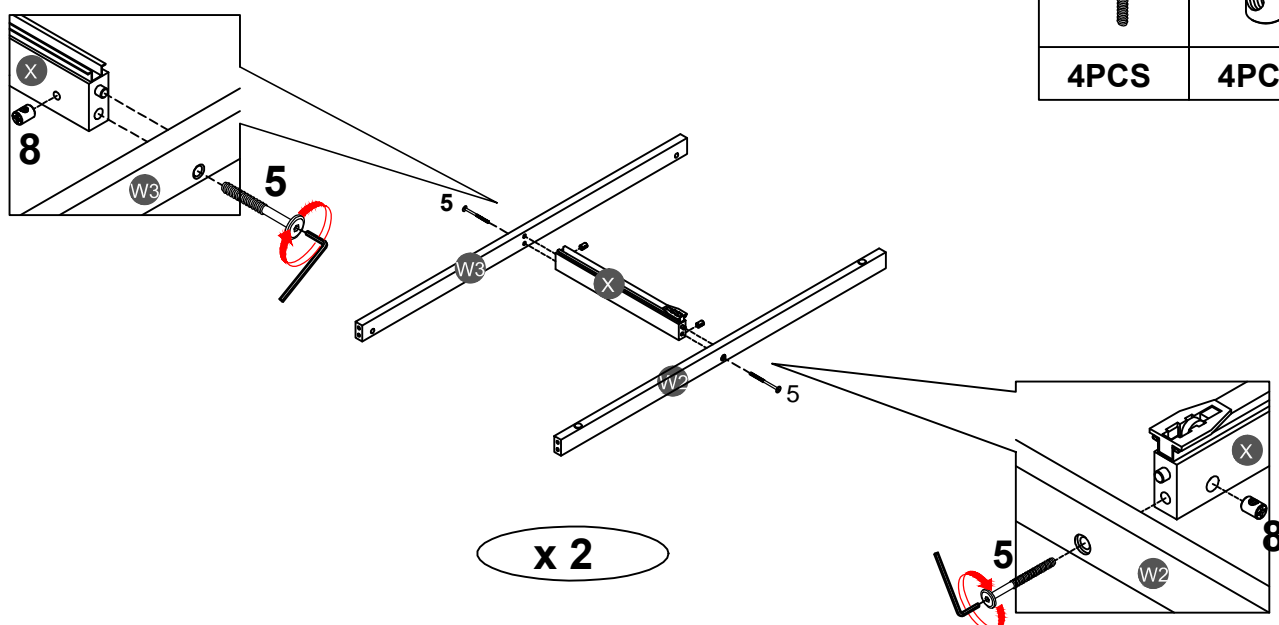STEP 12:




5		8	
4PCS		4PCS	


STEP 13:

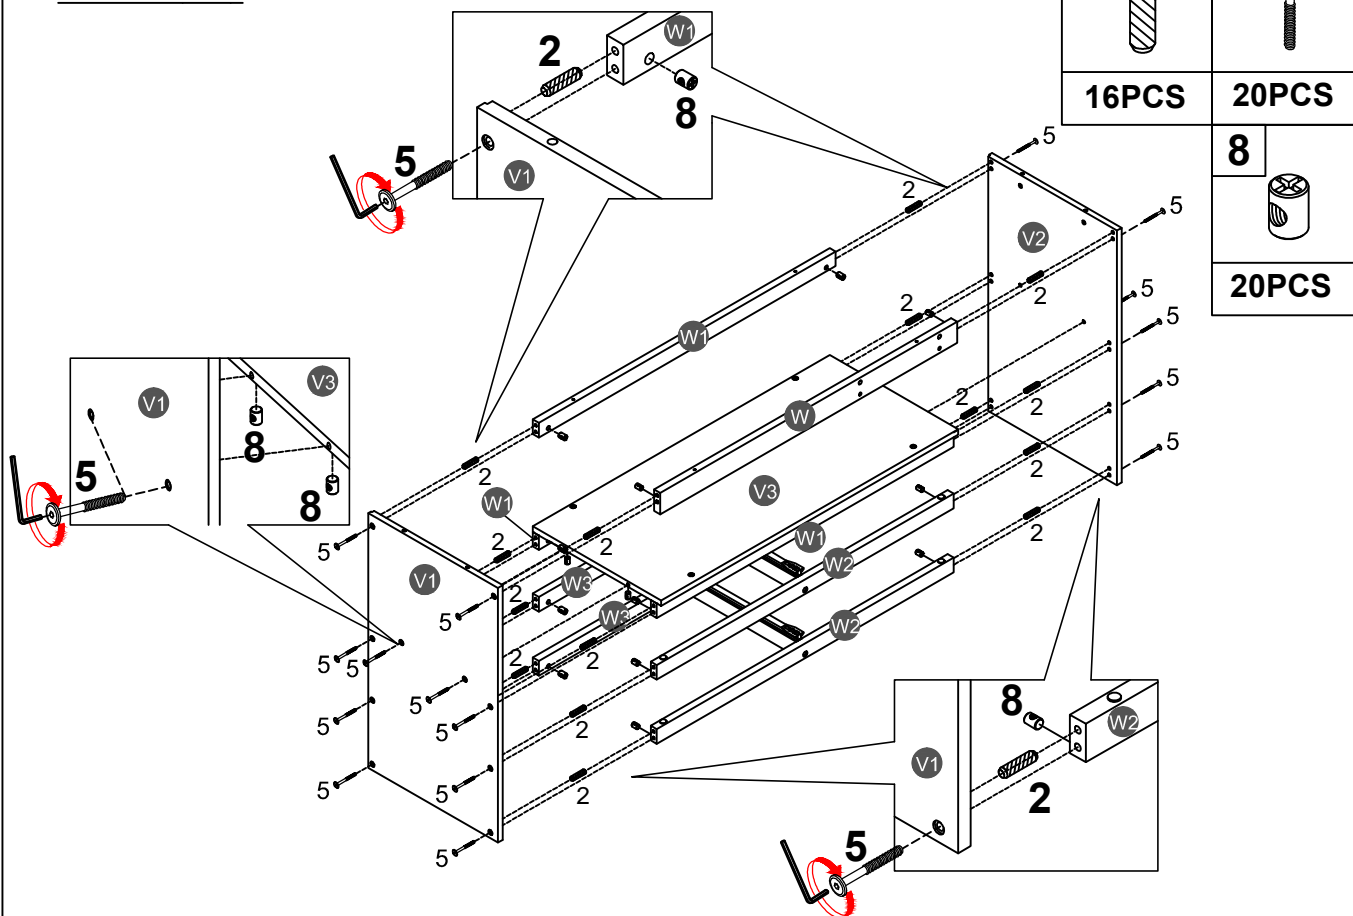

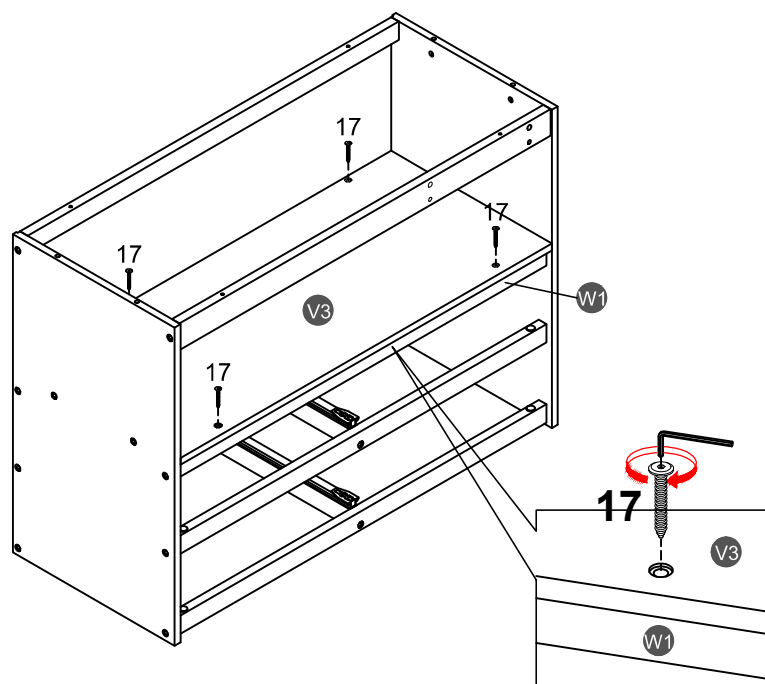


STEP 14:

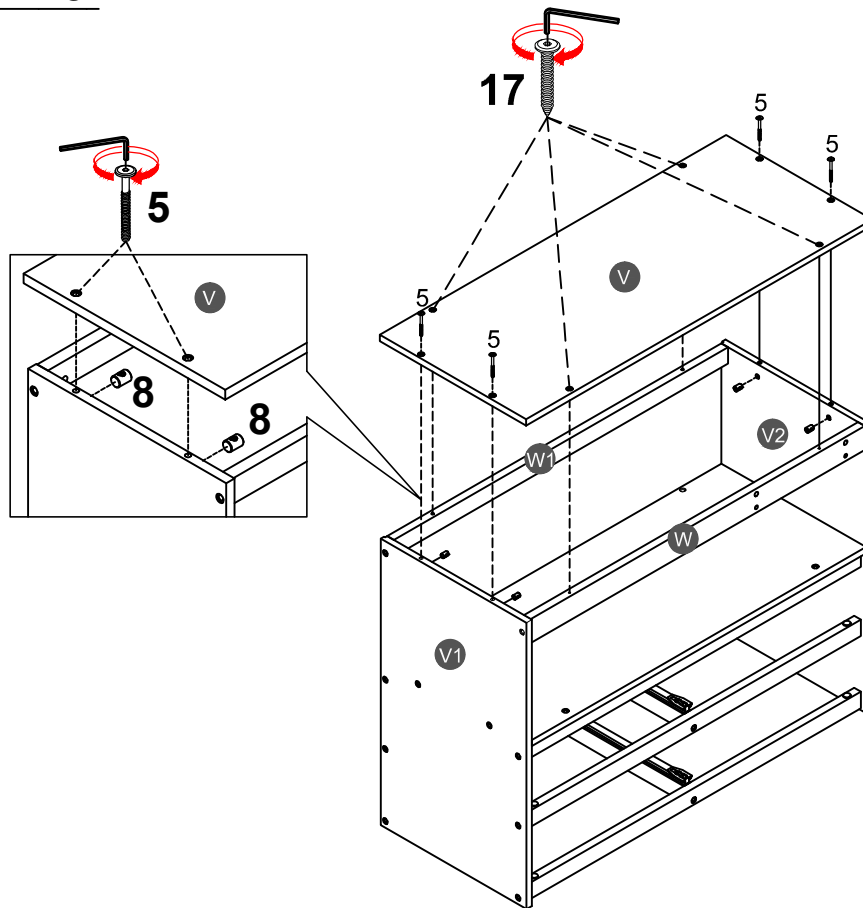



STEP 15:




5		8	
4PCS		4PCS	
		17	
		4PCS	


STEP 16:

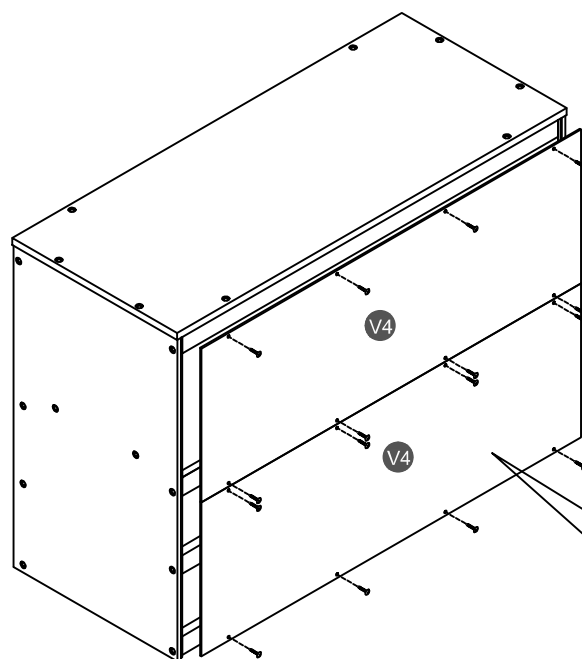

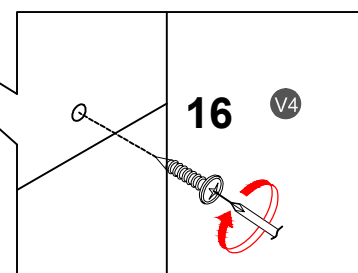


16	
16PCS	




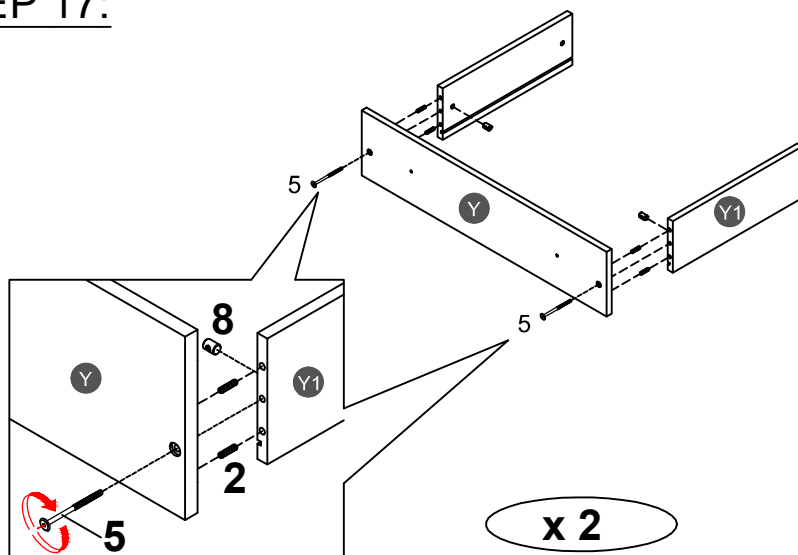


STEP 17:




2		5	
8PCS		4PCS	
		8	
		4PCS	

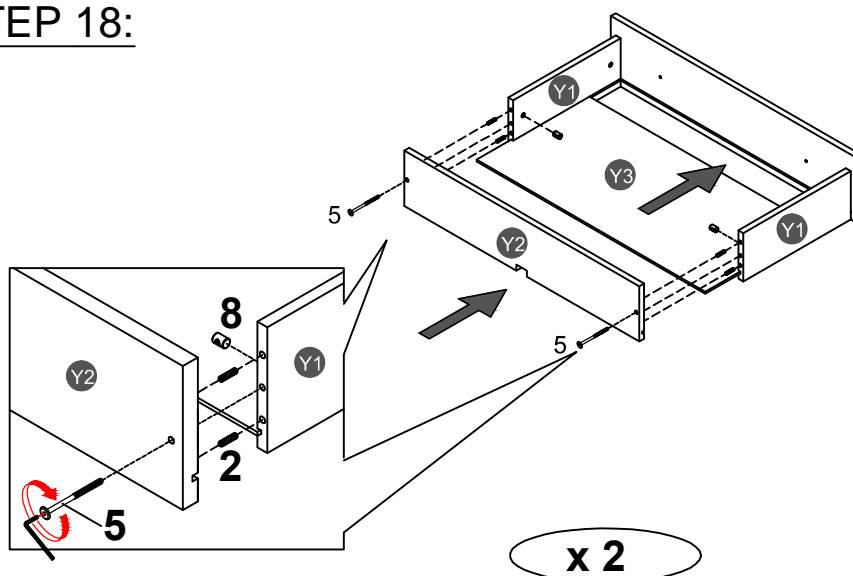

STEP 18:



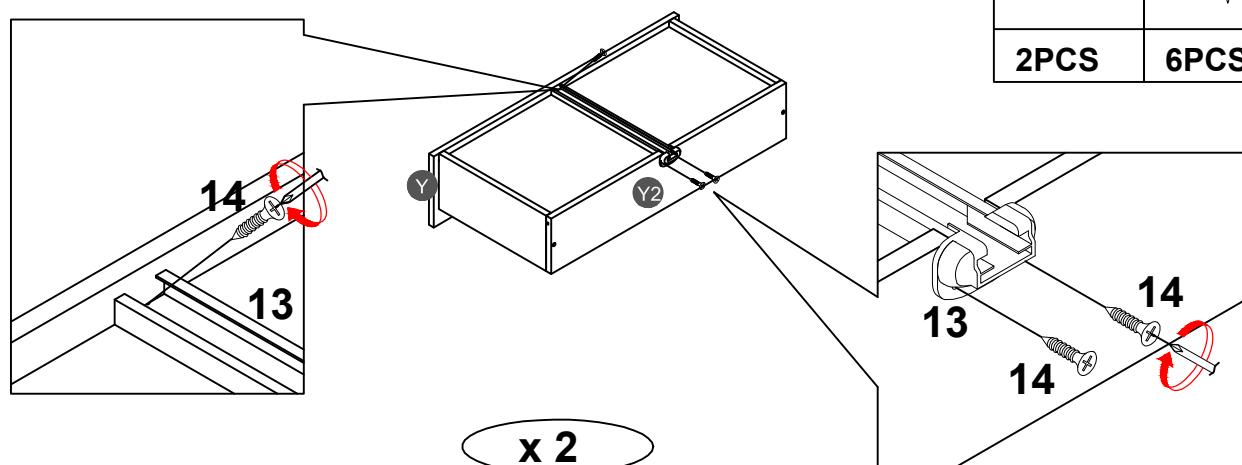

2		5	
8PCS		4PCS	
		8	
		4PCS	


STEP 19:



13		14	
2PCS		6PCS	


STEP 20:

11		12	
4PCS		4PCS	

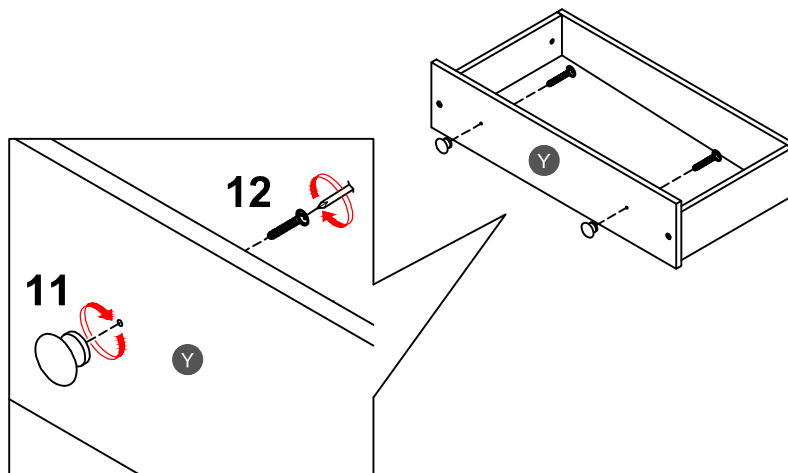


x 2


STEP 21:

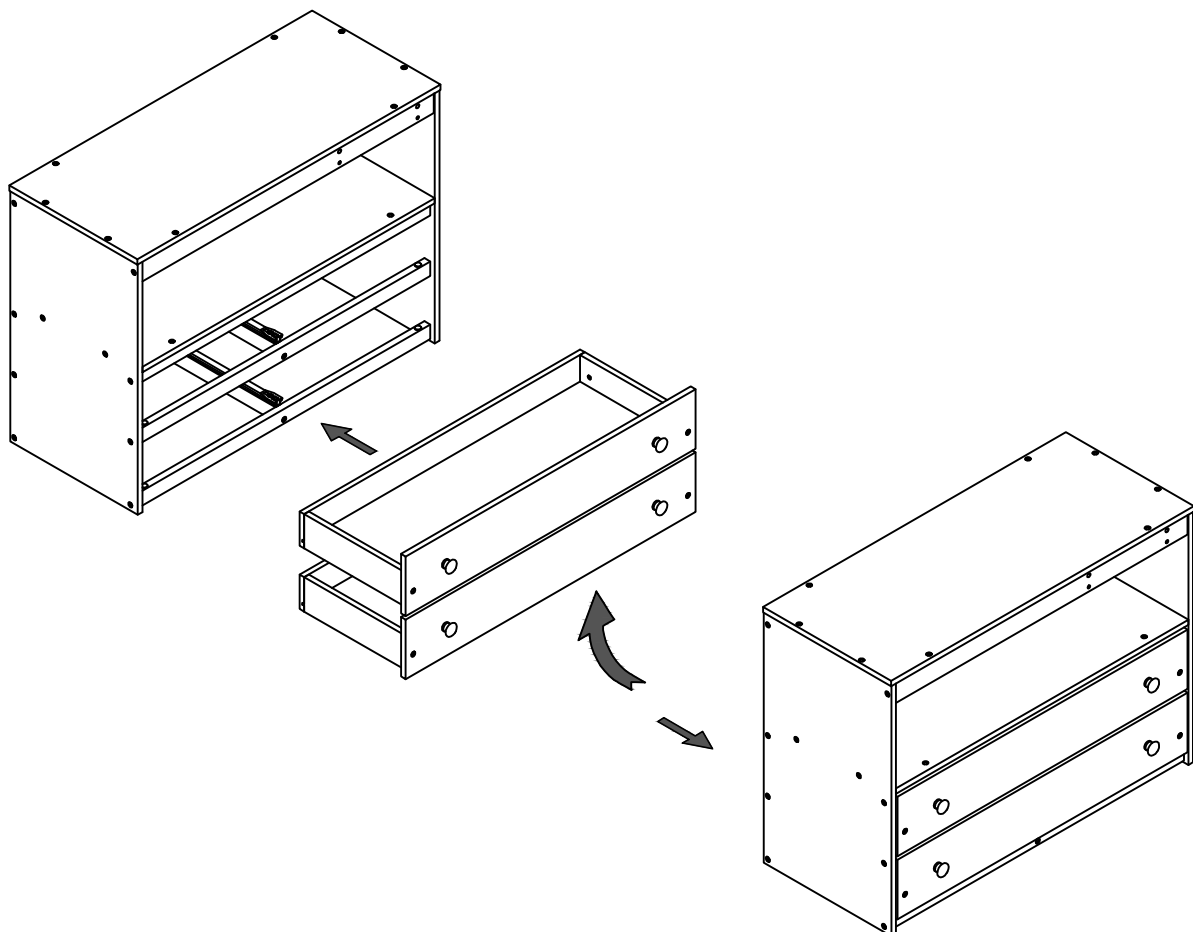


STEP 22:

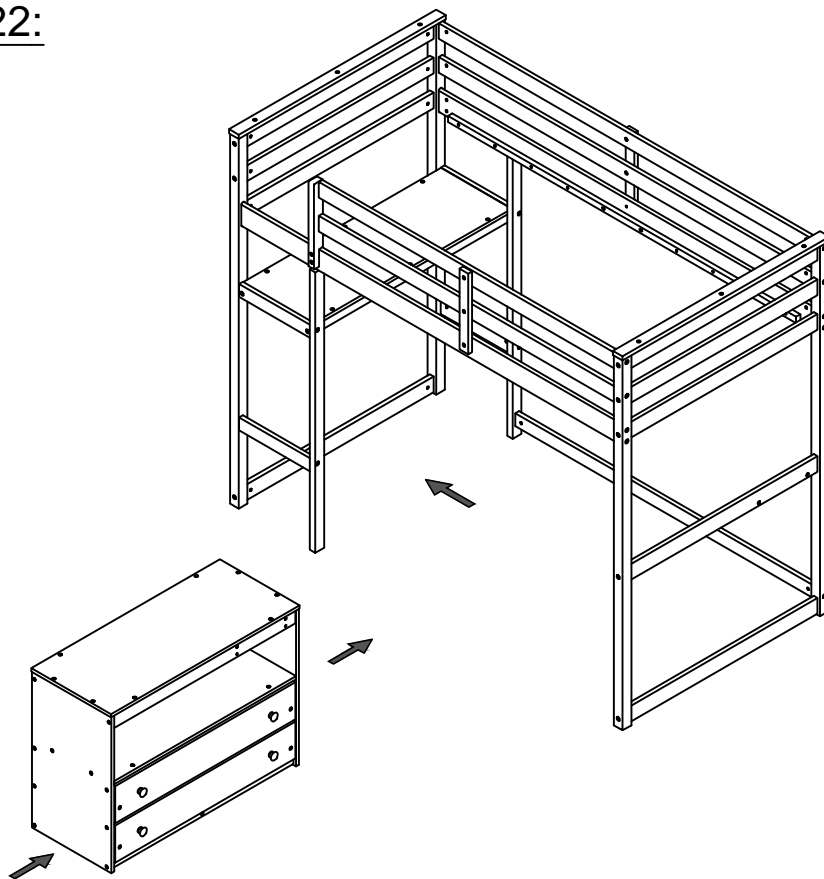


STEP 23:

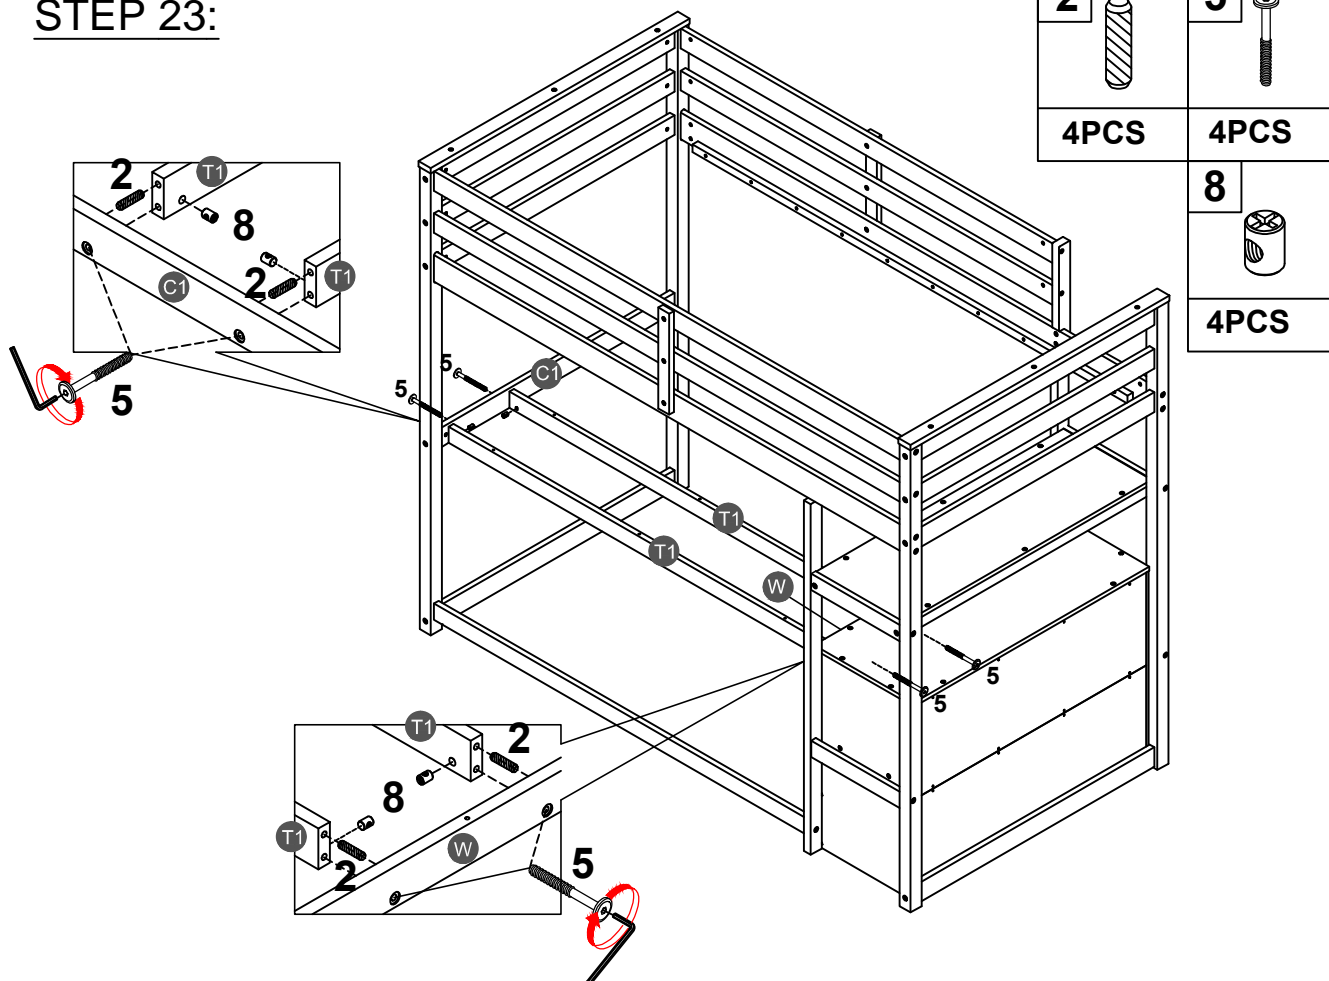

STEP 24:

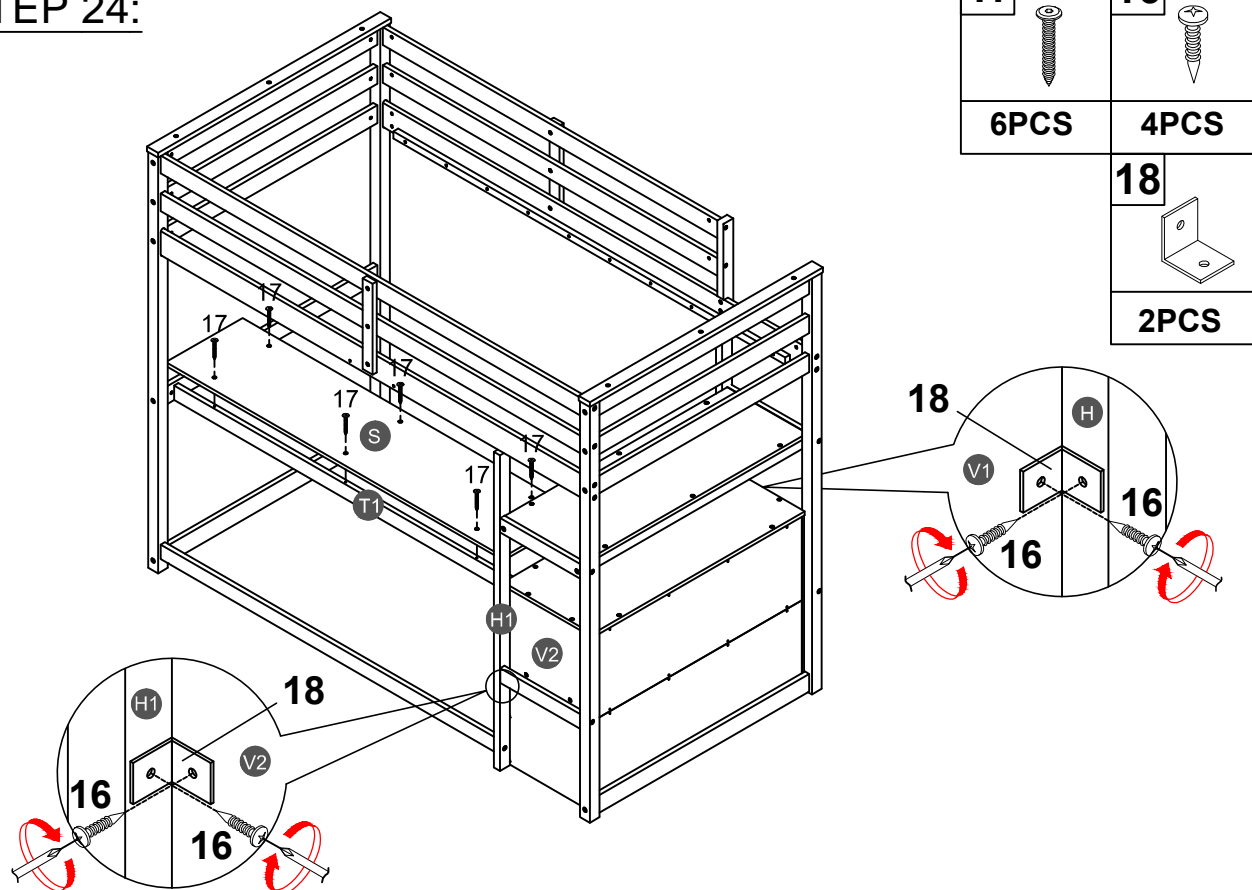

STEP 25:


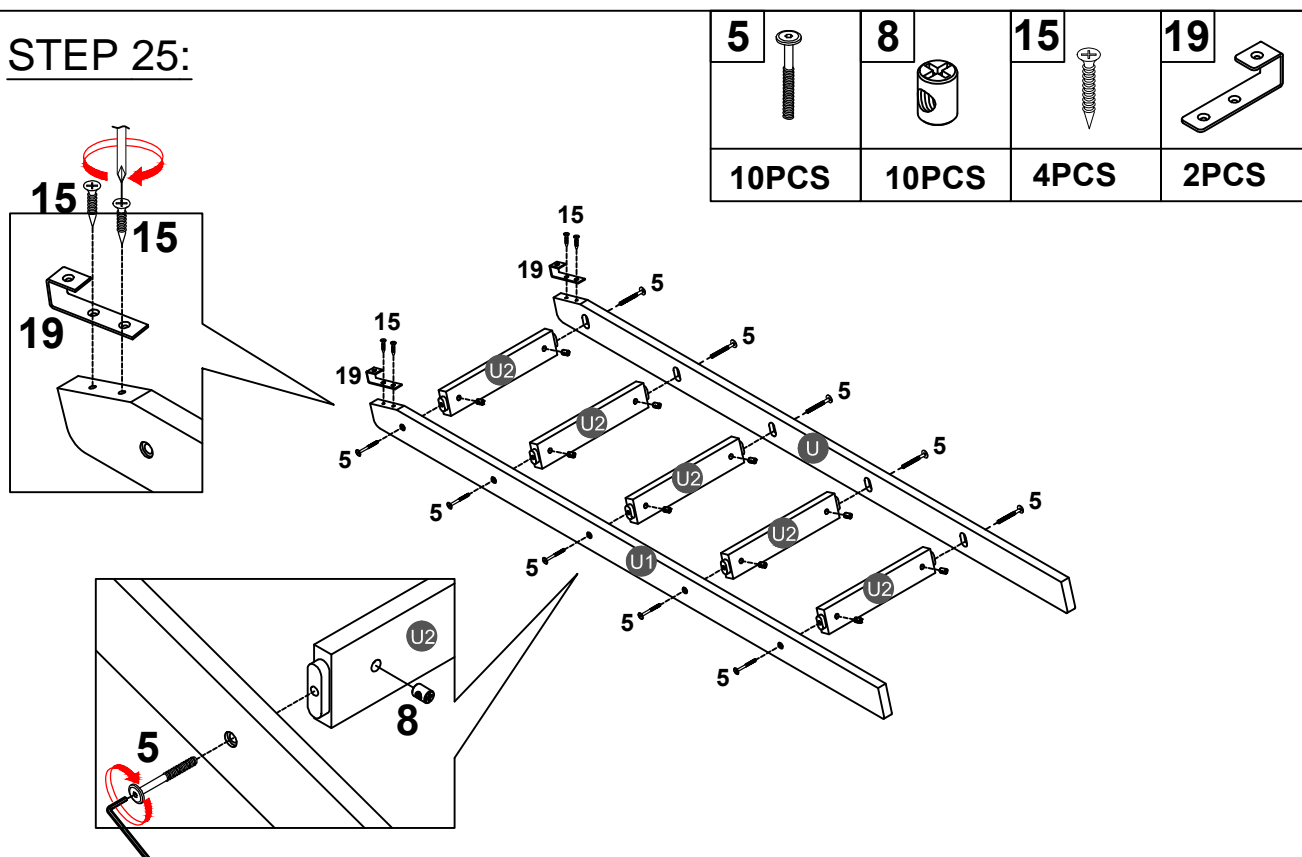


STEP 26:

15



2PCS

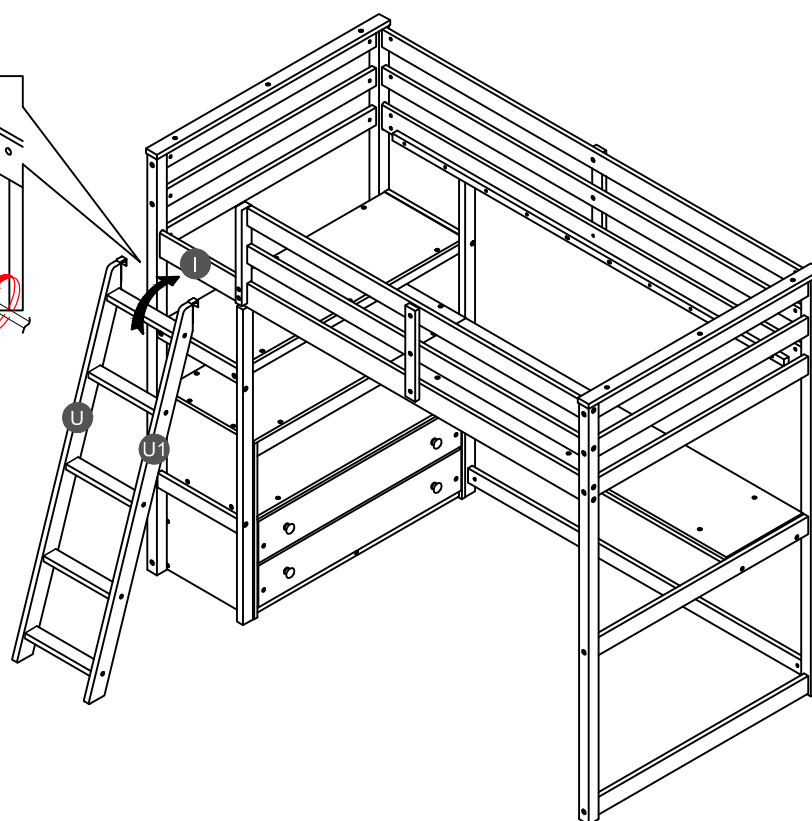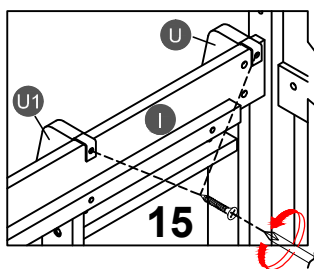

STEP 27:

14





4PCS

20



2PCS


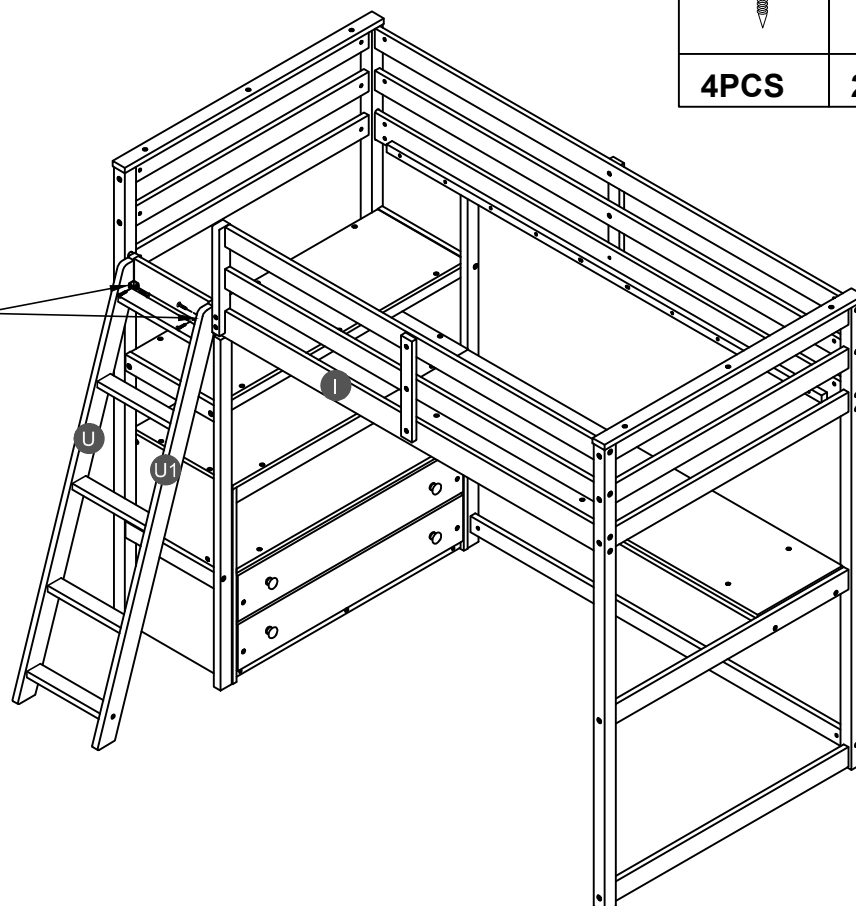
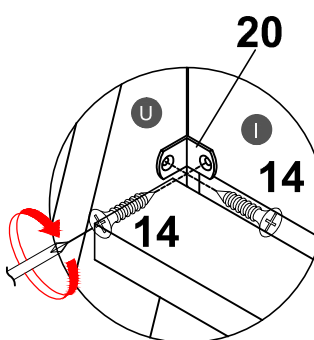


STEP 28:

9



28PCS

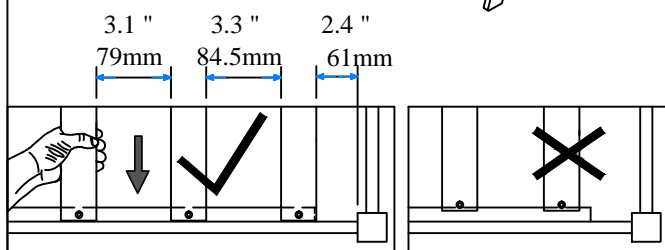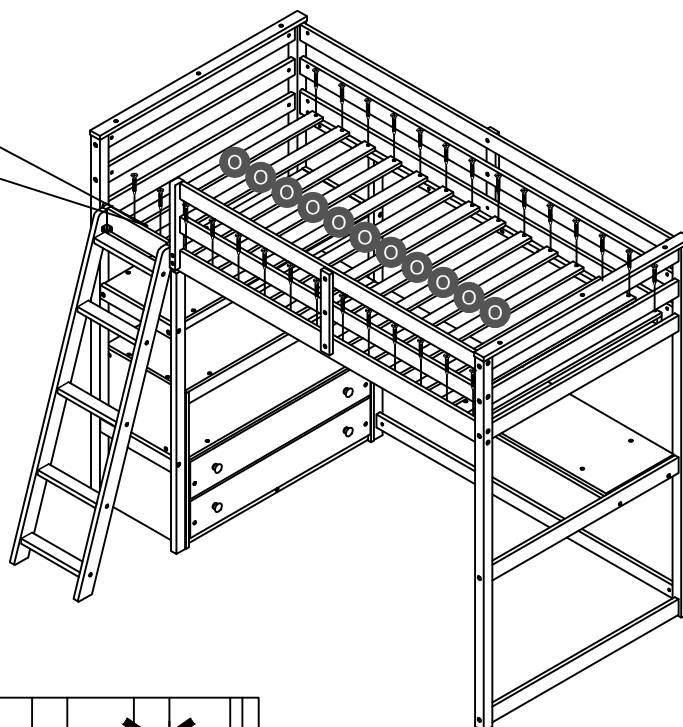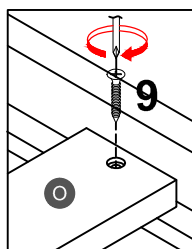

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

