

DA1018

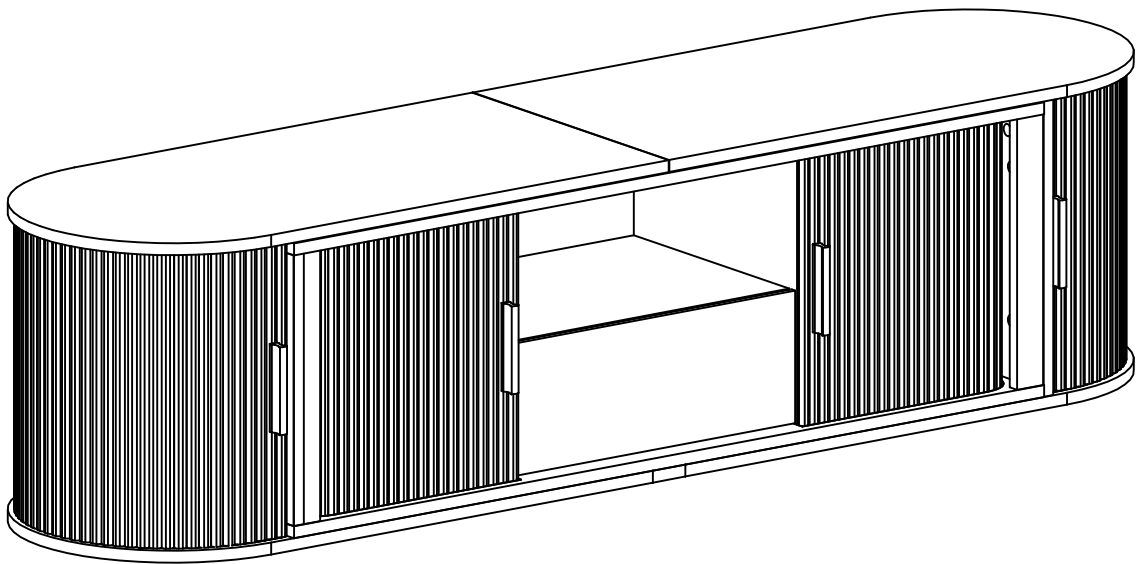


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

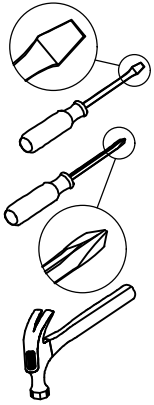

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification


Not actual size

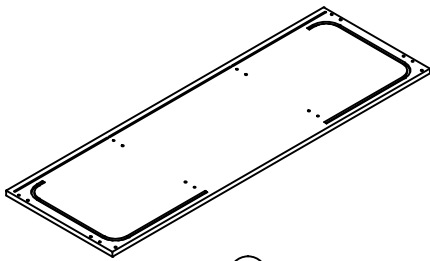


①
TOP
Qty: 1

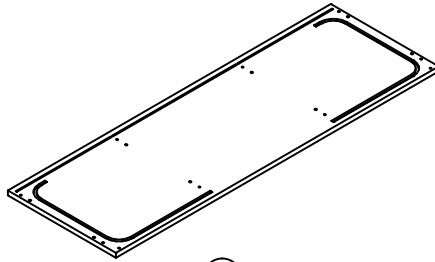


②
BOTTOM
Qty: 1

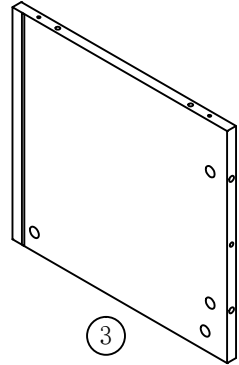


③
LEFT SIDE PANEL
Qty: 1

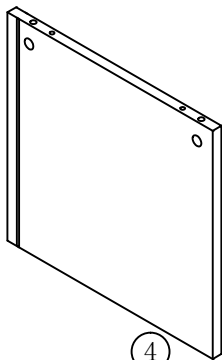


④
LEFT PARTITION
Qty: 1

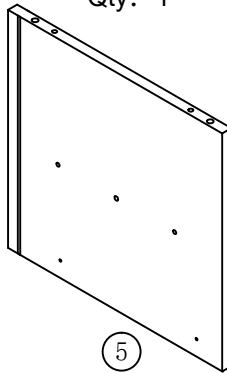


⑤
RIGHT PARTITION
Qty: 1

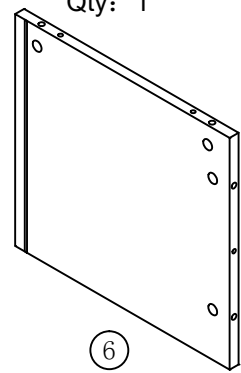


⑥
RIGHT SIDE PANEL
Qty: 1

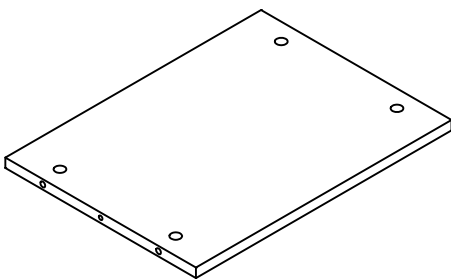


⑦
MIDDLE PANEL
Qty: 1




⑧
LEFT BAFFLE
Qty: 1




⑨
RIGHT BAFFLE
Qty: 1

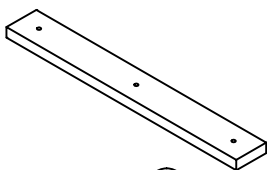

⑩
BOTTOM SUPPORT
Qty: 1

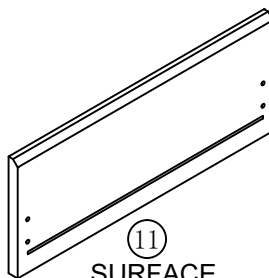


⑪
SURFACE
Qty: 1

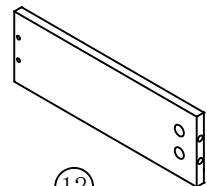

⑫
LEFT DRAW GANG
Qty: 1

Board Identification


Not actual size

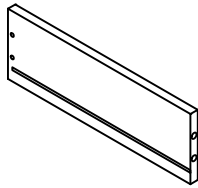

⑬

RIGHT DRAW GANG


Qty: 1

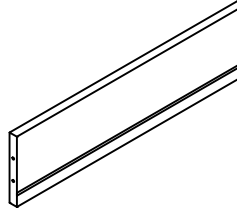

⑭

BLOCKING


Qty: 1

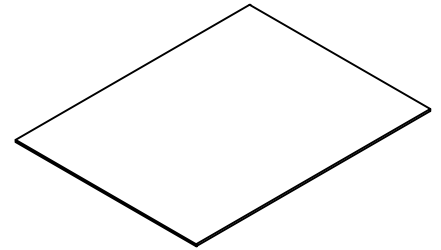

⑮

BOTTOM EXTRACTION


Qty: 1

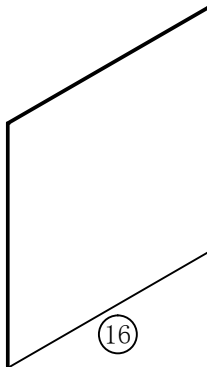

⑯

BACK PANEL


Qty: 2

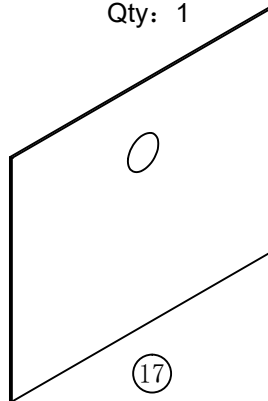

⑰

BACK PANEL


Qty: 1

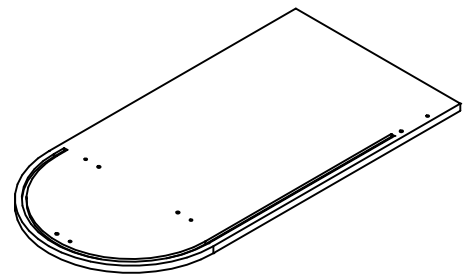

⑱

LEFT CABINET TOP

Qty: 1

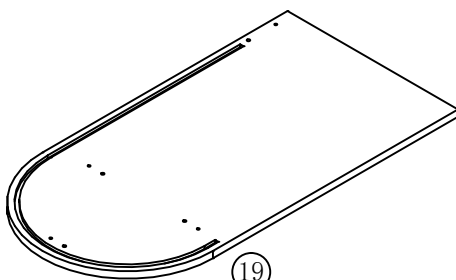

⑲

LEFT CABINET BOTTOM


Qty: 1



⑳

LEFT CABINET UPRIGHT


Qty: 1

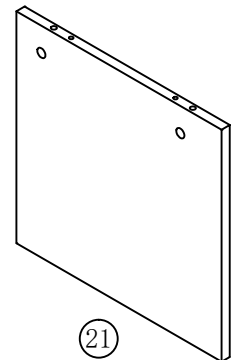

㉑

LEFT CABINET SIDE PANEL


Qty: 1



㉒

LEFT CABINET BACK UPRIGHT


Qty: 1

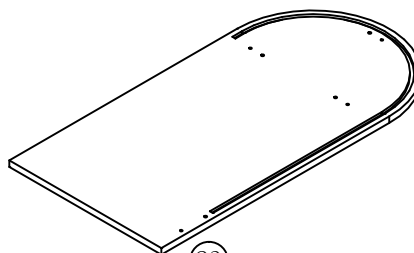

㉓

RIGHT CABINET TOP

Qty: 1

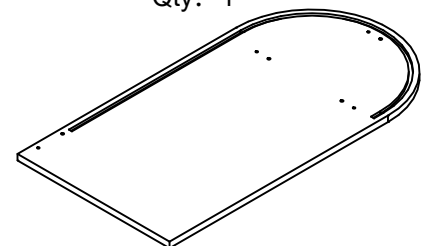

㉔

RIGHT CABINET BOTTOM


Qty: 1

Board Identification

Not actual size




RIGHT CABINET BACK UPRIGHT
Qty: 1

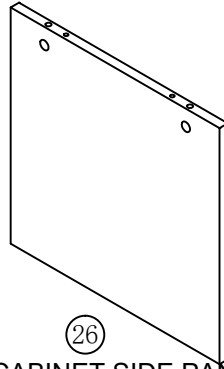


RIGHT CABINET SIDE PANEL
Qty: 1



RIGHT CABINET BACK UPRIGHT
Qty: 1

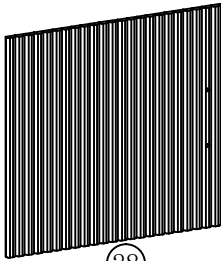

DOOR
Qty: 2

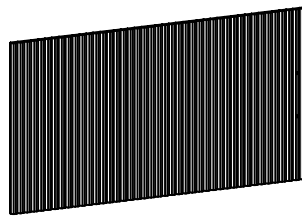

DOOR
Qty: 2

Part List




Ø15X9.5mm

(A)

X28

CAM LOCK

spare:2




Ø6.5X35mm

(B)

X28

CAM BOLT

spare:2




Ø6X30mm

(C)

X38

WOODEN DOWEL

spare:2




Ø3.5X12mm

(D)

X36

SCREW

spare:3




Ø3.5X25mm

(E)

X3

SCREW

spare:1

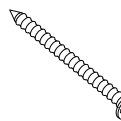


Ø4X35mm

(F)

X4

SCREW

spare:1




Ø5X40mm

(G)

X18

SCREW

spare:1




CL 300mm

(H)


X1

LEFT SIDE SLIDE RAIL


Part List

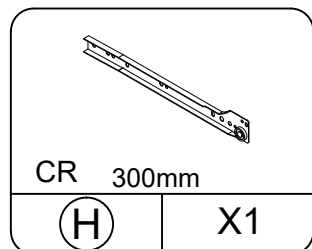


RIGHT CABINET MEMBER

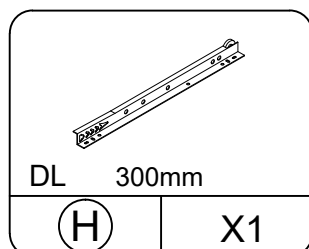


LEFT DRAWER RUNNER

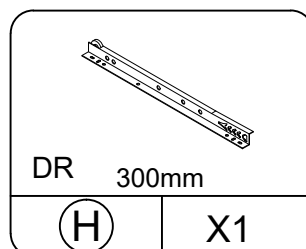


RIGHT DRAWER RUNNER

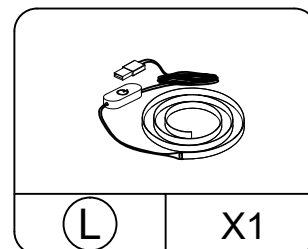


IRON SHEET

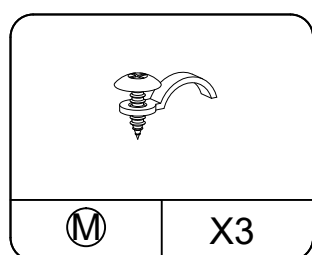


LIGHT LOCK
spare:1

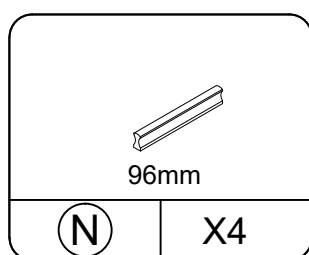


HANDLE

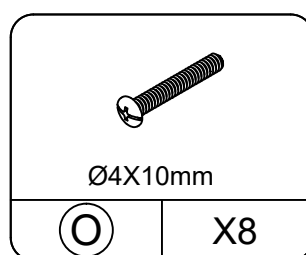


BOLT
spare:1

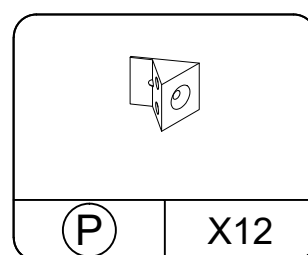

BACKPLATE CLAMP
spare:2

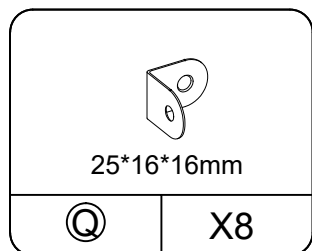


ANGEL IRON

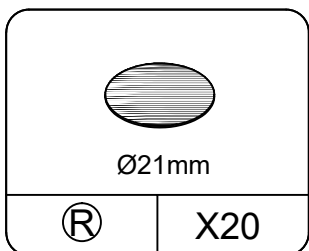

PERFECT STICKERS


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

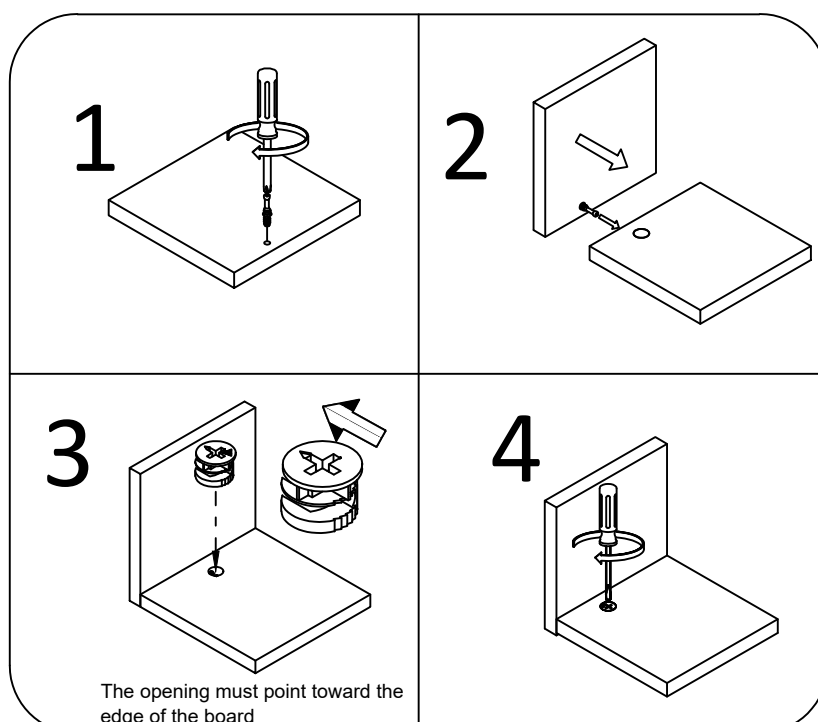


Board Identification




Not actual size

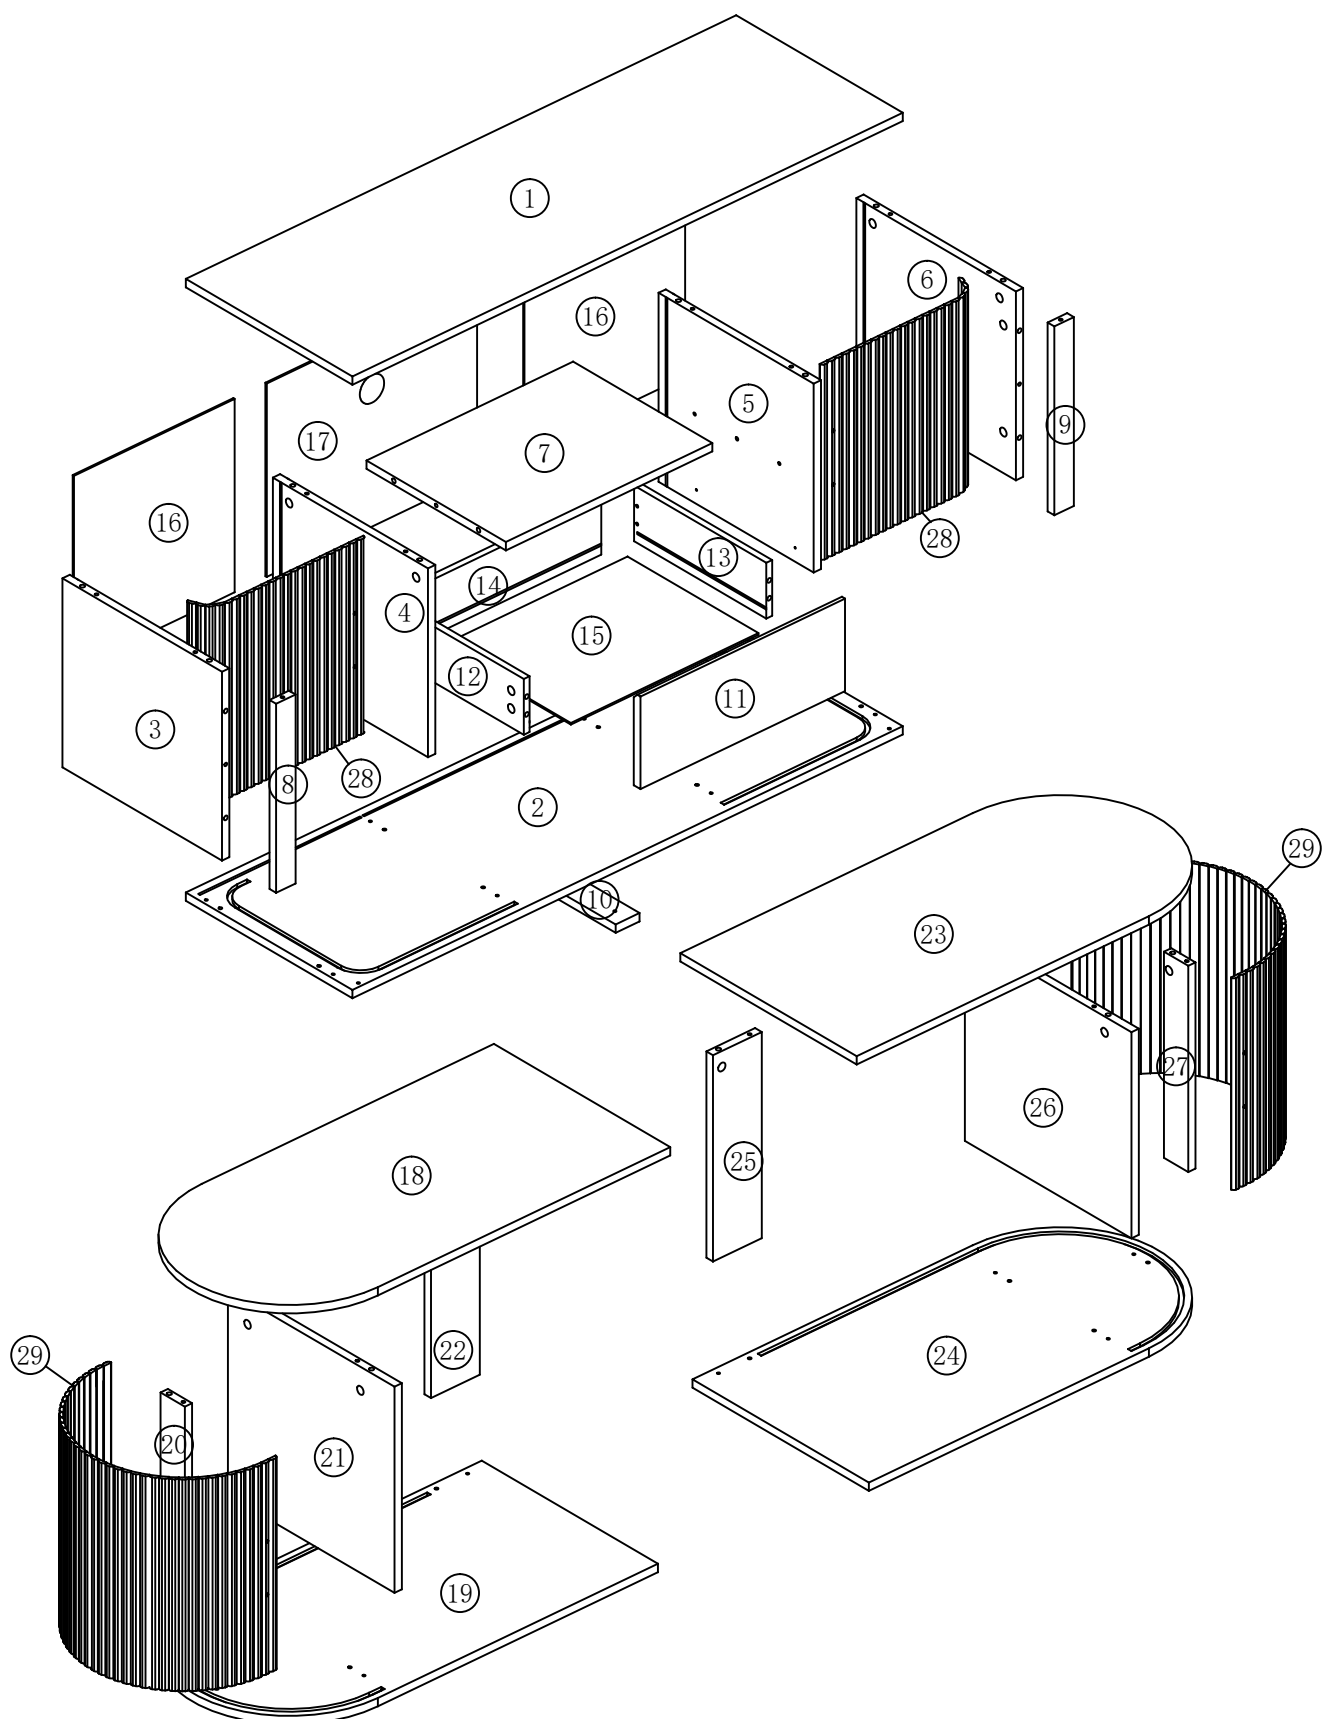




STEP2

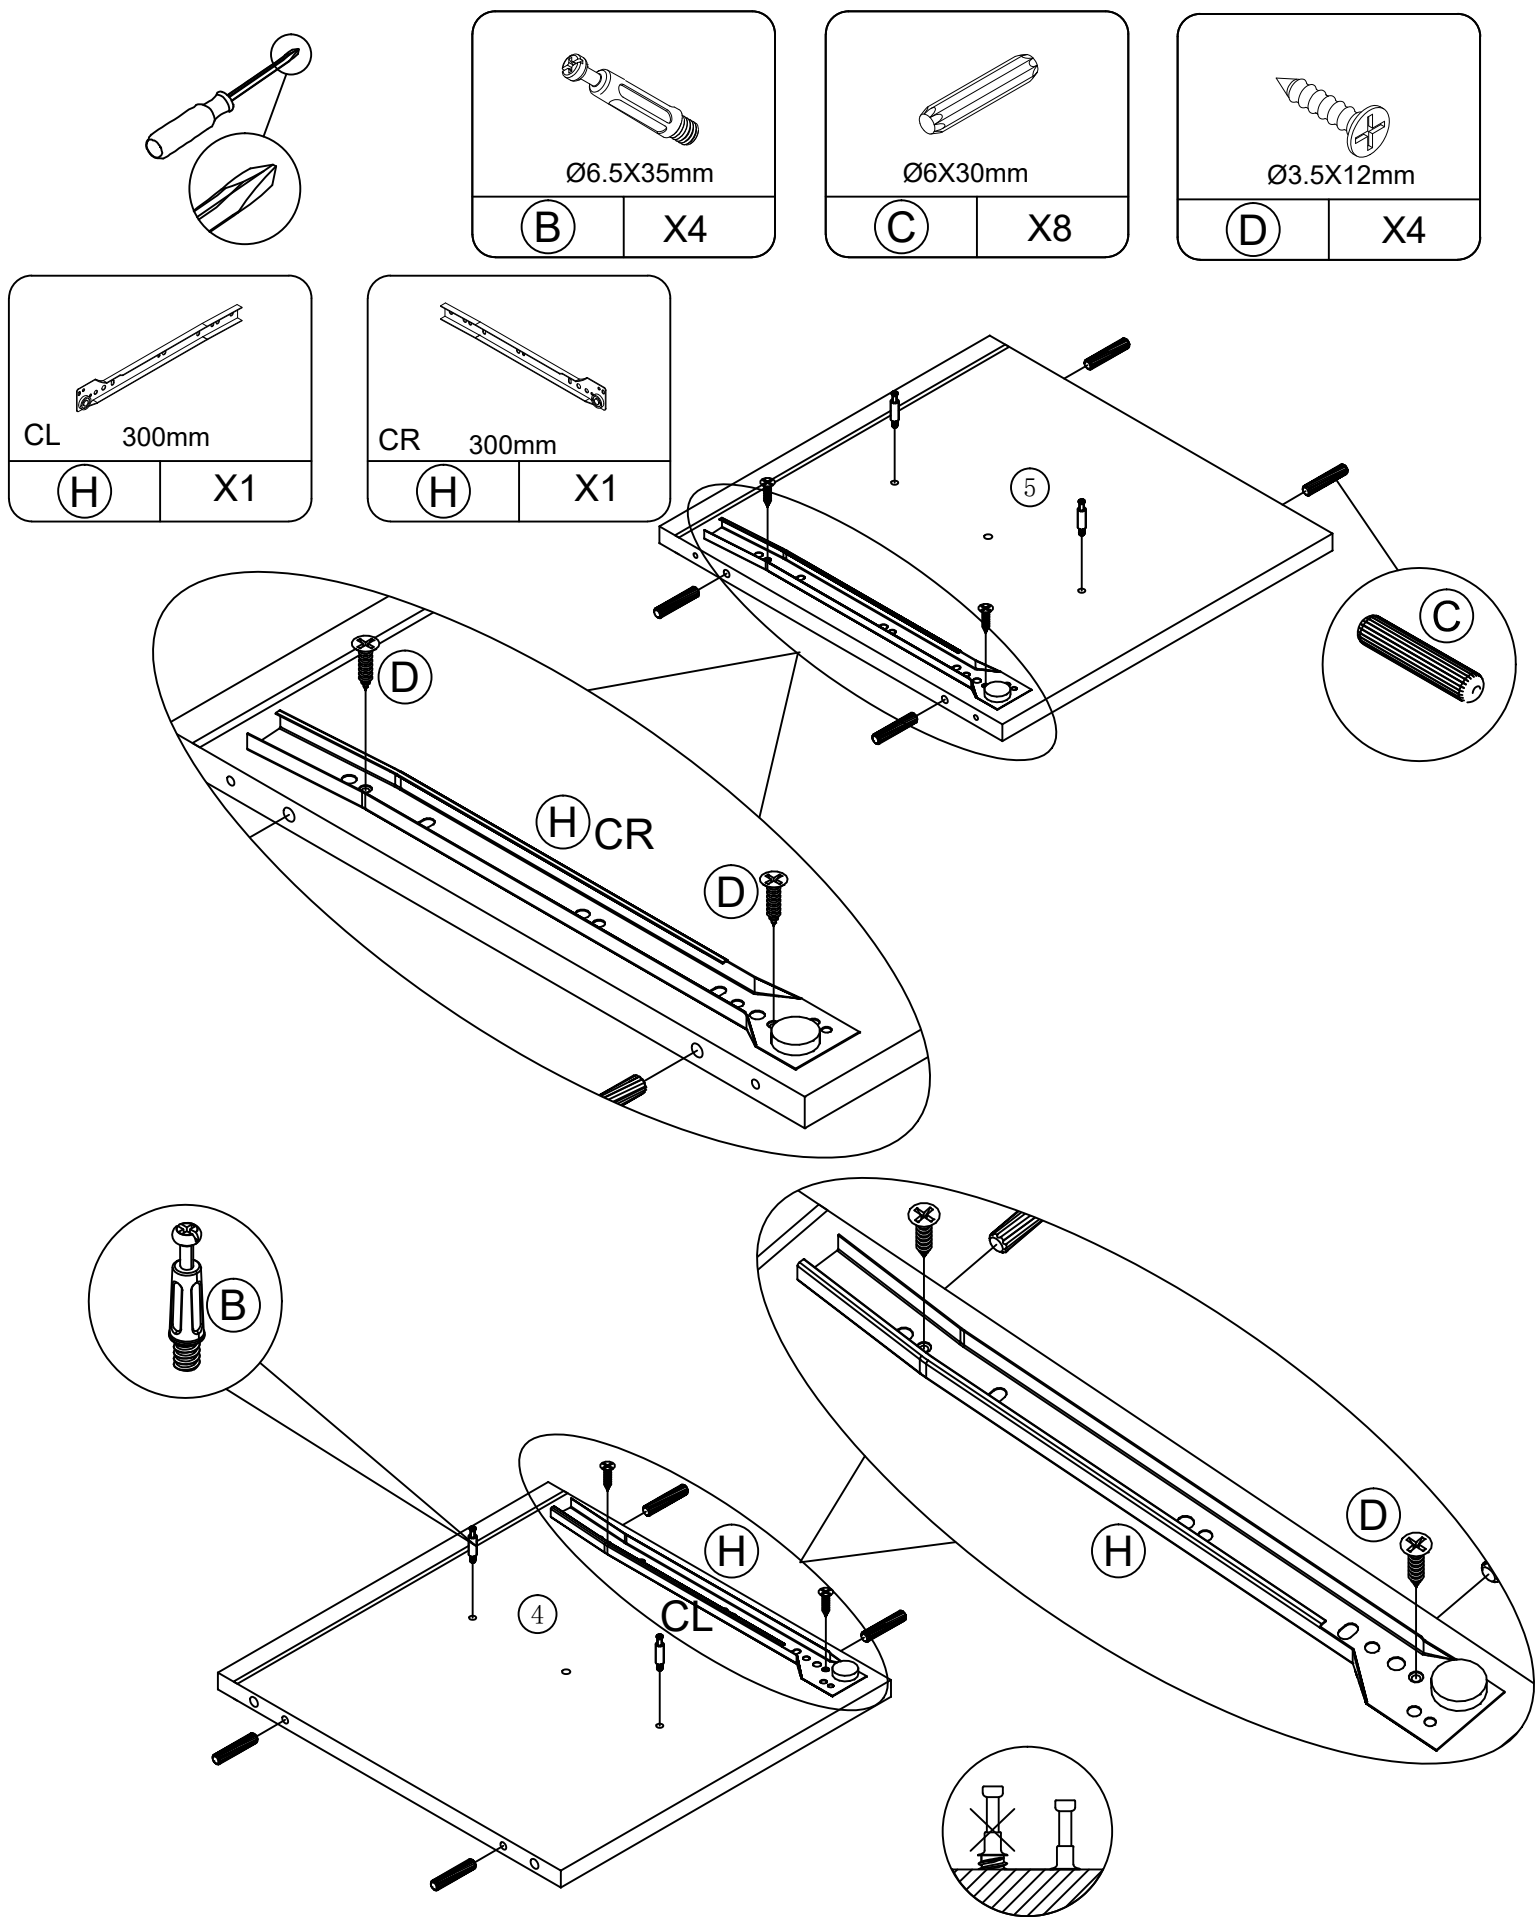


STEP3

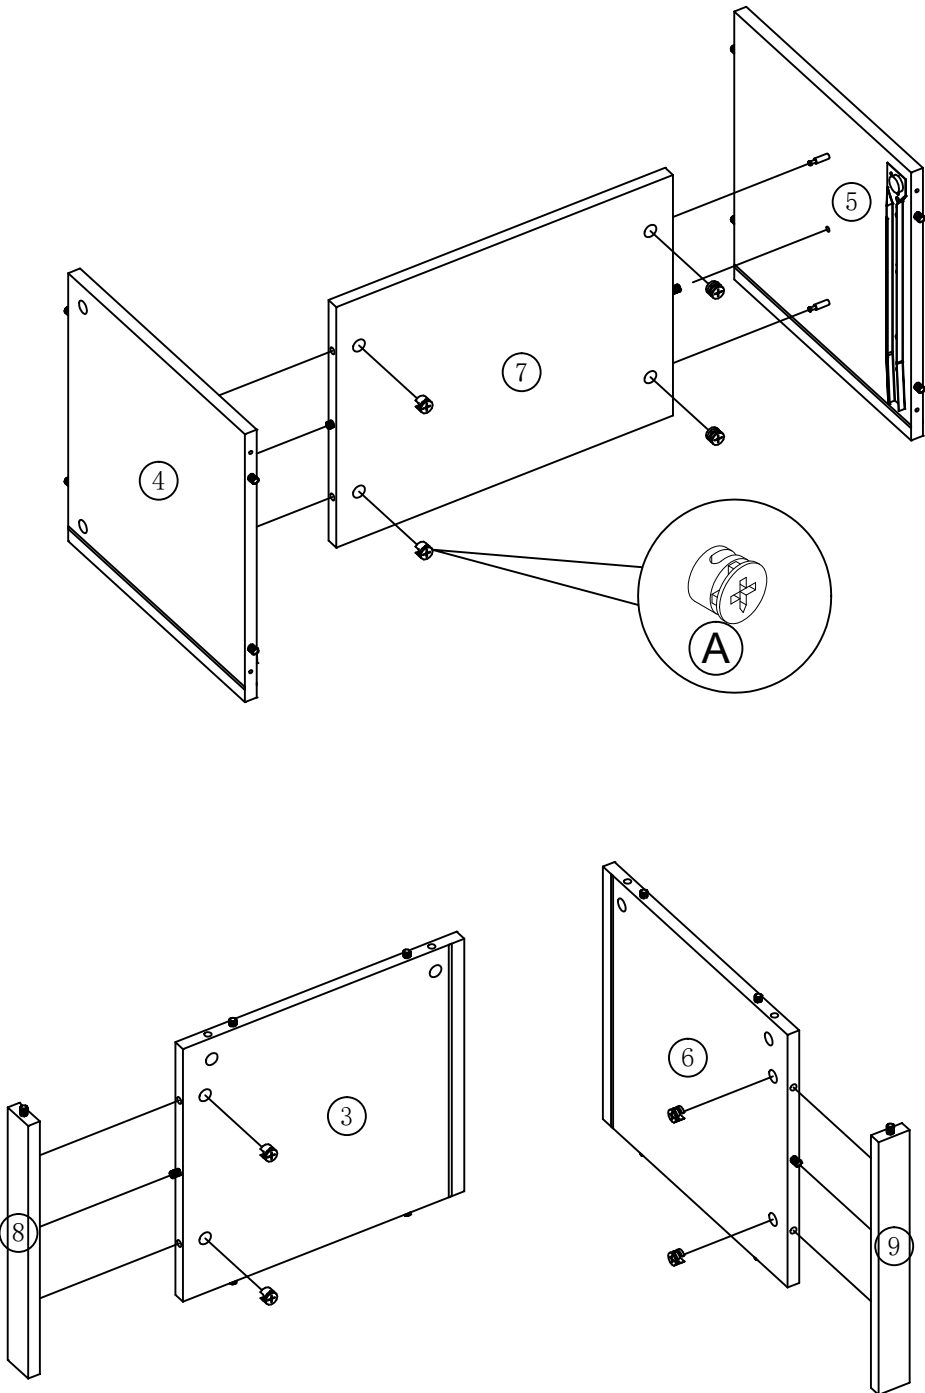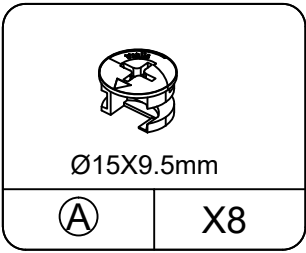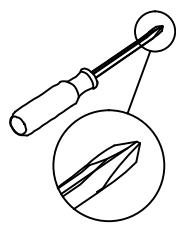





STEP4

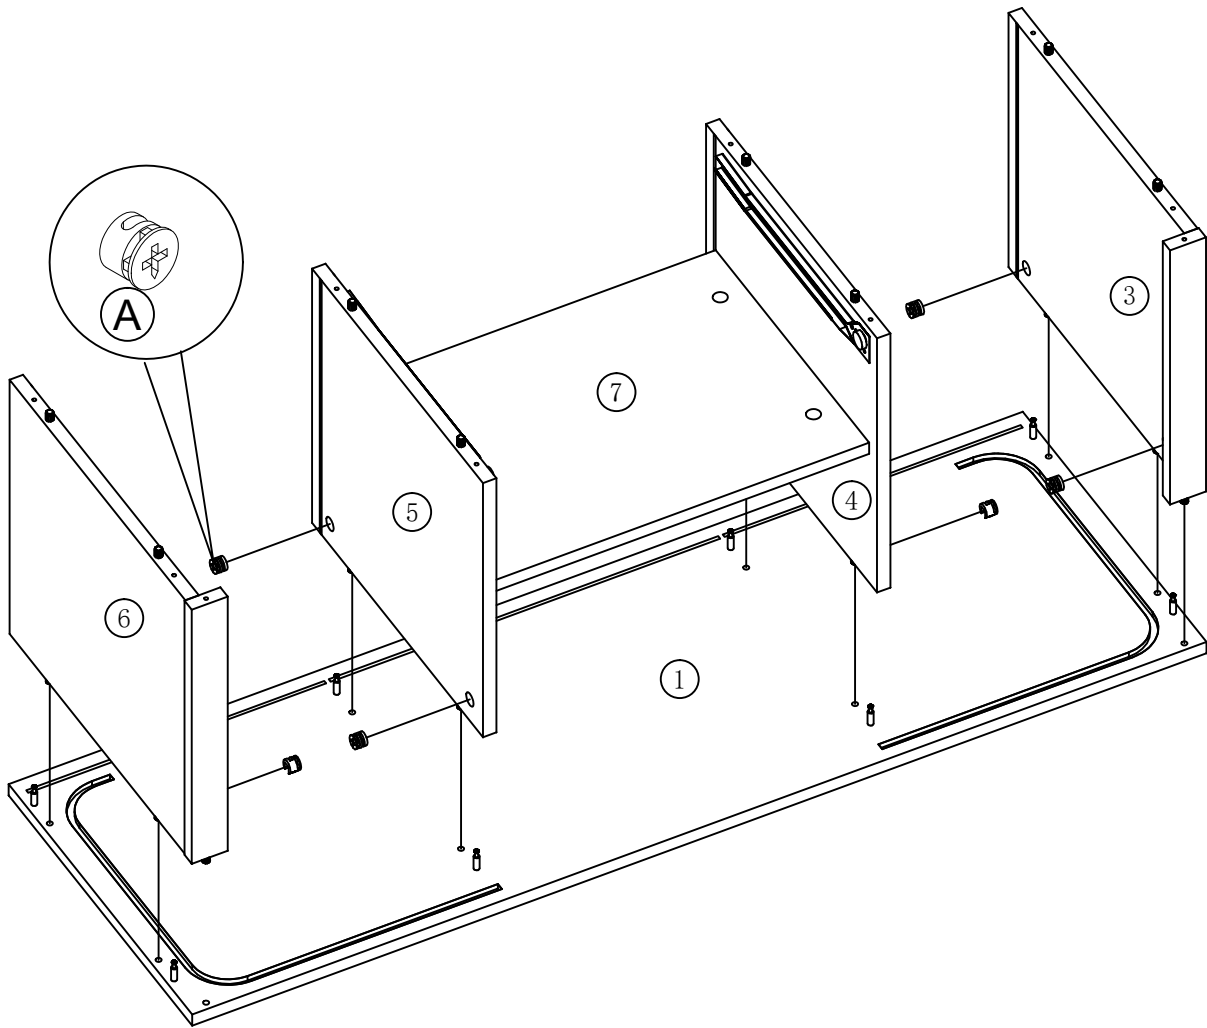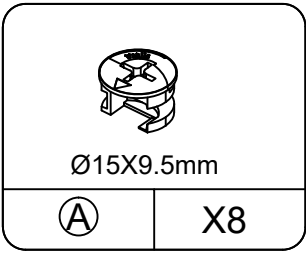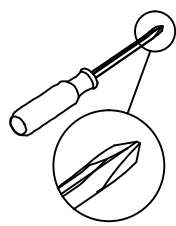


STEP5

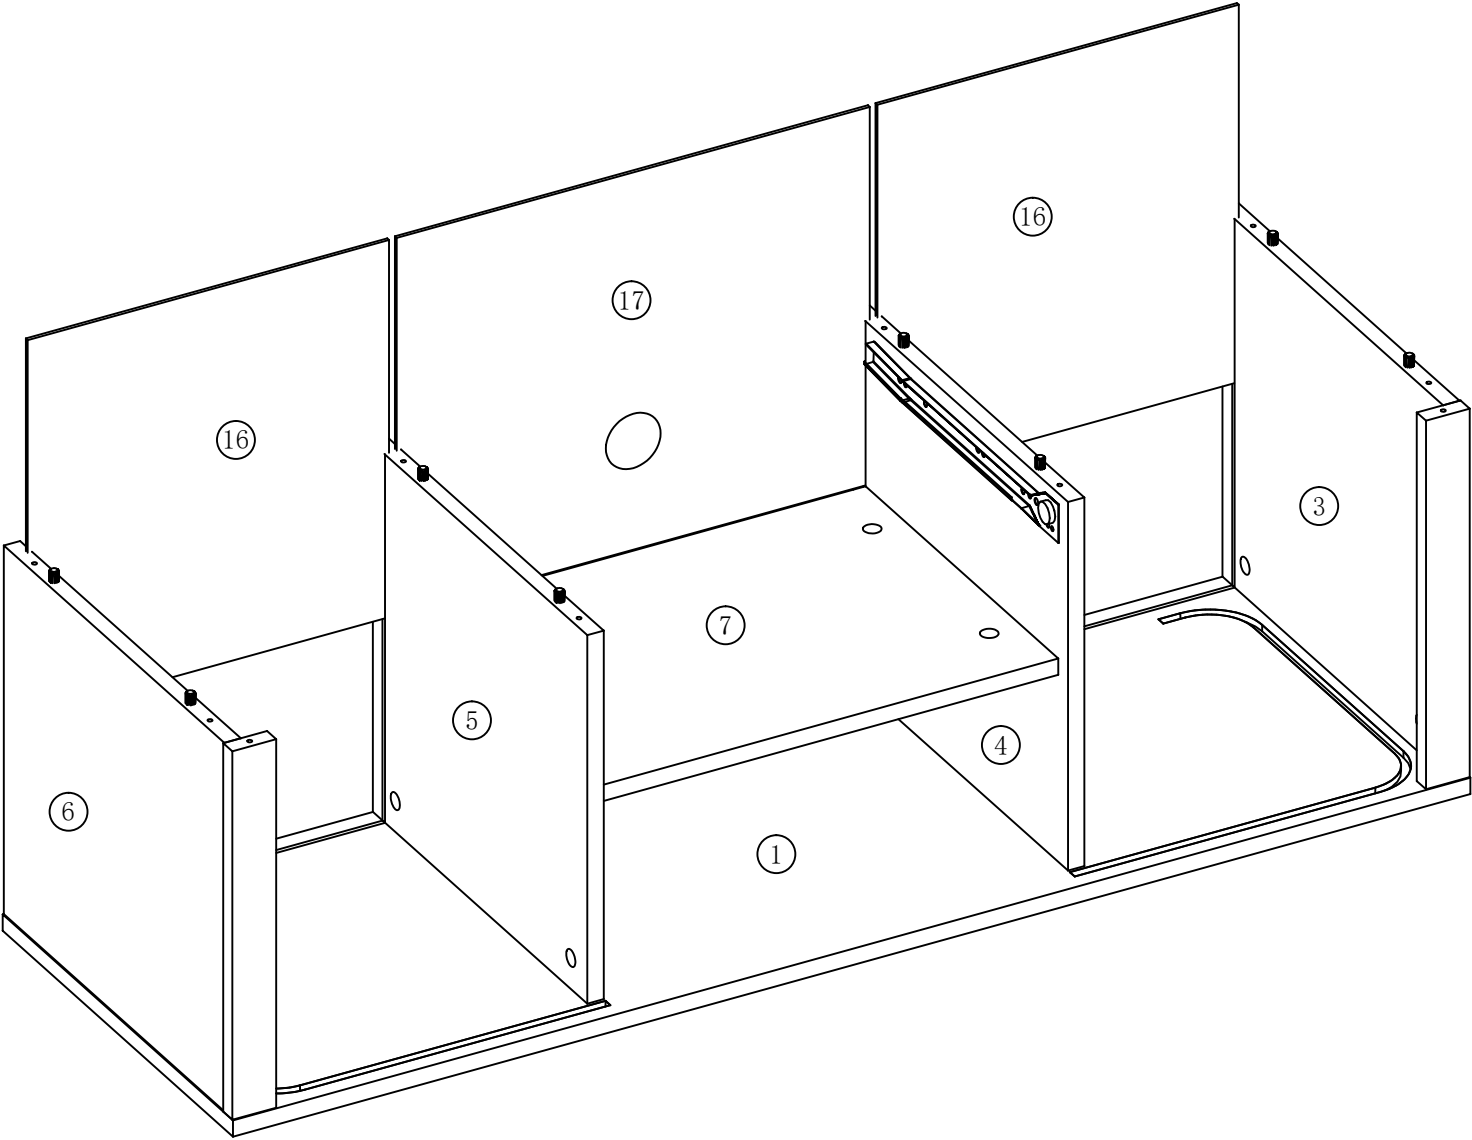


STEP6

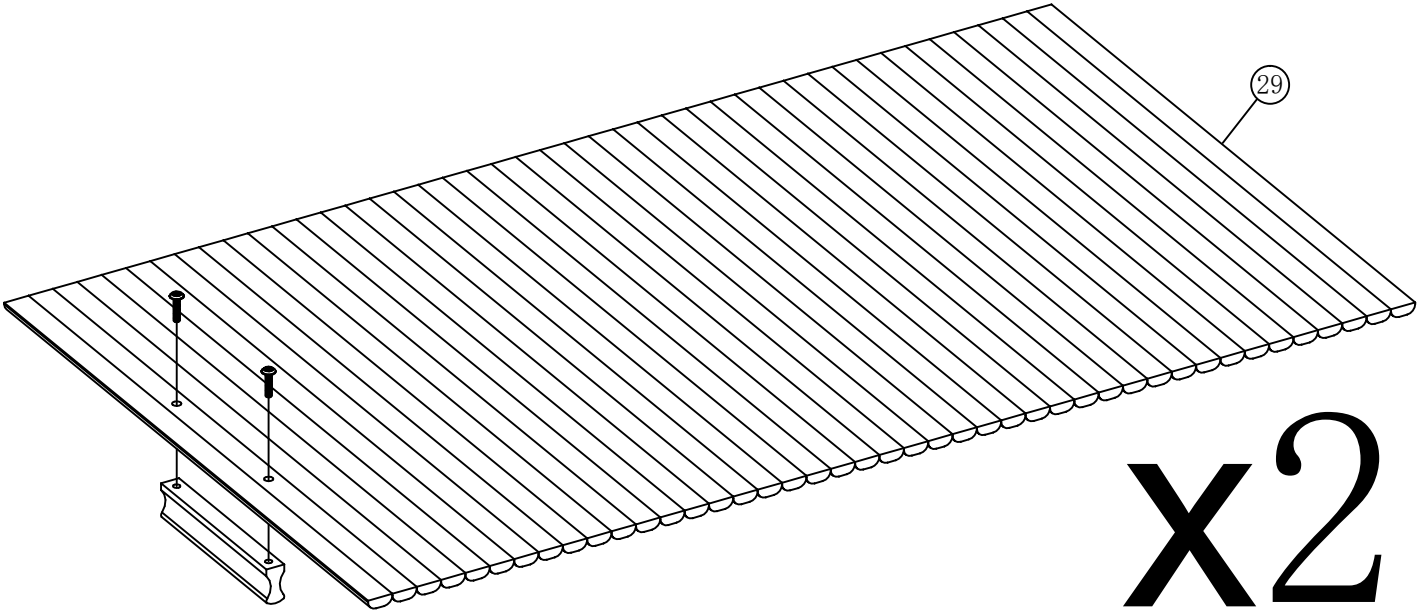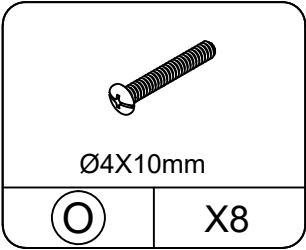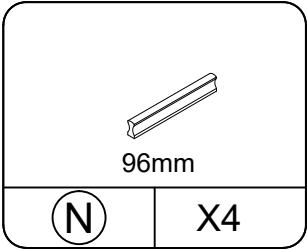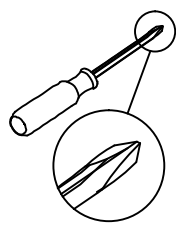


x2

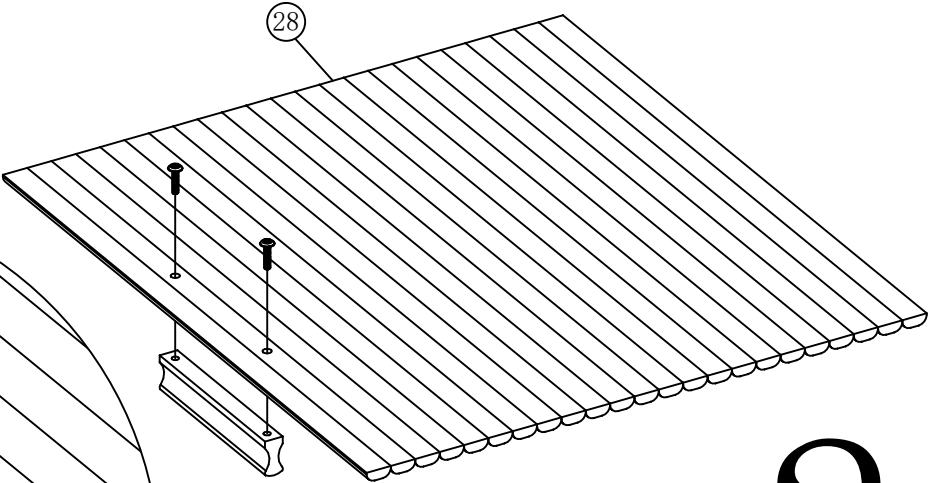


x2

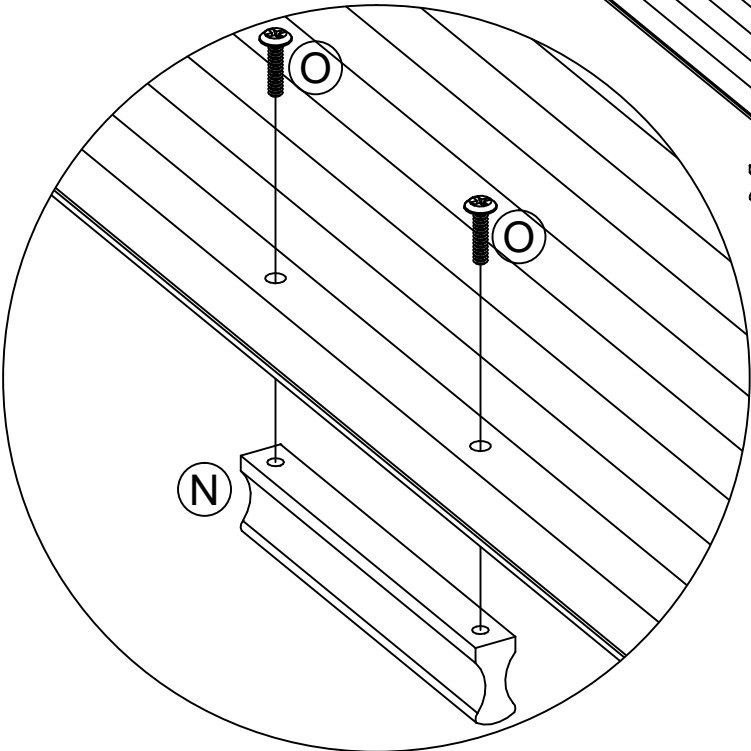




STEP7

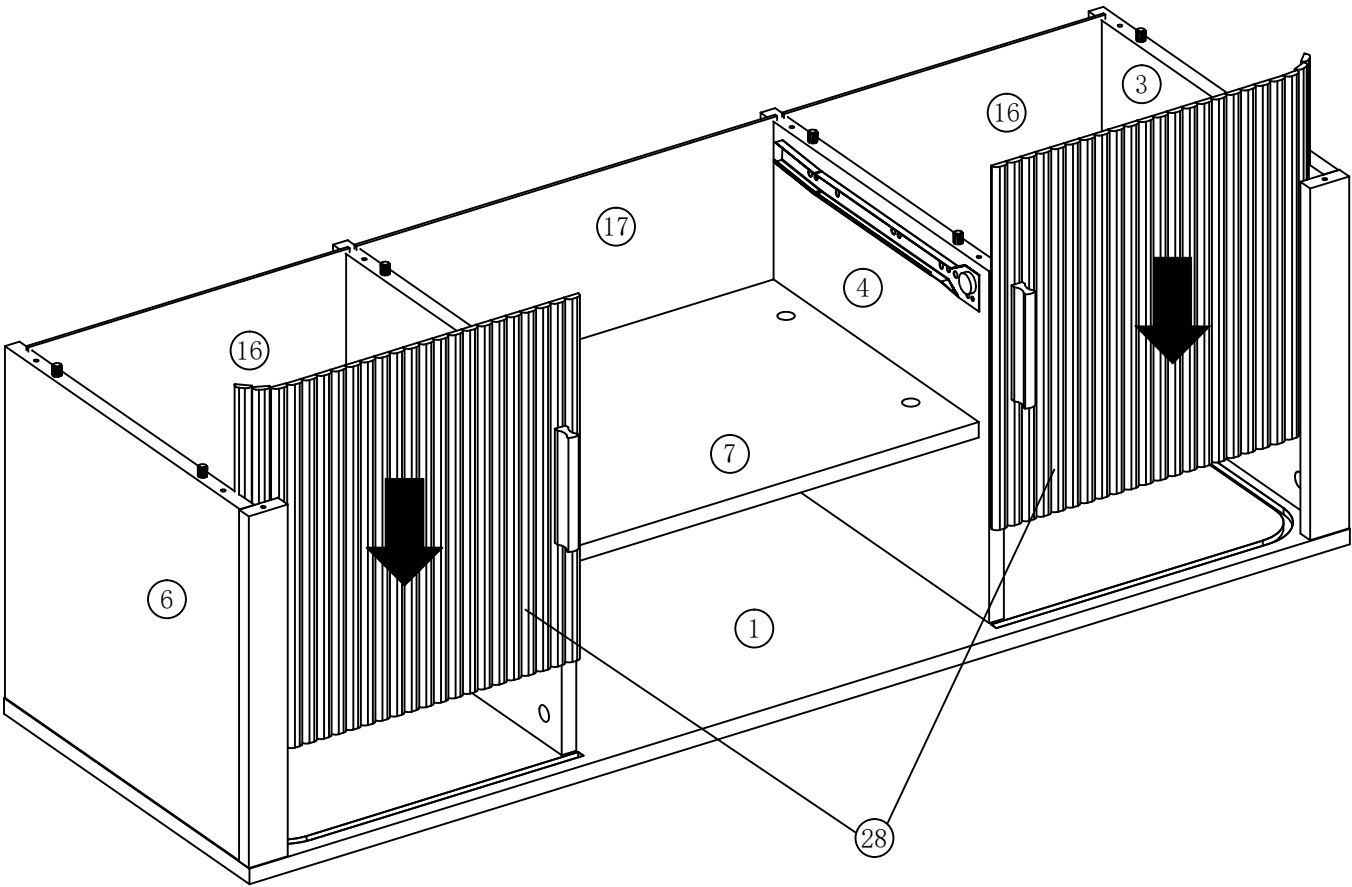





STEP8

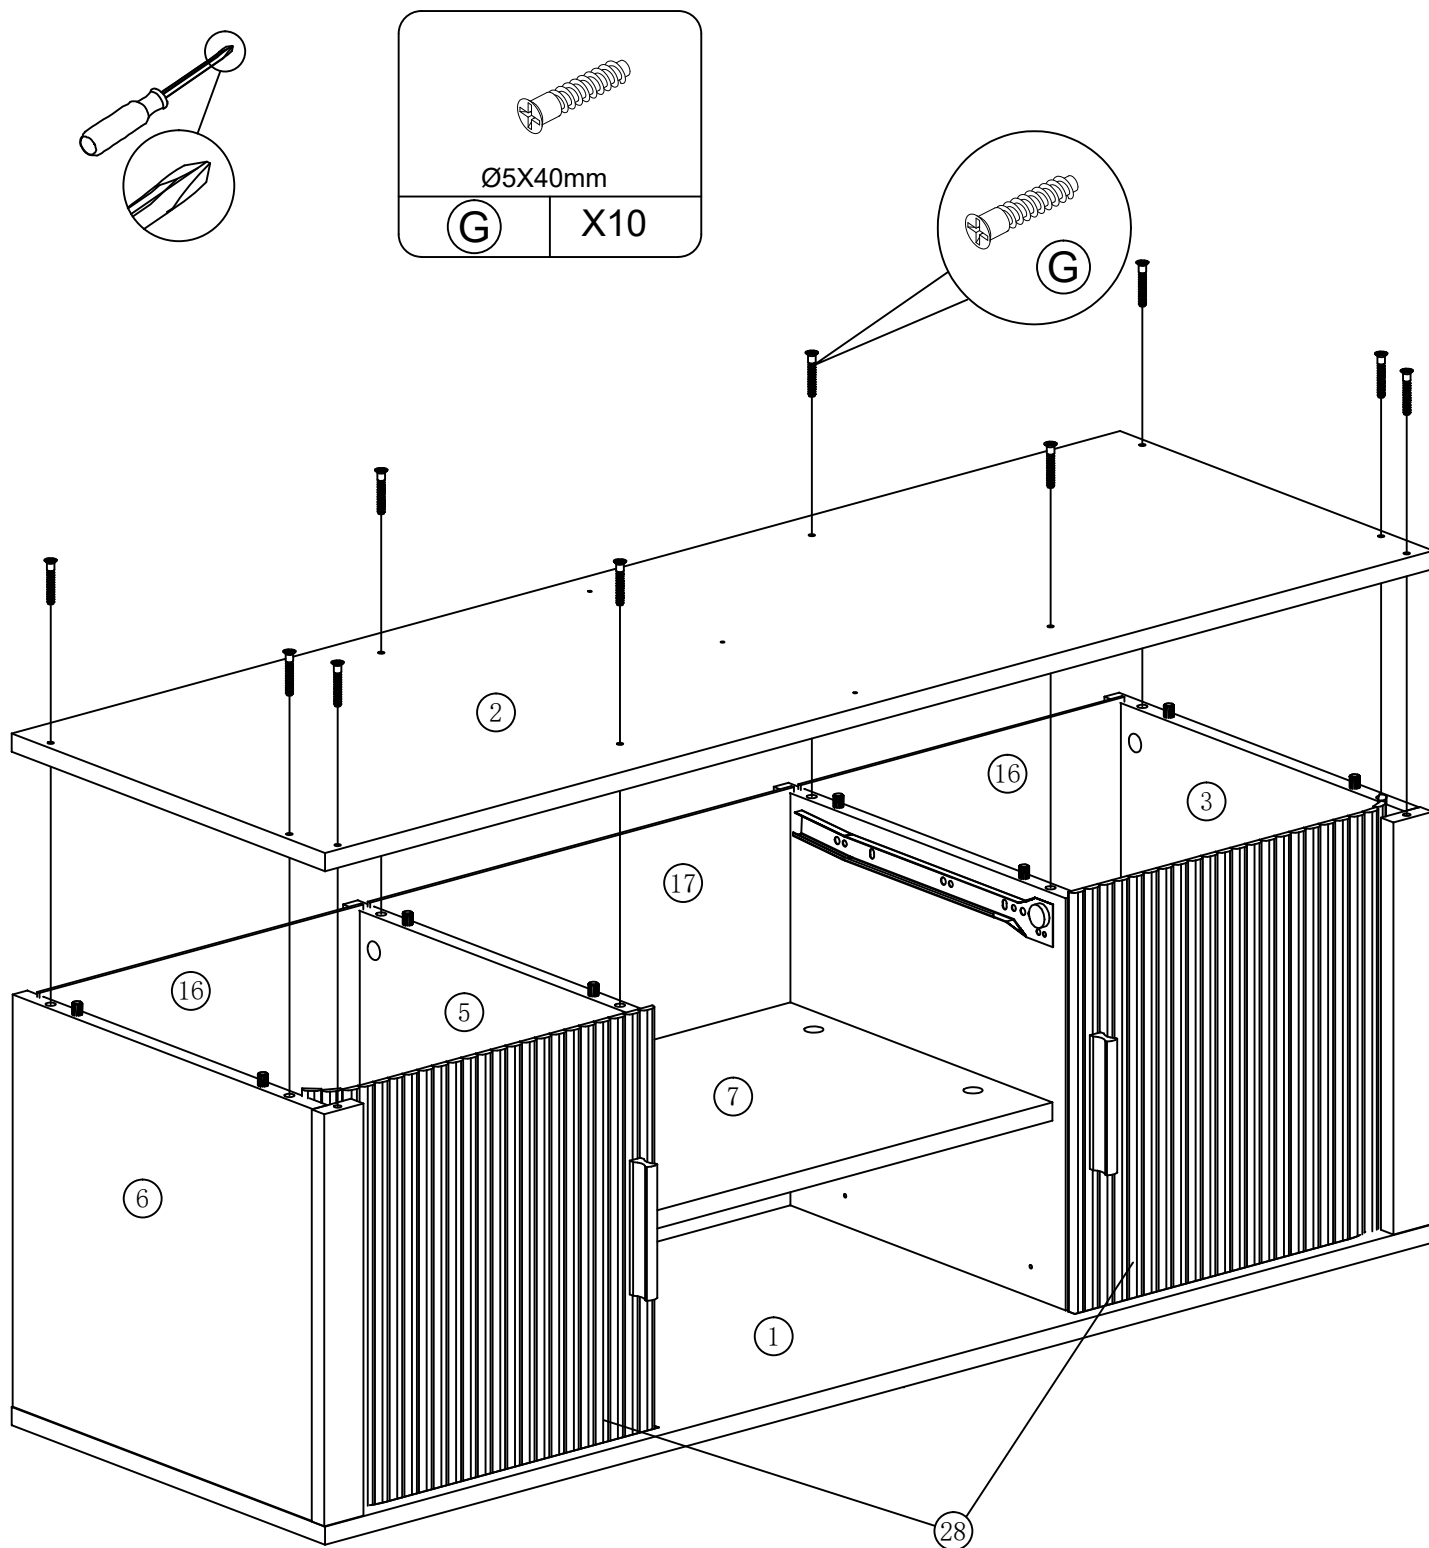


STEP9

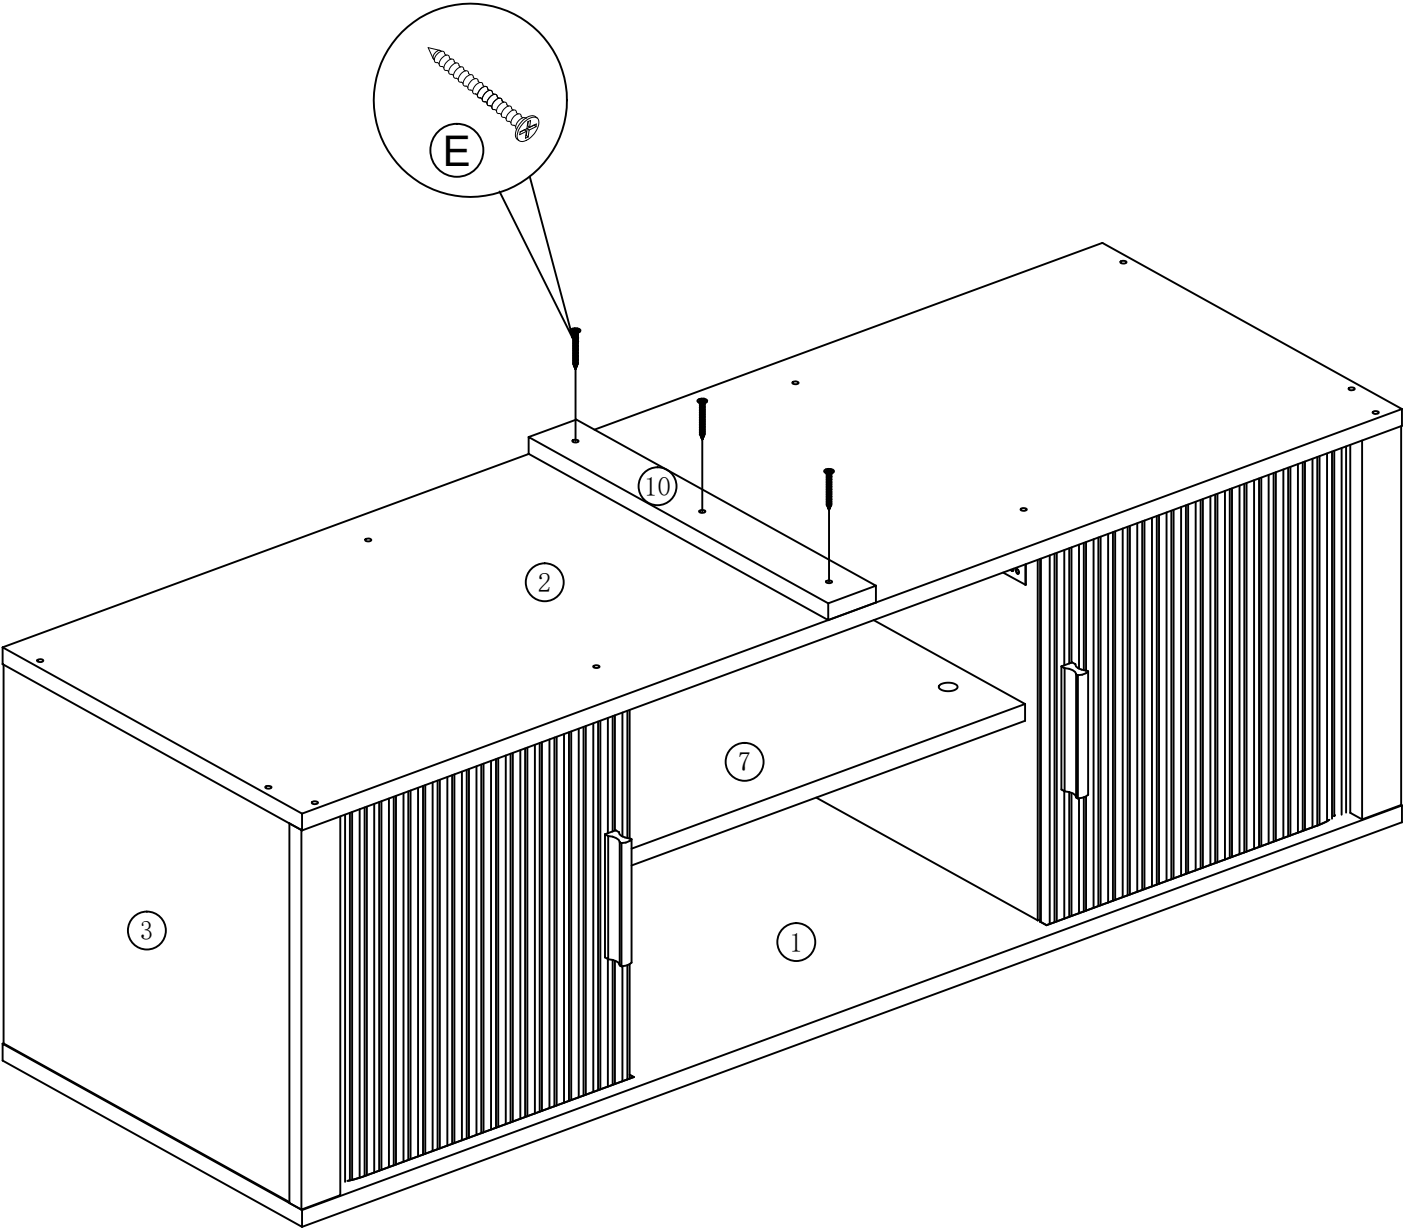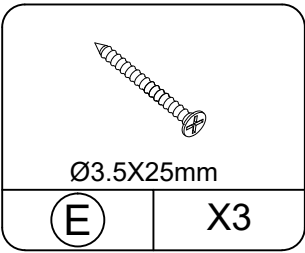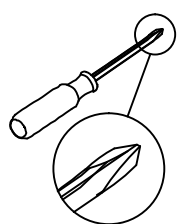




STEP10

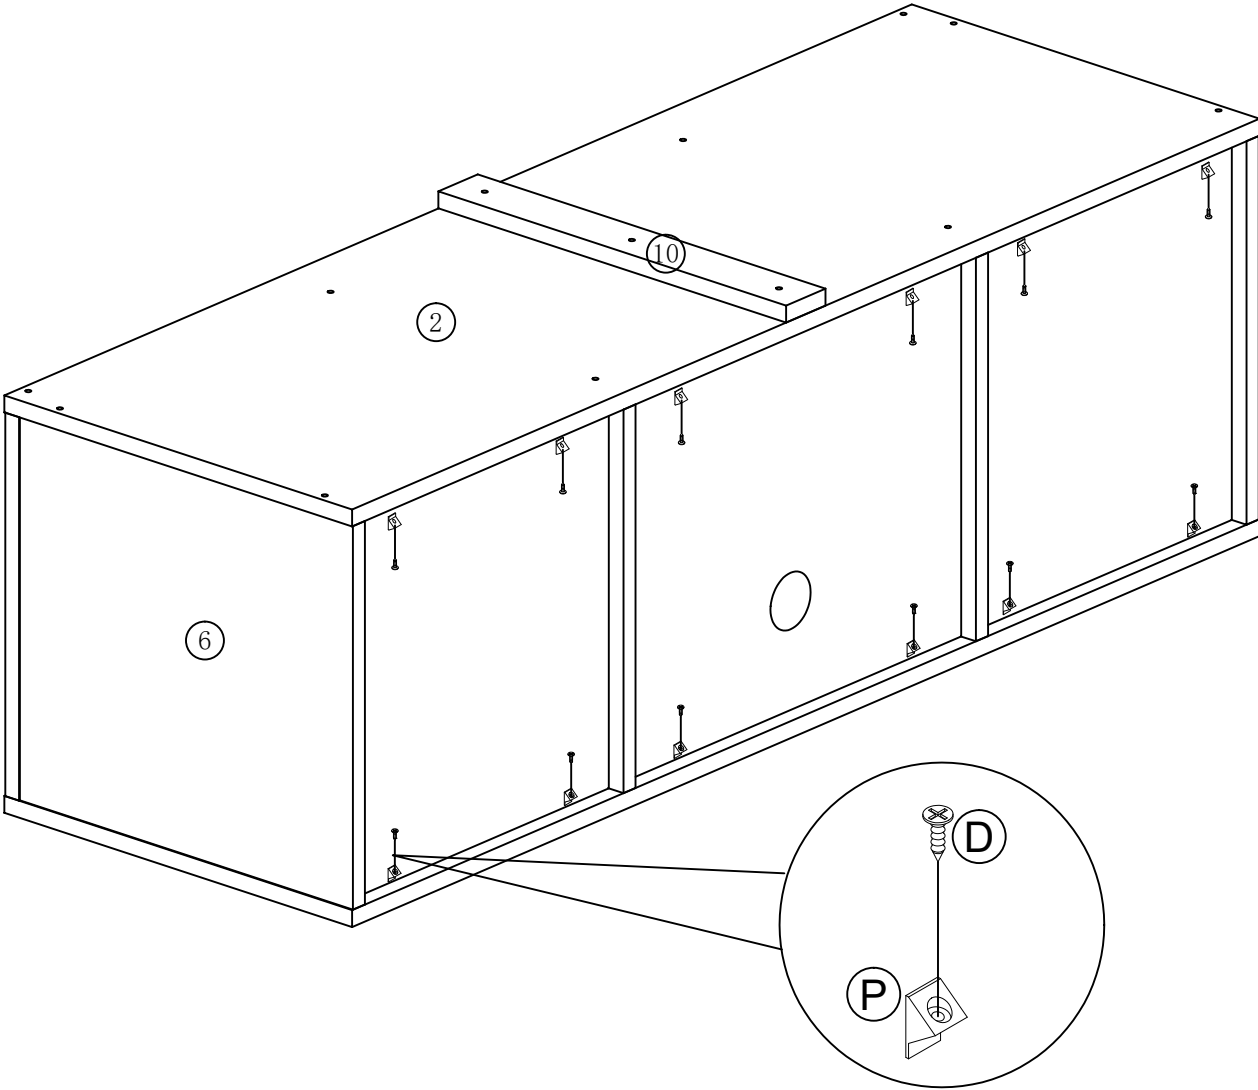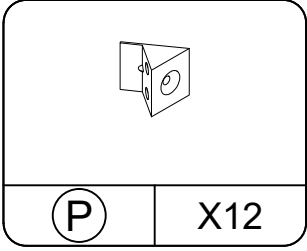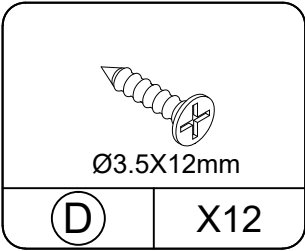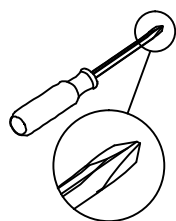







STEP11



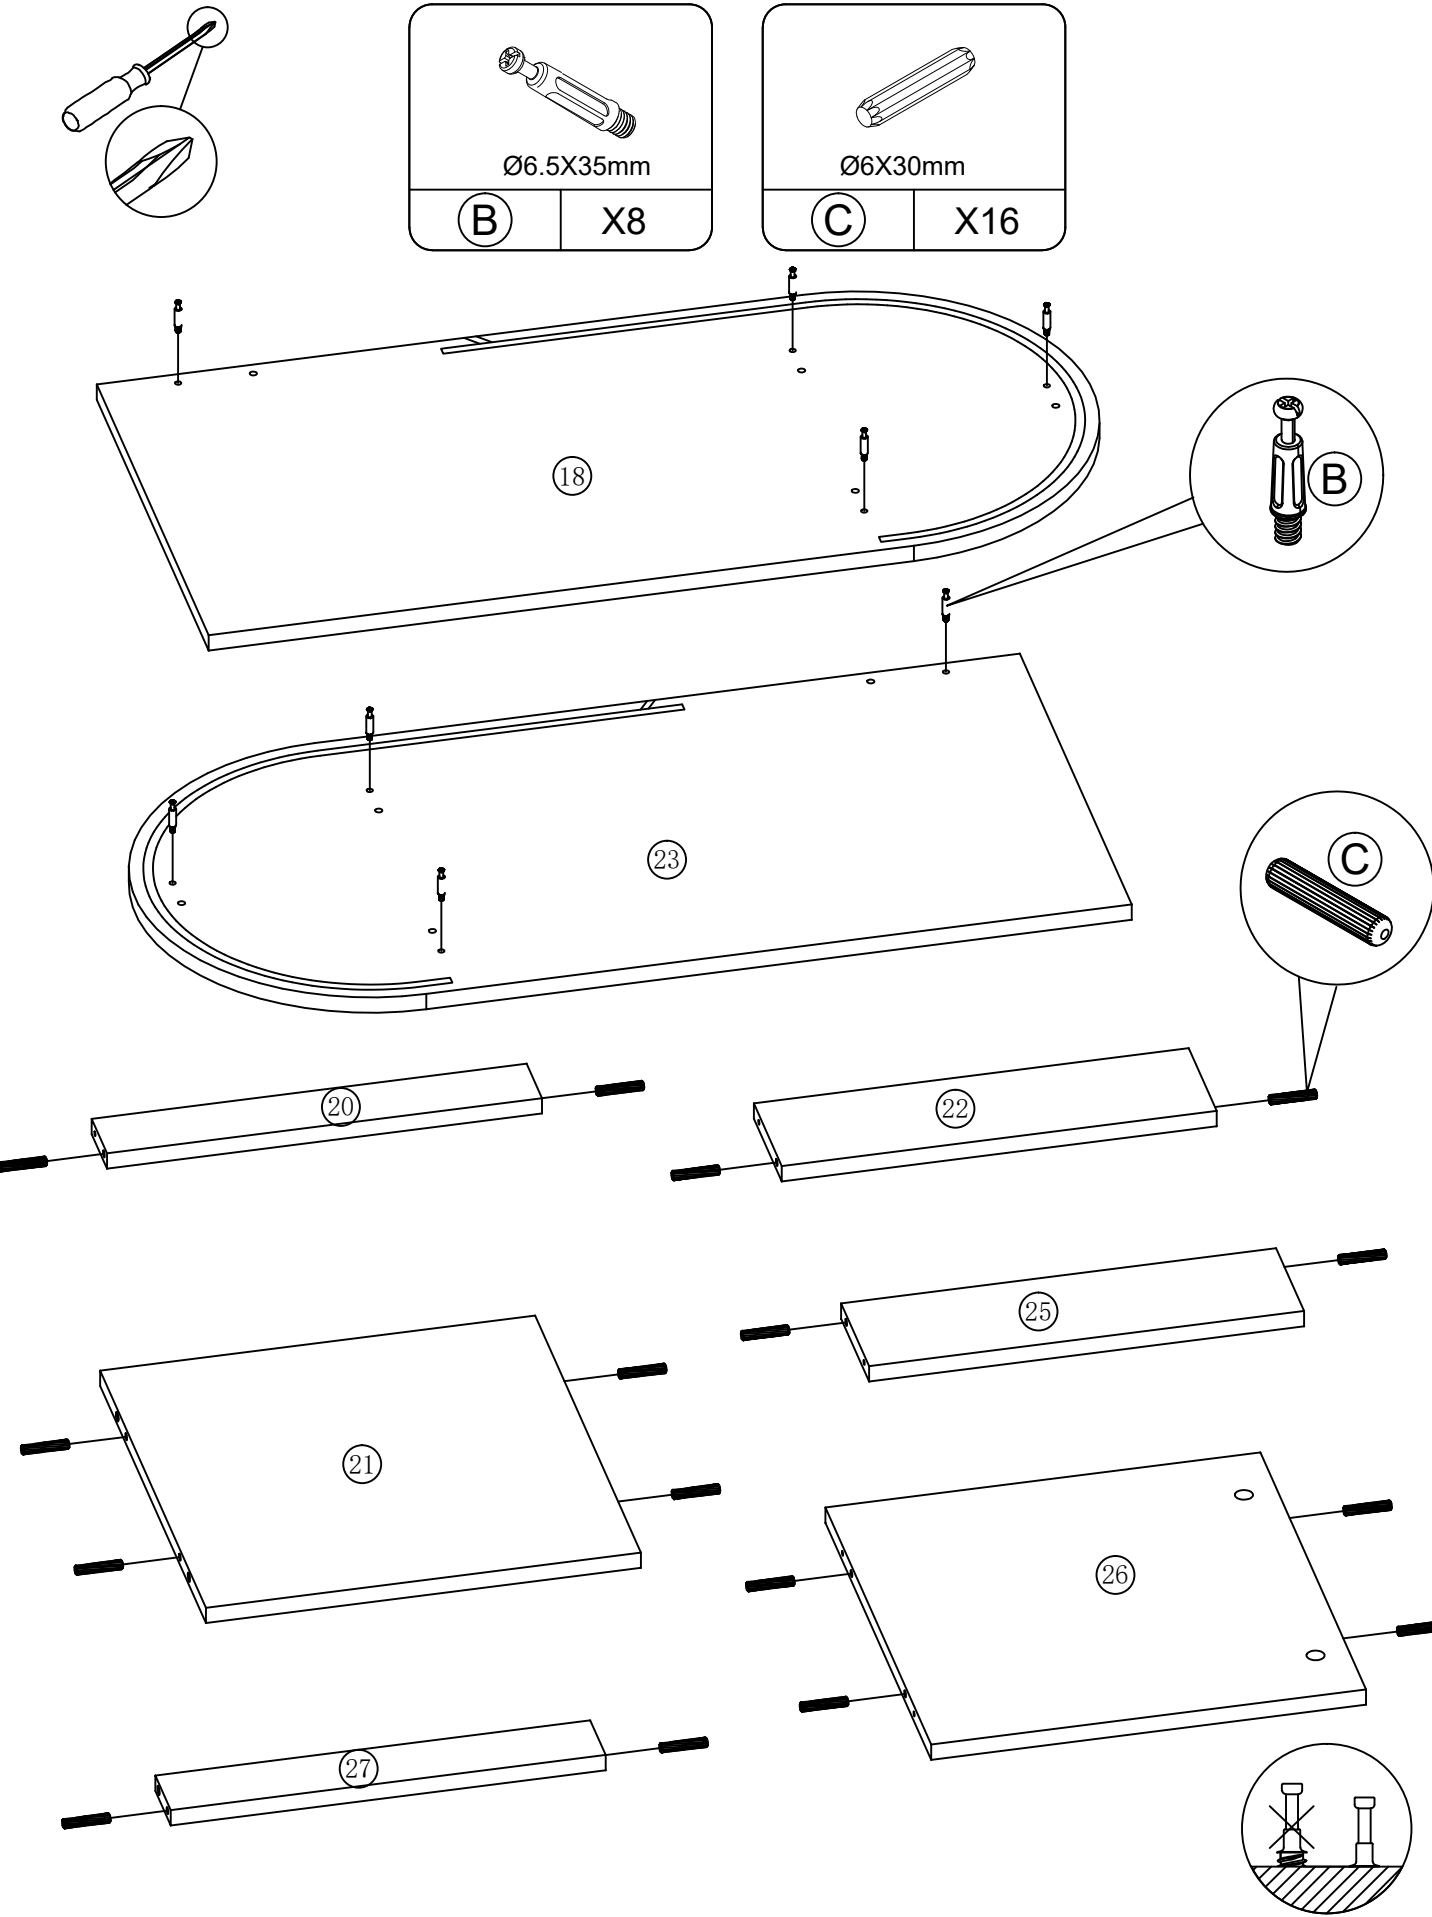


STEP12




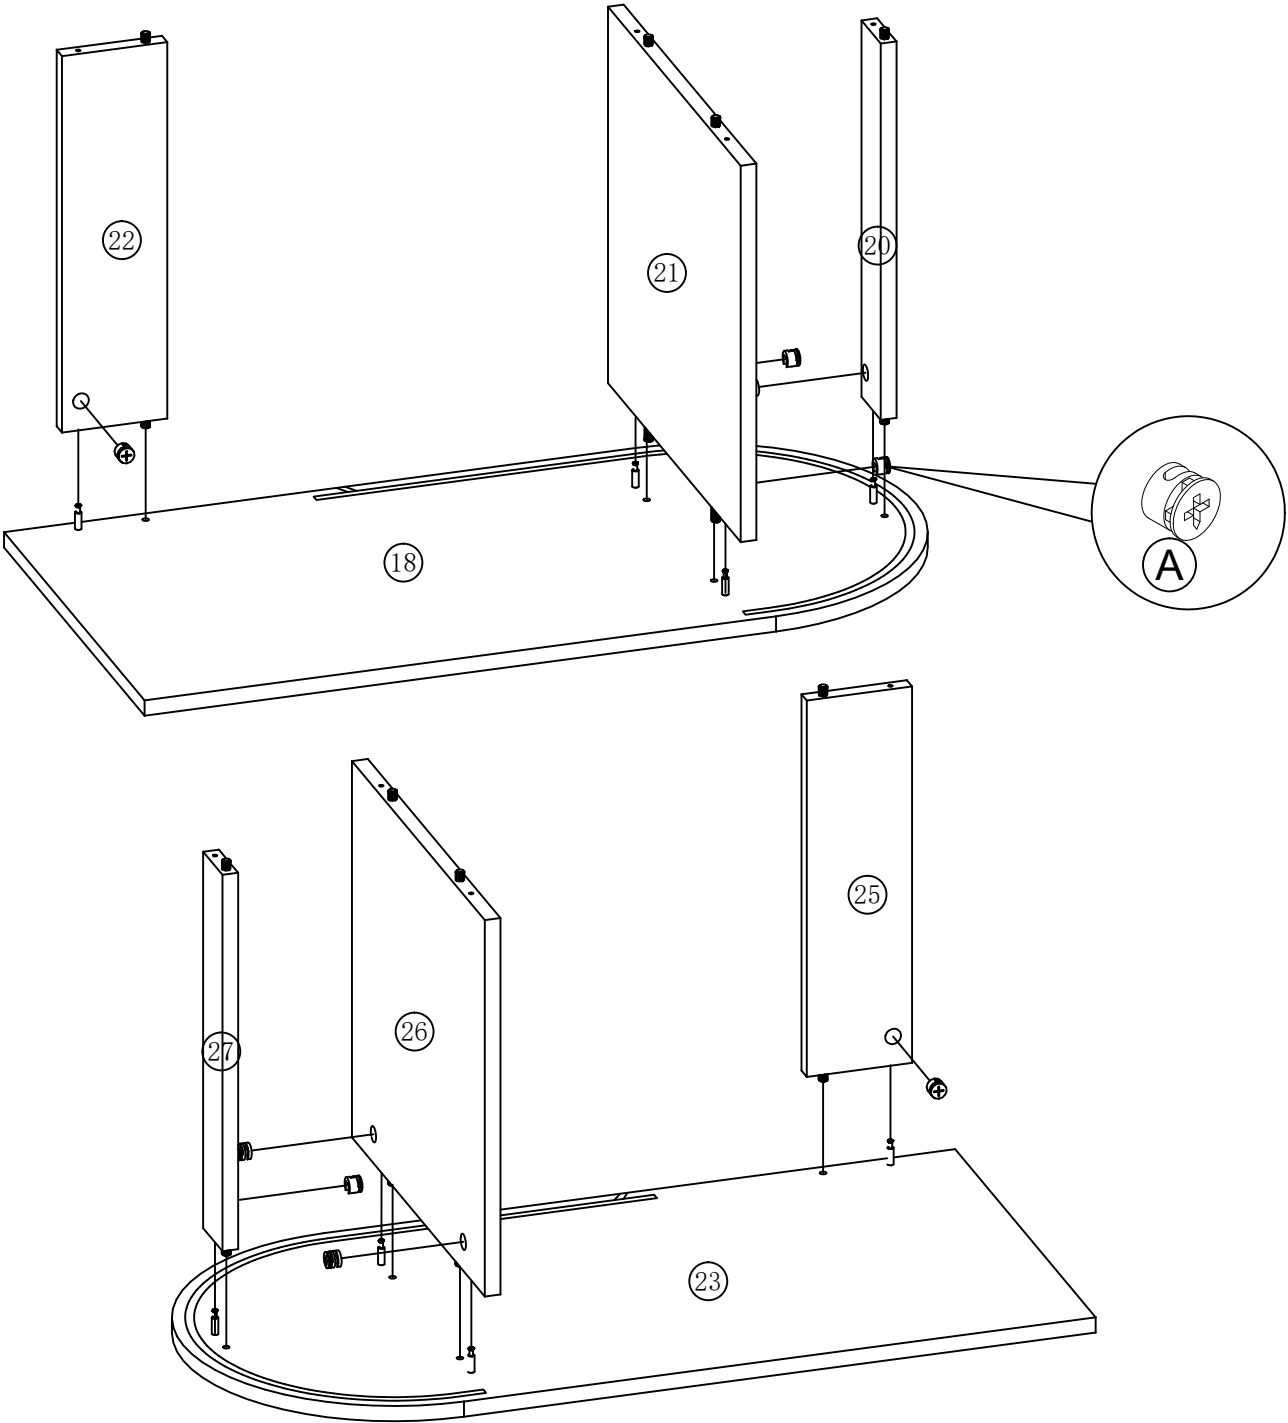
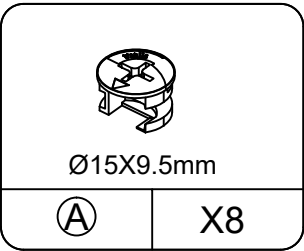
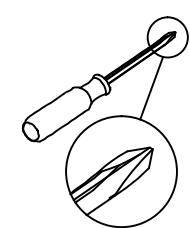


STEP13

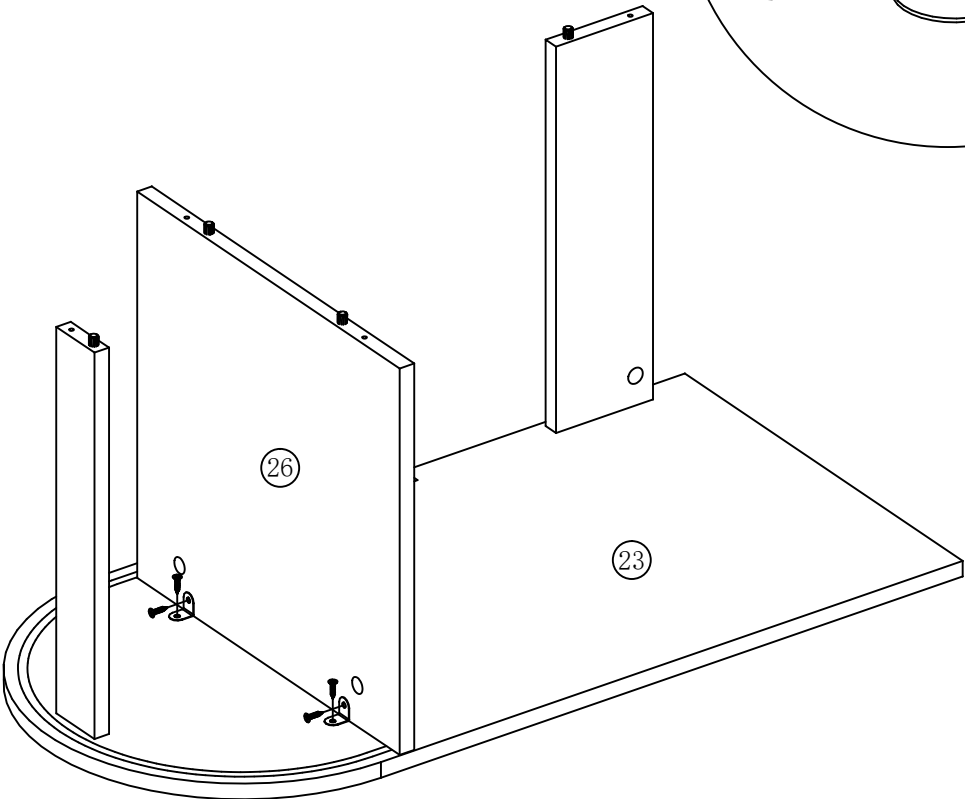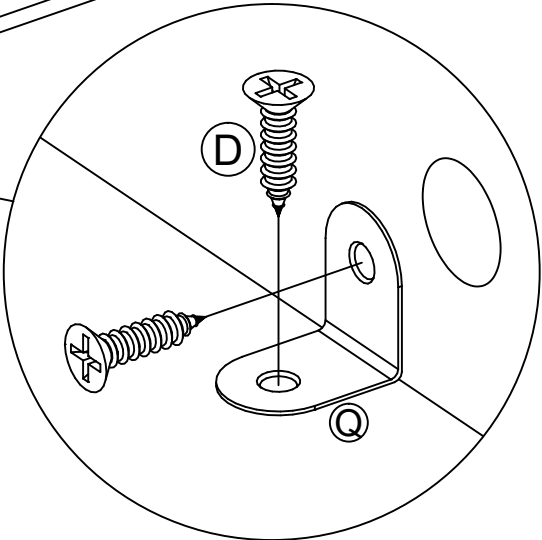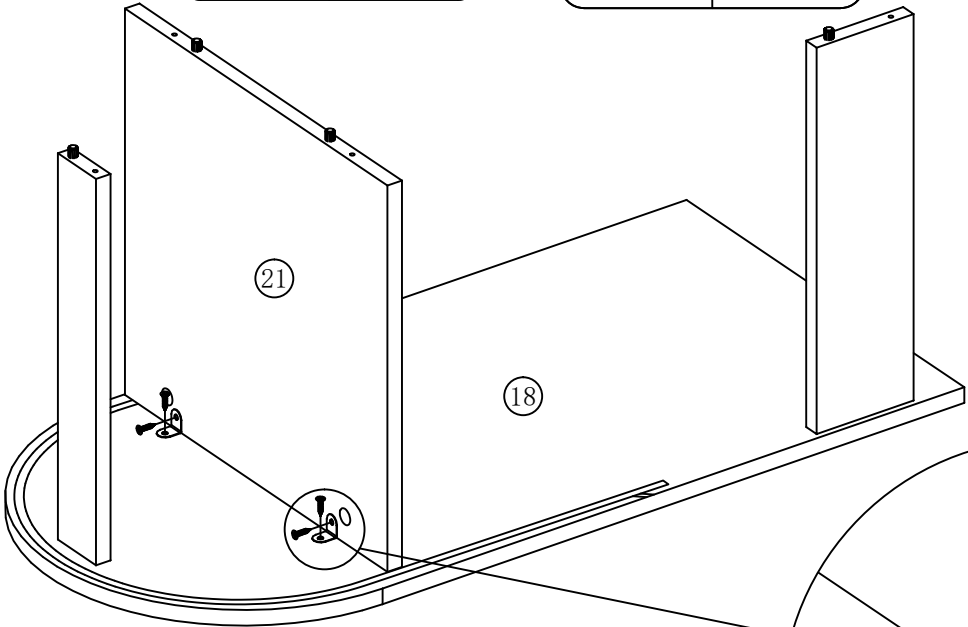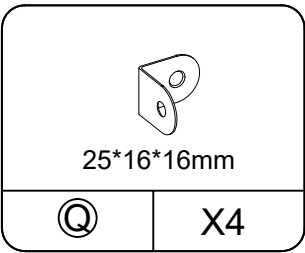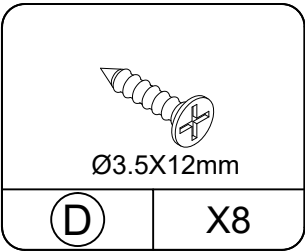
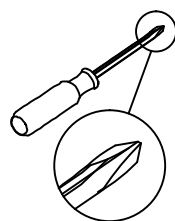


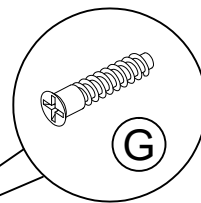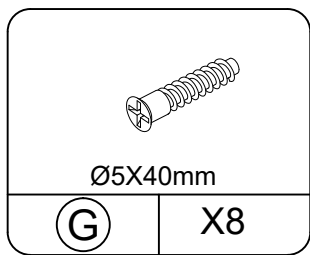


STEP15

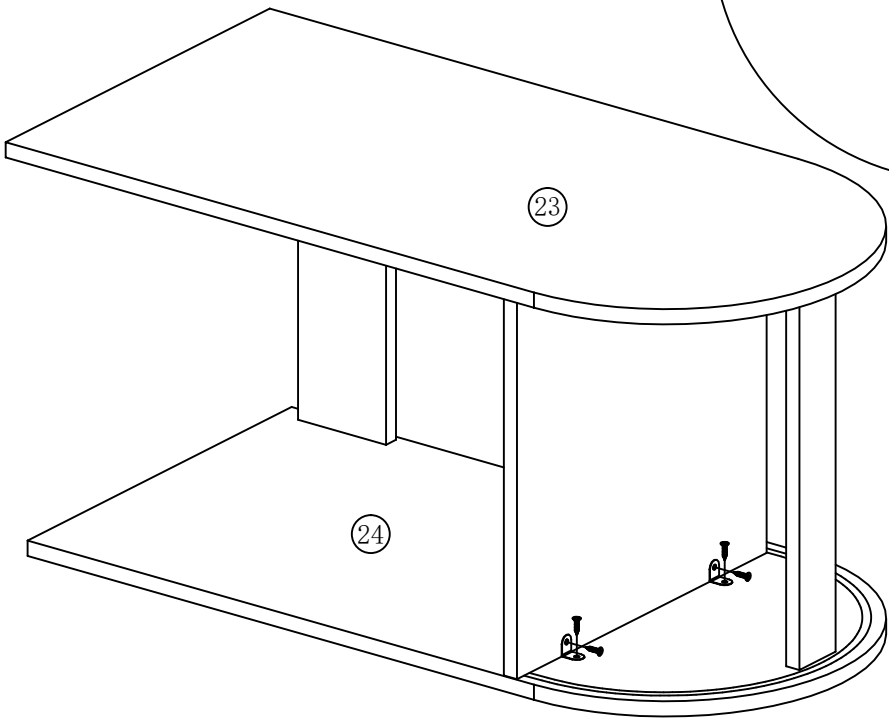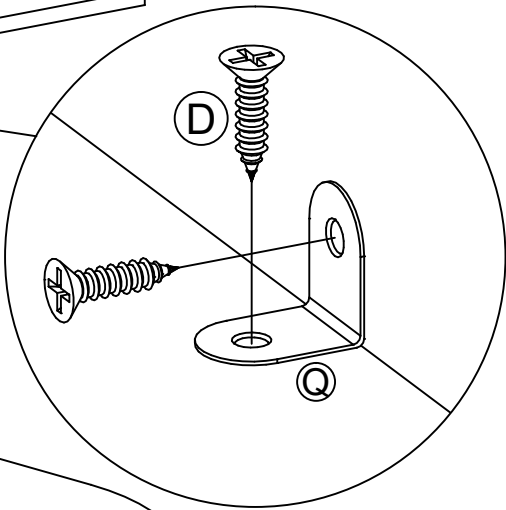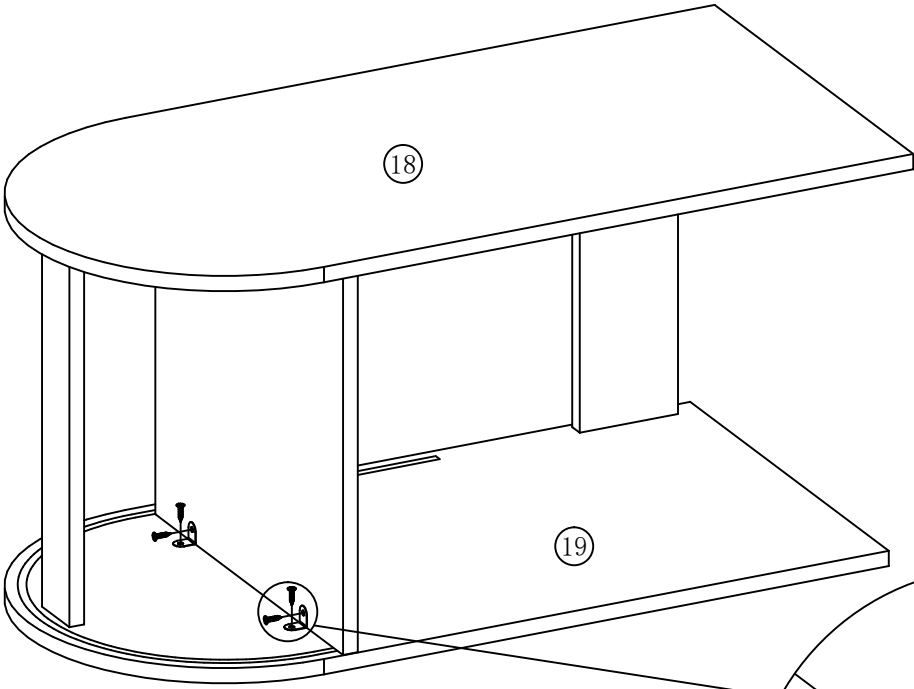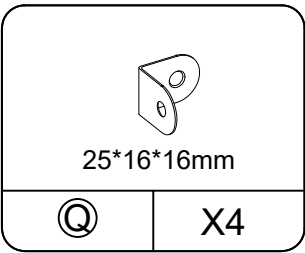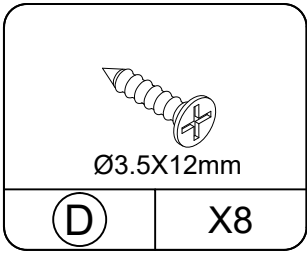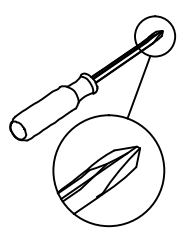






STEP16

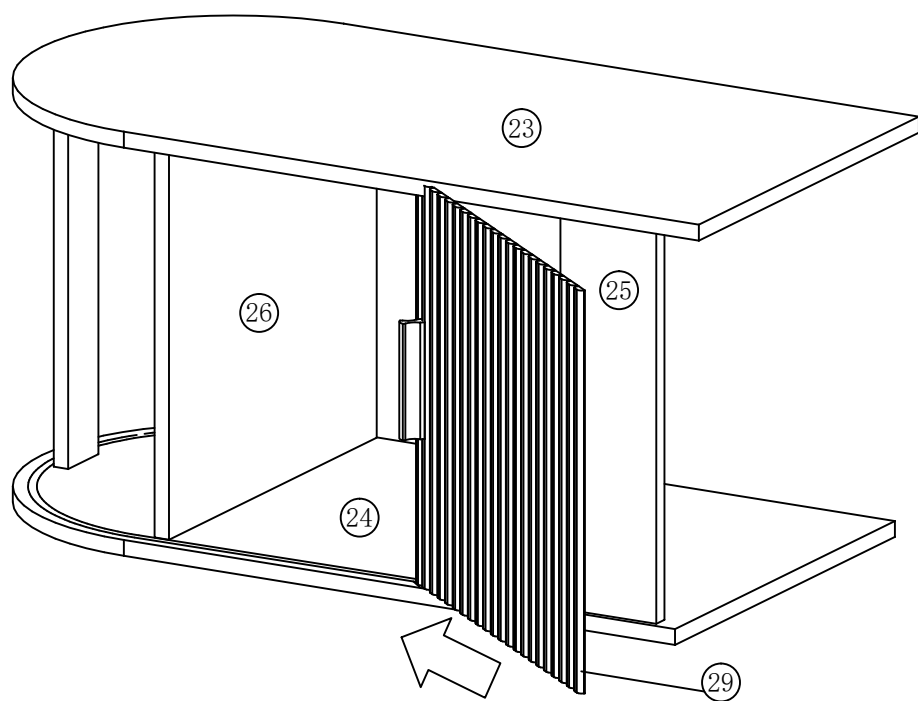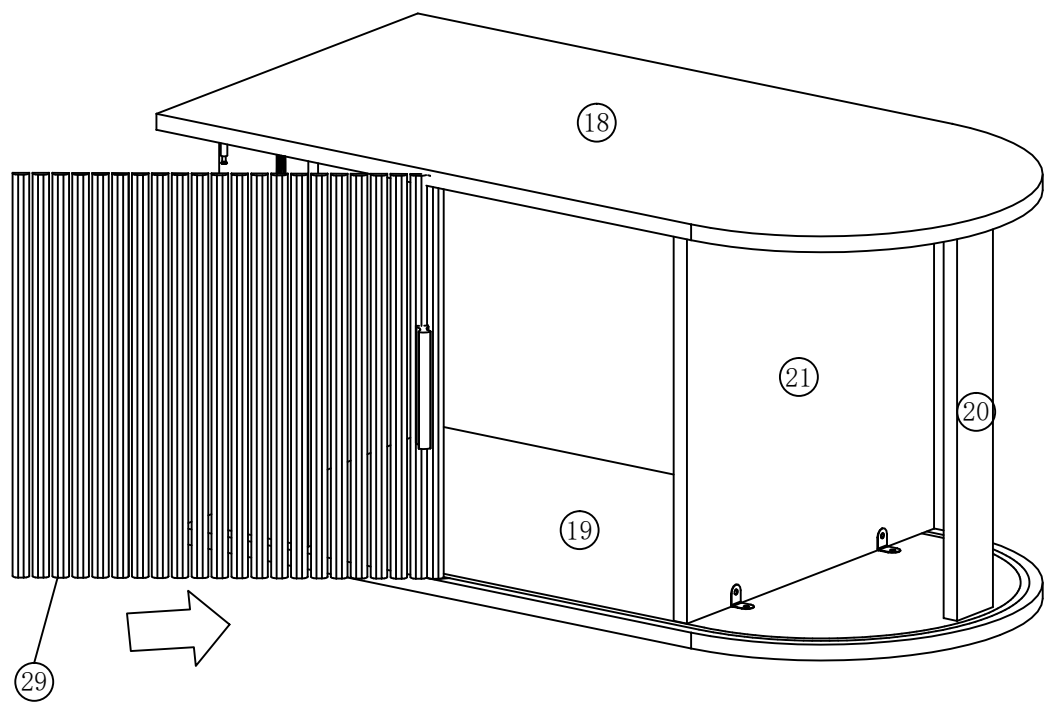






STEP17

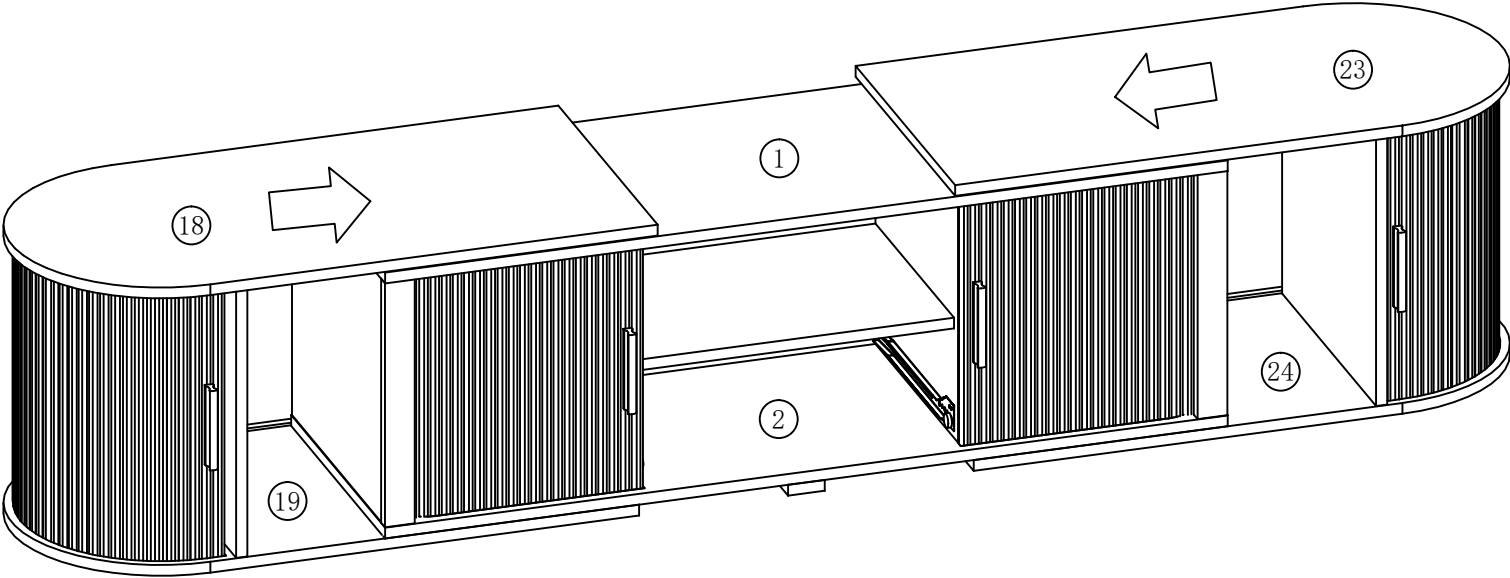

STEP18

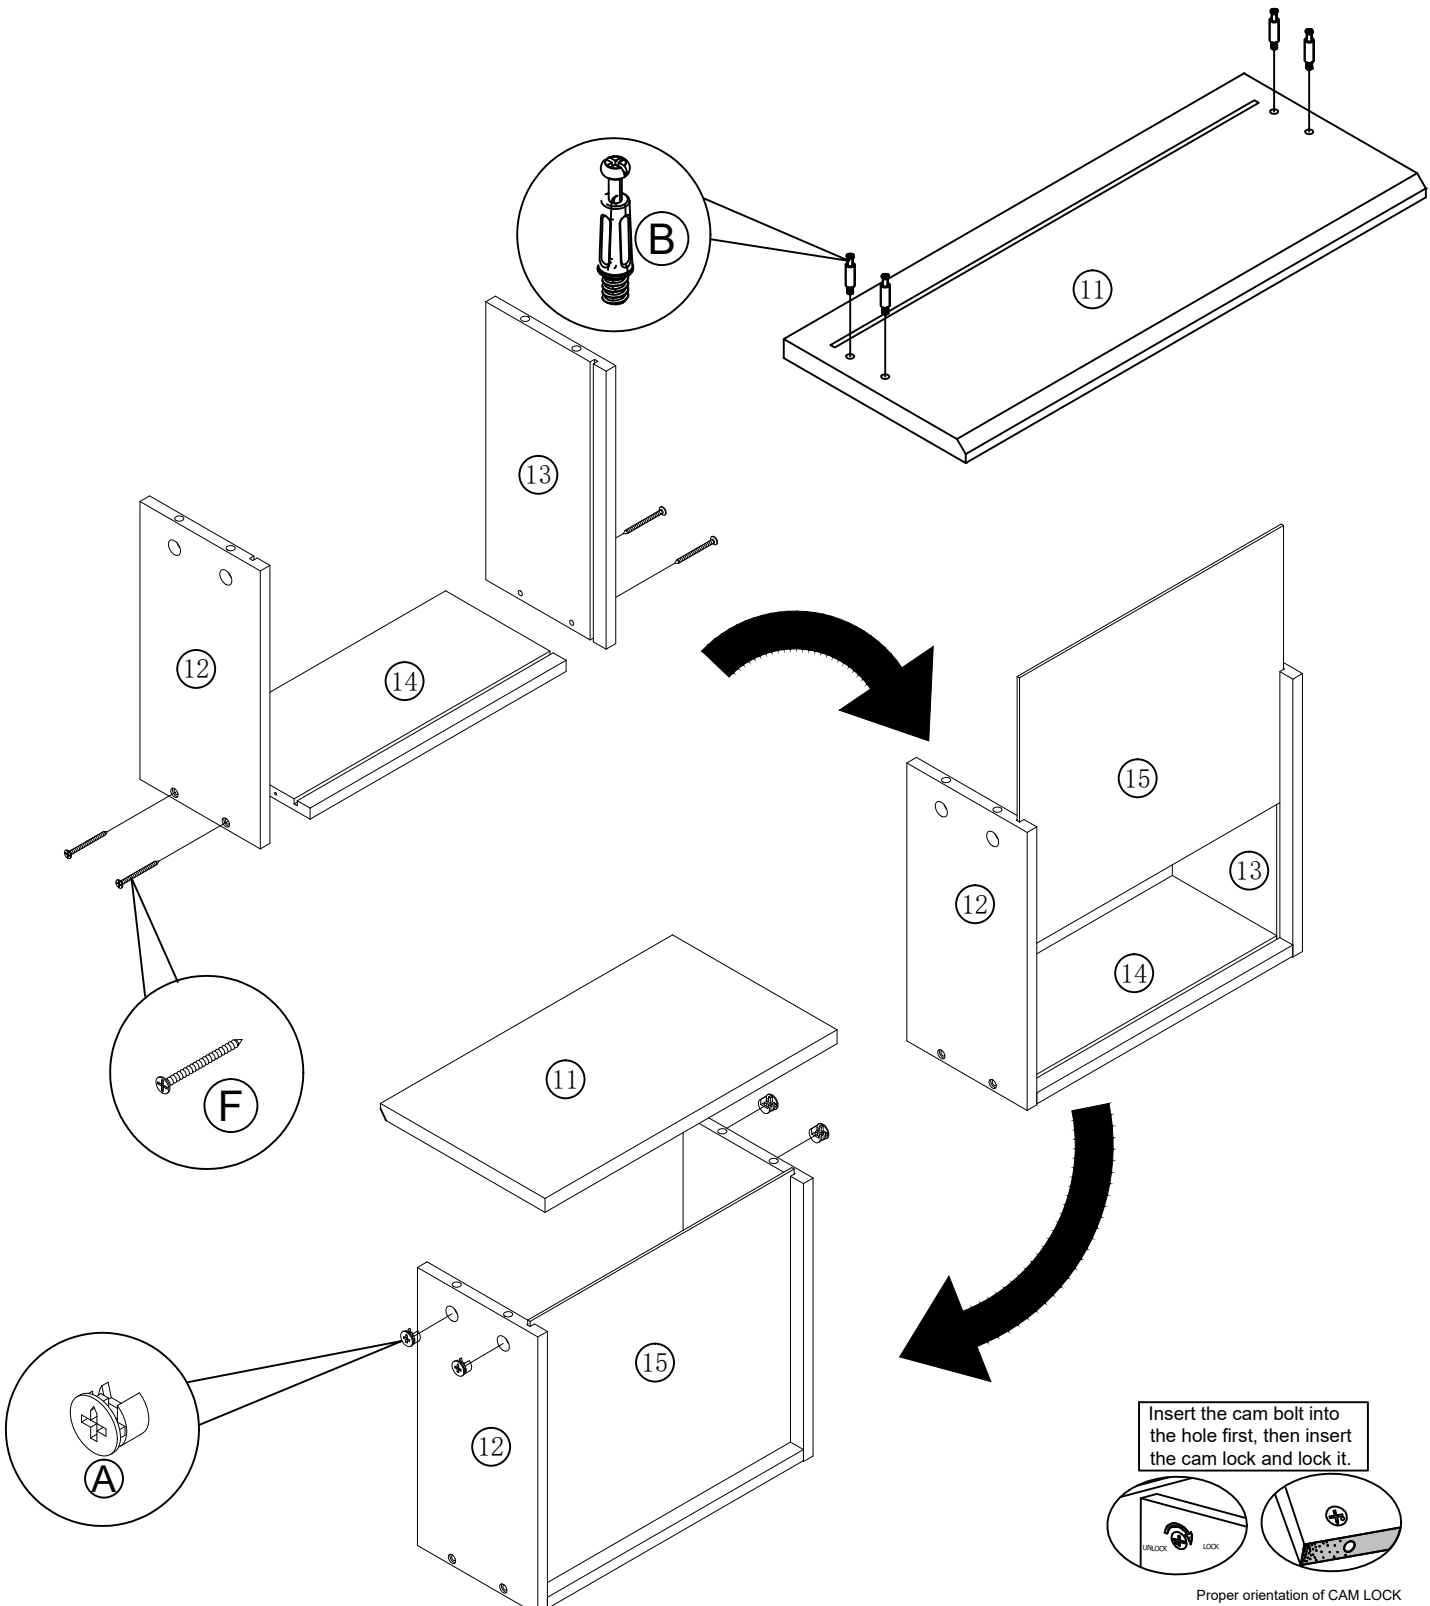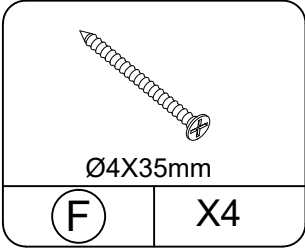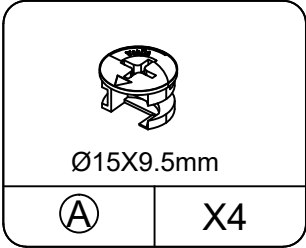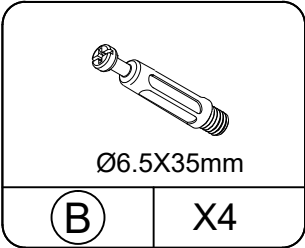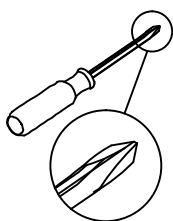

STEP19

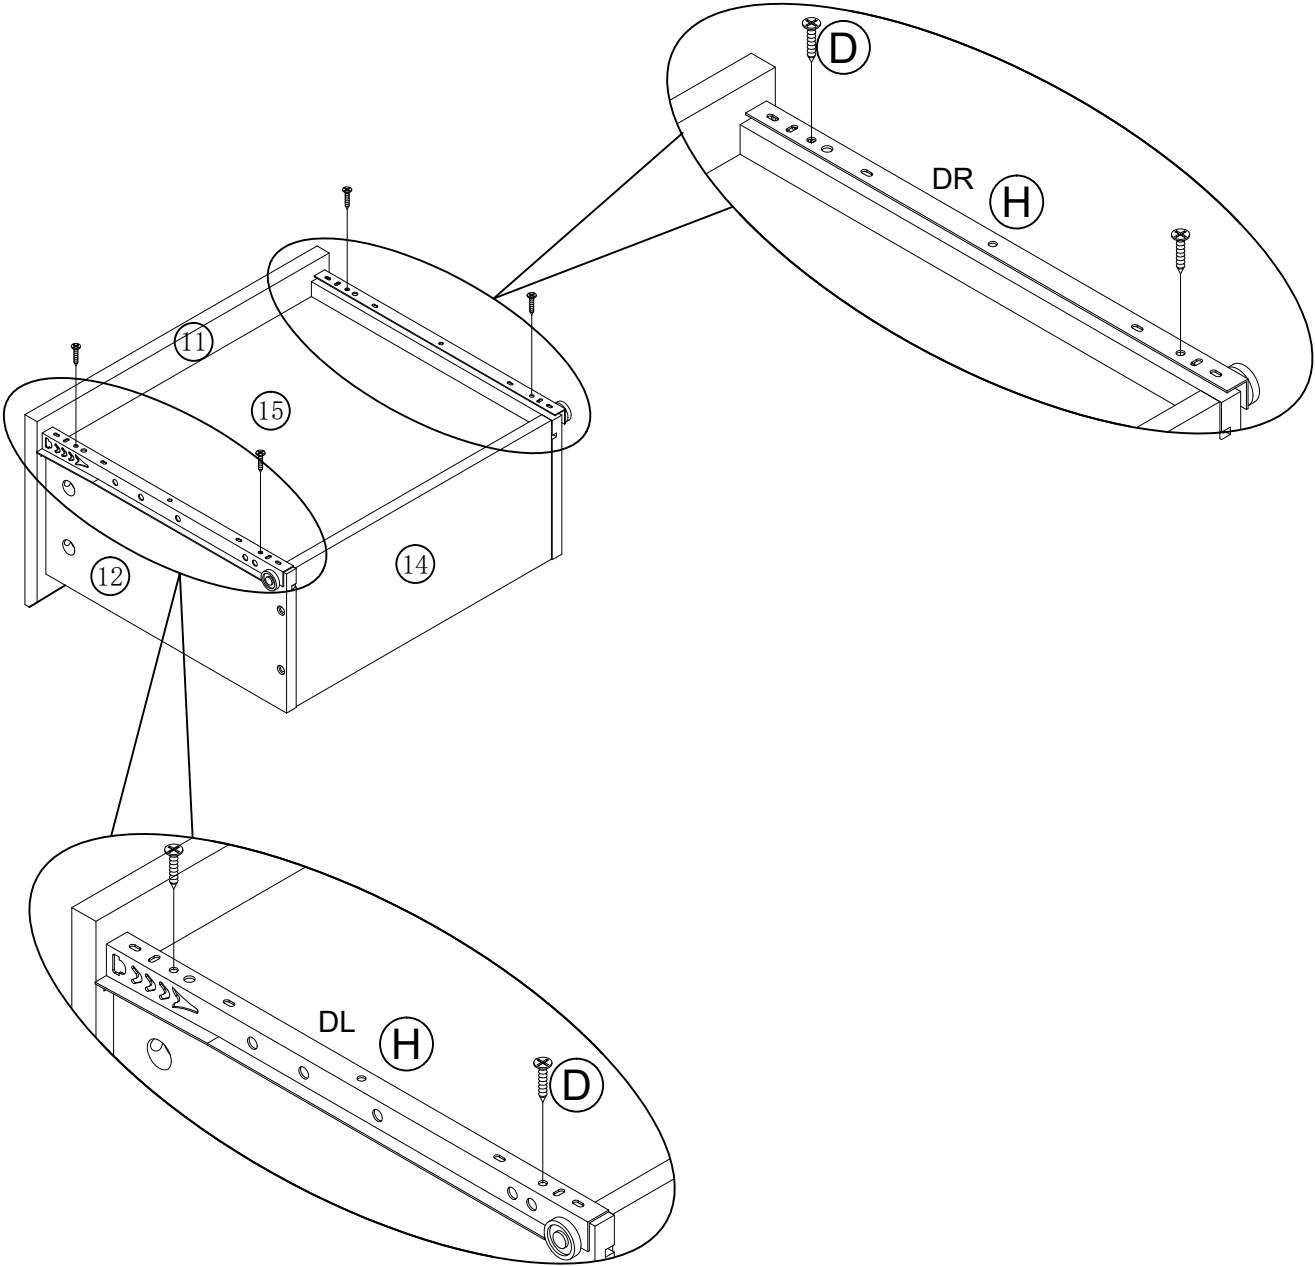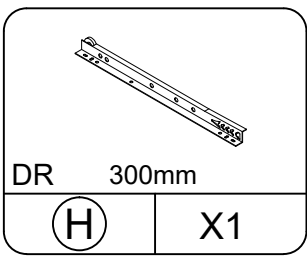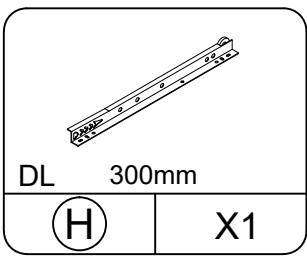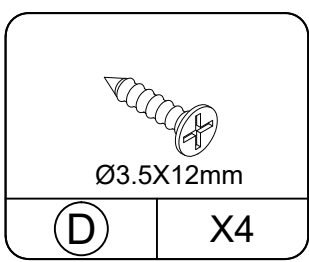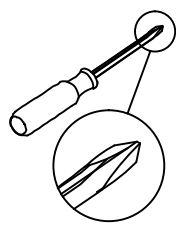

STEP20

