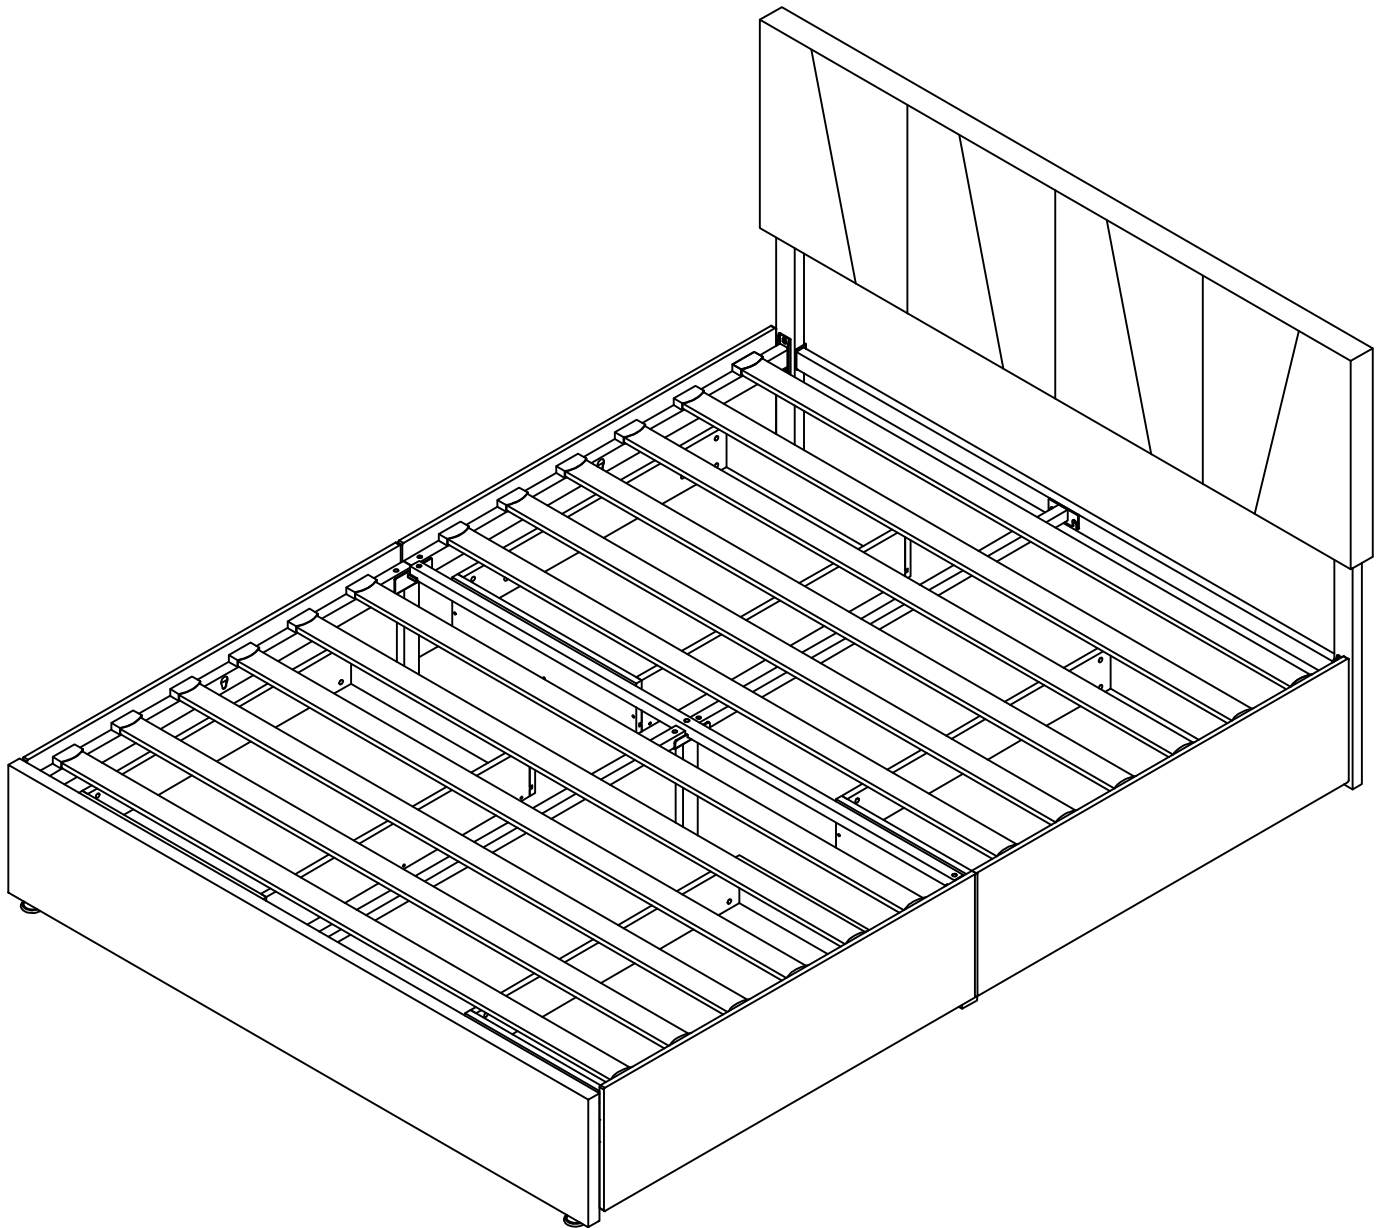


Assembly Instruction

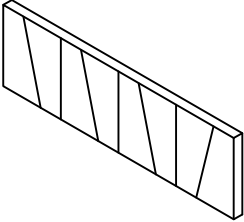
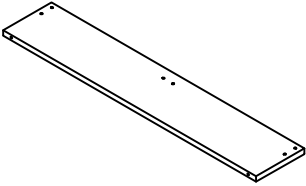
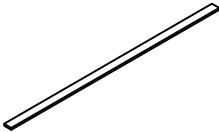
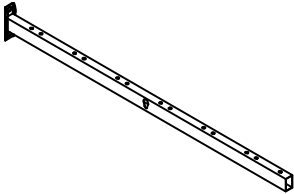
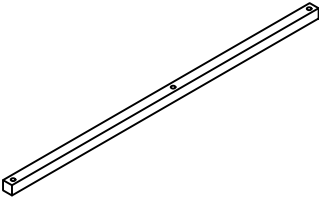
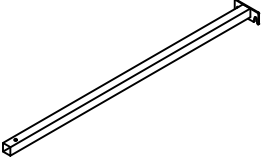
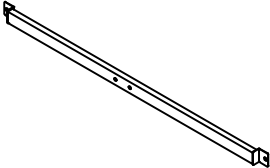
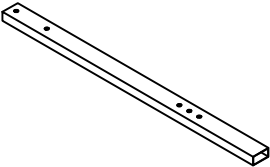
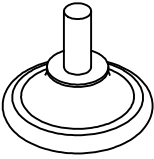
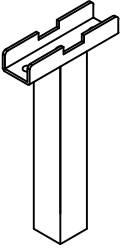


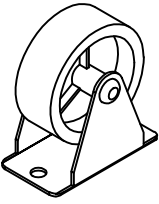
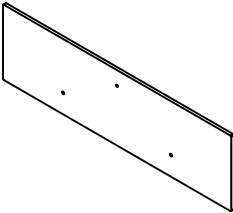
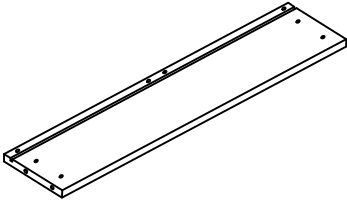
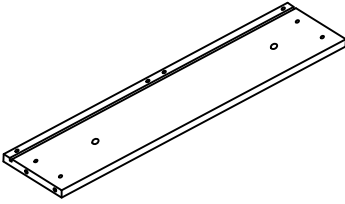
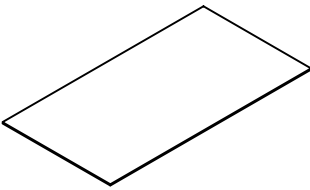
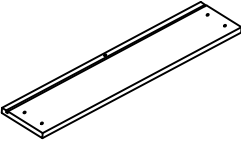
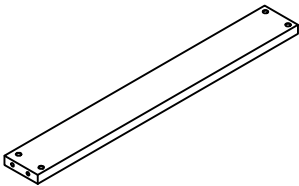
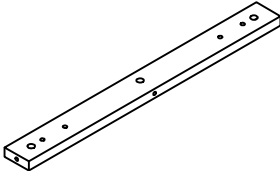
WF309909/WF309910

NOTE: Please do not completely tighten all the hardware until the entire assembly is complete!







If you have any questions, please feel
free to contact us.
Email: lowesteam@aminalife.com




Part list

A	1PC	B	1PC	C	12PCS	D	4PCS
							
bedside		Bed tail		lath		Bed beam	
E	1PC	F1	2PCS	F2	1PC	G	2PCS
							
cross bar		Middle bed beam		Bedside crossbar		Bedside foot tube	
H	2PCS	I1	1PC	I2	2PCS	J	24PCS
							
Legs		Middle support foot		Lateral foot		Plastic caps(Single)	
K	16PCS	L	4PCS	M1	4PCS	M2	4PCS
							
Casters		Drawer Panel		Drawer back panel		Drawer front panel	
N	4PCS	O	8PCS	P1	4PCS	P2	8PCS
							
Drawer bottom plate		Drawer side panel		Drawer reinforcement plate		Drawer bud board	

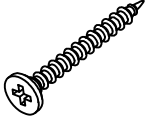
Hardware list

Q	11PCS	R	4PCS	S	18PCS	T	2PCS
							
M8*50mm		M8*40mm		M8*27mm		M8*16mm	
U	32PCS	V	4PCS	W	72PCS	X	72PCS
							
M6*12mm		M8*12mm		M5*55mm			
Y	18PCS	Z1	1PC	Z2	1PC		
							
ø22*ø8.5		M8		M6			

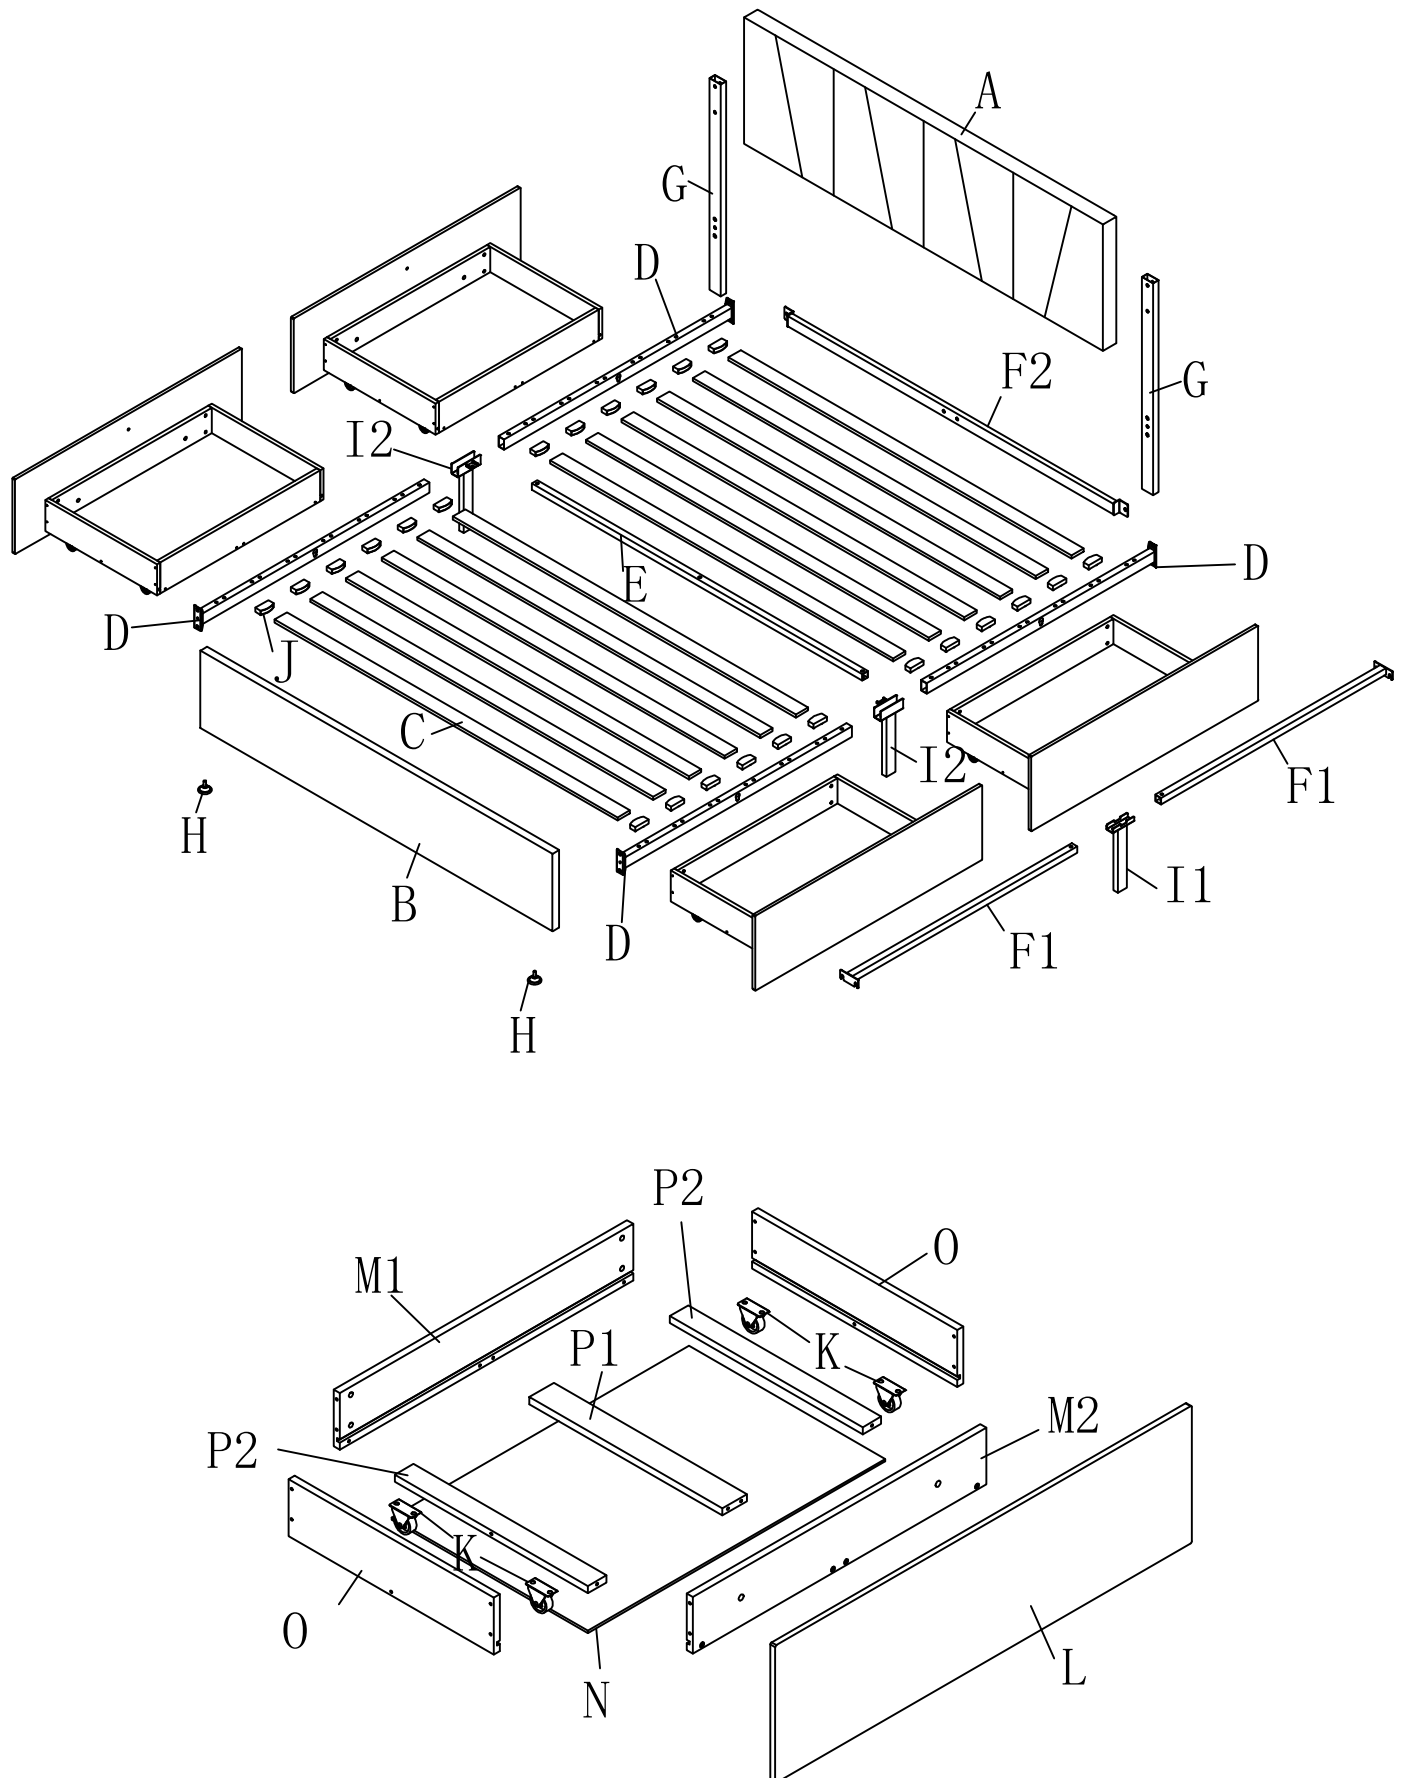Detail View



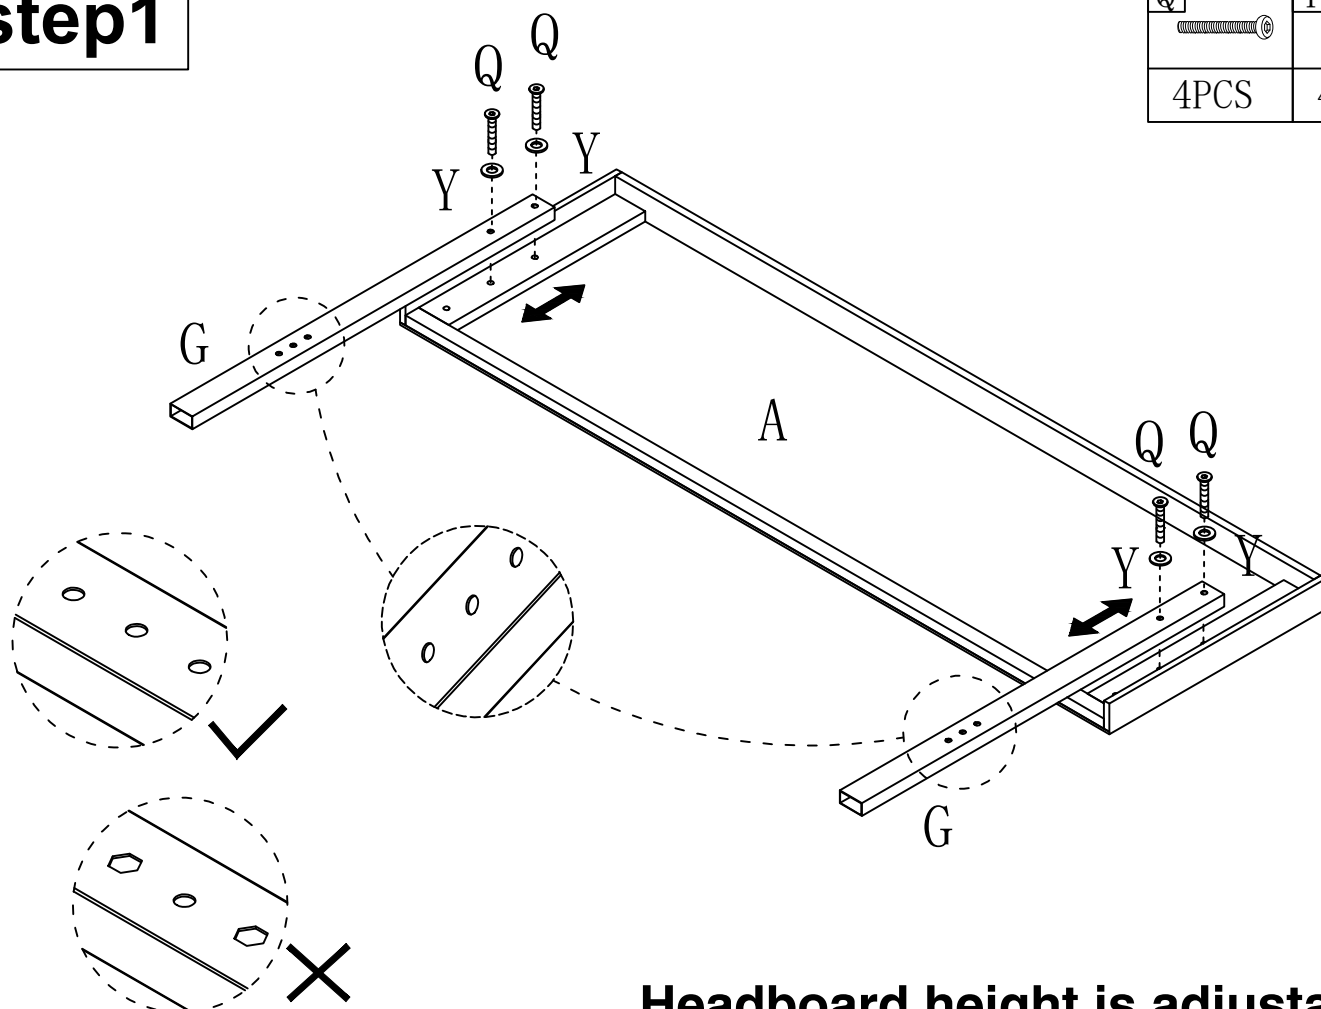
step1



Q	Y
	
4PCS	4PCS

Headboard height is adjustable

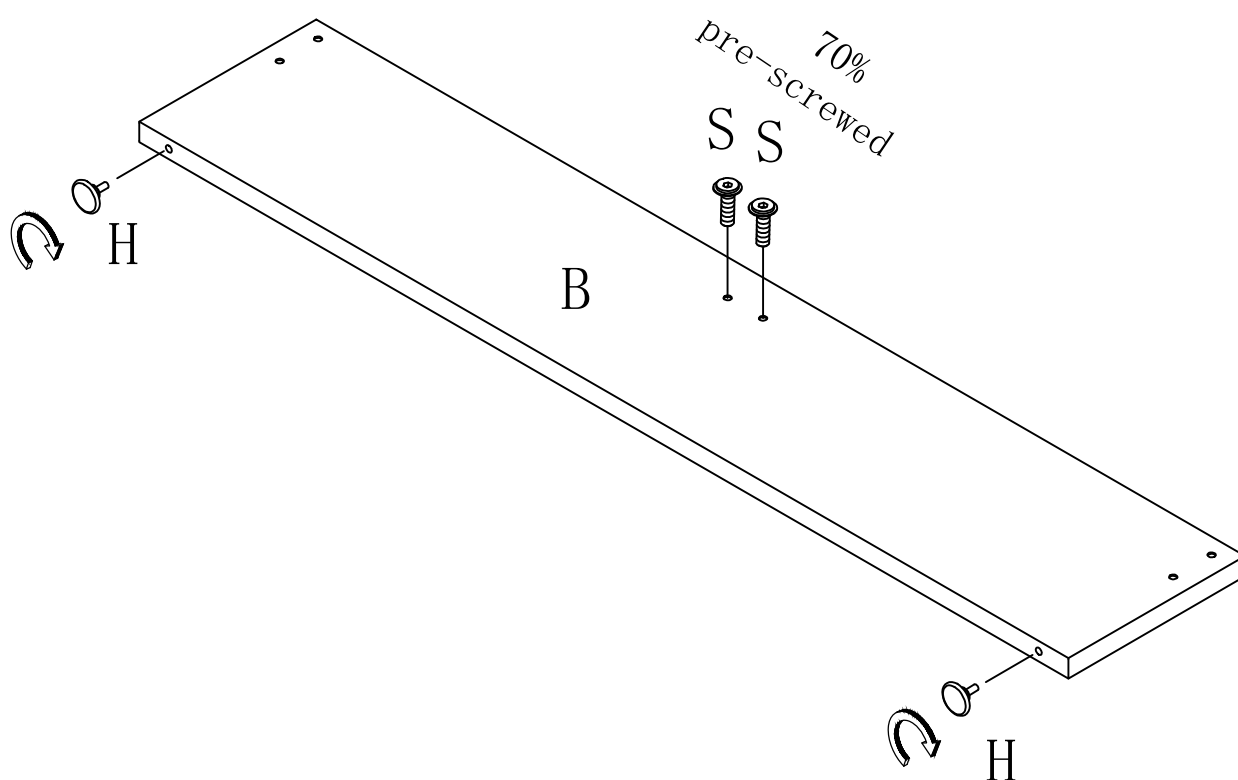
step2




S

2PCS


step3




4PCS

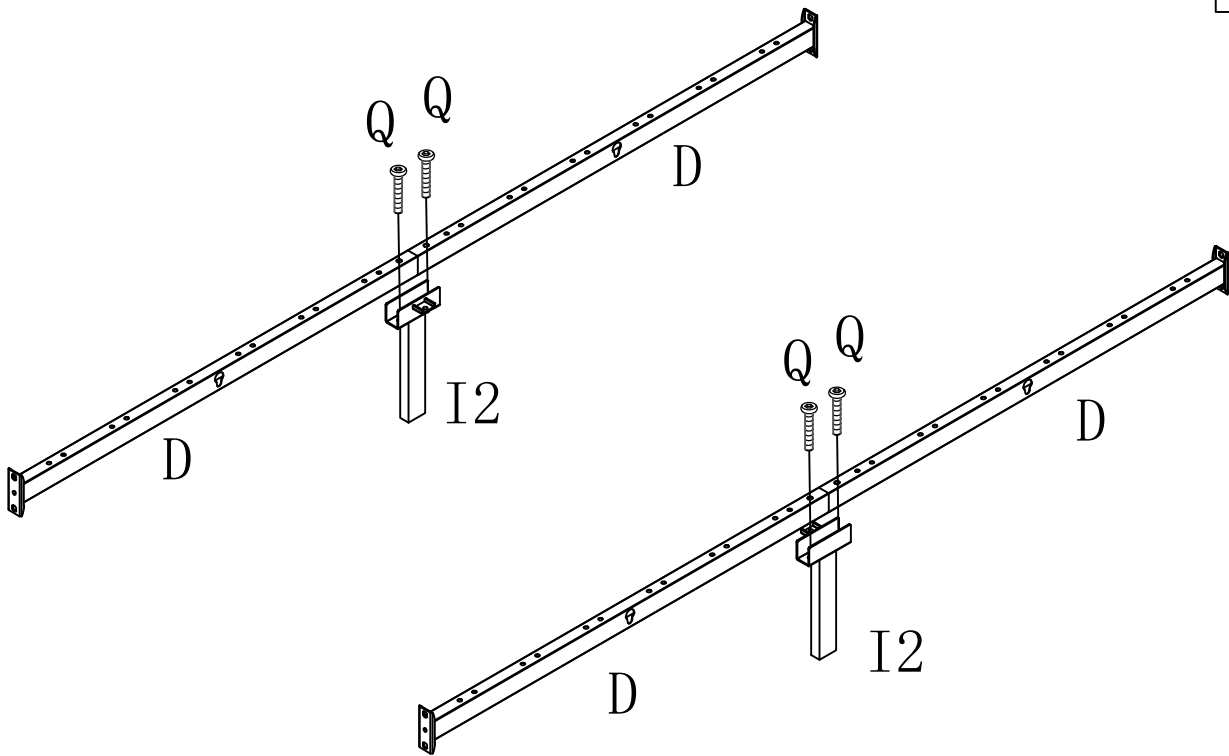

step4




4PCS

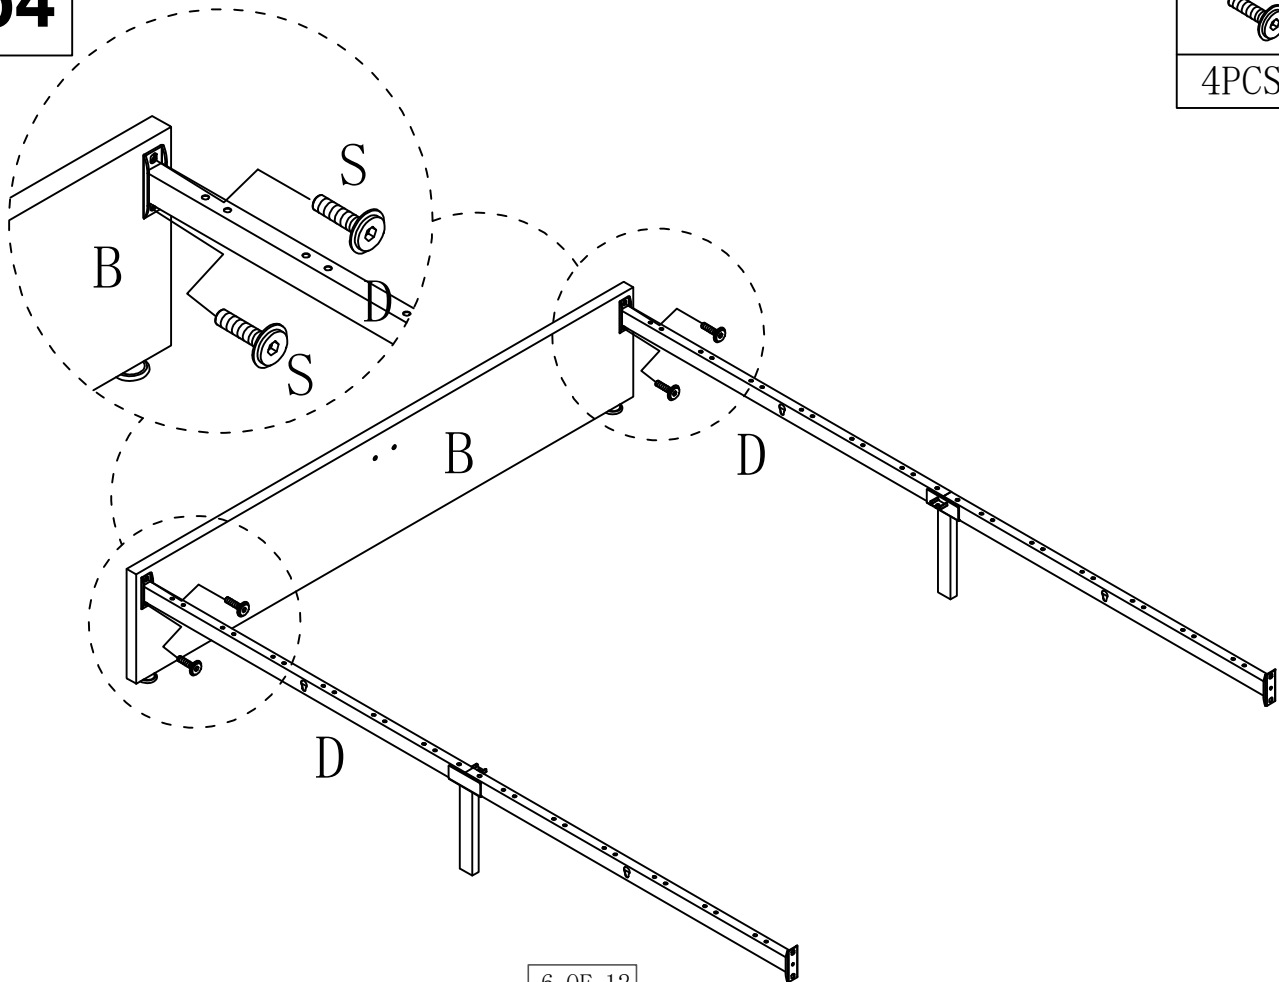


step5

S	
4PCS	

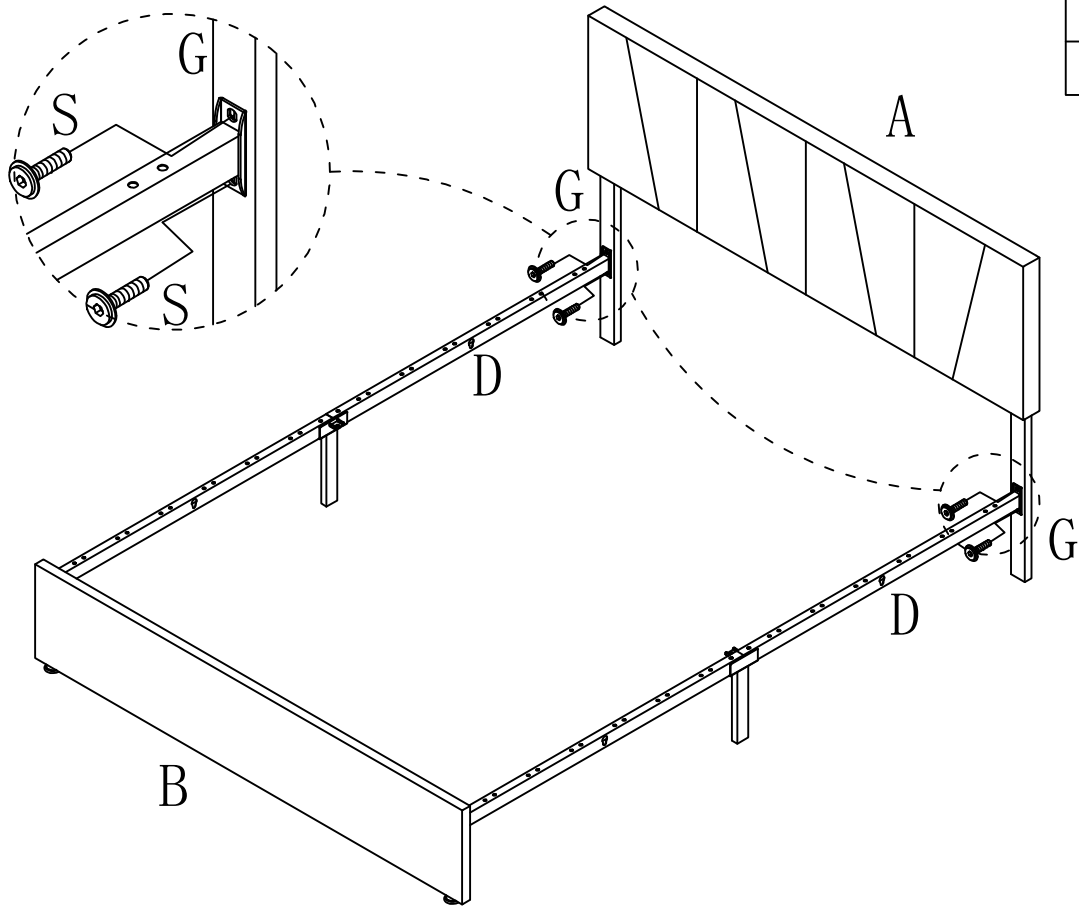


step6

Q		Y	
2PCS		2PCS	

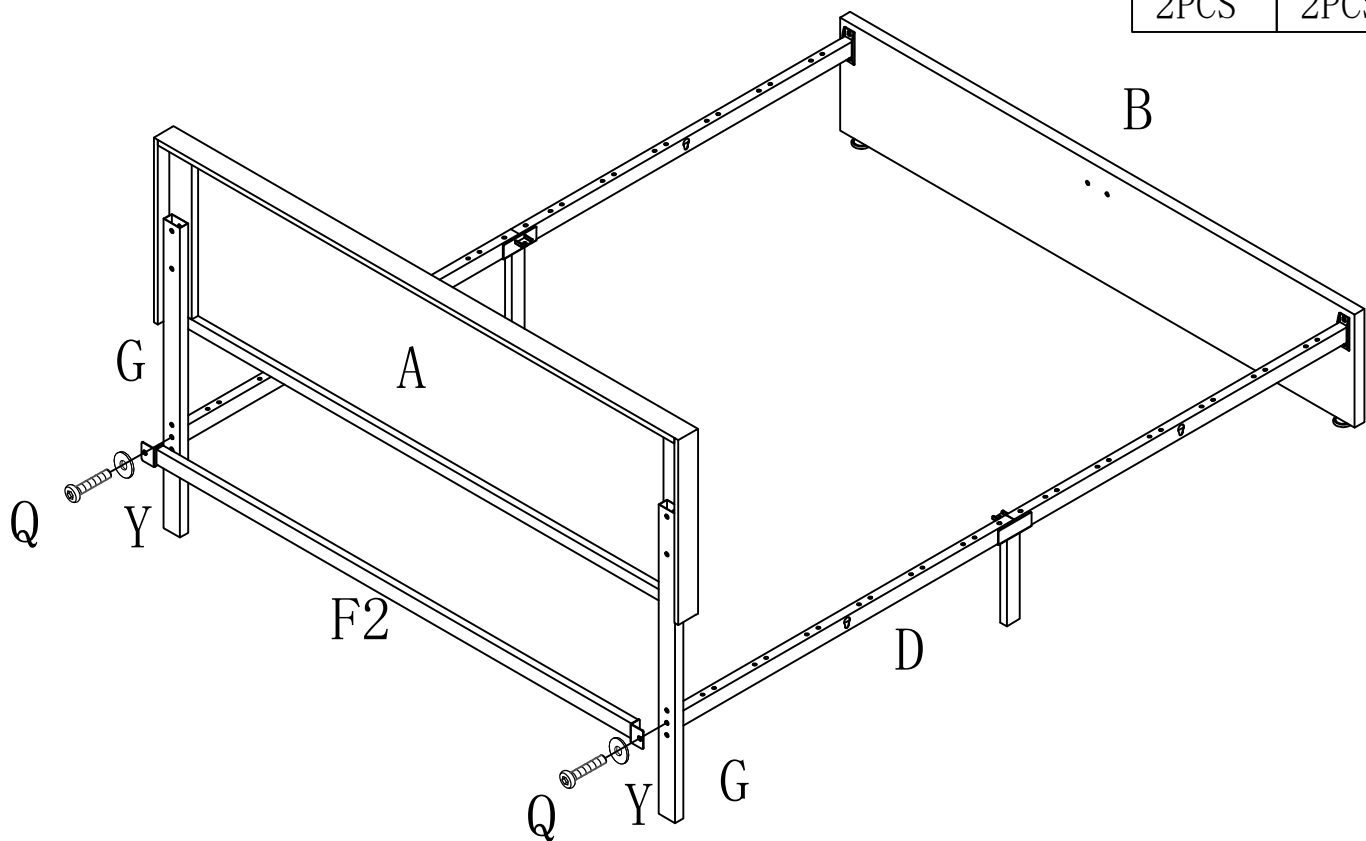


step7

Q	R
	
1PC	2PCS

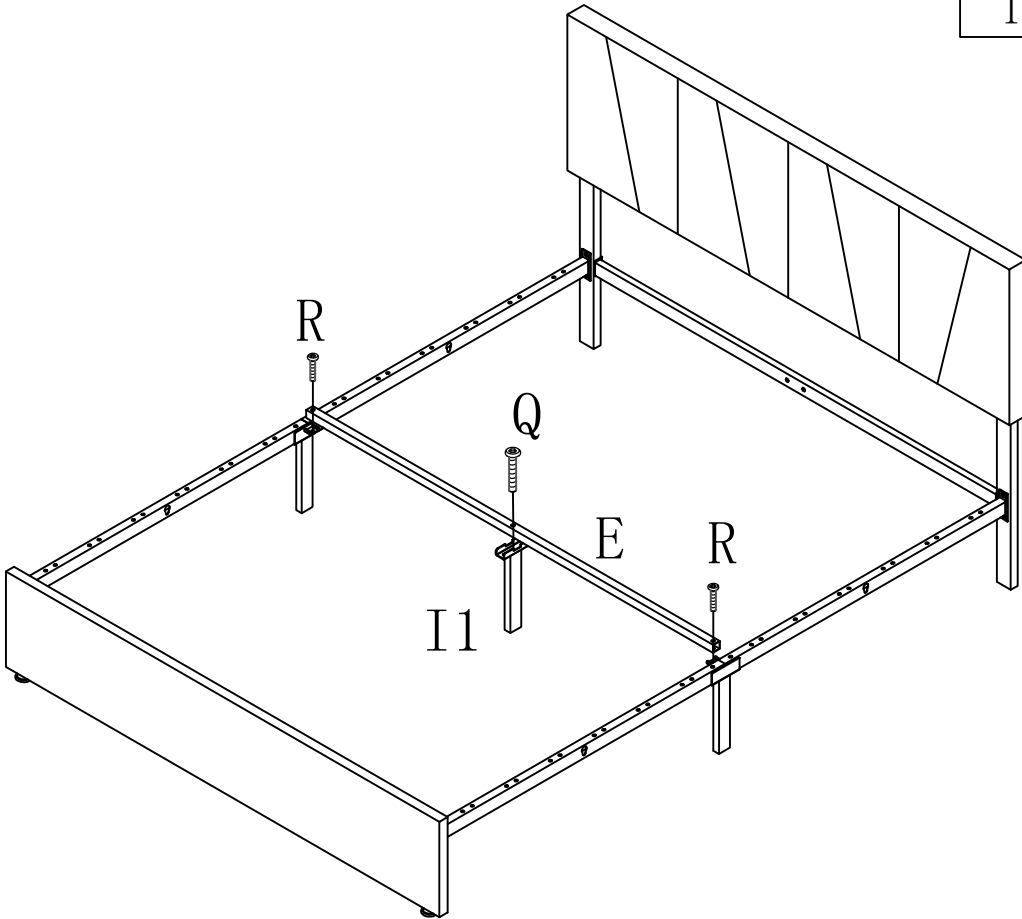


step8


R	T
	
2PC	2PCS

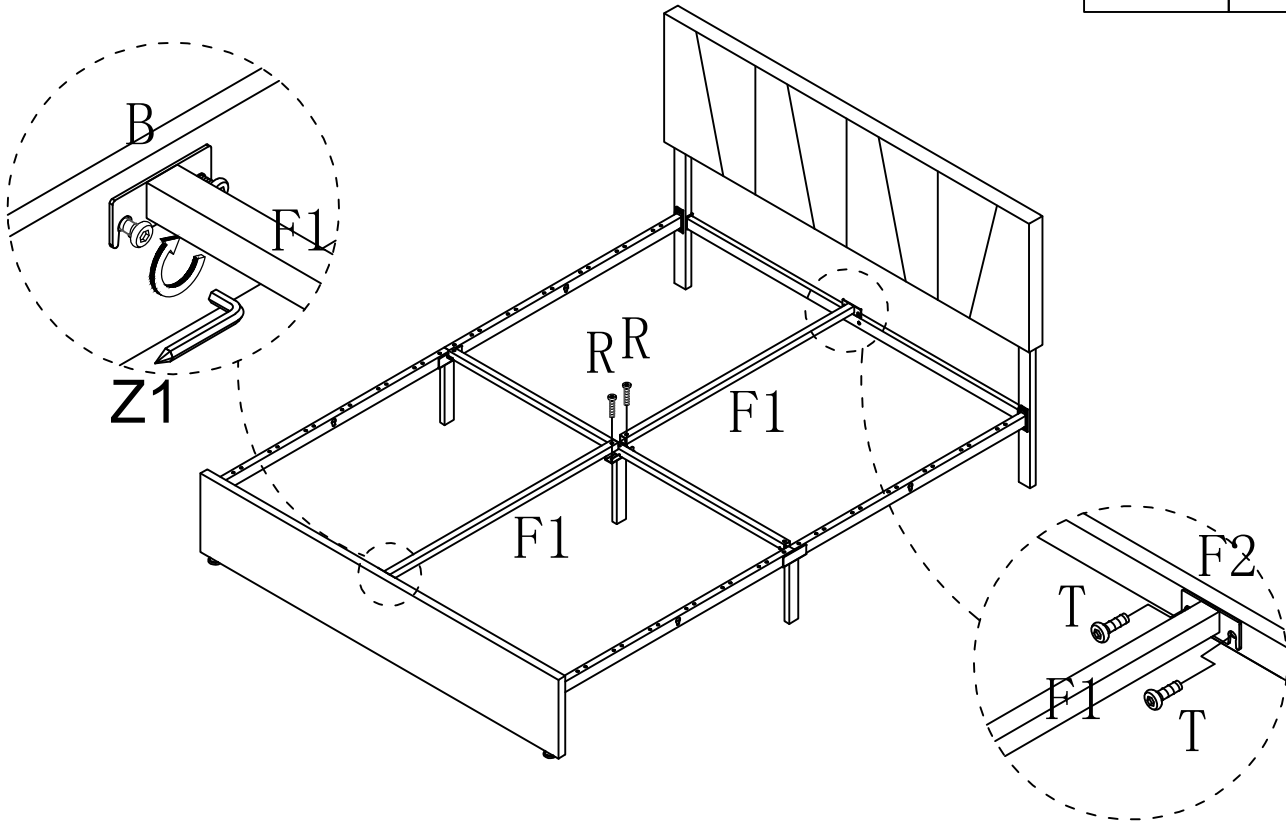

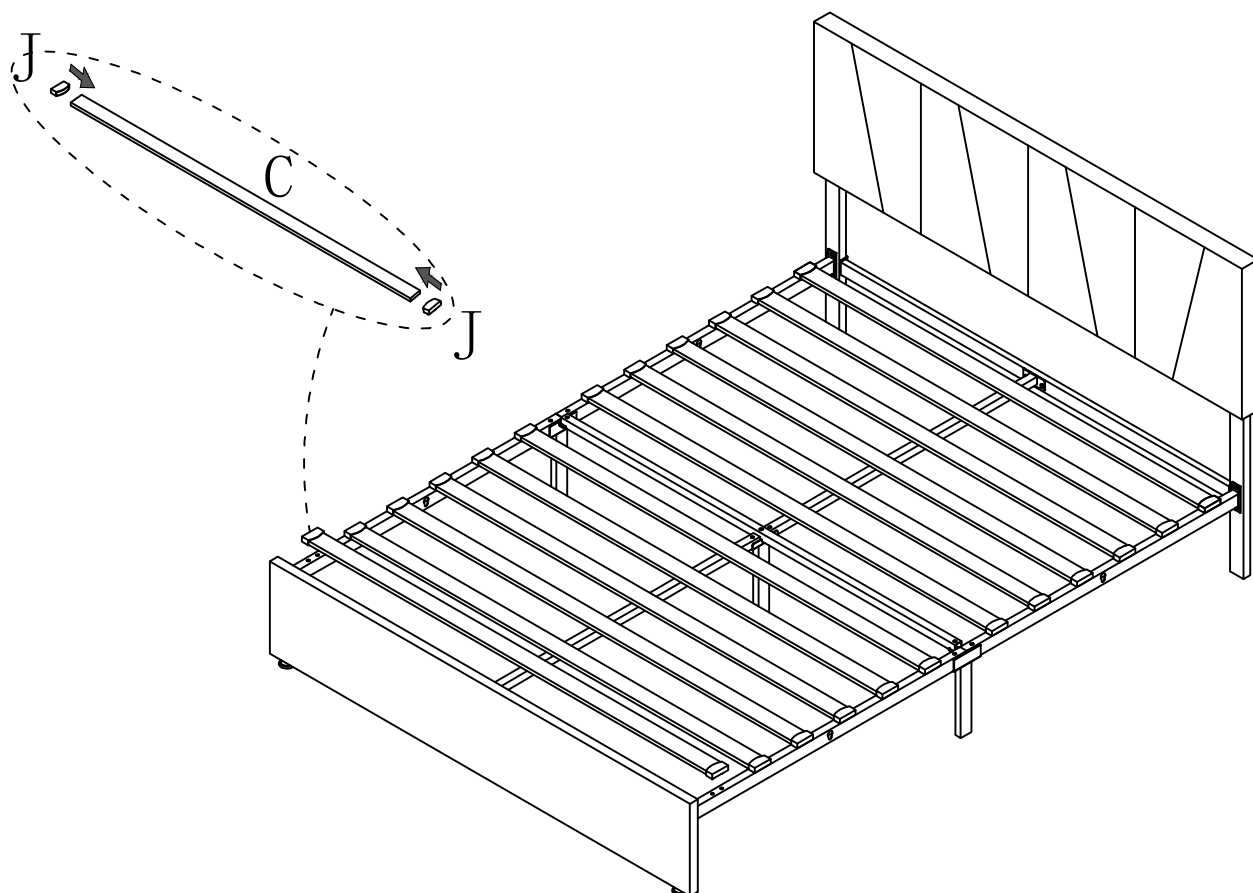step9



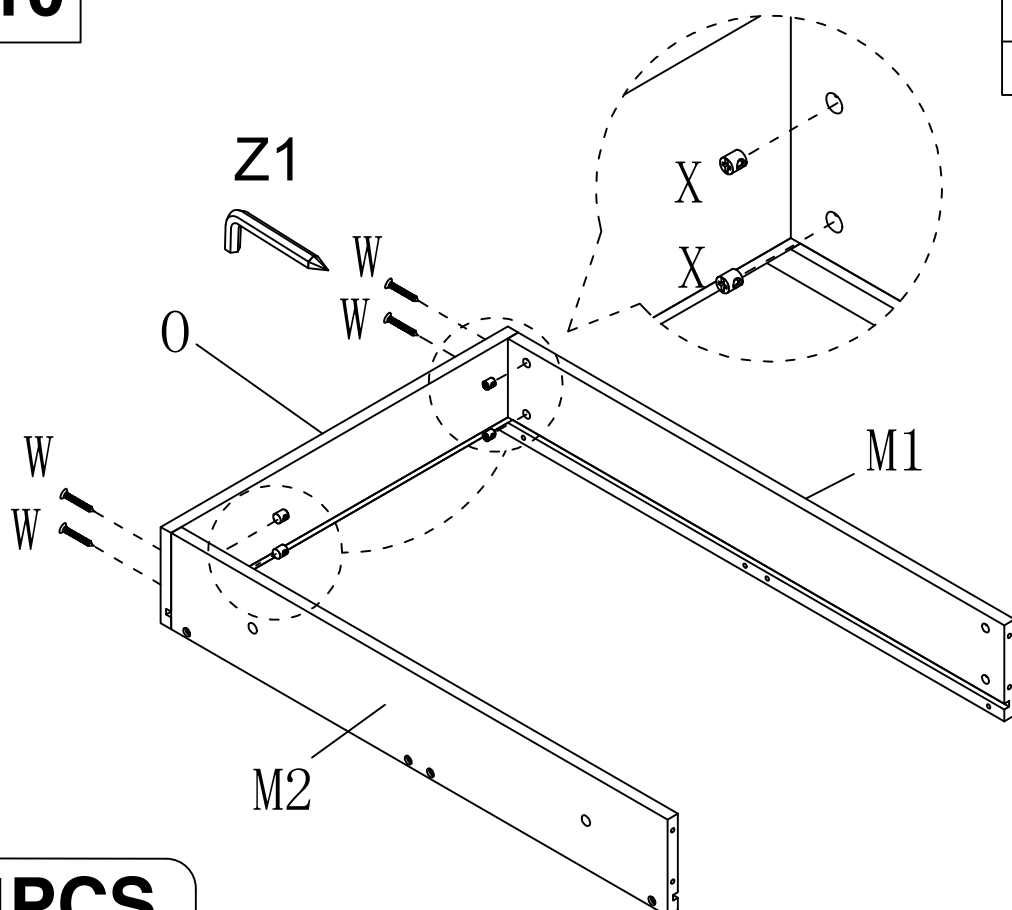step10




W		X	
4PCS		4PCS	

4PCS

step11


W		X	
9PCS		9PCS	

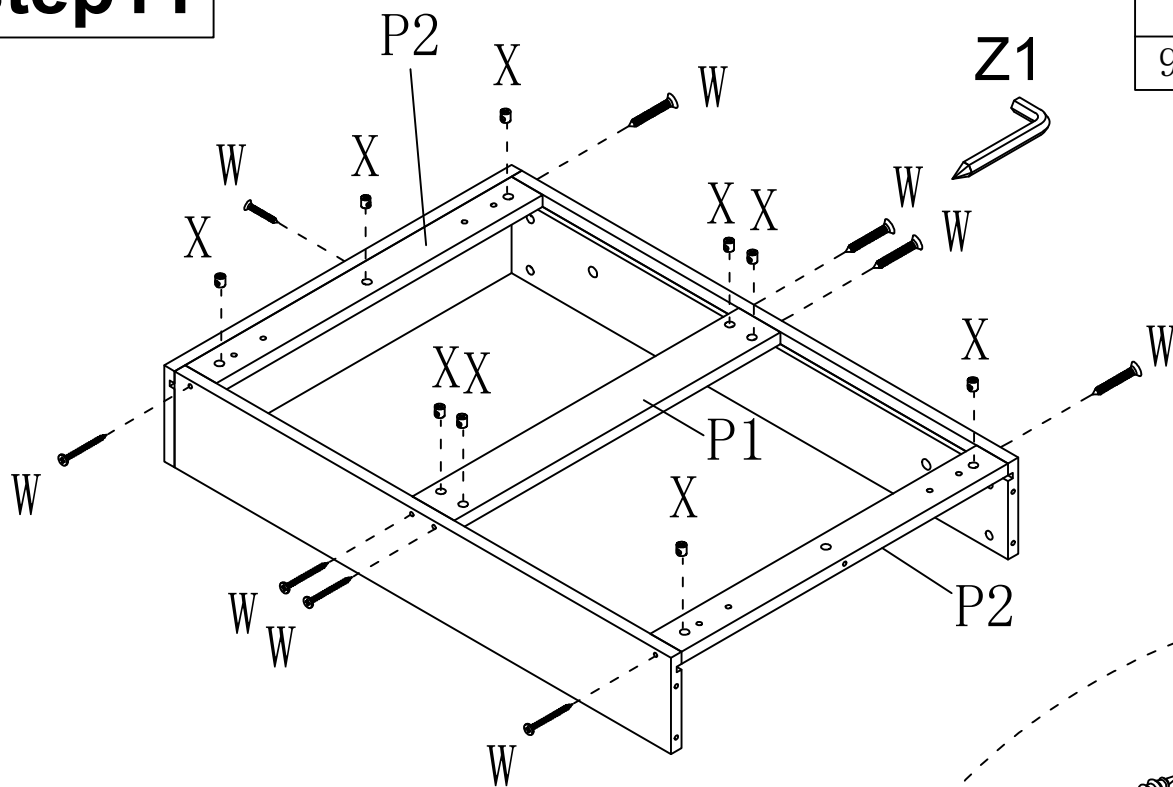

4PCS

step12


W		X	
5PCS		5PCS	

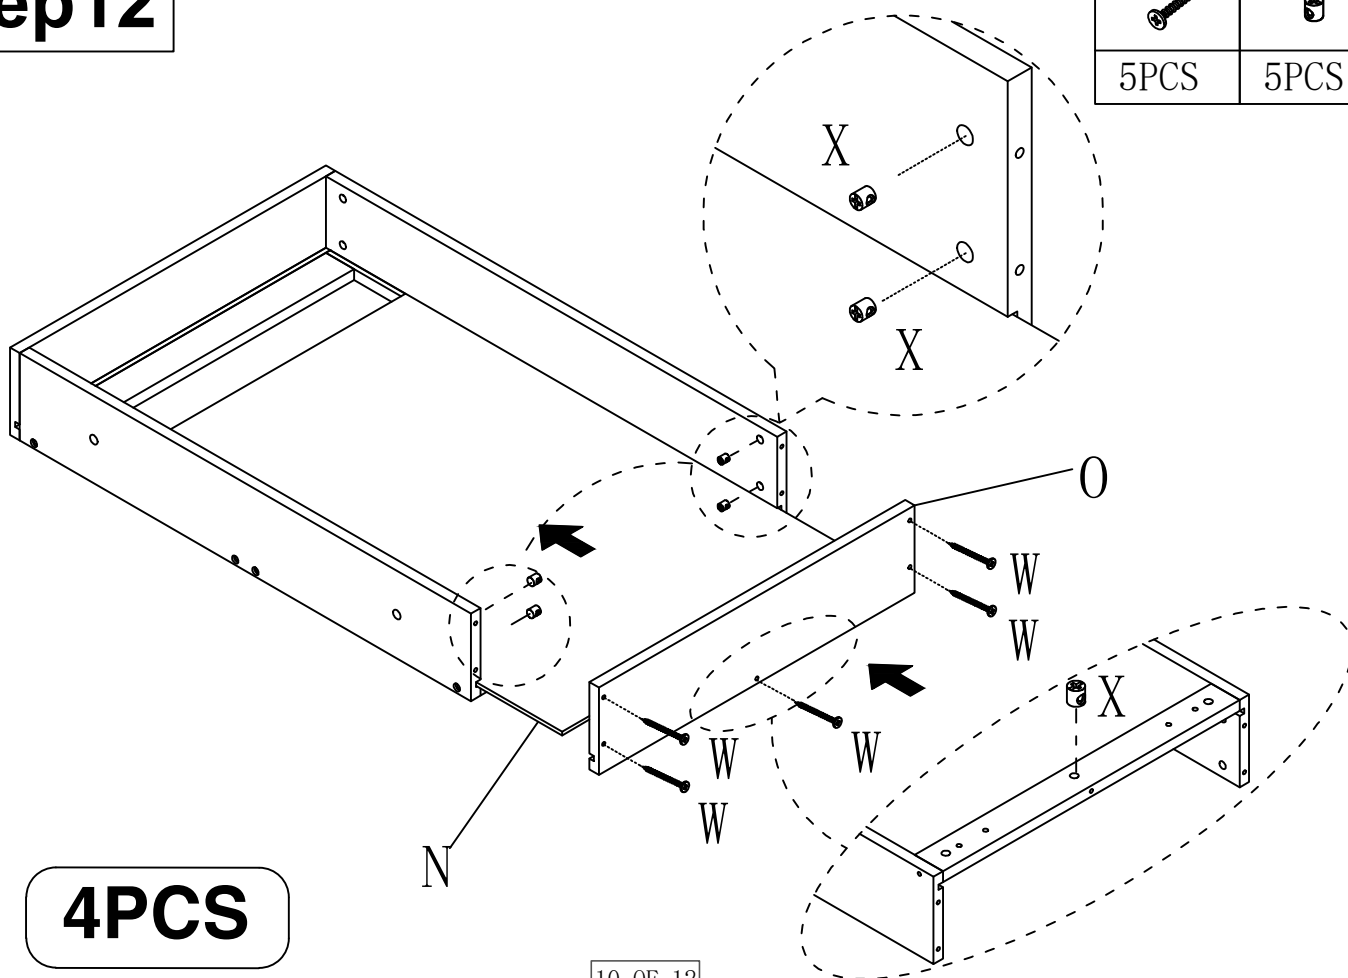

4PCS

step13


U	
8PCS	

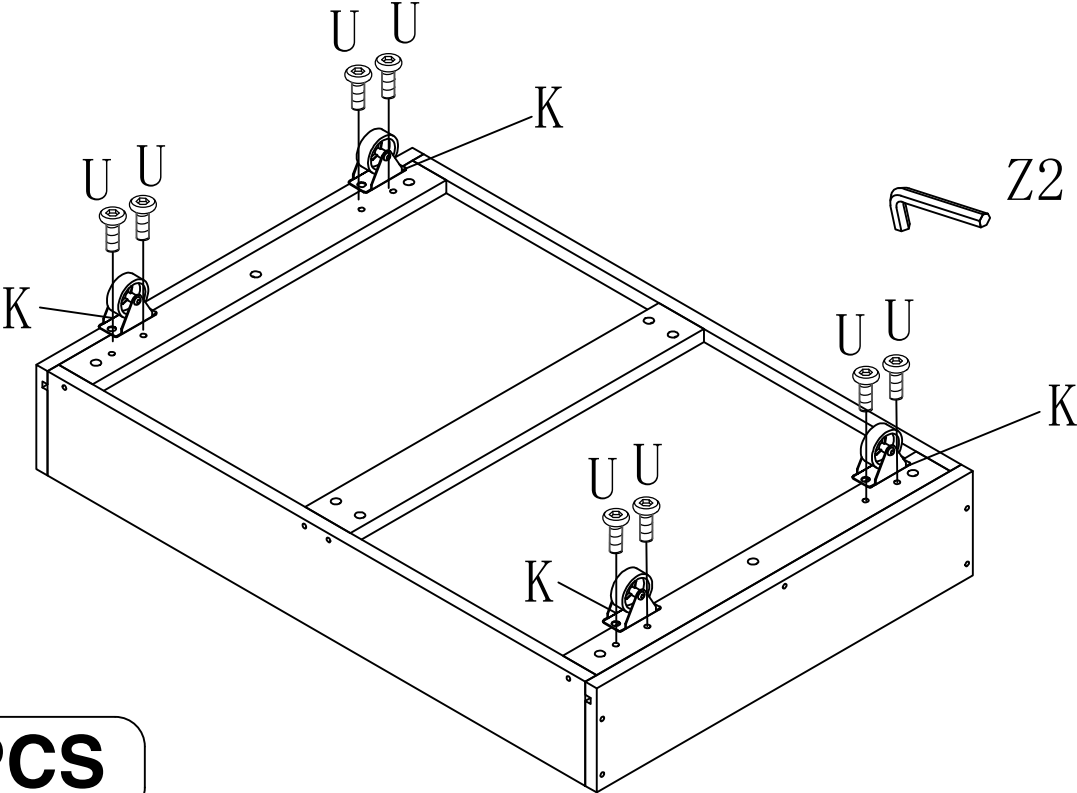

4PCS


step14

S		V		Y	
2PCS		1PC		3PC	

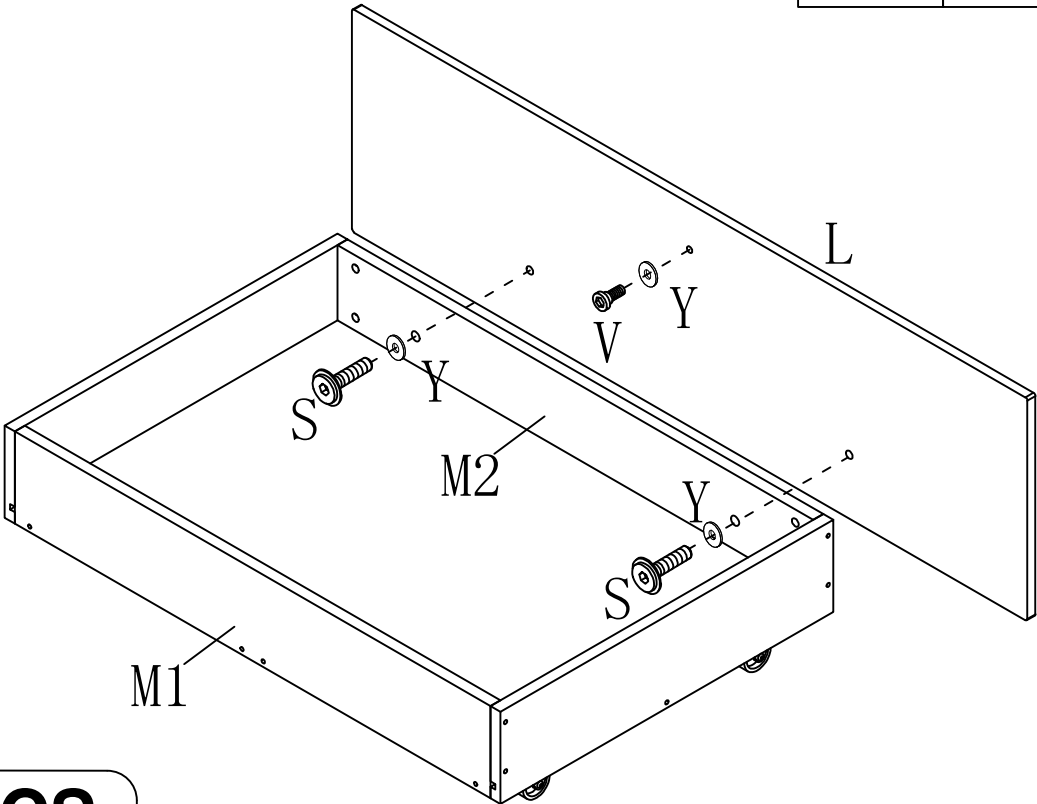

4PCS

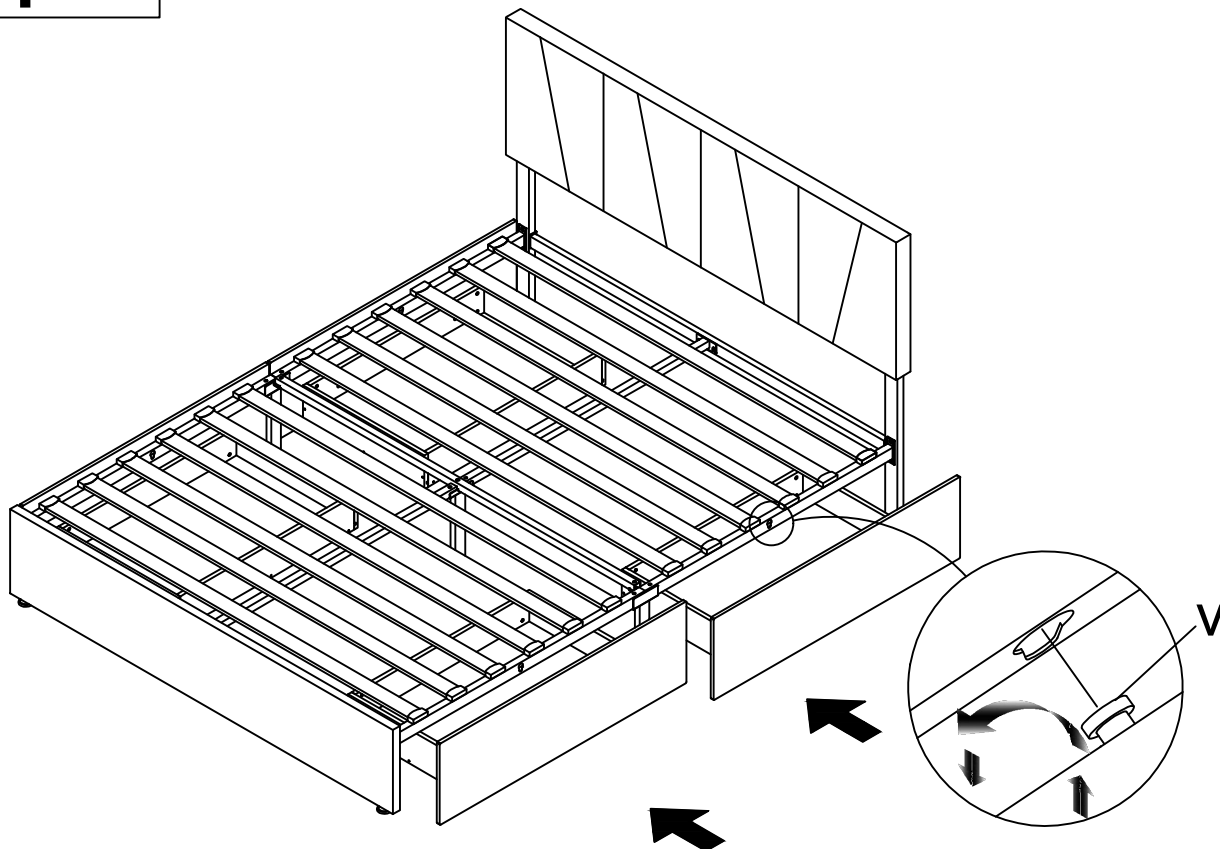step15



Lift the panel to allow the "V" to match the hole to secure the drawers. Same way for pulling out.

step16

