


End Table

Assembly Instructions - Please keep for future reference

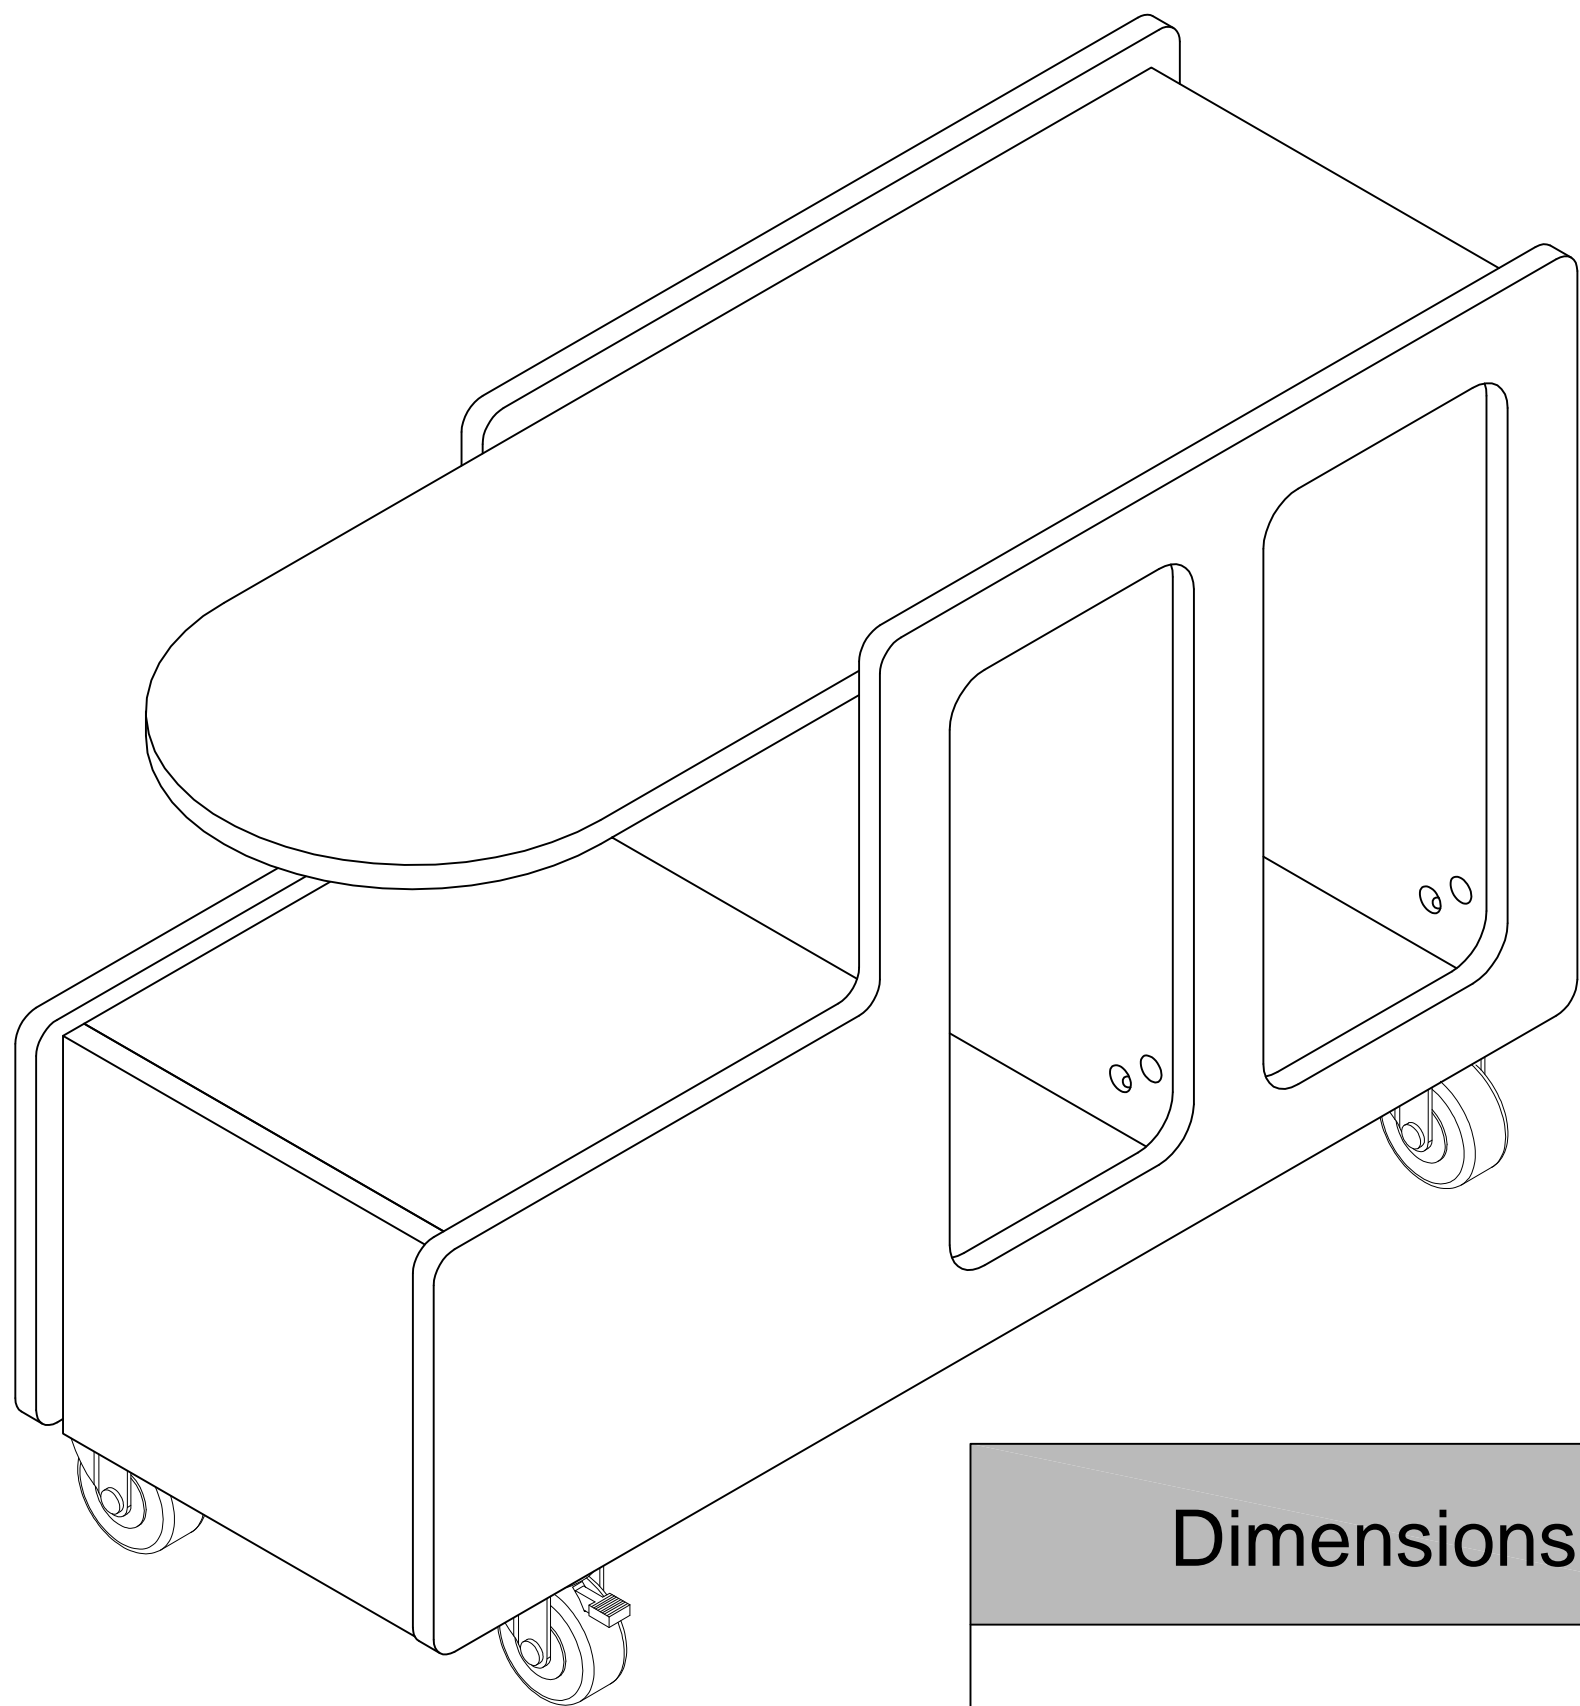

Dimensions
Width-32.28inch
Depth-11.81inch
Height-21.26inch

Important - please read thess instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning –
please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

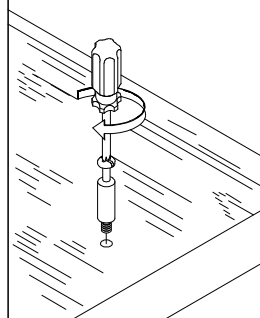

Step 2

Push the male camlock into the entry hole.

2

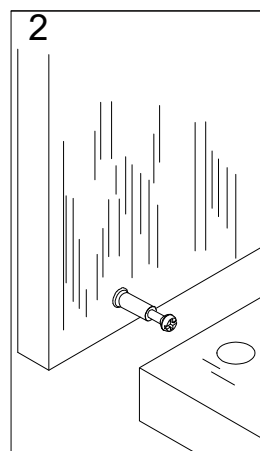


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

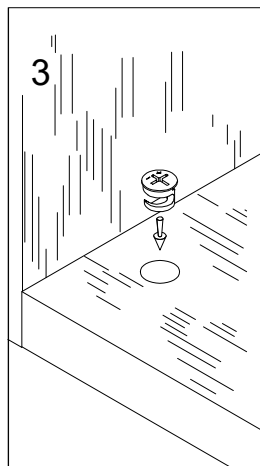


Step 4













Turn the female camlock clockwise with a screwdriver.












You should feel a click when the camlock is locked in place.


The joint is now secure.

4

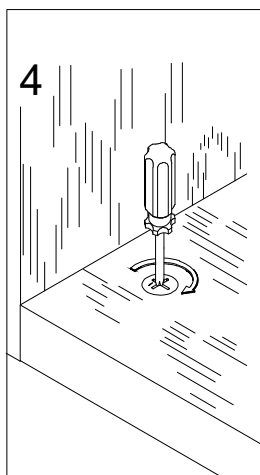
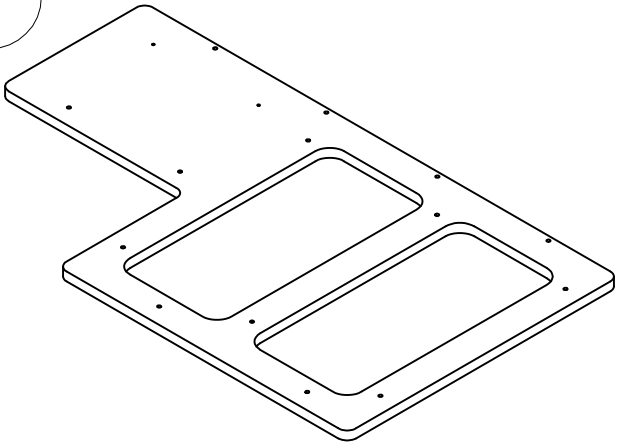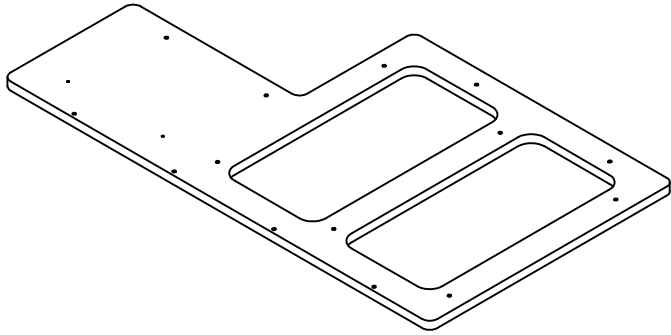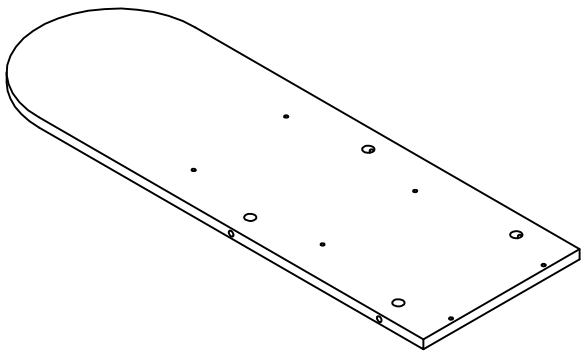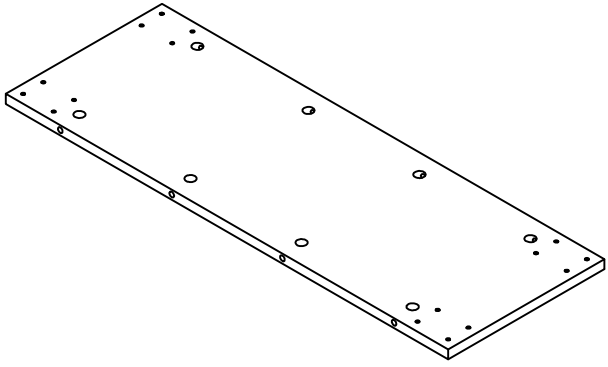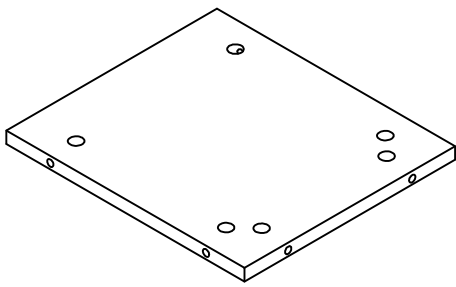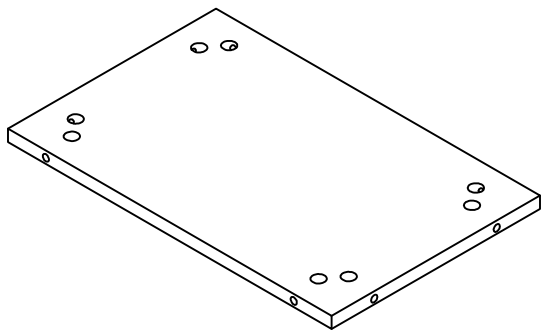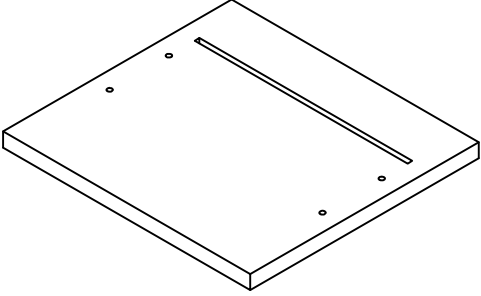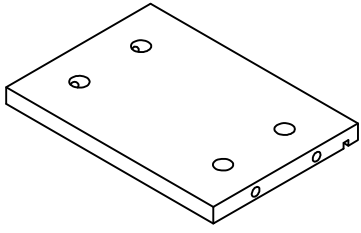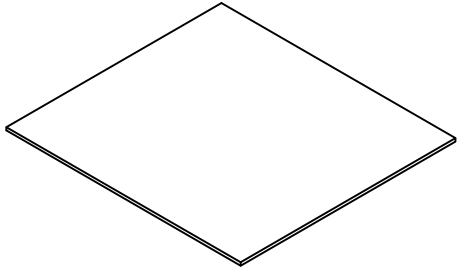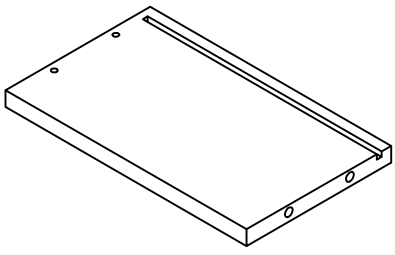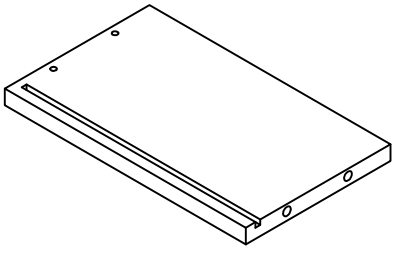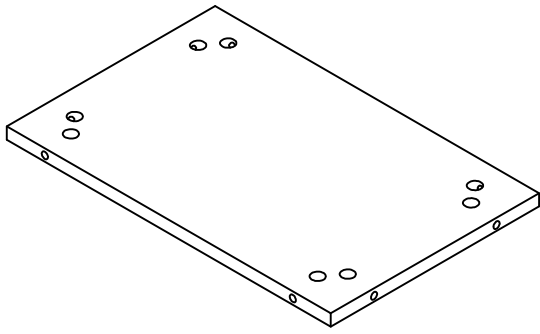
<div>1</div>  <div>820x470x15mm 1PC</div>	<div>2</div>  <div>820x470x15mm 1PC</div>	<div>3</div>  <div>800x270x15mm 1PC</div>
<div>4</div>  <div>765x270x15mm 1PC</div>	<div>5</div>  <div>305x270x15mm 1PC</div>	<div>6</div>  <div>420x270x15mm 2PCS</div>
<div>7</div>  <div>266x250x15mm 1PC</div>	<div>8</div>  <div>215x140x15mm 1PC</div>	<div>9</div>  <div>295x225x5mm 1PC</div>
<div>10</div>  <div>300x140x15mm 1PC</div>	<div>11</div>  <div>300x140x15mm 1PC</div>	<div>12</div>  <div>420x270x15mm 1PC</div>
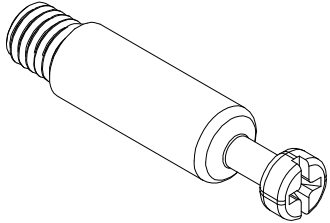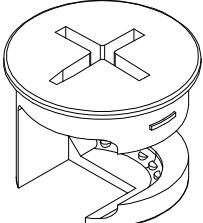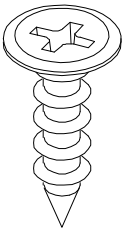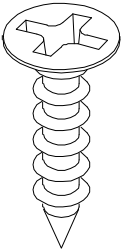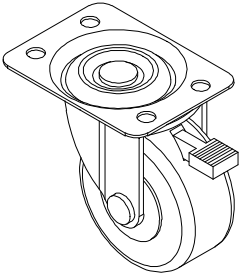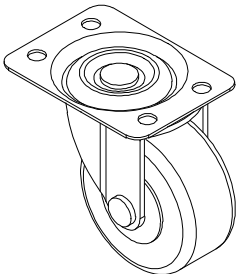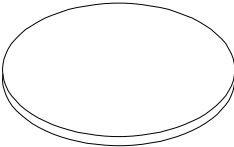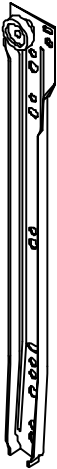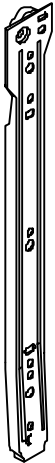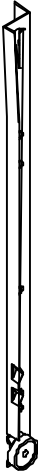
<p>A</p>  <p>50+2PCS</p>	<p>B</p>  <p>50+2PCS</p>	<p>C</p> <p>M8*14mm</p>  <p>16+1PCS</p>	<p>D</p> <p>M3. 5*14mm</p>  <p>8+1PCS</p>
<p>E</p>  <p>2PCS</p>	<p>F</p>  <p>2PCS</p>	<p>G</p>  <p>28+2PCS</p>	<p>CL</p>  <p>1PC</p>
<p>CR</p>  <p>1PC</p>	<p>DL</p>  <p>1PC</p>	<p>DR</p>  <p>1PC</p>	

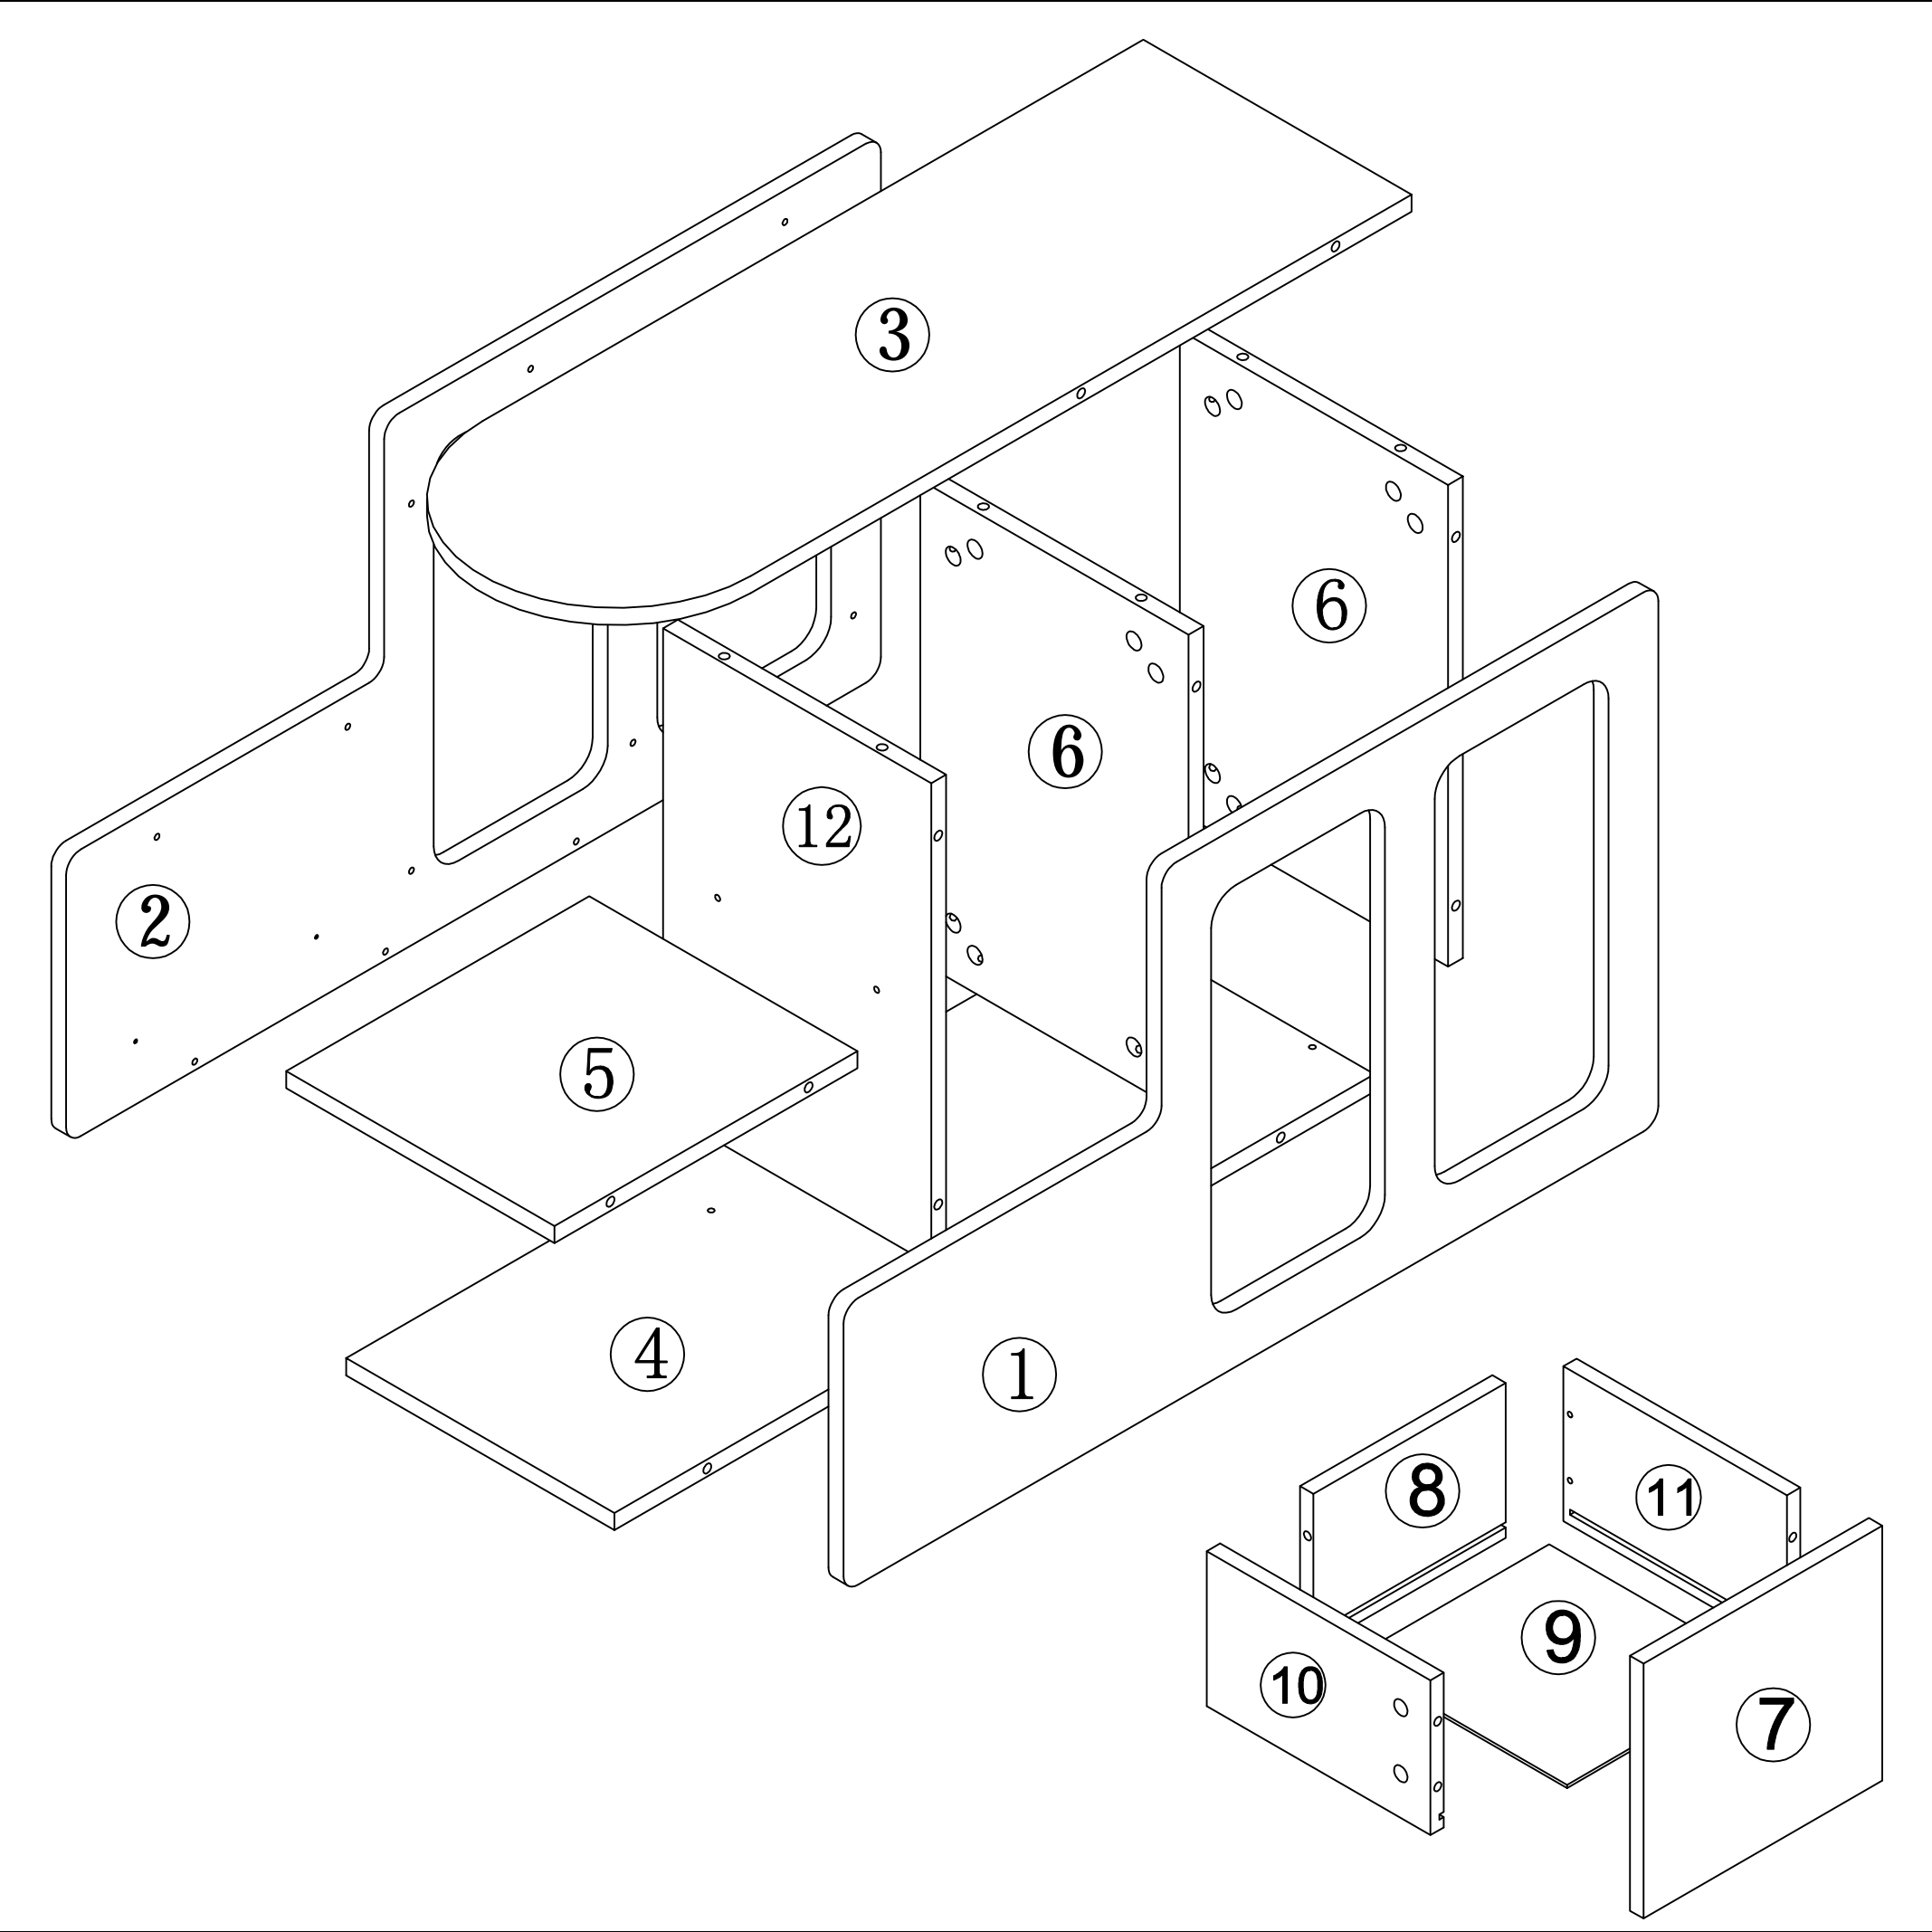

"B" Hardware
installation example

I

II

III

STEP 1

A

14PCS

STEP 2

step1

step2




step3

B


6PCS

7

STEP 3

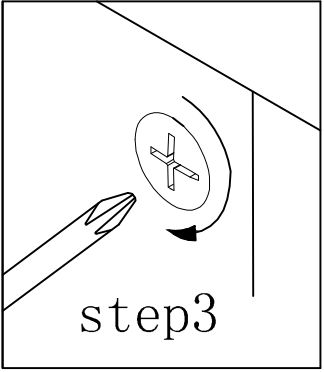
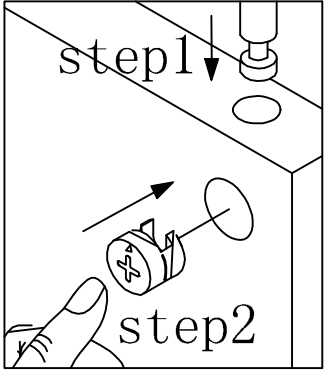
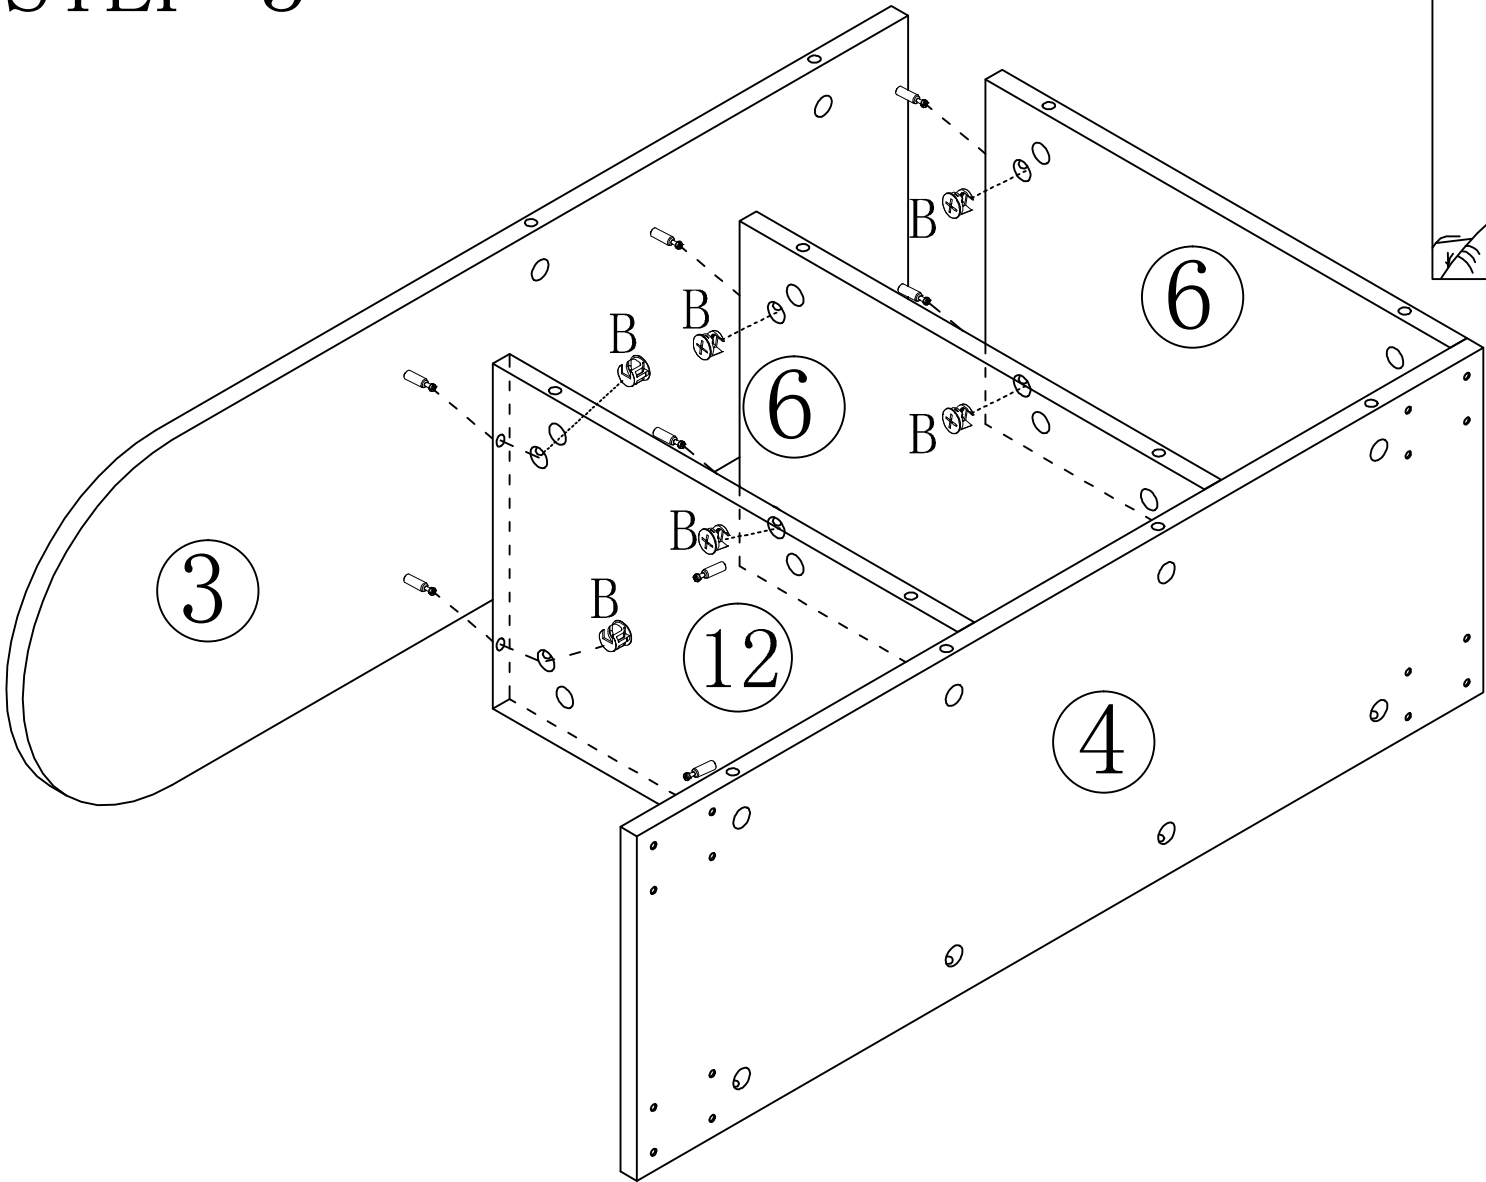


B




6PCS

STEP 4

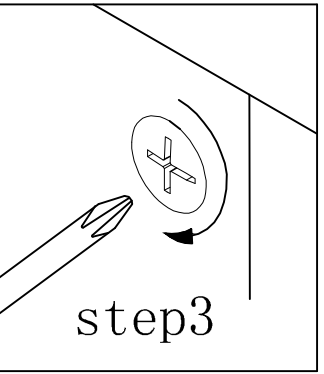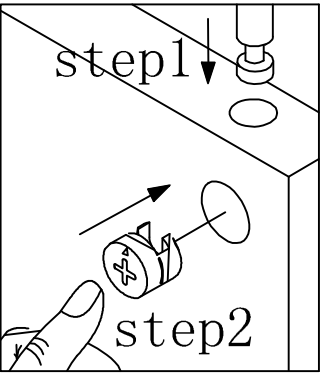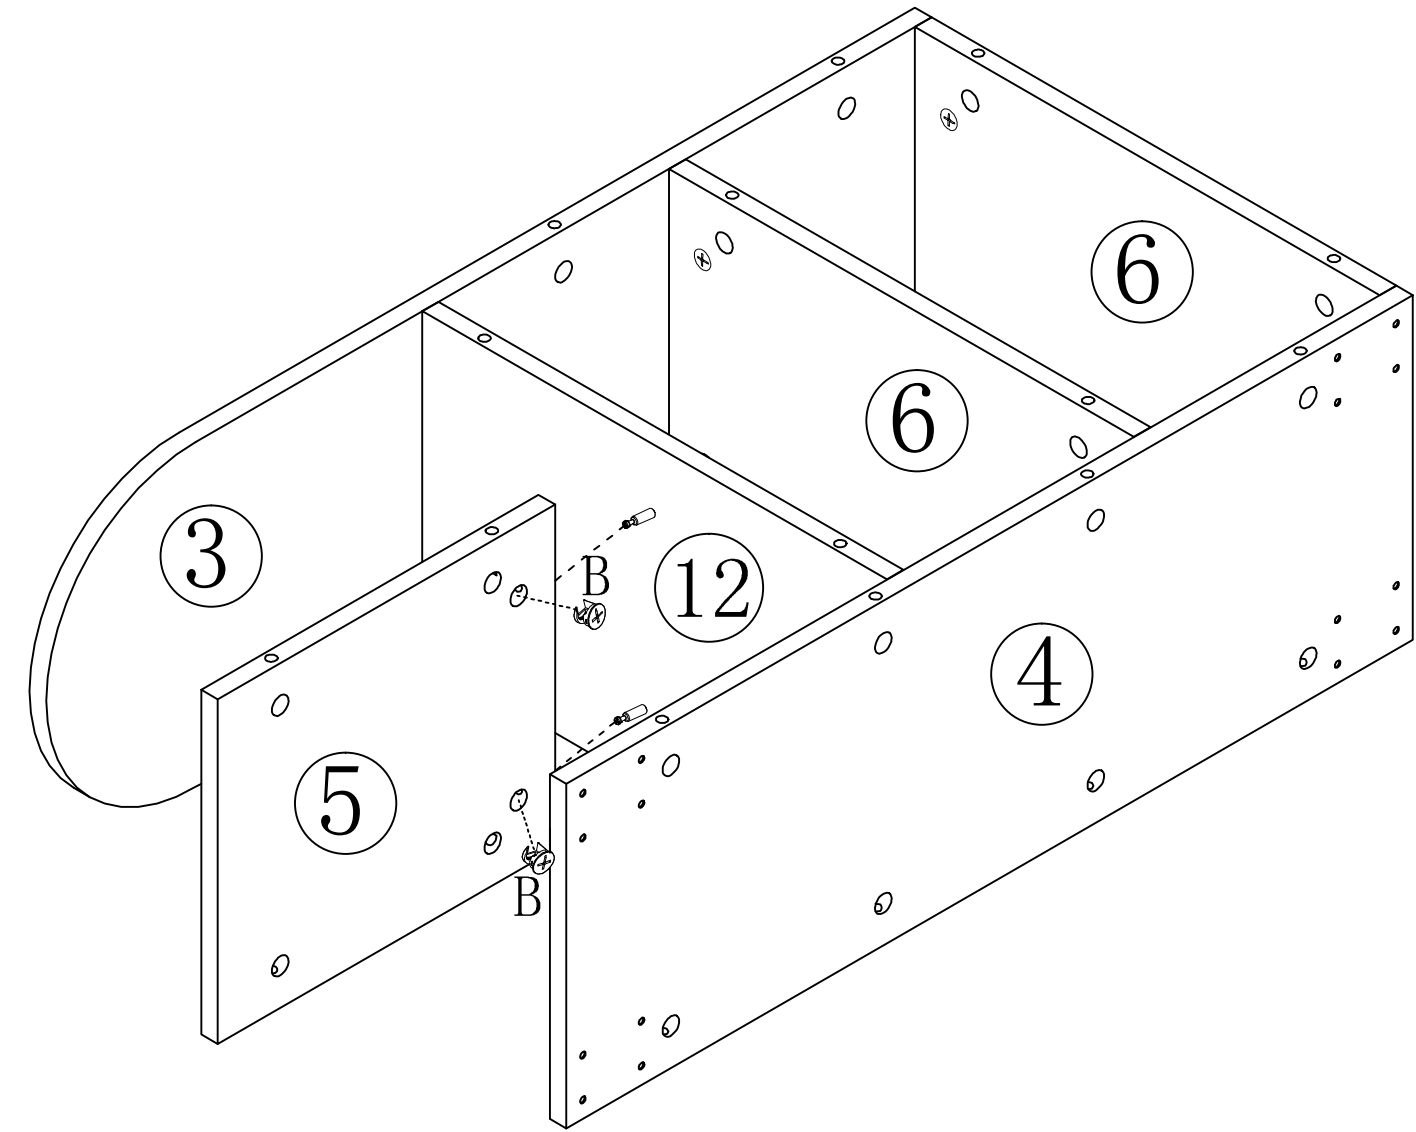


B




2PCS



STEP 5

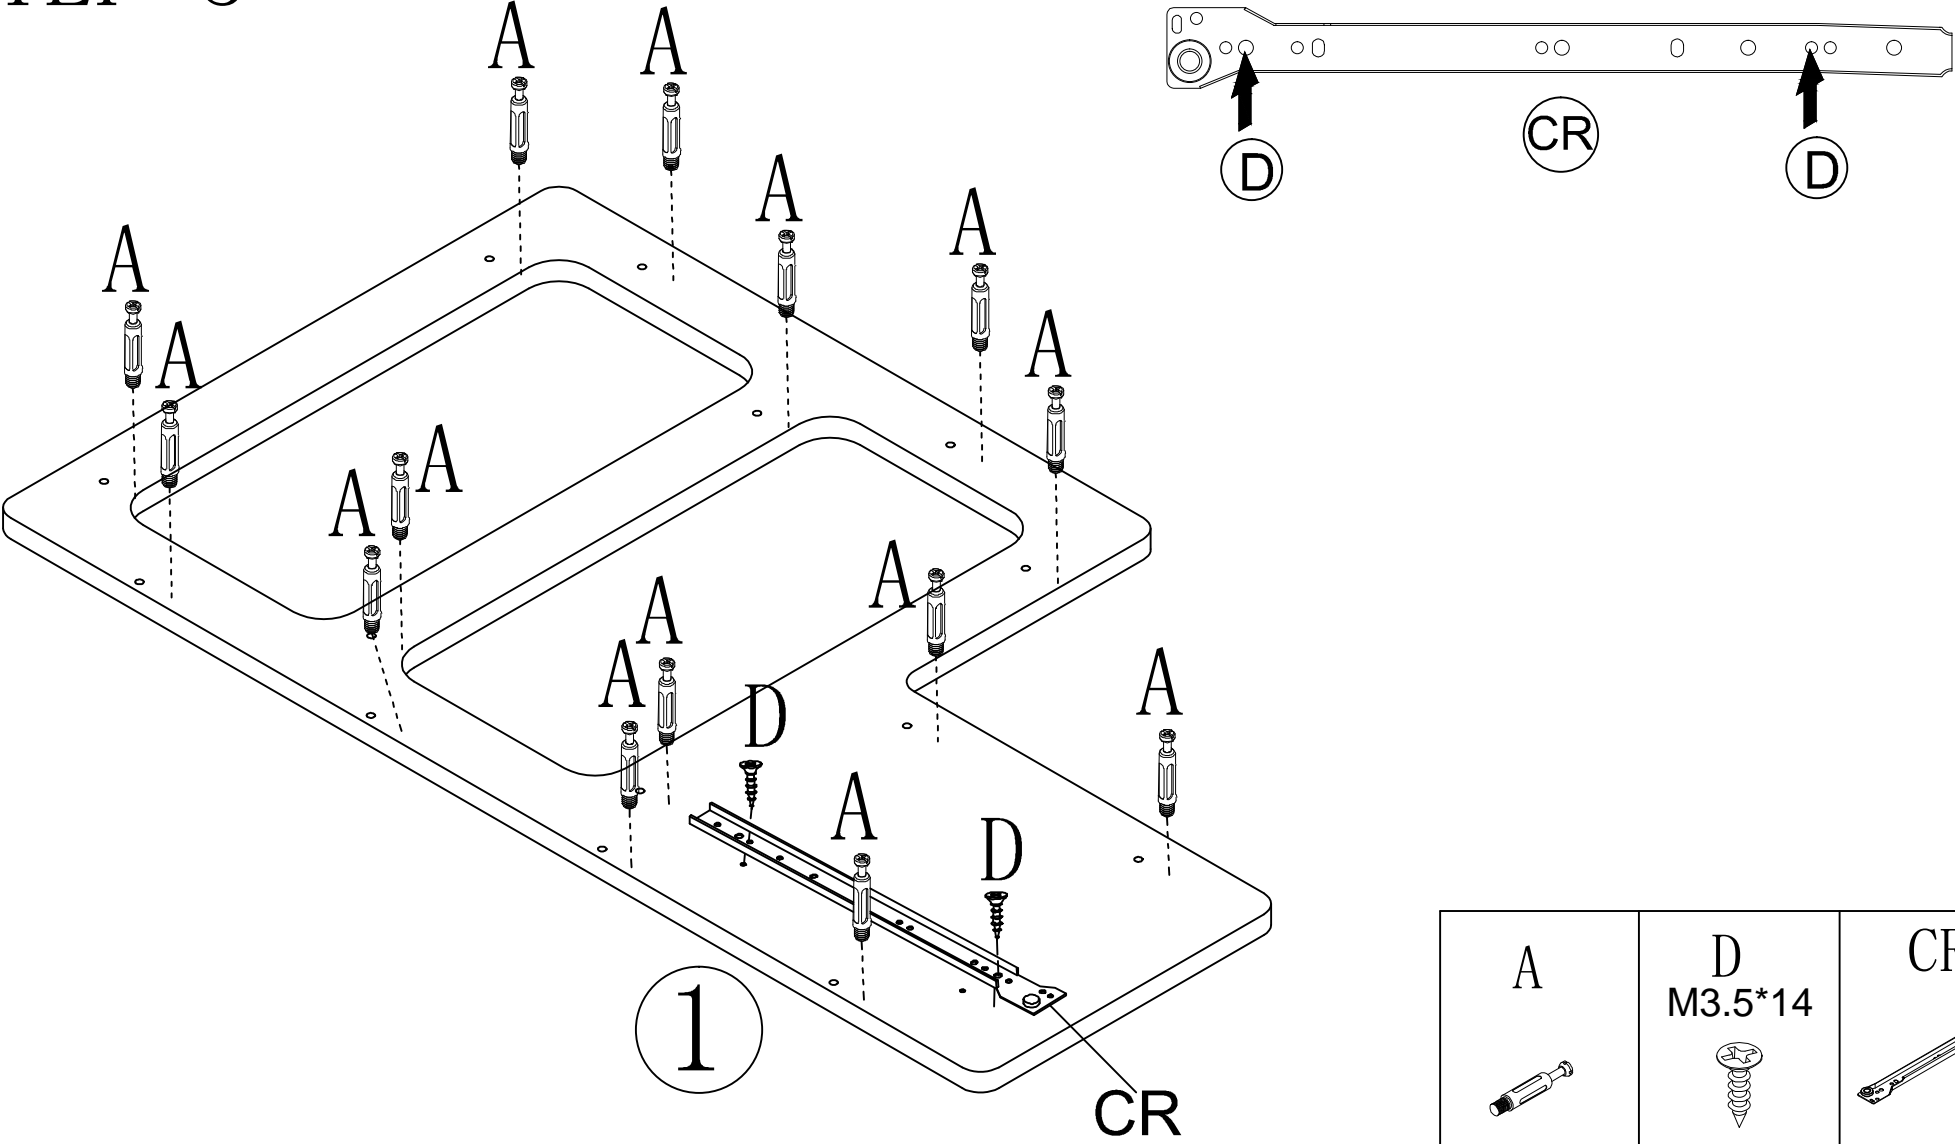

STEP 6

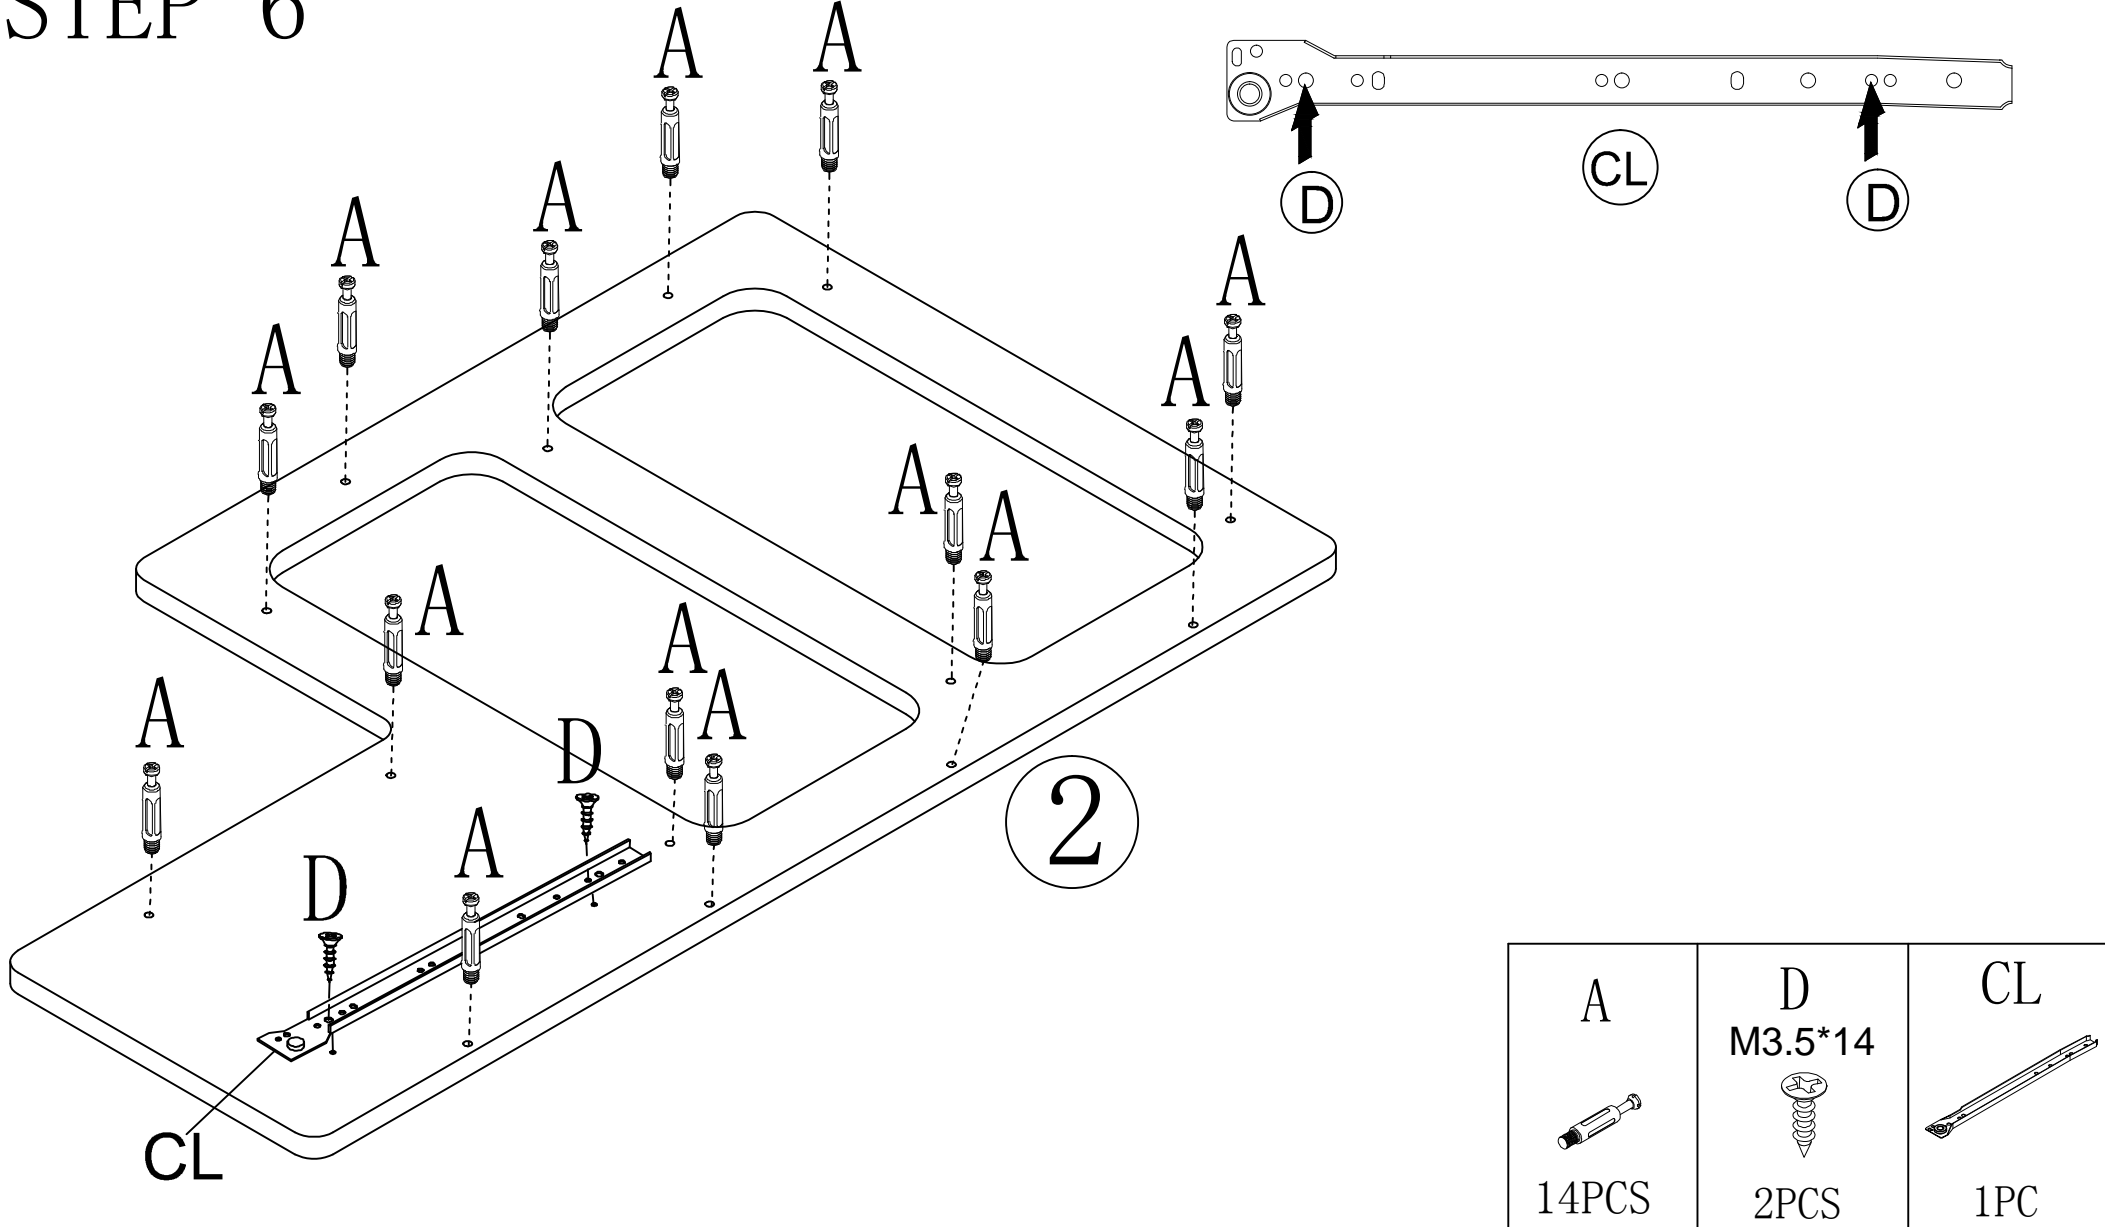



STEP 7

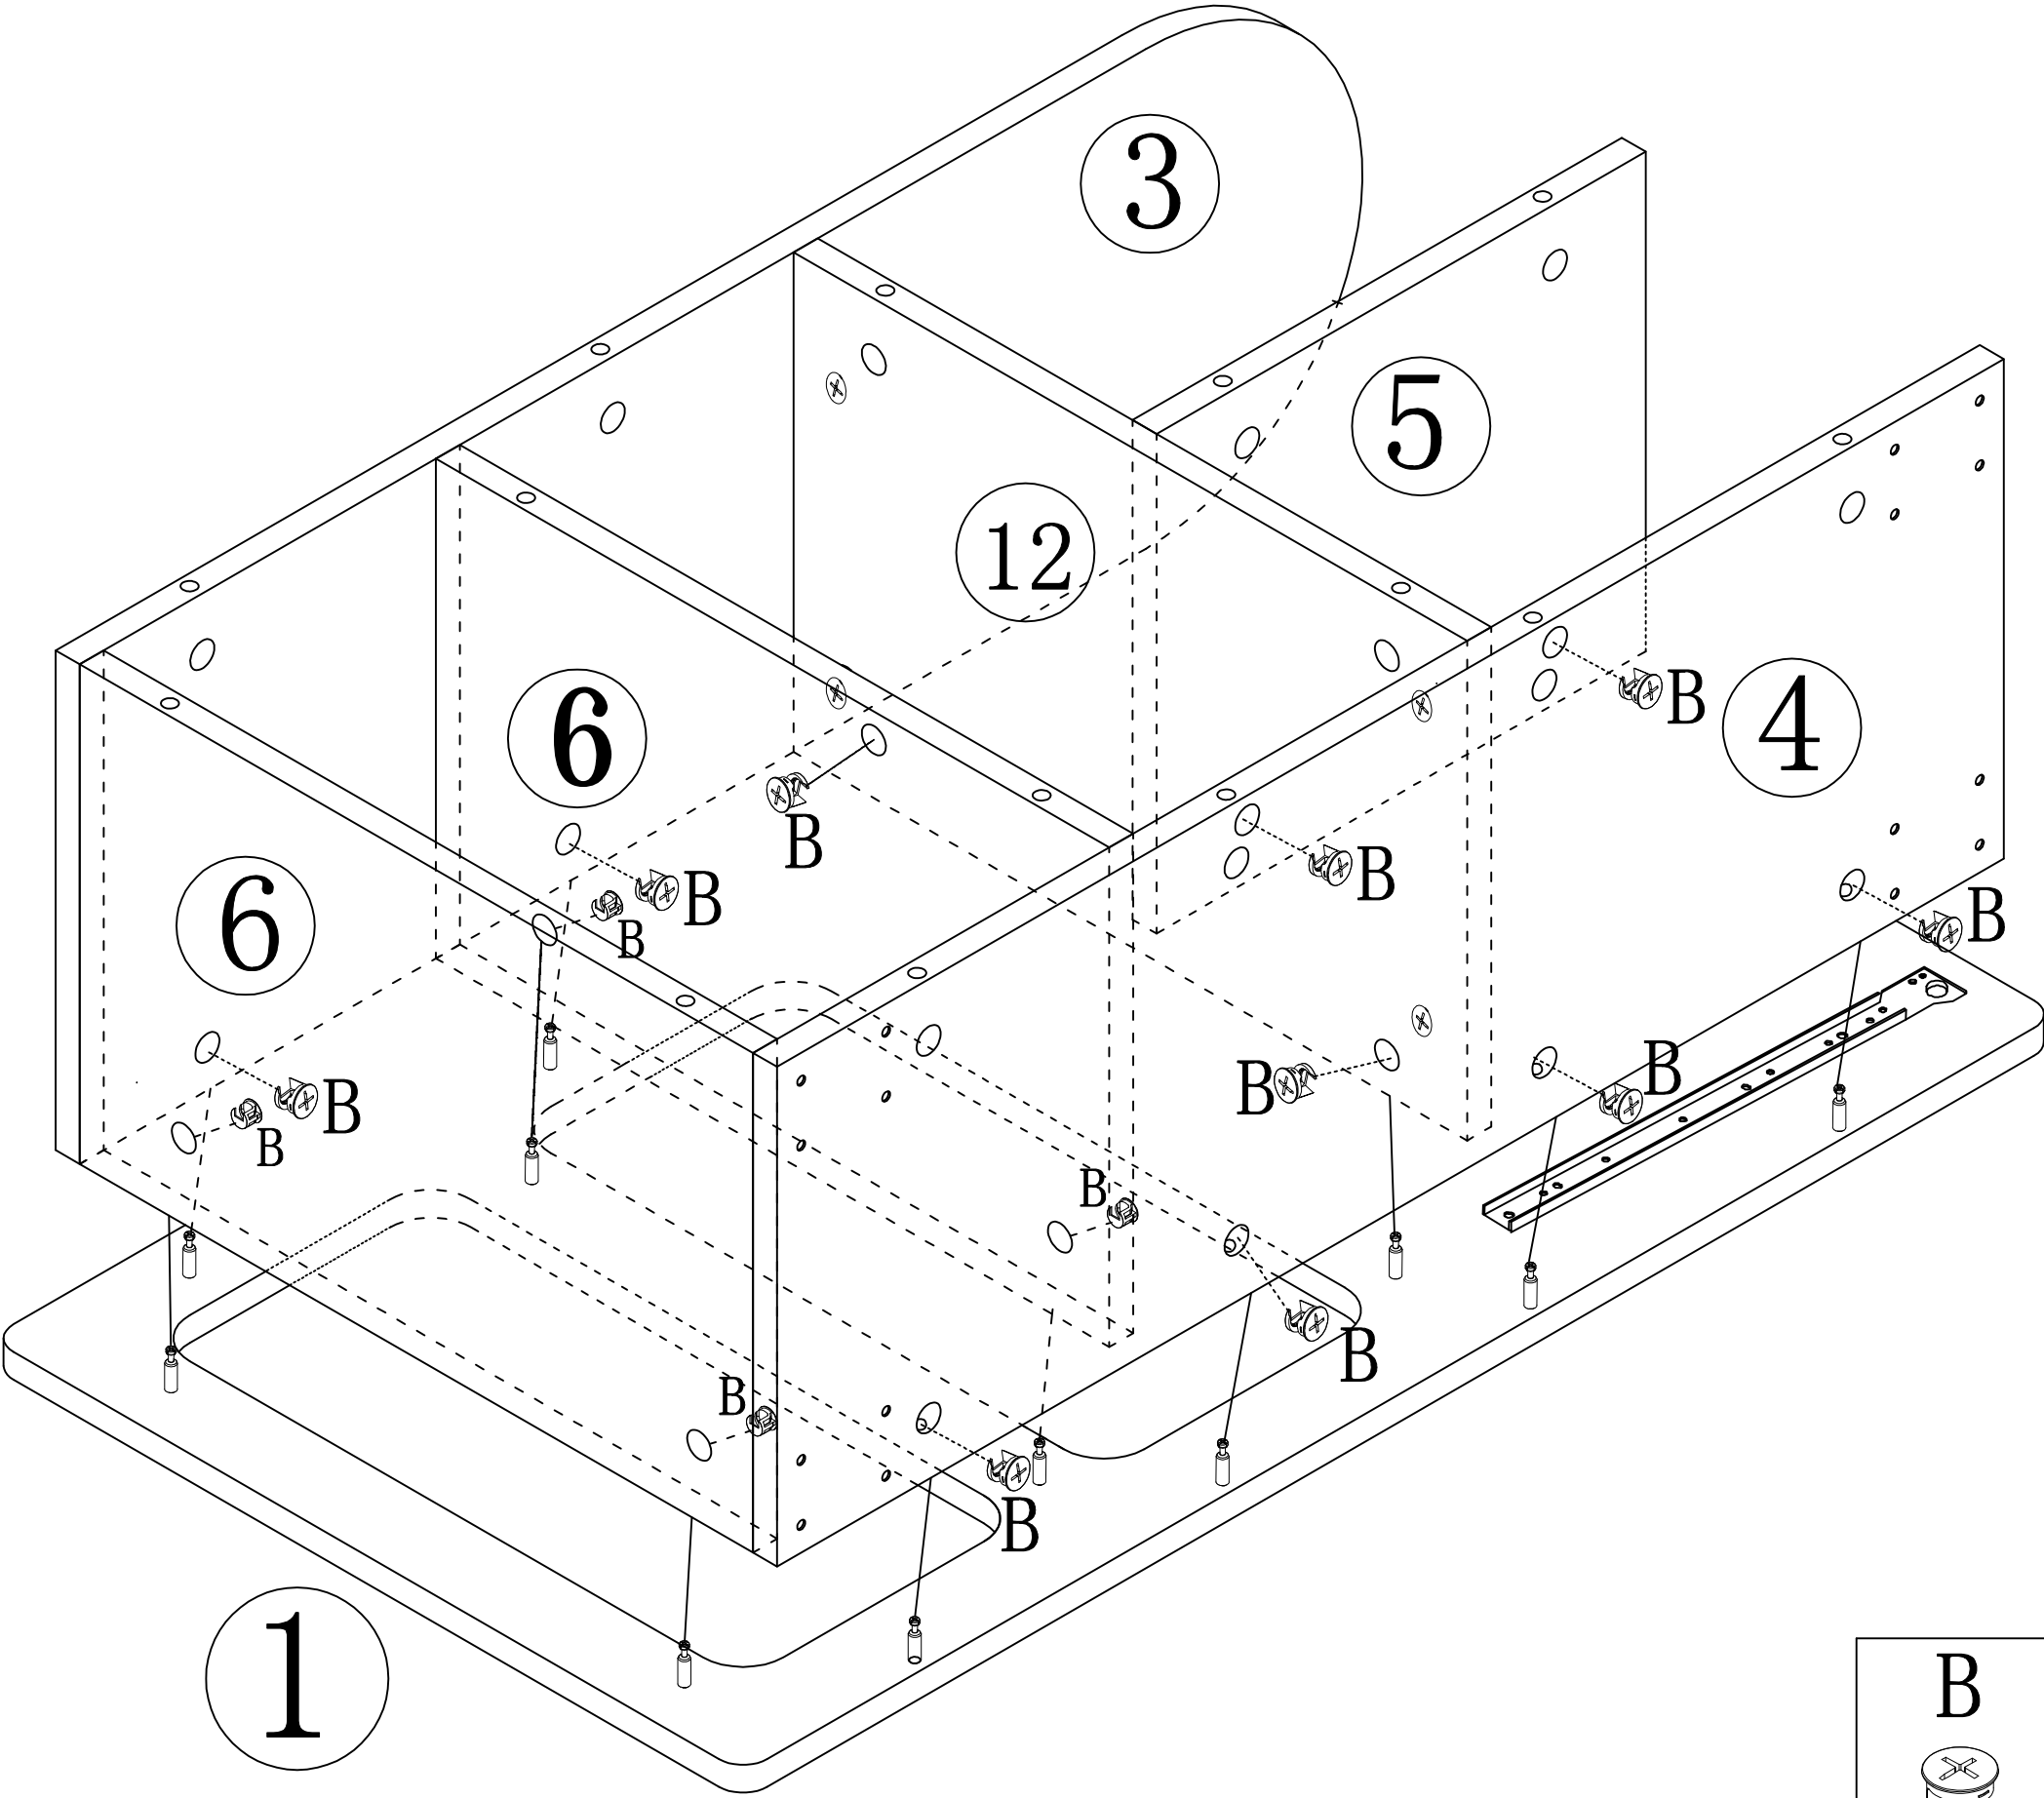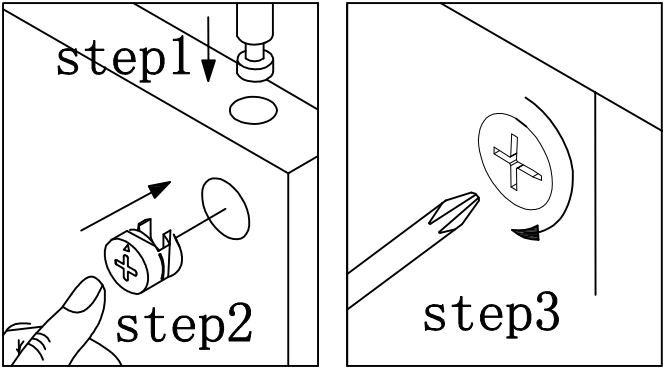


B

14PCS

STEP 8

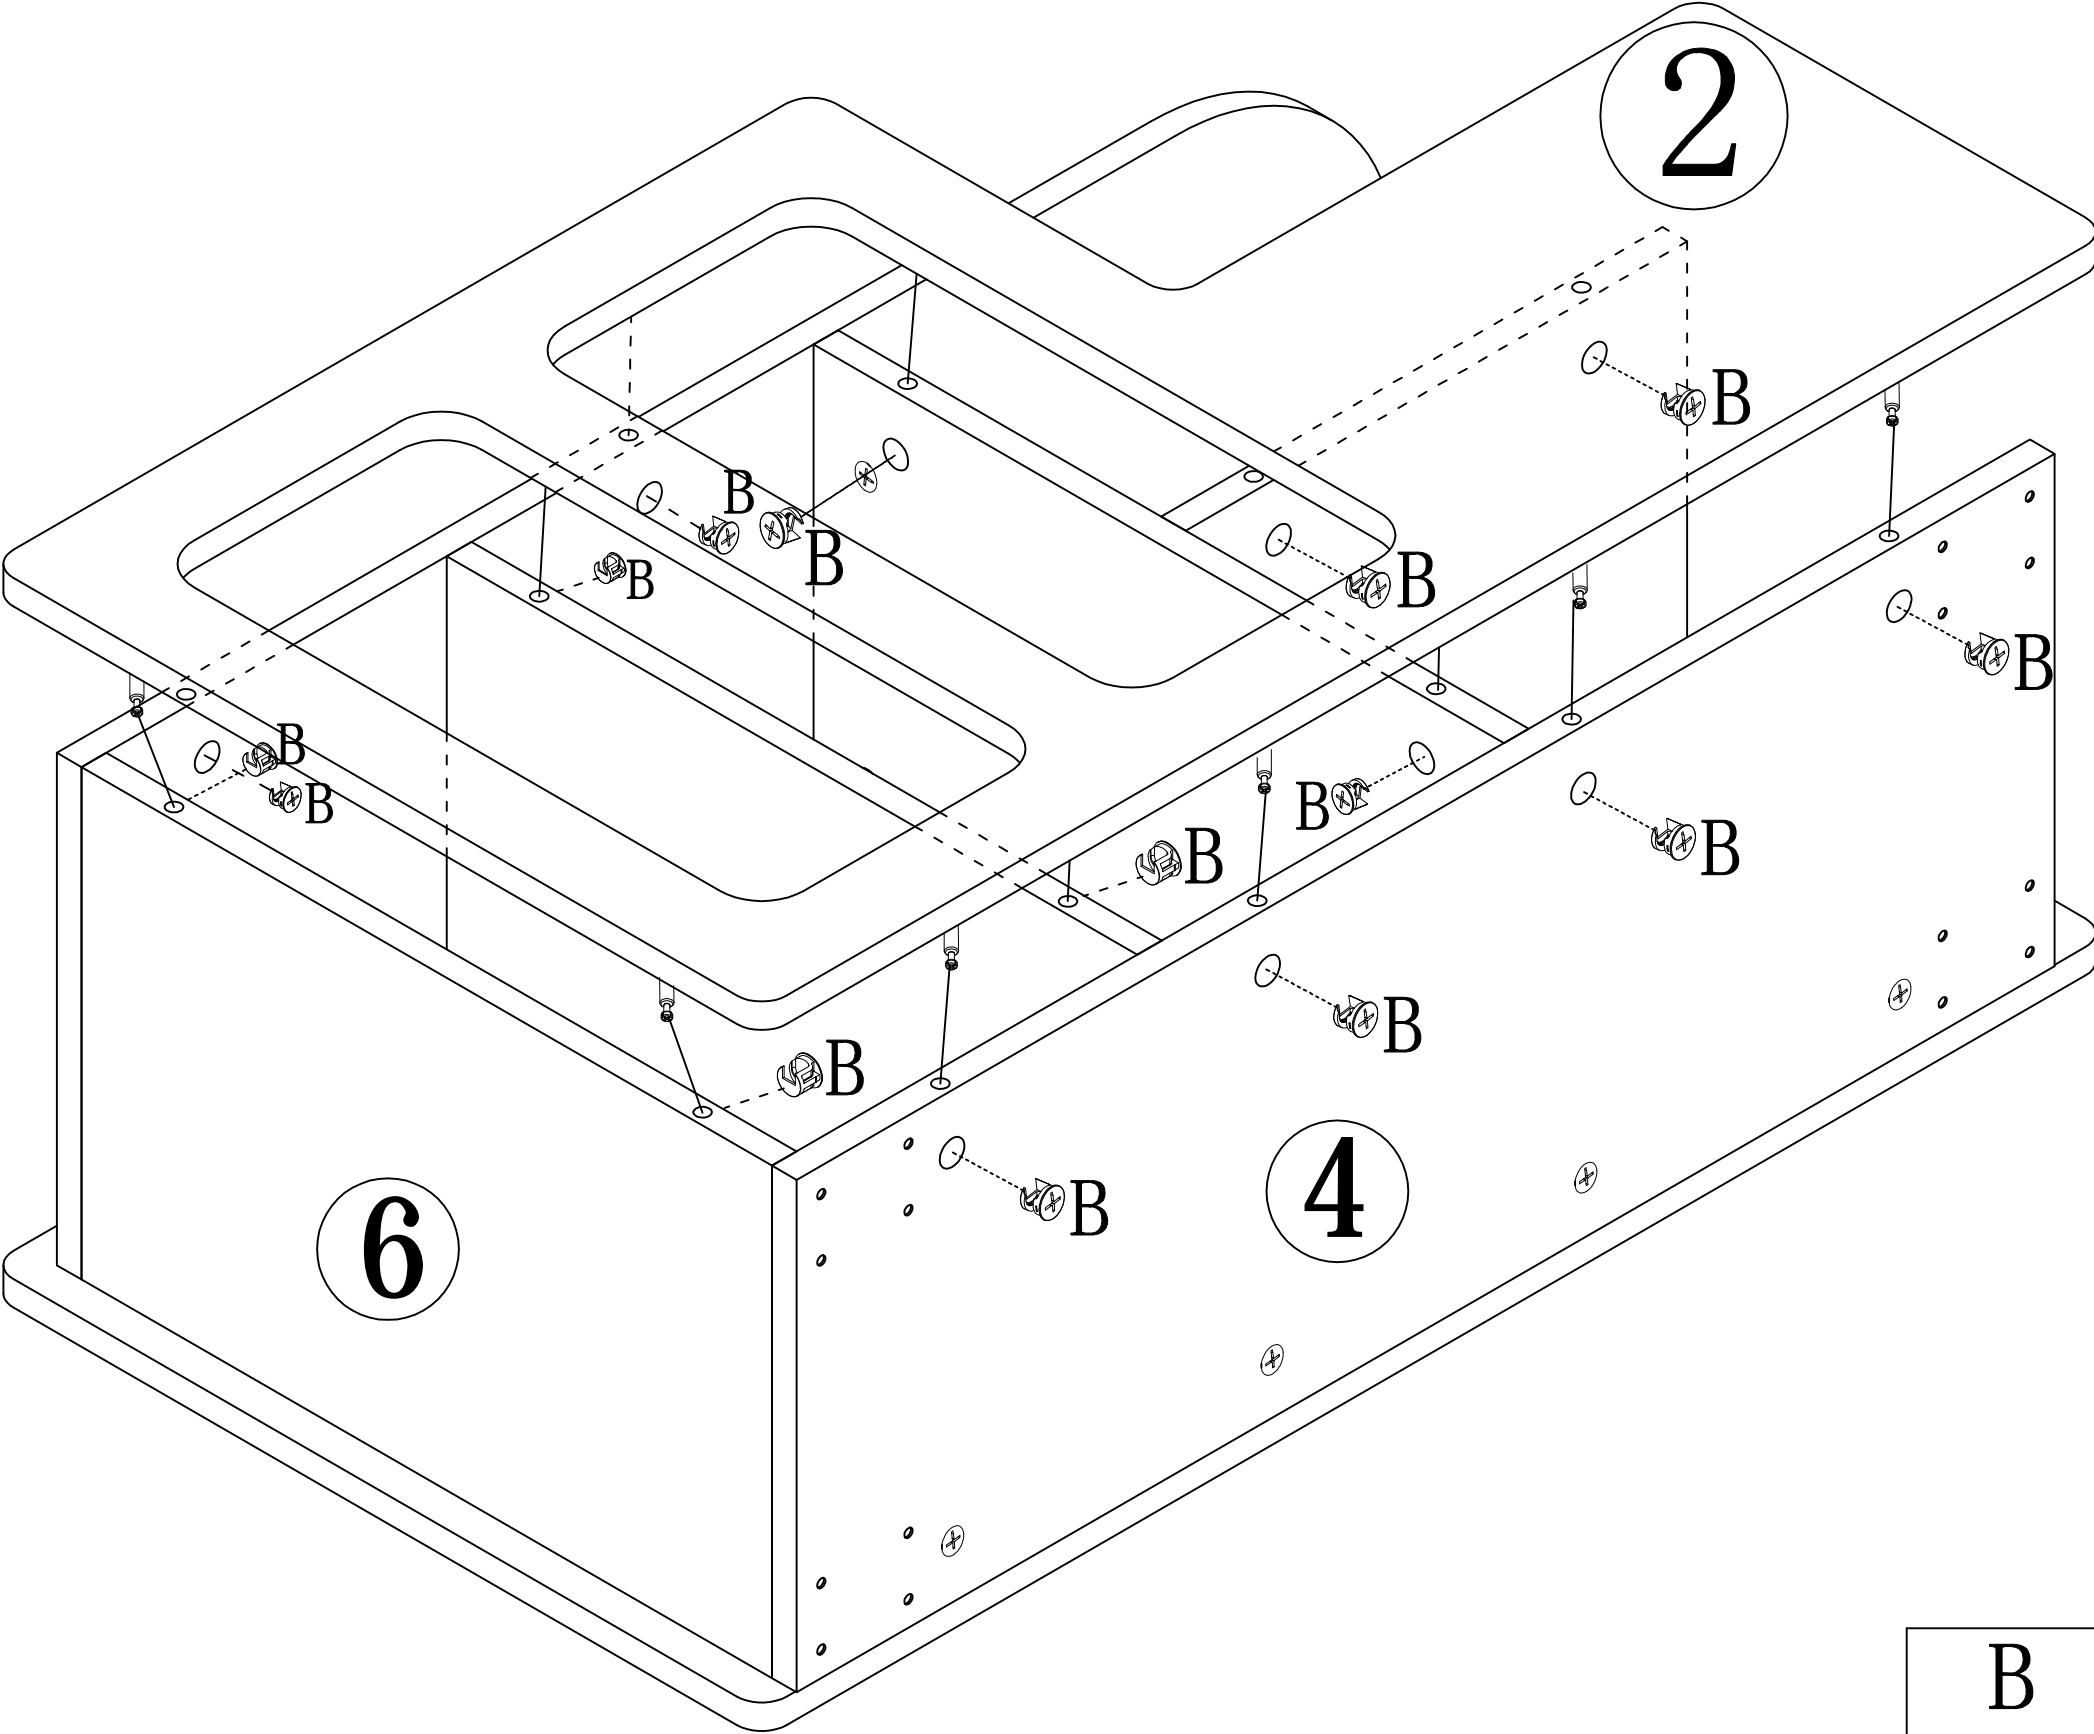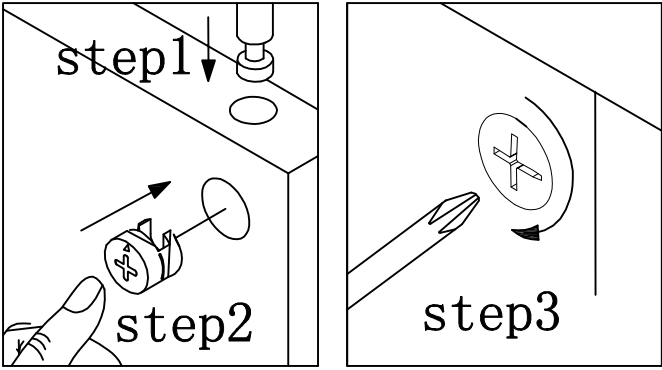





B




14PCS

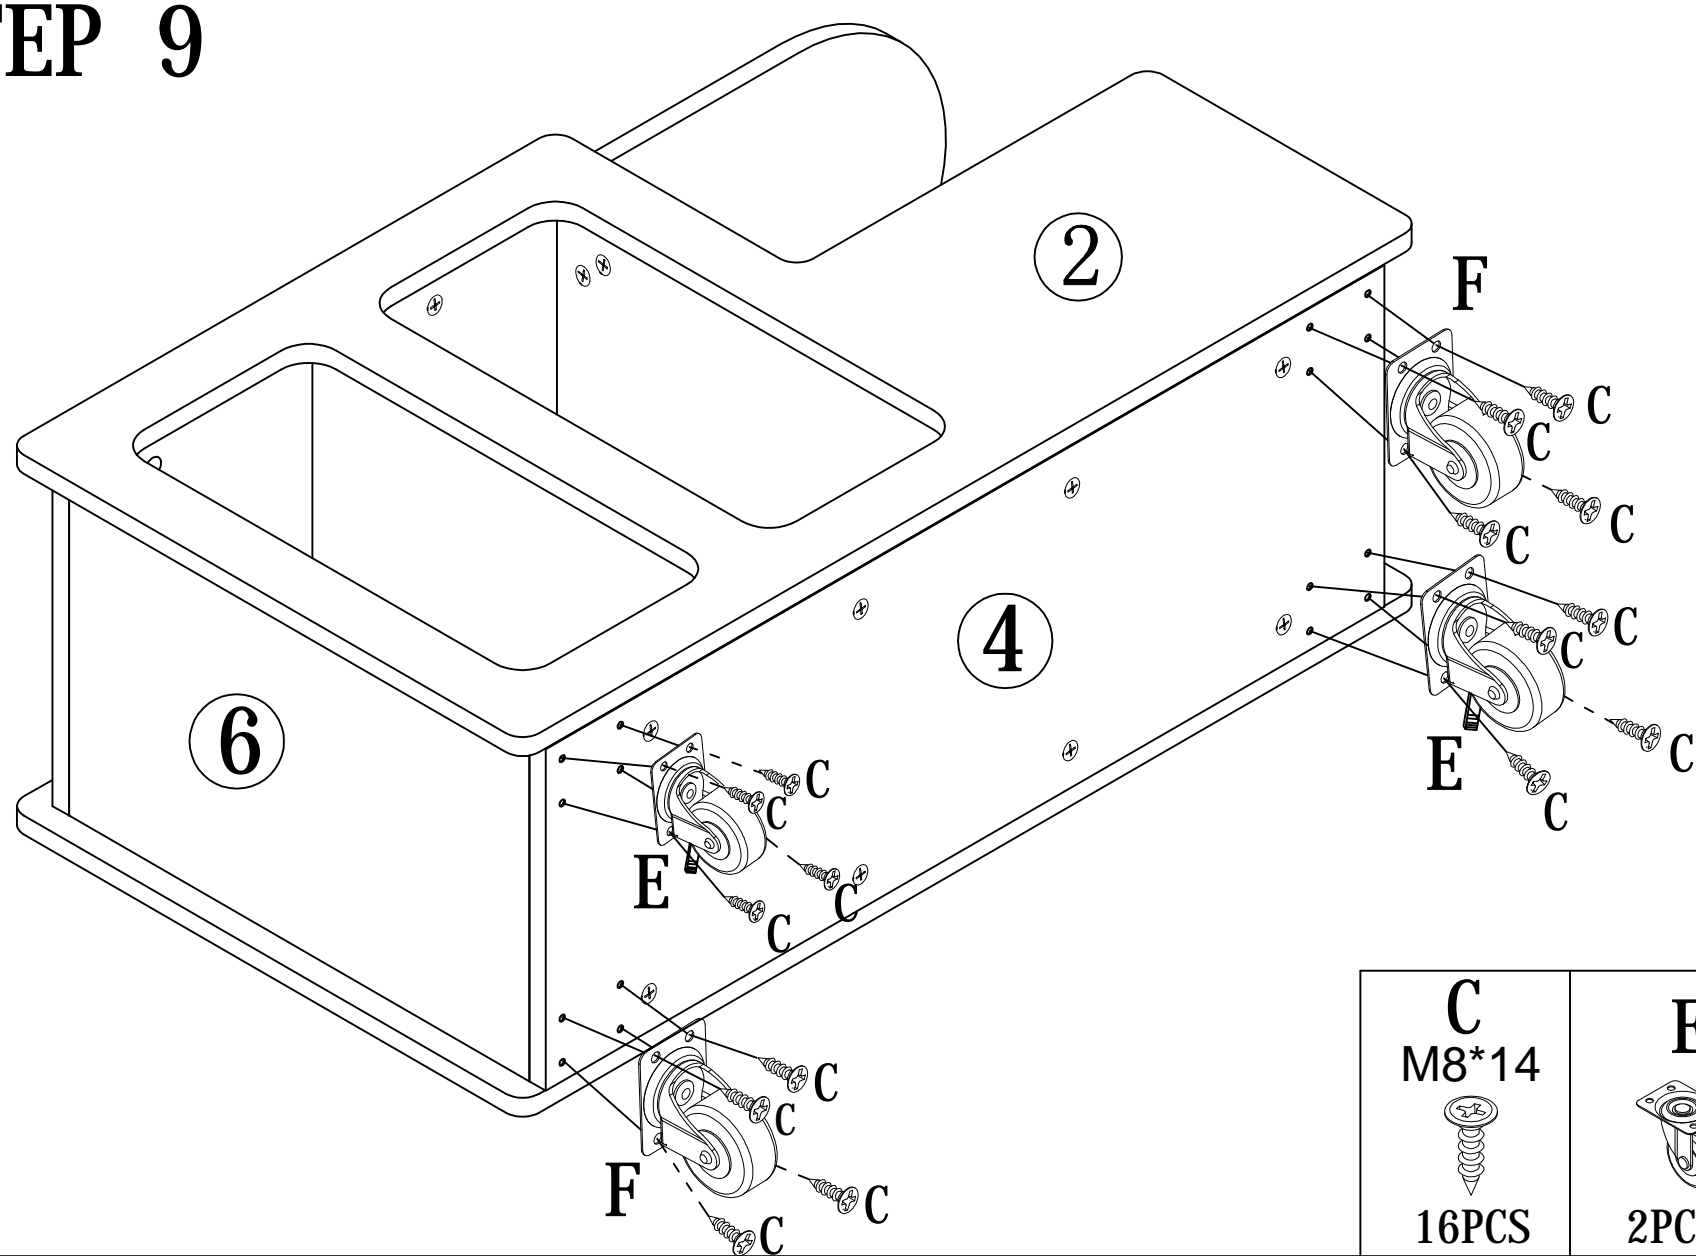
STEP 9




C M8*14  16PCS	E  2PCS	F  2PCS
---	---	---

STEP 10

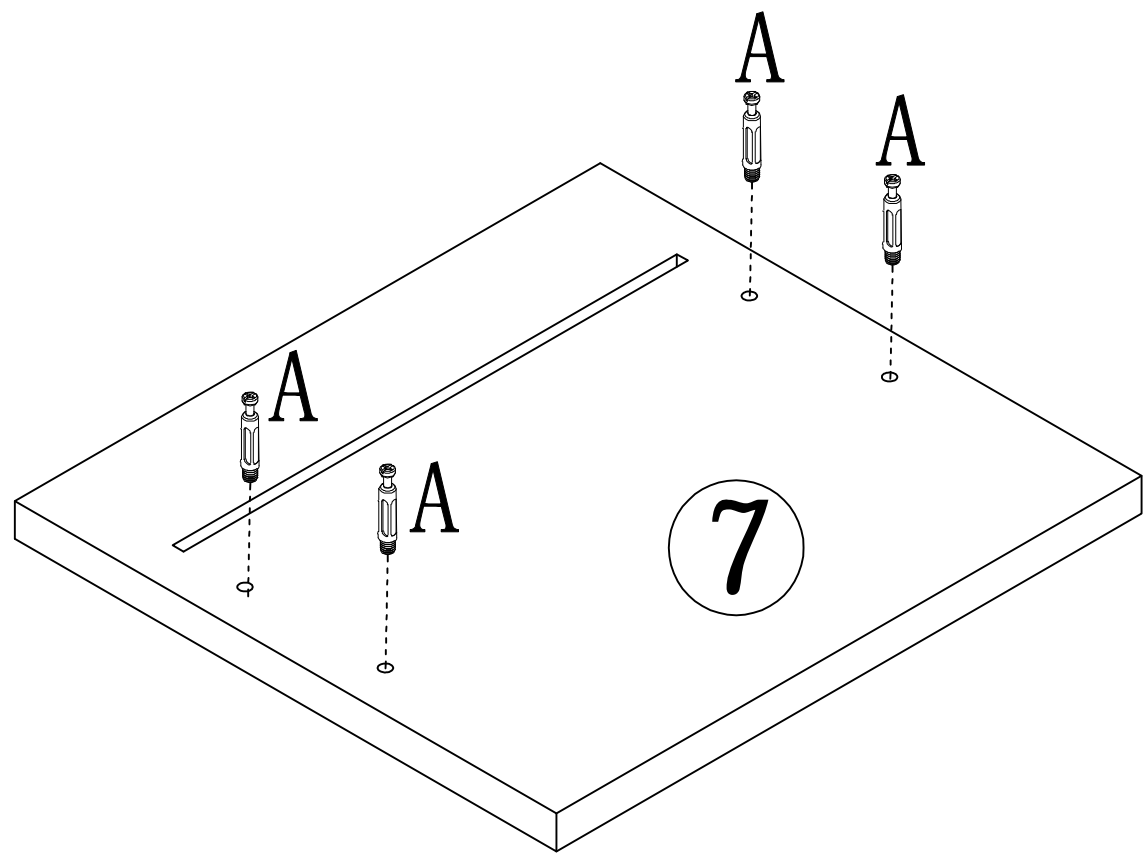


A  4PCS


STEP 11

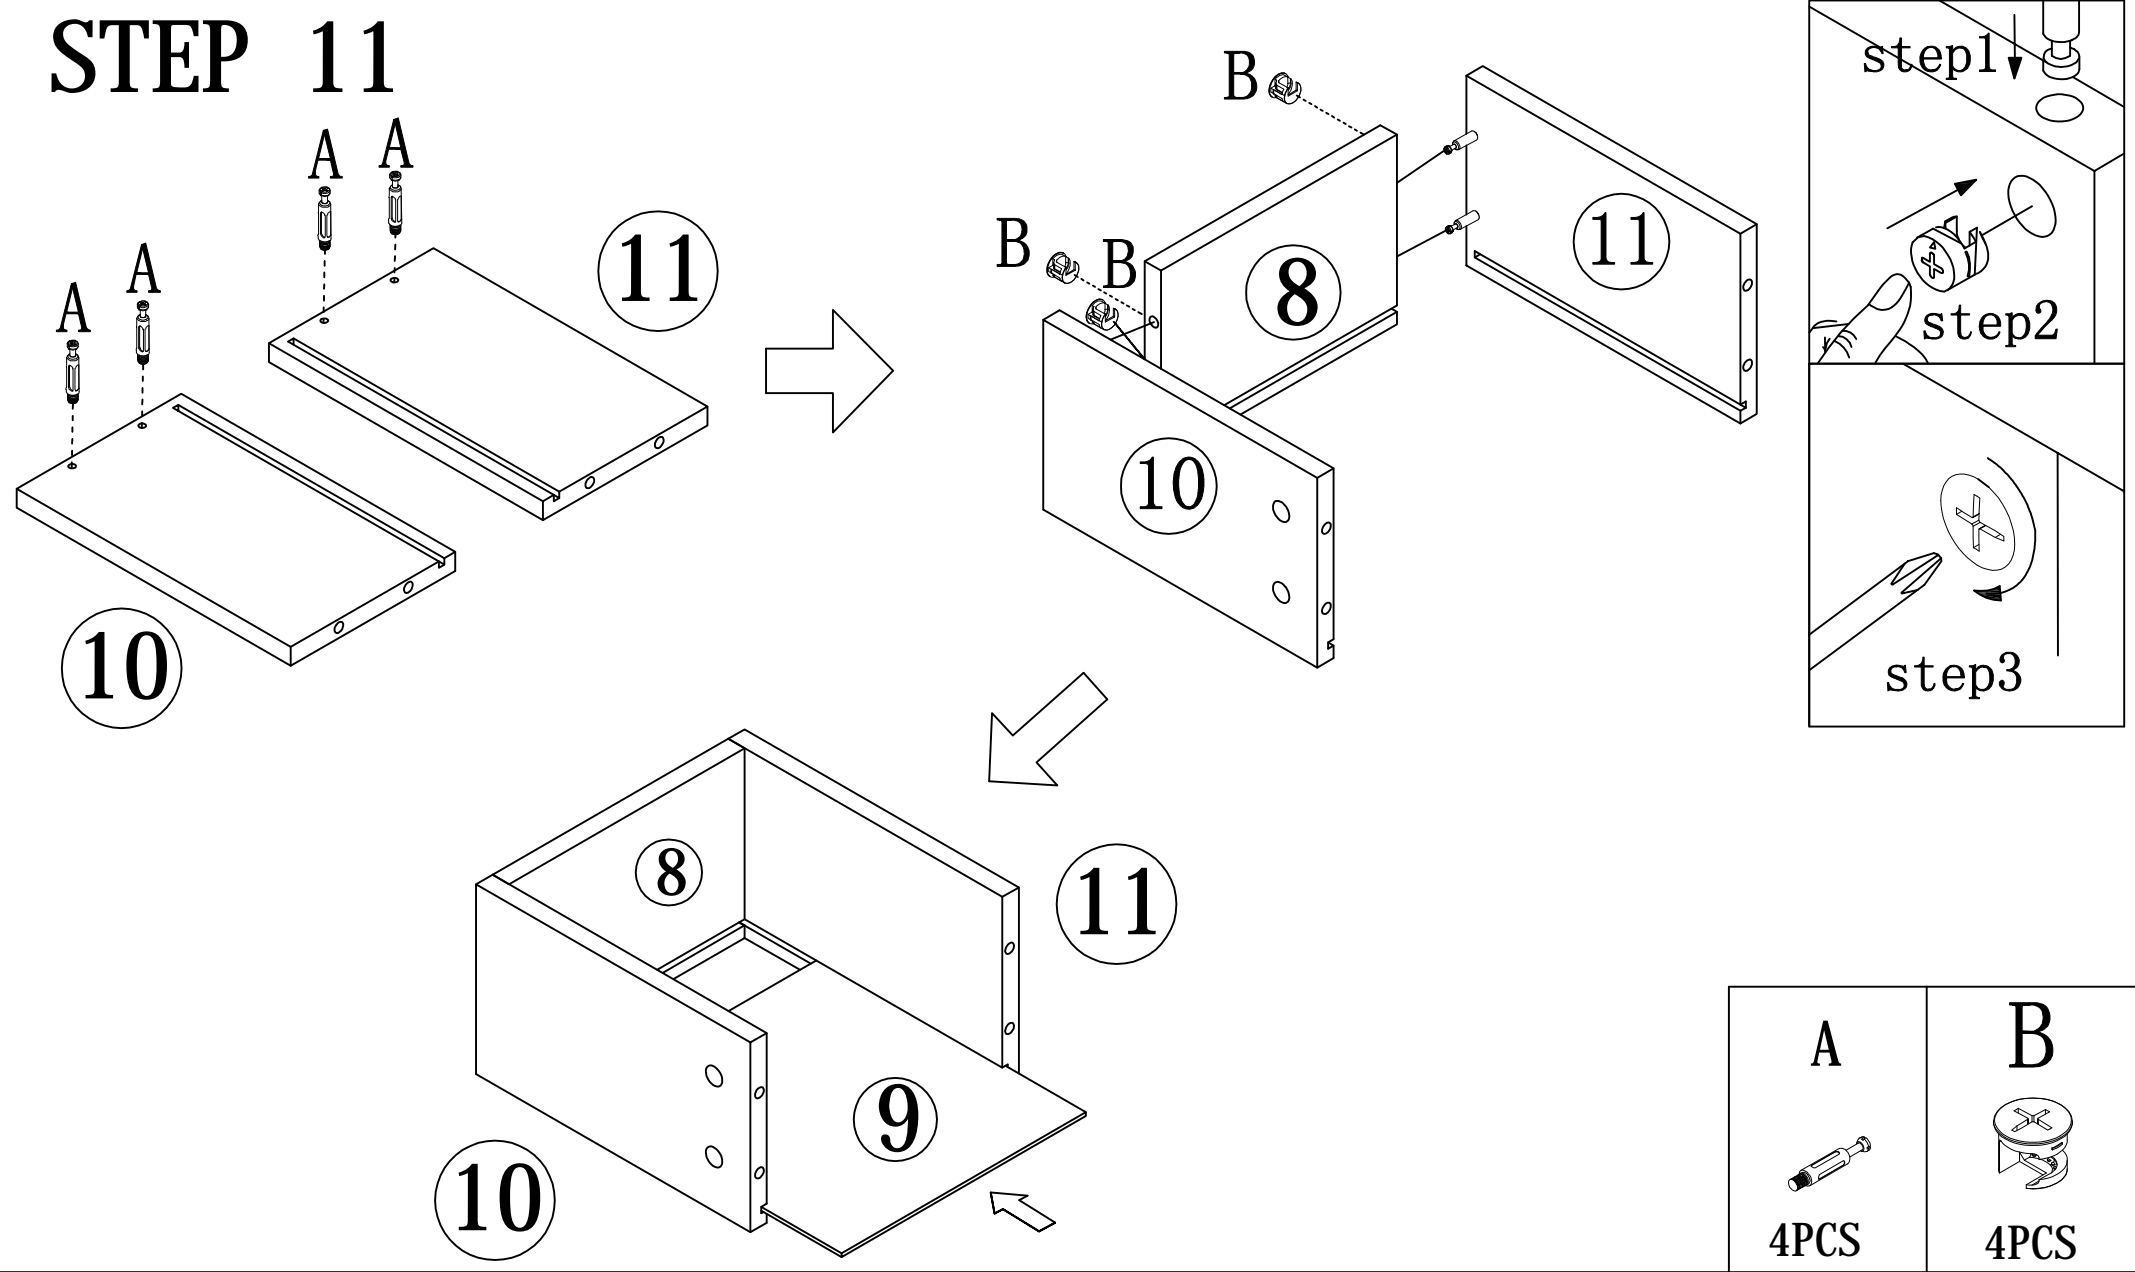


STEP 12

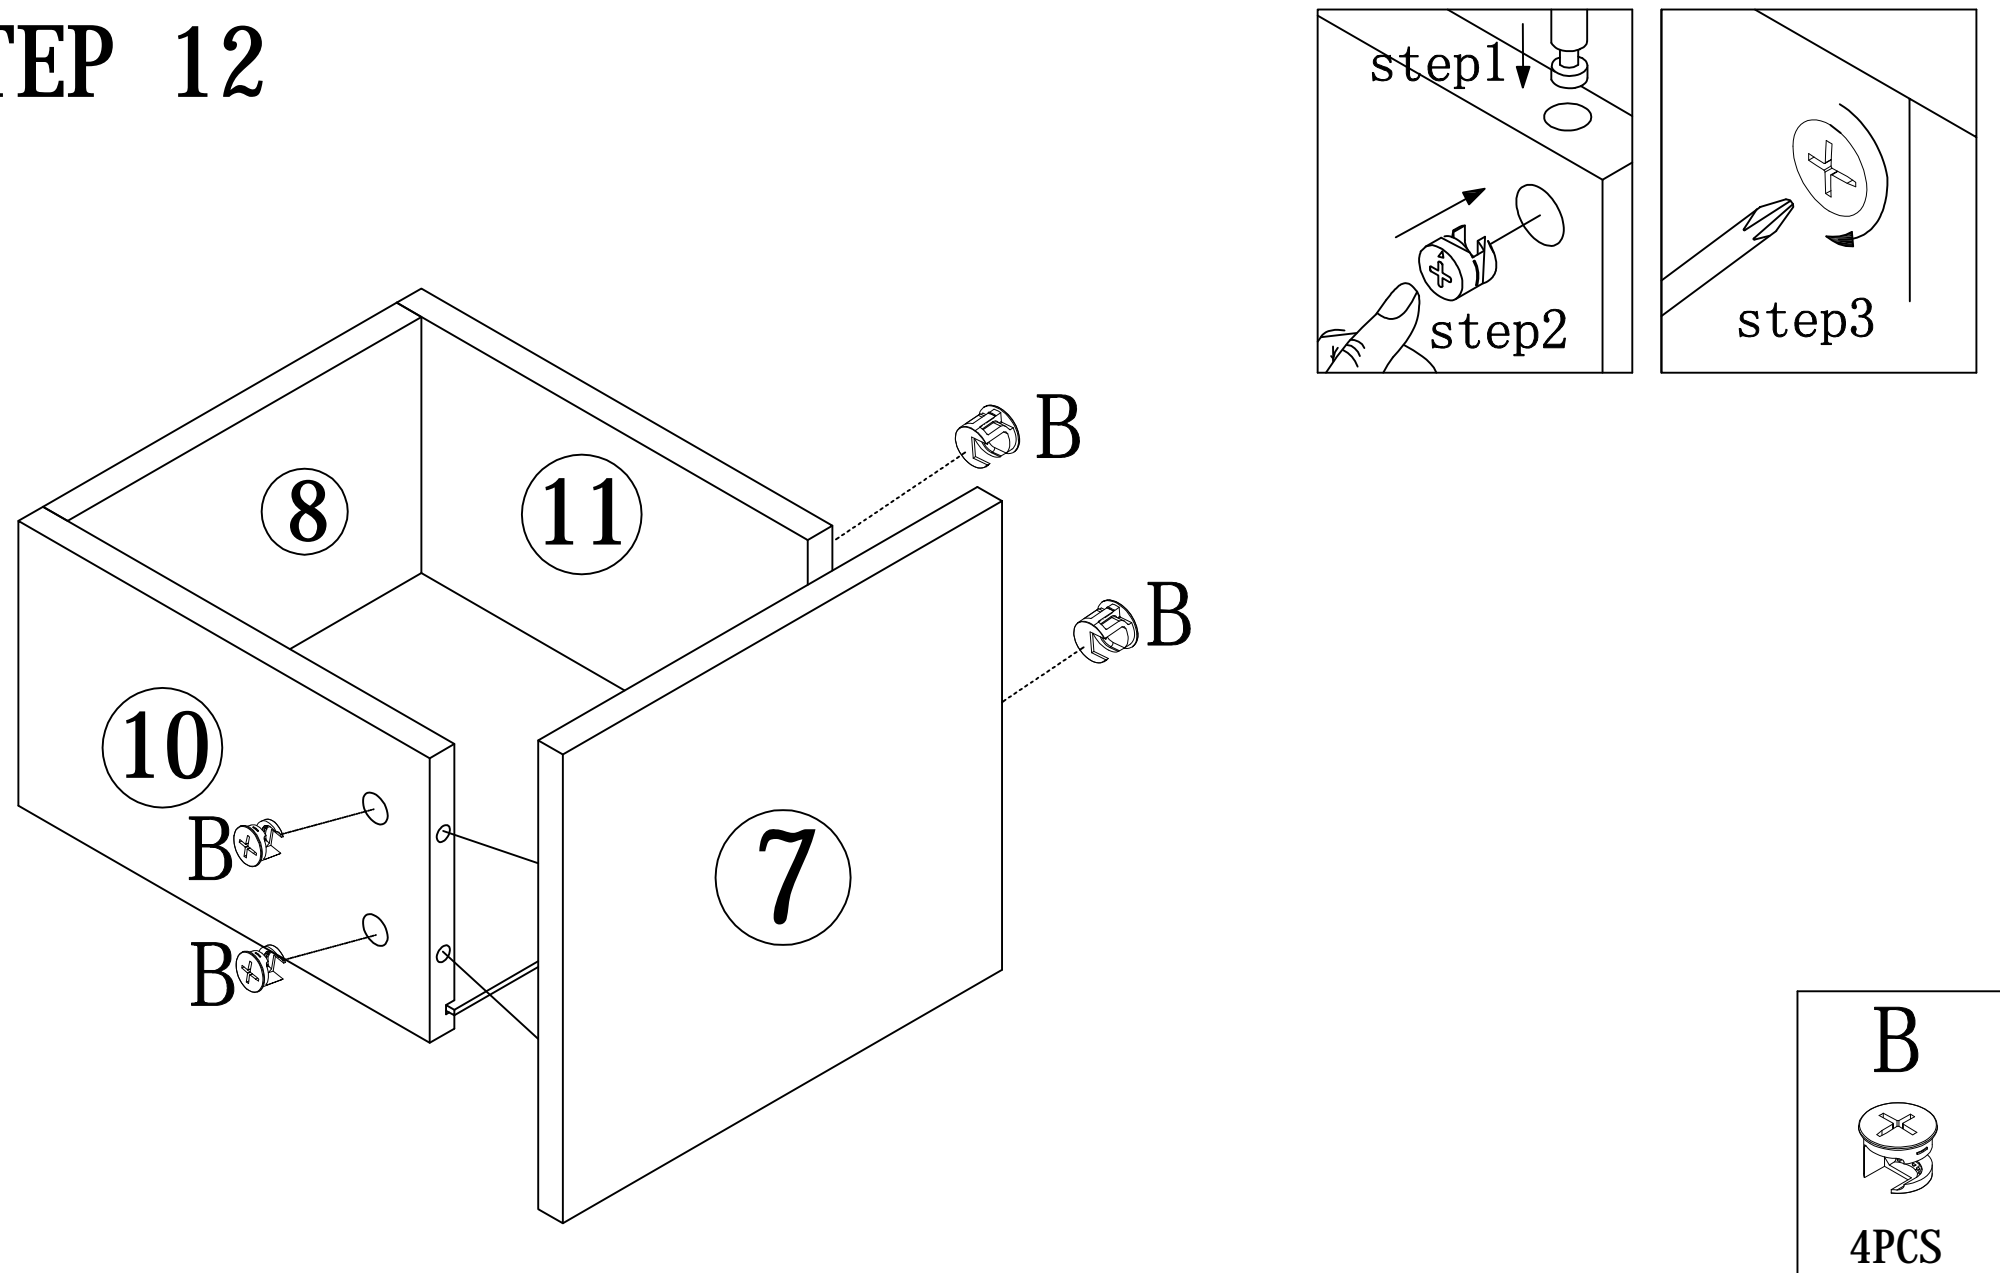


STEP 13

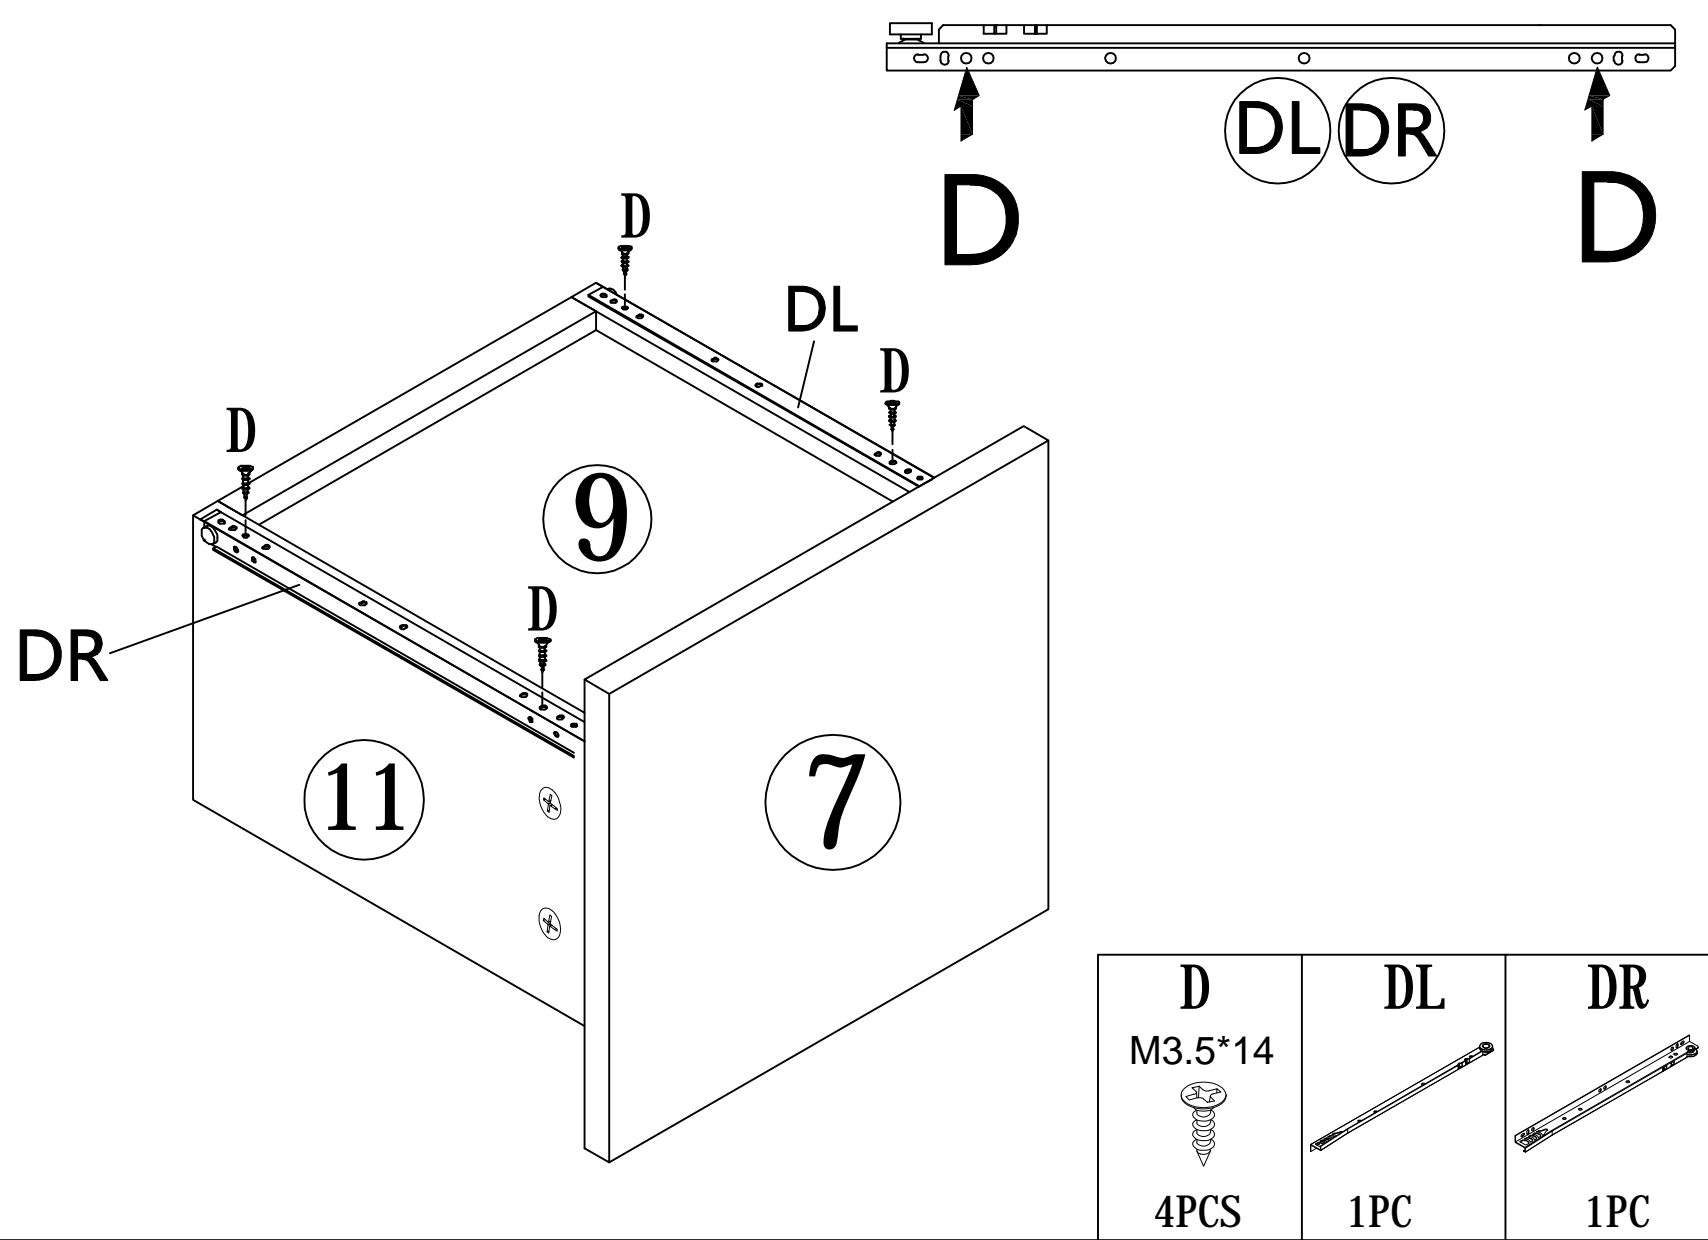


STEP 14

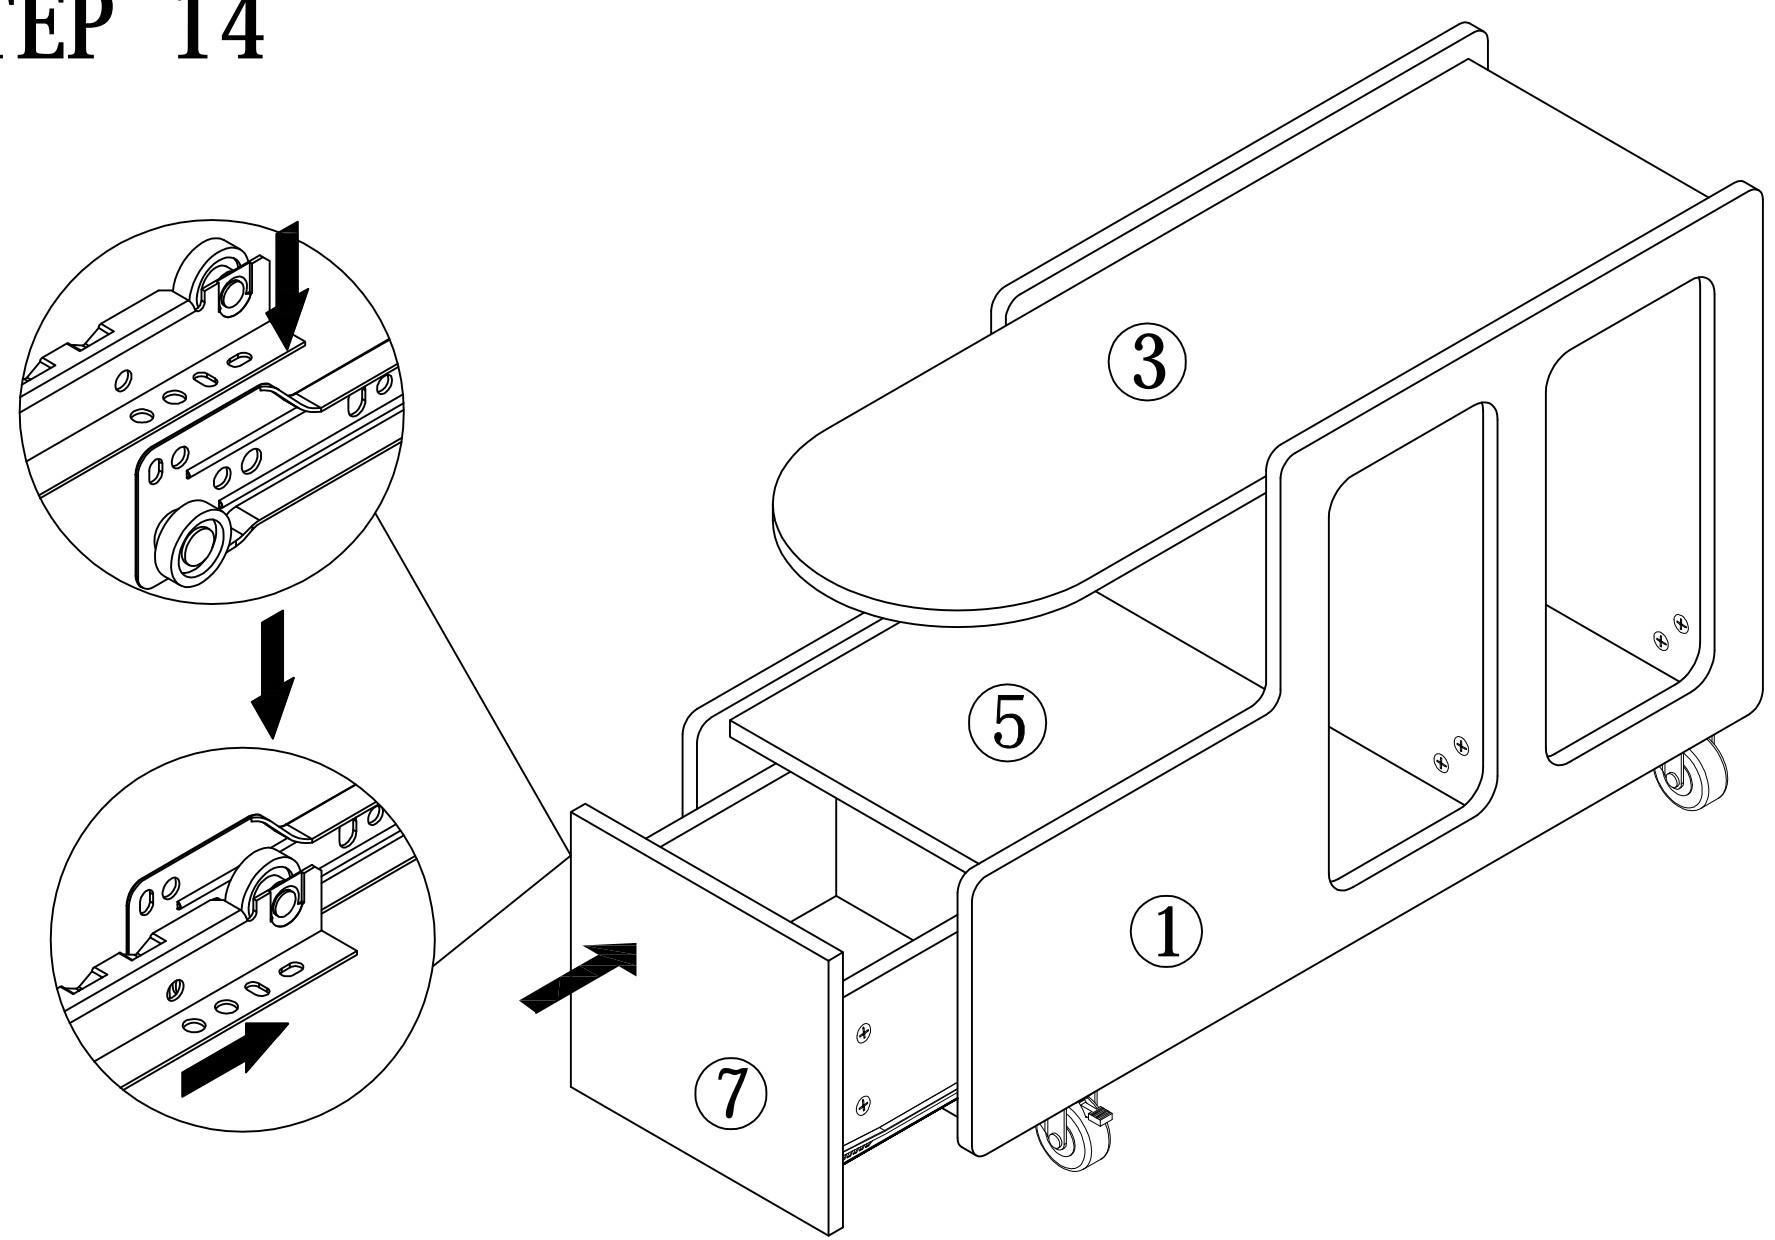

STEP 15

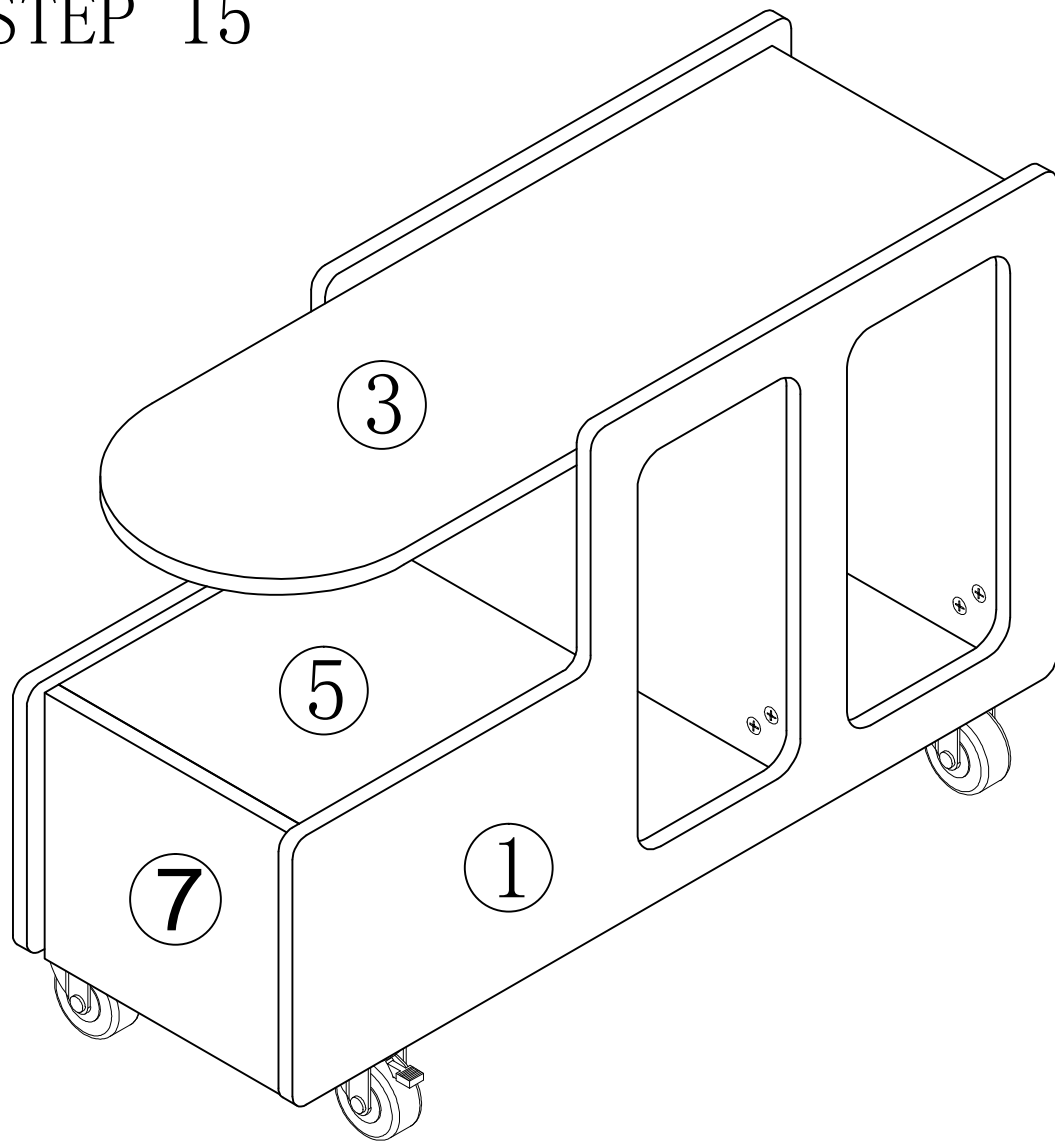

In order to make the product more beautiful, please paste hardware G on the exposed holes

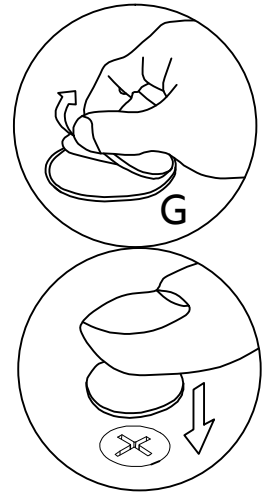

G



28PCS

STEP 16

