


ASSEMBLY INSTRUCTIONS

BATH VANITY-CABINET


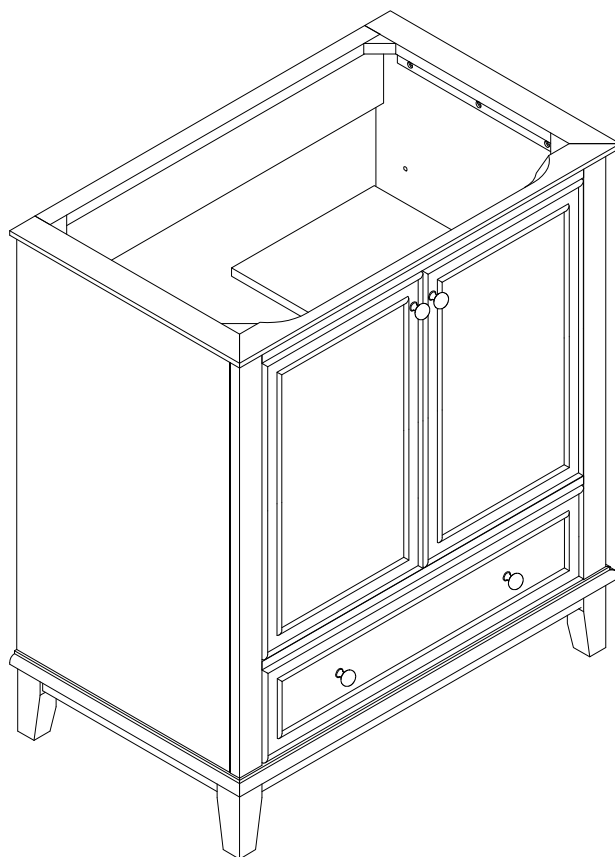


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

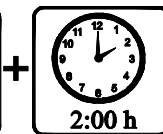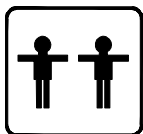

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Thank you for buying our products.

Please read the installation manual carefully before installation,

we need you to follow the instructions on the accessories and hardware

step by step assembly complete, our instructions are very detailed.

Products are environmentally friendly products,

Please rest assured that you do not soak in water, do not place very heavy items,

do not malicious push and pull,

if you have any problems in the process of assembly and use, please contact us.

Thank you again for your purchase of our products,

I wish you a happy life.



Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
 Después de la separación, déjelo a un lado hasta que sea necesario.

Les glissières doivent être séparées avant l'assemblage.
 Après la séparation, mettez de côté jusqu'au moment de l'assemblage.


Pay attention when connecting !
The sliding module must be at the front end.

STEP 1 : Extend Slide
Extender la diapositiva

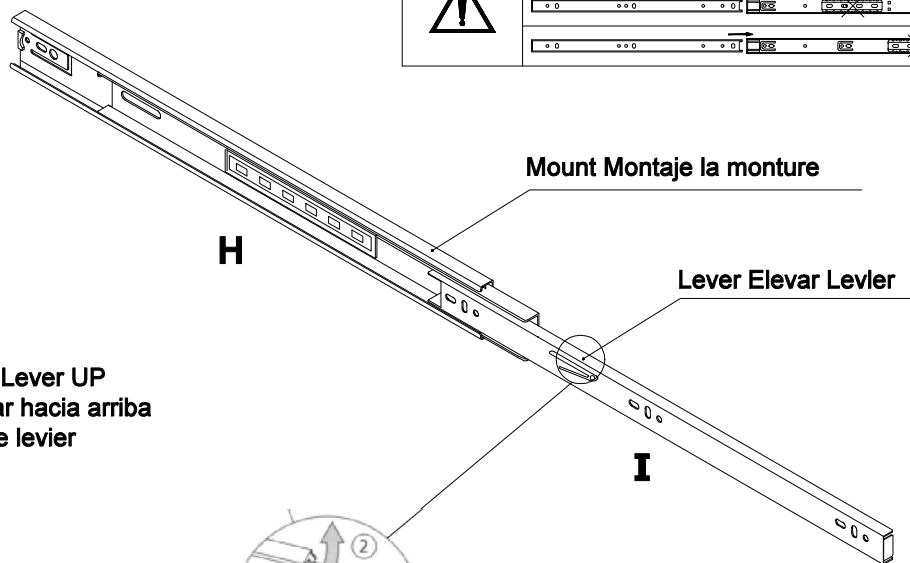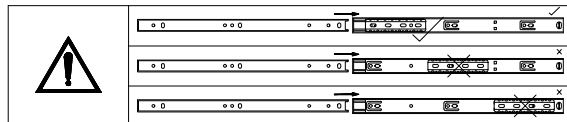


STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

Push lever for the left of drawer ,
press the lever for the right of drawer.

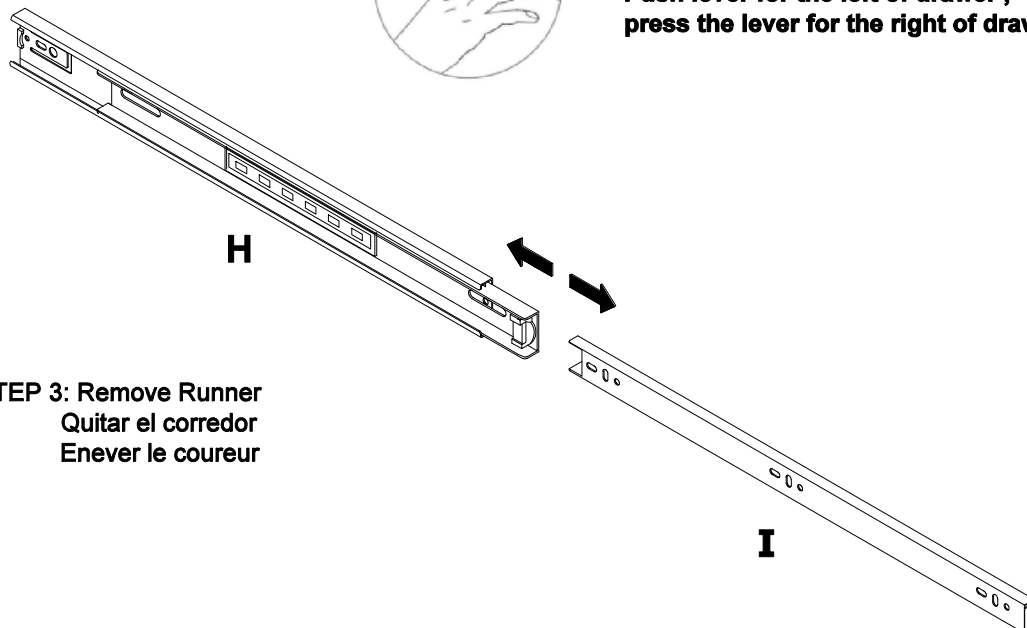













STEP 3: Remove Runner
Quitar el corredor
Enever le coureur

Detail View - CABINET








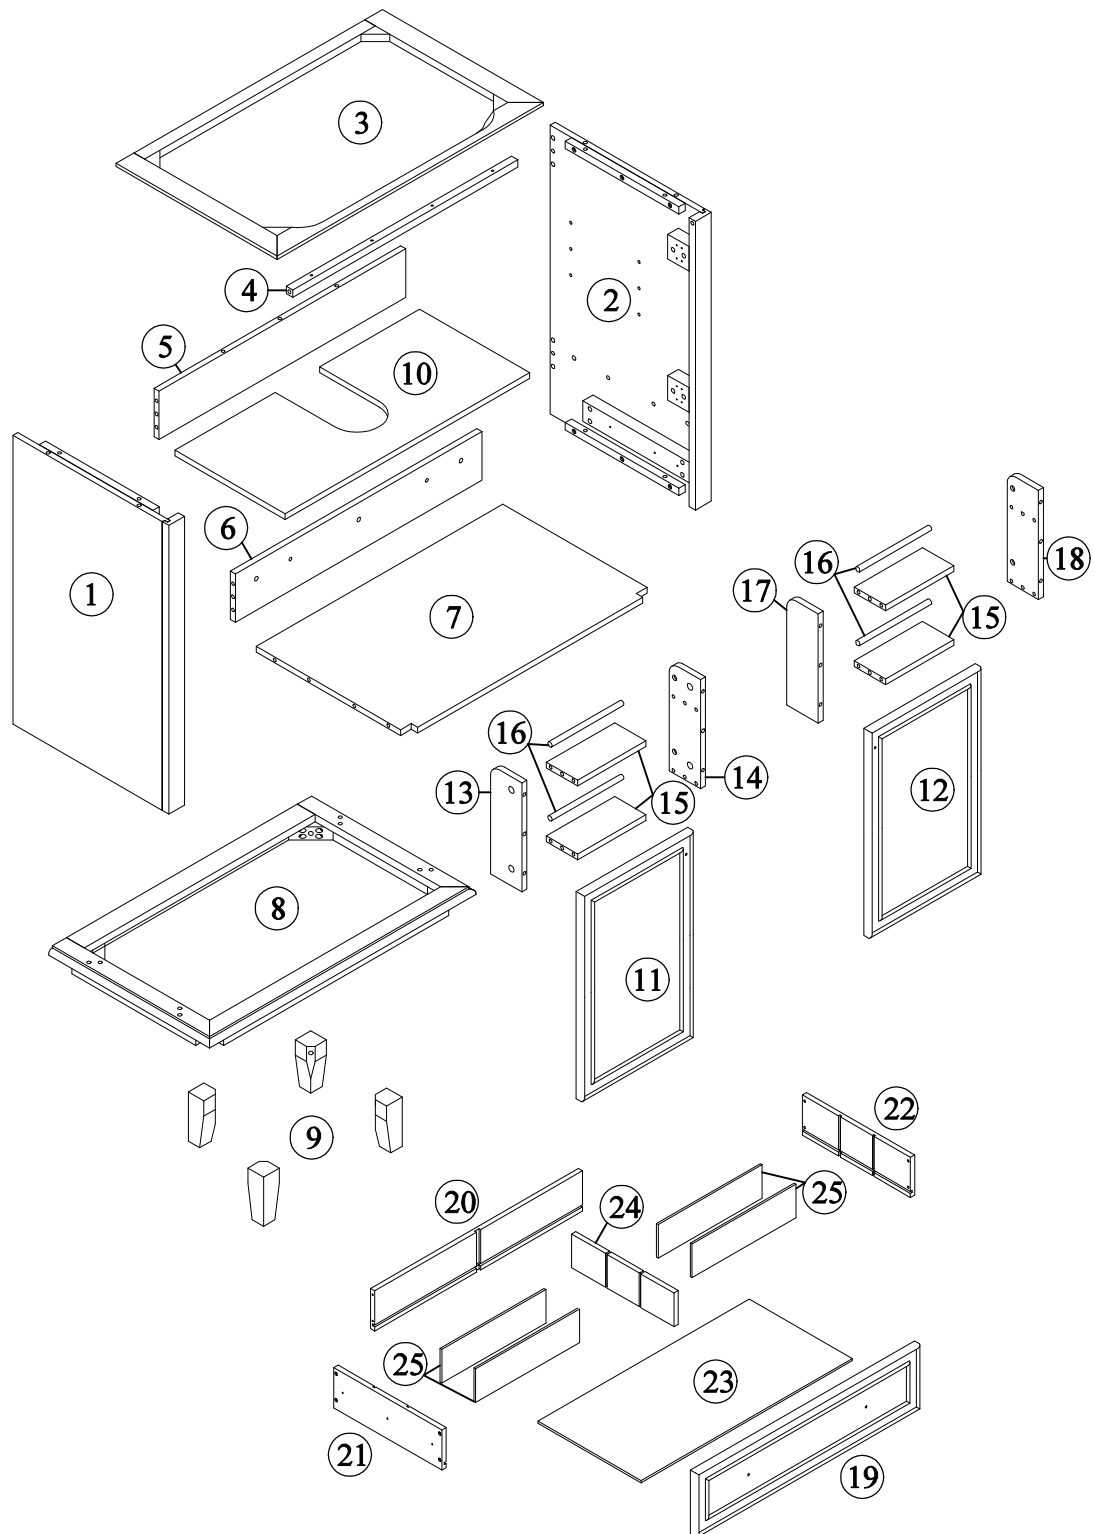


Identifying the Hardware-Identify the hardware using the illustrations below.









Part List

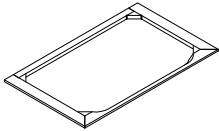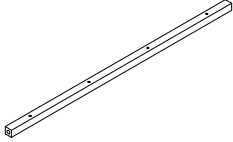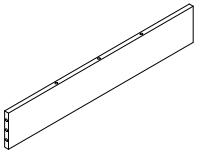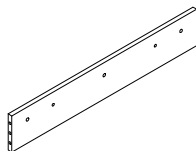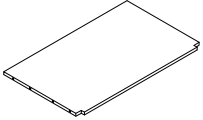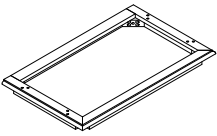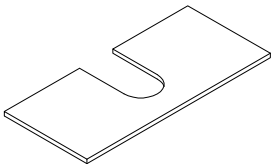1		2	
3		4	
5		6	
7		8	
9		10	
11		12	
13		14	


Part List

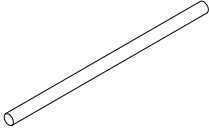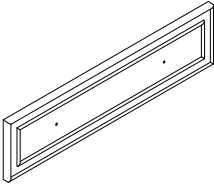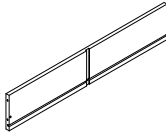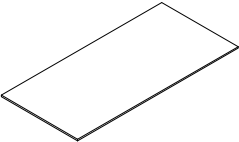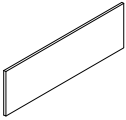15	 Panel Mid Door - 4pcs	16	 Round Bar Door - 4pcs
17	 Panel Left Side Door (R) - 1pc	18	 Panel Right Side Door (R) - 1pc
19	 Drawer Face - 1pc	20	 Drawer Rear - 1pc
21	 Drawer Side(L) - 1pc	22	 Drawer Side(R) - 1pc
23	 Drawer Bottom - 1pc	24	 Drawer Mid - 1pc
25	 Drawer divide - 4pcs		


Hardware List

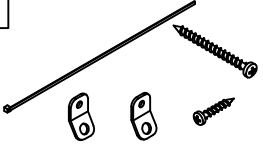A  ø6x35mm Three in one bolts (41pcs)	B  ø14.5x12mm Three in one lock (41pcs)	C  ø13x1/4"x28mm Hex-Head bolts (8pcs)
D  ø13x1/4"x38mm Hex-Head bolts (4pcs)	E  ø1/4"x16x1mm Washer (12pcs)	F  Damping hinge (4pcs)
G  ø7xø3.5x15mm Flat head screw (24pcs)	H  ø300x35mm Slide rails (2pcs)	I  ø298x18mm Slide rails (2pcs)
J  ø6xø3x12mm Flat head screw (12pcs)	K  Handle (4pcs)	L  ø5/32"x15mm Handle screw (2pcs)
M  ø5/32"x28mm Handle screw (2pcs)	N  Laminate pad(4pcs)	O  ø8xø4x30mm Round head screw (8pcs)
P  ø8xø4x25mm Round head screw (4pcs)	Q  ø8x30mm Wood dowel (33pcs)	R  4mm Allen key (1pc)
S  Anti fall hardware (1set)		


STEP: 1

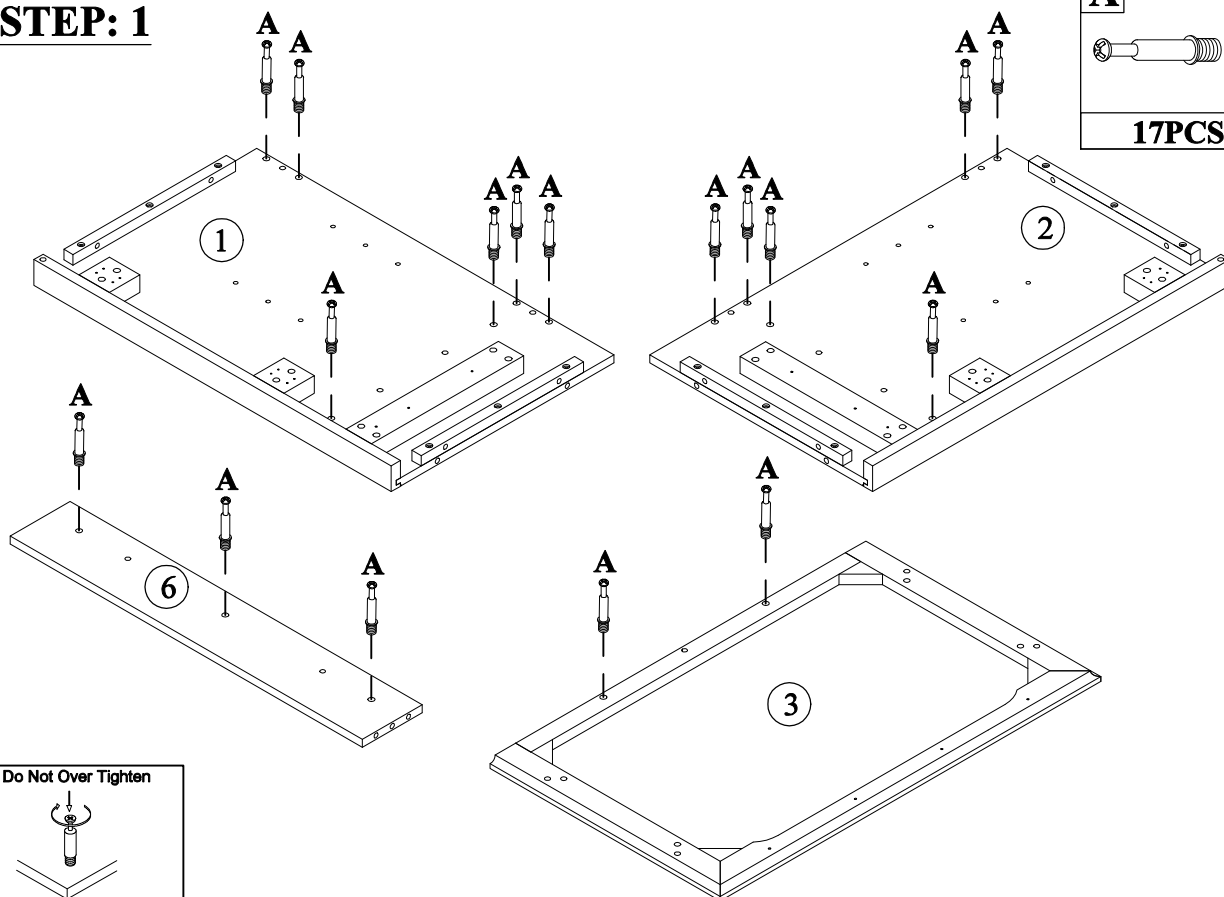

STEP: 2


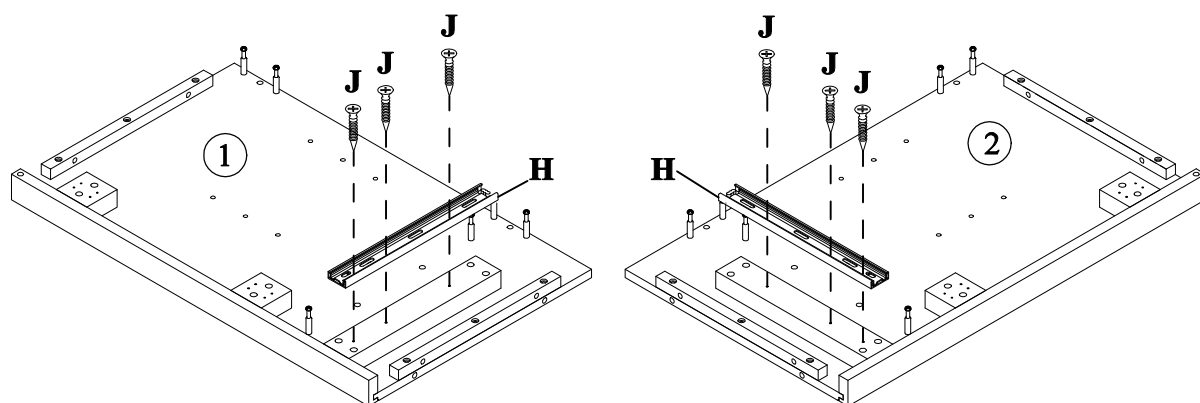


POSITION OF SCREW

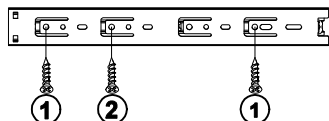



STEP: 3

B	Q
	
3PCS	2PCS



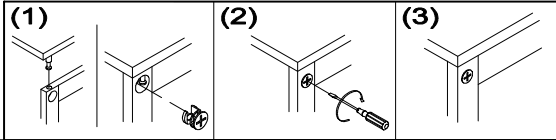
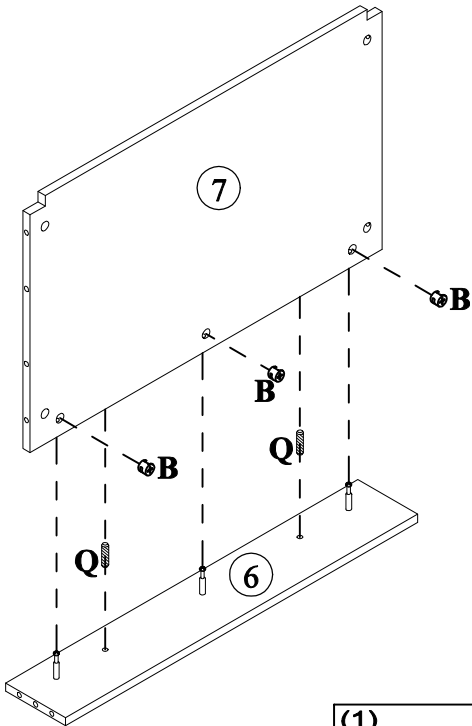



STEP: 4

B	Q
	
12PCS	10PCS

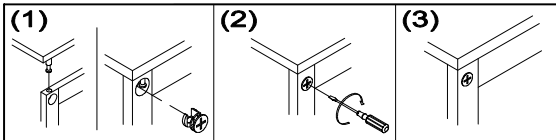
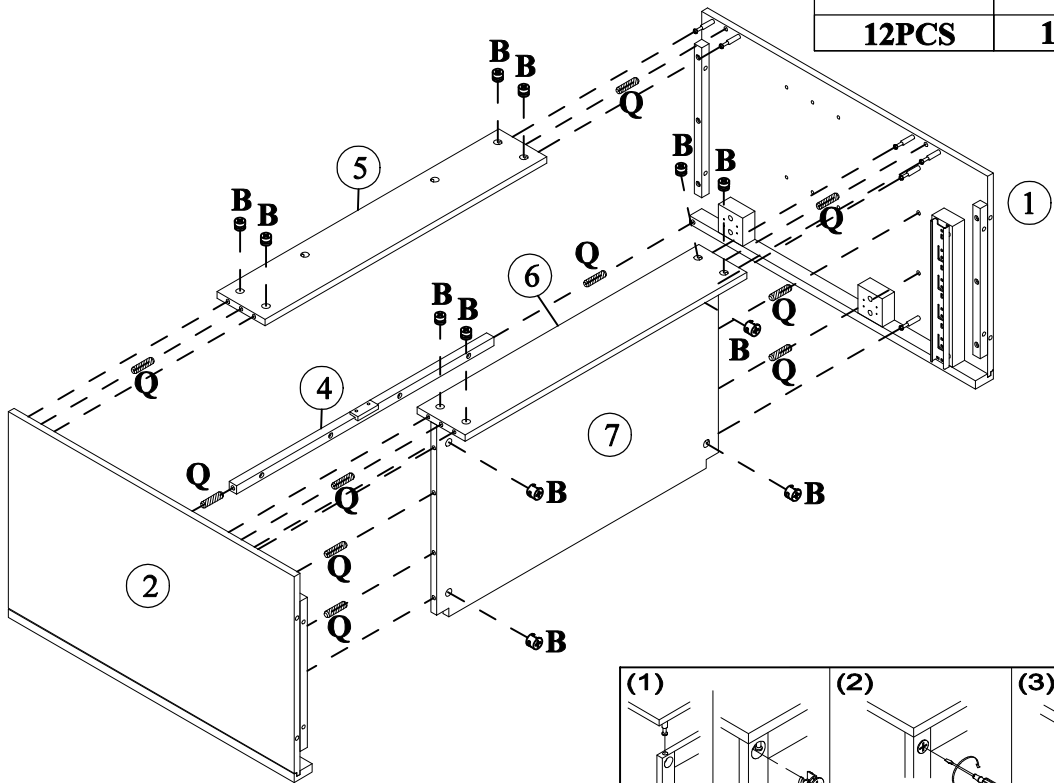



STEP: 5

B		C		E		P		Q	
2PCS		4PCS		4PCS		4PCS		5PCS	

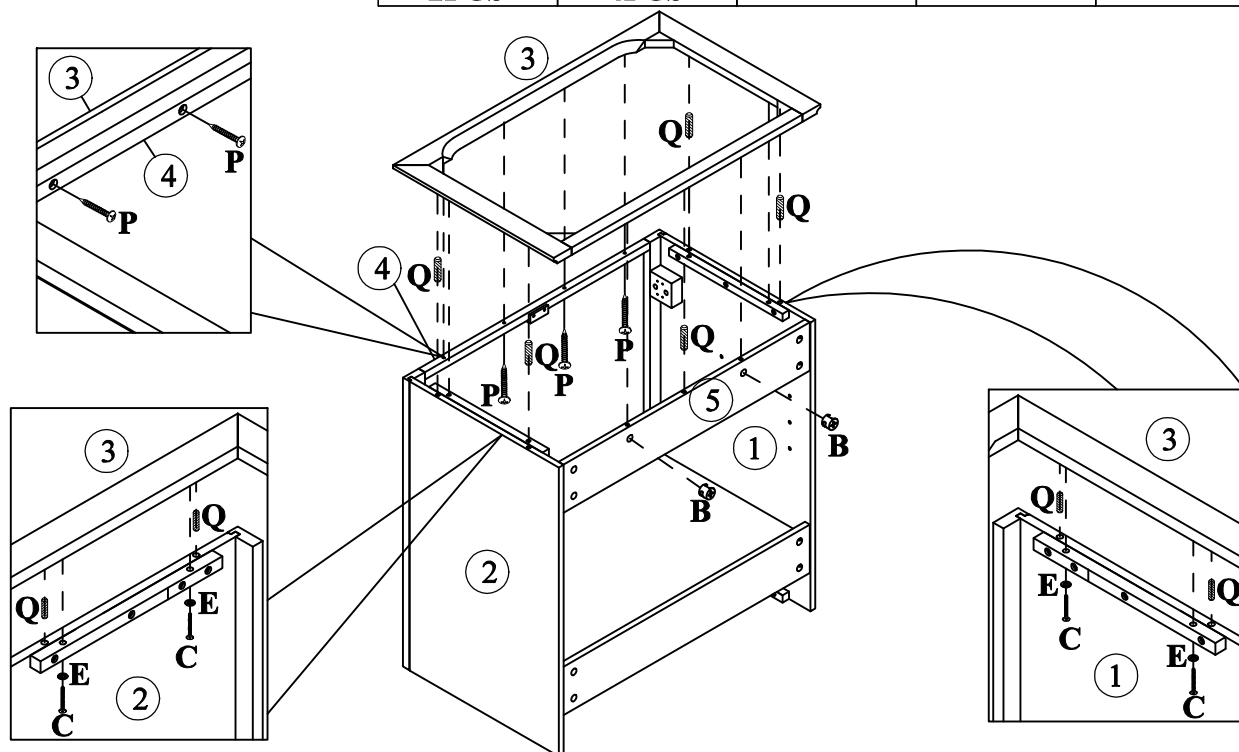



STEP: 6

D		E	
4PCS		4PCS	

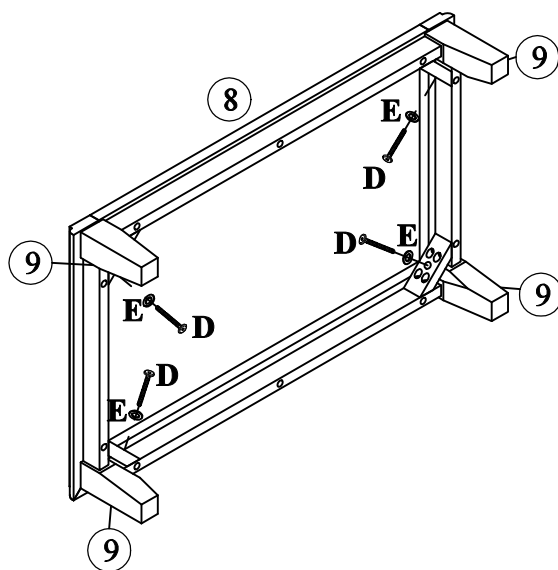



STEP: 7

C	E	Q
		
4PCS	4PCS	4PCS


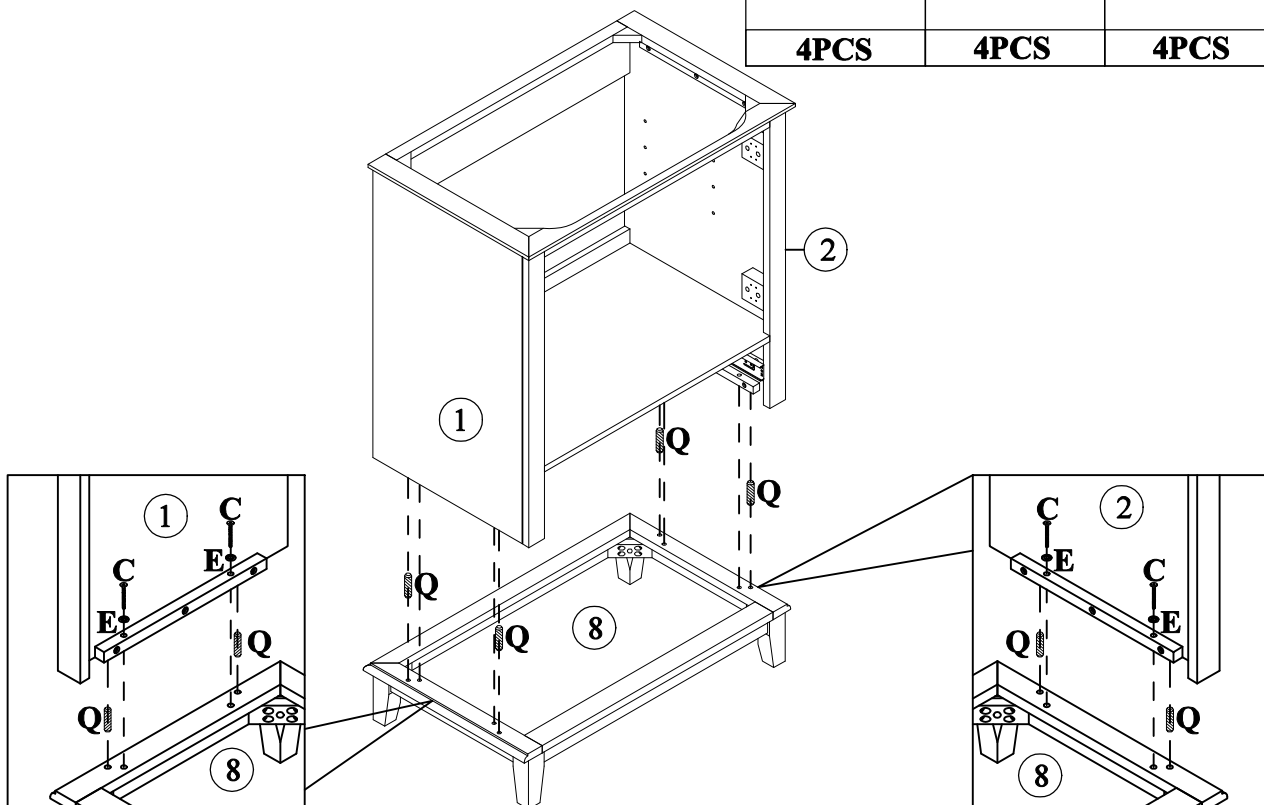



STEP: 8


A

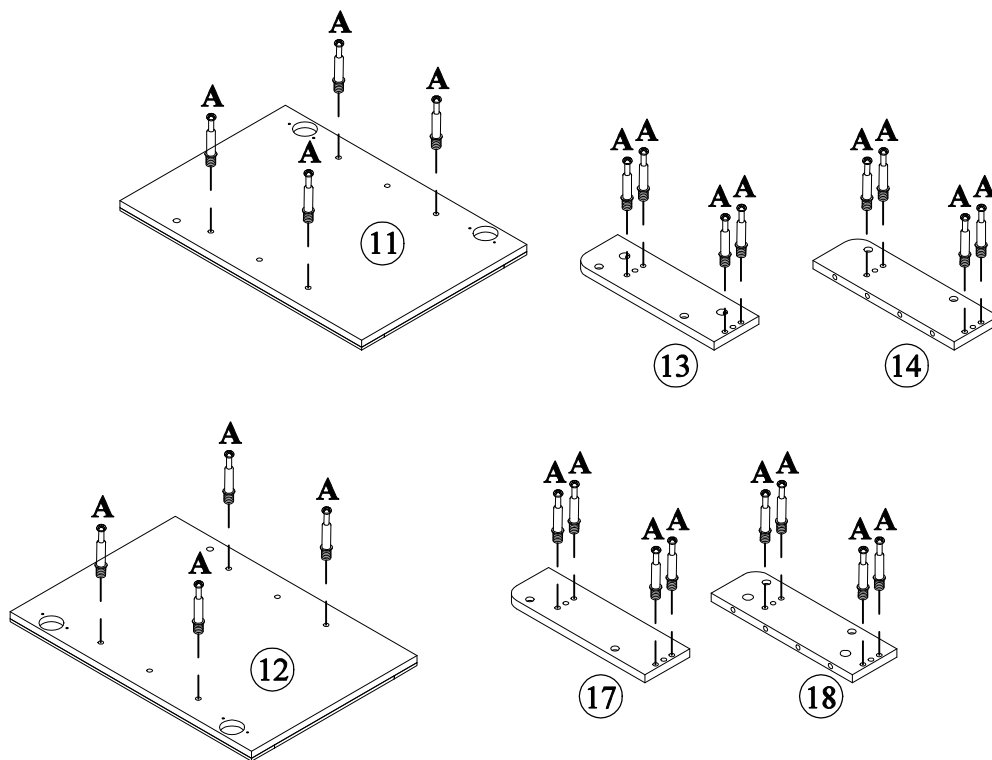24PCS

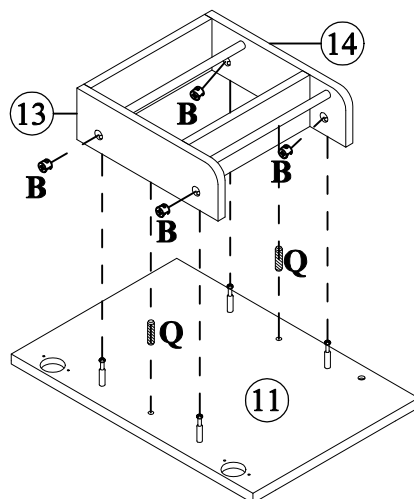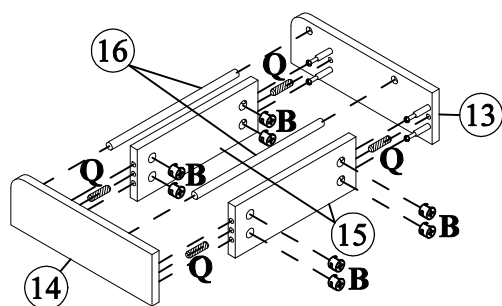



STEP: 9




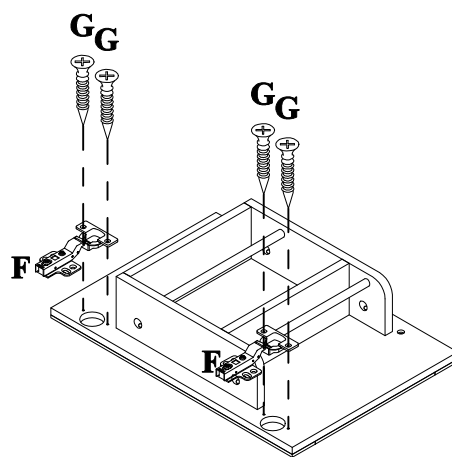
B	Q	F	G
			
12PCS	6PCS	2PCS	4PCS




STEP: 10

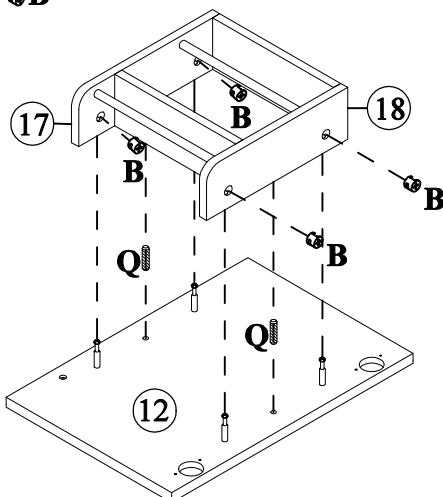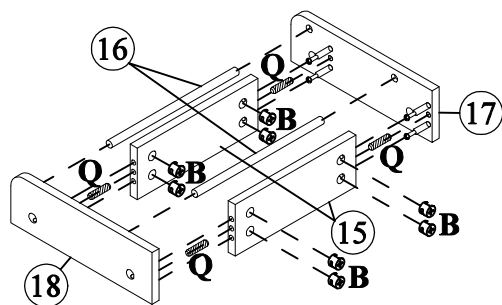


B	Q	F	G
			
12PCS	6PCS	2PCS	4PCS

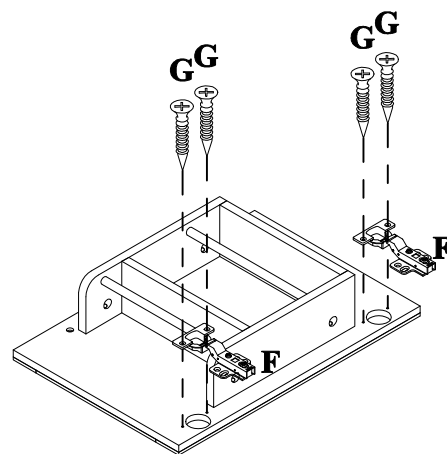


STEP: 11


K	L	G
		
2PCS	2PC	16PCS

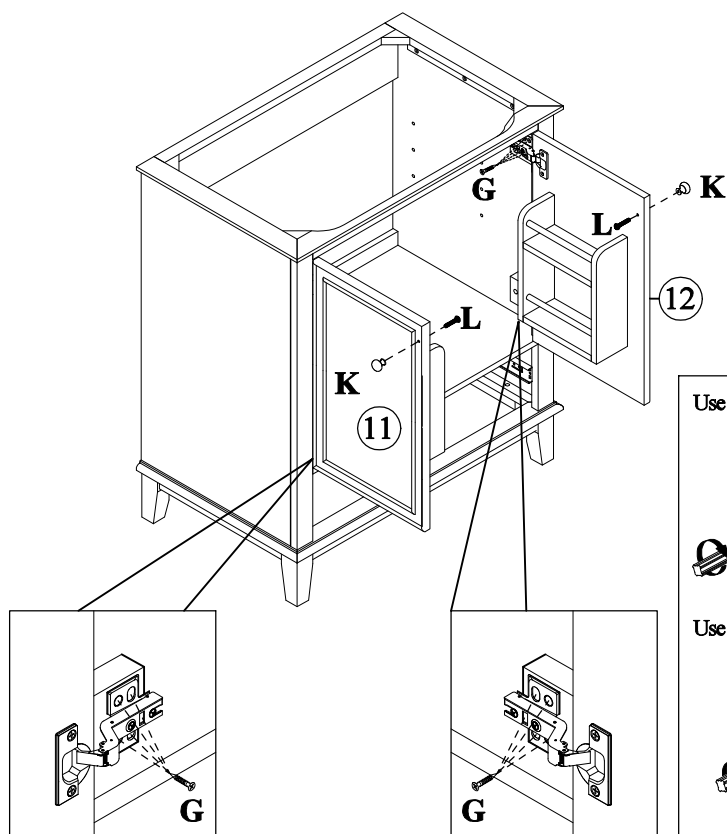


Use the screws to adjust up or down

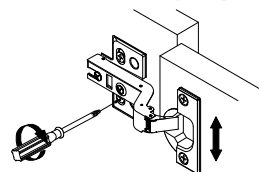


Use the screws to permanent

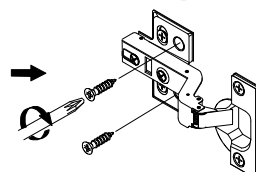

Use the screws to adjust left or right

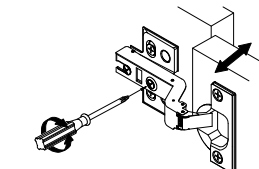


Use the screws to adjust in or out

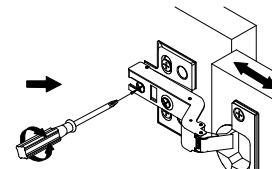


STEP: 12


N

4PCS

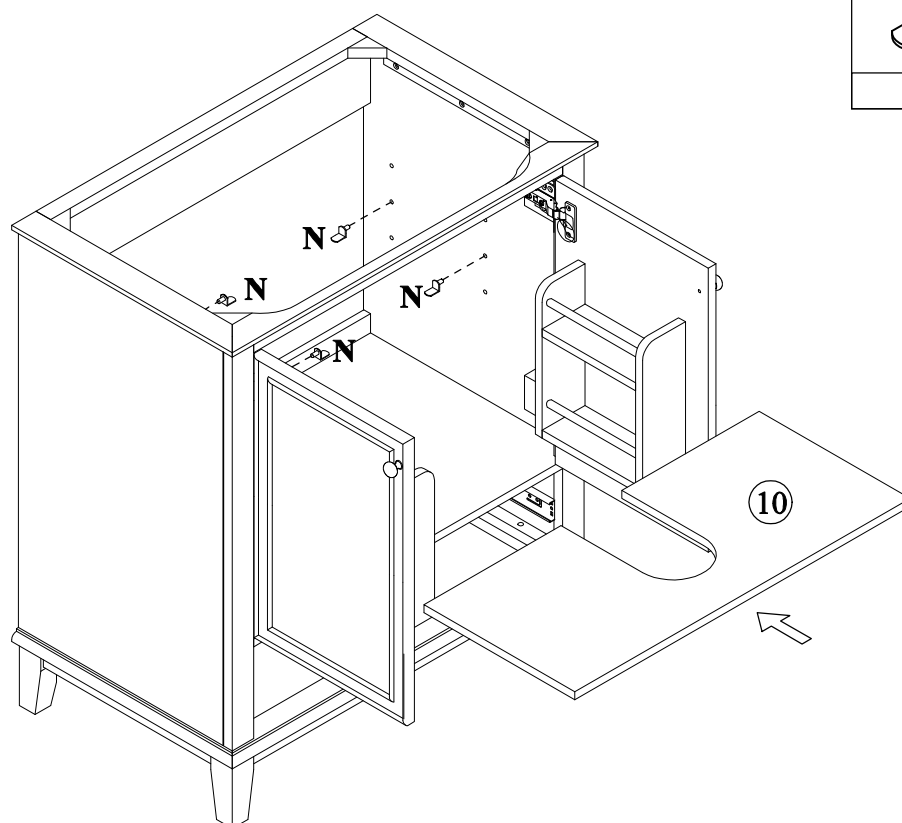


STEP: 13

I	J
	
2PCS	6PCS

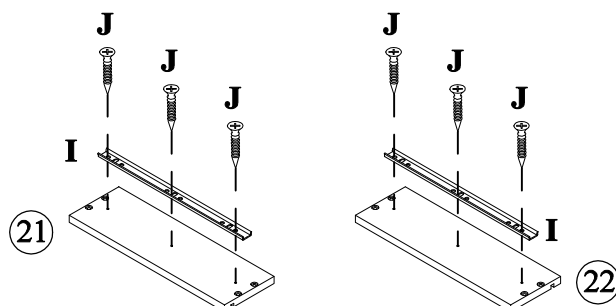


POSITION OF SCREW

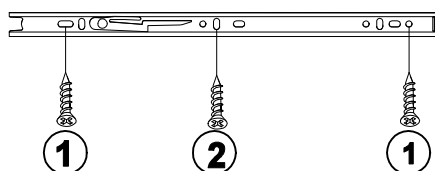


STEP: 14


O

8PCS

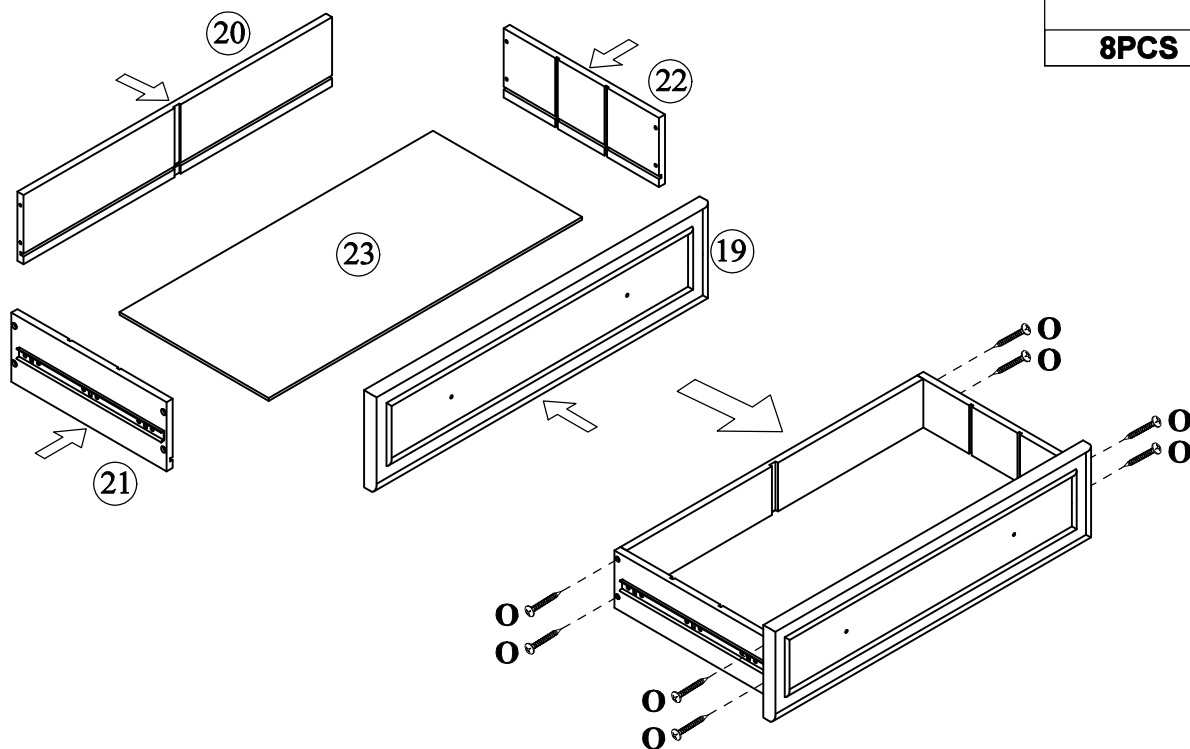


STEP: 15


K		M	
2PCS		2PCS	

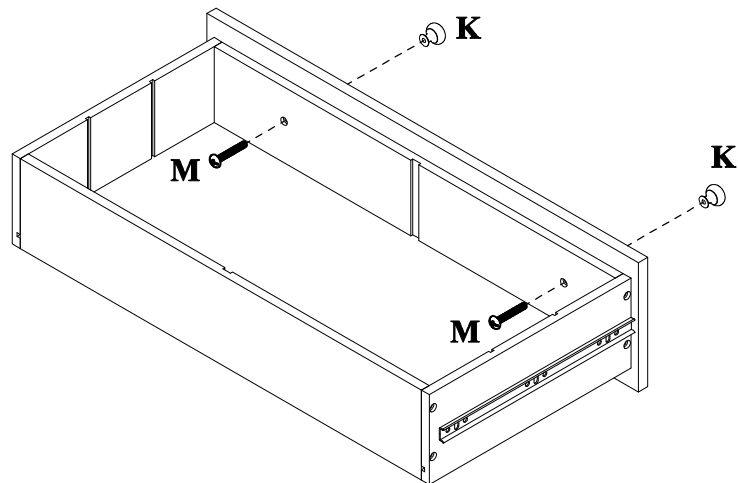



STEP: 16

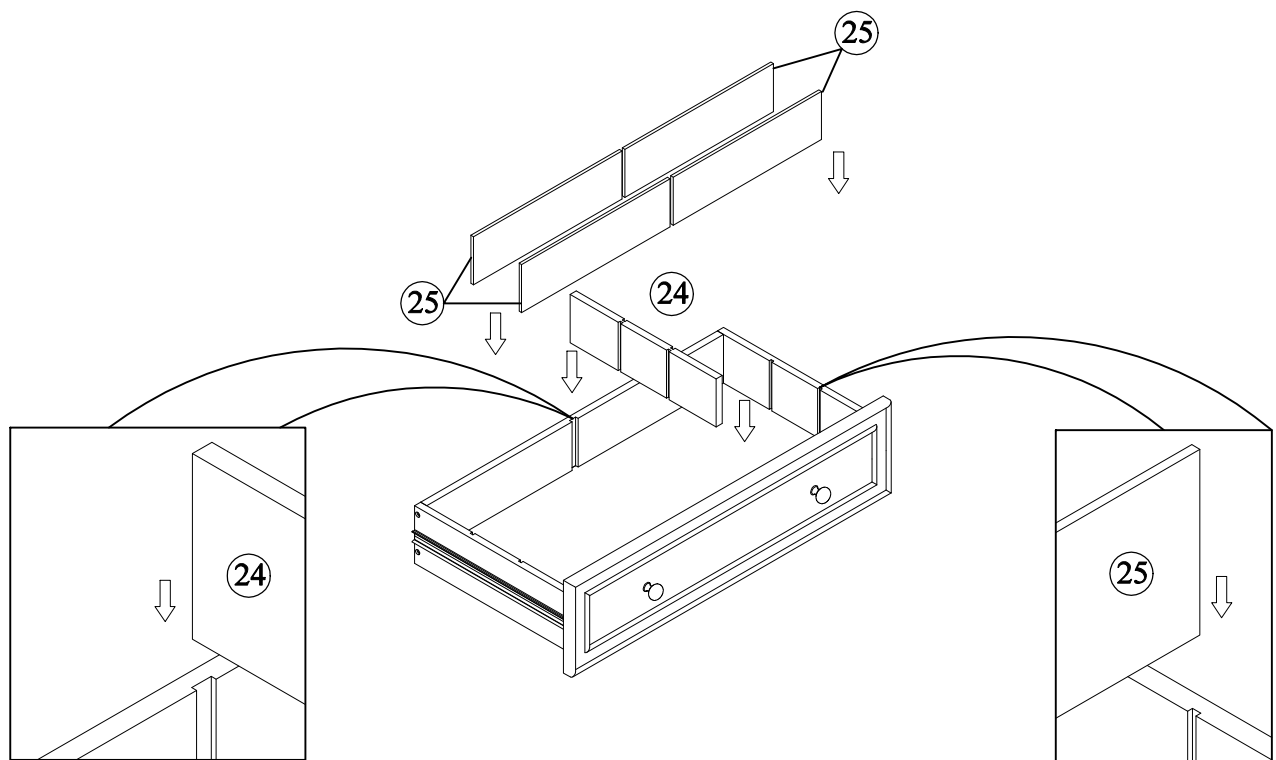

STEP: 17

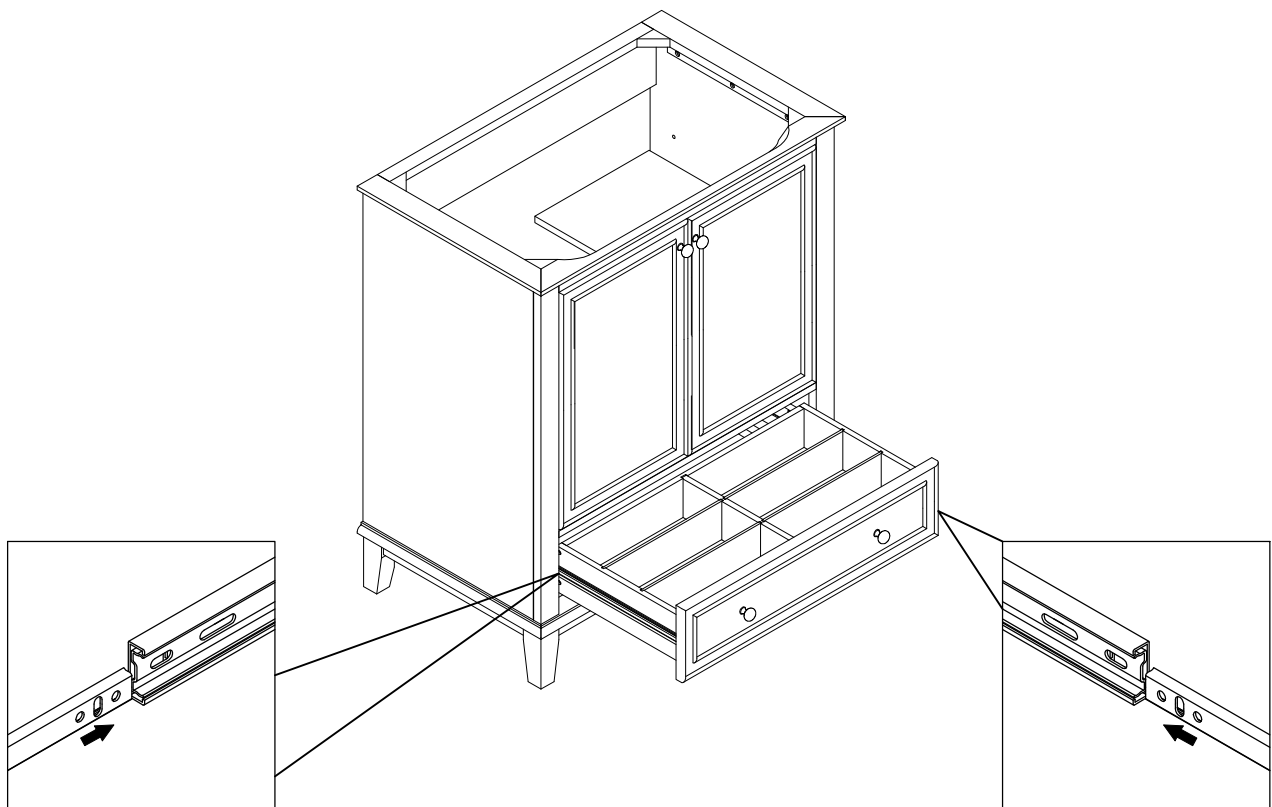


STEP: 18

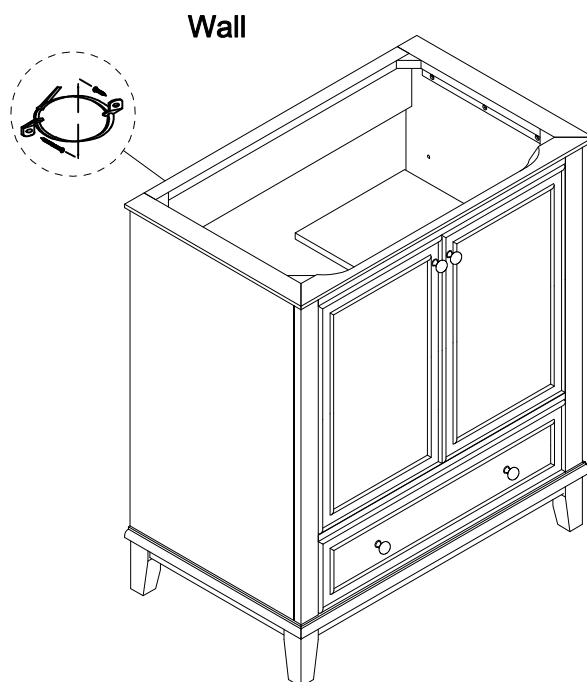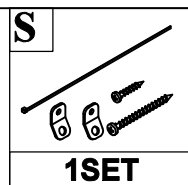


STEP: 19

Install the sink on the cabinet with glue.
Let stand for 24 hours

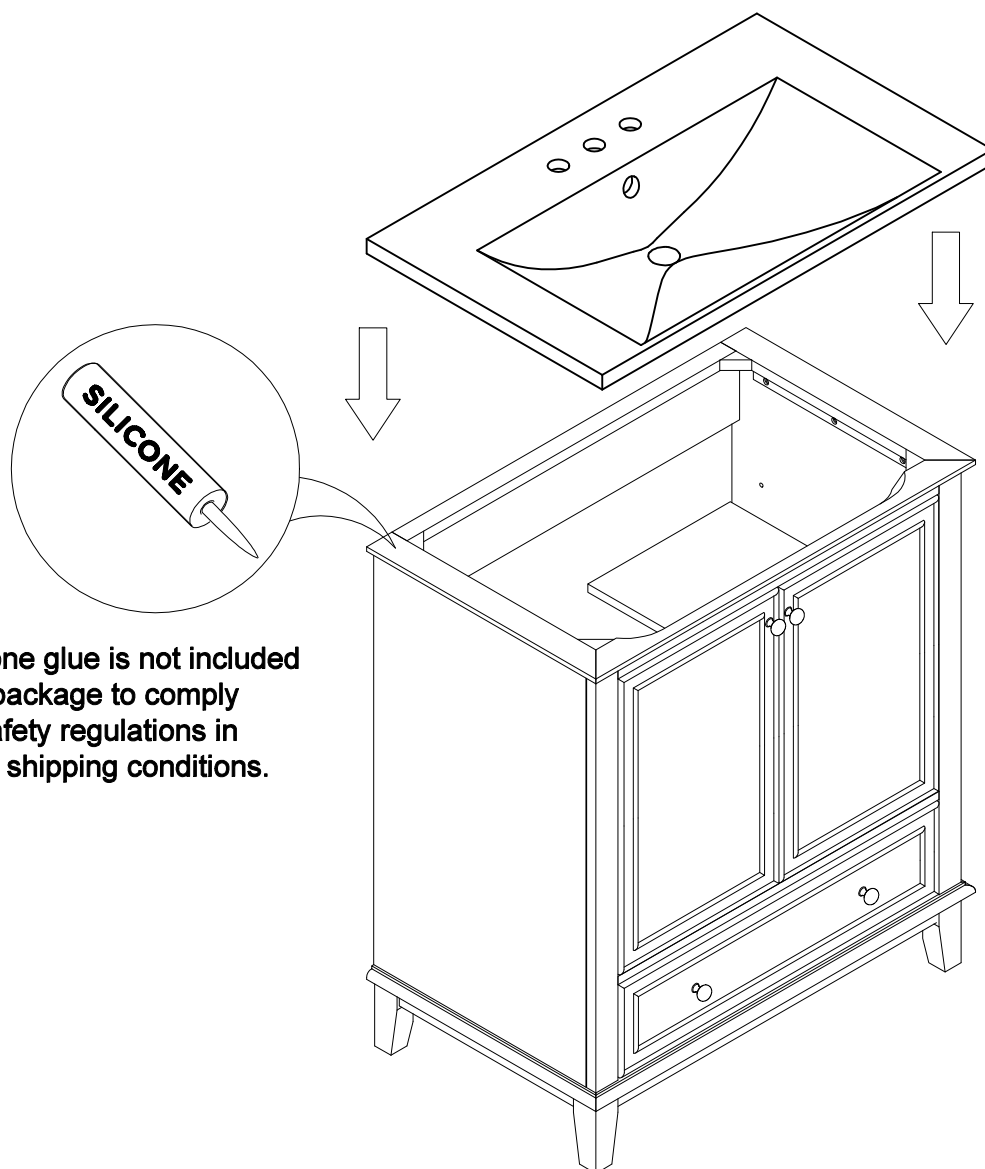


***Silicone glue is not included
in the package to comply
with safety regulations in
certain shipping conditions.**

STEP: 20

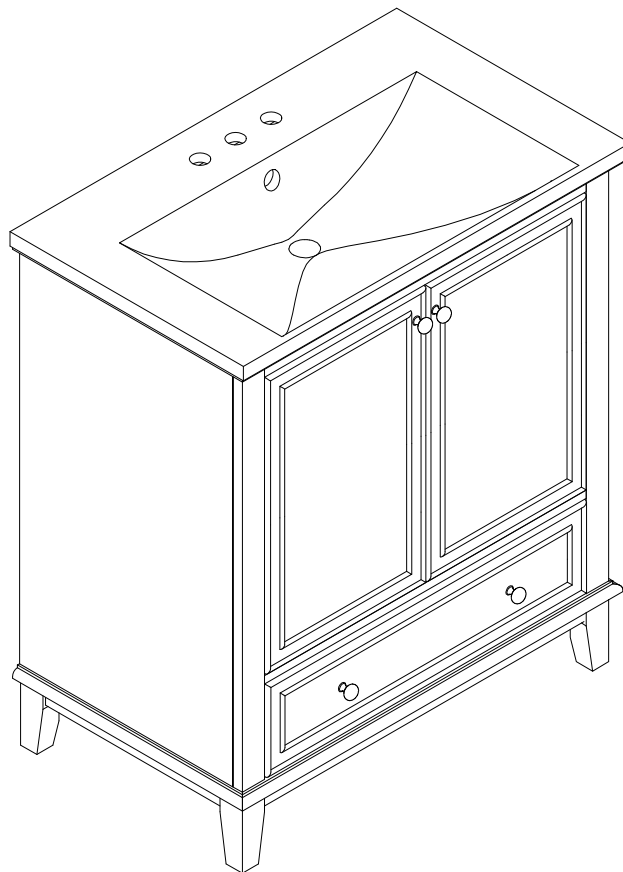

WF306250/N725P186143

HINGE ADJUSTMENTS

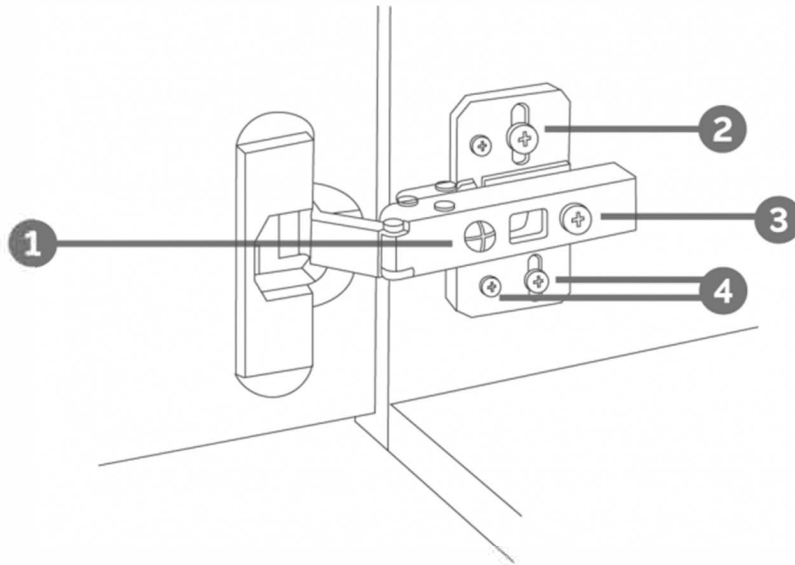


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

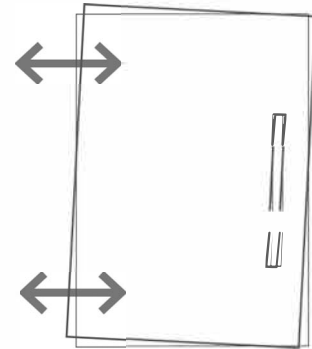


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

anticlockwise to move the door down

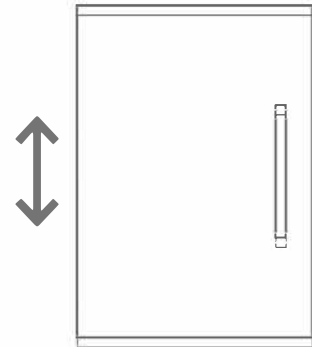

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

