






 A x6	 B x4	 C x10	 D x12	 E x8	 F x2
6X12	6X35	6X40	6X40		


S1 A fixed to the shelf

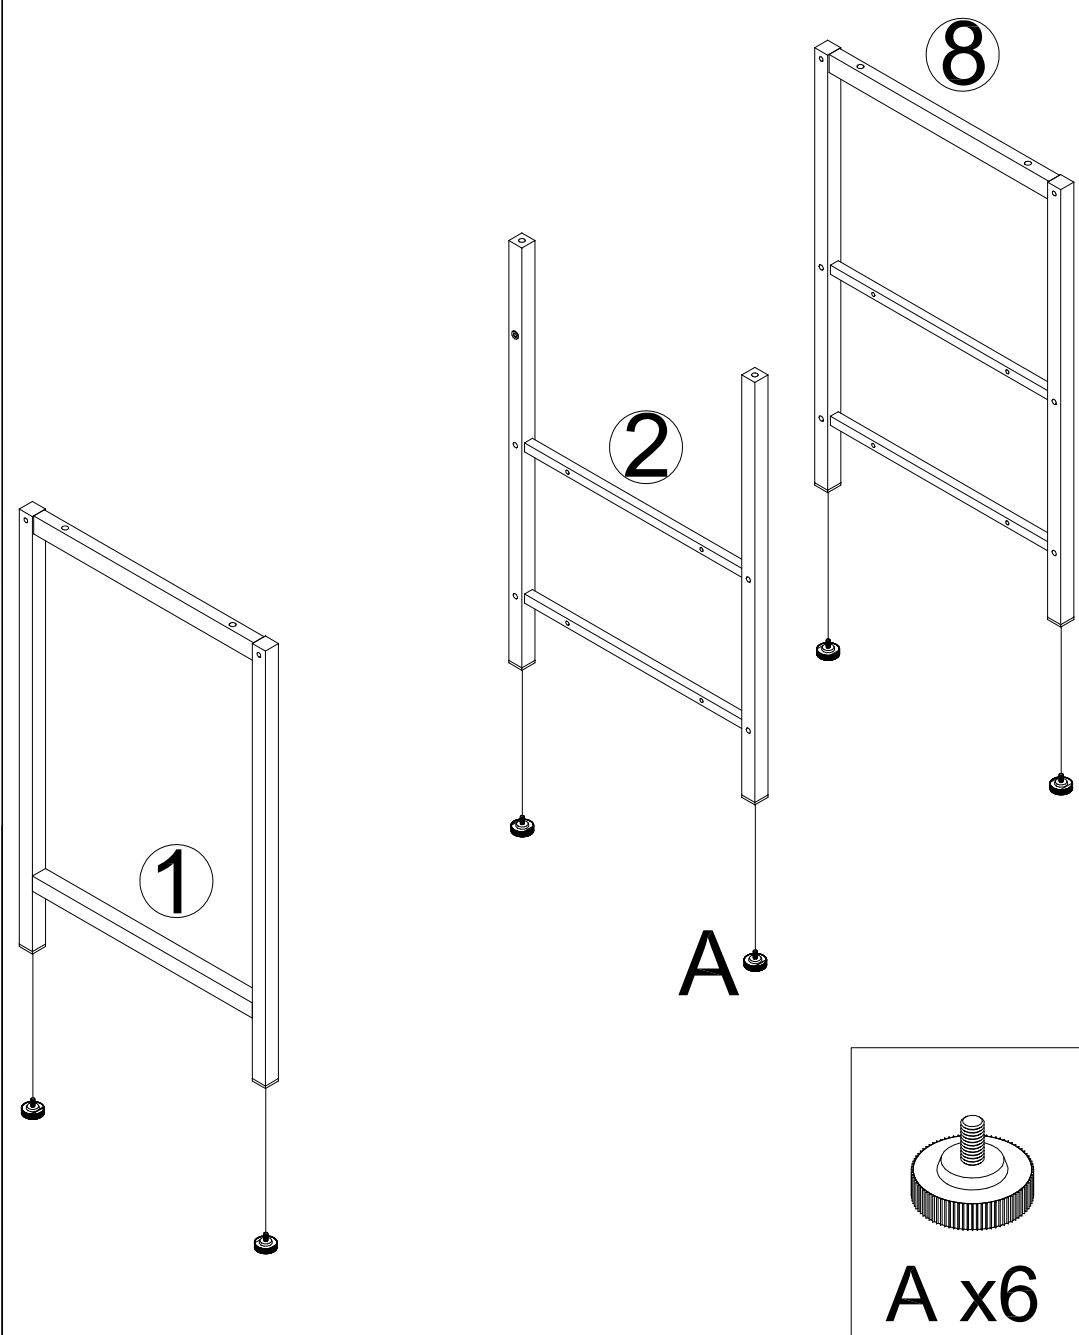


S2 Connect the two side frames to No. 9, pay attention to the direction of the arrow on the No. 2 side frame.

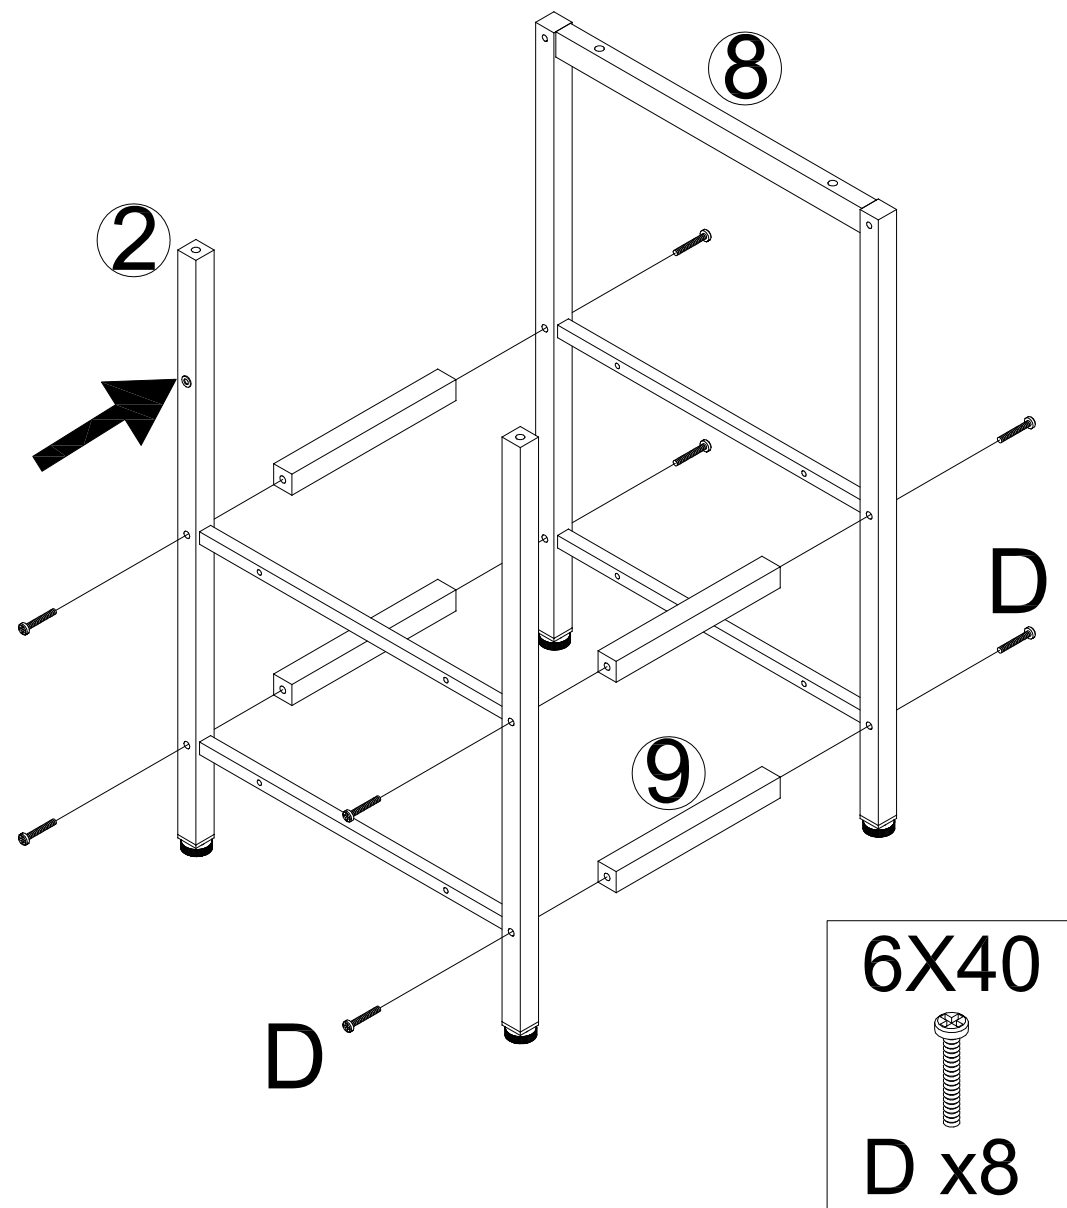


S3 Screws through the holes on the shelf to connect the wood board (10).

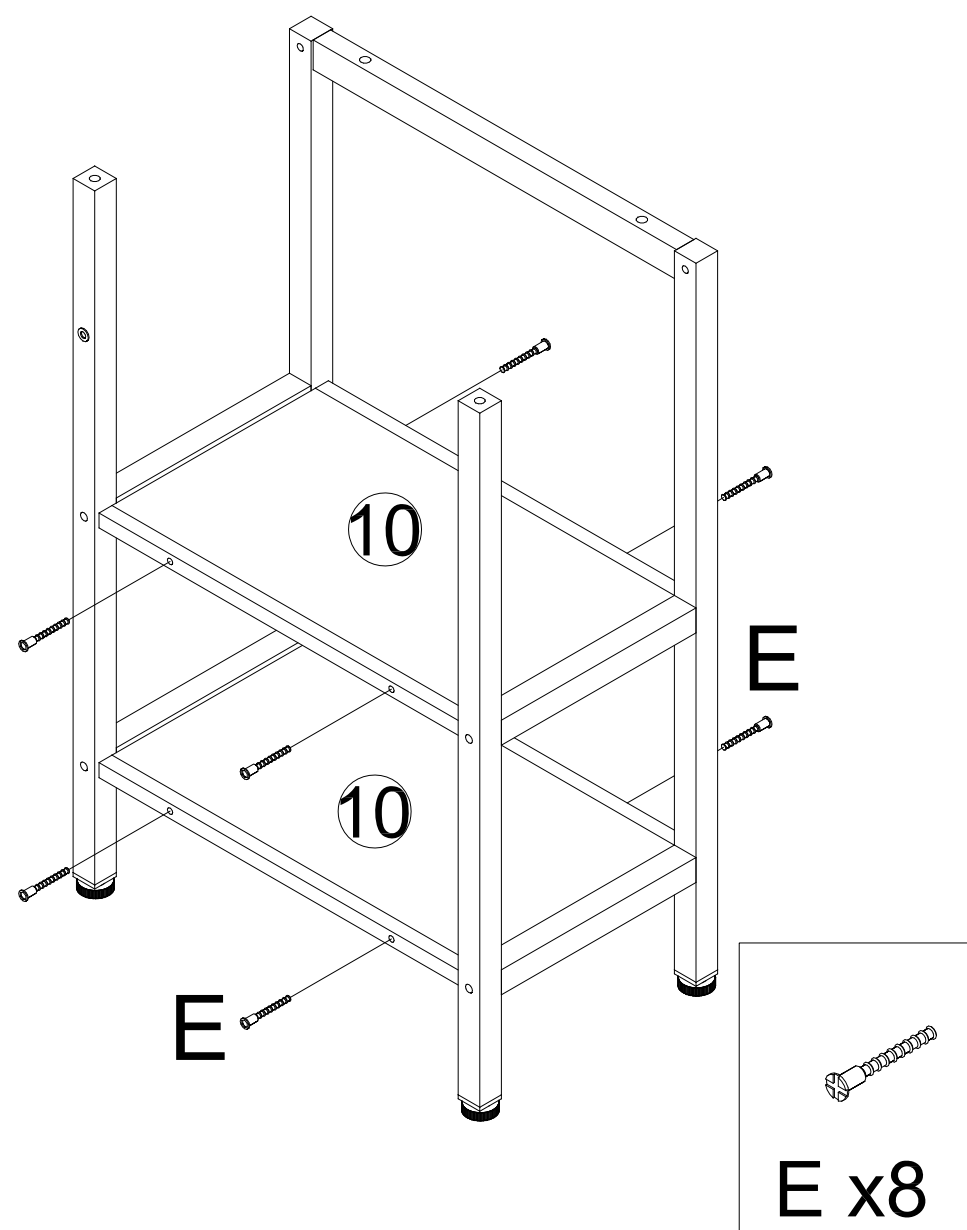


S4 (D) Pass through the side frame (1) to connect to the connecting pipes (3) and (4). Please note the direction of the hole indicated by the arrow in (1), and the hole of the fixing bracket on (4) should face down. Use (F) to connect through the connecting pipe (2).

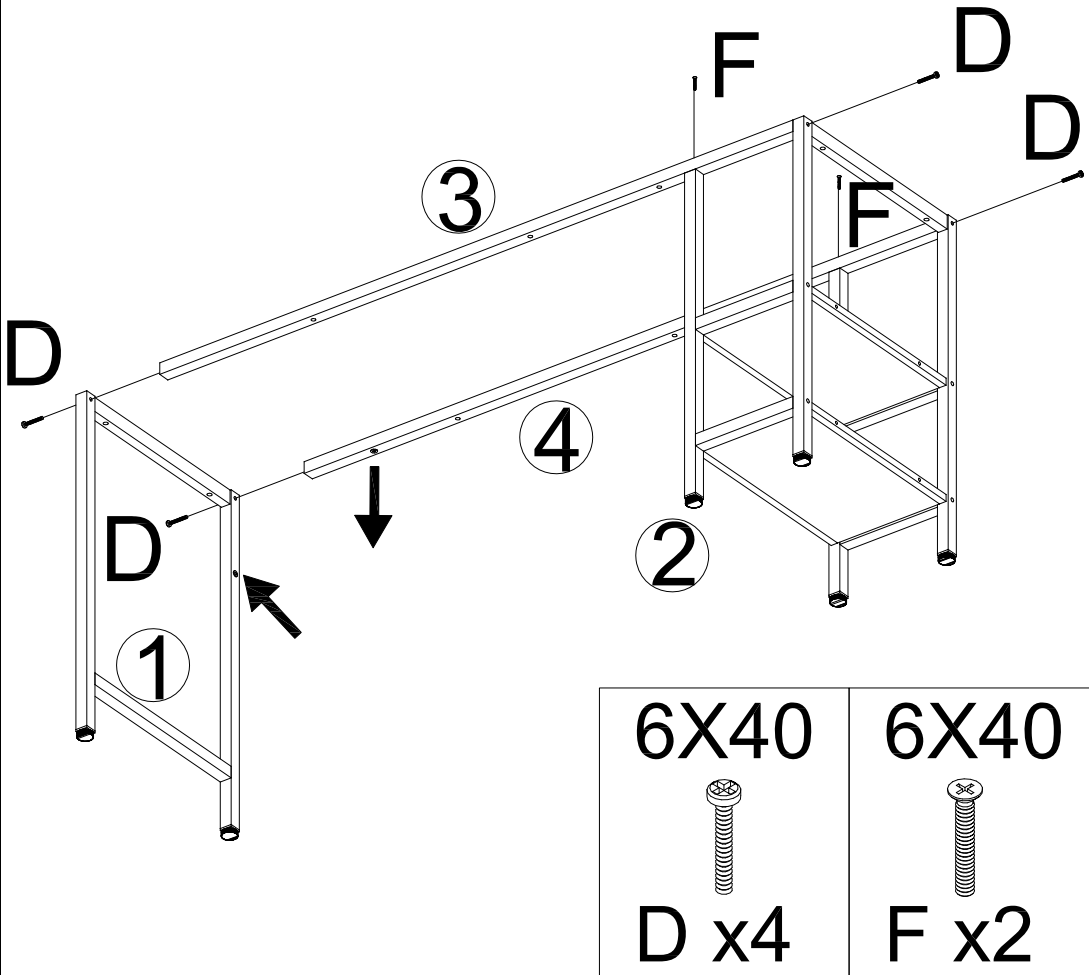



S5 Fix (5) on the connecting pipe.

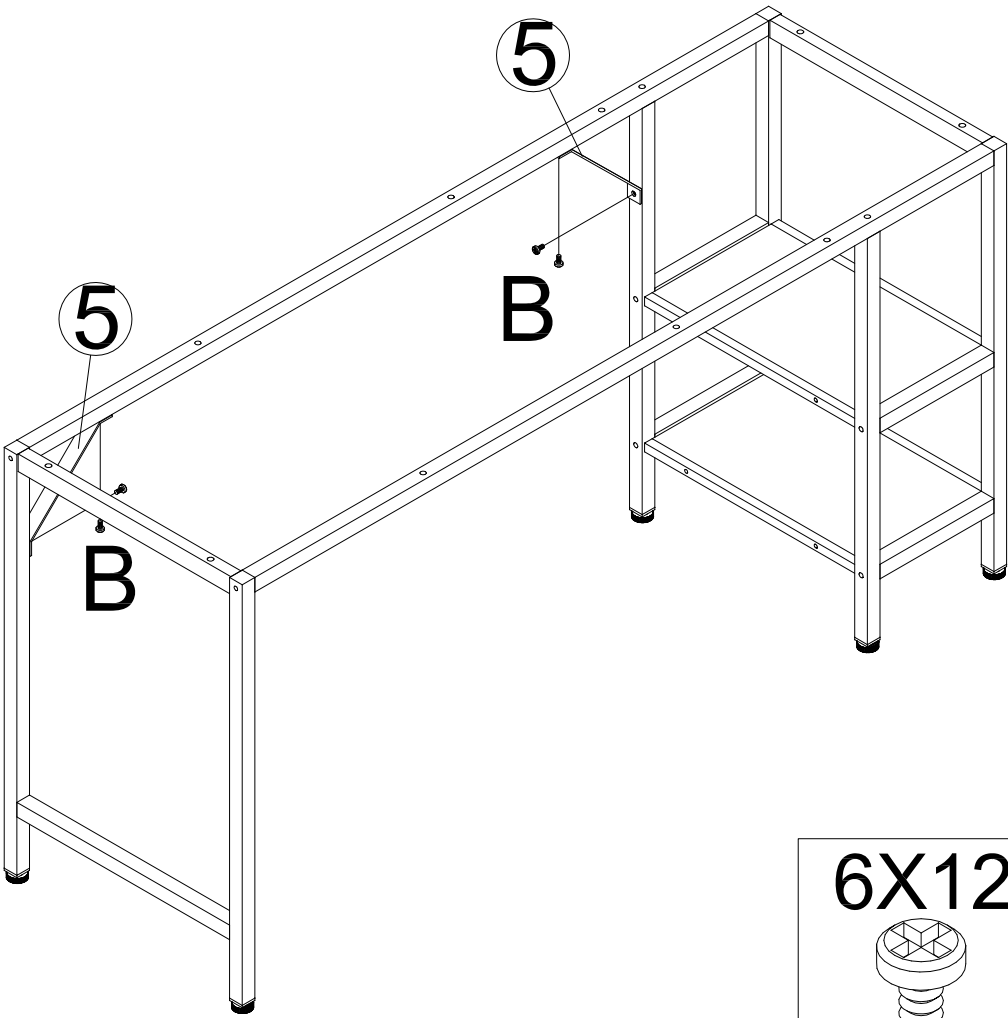

6X12

B x4

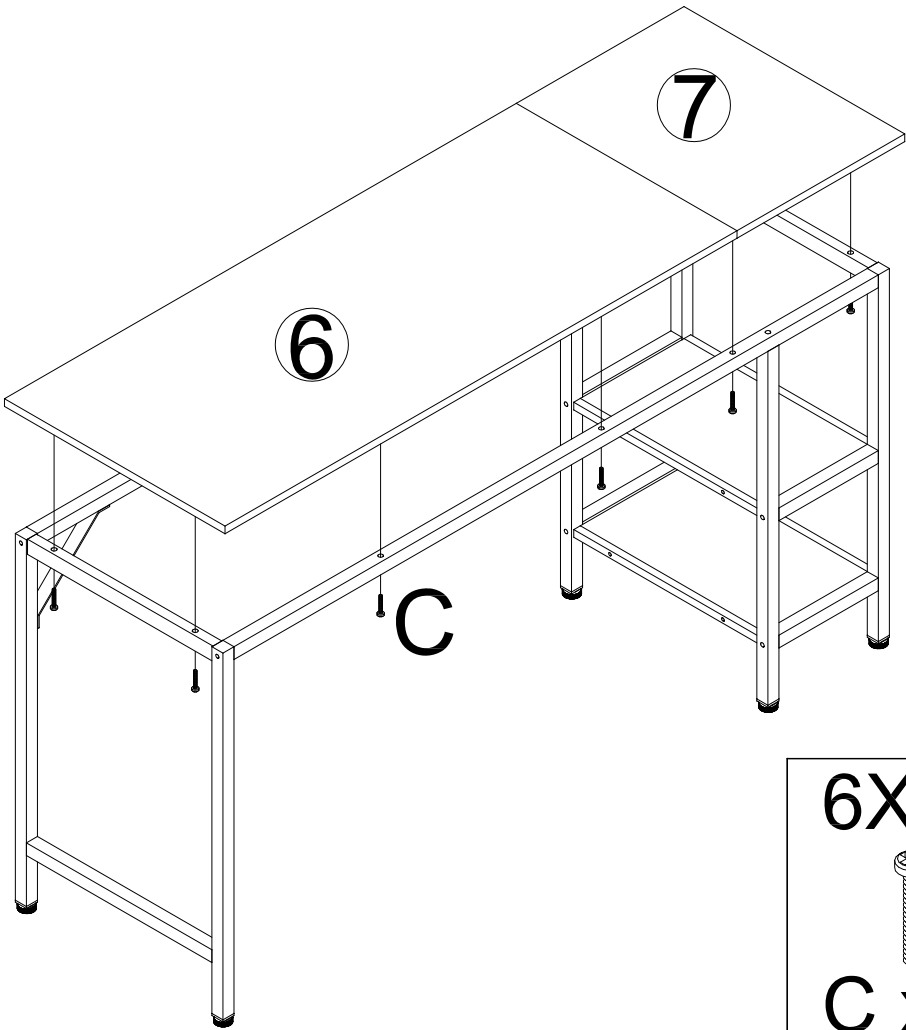S6 Connect the two countertops to the connecting pipes, pay attention to the length of the screws (C), in case the wrong screws are used, and the countertops will explode.



6X35

C x10

S7 The installation is complete.

