



STRENGTH IN ORGANIZATION™

Thank you for your purchase!

If you have any problems with your order, please contact us first and we will make it right.

support@tritonproducts.com or call us at 440.248.5480

Checkout our website! <http://tritonproducts.com>


Installation instructions for all LocBoards, LocBoard Strips and Kits

Tools Required:

- Level • Pencil • Philips Screwdriver • Drill • 1/4" Drill Bit
- For concrete installation, we recommend a center punch and pilot hole


Step 1.

Identify the mounting holes circled below for the model you purchased

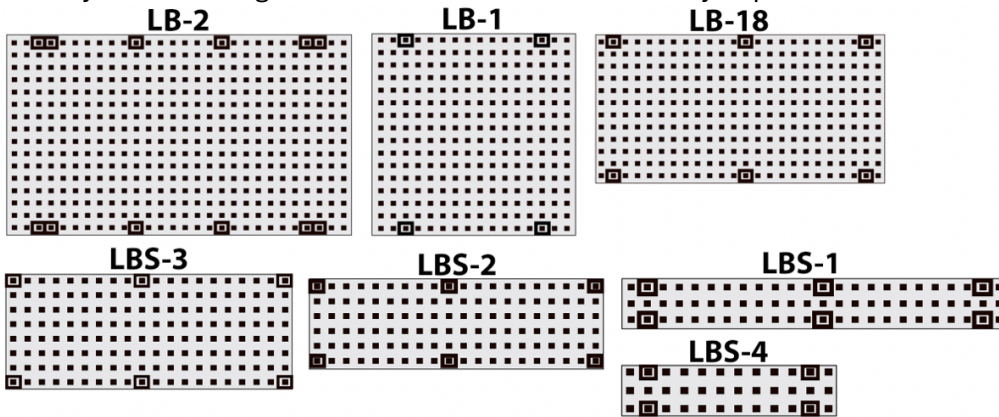

Step 2.

Place the LocBoard in the desired location and make sure it is level, now mark the holes.

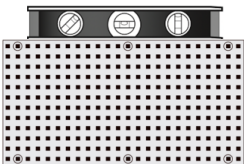

Step 3.

Drill all marked holes. Use a 1/4" drill bit for Drywall. If you are catching studs, we recommend a 7/64" pilot hole. For concrete, drill a 1/4" hole. **Tip:** make sure to keep the drill level and don't let the drill bit walk, so the anchors fit snug and your holes line up with the LocBoard.

Step 4.

Insert wall anchors into drilled holes where necessary, make sure the collar of the anchor is flush with the drywall or concrete. Now fasten your LocBoard to the wall making sure it is level while tightening.

If you purchased one of our kits, here is how to hang your LocHooks

Place Hook Insert Retainer Turn by hand or with #2 Screwdriver

