# Assembly Instruction Sheet #IS-6603C14C For Style 6603C14C

Too**is Required:** Fiathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (5) GU10 35W

Estimated Assembly Time: 20-30 minutes

Preparation: identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement


parts.

# **▲Warnings and Cautions**

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety, it is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the Installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

# Package Contents

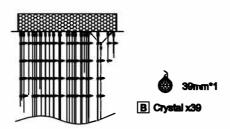


A Flature Body x1

### Hardware Contents

I laluw		9		
PART	DESCRIPTION	QUANTI	ŤΥ	
AA	Decorative Caps	4pcs		
BB	Electrical Marrets	2pcs		
CC	Outlet Box Screw	2pcs		
DD	Mounting Screw	4рсв		
EE	Mounting bracket	1pcs	24	EE
	BB (	CC	DD	<b>&amp;</b> _
<b>=</b>		Î		
		_	_	~

STEP 1 - Attach Mounting Screws, Lock Washers and Hex Nuts to Mounting bracket.

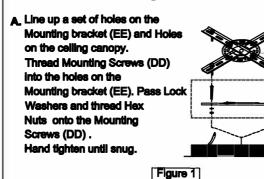

## STEP 2 - Attach Mounting bracket to Outlet Box

A. Pass the supply wires through the Mounting bracket (EE). Attach the Mounting bracket (EE) to the Outlet Box with the head of the Green Ground Screw facing you. Secure It with Outlet Box SCIEMS.

Tighten until snug.


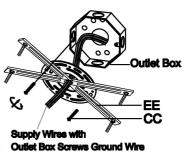


Figure 2

#### STEP 3 - Fit Ceiling Canopy to Mounting bracket Assembly

A. Fit the ceiling canopy to Mounting Screws (DD) and secure with Decorative Caps (AA). Note: The celling canopy should be snug against the ceiling and the Decorative Caps (AA).

If not, adjust the length of the Mounting Screws (DD) by unscrewing the Hex Nut and Lock Washer and then screwing Mounting Screws (DD) in or out of the Mounting bracket (EE) until the correct length is achieved. Once the celling canopy is secure, remove the Decorative Caps (AA) and celling canopy and proceed to Step 4.

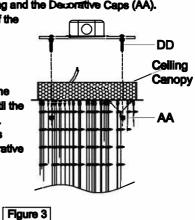


DD

Ceiling

Canopy




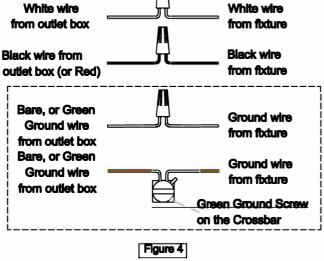

### STEP 5 - Install Celling Canopy to Celling

A. Carefully tuck all wires into the outlet box and position the ceiling canopy of the Fbiture Body (A) over the outlet box. Align the holes in the ceiling canopy with the Mounting Screws (DD).

Secure with Decorative Caps (AA) and hand tighten until snug.

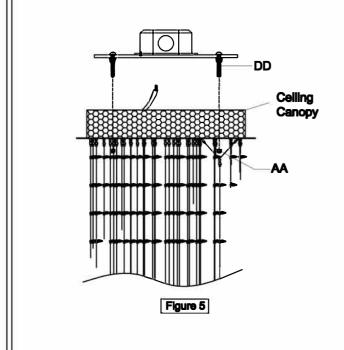

## STEP 6 - Install Crystal and Bulbs.

A. Install bulbs onto sockets and push snug into place.

B. Please put the crystal (B) to the Fixture Body (A) .

