


# SHOWER STOOL ASSEMBLY INSTRUCTIONS

Please keep for future reference

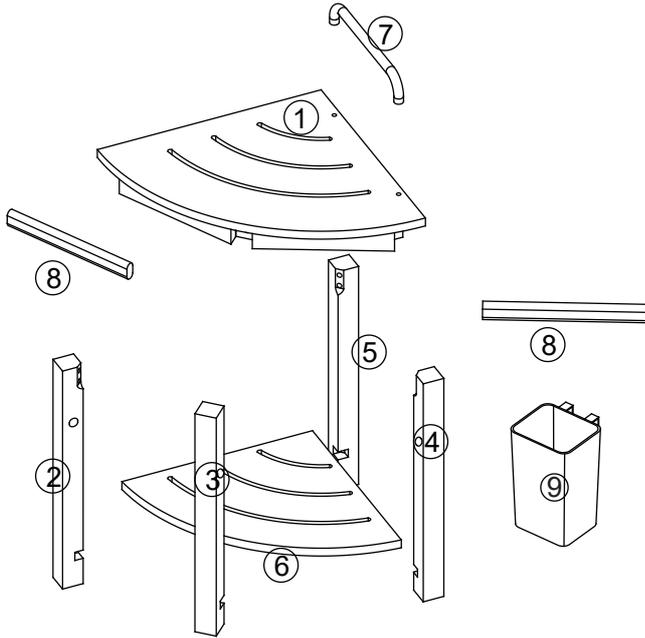

## HARDWARE LIST


A		M6x50	8 pcs
B		M6x20	4 pcs
C		M4x110	1 pcs
D		M8x40	2 pcs
E		M5x65	1 pcs

We recommend air-drying the wet teak shower bench and NOT leaving in the sun.

### STEP1


ATTENTION: PLEASE MAKE SURE TO FOLLOW THIS INSTRUCTION MANUAL TO INSTALL THE HANDLE (PART#7) FIRST!

When you tighten the #D screw, do not tighten it all the way until both screws are secured with the handle.

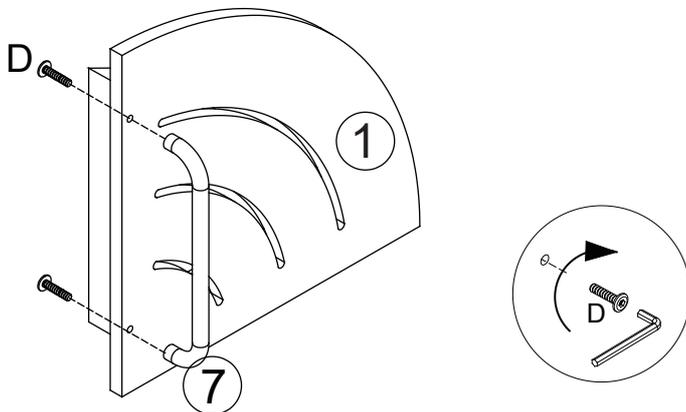

E		1 pcs
D		2 pcs


### STEP2

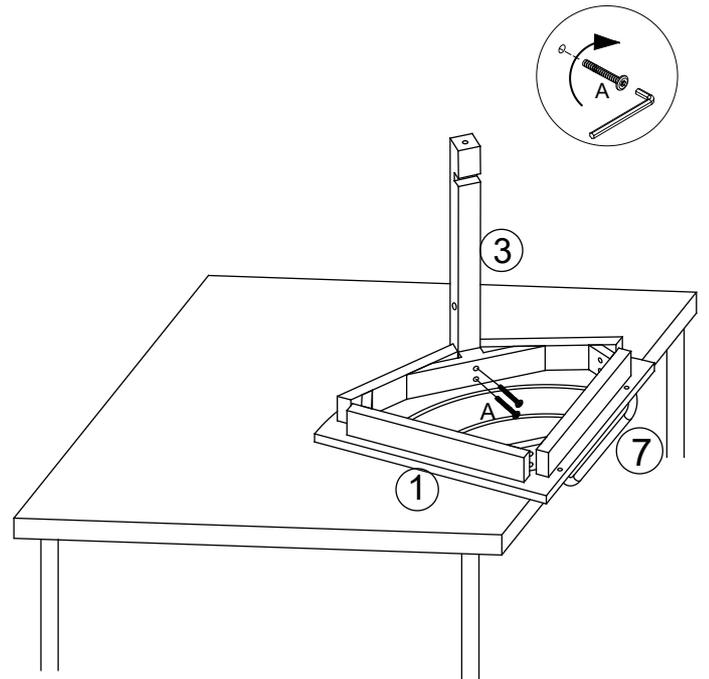


C		1 pcs
A		2 pcs

# ASSEMBLY INSTRUCTIONS

## STEP 3

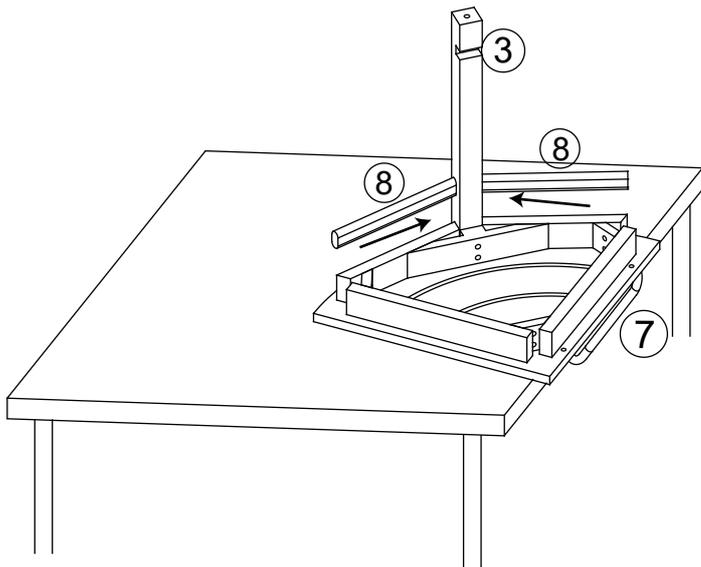


## STEP 4

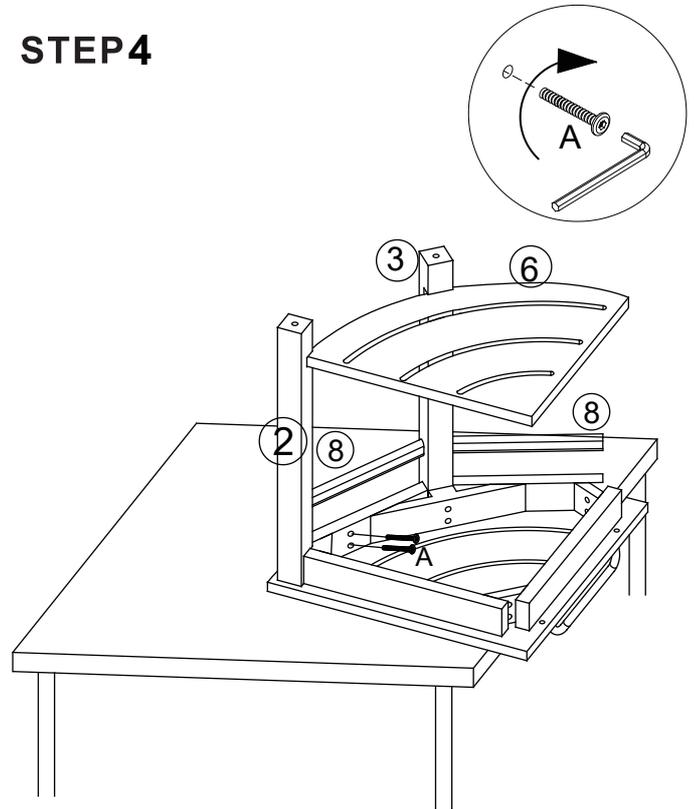


A  2 pcs

## STEP 5

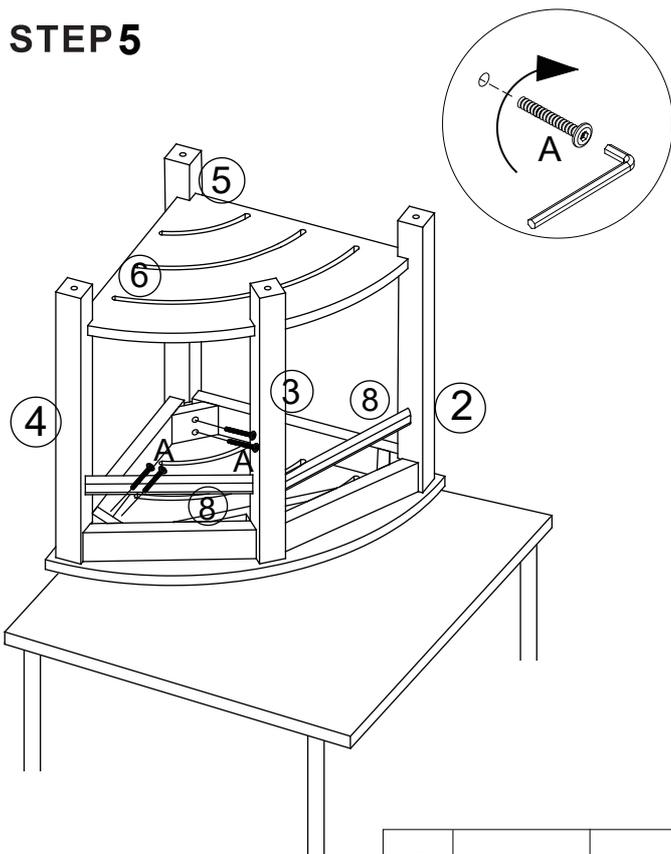


A  4 pcs

## STEP 6

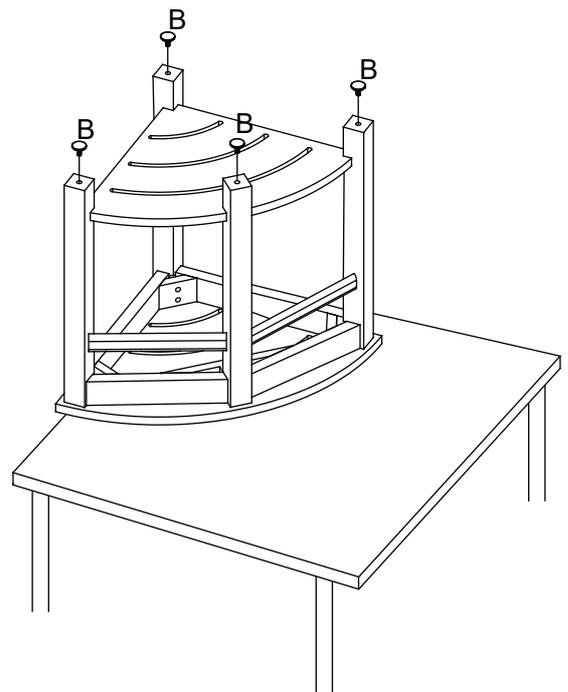

B  4 pcs

# ASSEMBLY INSTRUCTIONS

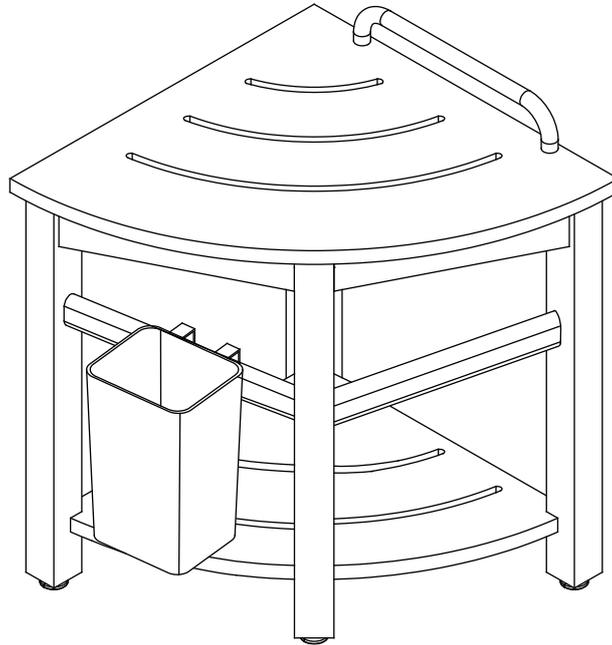

We value your trust in our company, we will do our best to meet your service expectations. Should you have any assembly related questions, parts replacement requests, comments or suggestions, please feel free to contact us at email [cs@lovitgoshop.com](mailto:cs@lovitgoshop.com). Please provide your name and order no. so that we can better assist you. To help expedite the service, please have the assembly instructions available along with your order receipt.