
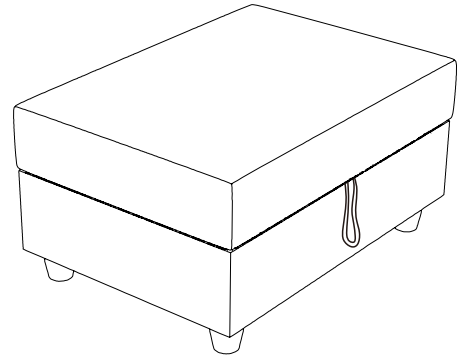
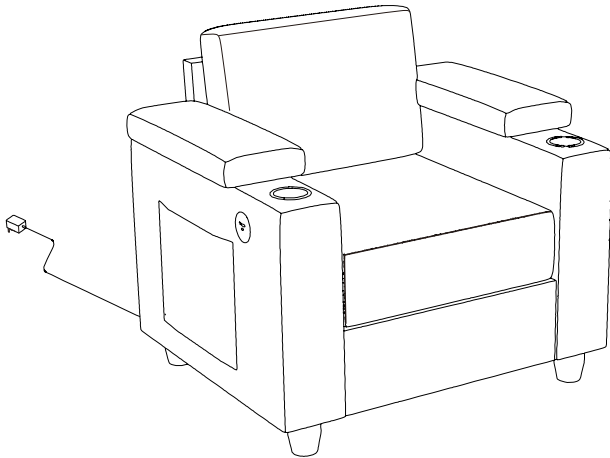

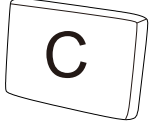
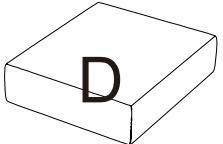
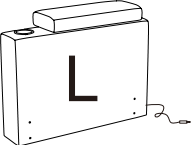
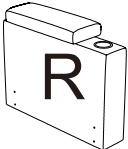
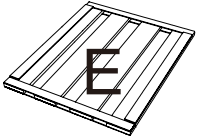
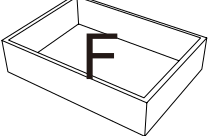
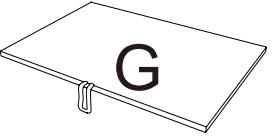
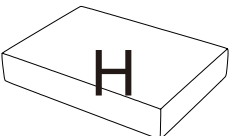


ASSEMBLY INSTRUCTION




ITEM NO.:D2860.61.62



PARTS LIST



 x1	 x1	 x1	 x1
 x1	 x1	 x1	 x1
 x1	 x1	 x1	

HARDWARE LIST


 1 1/4*20mm x16	 2 1/4*50mm x2	 3 19mm x2	 4 x4
 5 40mm*100mm x1	 6 x8	 7	 8

BEFORE ASSEMBLY


Please open the seat frame before removing the parts for assembly.

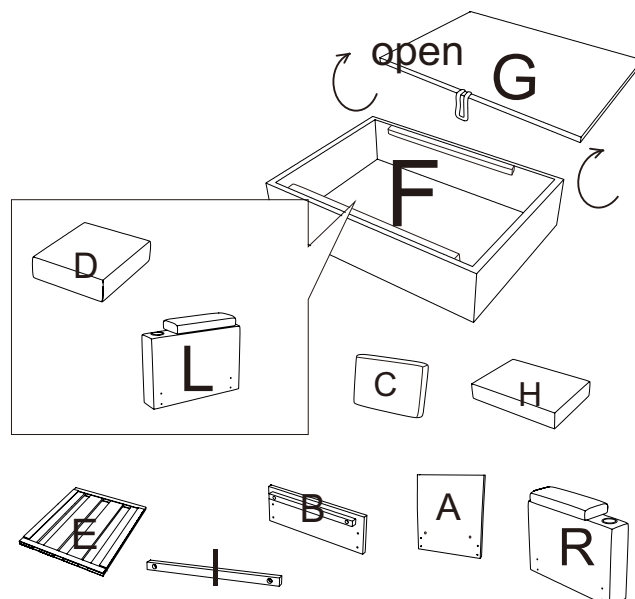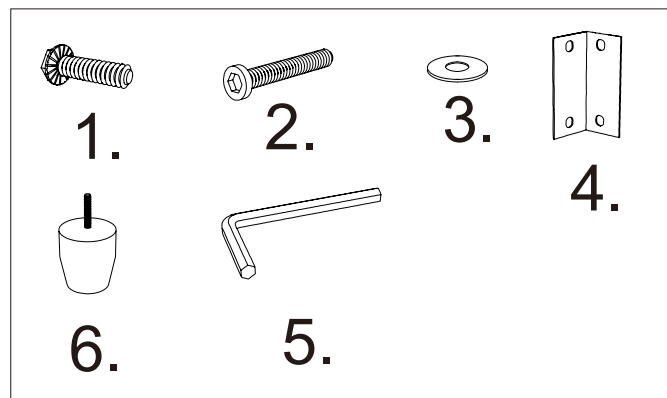


1. After removing the cushion from the compress bag, please allow air to flow through the cushion for few days. You can try to fluff cushion by push in and push out on all four sides of the cushion. Hitting the top/front of the cushion with your hand to fluff them after installation.

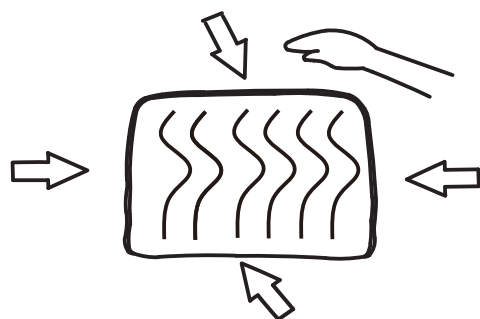


2. Please allow at least 72 hours for the cushions to recover to its natural state after removing from the package.

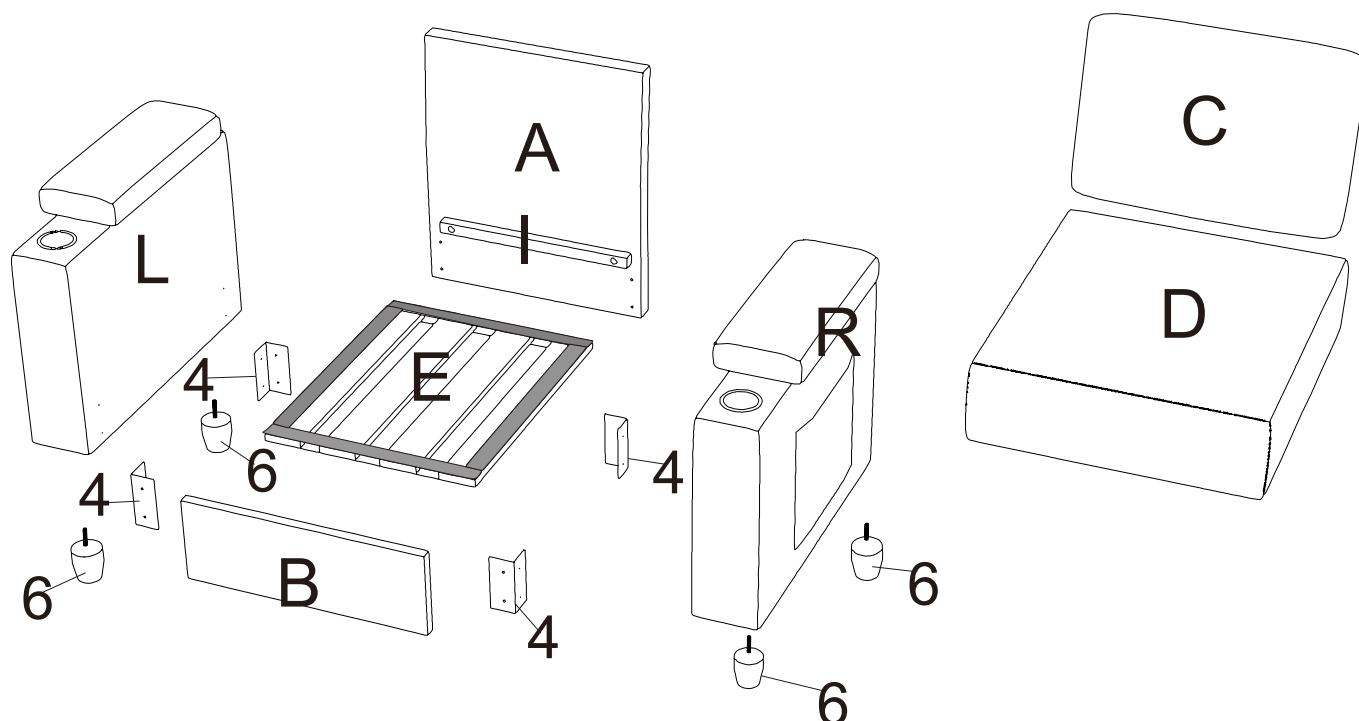


Step1

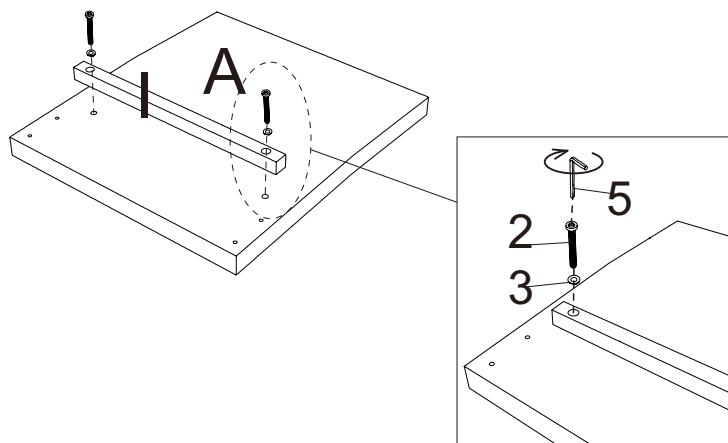


Step2

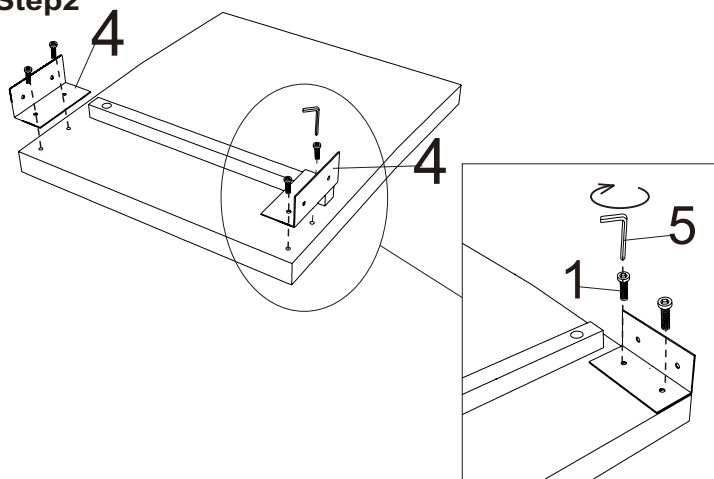


Step3

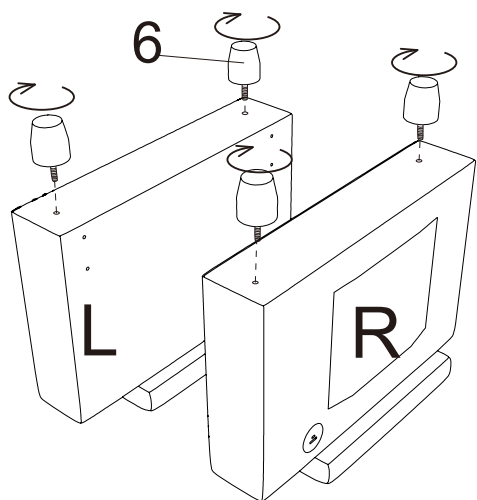


Step4

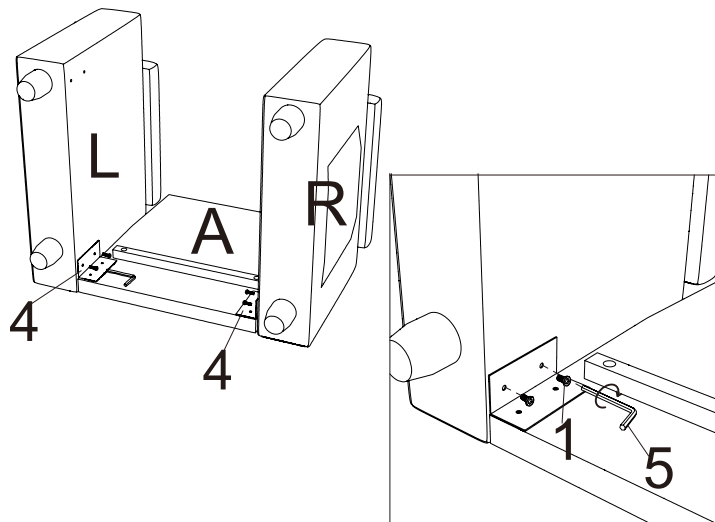


Step4

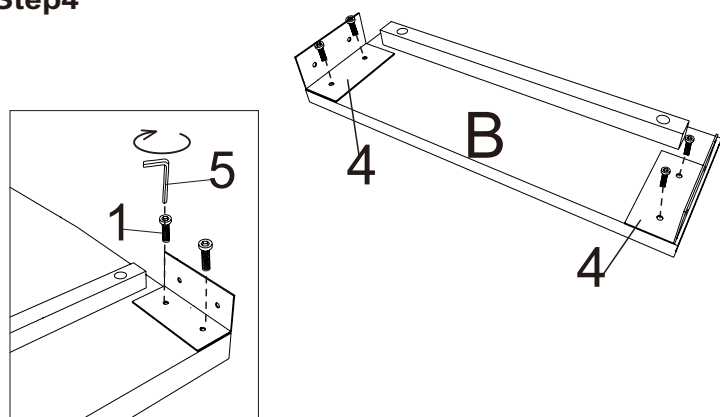


Step5

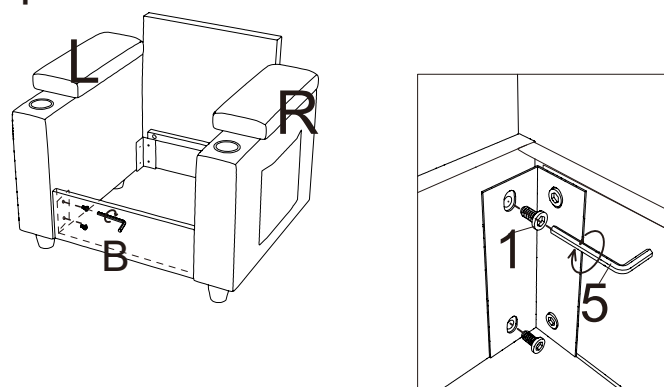


Step7

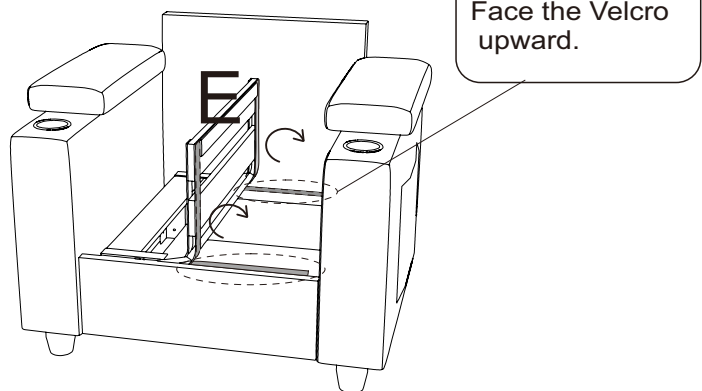


Step8

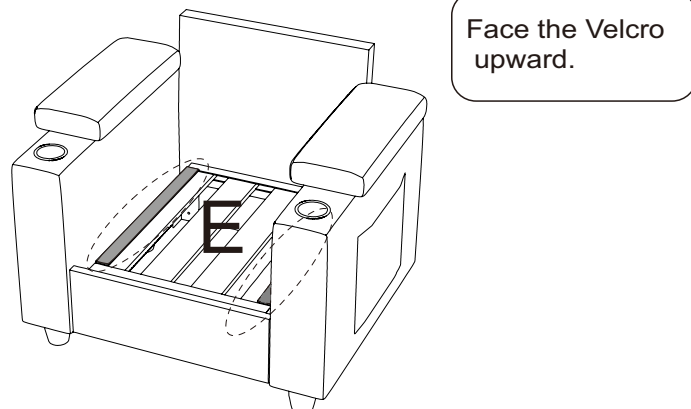


Step9

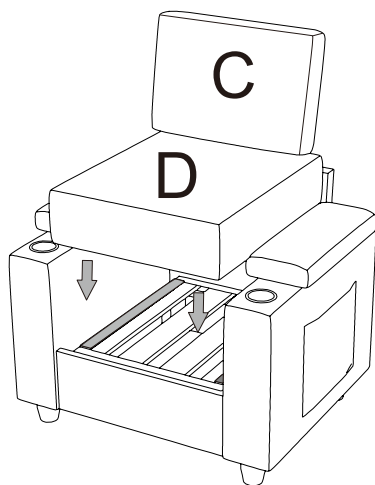


Step10

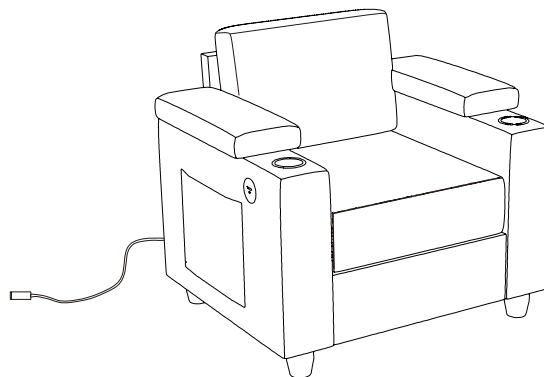


Step11

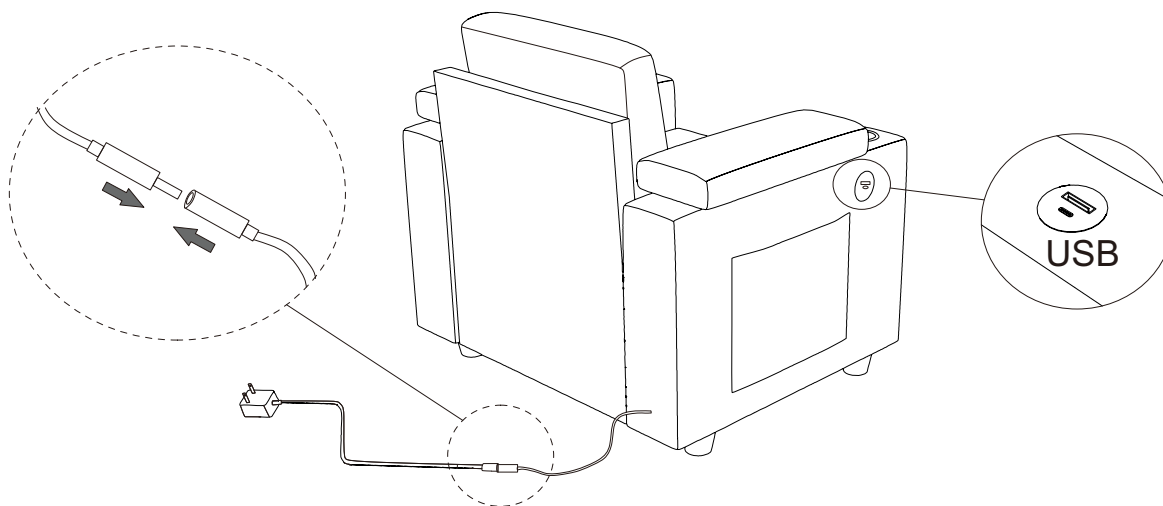

Step12

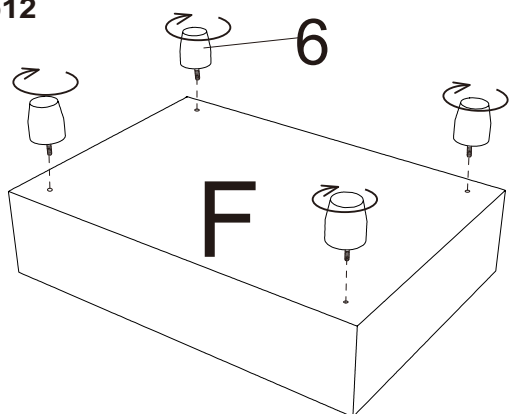

Step13

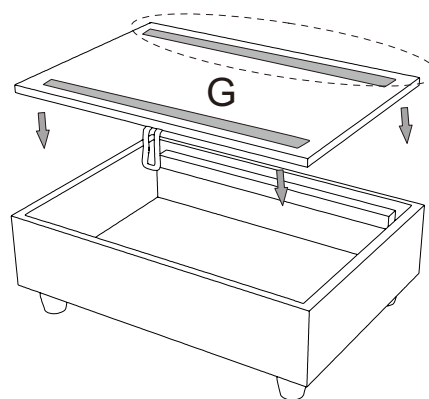

Face the Velcro upward.

Step13

