

ITEMS #:

5256845, 5256840, 5256844,
5256843, 5256826


MODELS #:

KY-1001BLK, KY-1001CH,
KY-1001ORB, KY-1001BN,
KY-1001SS

Fixed Post Sink Strainer

DIRECTIONS:


- Remove all components from strainer body.
- Apply plumber's putty between strainer body and sink.
- Insert strainer body firmly in place while installing under sink - first rubber washer and paper washer, next steel ring, with the flat side against the paper washer. Hand-tighten firmly.
- Place flanged tailpiece washer onto tailpiece and install slip nut with threads upward on tailpiece. Screw slip nut onto threaded shank of strainer body. Tighten firmly with wrench.

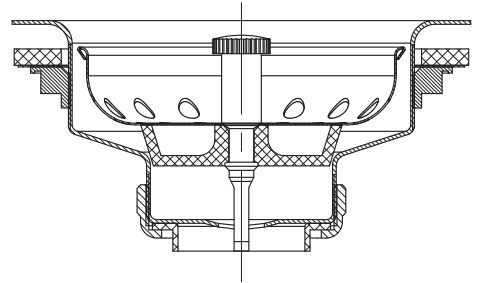

REQUIRED TOOLS:

Wrench

Plumber's putty

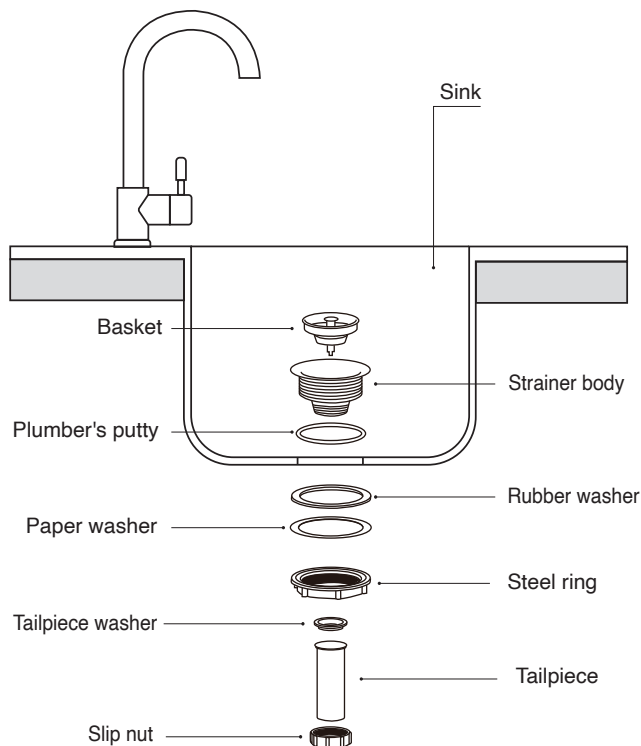

ALLEN + ROTH and logo design are trademarks
or registered trademarks of LF, LLC. All rights reserved.

Thank you for purchasing this **ALLEN+ROTH** product. Questions, problems or missing parts? Before returning, contact us on: **866-439-9800**, 8 a.m. - 8 p.m., EST, Monday - Sunday or **ascs@lowes.com**.